


ASSEMBLY INSTRUCTIONS

24 INCH BATH VANITY (COMBO)


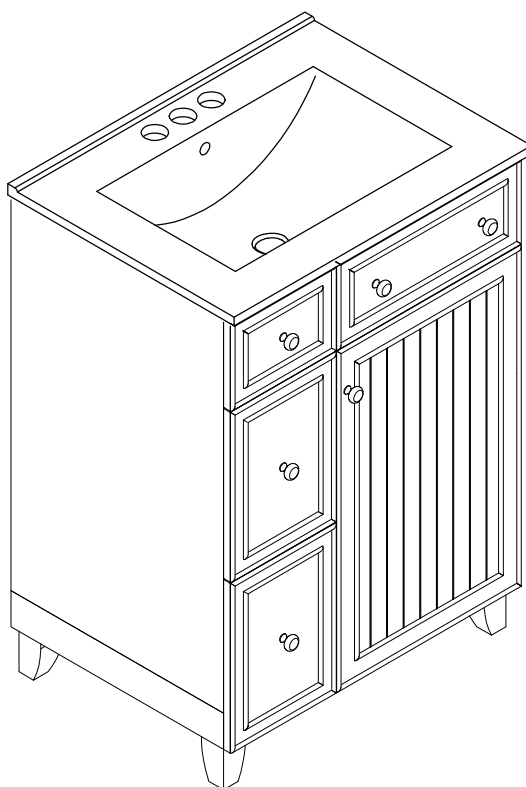


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"


*** Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!**
*** Please assemble on a clean soft surface to avoid damage.**

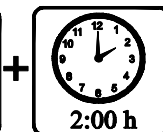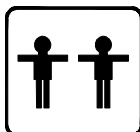

Tools Required



(Not included)



(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Before Installation









Important - Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- . We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- . Please do not over tighten screws or bolts until the assembly is completed.
- . Keep children and animal away from the work area, small parts could choke if swallowed.
- . Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Cam Lock Assembly Instructions

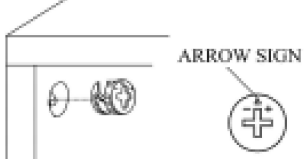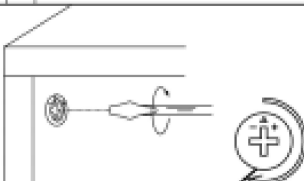		Diagram A Insert Cam Bolt into hole as shown in diagram A.	
		Diagram B Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.	
		Diagram C Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.	
			Connect the panels together.
			Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
			To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>



Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.

Las diapositivas deben separarse antes del montaje.
 Después de la separación, déjelo a un lado hasta que sea necesario.

Les glissières doivent être séparées avant l'assemblage.
 Après la séparation, mettez de côté jusqu'au moment de l'assemblage.


Pay attention when connecting !
The sliding module must be at the front end.

STEP 1 : Extend Slide
Extender la diapositiva

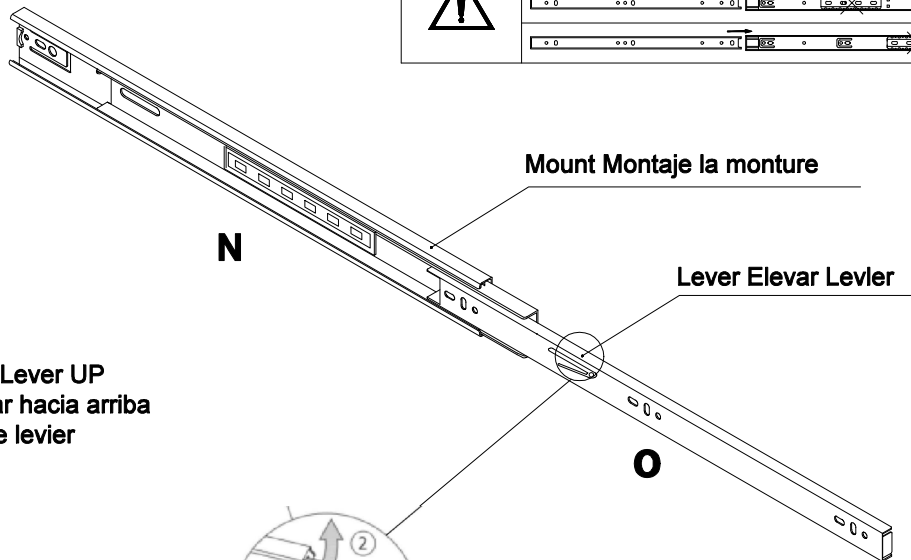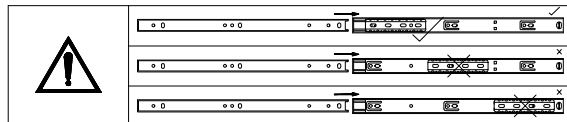


STEP 2: Push Lever UP
Empujar hacia arriba
Lever le levier

Push lever for the left of drawer ,
press the lever for the right of drawer.

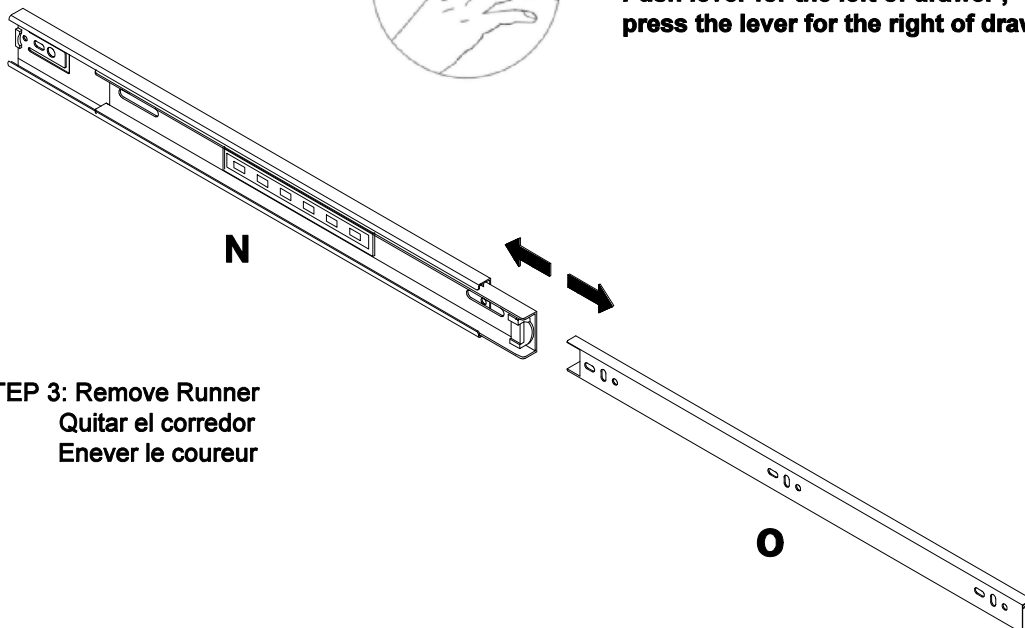













STEP 3: Remove Runner
Quitar el corredor
Enever le coureur

Detail View - CABINET









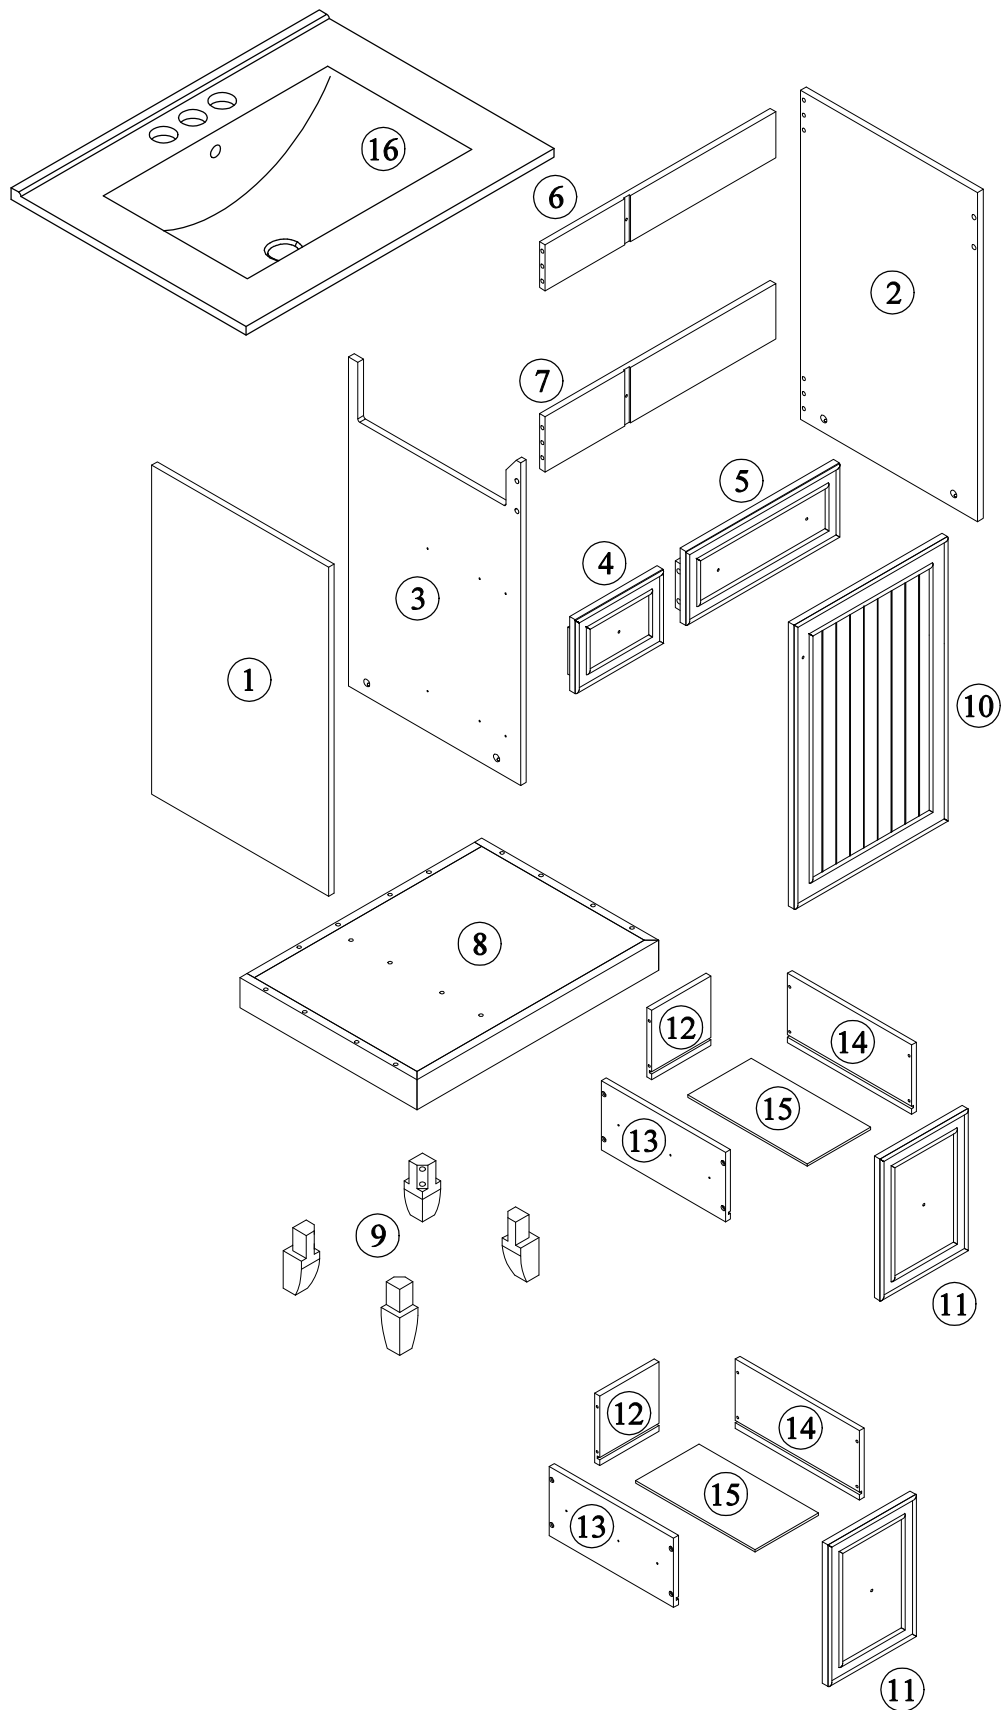


Identifying the Hardware-Identify the hardware using the illustrations below.


Part List

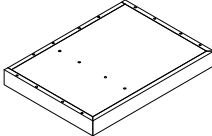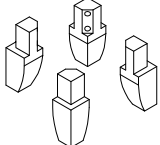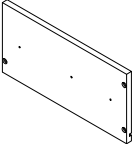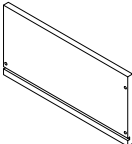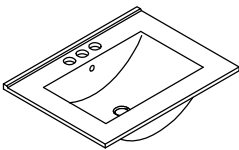
1		2	
	Side Panel (L) - 1pc		Side Panel (R) - 1pc
3		4	
	Mid Panel - 1pc		Drawer Fake (L) - 1pc
5		6	
	Drawer Fake (R) - 1pc		Rear Panel Top - 1pc
7		8	
	Rear Panel Bottom - 1pc		Frame Bottom - 1pc
9		10	
	Foot Cabinet - 4pcs		Door cabinet - 1pc
11		12	
	Drawer Face - 2pcs		Drawer Rear - 2pcs
13		14	
	Drawer Side(L) - 2pcs		Drawer Side(R) - 2pcs
15		16	
	Drawer Bottom - 2pcs		Sink - 1pc


Hardware List

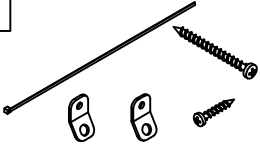A  $\phi 13 \times 1/4" \times 28 \text{mm}$ Hex-Head bolts(4pcs)	B  $\phi 13 \times 1/4" \times 38 \text{mm}$ Hex-Head bolts(8pcs)	C  $\phi 13 \times 1/4" \times 50 \text{mm}$ Hex-Head bolts(2pcs)
D  $\phi 1/4" \times 16 \times 1 \text{mm}$ Washer(14pcs)	E  $\phi 6 \times 35 \text{mm}$ Three in one bolts(16pcs)	F  $\phi 14.5 \times 12 \text{mm}$ Three in one lock(16pcs)
G  Handle (6pcs)	H  $\phi 5/32" \times 20 \text{mm}$ Handle screw (4pcs)	I  $\phi 5/32" \times 32 \text{mm}$ Handle screw (2pcs)
J  $\phi 8 \times \phi 4 \times 32 \text{mm}$ Round head screw(16pcs)	K  $\phi 8 \times \phi 4 \times 25 \text{mm}$ Round head screw(2pcs)	L  Damping hinge (2pcs)
M  $\phi 7 \times \phi 3.5 \times 15 \text{mm}$ Flat head screw(12pcs)	N  $\phi 300 \times 35 \text{mm}$ Slide rails (4pcs)	O  $\phi 298 \times 18 \text{mm}$ Slide rails (4pcs)
P  $\phi 6 \times \phi 3 \times 12 \text{mm}$ Flat head screw(24pcs)	Q  $\phi 8 \times 30 \text{mm}$ Wood dowel(16pcs)	R  4mm Allen key(1pc)
S  Anti fall hardware(1set)		


STEP: 1

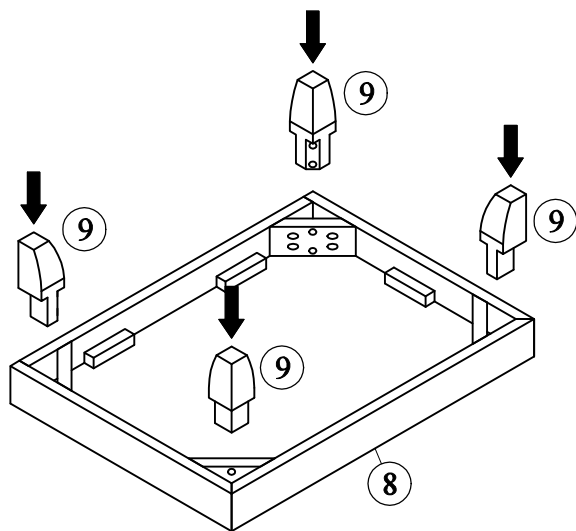



B	D
	
8PCS	8PCS

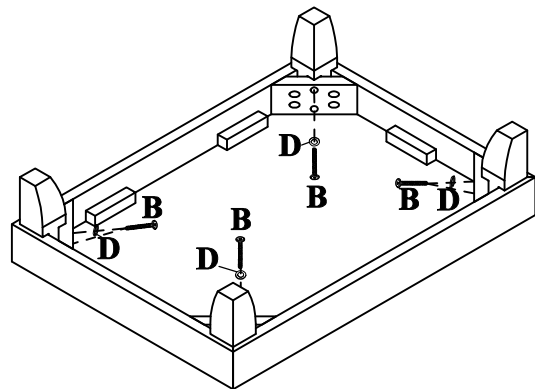

STEP: 2

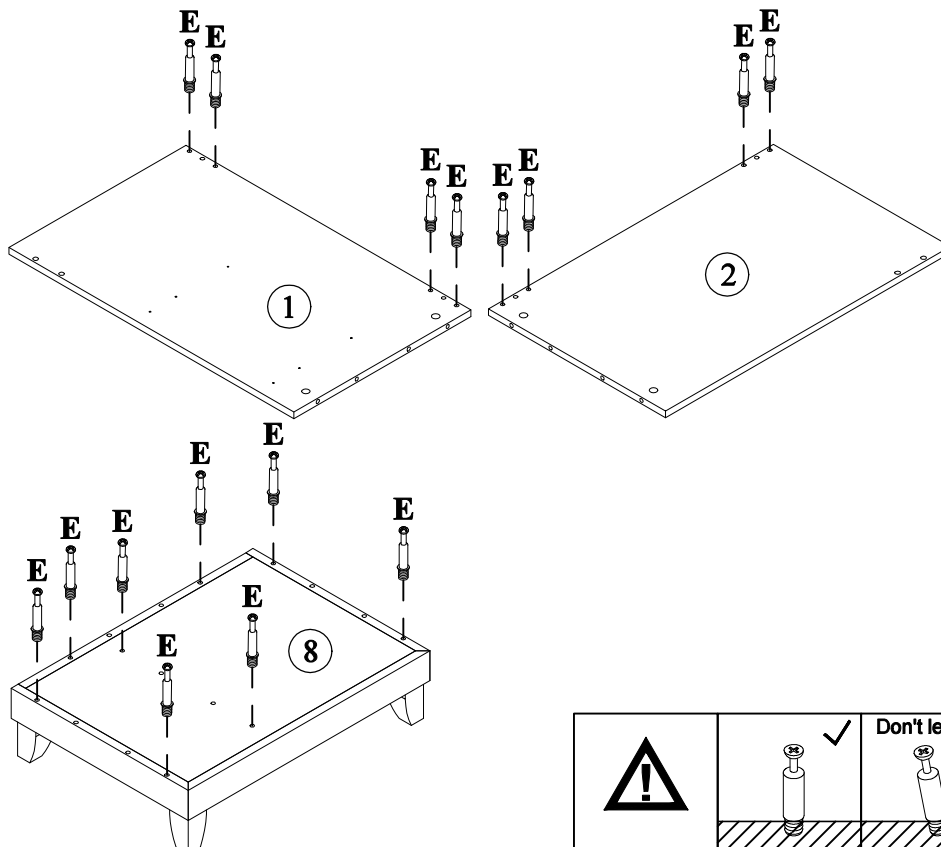


E

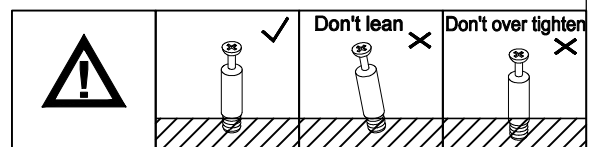16PCS




STEP: 3

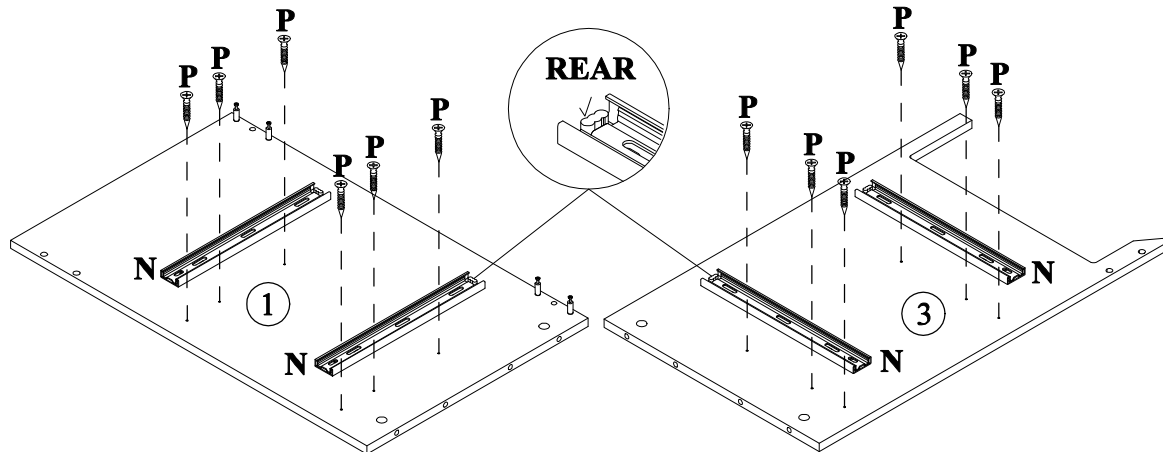N		P	
4PCS		12PCS	




POSITION OF SCSEW

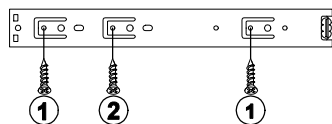



STEP: 4

K	
2PCS	

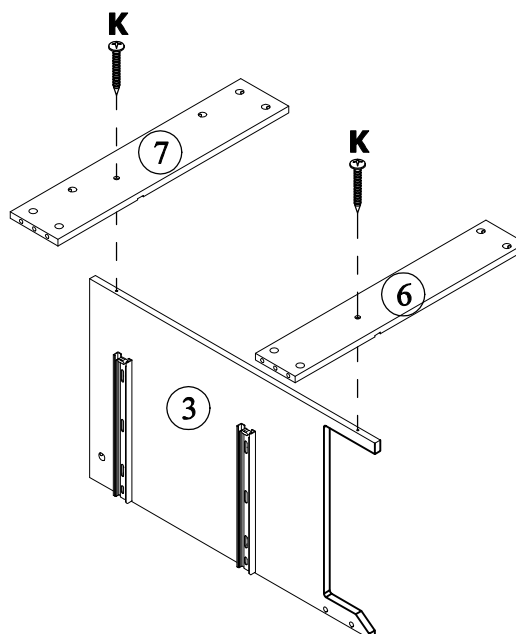





STEP: 5

F		Q	
	8PCS		4PCS

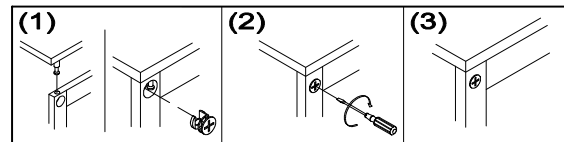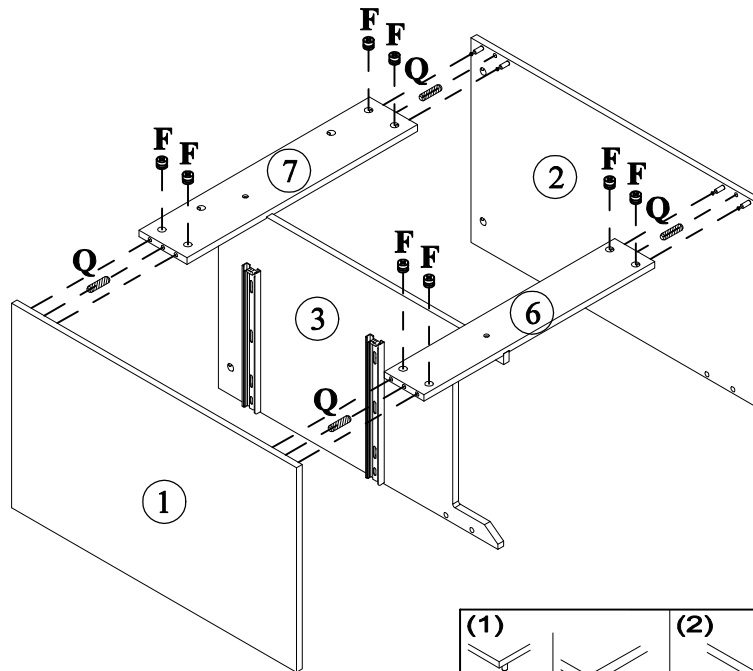


STEP: 6


A		C		D		Q	
	4PCS		2PCS		6PCS		4PCS

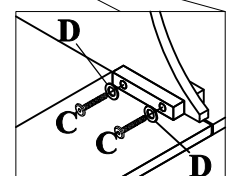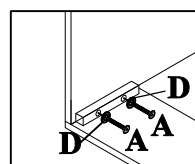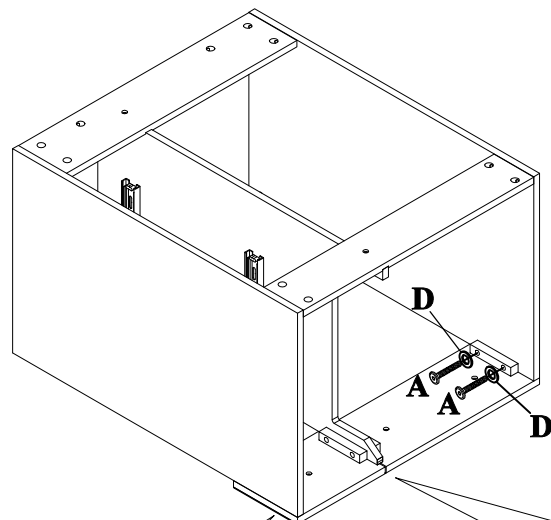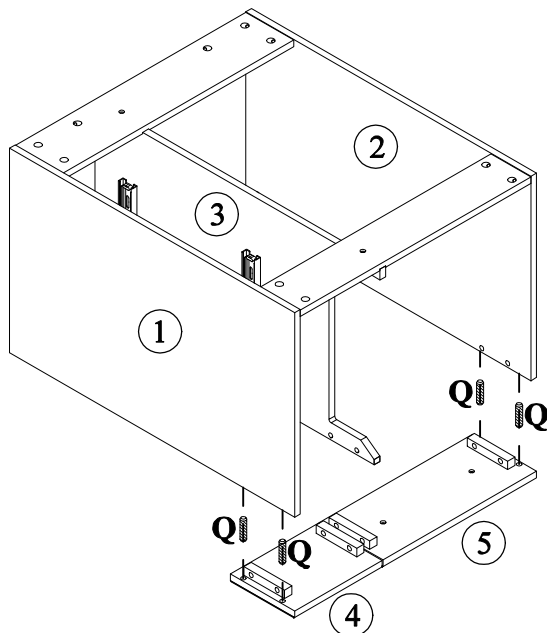


STEP: 7

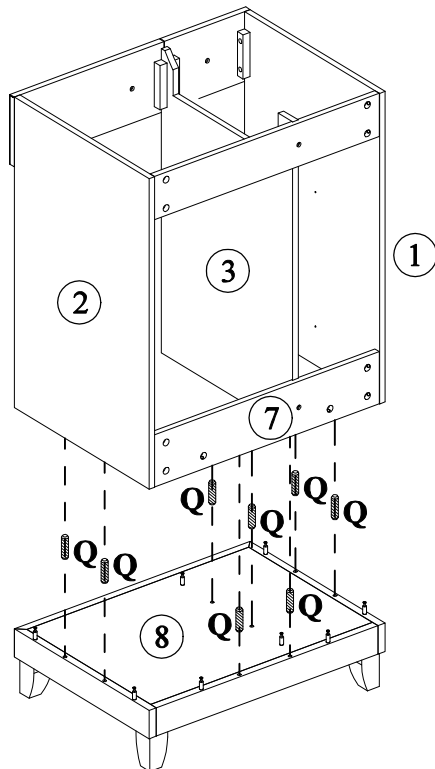



F		Q	
2PCS		8PCS	

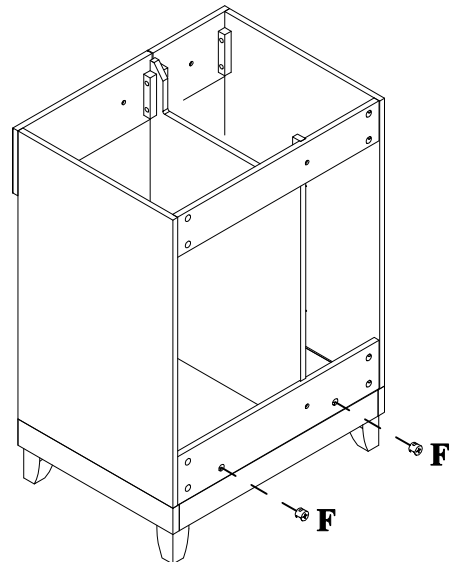

STEP: 8

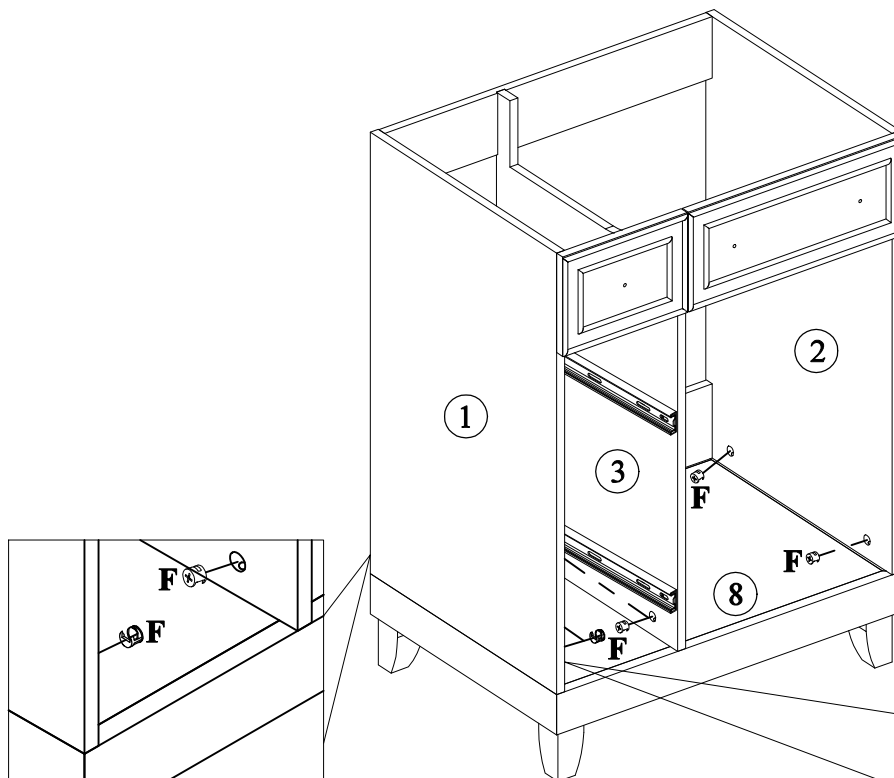


F	
6PCS	

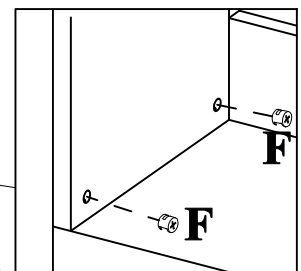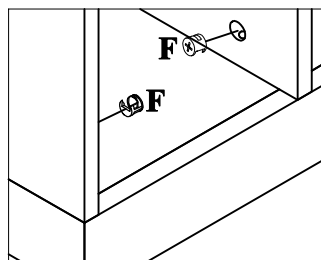




STEP: 9

L	M
	
2PCS	4PCS

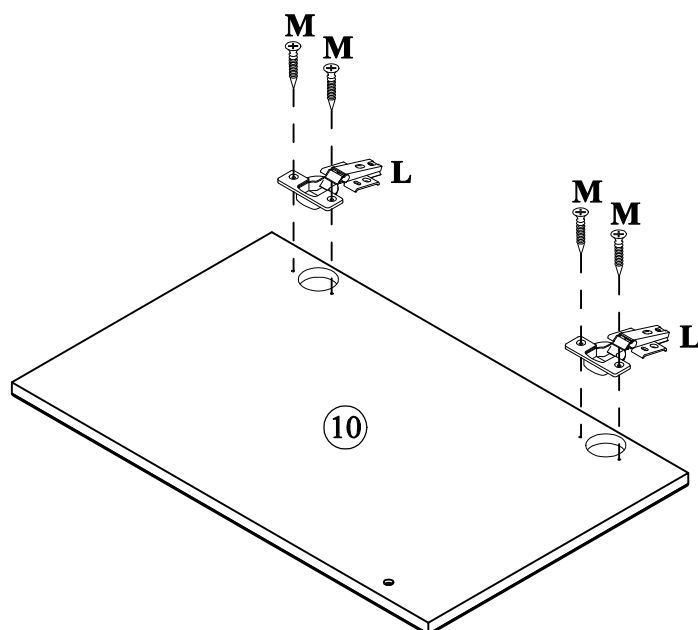


STEP: 10


G	H	M
		
4PCS	4PCS	8PCS

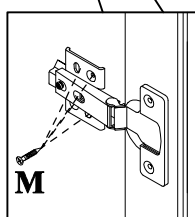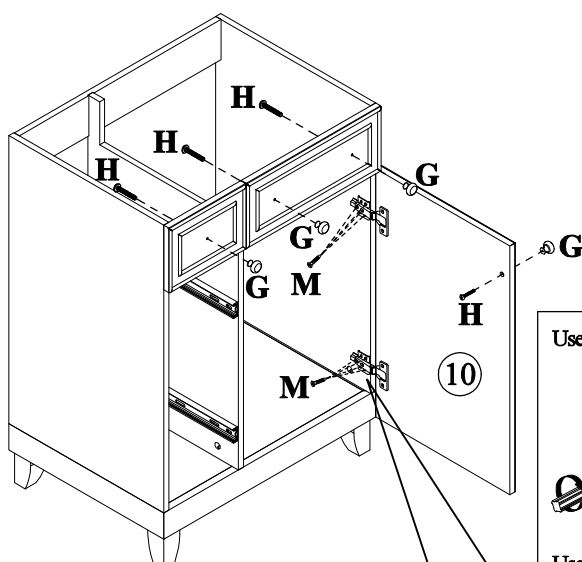


Use the screws to adjust up or down

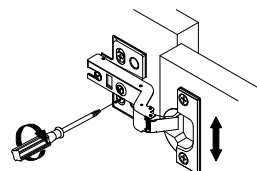


Use the screws to permanent

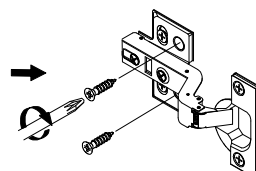



Use the screws to adjust left or right





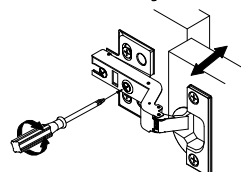


Use the screws to adjust in or out

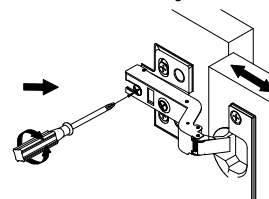


STEP: 11

J	G	I	O	P
				
16PCS	2PCS	2PCS	4PCS	12PCS

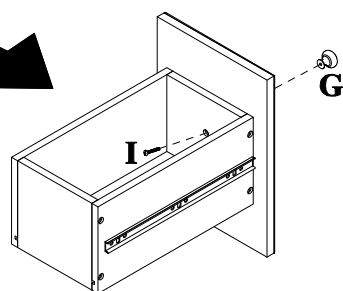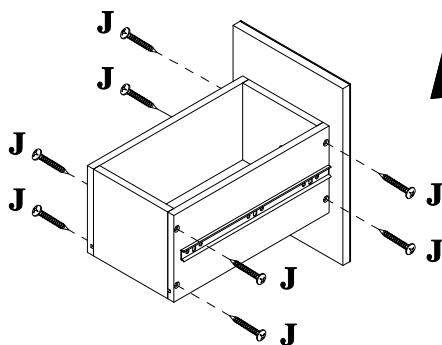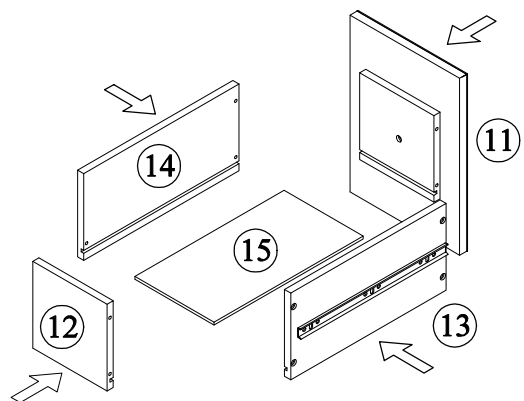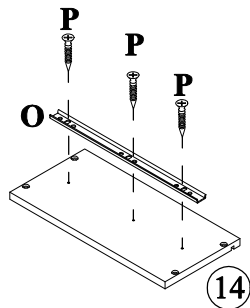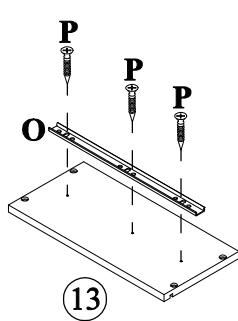


x2



POSITION OF SCREW

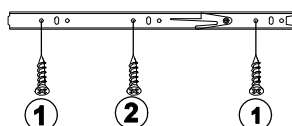

STEP: 12

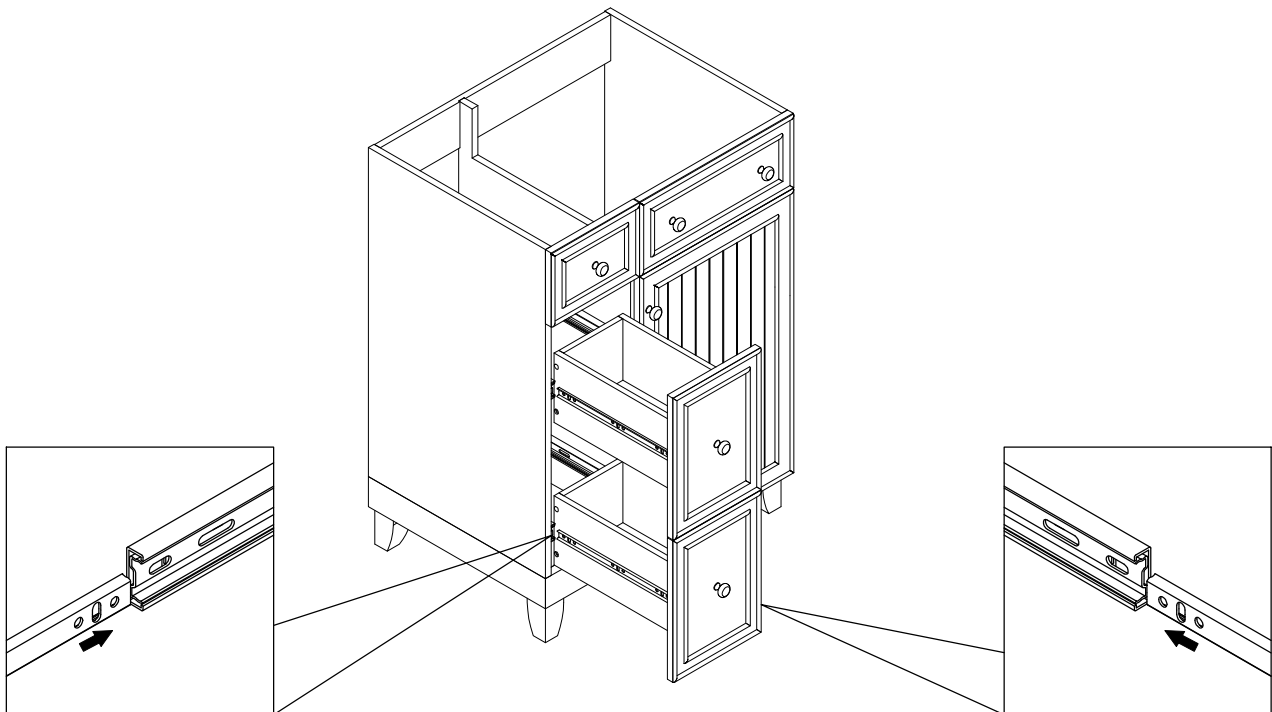


STEP: 13

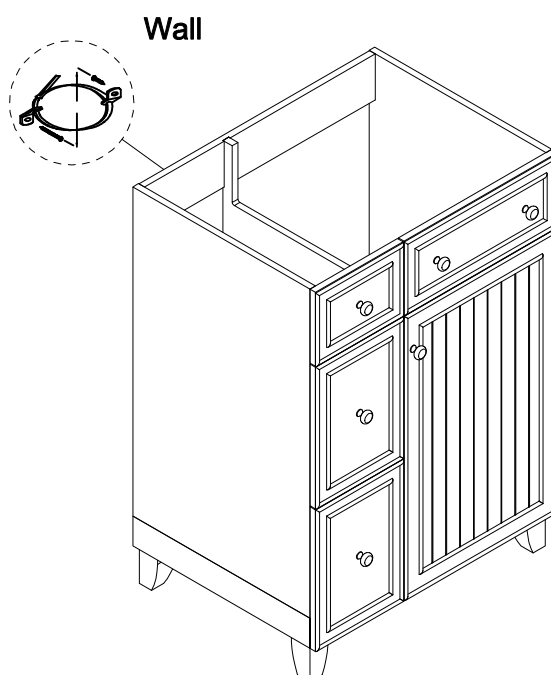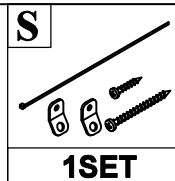


STEP: 14

**Install the sink on the cabinet with glue.
Let stand for 24 hours**

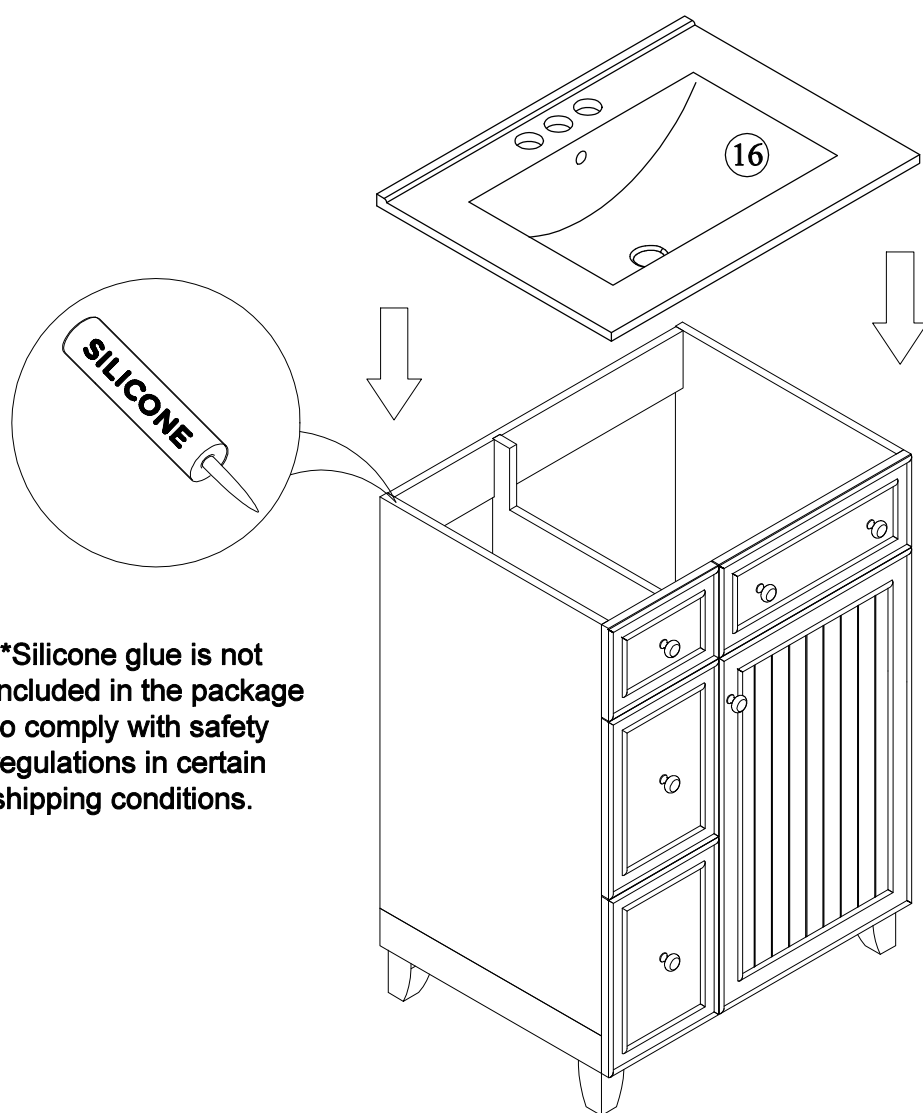


***Silicone glue is not included in the package to comply with safety regulations in certain shipping conditions.**

STEP: 15

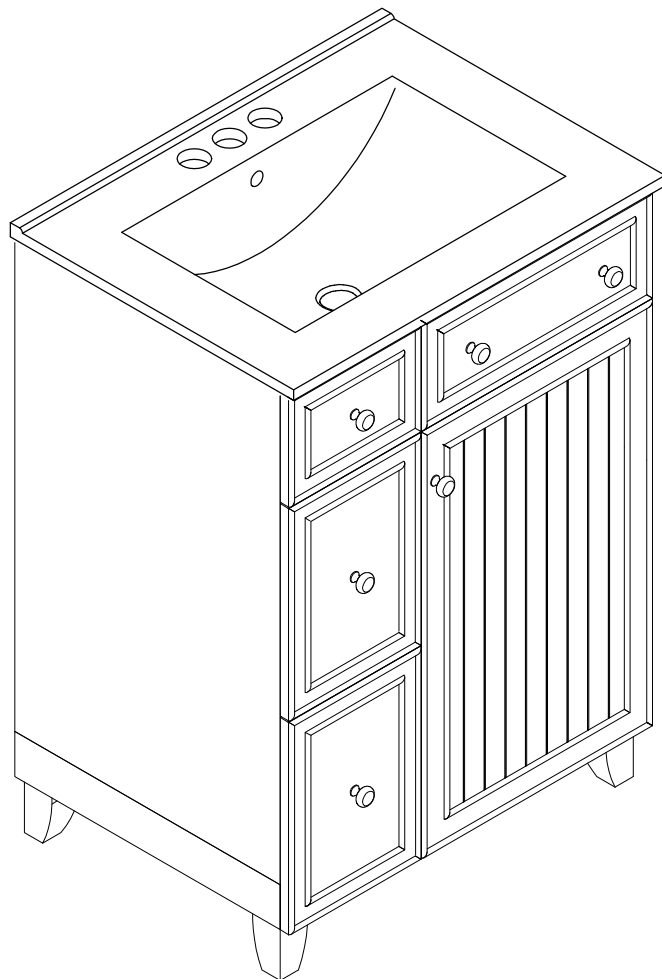

HINGE ADJUSTMENTS

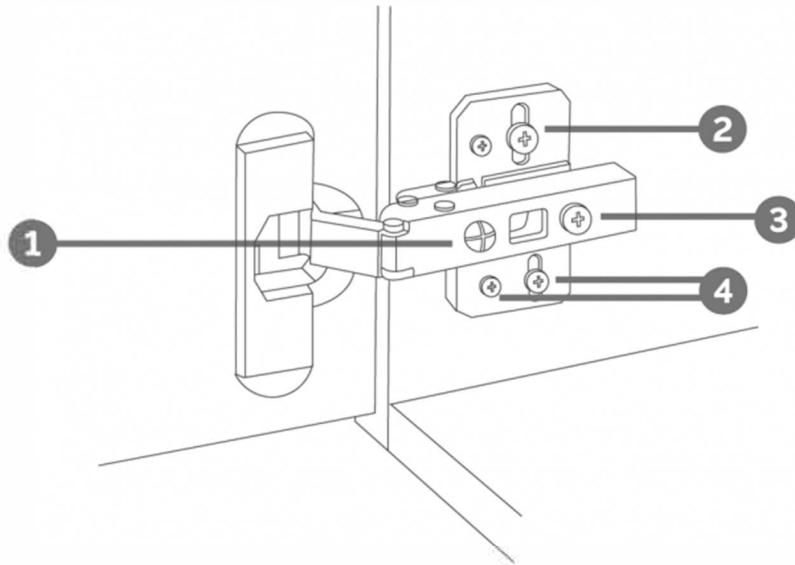


① Sideways / Tilt adjustment

Turn the screw

clockwise to move the door further away from the side of the cabinet

anticlockwise to move the door closer to the side of the cabinet

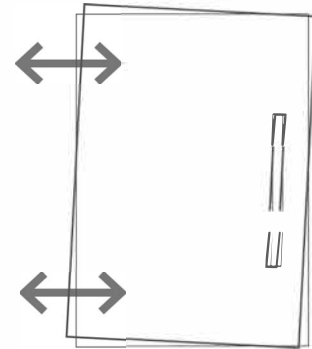


② ④ Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up

anticlockwise to move the door down

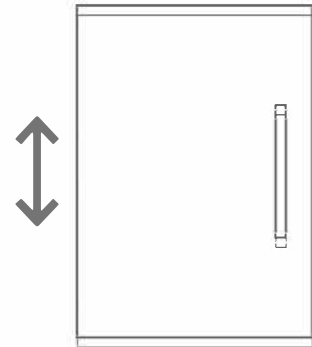

③ Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw

clockwise to decrease the gap between the door and the cabinet

anticlockwise to increase the gap between the door and the cabinet

