







ASSEMBLY INSTRUCTION

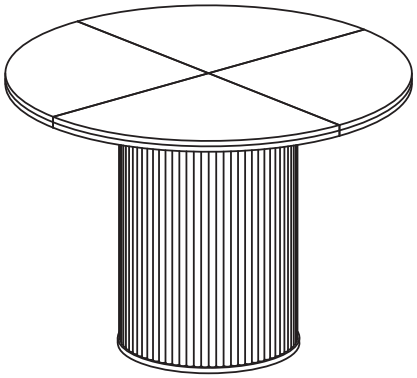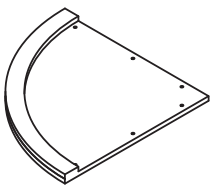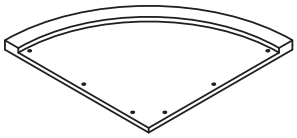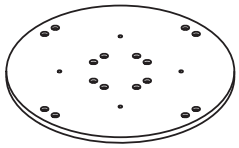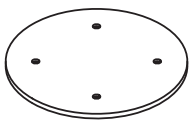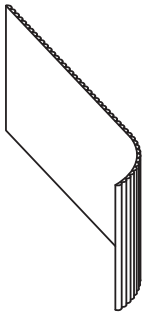

A	B	C	D	E	F	G
						
6*13 24pcs	8*30 4pcs	Ø25 6pcs	8*18 24pcs	M5 1pcs	4pcs	8*20 4pcs


H

6*20 16pcs


①  2pcs	②  2pcs	③  1pcs
④  1pcs	⑤  1pcs	⑥  1pcs
⑦  1pcs	⑧  4pcs	

ASSEMBLY INSTRUCTION


STEP1

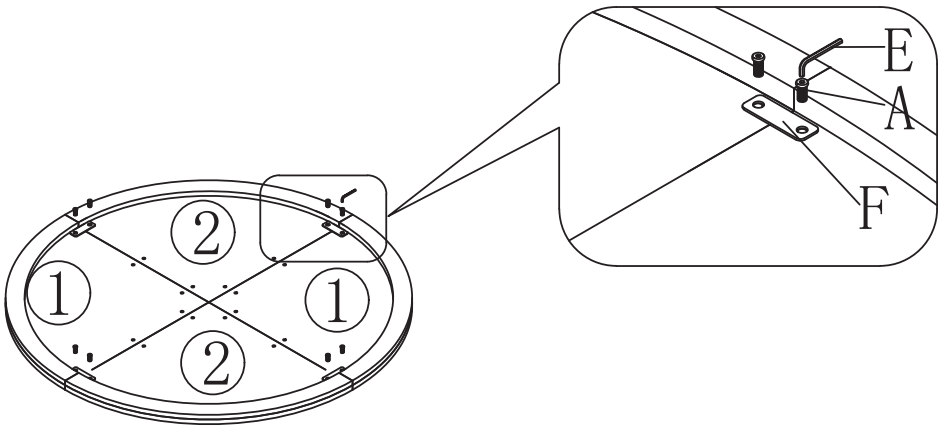

STEP2

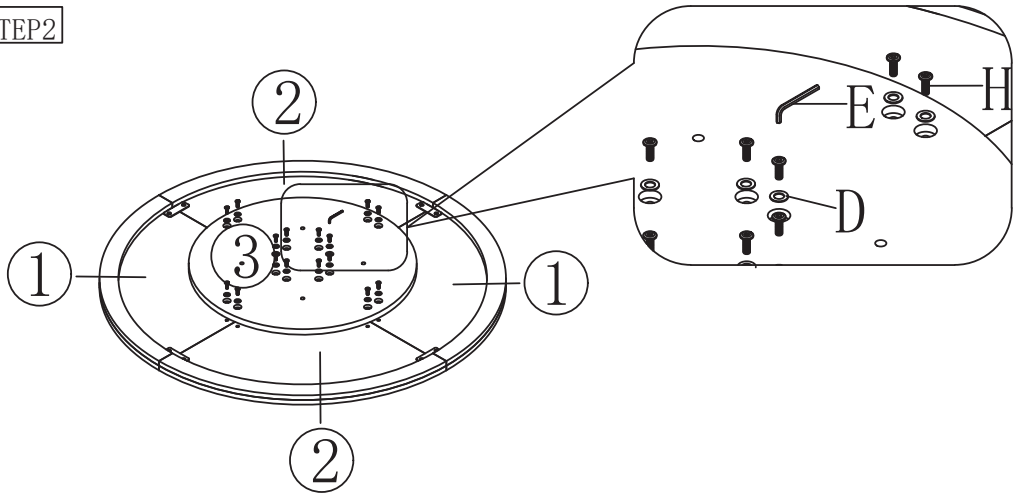


STEP3

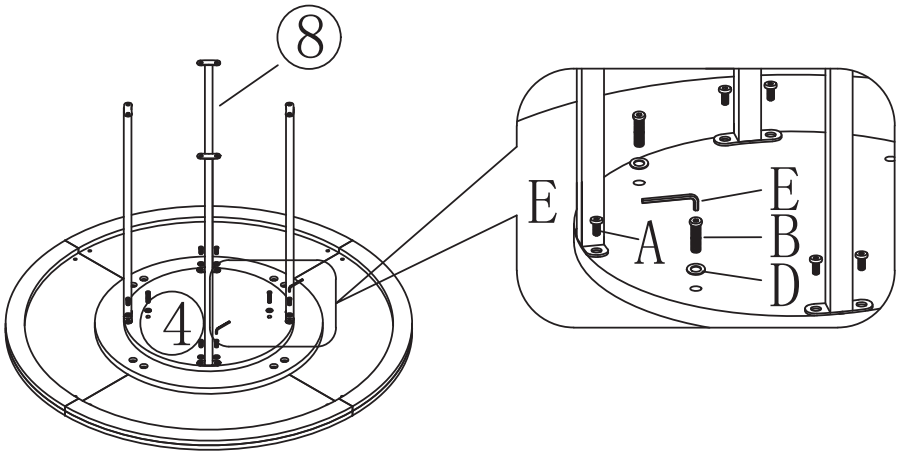


ASSEMBLY INSTRUCTION

STEP4

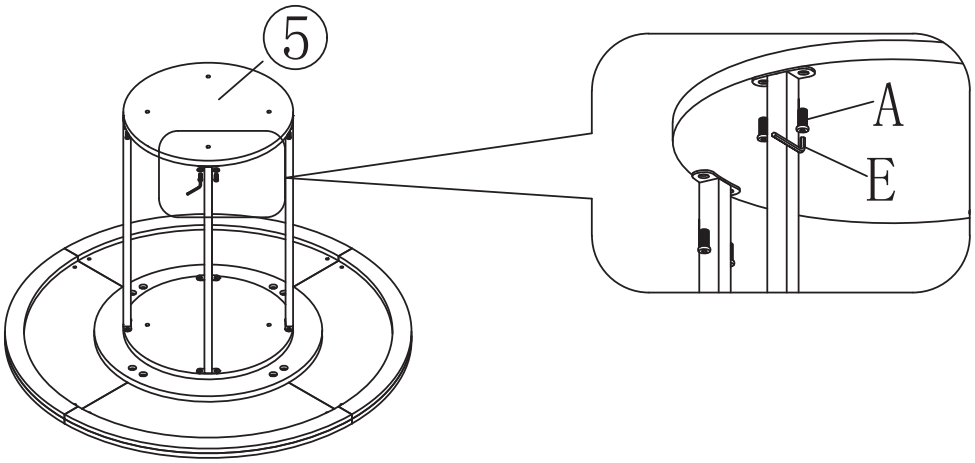



STEP5

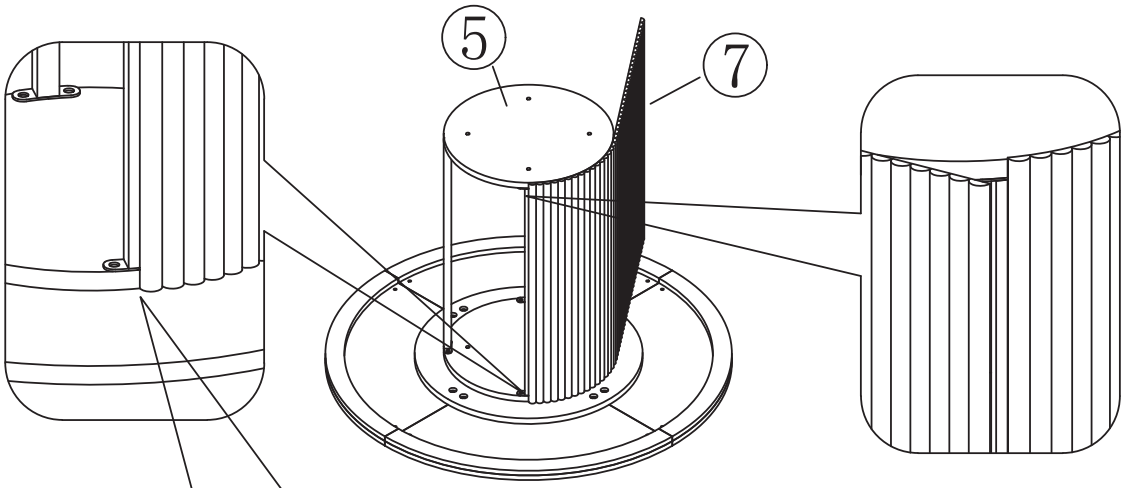

Align the middle part of the link bar when the coaming board is surrounded. If there is a gap after the whole encirclement, please open it and straighten it and re-wrap it.

STEP6

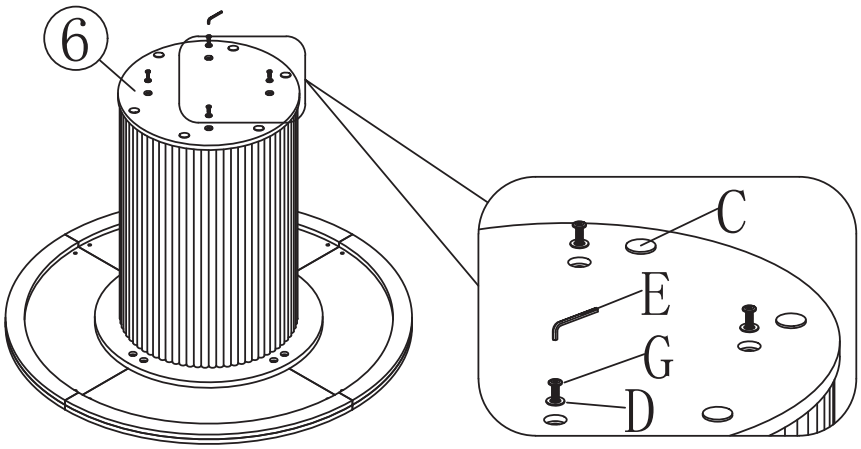

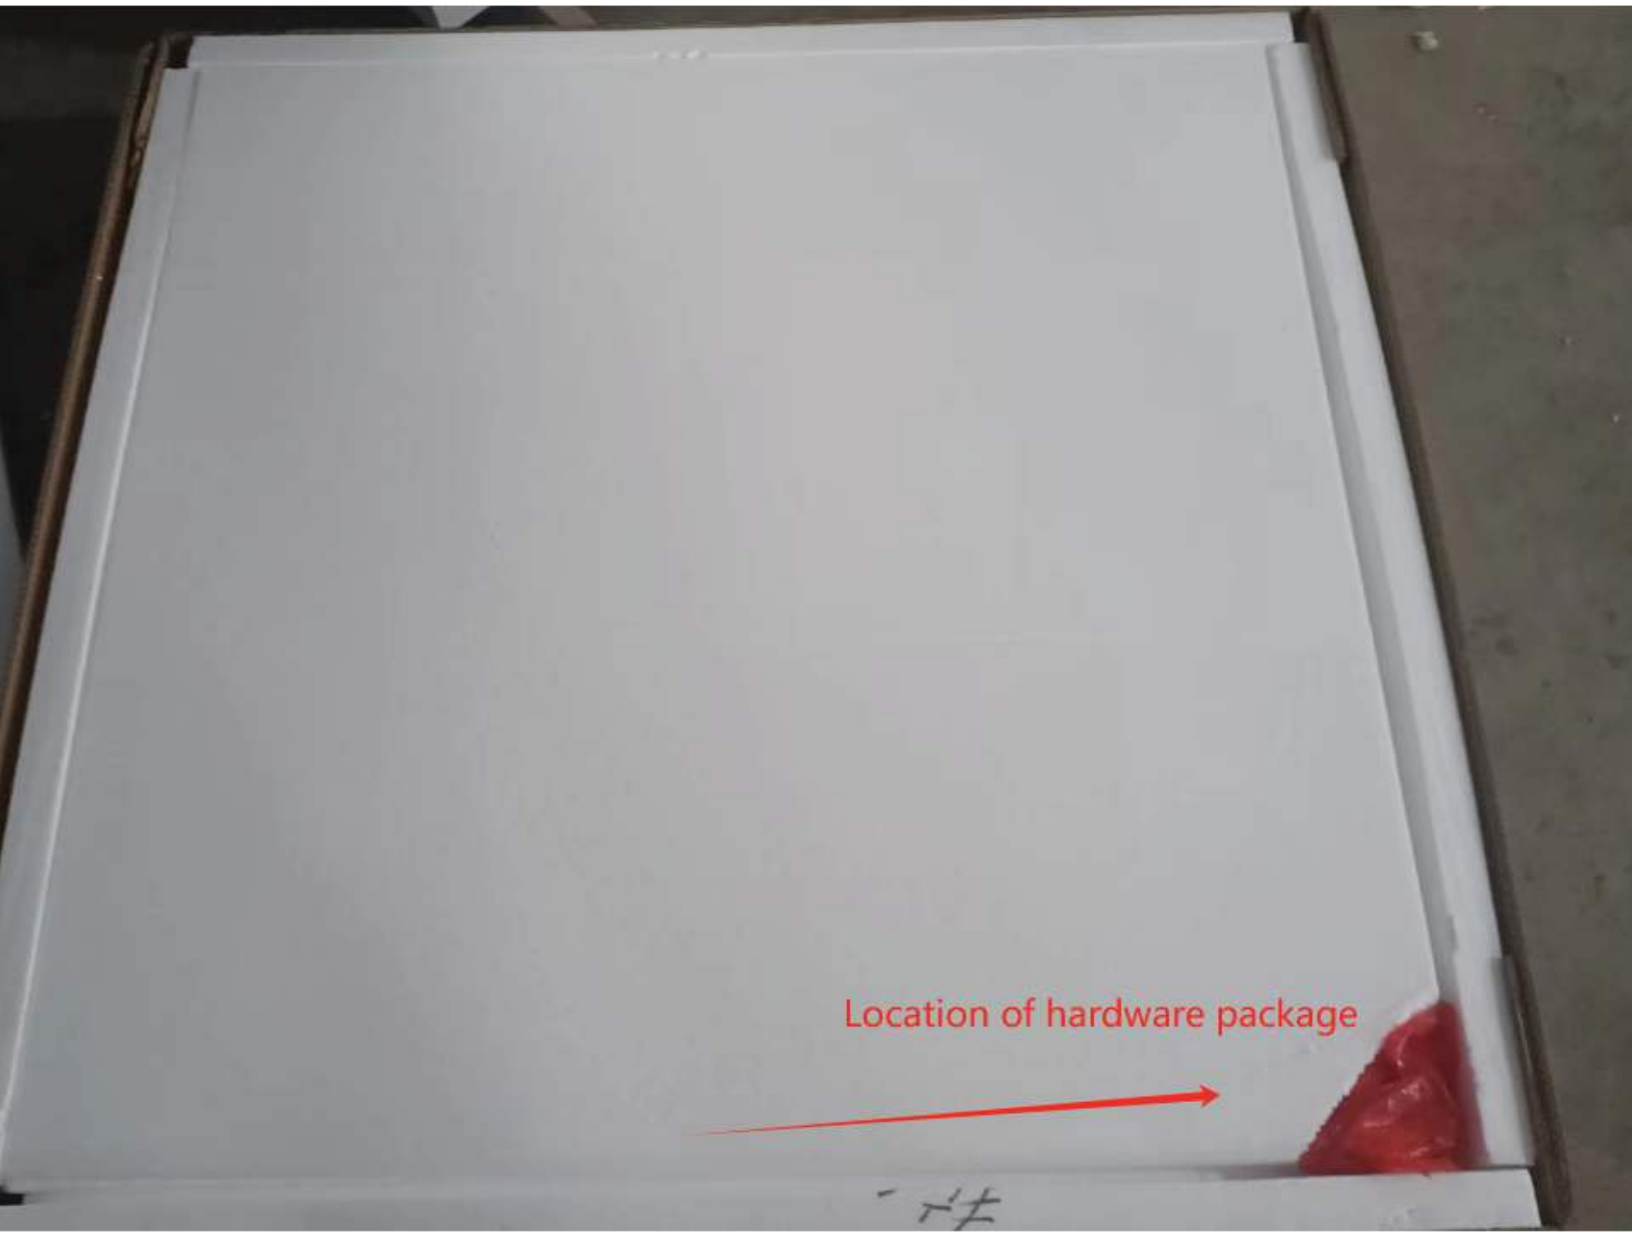
Location of hardware package