



Assembly Instruction




Instructions for Use

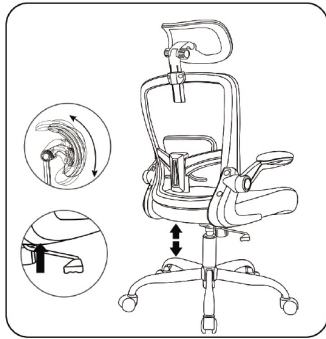

Up & down and Headrest adjustment

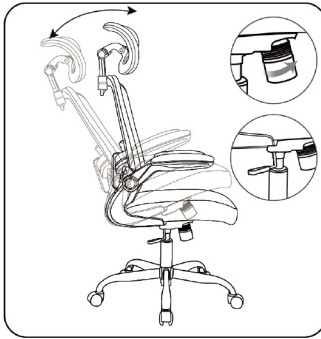

Tilt adjustment

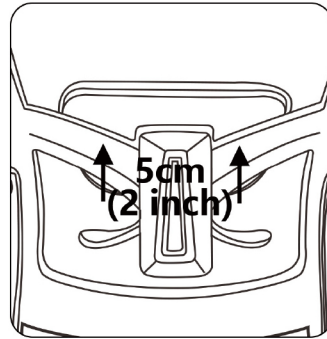

Adjustable Lumbar Support

Thanks for purchasing our products. Please read this manual before assembly. And please assemble in order. After the assembly, keep the instruction properly. Make sure all the parts are included (16 kinds in total).

Accessories List

(1) Headrest	(2) Backrest	(3) Seat Cushion	(4) Foot Stool	(5) 5 Castors	(6) Air Rod
(7) 2 Armrests	(8) Base Plate	(9) 4 Screws (M6X30mm)	(10) 6 Decoration Caps	(11) 4 Screws (M6X35mm)	(12) 4 Screws (M6X18mm)
(13) 2 Screws (M6X20mm)	(14) 10 Screws (M6X12mm)	(15) Hexagon Wrench	(16) 4 Gaskets		

Notice


- This is a single chair, so please do not seat 2 or more persons, just seat only one person.
- Do not stand on the chair.
- Do not sit reverse or sit outside of the seat cushion.
- Check the screws once every 6 months, to make sure the screws are tight. Do not use the chair when the screws are loose.
- Please assemble according to the instructions.

Assembly Instruction

Please assemble in a wide and flat place.

Step 1


Insert 5 Foot Stool (4) into the central base tube as shown. Align with the holes on both sides, tighten 10 Screws M6X12mm (14) with Hexagon Wrench (15).

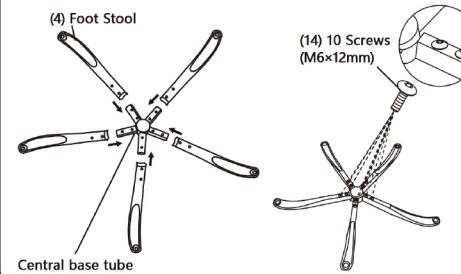

Step 2


Insert the 5 Castors (5) to the foot stool installed in step 1 and press them in firmly. Put Air Rod (6) into the hole of central base tube as shown. Then put it aside and we will use it on Step 6.

*Caution: Confirm 5 Castors (5) must be inserted deeply. Otherwise the Castors could easily fall out and the chair could fall down.

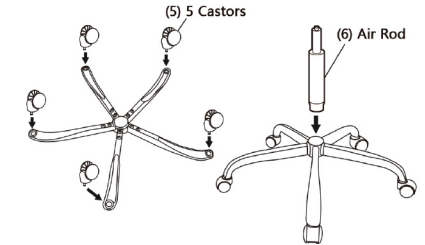


Step 3

Tighten the Screws M6X30mm (9) with Hexagon Wrench (15) to fix 2 Armrests (7) to the back of Backrest (2). Tighten the 4 screws firmly and then cover the screws with Decoration Caps (10).

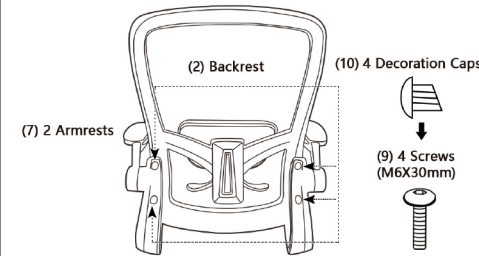

Step 4


After Step 3, fix the bottom of the Armrests (7) to the back of Seat Cushion (3). Tighten the Screws M6X35mm (11) and Gaskets (16) with Hexagon Wrench (15) firmly.

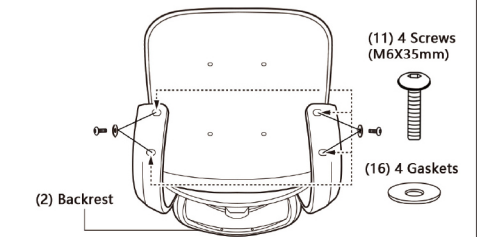

Step 5

Fix Base Plate (8) to the bottom of Seat Cushion (3). Tighten the Screws M6X18mm (12) with Hexagon Wrench (15) firmly.

Caution: There is a FRONT letter print on the front of the Base Plate.

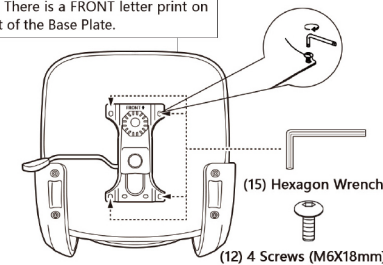

Step 6

Pick up the Step 2's Air Rod (6) and Foot Stool (4). Insert the Air Rod (6) into Step 5's Base Plate (8). There's a hole in the middle of Base Plate (8). Press the Seat Cushion (3) from top to bottom, use your whole body's strength to insert it firmly. Then, align the Headrest (1) with the screw holes on the top of the Backrest (2), and tighten the 2 screws M6X20mm (13) firmly and then cover the screws with Decoration Caps (10), the assembly is complete now.

* Caution: If the Air Rod (6) doesn't insert to Base Plate (8) firmly, it's likely to fall down when the chair raises up.

