


As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

Our professional after-sales team will serve you online all day.

Before You Start

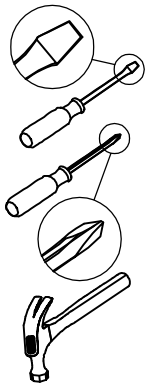

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.




Board Identification


Not actual size

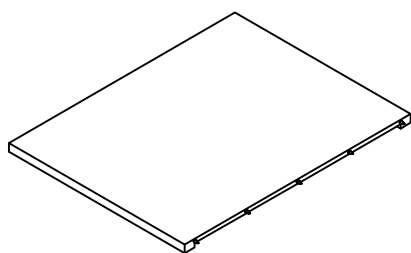


Ⓐ
Table Top
Qty:1

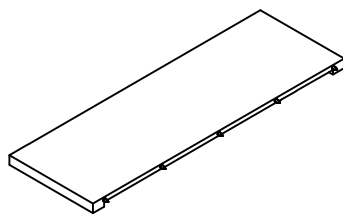


Ⓑ
Center Till
Qty:2

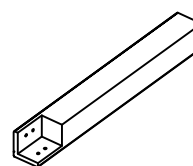


Ⓒ
Leg
Qty:4

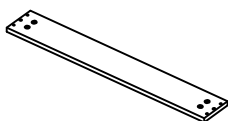


Ⓓ
End Apron
Qty:2

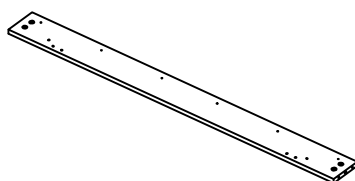


Ⓔ
Apron
Qty:2




Ⓕ
Slat
Qty:2



Ⓖ
Slat
Qty:2

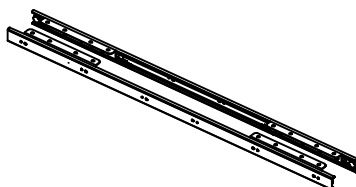


Ⓗ
Slideway
Qty:1

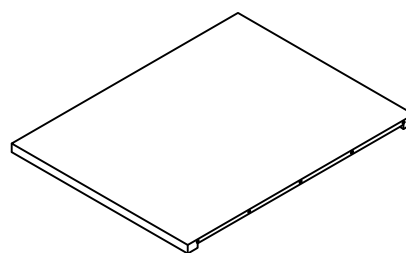


Ⓘ
Table Top
Qty:1

Board Identification


Not actual size

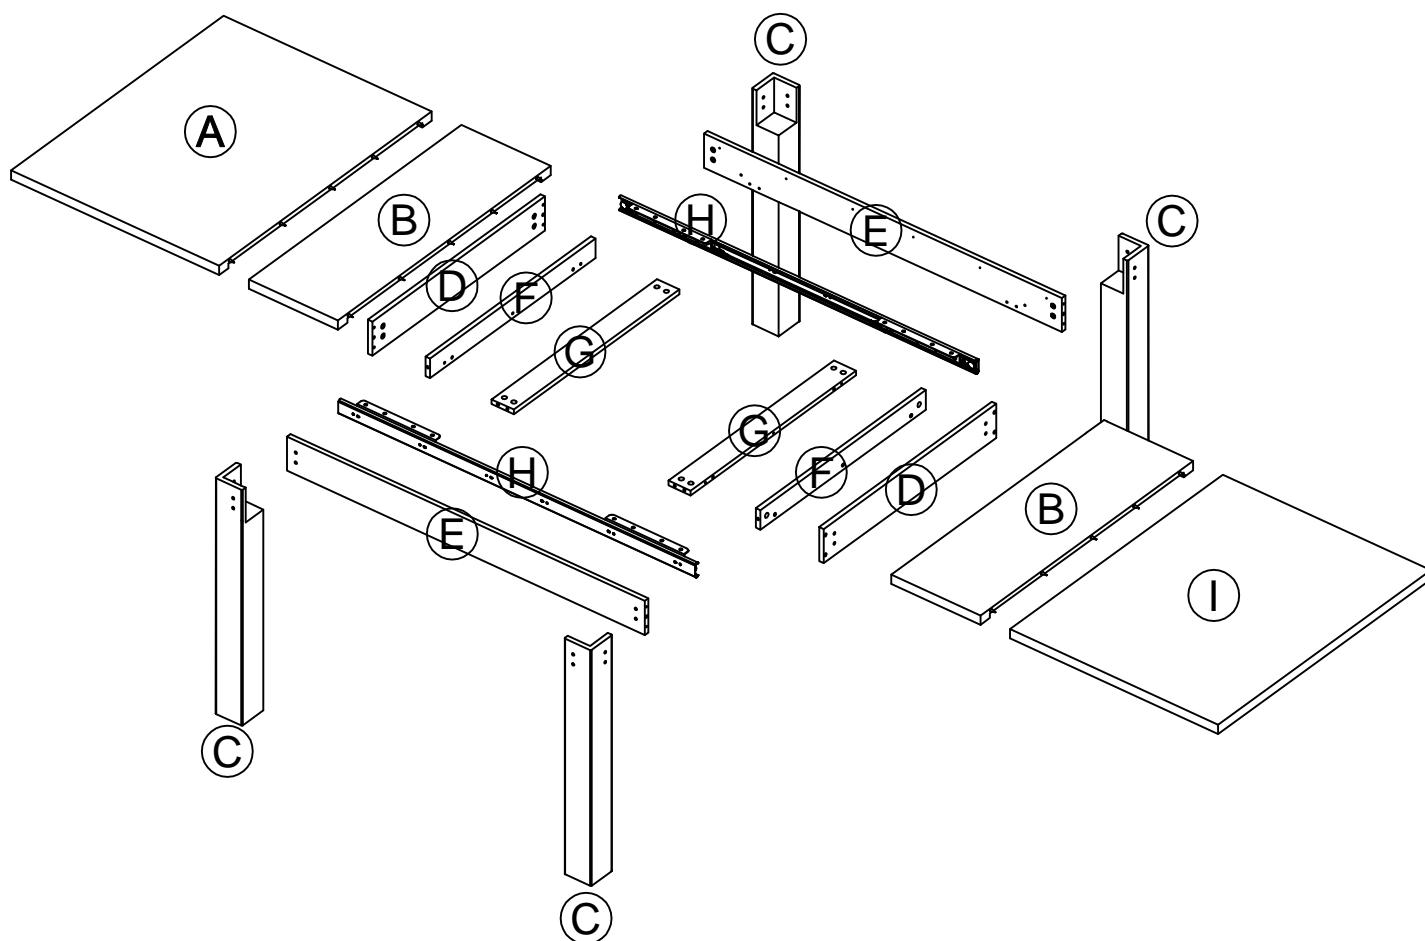


Part List

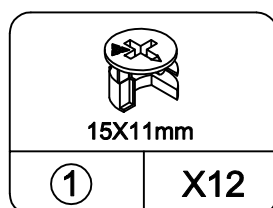


CAM LOCK
spare:1

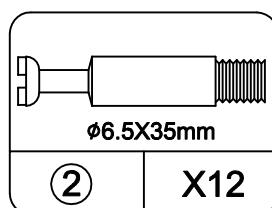


CAM BOLT
spare:1

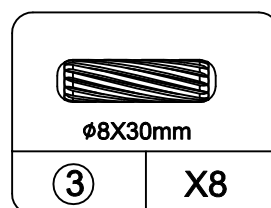


WOOD DOWEL
spare:1

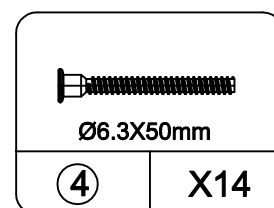


SCREW
spare:1

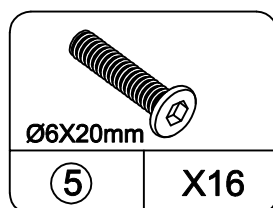


SCREW
spare:2

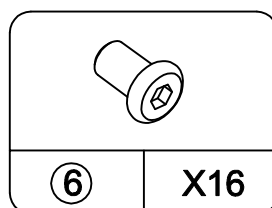


SCREW
spare:2

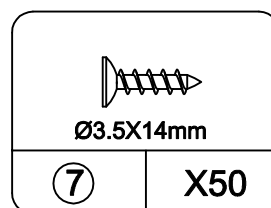


SCREW
spare:3

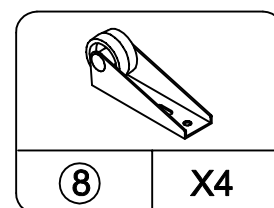


TRAING WHEEL

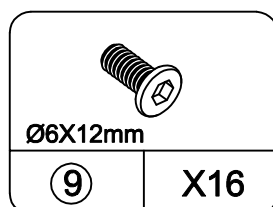


SCREW
spare:2

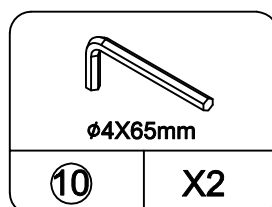


HEX KEY

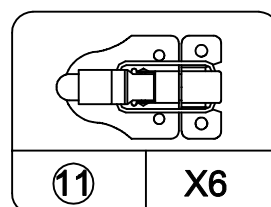

FASTENER

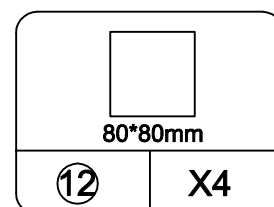


FLOOR-MATS
spare:1

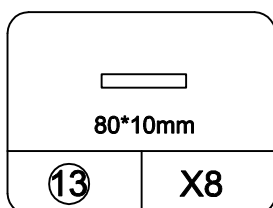




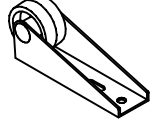
FLOOR-MATS
spare:1


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

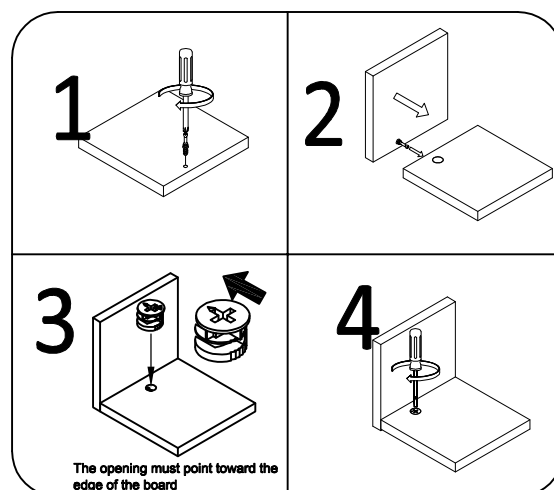


STEP1






 $\varnothing 8 \times 30 \text{mm}$				 $\varnothing 3.5 \times 14 \text{mm}$			
3	X4	2	X12	7	X8	8	X4

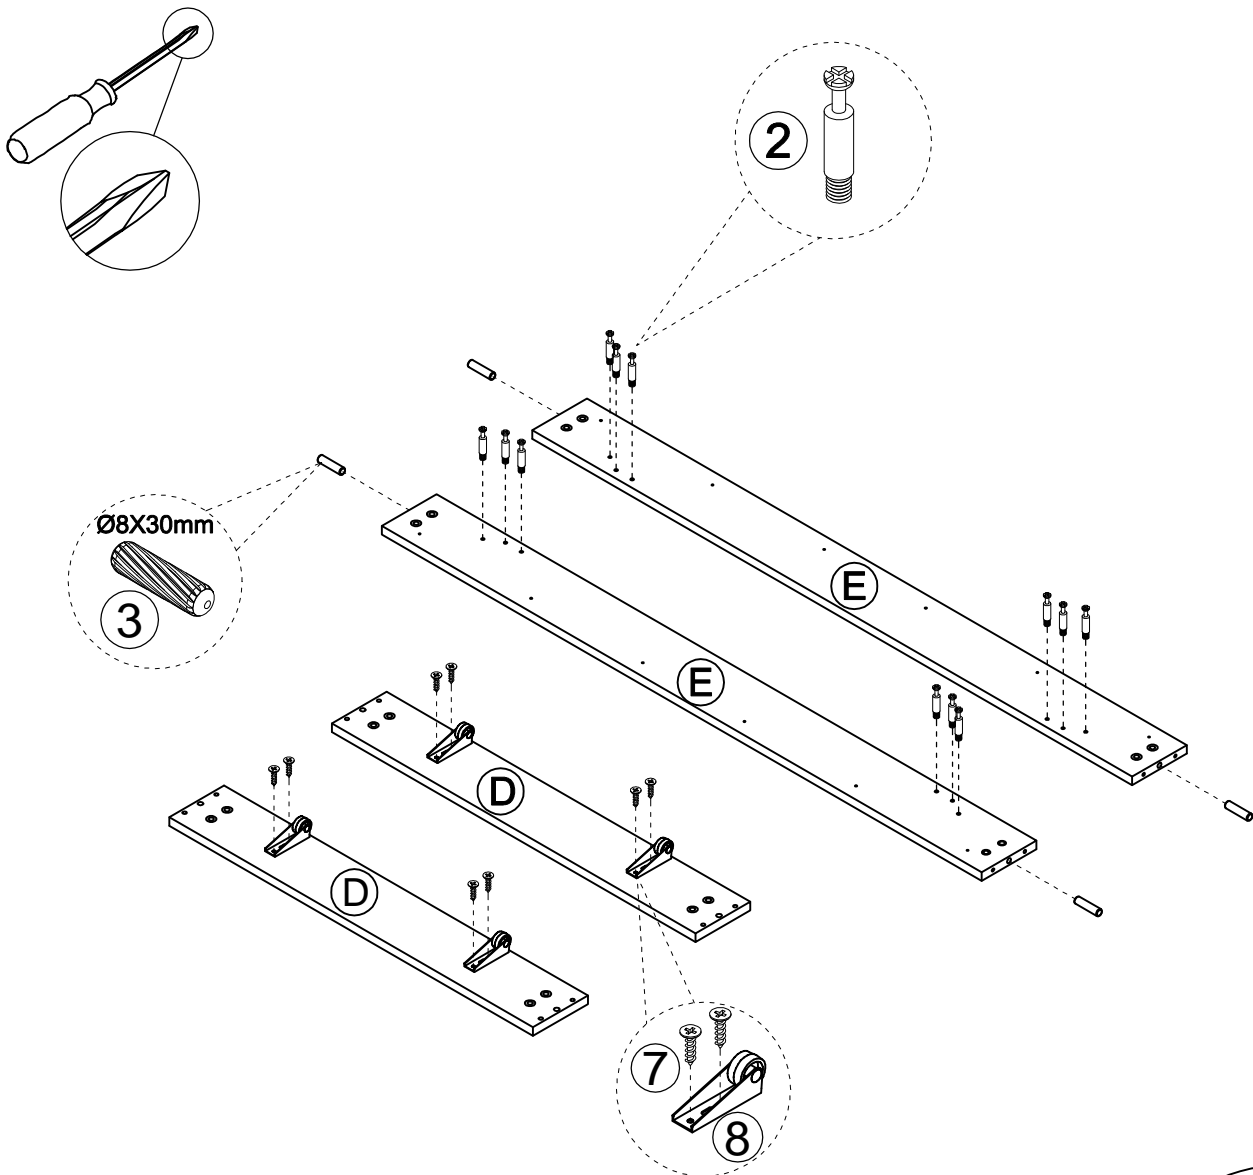

Mind the direction of the upturned wheel.



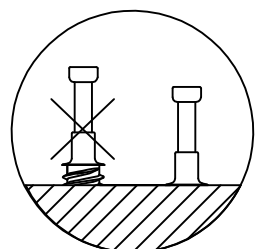


STEP2

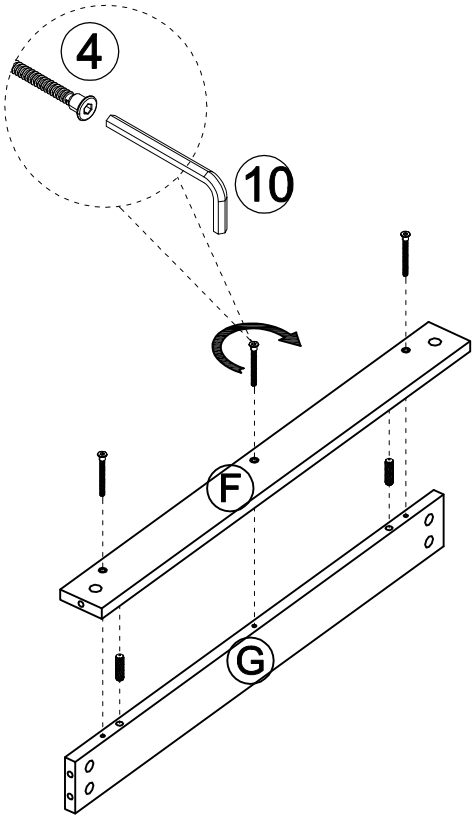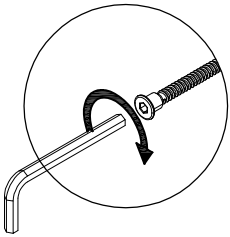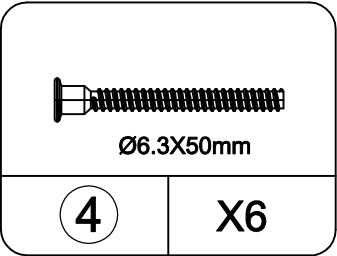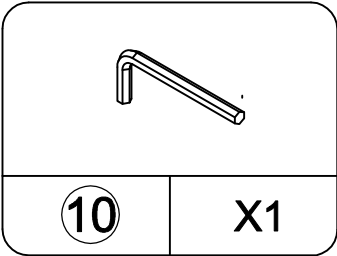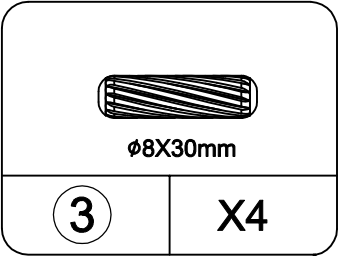


X2

STEP3


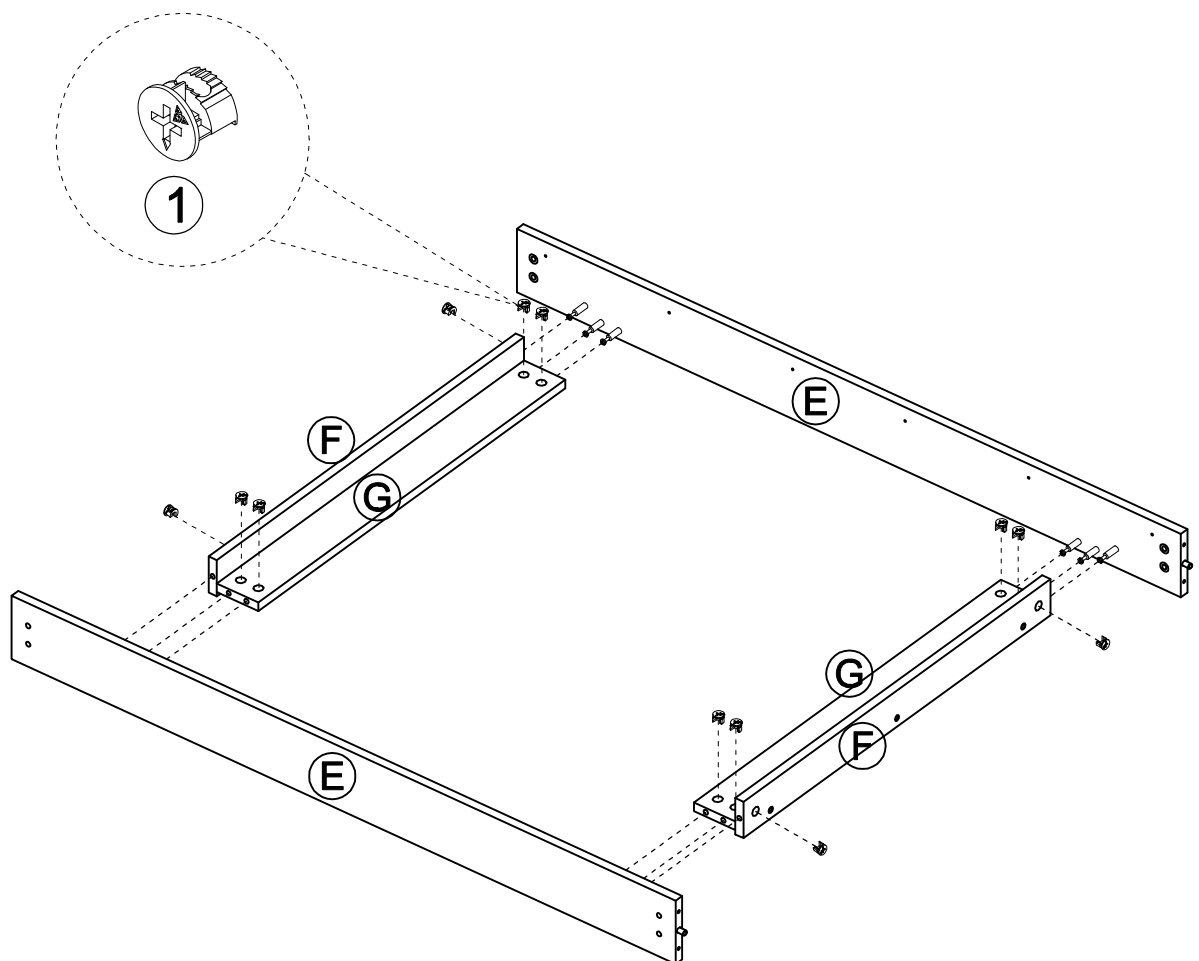
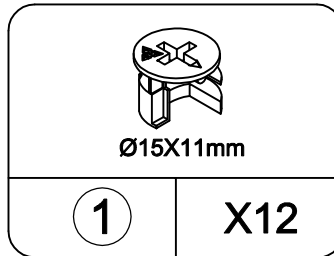
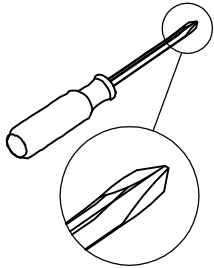


Insert the cam bolt into the hole first,
then insert the cam lock and lock it.

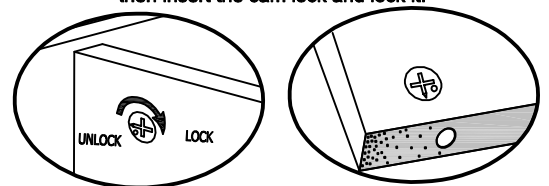






Proper orientation of CAM LOCK

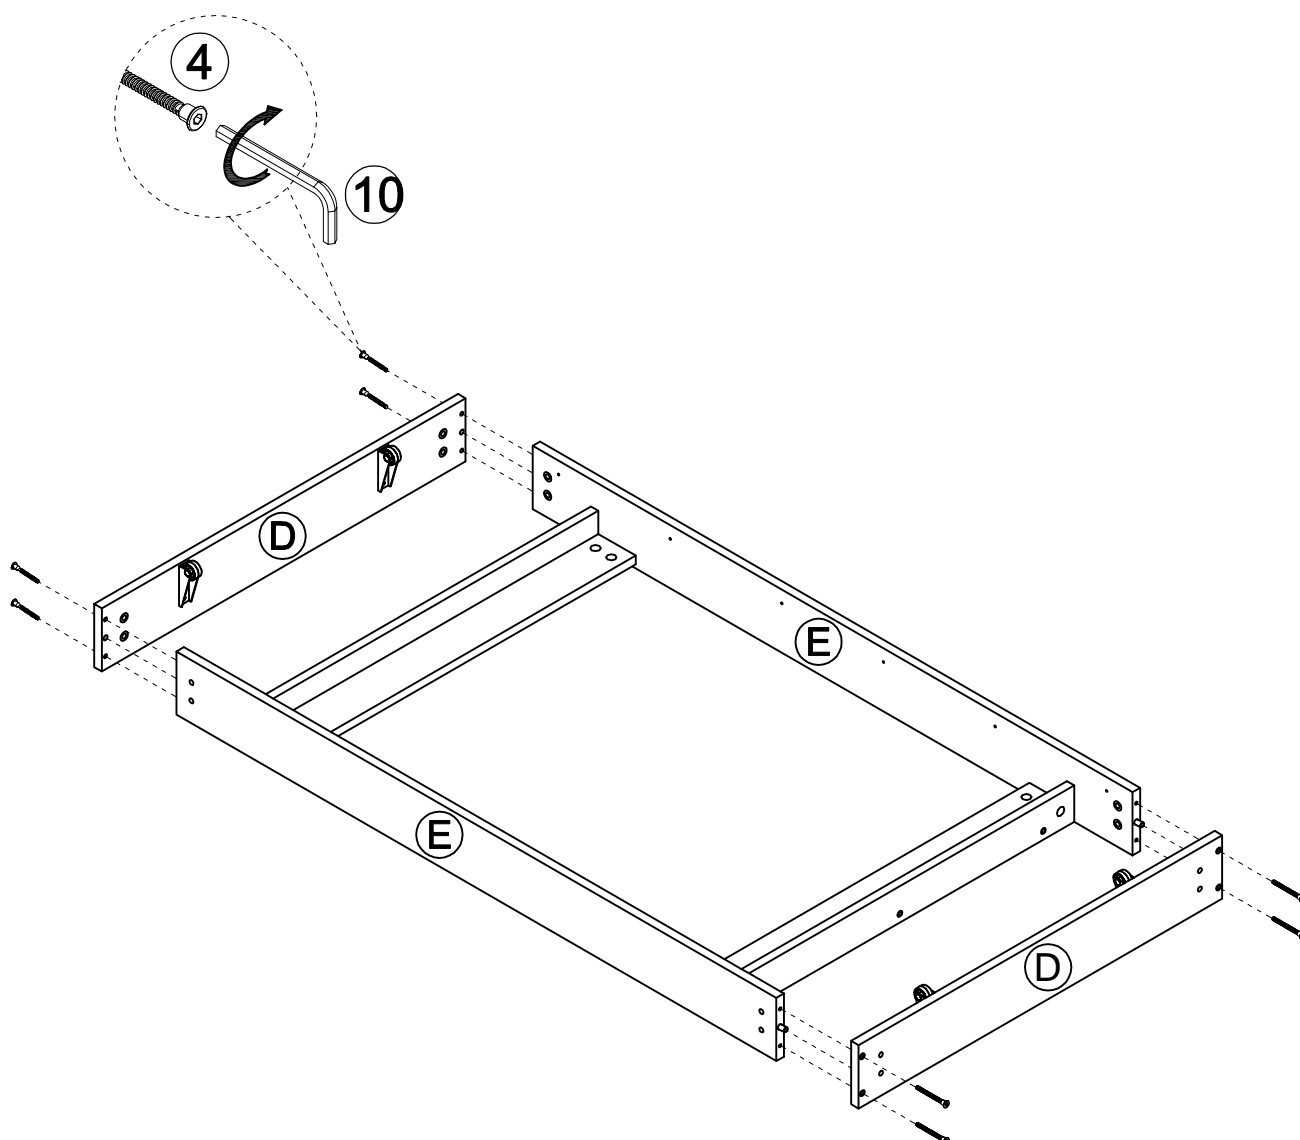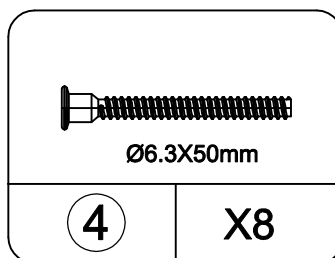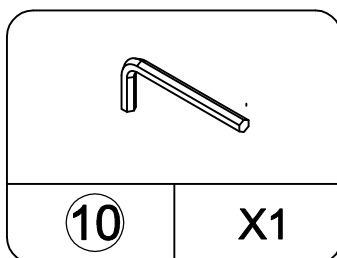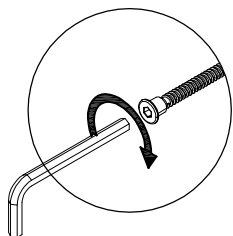STEP4




STEP5



		 Ø6X25mm				 80*80mm	
10	X2	5	X16	6	X16	12	X4

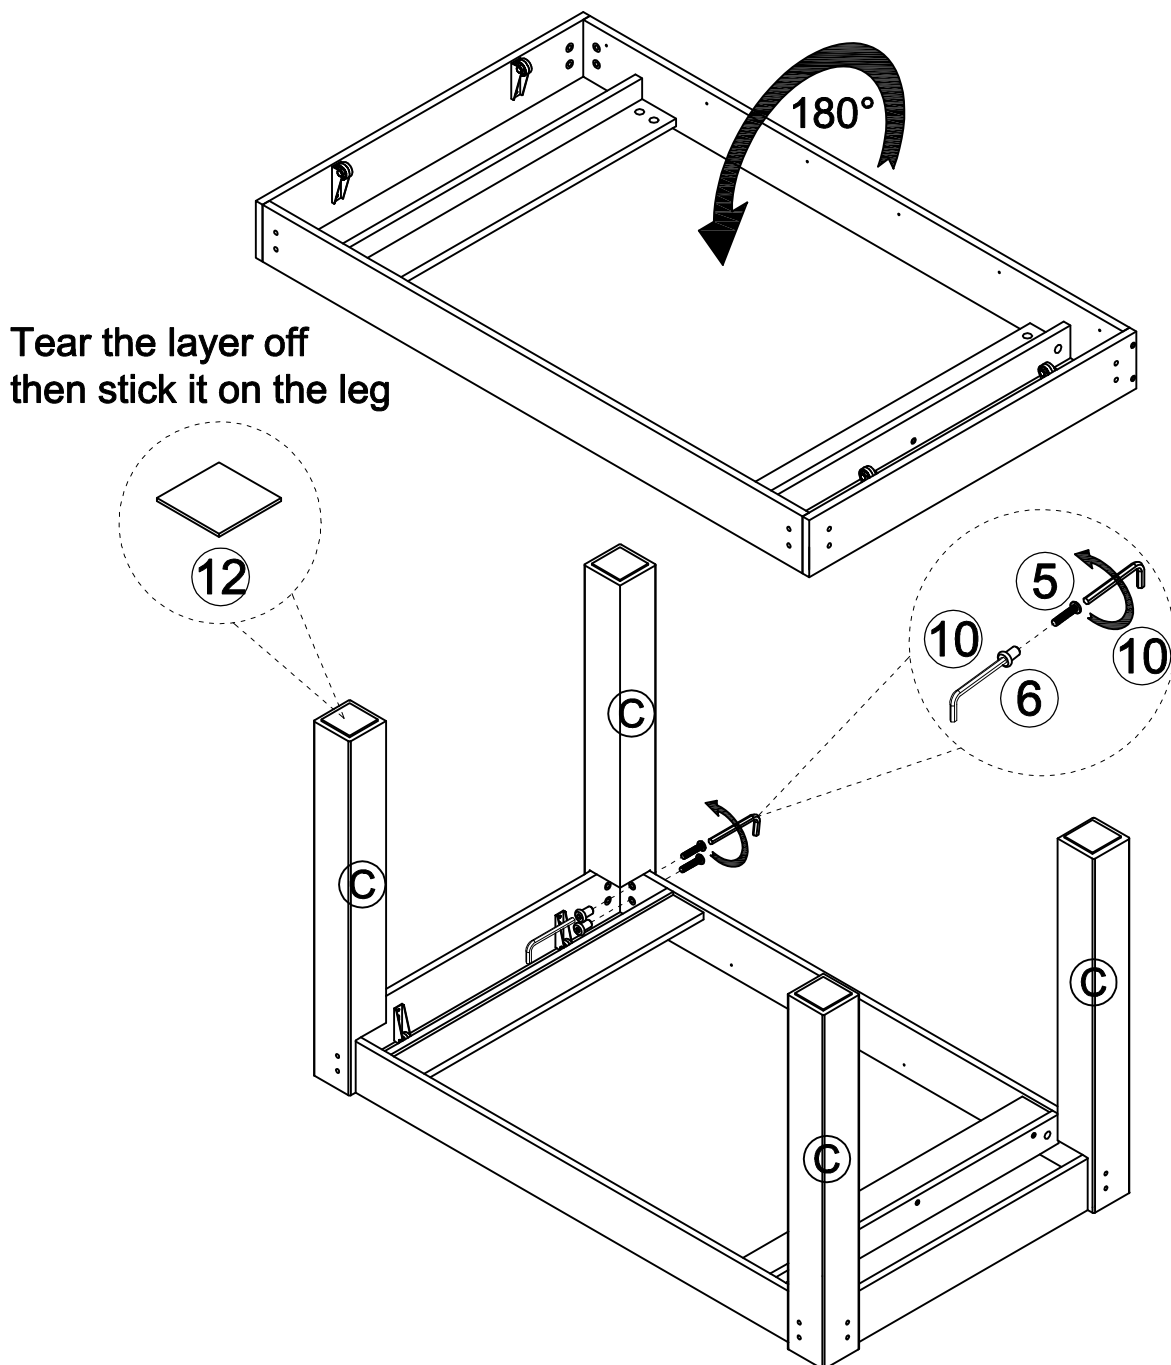


STEP6

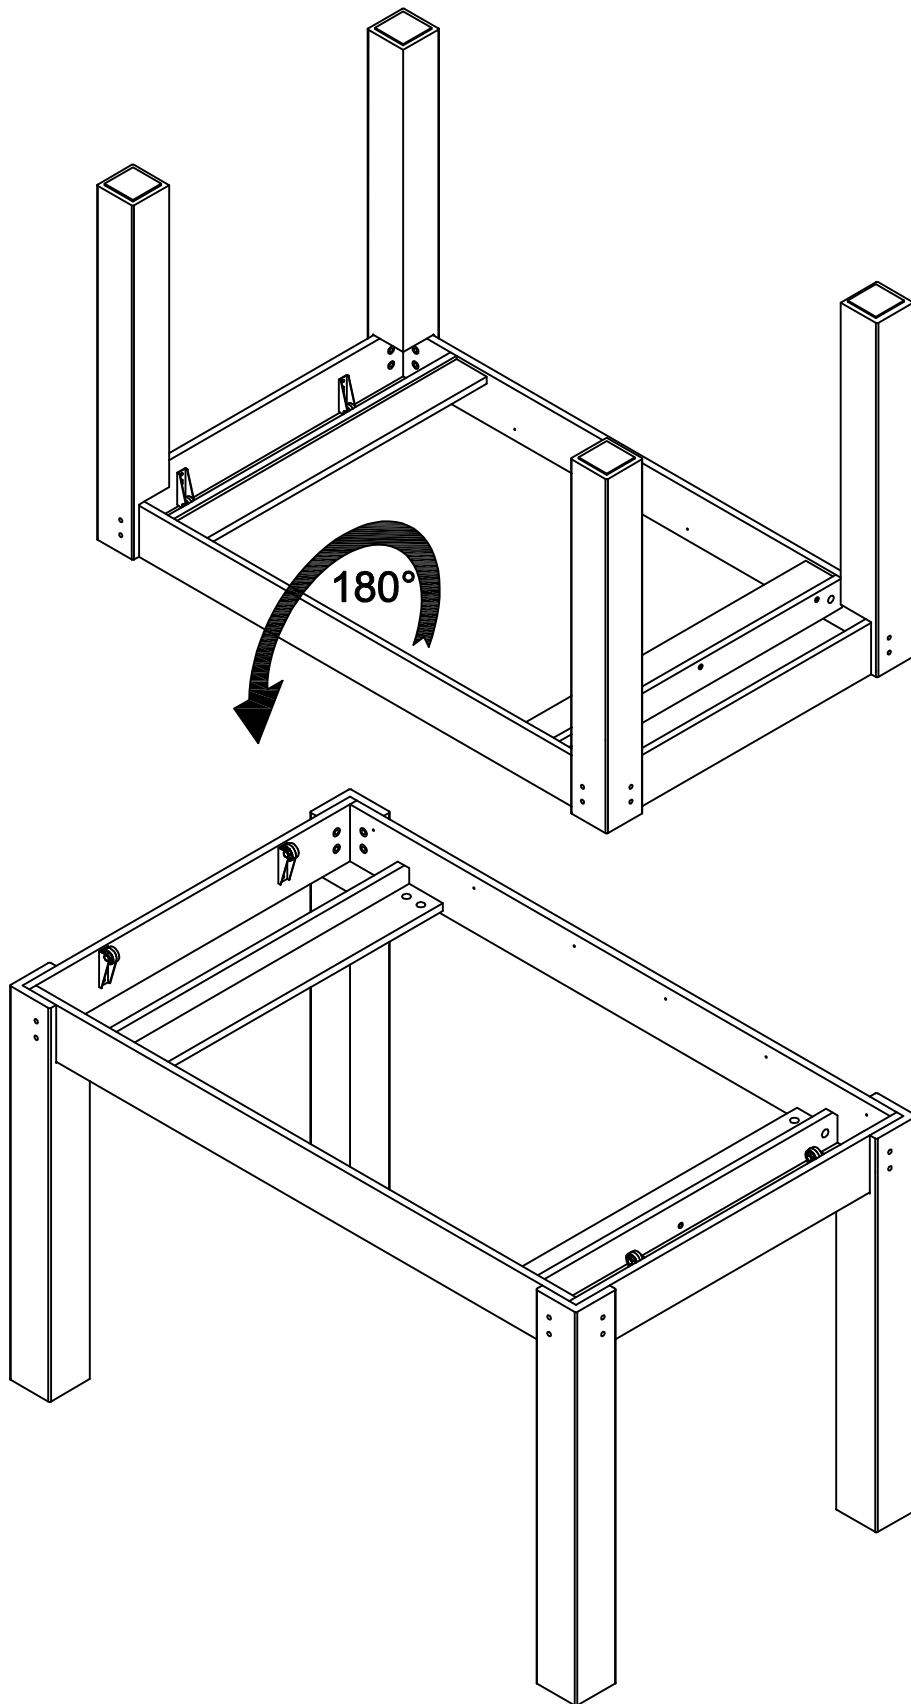






STEP7

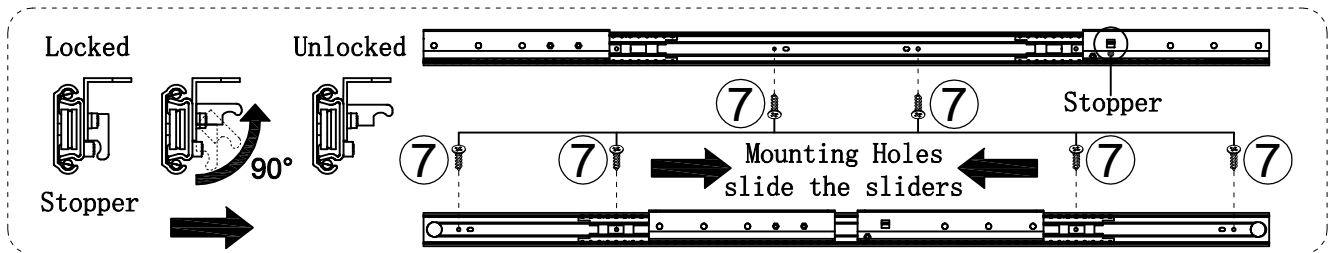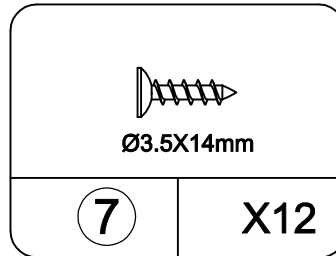


- 1、 Fix the screws to the visible holes;
- 2、 Unlock the stopper as above picture shows;
- 3、 Slide the slider and reveal the rest holes, and then fix the screws to the holes.

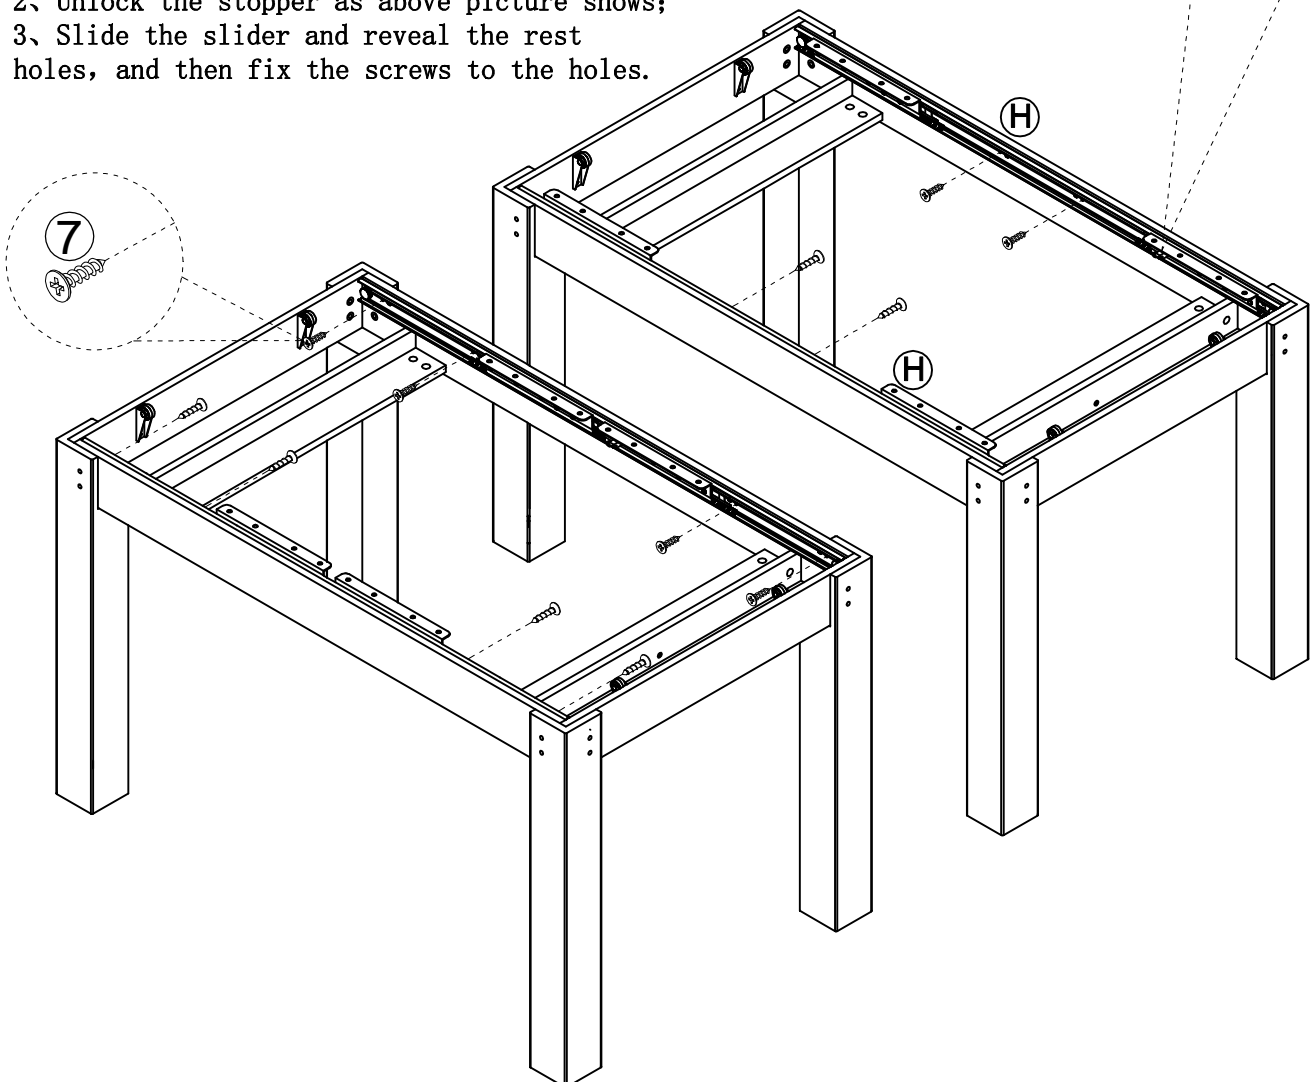




STEP8

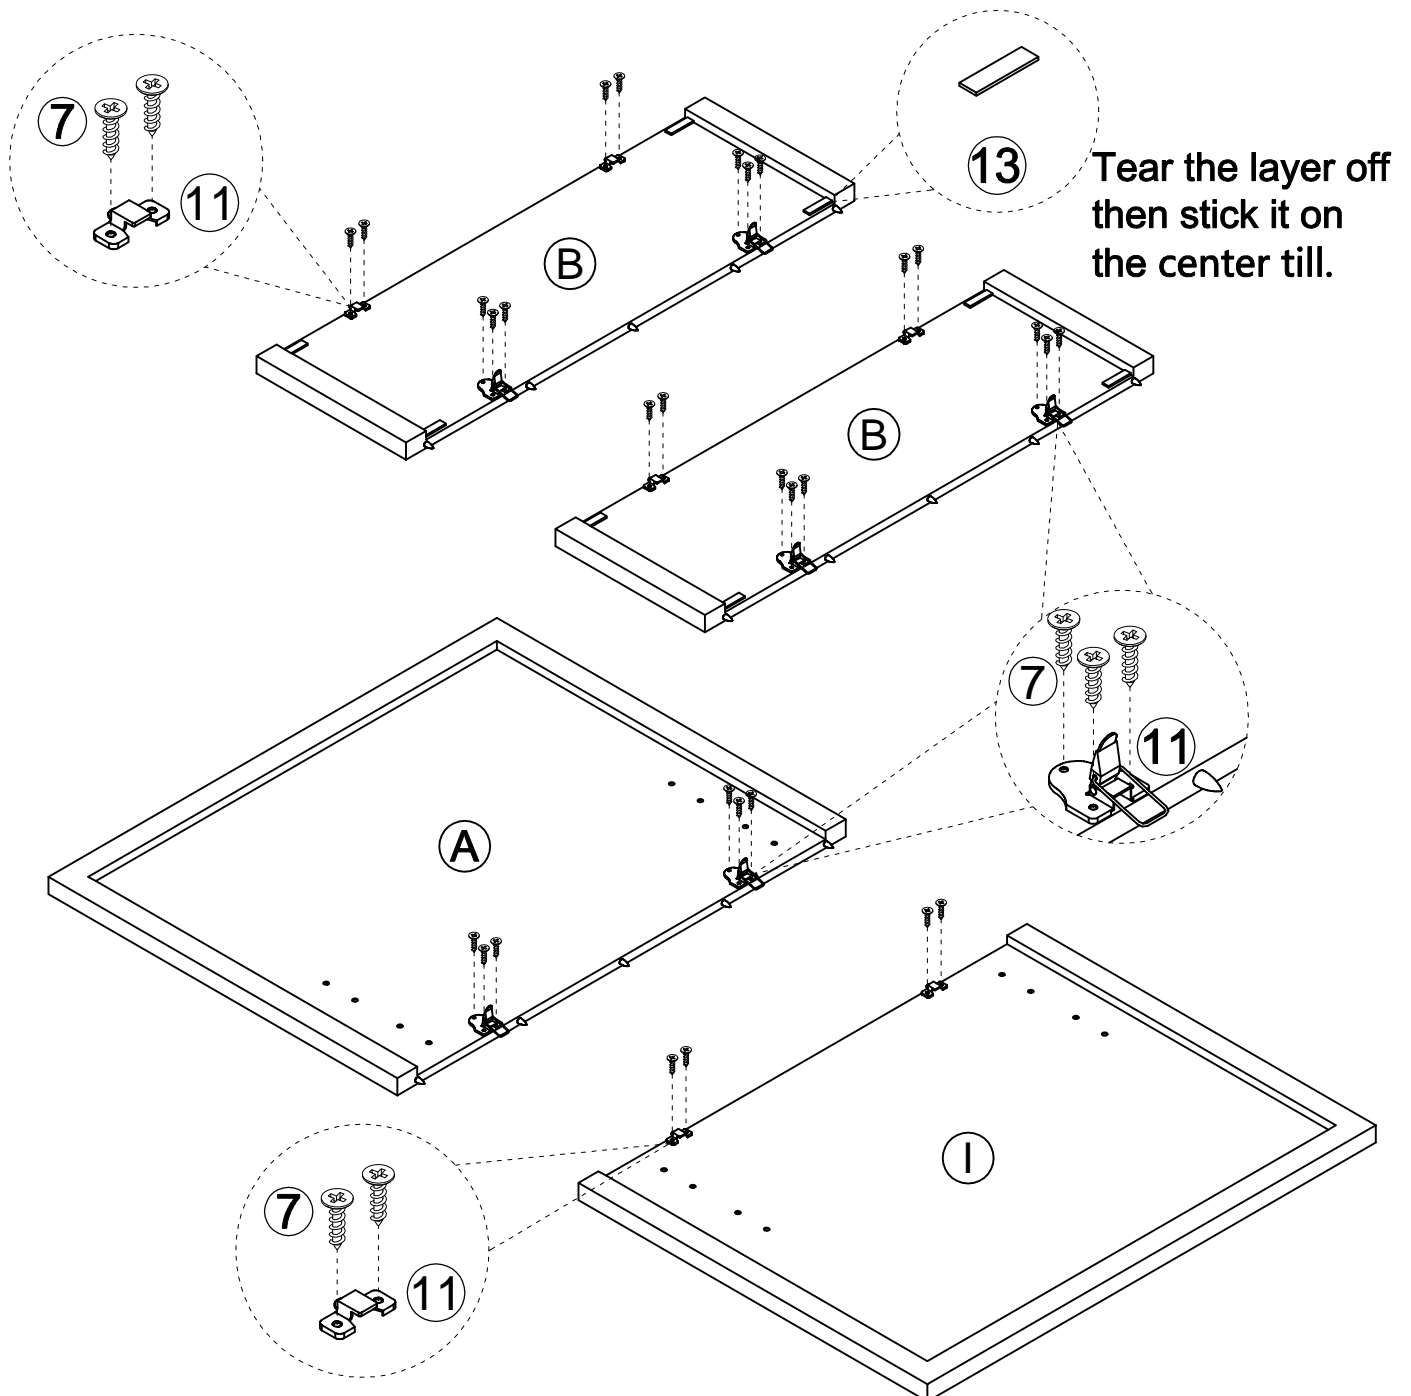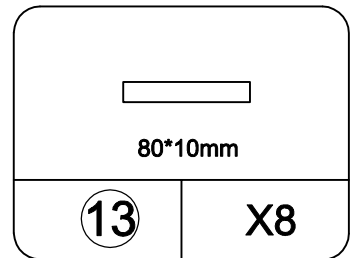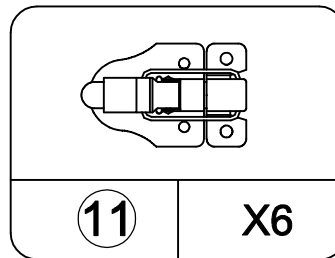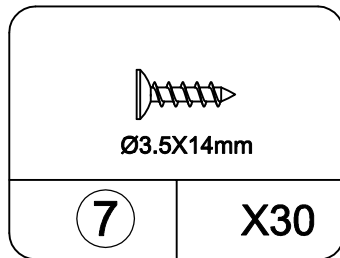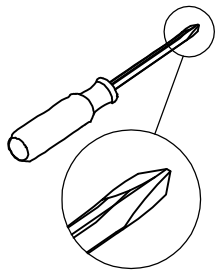



STEP9

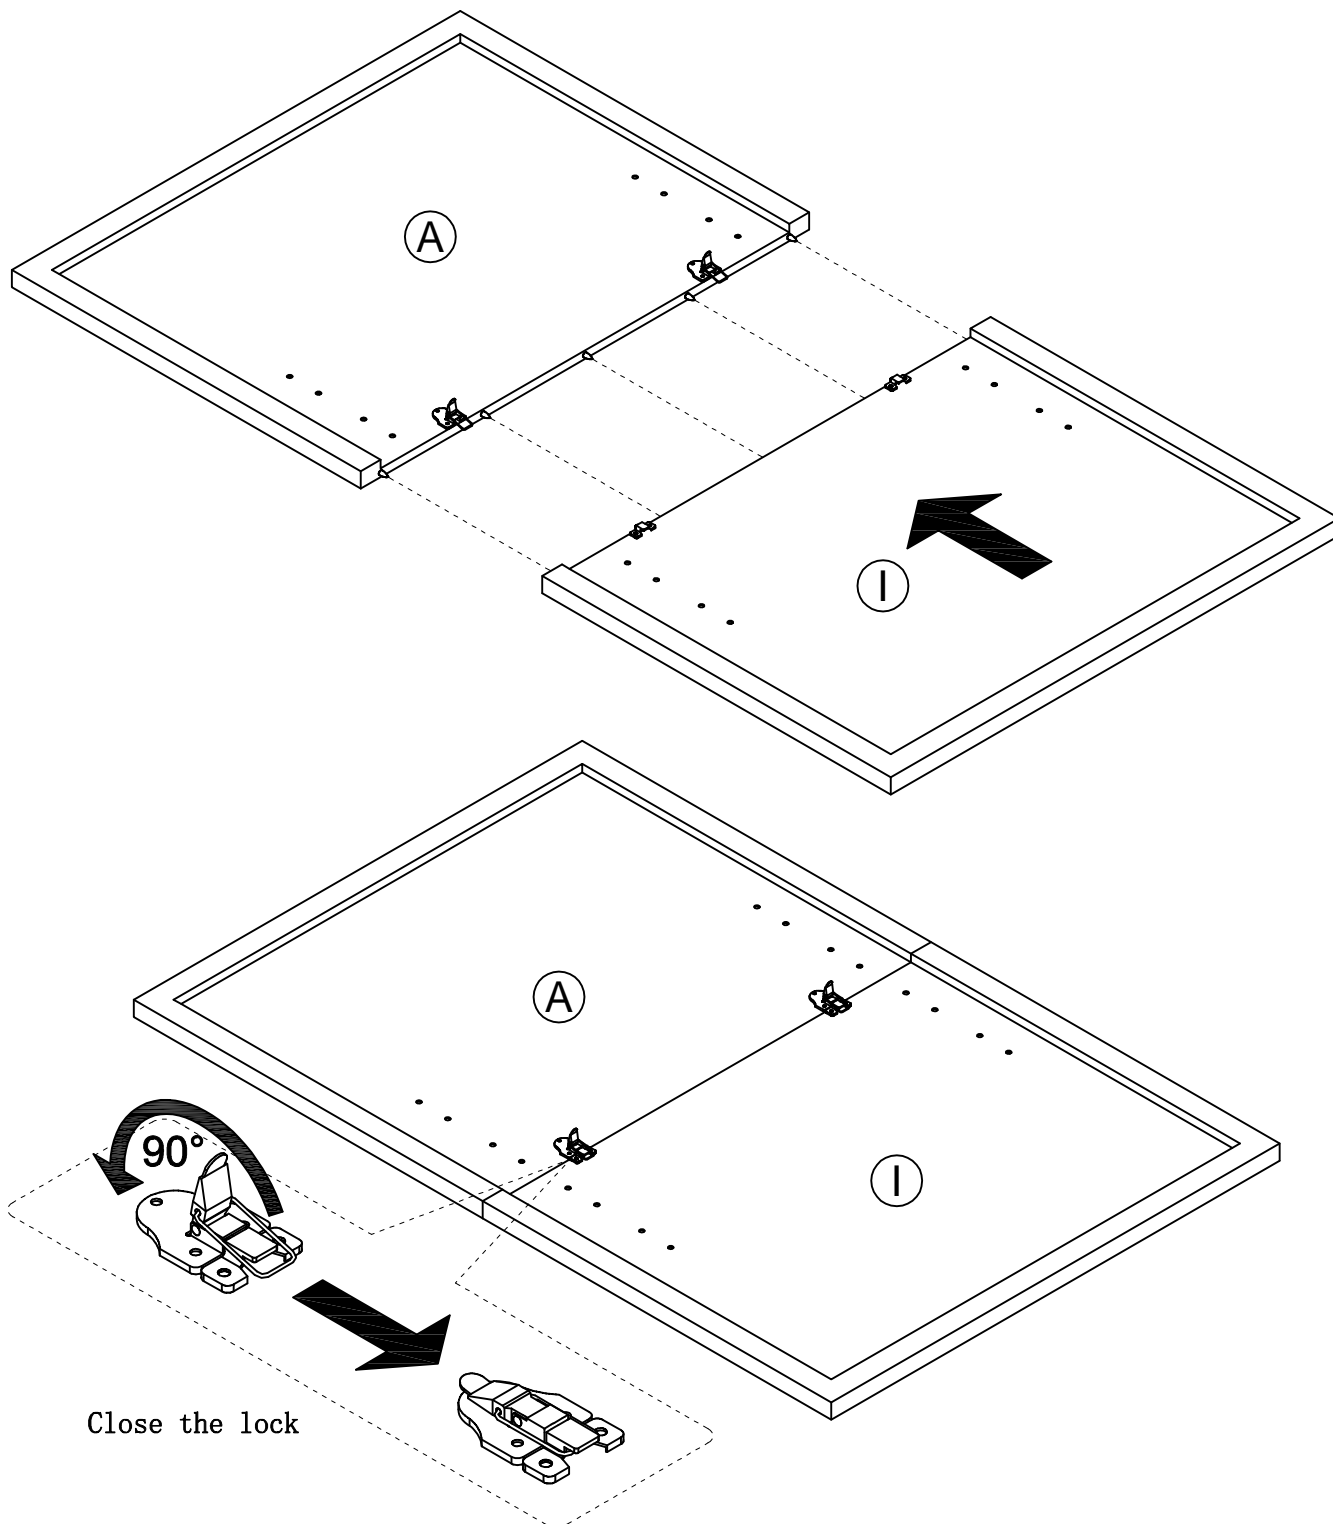

STEP10

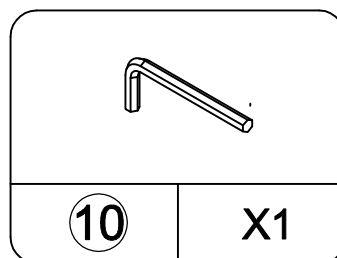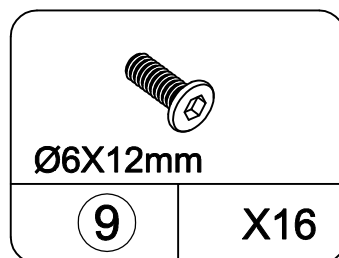

1. Install the first screw(1), but do not totally tighten it;
2. Slide the sliders to reveal the second hole, install the second screw (2) ;
3. Install screws (3) and (4) in the same way;
4. Install the rest screws, and tighten all of them;
5. Open the lock.

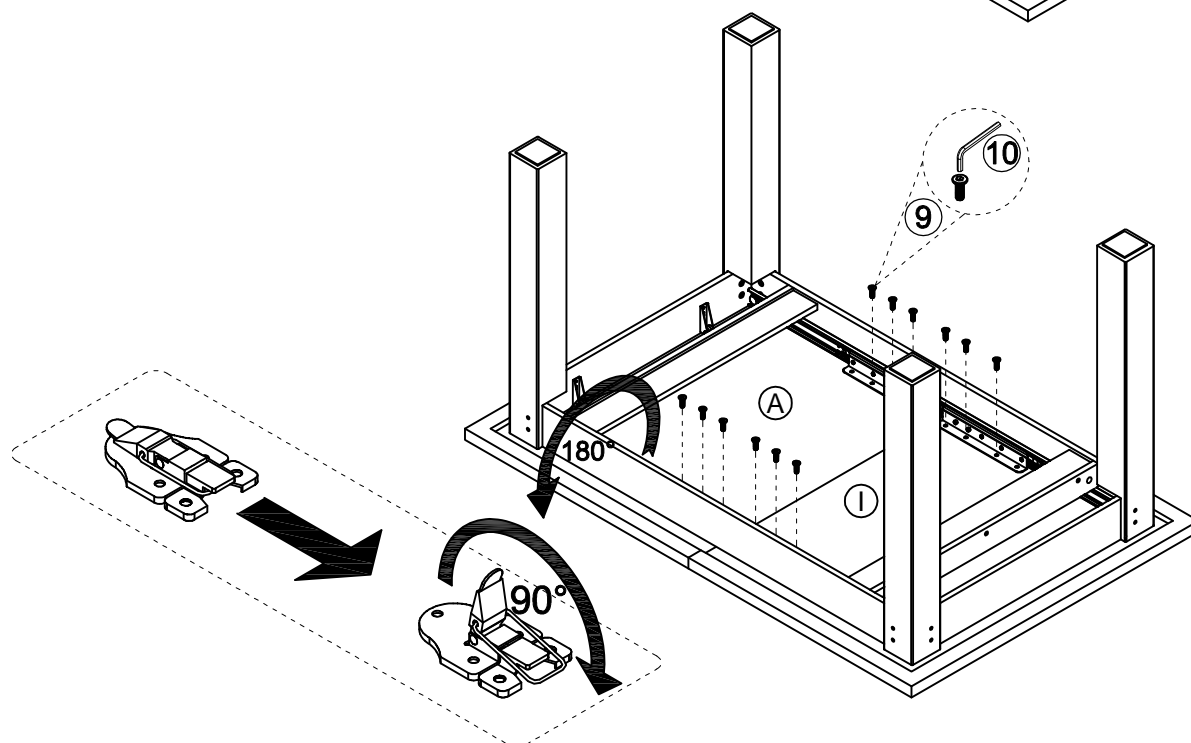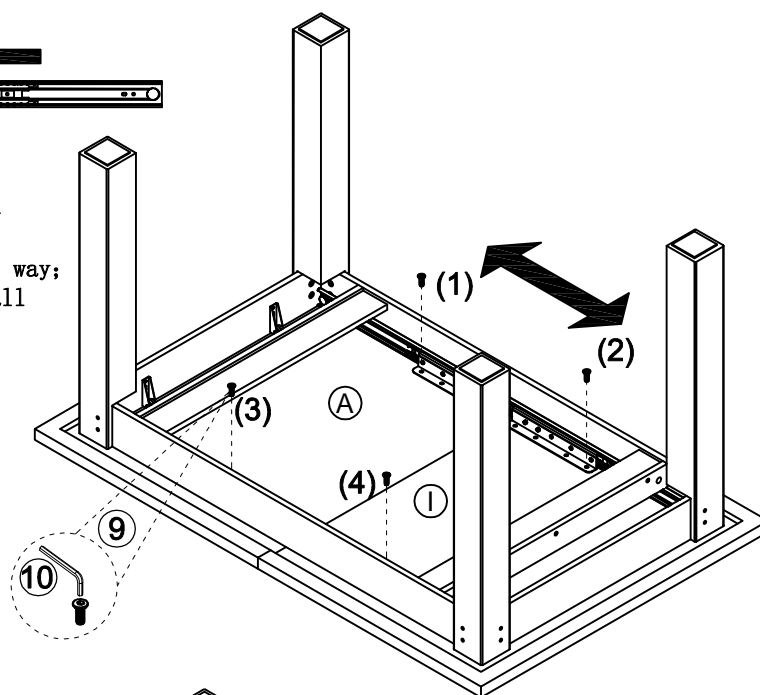

STEP11

