


AWESOME!




DAYBED FRAME SET-UP INSTRUCTIONS




(1) plywood frame

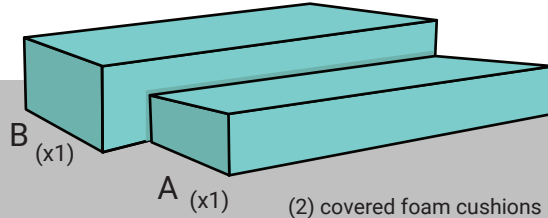


(2) covered foam cushions

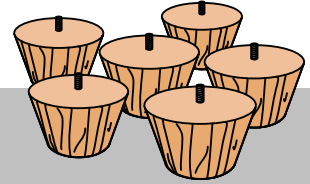


(6) maple feet

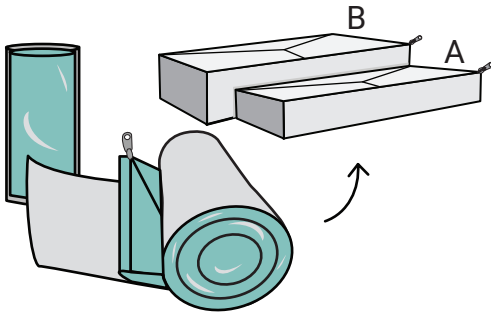


Step 1 Unroll plastic film to release foam cushions.

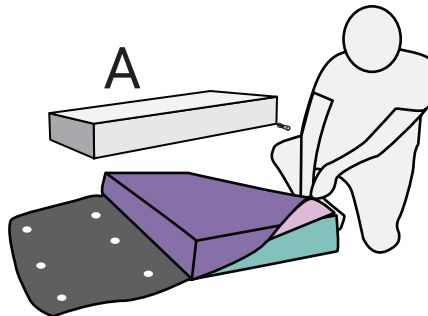


Step 2 Dress (A) foam in cover with holes. Place foam zipper facing down. Leave unzipped.

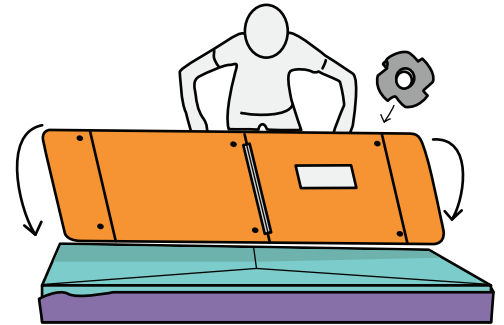


Step 3 Flip and align plywood over the covered foam with the metal t-nuts and warning label facing down.

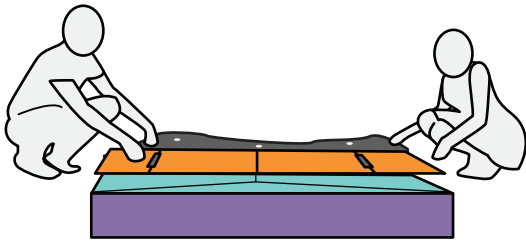


Step 4 Place plywood on top of foam with its two metal hinges facing up.

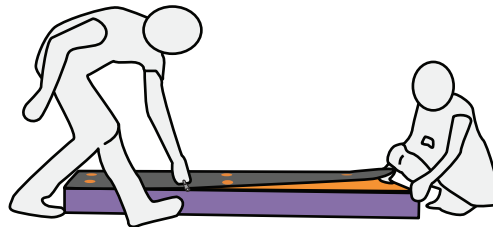


Step 5 Zip cover to close.

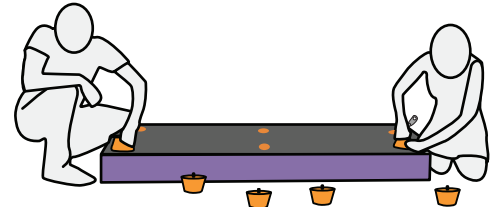


Step 6 Screw feet into holes. Use rubber grips to tighten.

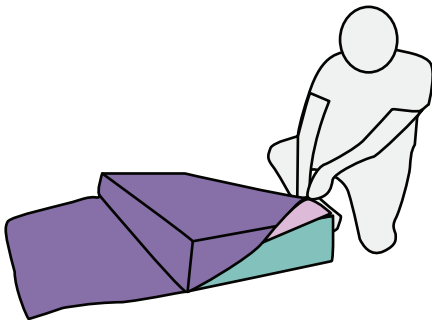

Step 7 Dress taller (B) foam with zipper facing down. Zip to close.

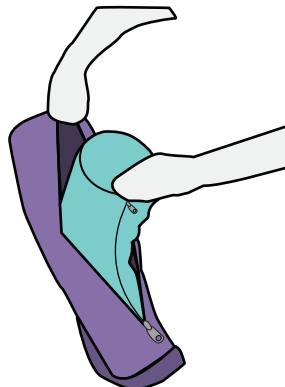

Step 8 Bend foam bolster to fit into the slot of its cover. Zip to close.

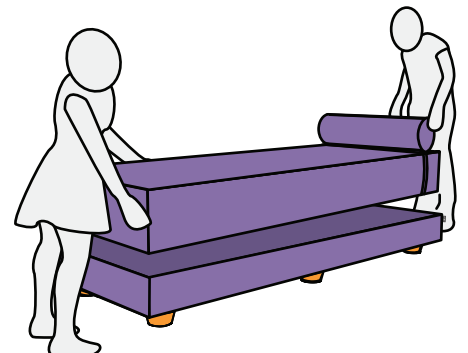

Step 9 Place top cushion on top of bottom cushion with frame.