



ASSEMBLY INSTRUCTIONS

TWIN FLOOR BED WITH DOOR





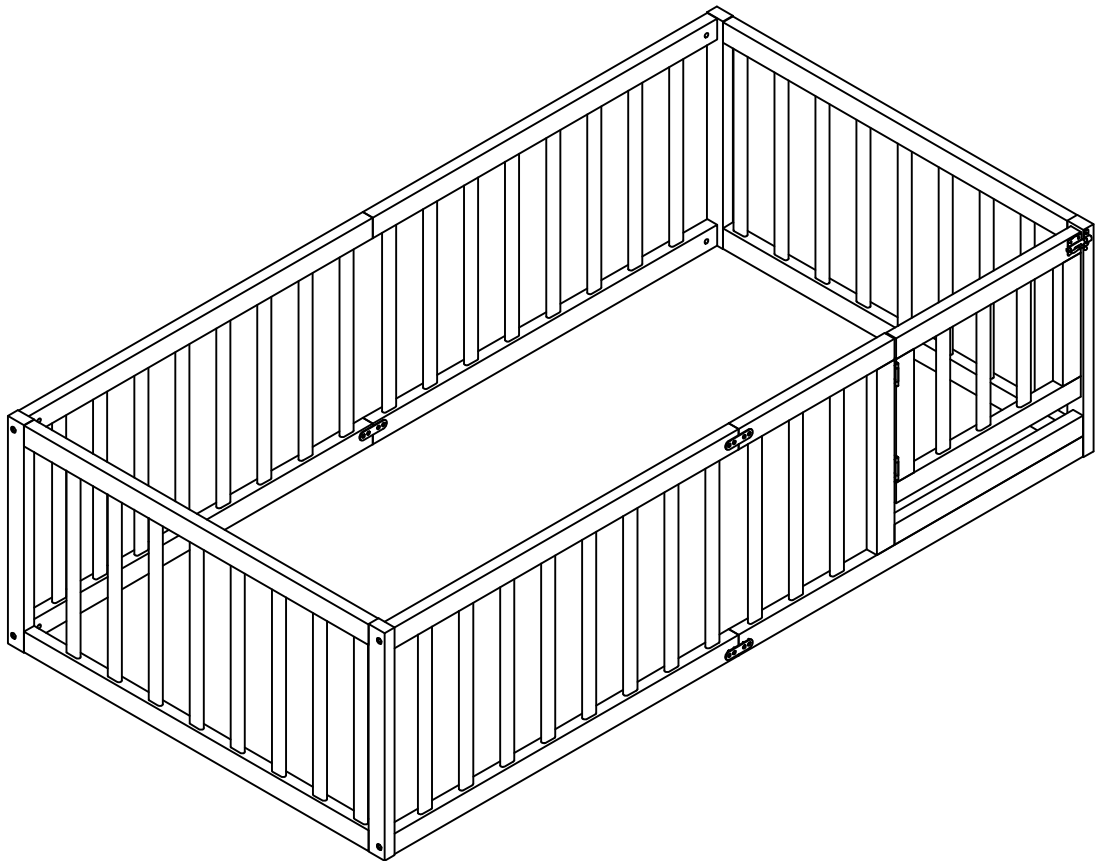


DN33756








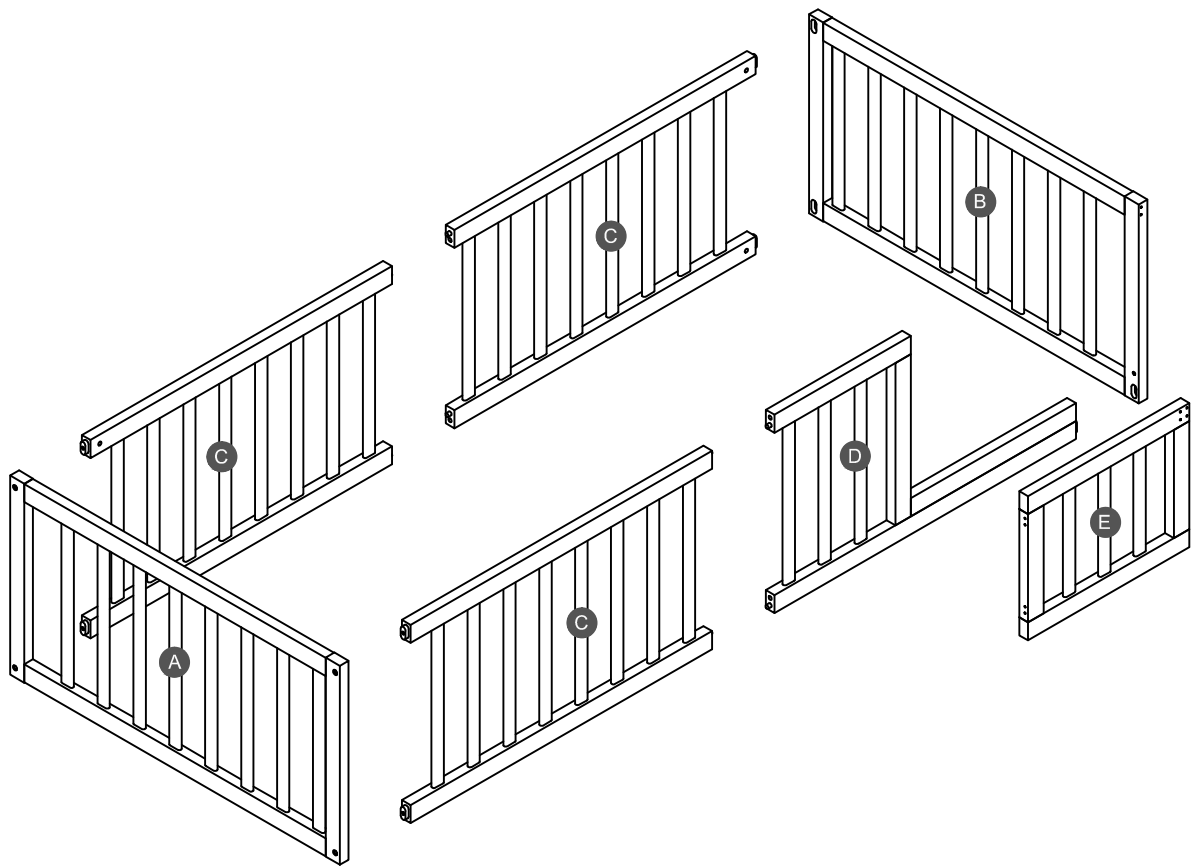Detail View

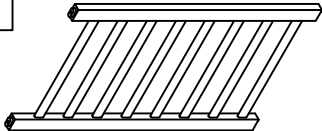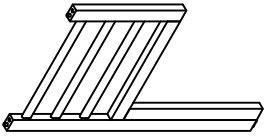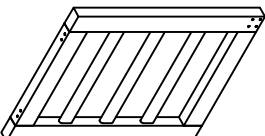


Part List

A  Guard rail (Left) - 1pc	B  Guard rail (Right) - 1pc	C  Guard rail (Front/Back) - 3pcs
D  Guard rail (Front) - 1pc	E  Door - 1pc	

Hardware List


1  (Ø12)1/4"*70mm Hex-Head bolts (8pcs)	2  1/4"*15 (9.5mm) Horizontal-Hole bolts(8pcs)	3  Metal bracket (8pcs)
4  55*24*6mm(135°) Hinges (2pcs)	5  60*40*10mm Lock (1pc)	6  Ø3.5*15mm Wood screws (46pcs)
7  (1/4")4.5*58mm Allen key (1pc)		

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)





PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

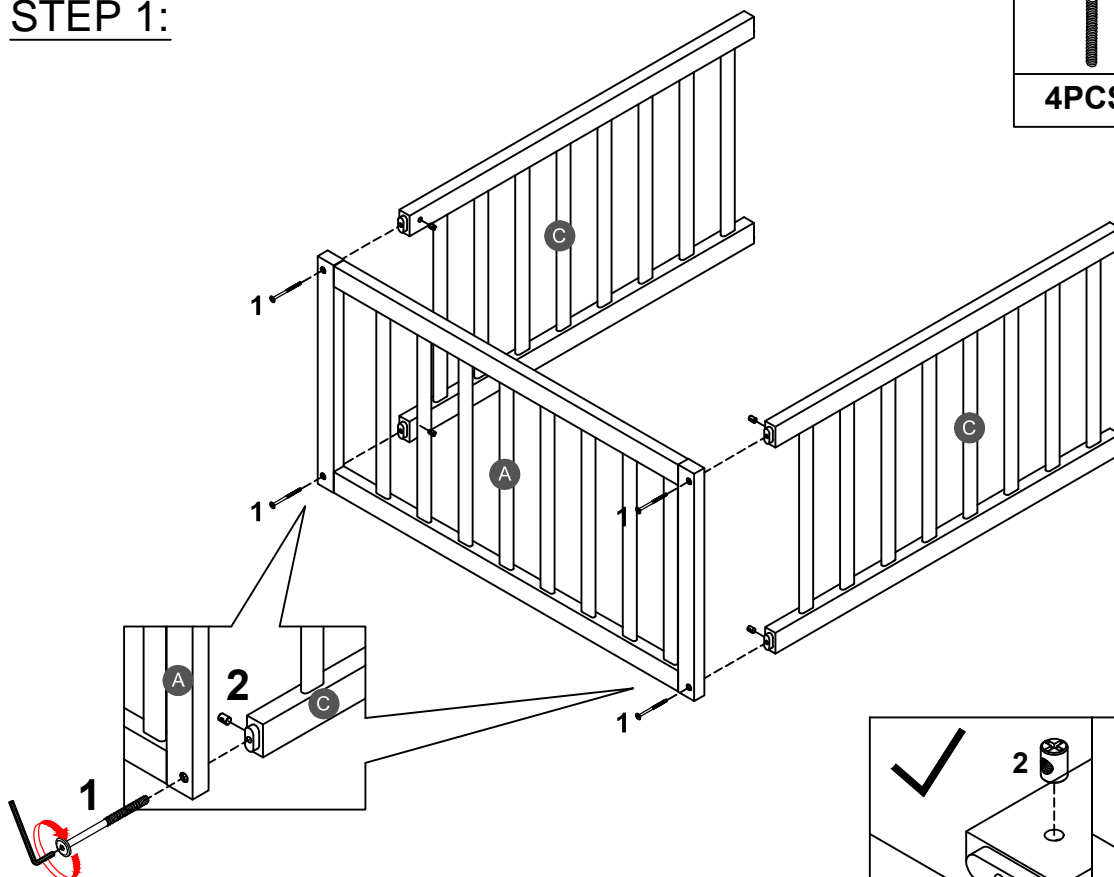
STEP 1:





Note: Part 2 will face up with the "x" mark on it, otherwise it cannot be tightened


1		2	
4PCS		4PCS	

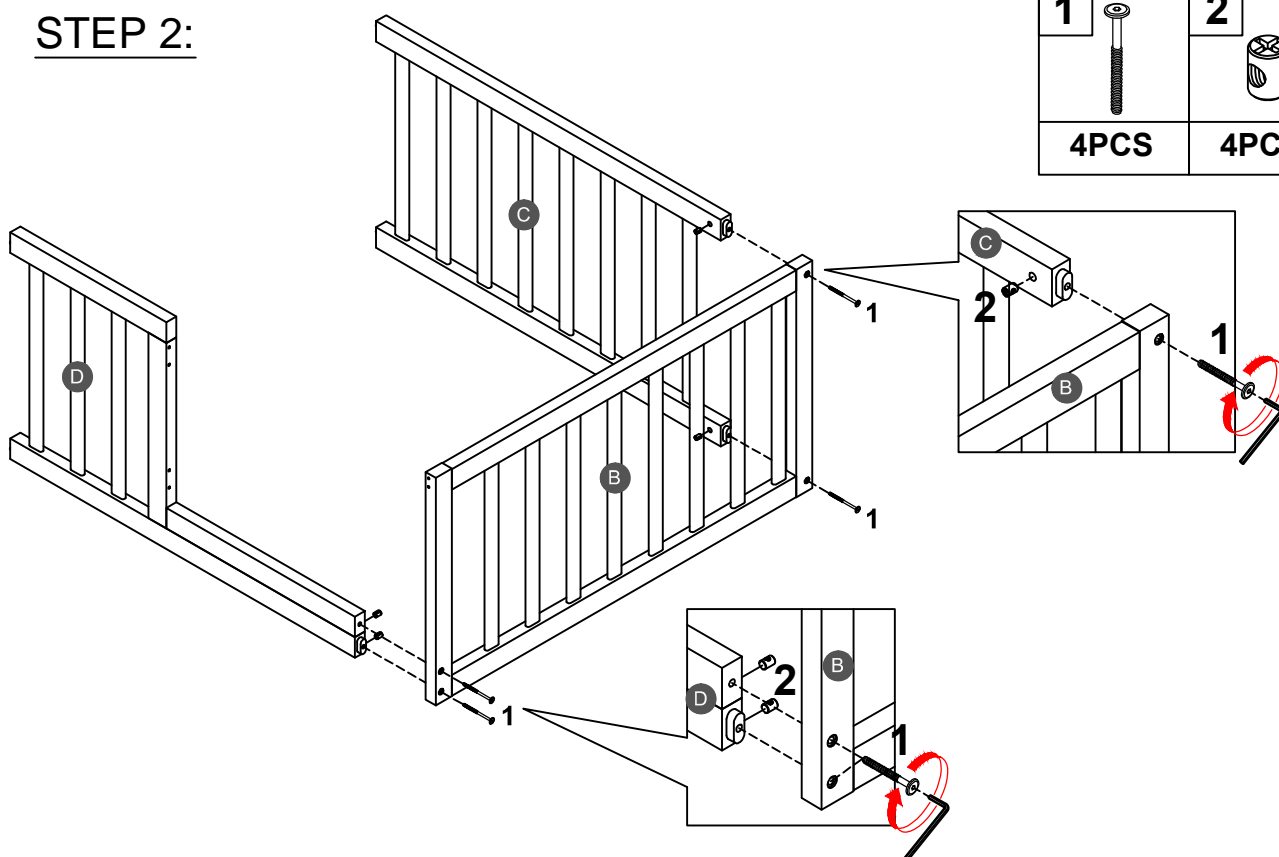STEP 2:




1		2	
4PCS		4PCS	


STEP 3:

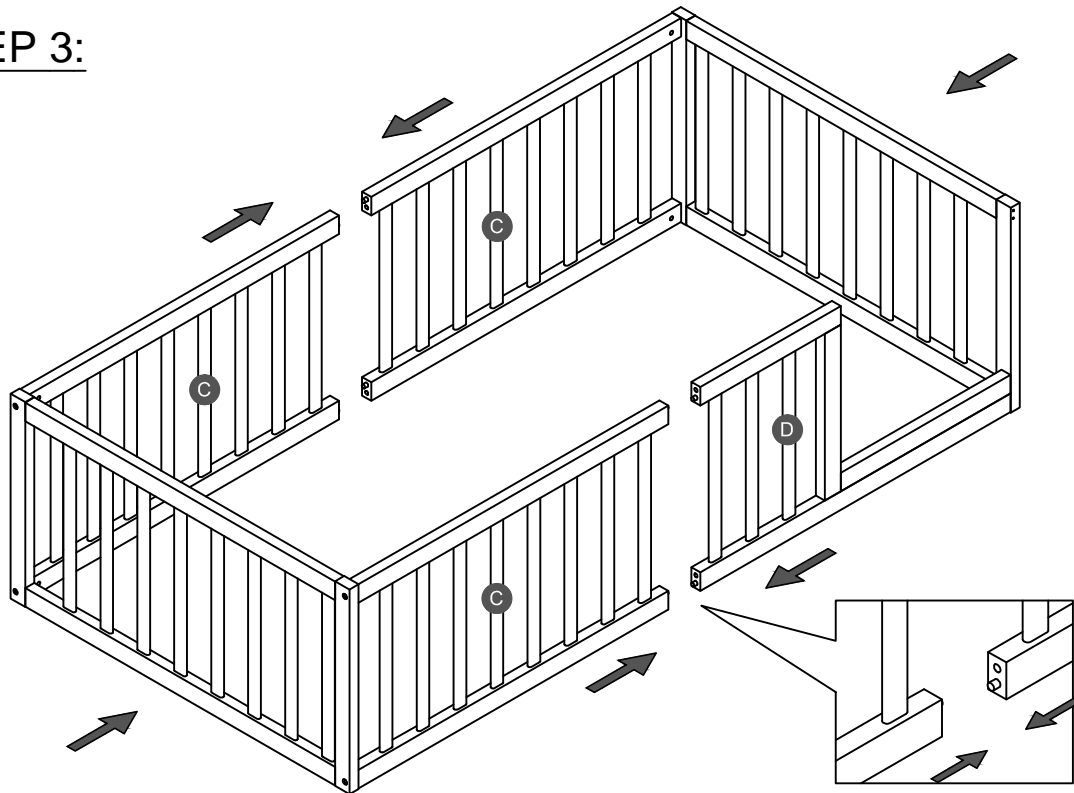

STEP 4:

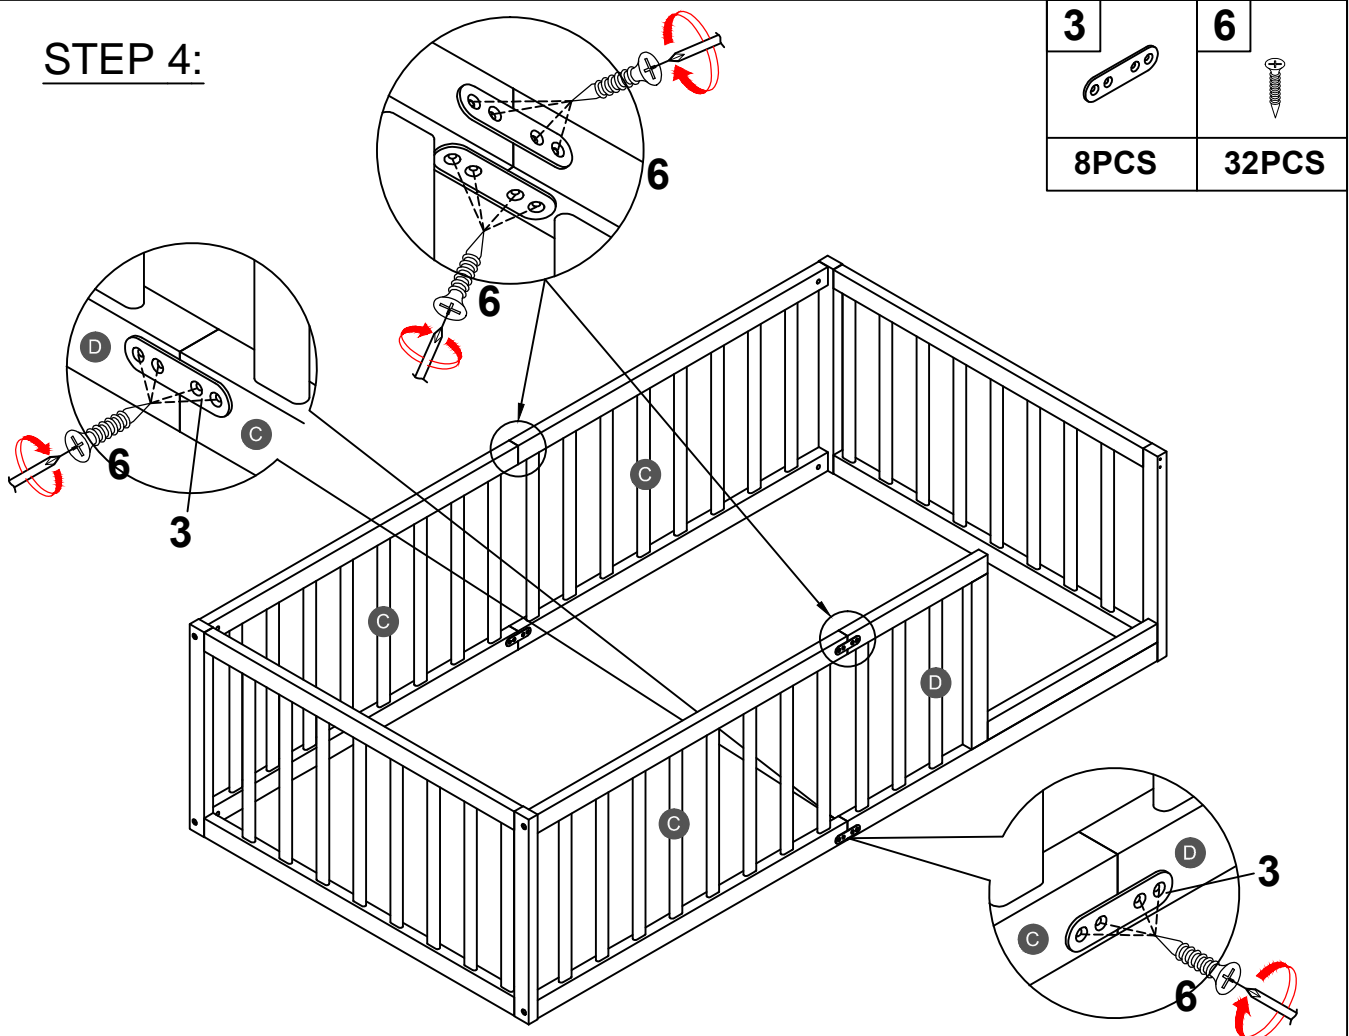


STEP 5:

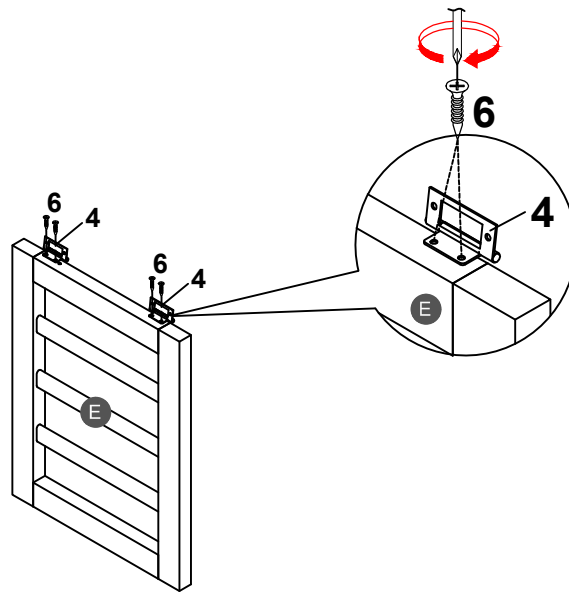



4	6
2PCS	4PCS

STEP 6:

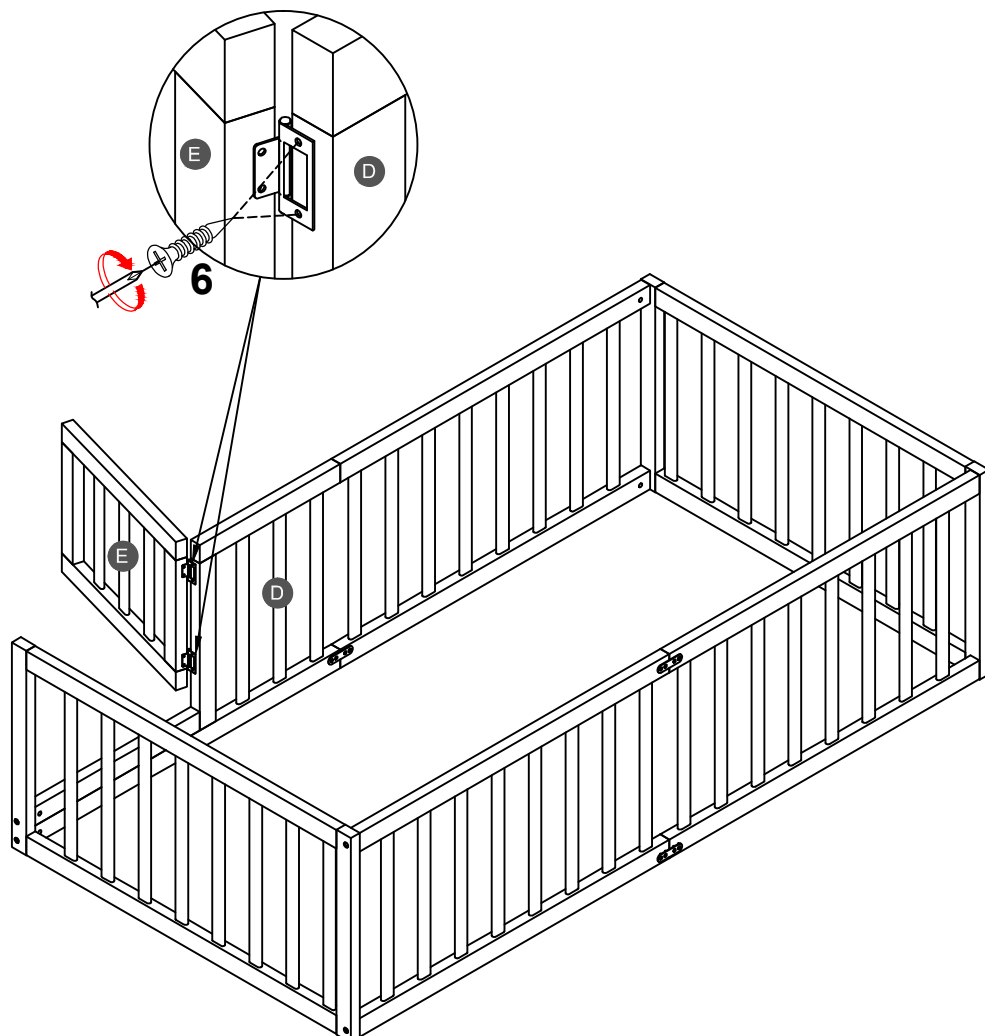

6
4PCS

STEP 7:

5	6
	
1PC	6PCS

