







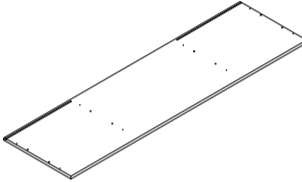


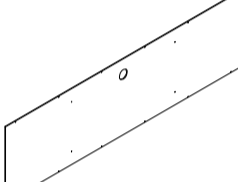
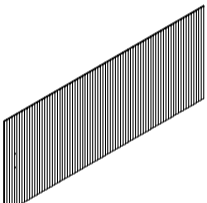
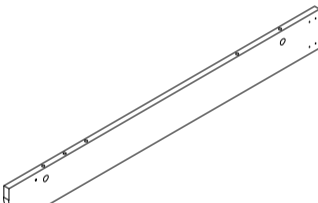
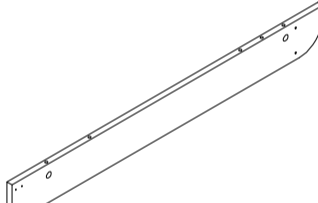
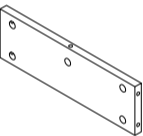
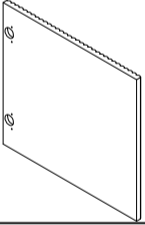
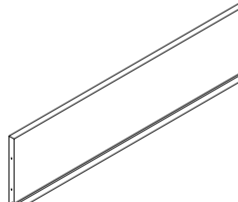
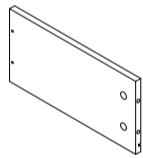
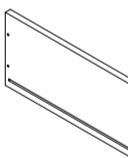
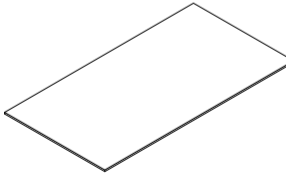
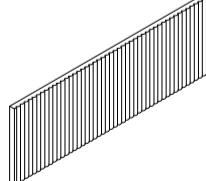






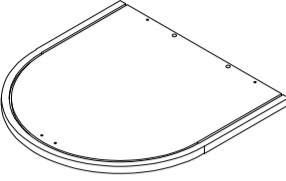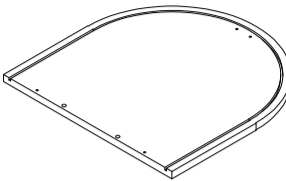




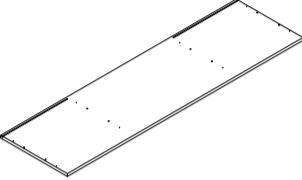




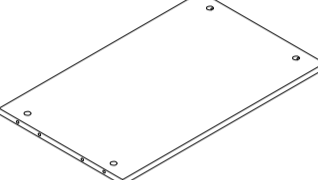



Parts and Operation Elements

			
① 2pcs	② 2pcs	③ 1pc	④ 1pc
			
⑤ 1pc	⑥ 1pc	⑦ 1pc	⑧ 1pc
			
⑨ 1pc	⑩ 2pcs	⑪ 2pcs	⑫ 1pc
			
⑬ 2pcs	⑭ 2pcs	⑮ 2pcs	⑯ 2pcs
			
⑰ 2pcs	⑱ 1pc	⑲ 1pc	⑳ 1pc
			
㉑ 1pc	㉒ 1pc		





Hardware

							
Cam bolt		Cam Lock		ø6x30mm Wood dowel		4x40mm screw	
A	46pcs+2pcs	B	46pcs+2pcs	C	40pcs+2pcs	D	12pcs+1pcs
							
4x30mm screw		3x12mm screw					
E	4pcs	F	8pcs	G	8pcs	H	8pcs
							
4x14mm screw							
J	4pcs	K	2pcs	L	4pcs	M	4pcs
							
3.5x12mm screw		2.5x14mm screw		300mm		300mm	
N	32pcs+2pcs	O	16pcs+1pcs	CR	1pc	CL	1pc
							
300mm		300mm					
DR	1pc	DL	1pc				










SPARE BAG










THE SPARE BAG INCLUDED EXTRA HARDWARE FOR DAMAGED OR MISSING SMALL HARDWARE WHILE YOU ARE ASSEMBLING

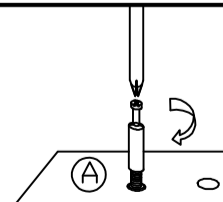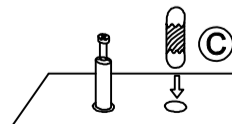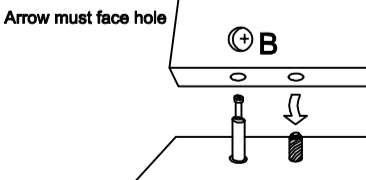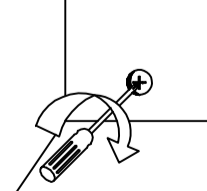							
Gently screw cam bolt into the threaded anchor.		Insert the wood dowel halfway into hole.		Arrow must face hole		Screw the camlock firmly into locked position	




1

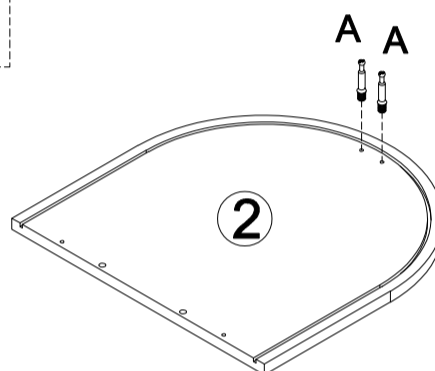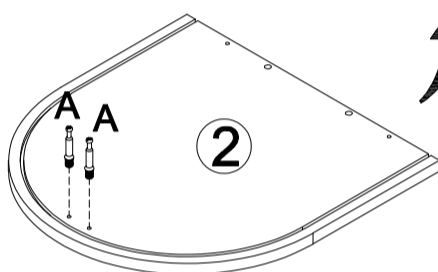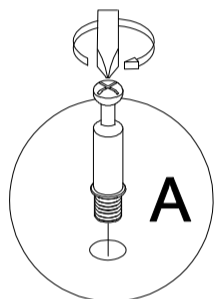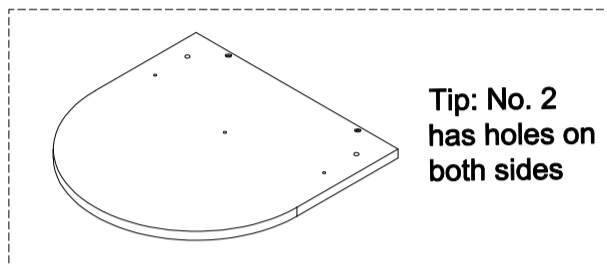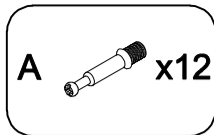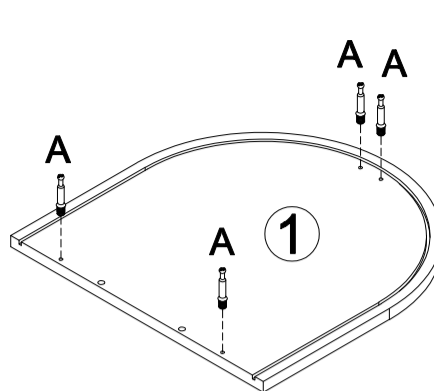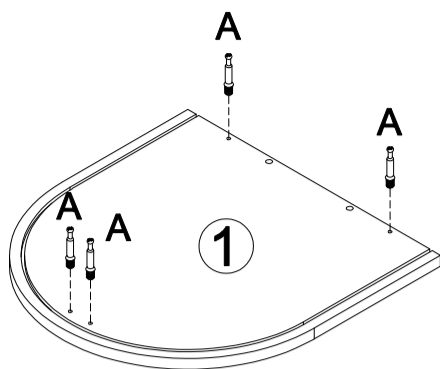





2

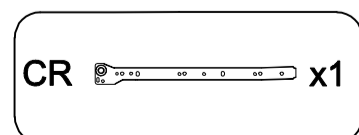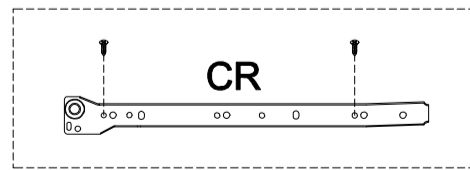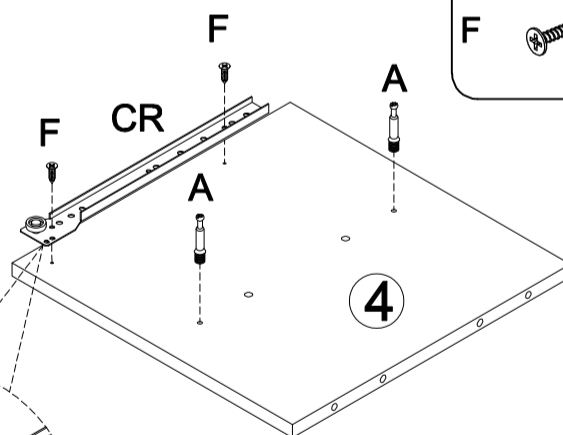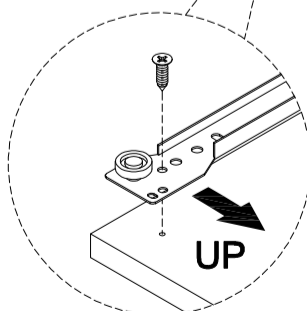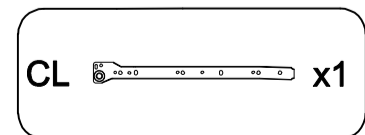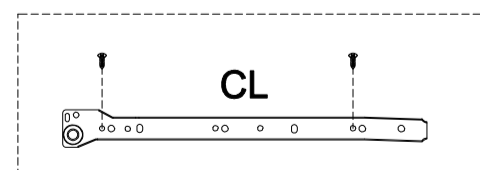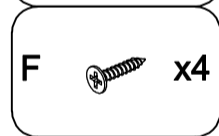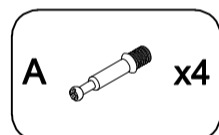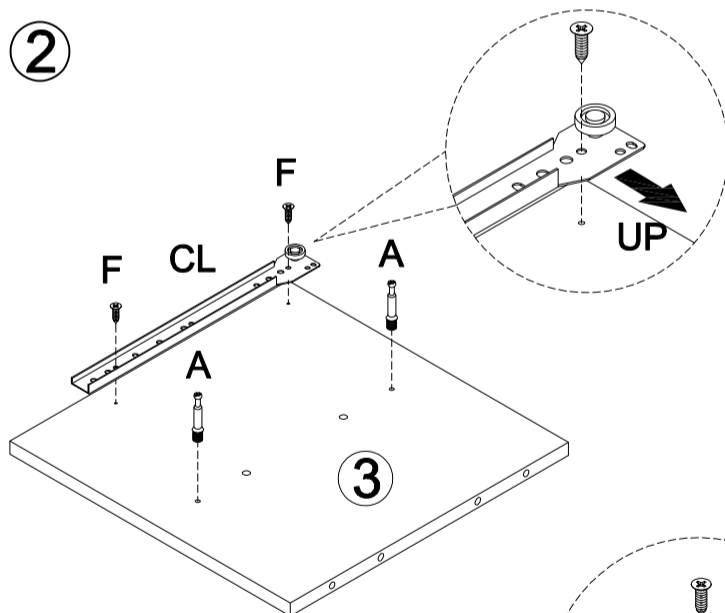


3

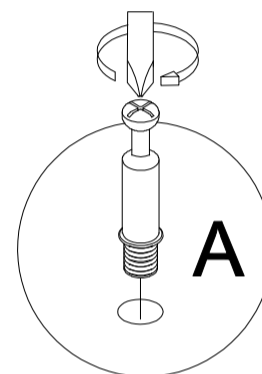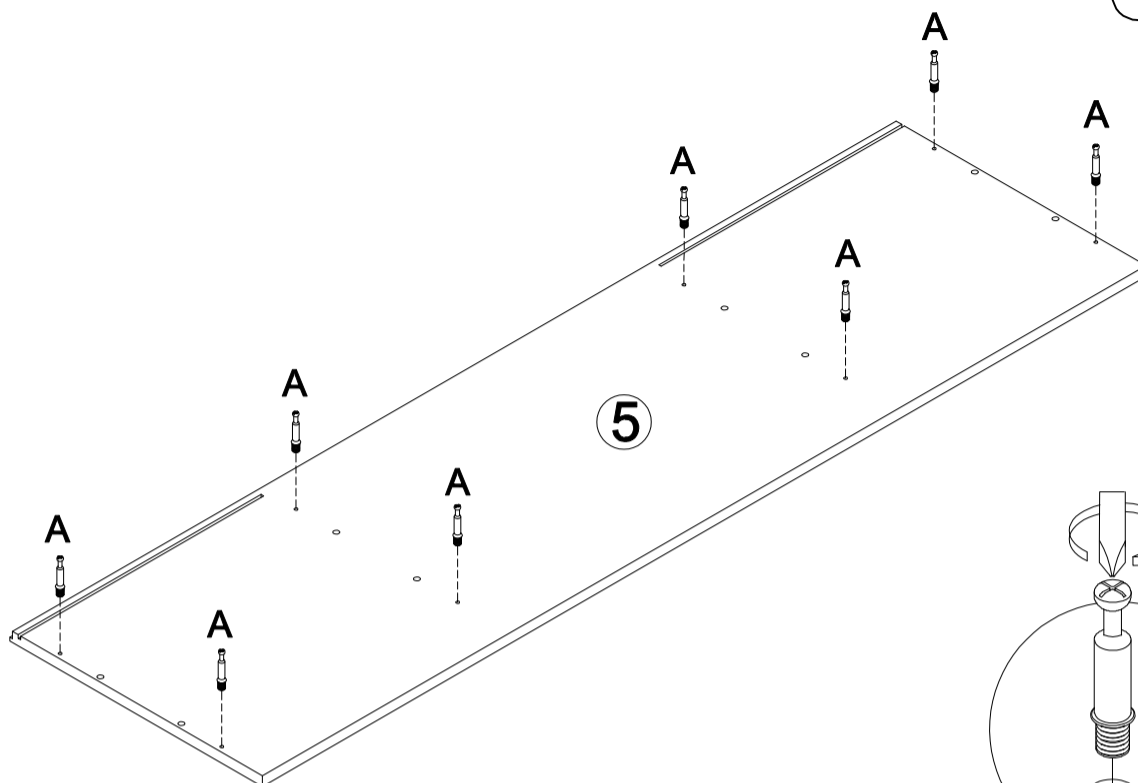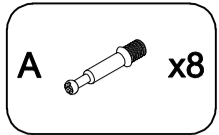


4

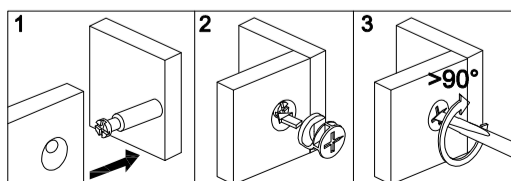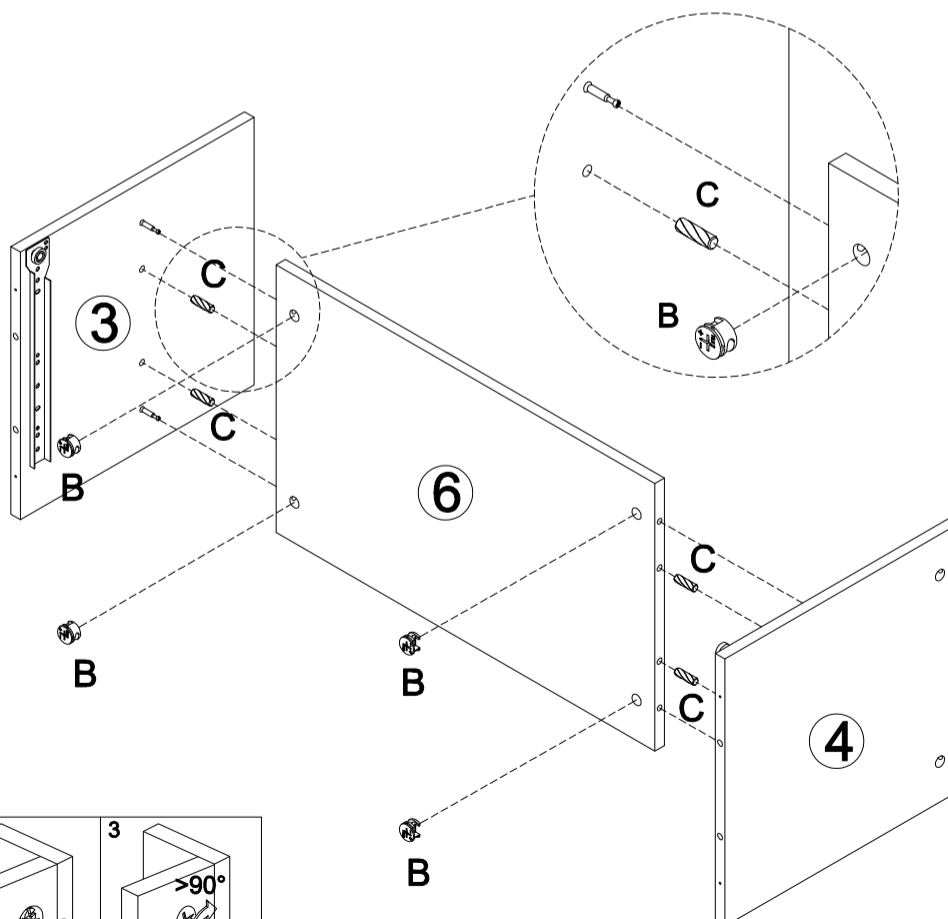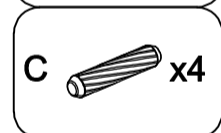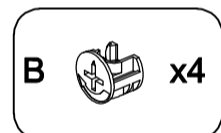


5

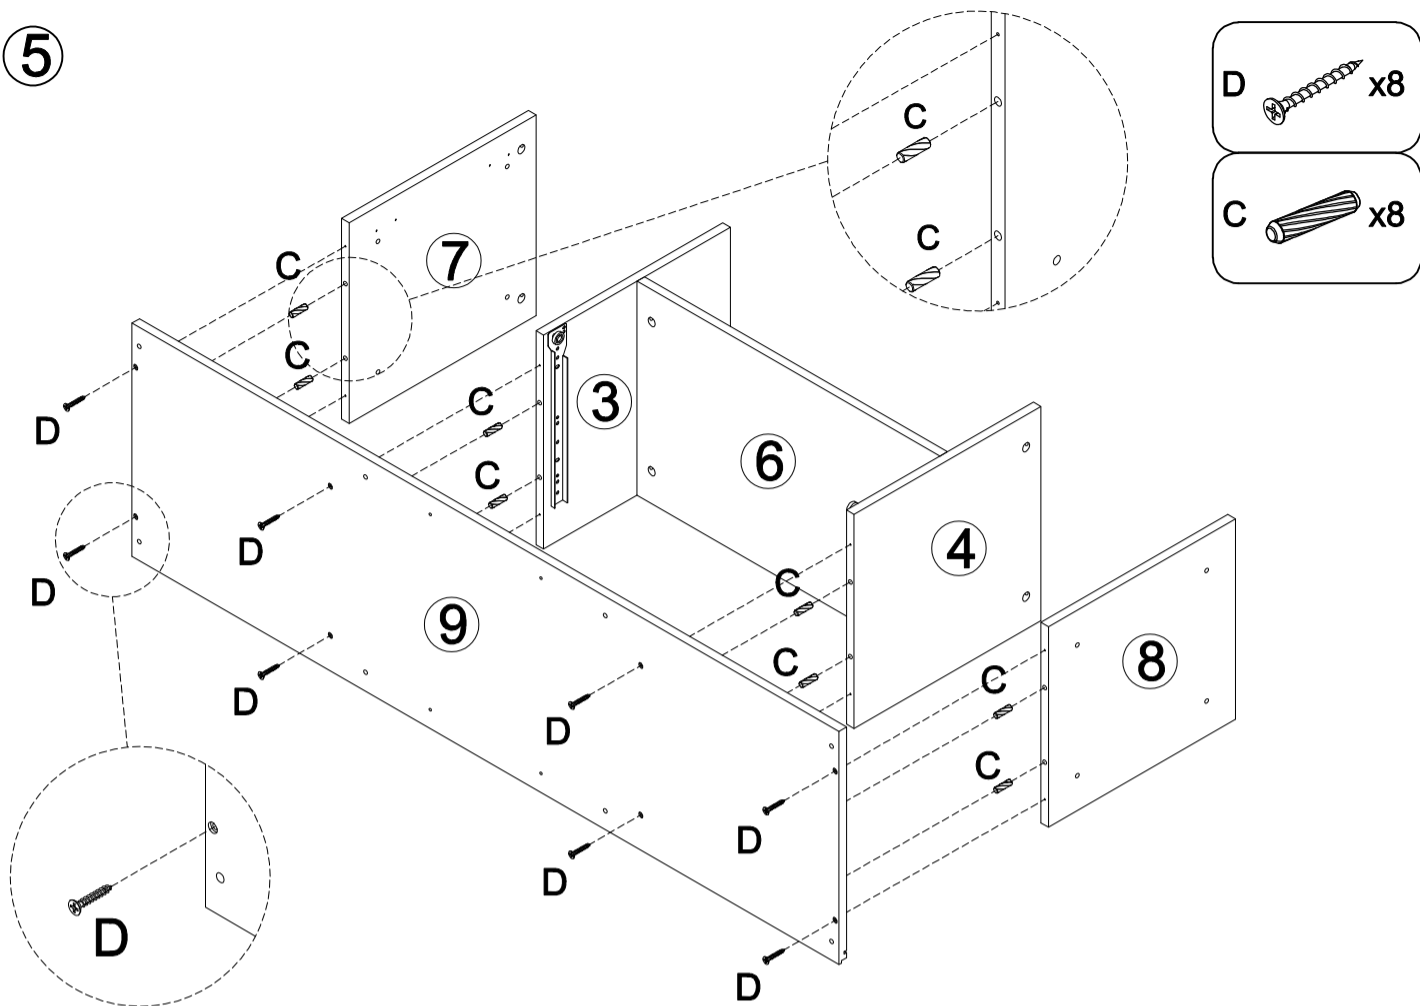


6

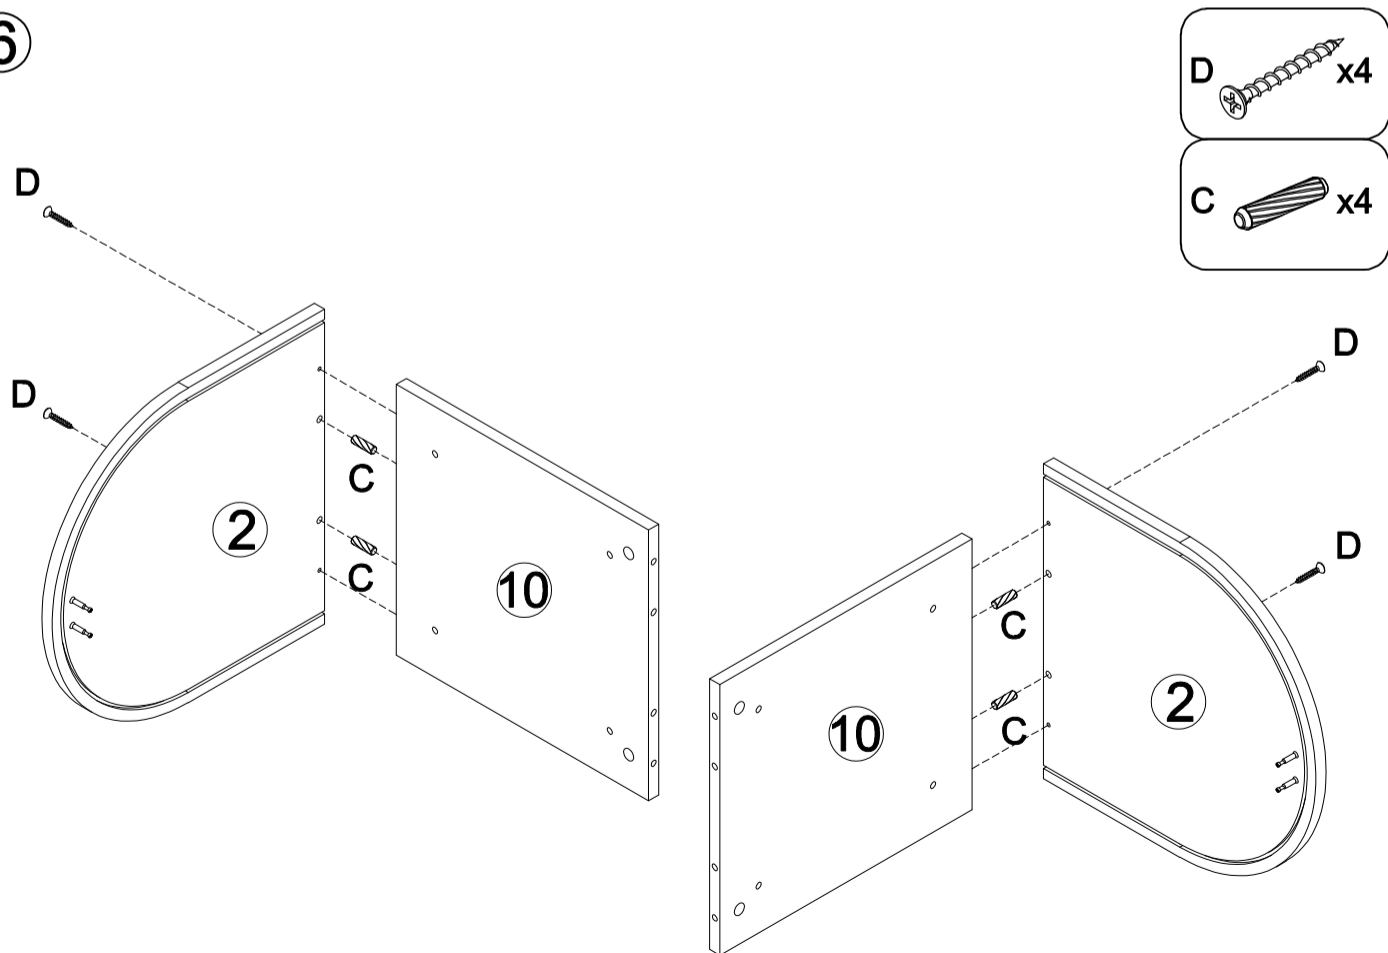



7

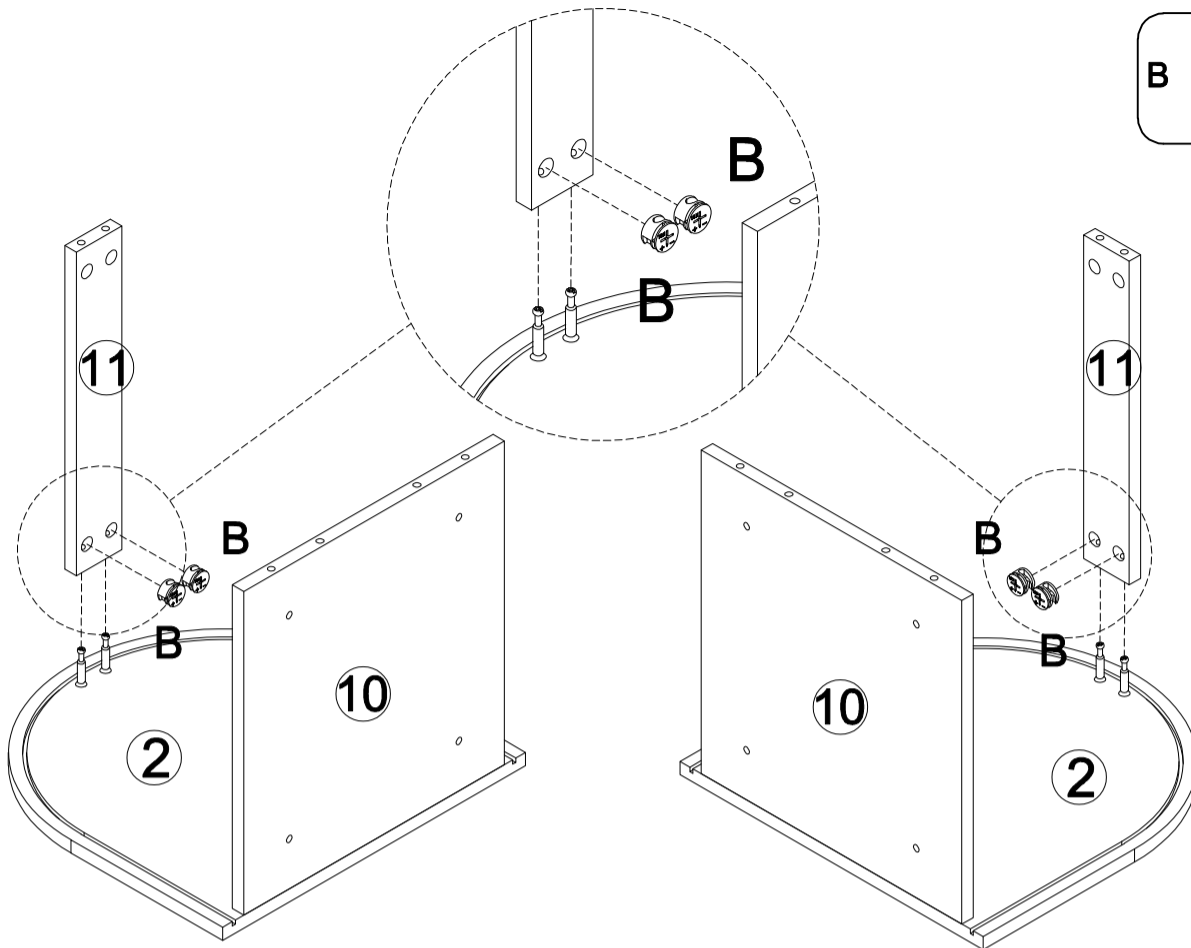
B  x4




8

G  x8


H  x8

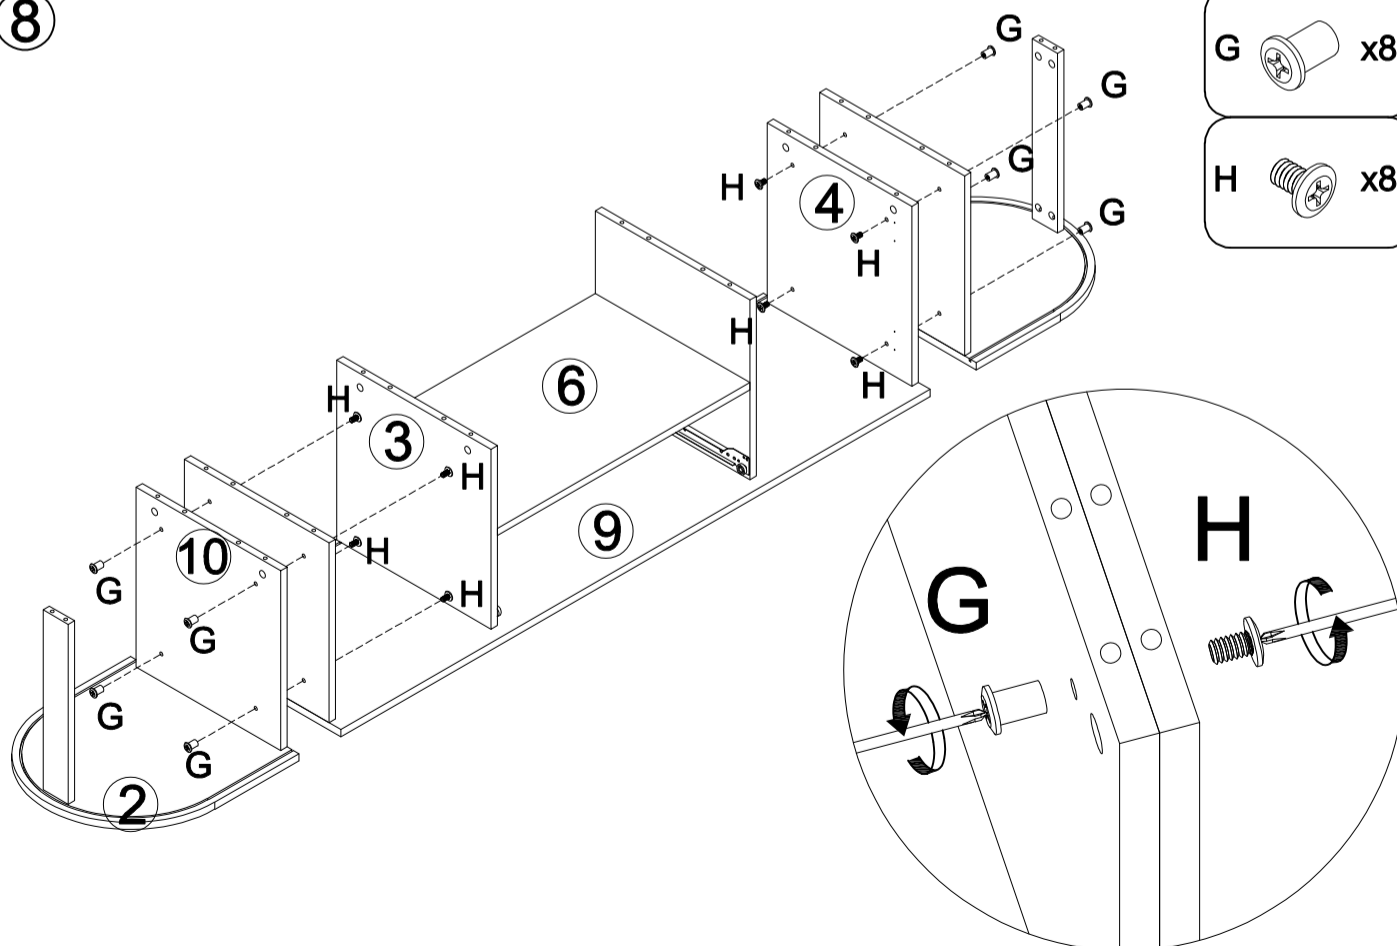


9

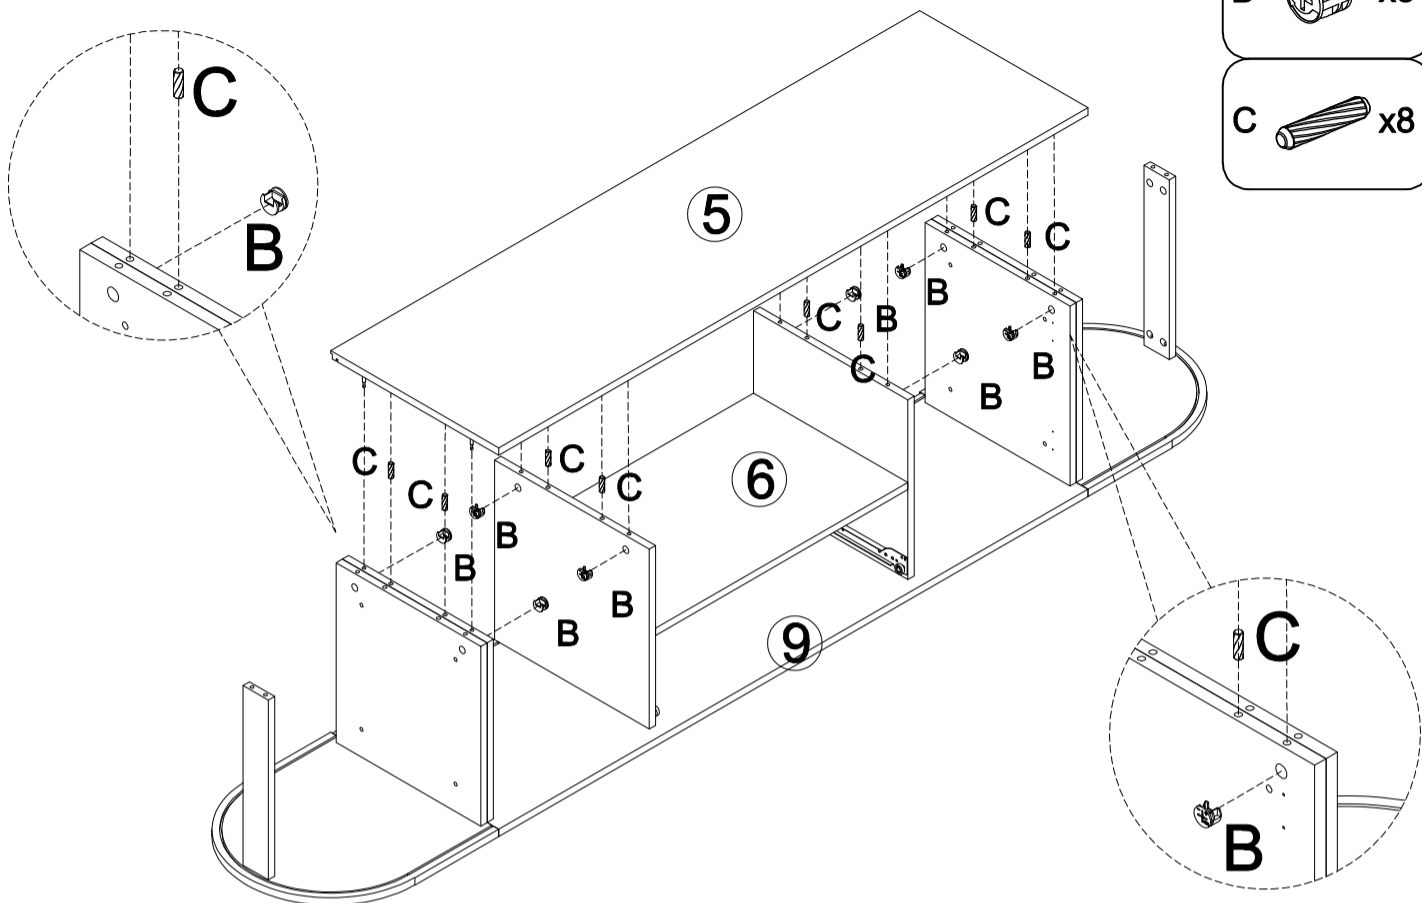


10

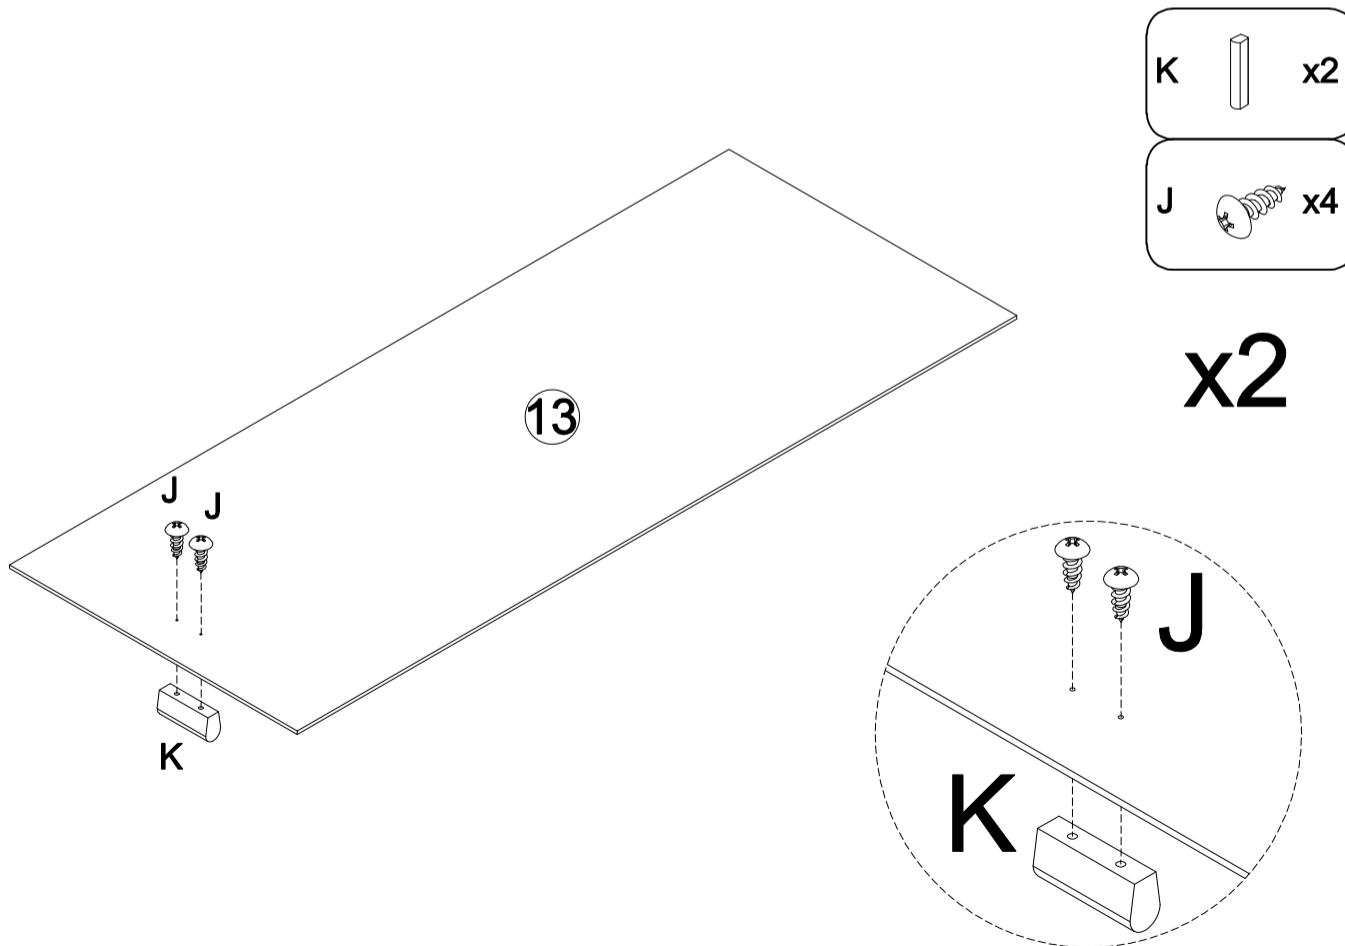


11

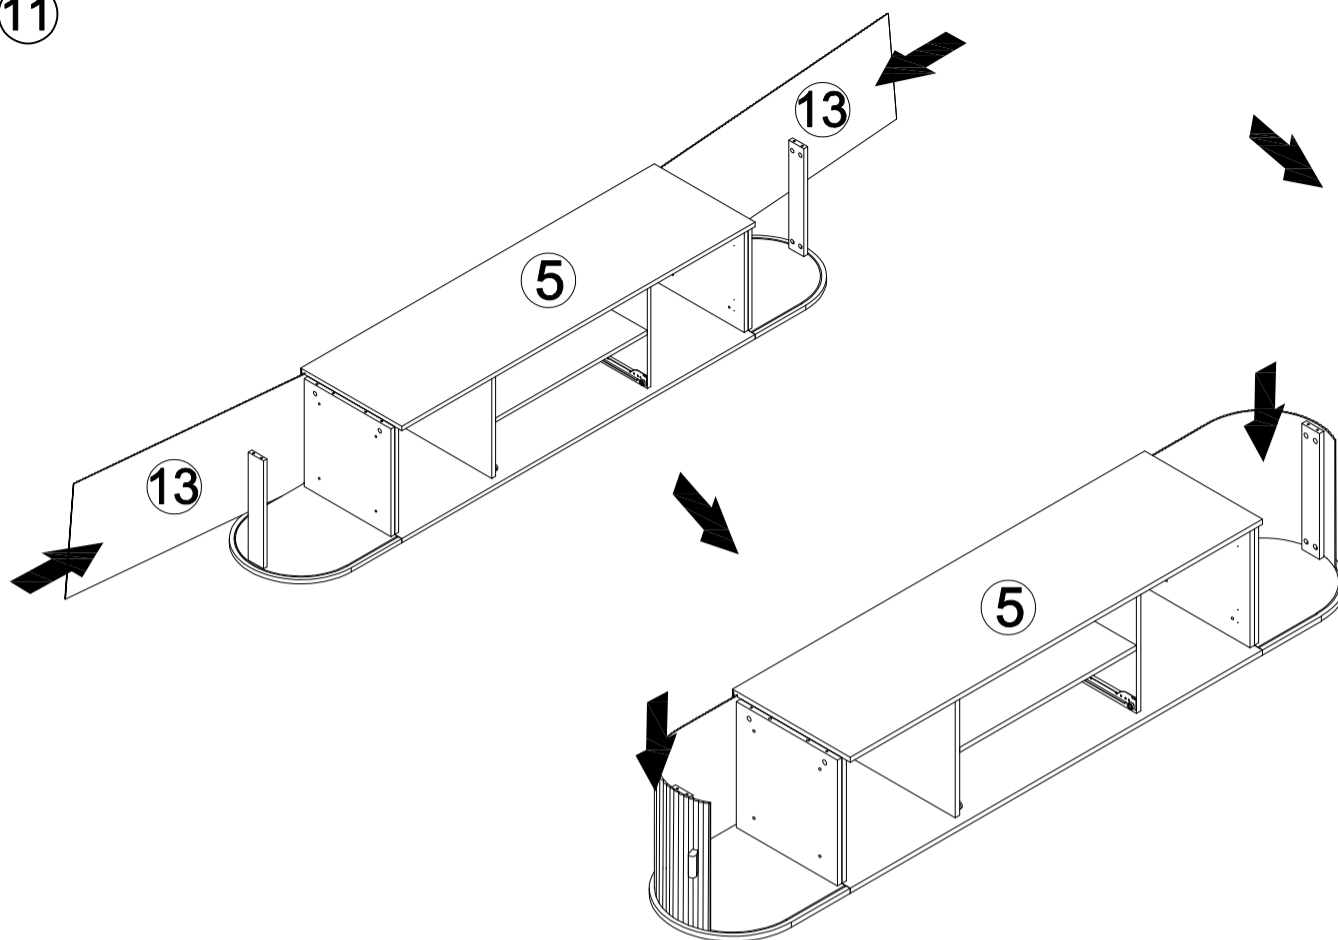

12

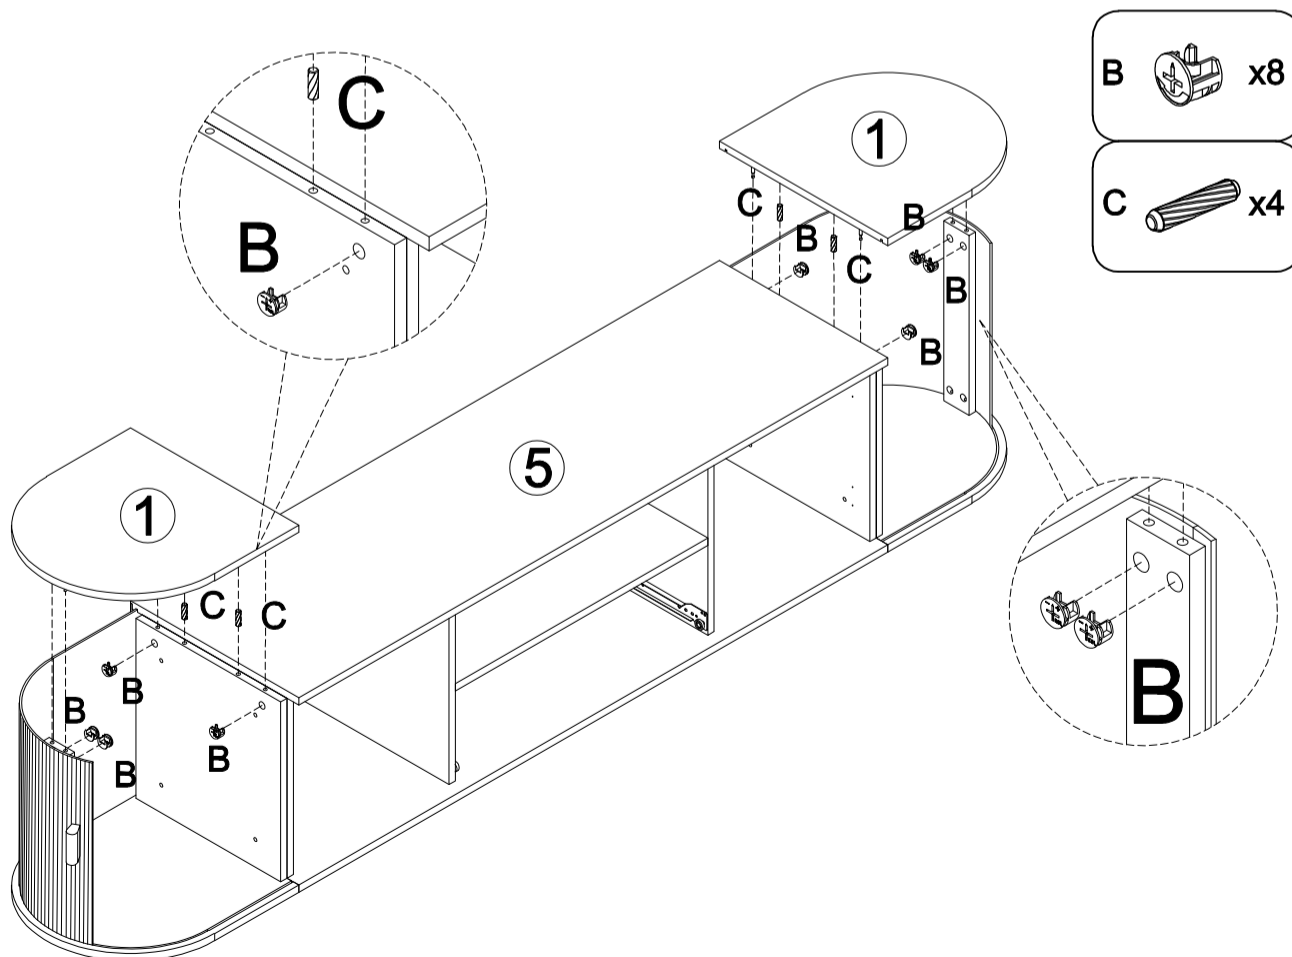


13

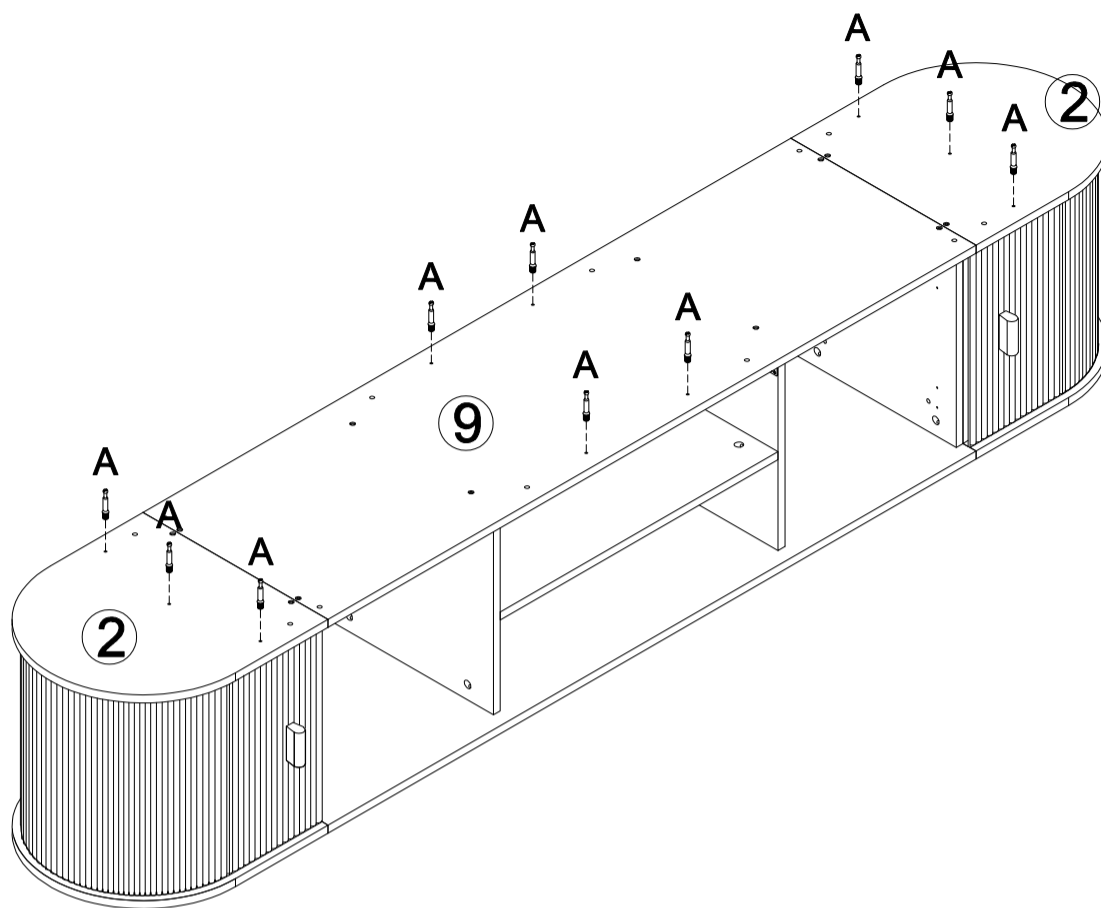



A x10

14



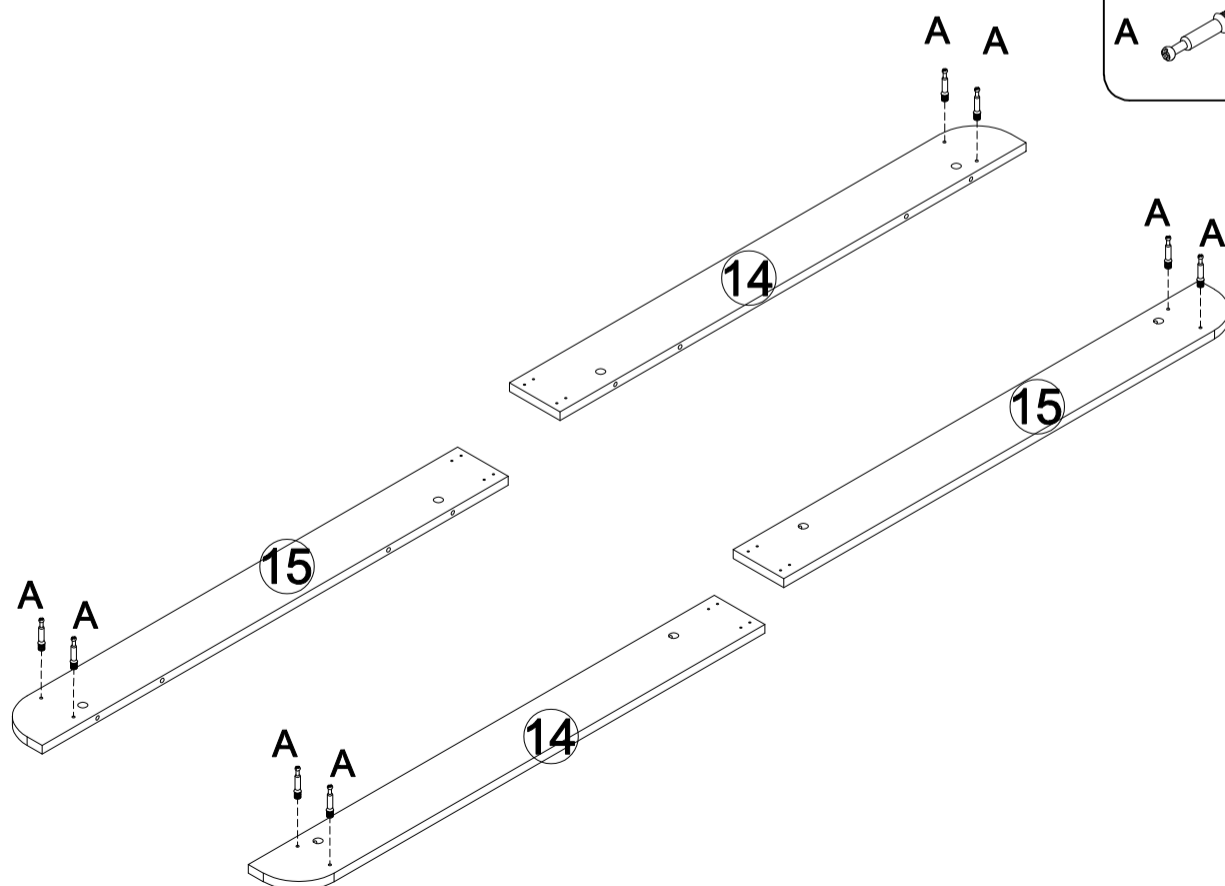


A x8




15

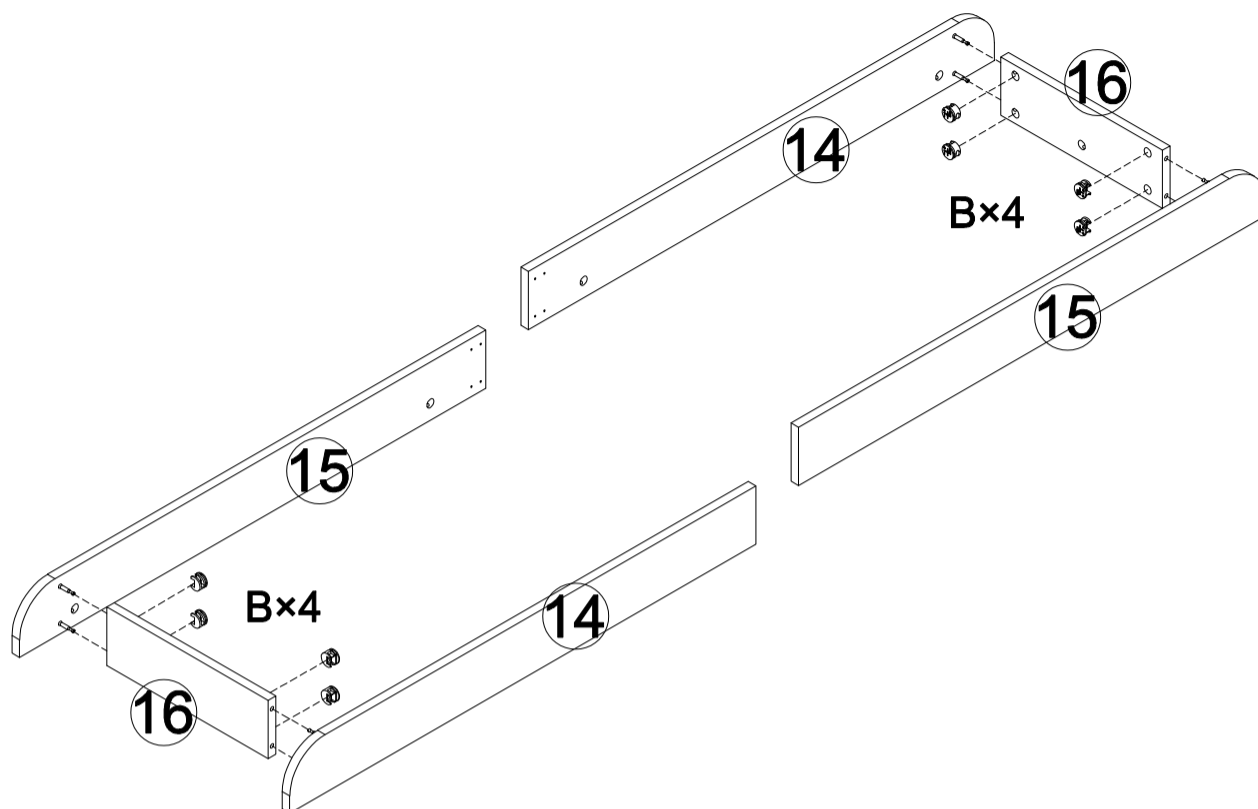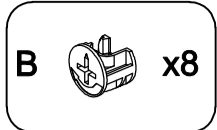



16

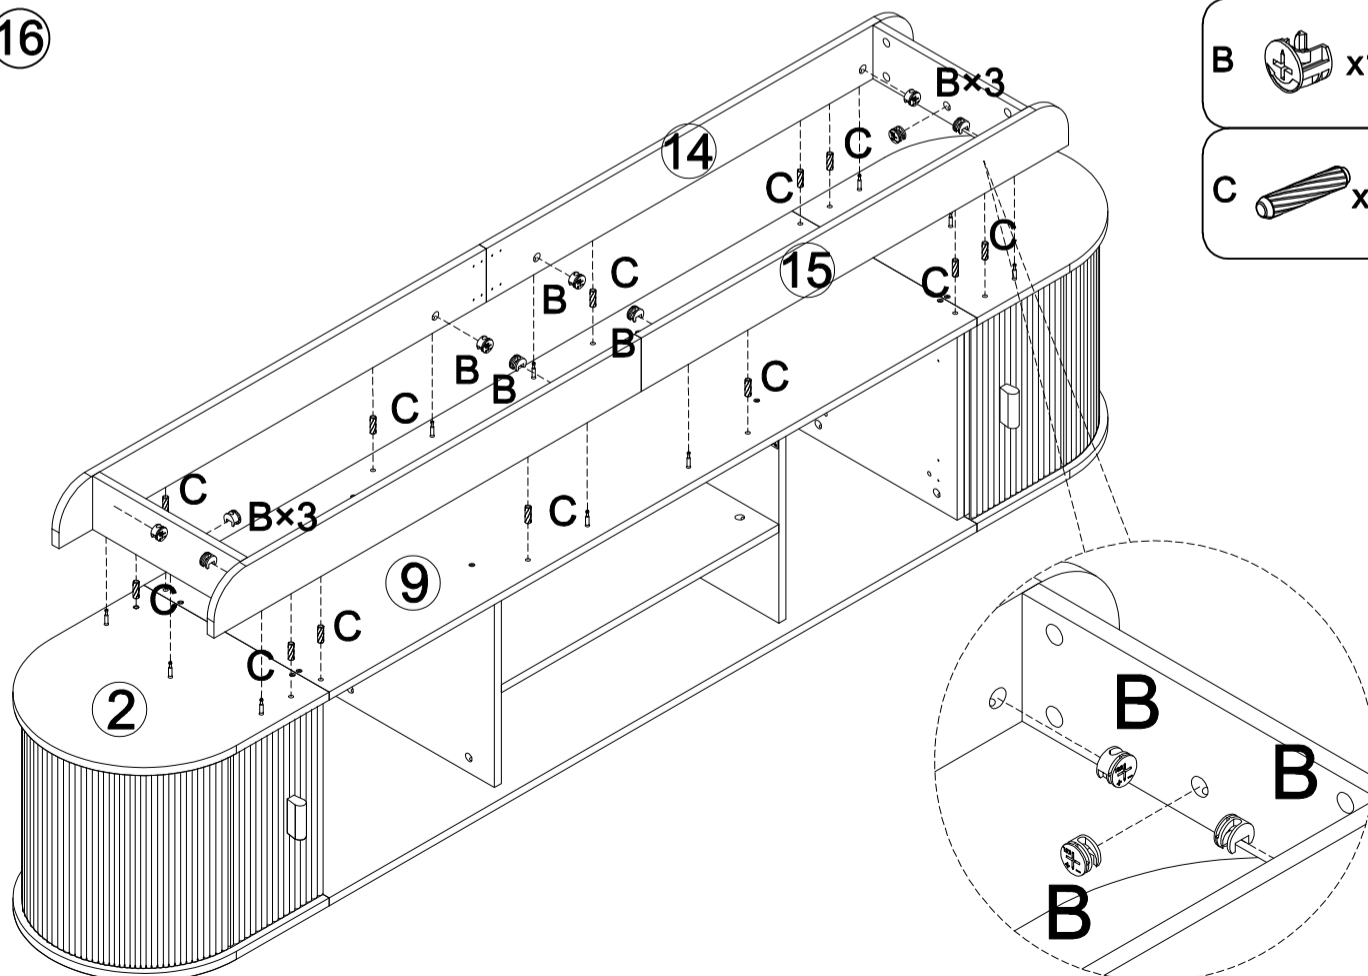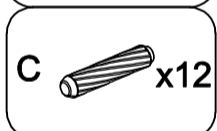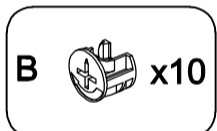




17

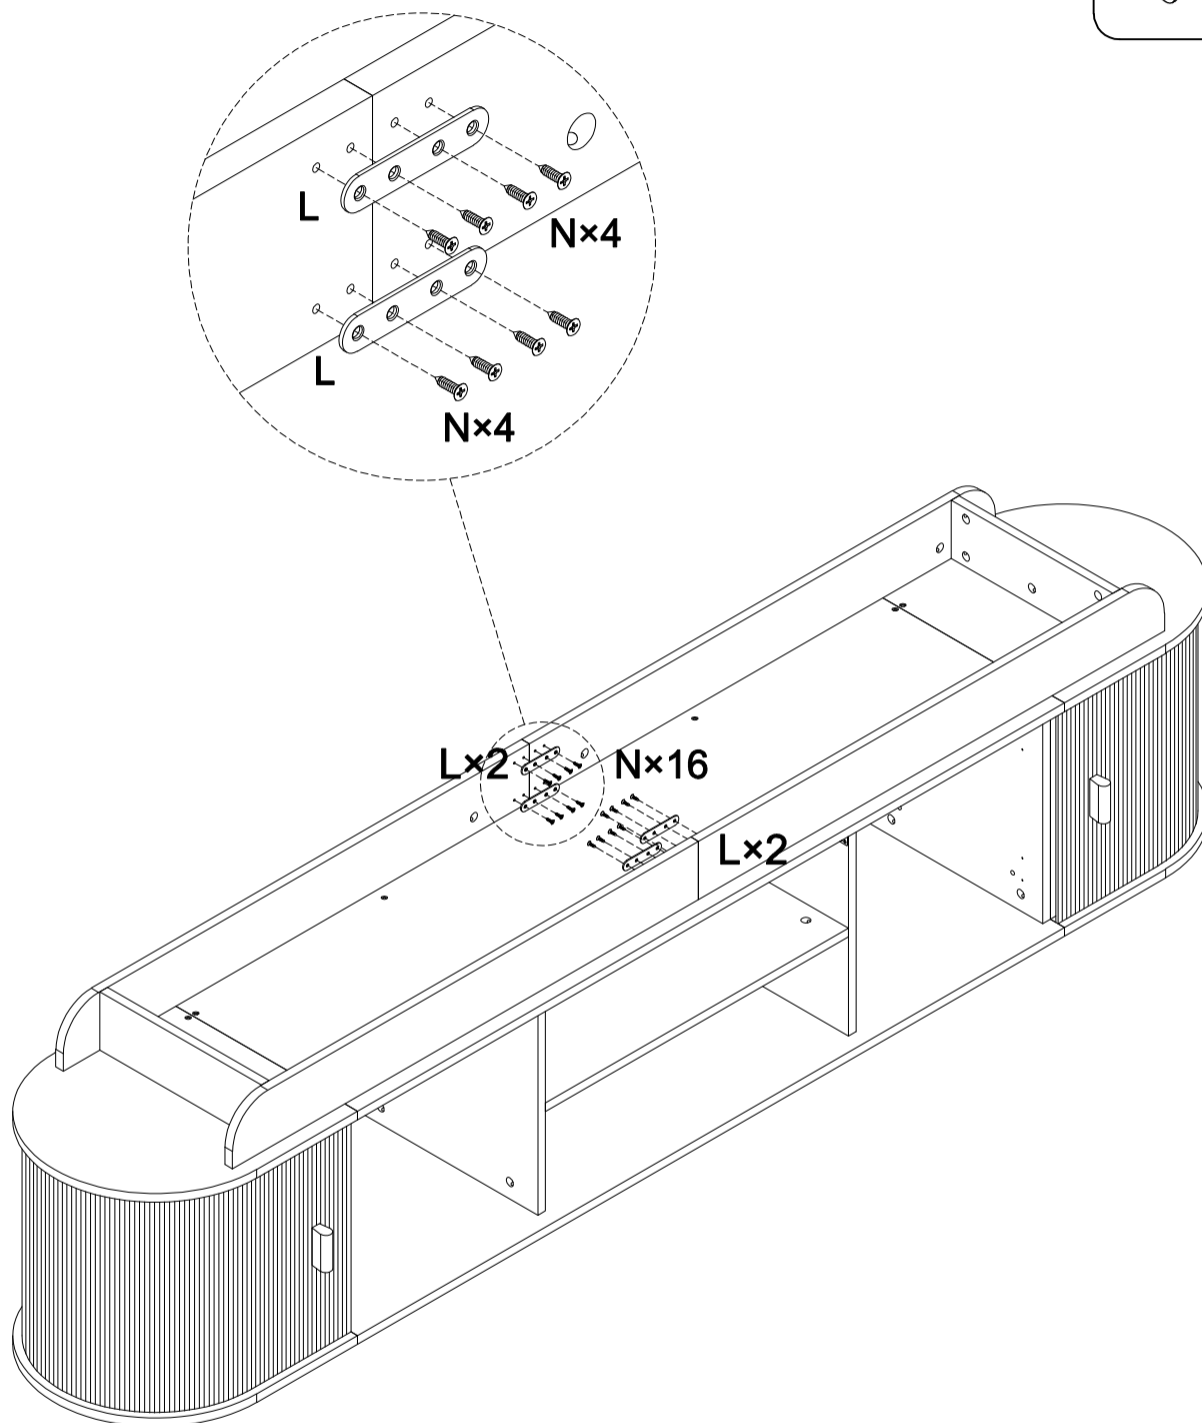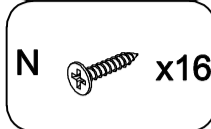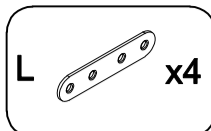

18










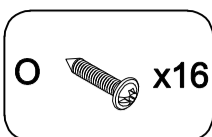
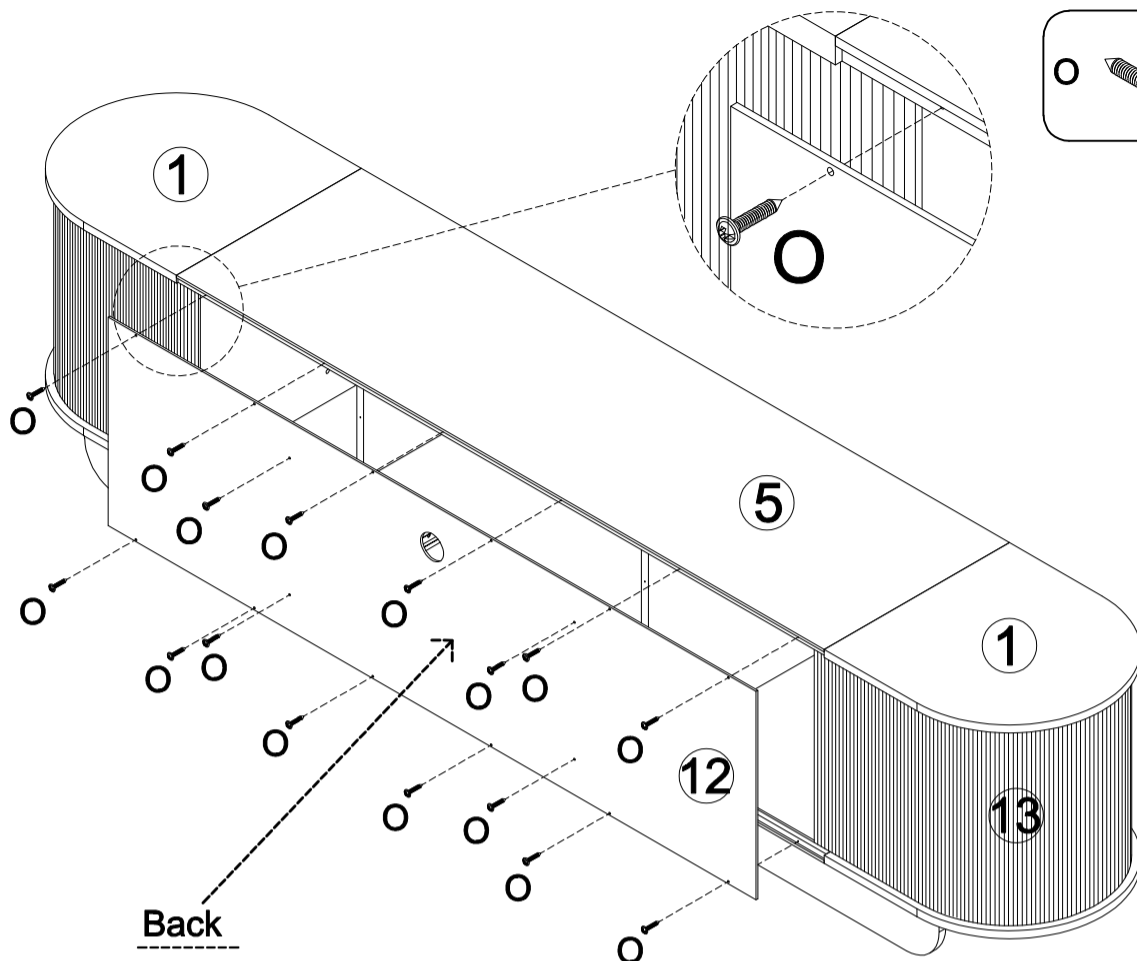


19

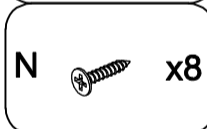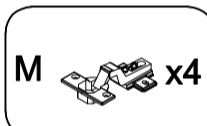
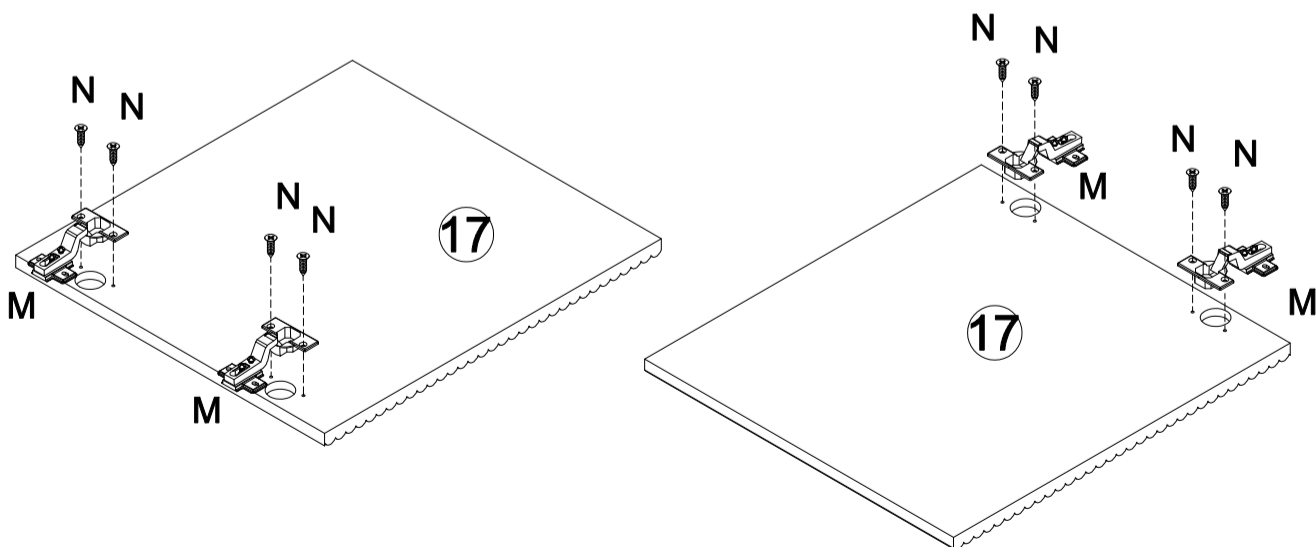


20


N  x8

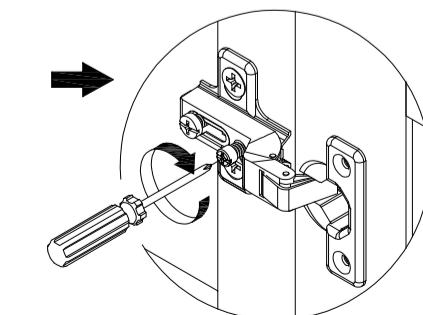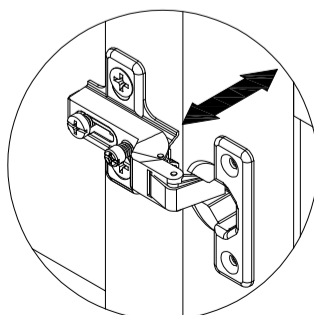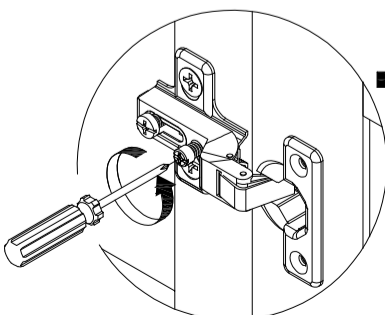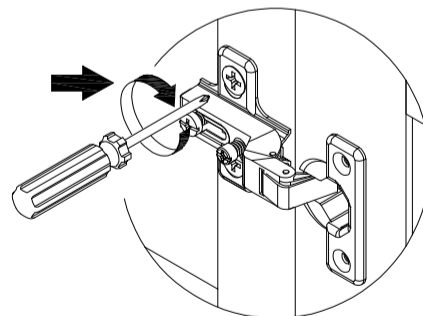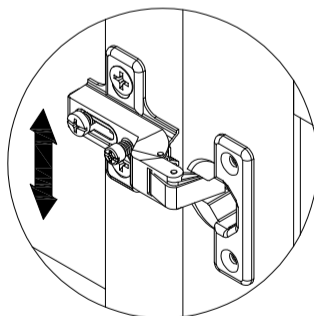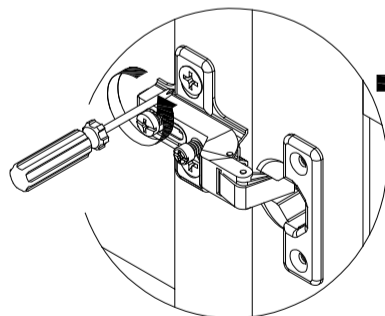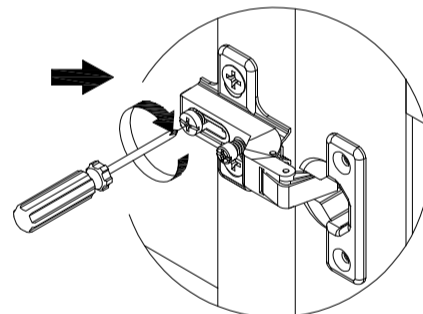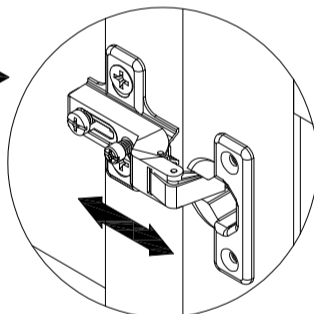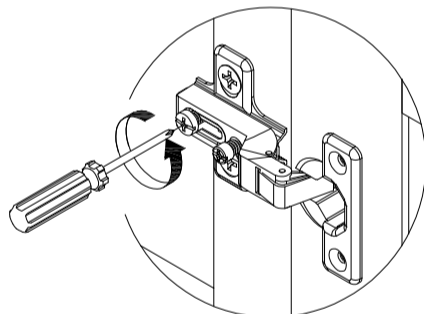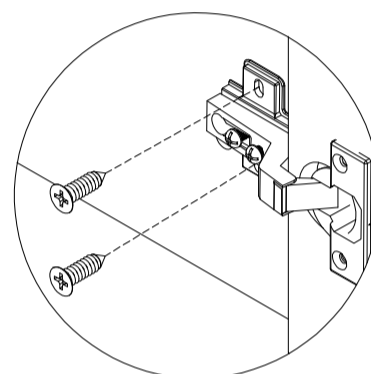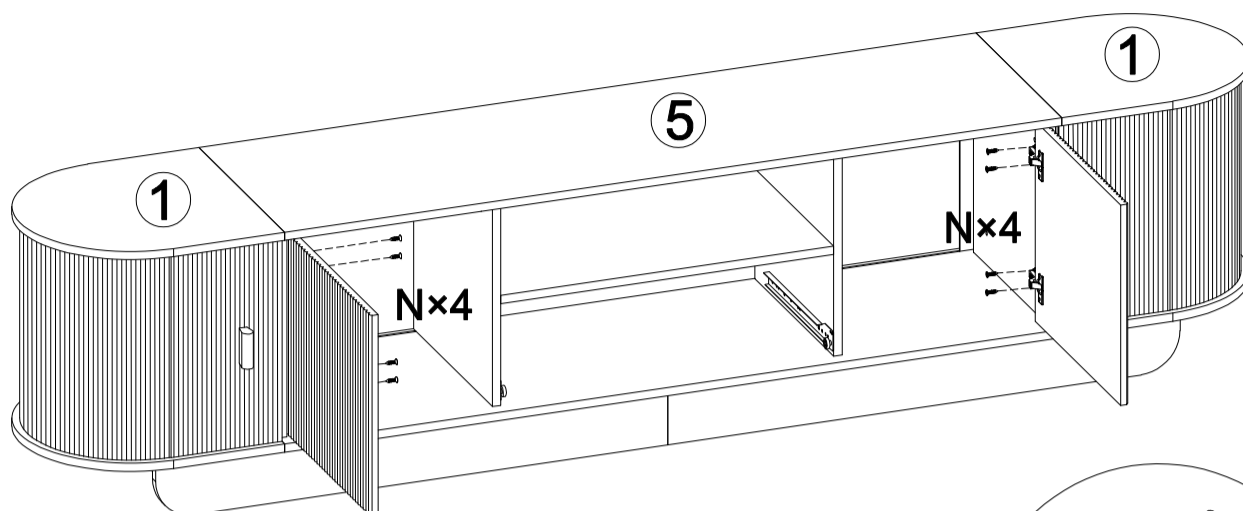



21

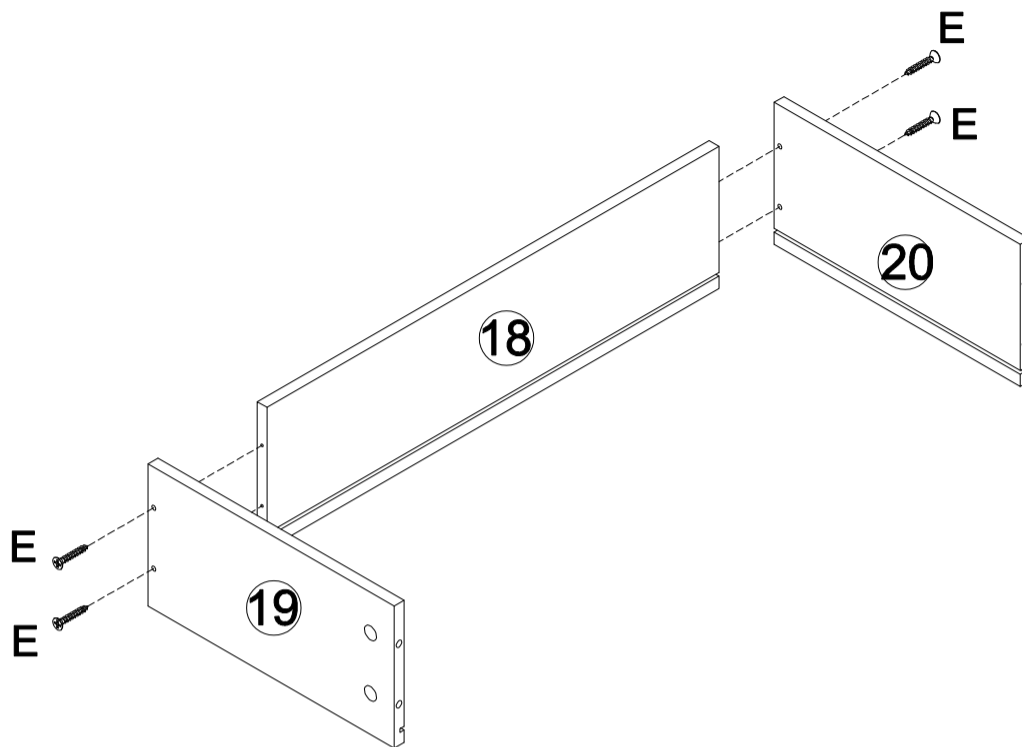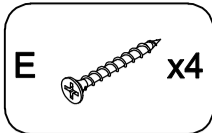



22

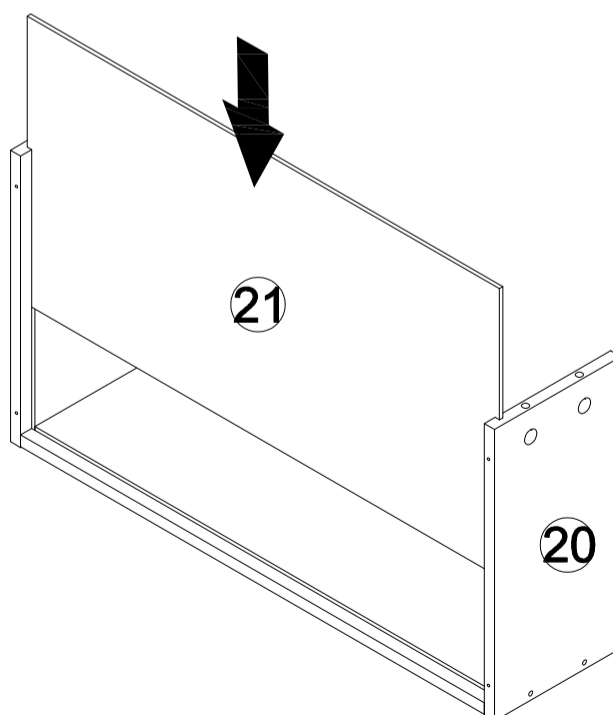


23

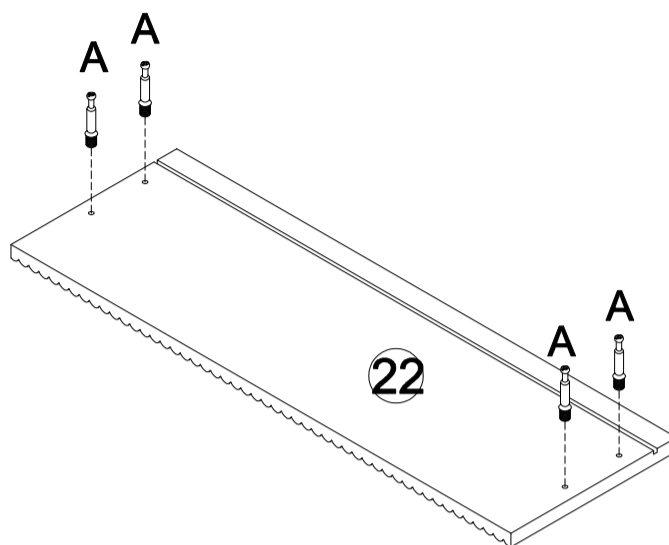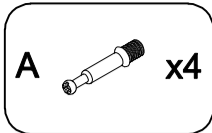


24

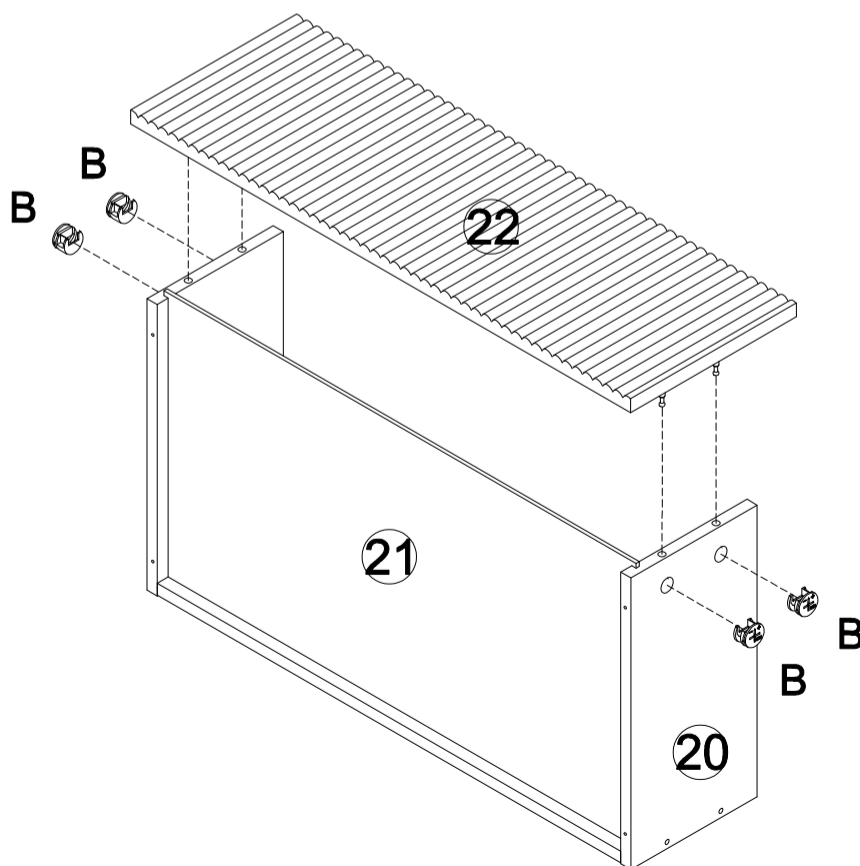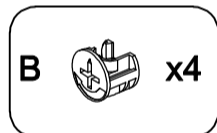


25

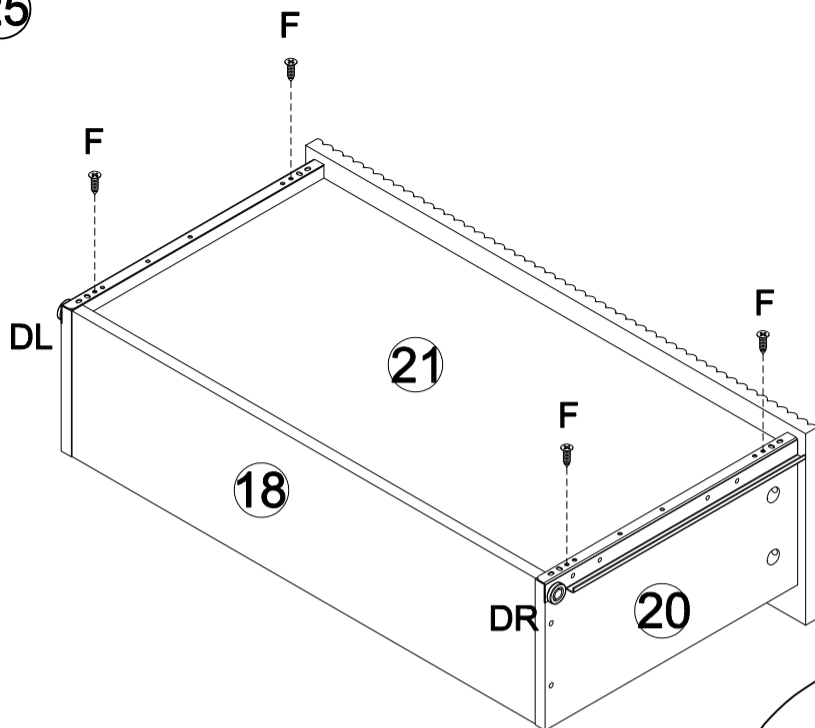

DR  x1

DL  x1

F  x4

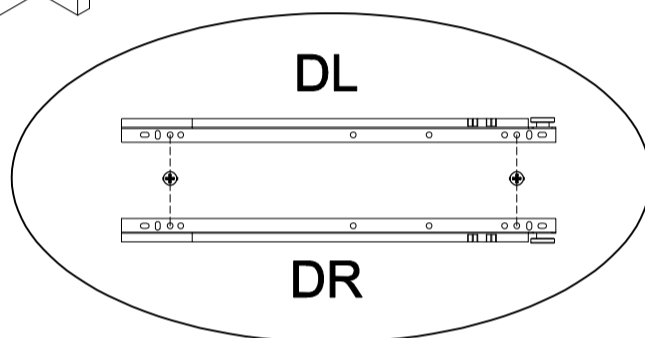

26

