
INSTALLATION GUIDE

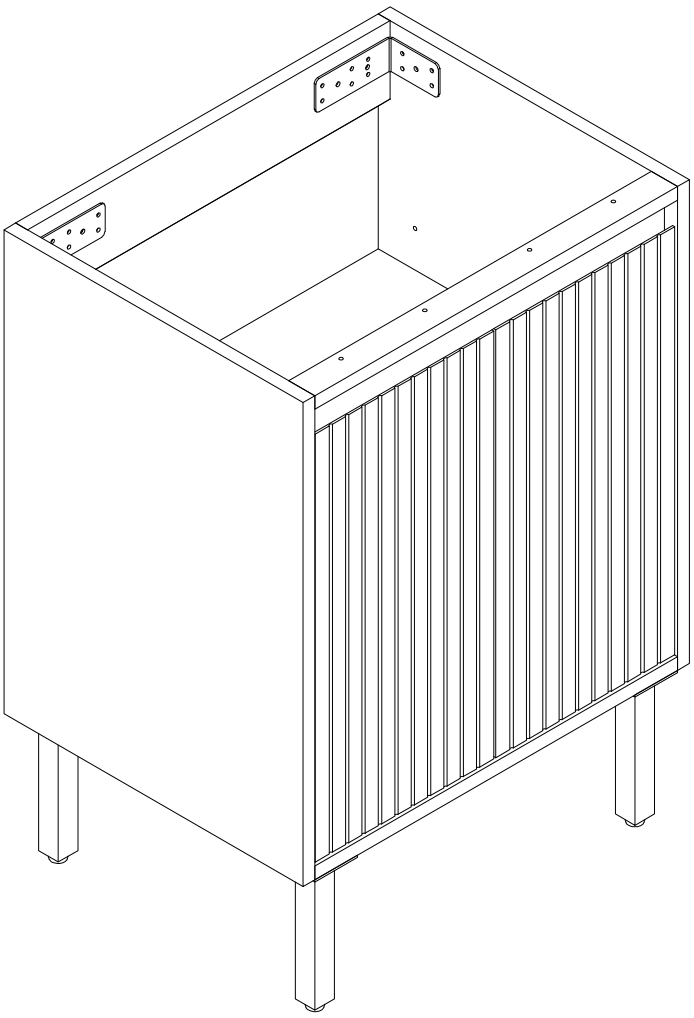


WALL CABINET INSTALLATION

STEP 1:SELECT HARDWARE THAT IS BEST SUITED FOR YOUR WALL TYPE

IMPORTANT:USE "PAN HEAD" OR "ROUND HEAD" SCREWS WITH SEAT WASHERS.SEAT SCREWS TIGHTLY AGAINST BACK RAIL OR PANEL WITHOUT DRIVING INTO BACK RAIL OR PANEL MATERIAL.

PASO 1: INSTALACION DE GABINETES, SELECCIONE LA HERRAJERIA QUE MAS SE ADECUA AL TIPO DE SU PAHED.


IMPORTANTE:USA TORNILLOS DE "CABEZA PLANA BISELADA" O " CABEZA REDONDA" CON ARANDELAS DE ASENTO. COLOCA LOS TORNILLOS FIRMEMENTE CONTRA EL PANEL O EL RIEL. TRASERO SIN INSERTARLOS EN EL PANEL O EL RIEL

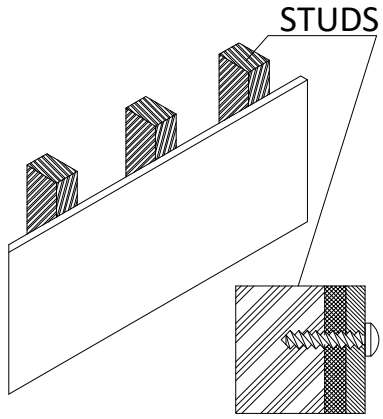

STUDS: Secure to wall with #10 x 3" screws at stud location. Locate at least 2 wall studs


MONTANTES: Fjelo a la pared con tornillos de # 10 x 3 pulgadas en los montantes.

Use at least 4 wall anchors when installing a 24" and 30" cabinet. Use at least 6 wall anchors when installing a 36" and 48" cabinet.

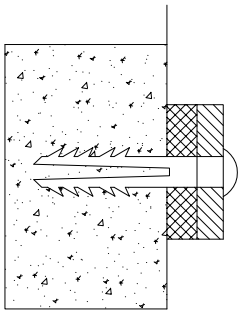

CONCRETE: Drill ¼"holes, insert #10 wall anchors and secure to wall with #10 x3" screws.


CONCRETO: Taladre orificios de ¼ pulgada, inserte anclas de expansión de #10 y fijelo a la pared con tornillos de # 10 x 3 pulgadas.




DRYWALL: Drill holes and secure to the wall with toggle bolts.
Note:Use toggle bolts only when cabinet cannot be attached to a wall stud.

PANEL DE YESO: Taladre los orificios y fije la unidad a la pared conpernos acodillados.
Nota: Use pernos acodillados sólo cuando el gabinete no se pueda fijar a los montantes de pared.


PRE-INSTALLATION - TOOLS REQUIRED

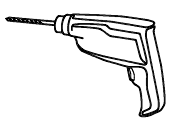

Drill




Measuring tape



Screwdriver




Silicone



Level



Pencil



Ax20




Bx20



Cx8




Dx40




Ex4




Fx20




Gx4

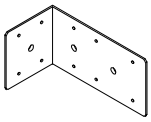

Hx6




Ix6





Jx4





Kx4

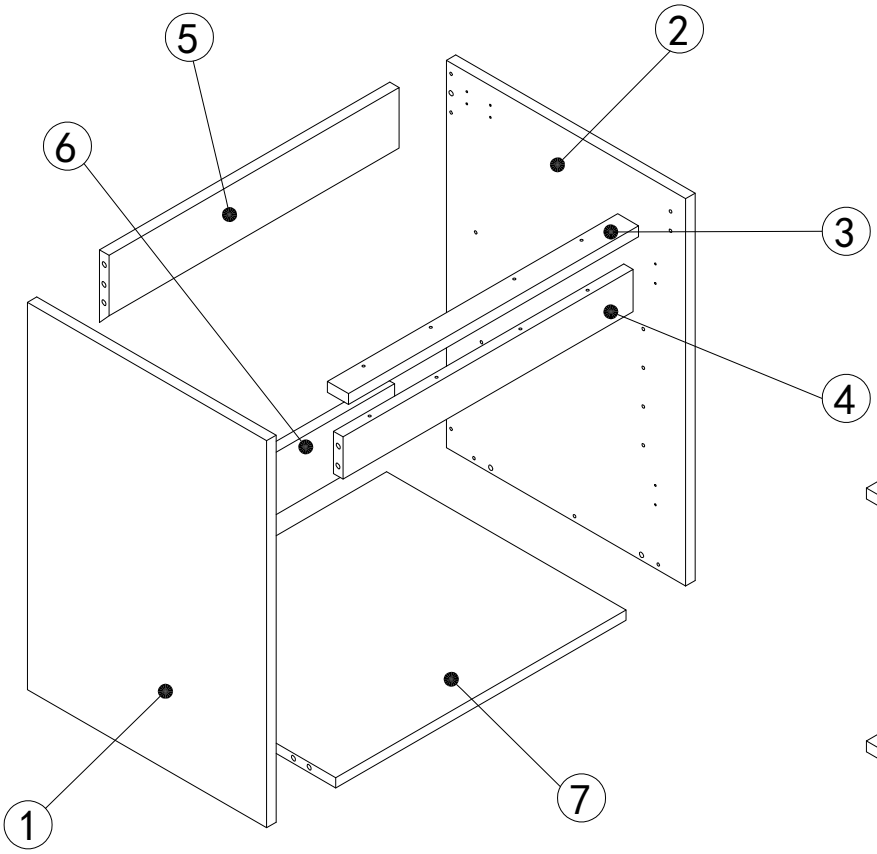

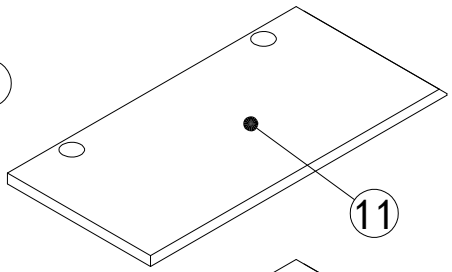


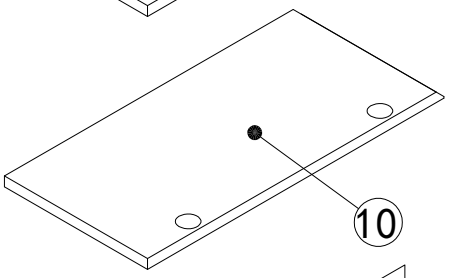

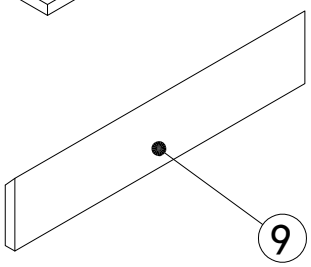


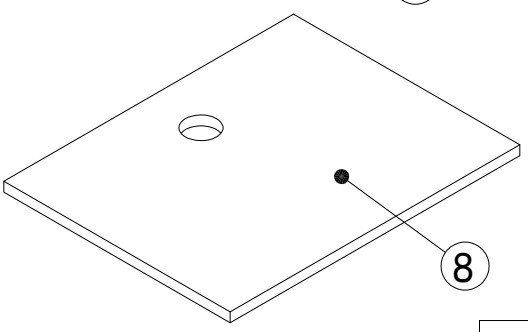


Panels Check

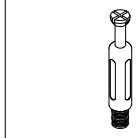


Ax9

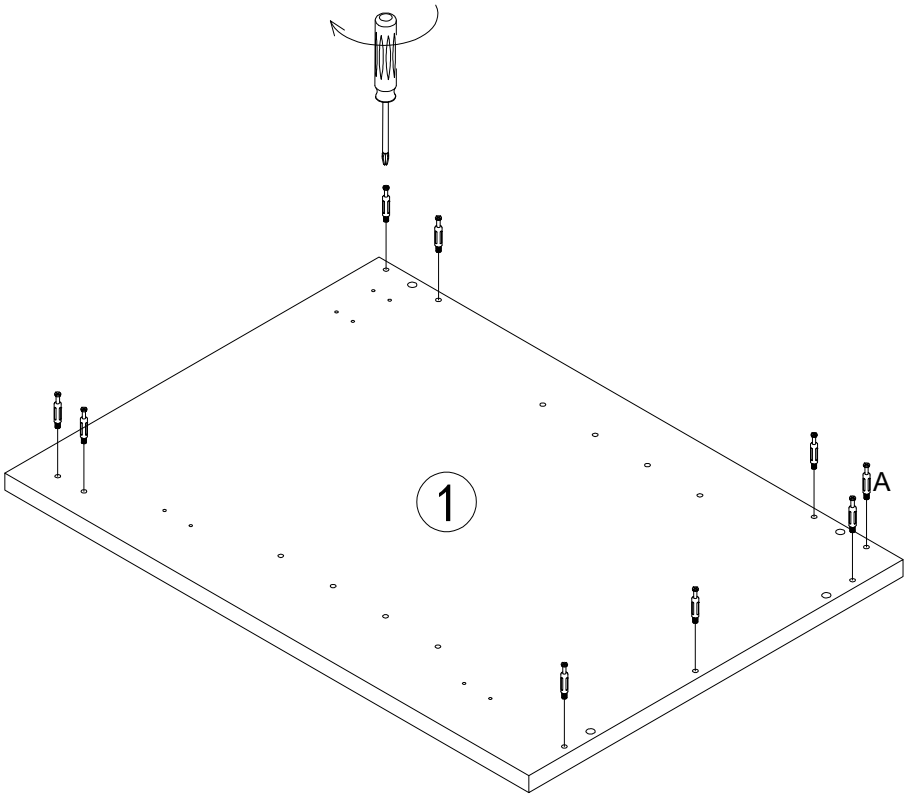


2

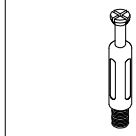


Ax9

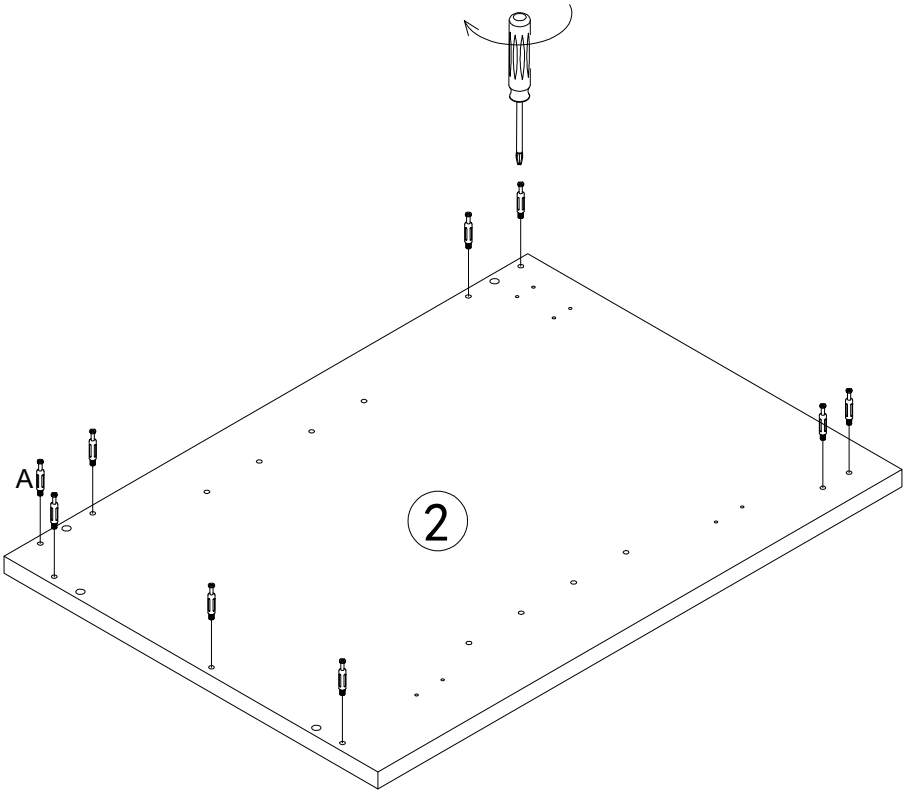


3

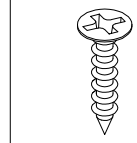


Ex4

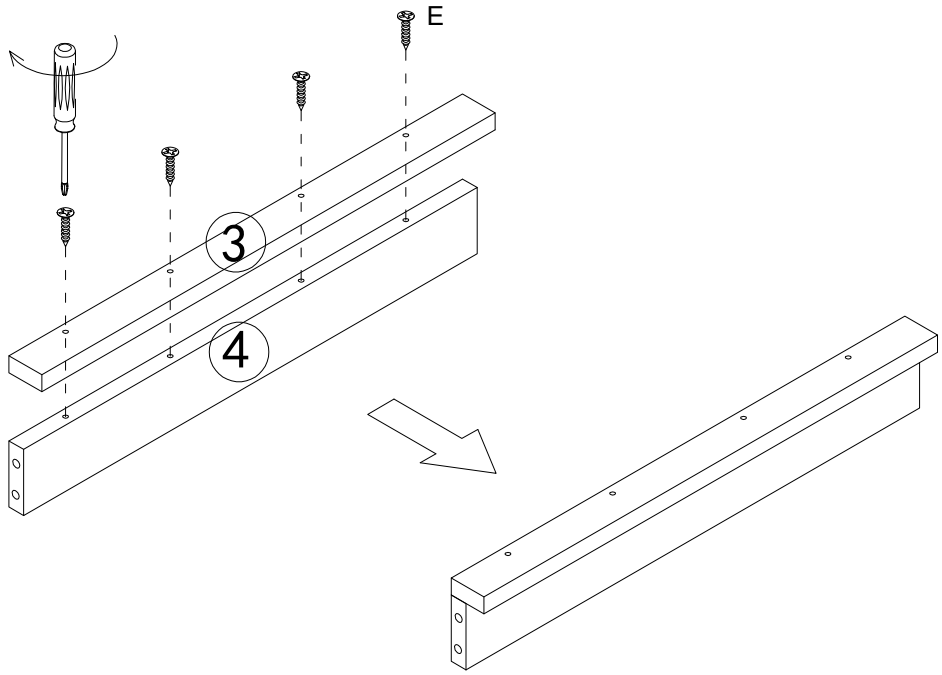


4





Cx8

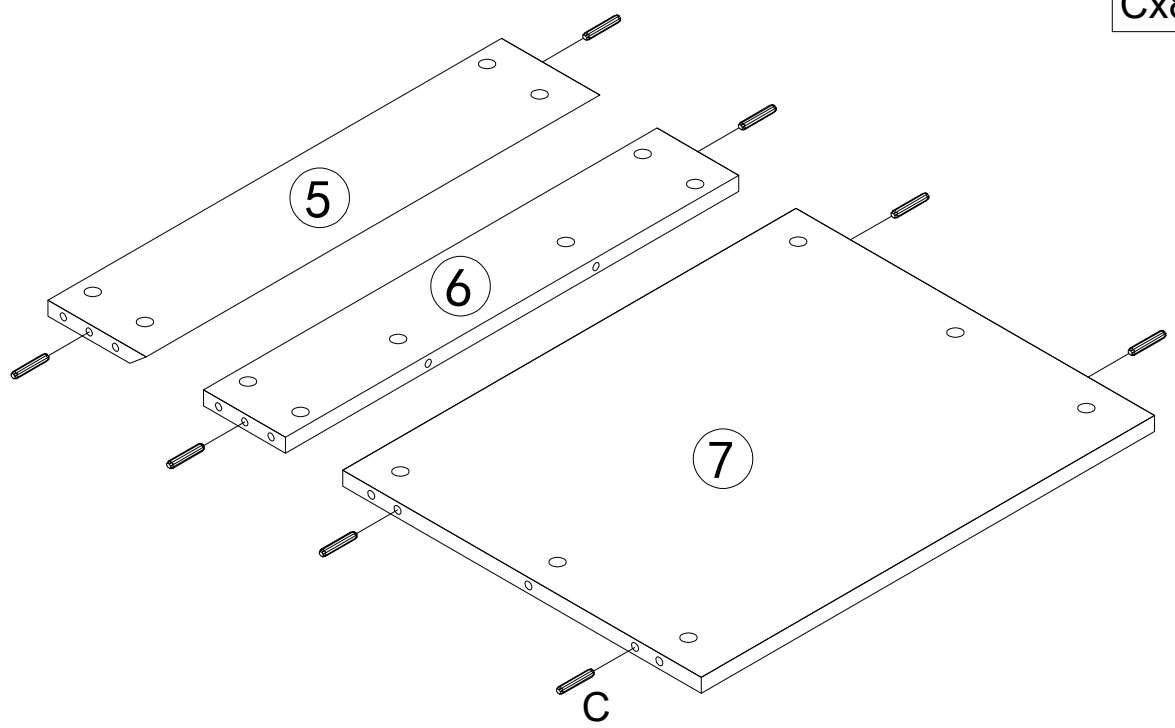


5

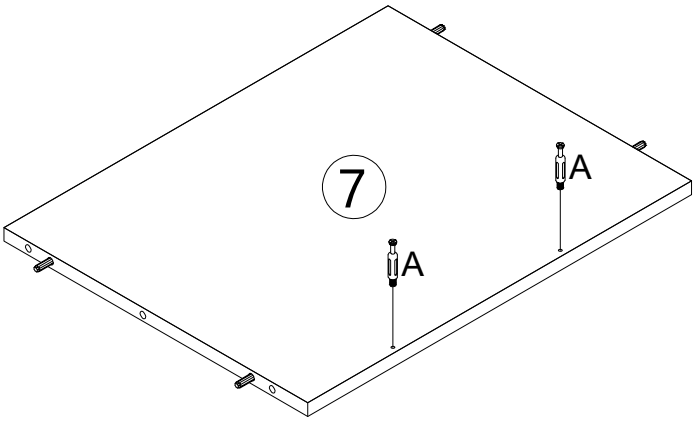

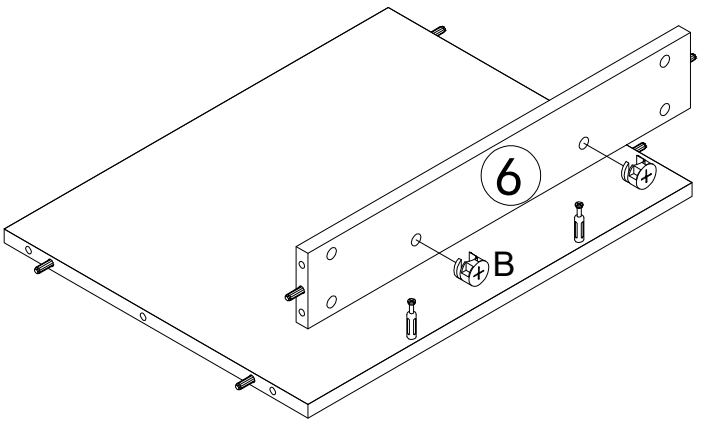

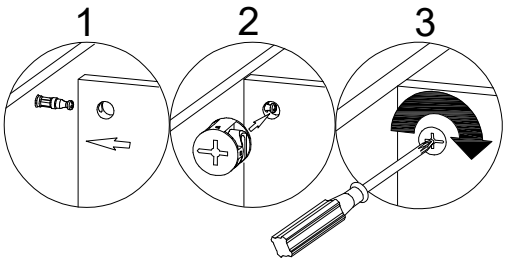

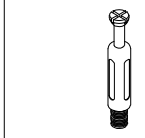


Ax2





Bx2

6





Bx9

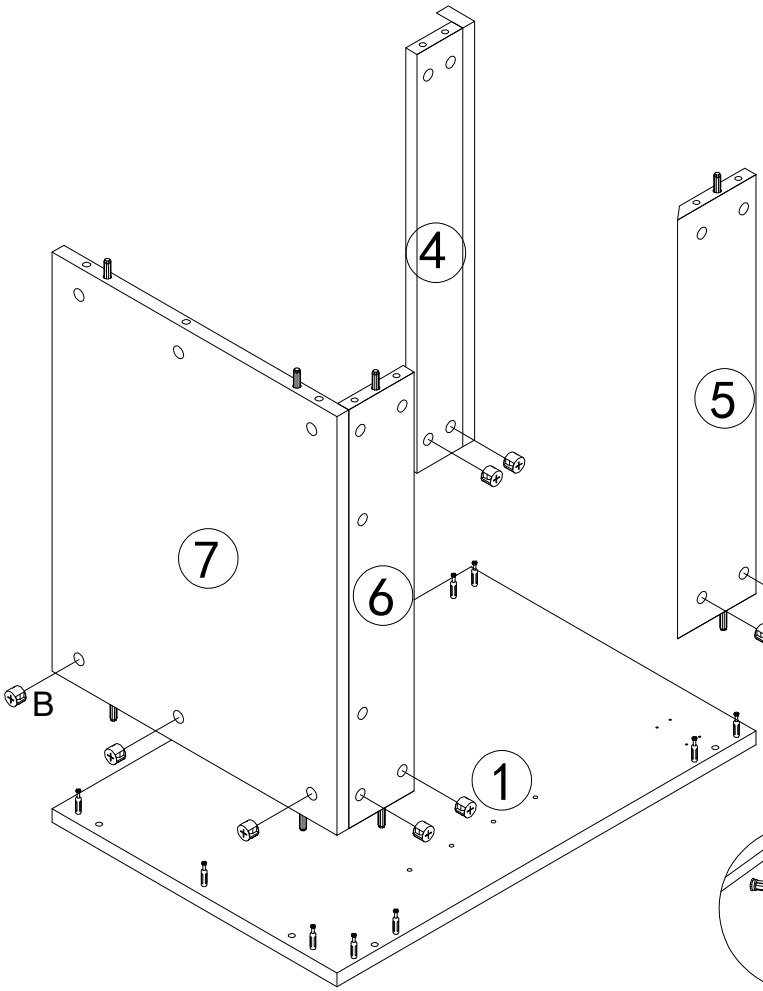

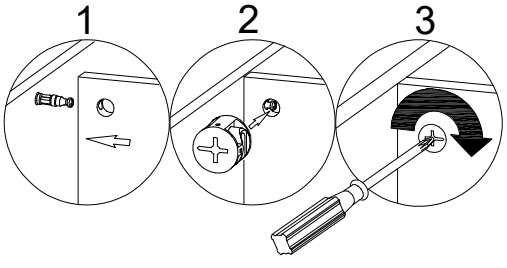


7

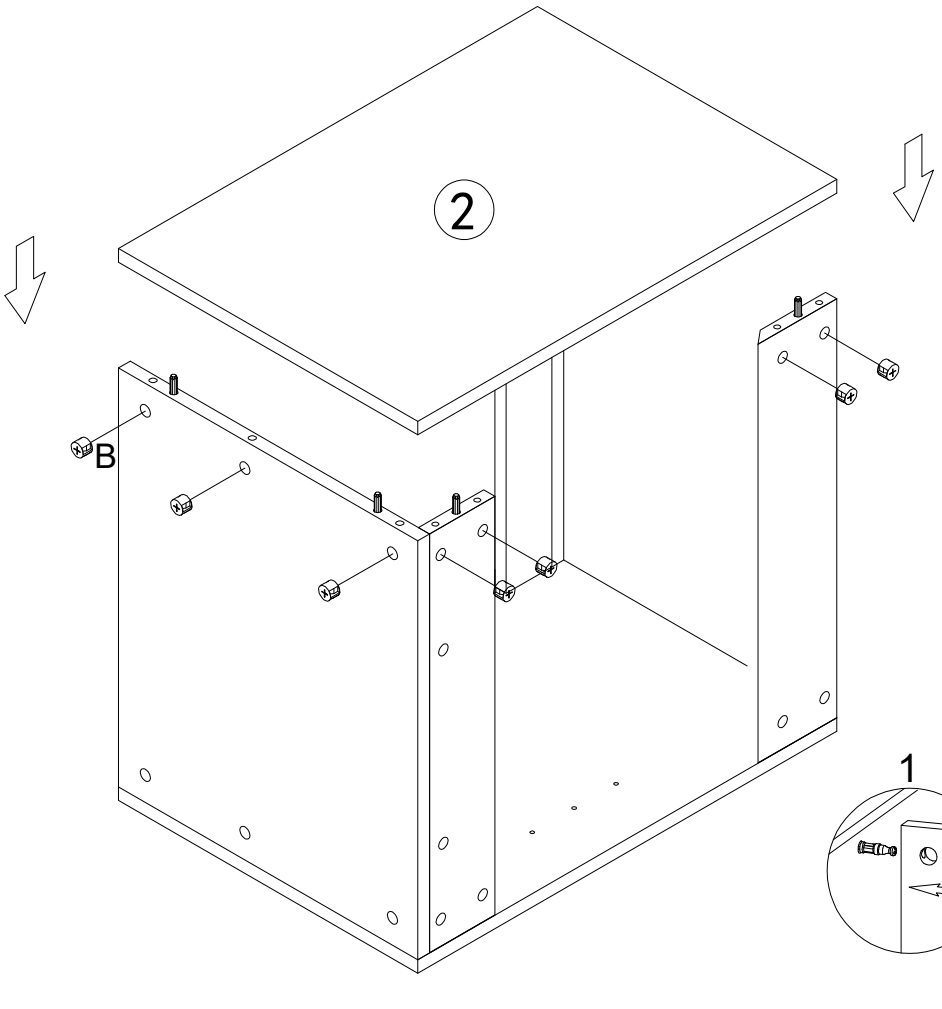




Bx9

8

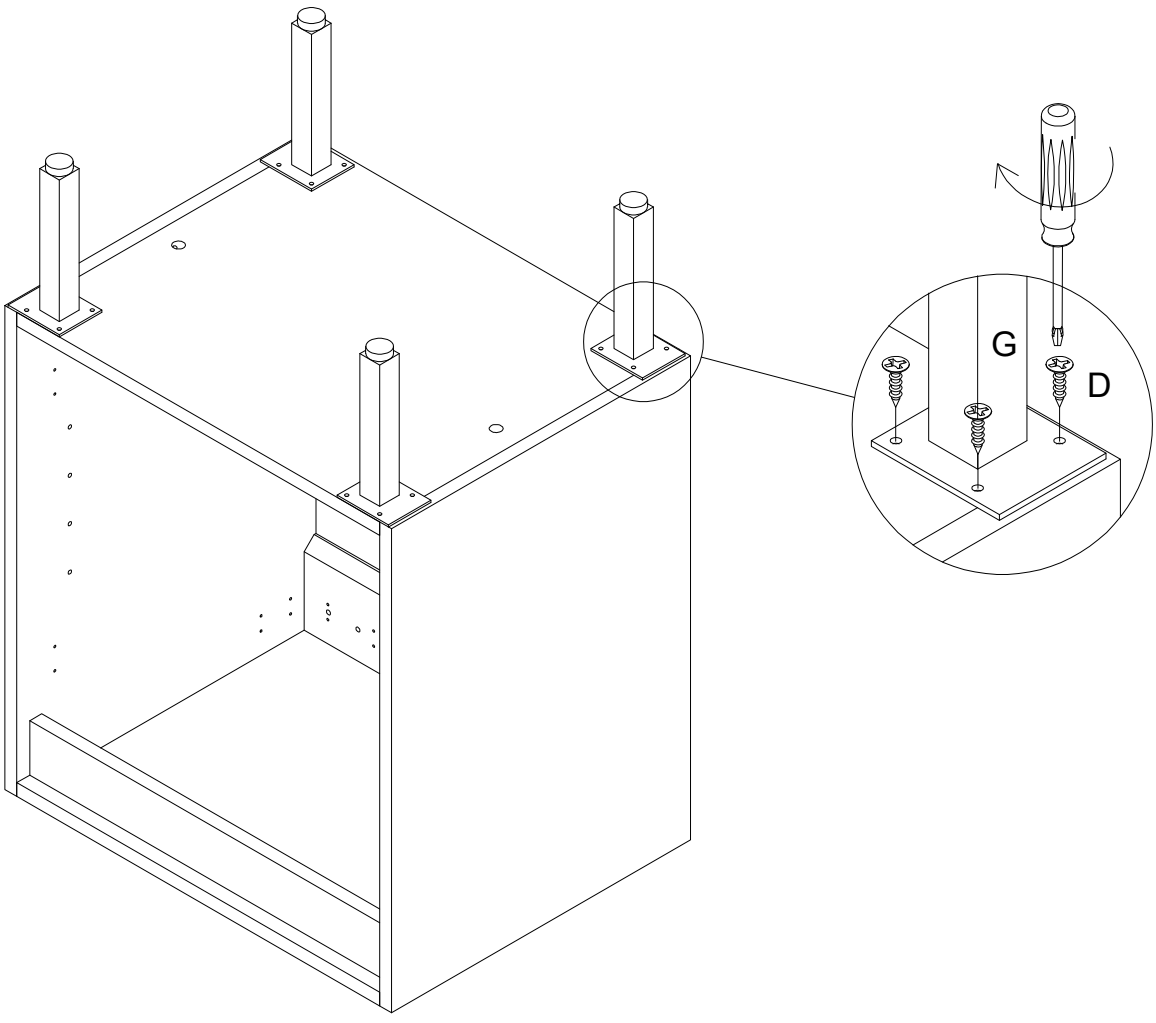




Dx16



Gx4


9

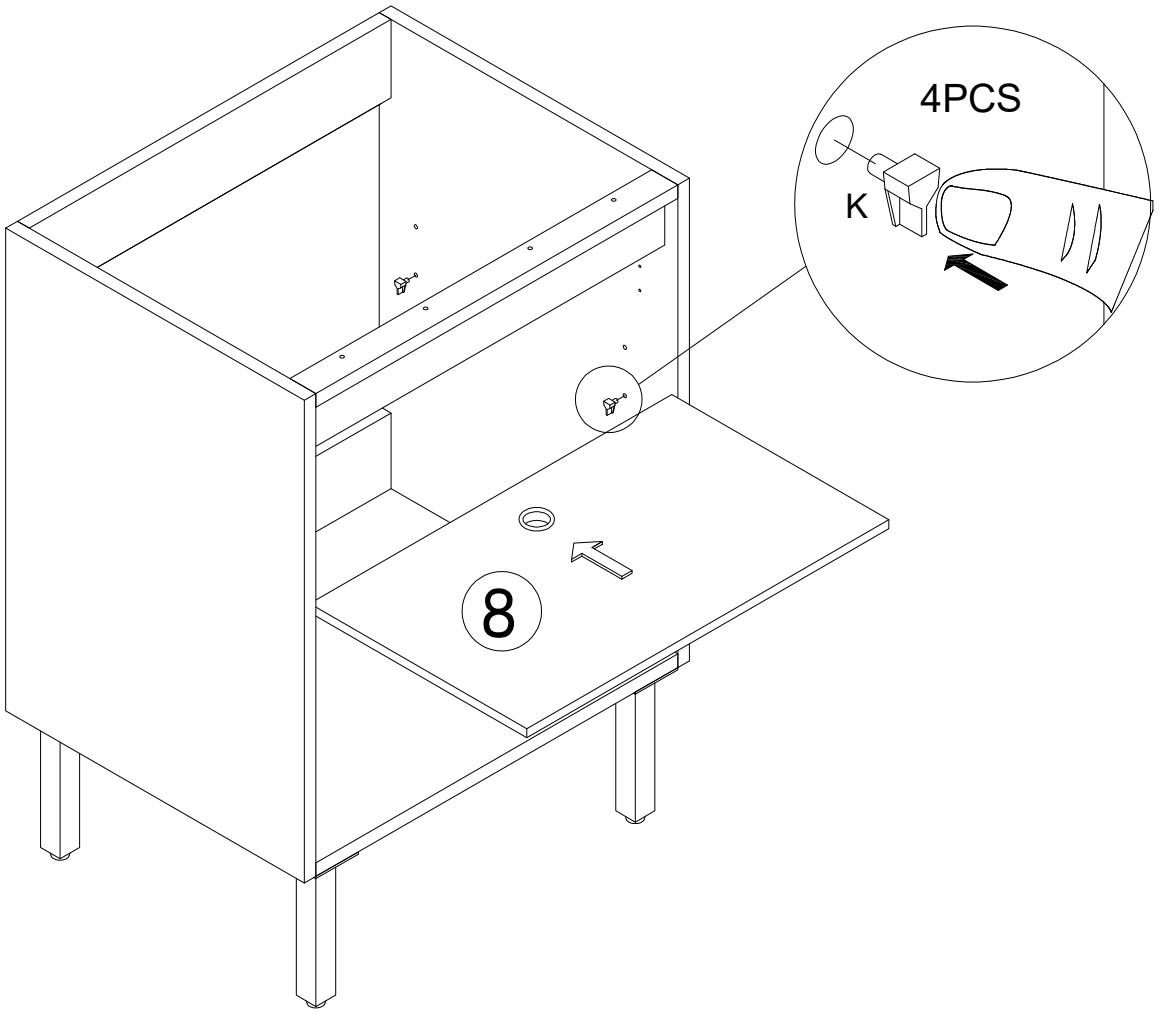




Kx4

10

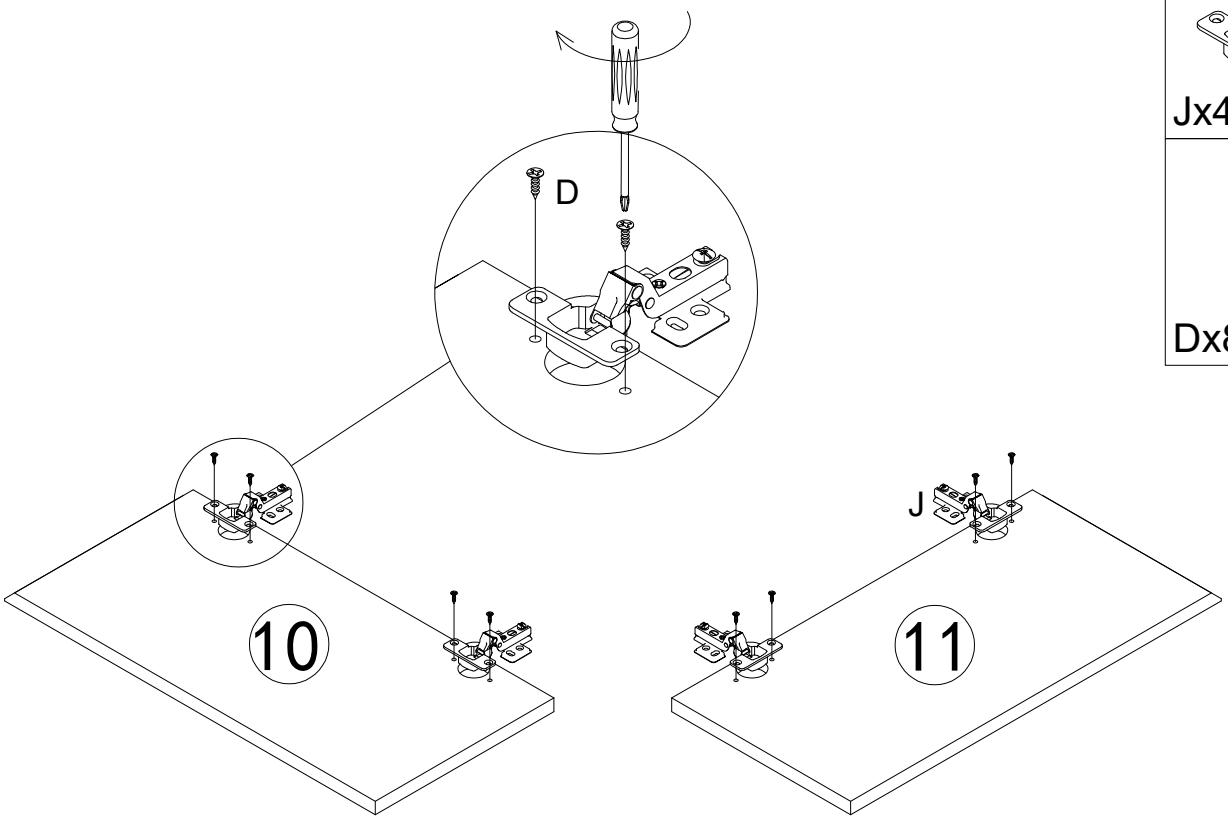




Jx4




Dx8


11

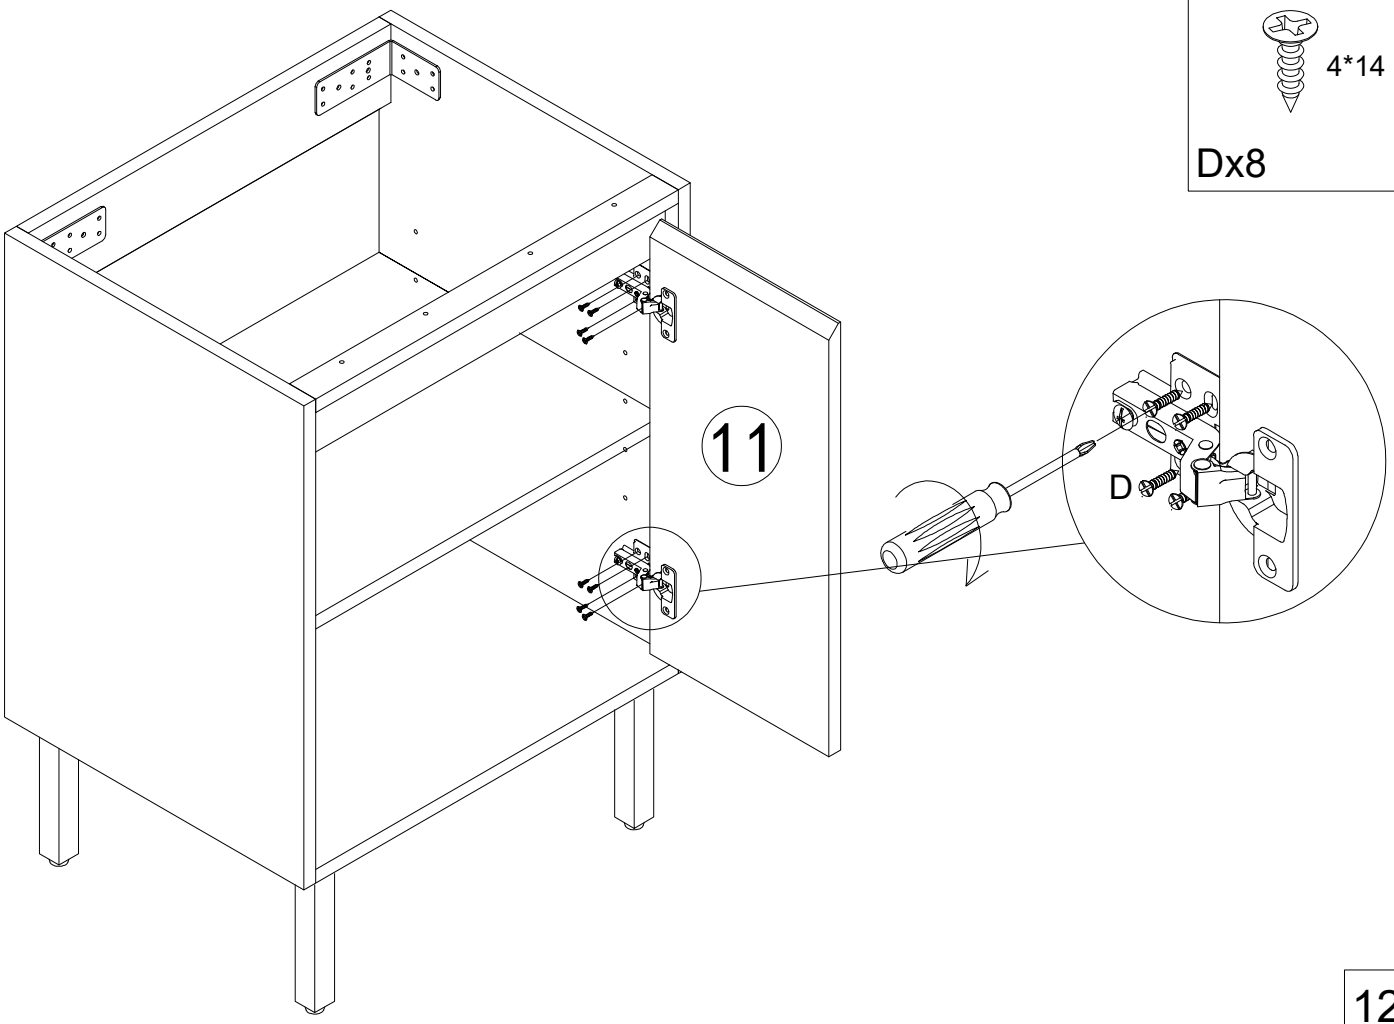

12

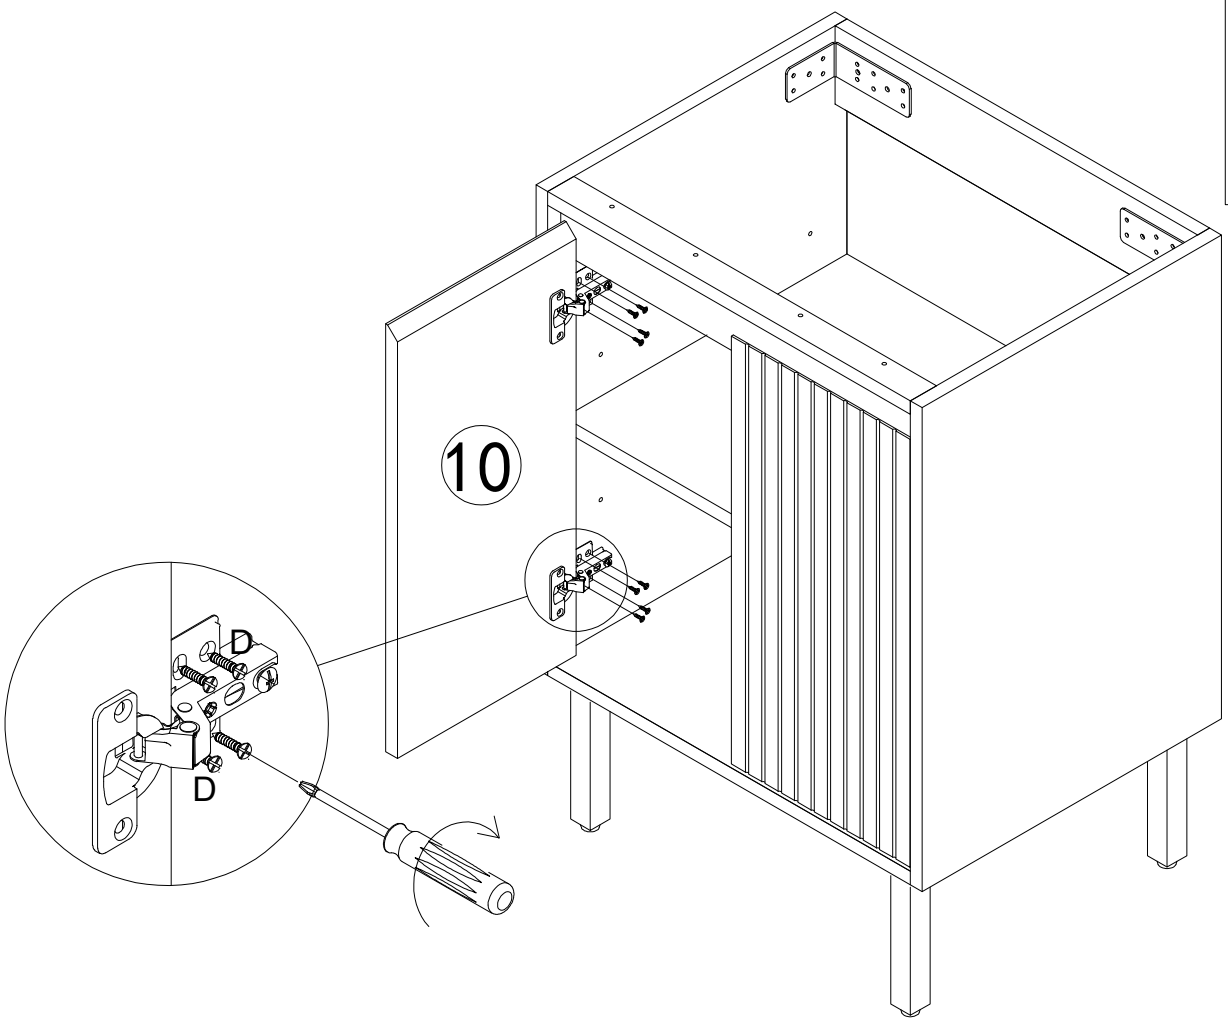


13

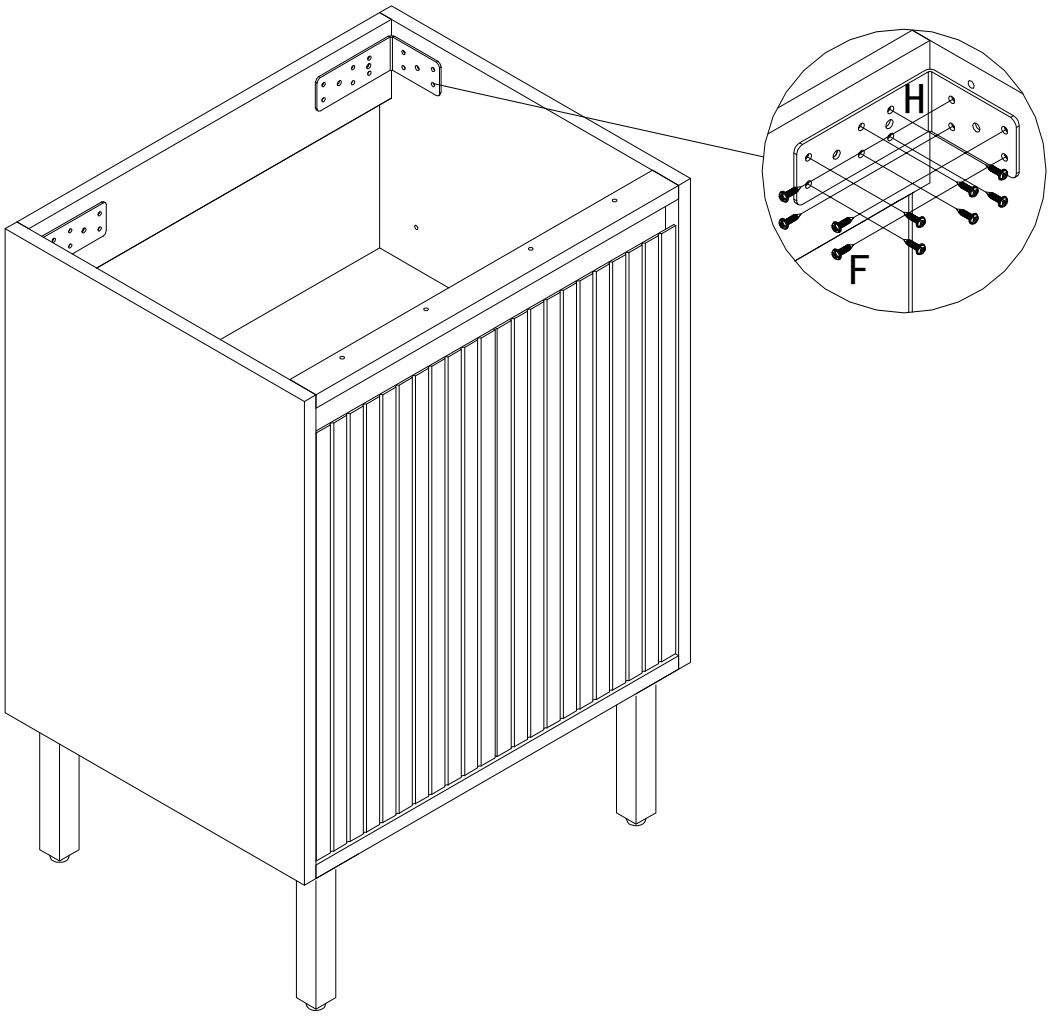





Fx20

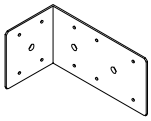

Hx2

14

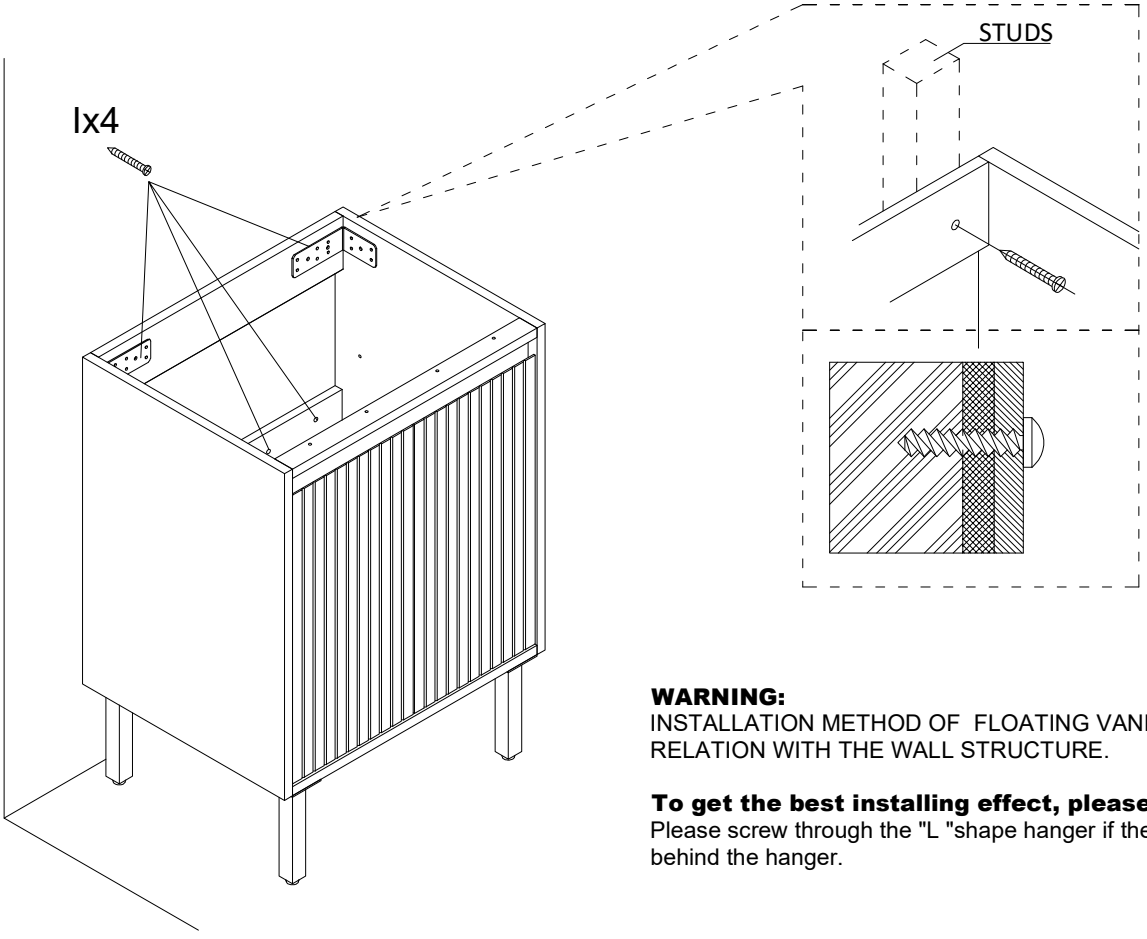





WARNING:
INSTALLATION METHOD OF FLOATING VANITY HAS BIG RELATION WITH THE WALL STRUCTURE.

To get the best installing effect, please follow as below:
Please screw through the "L "shape hanger if there is exactly wall stub behind the hanger.


15

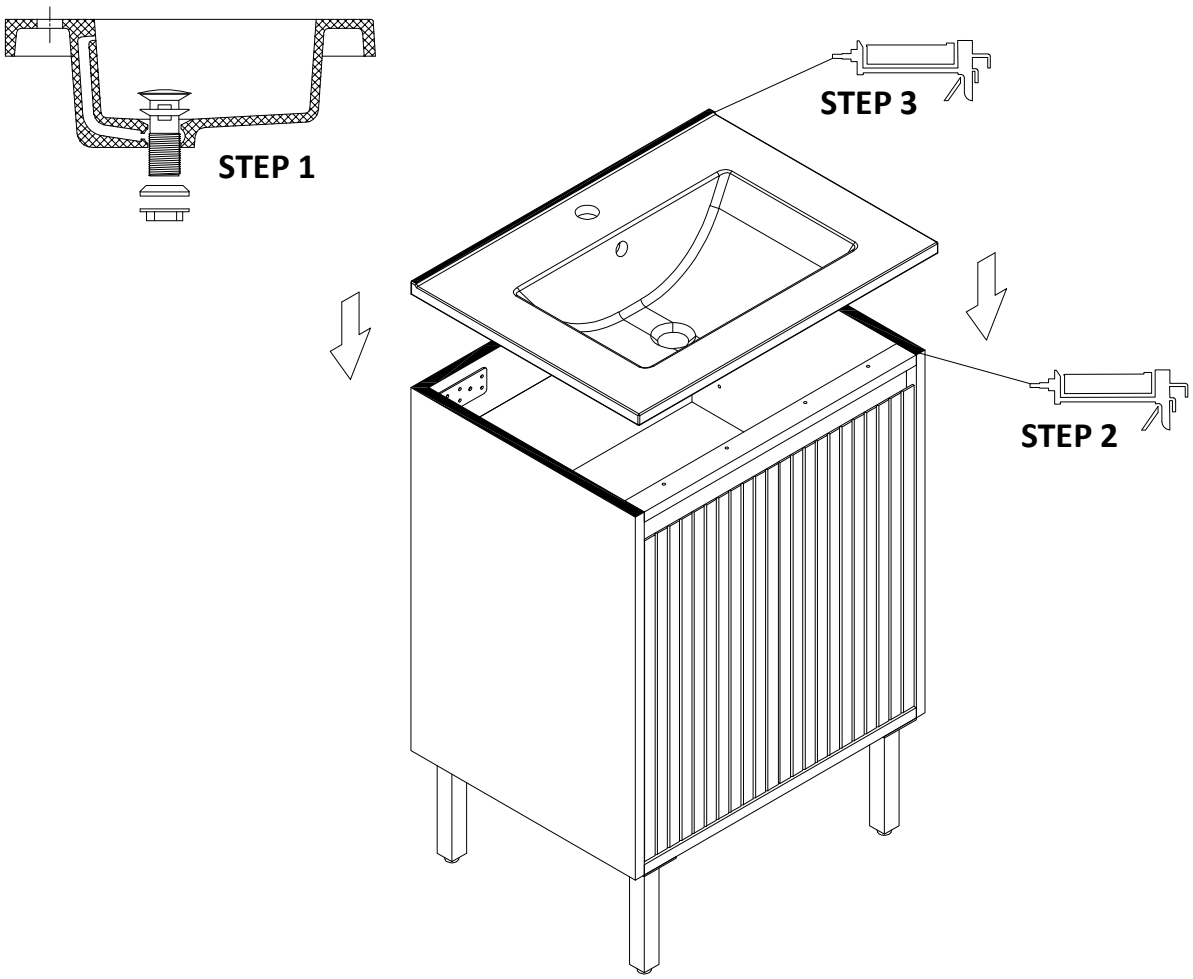


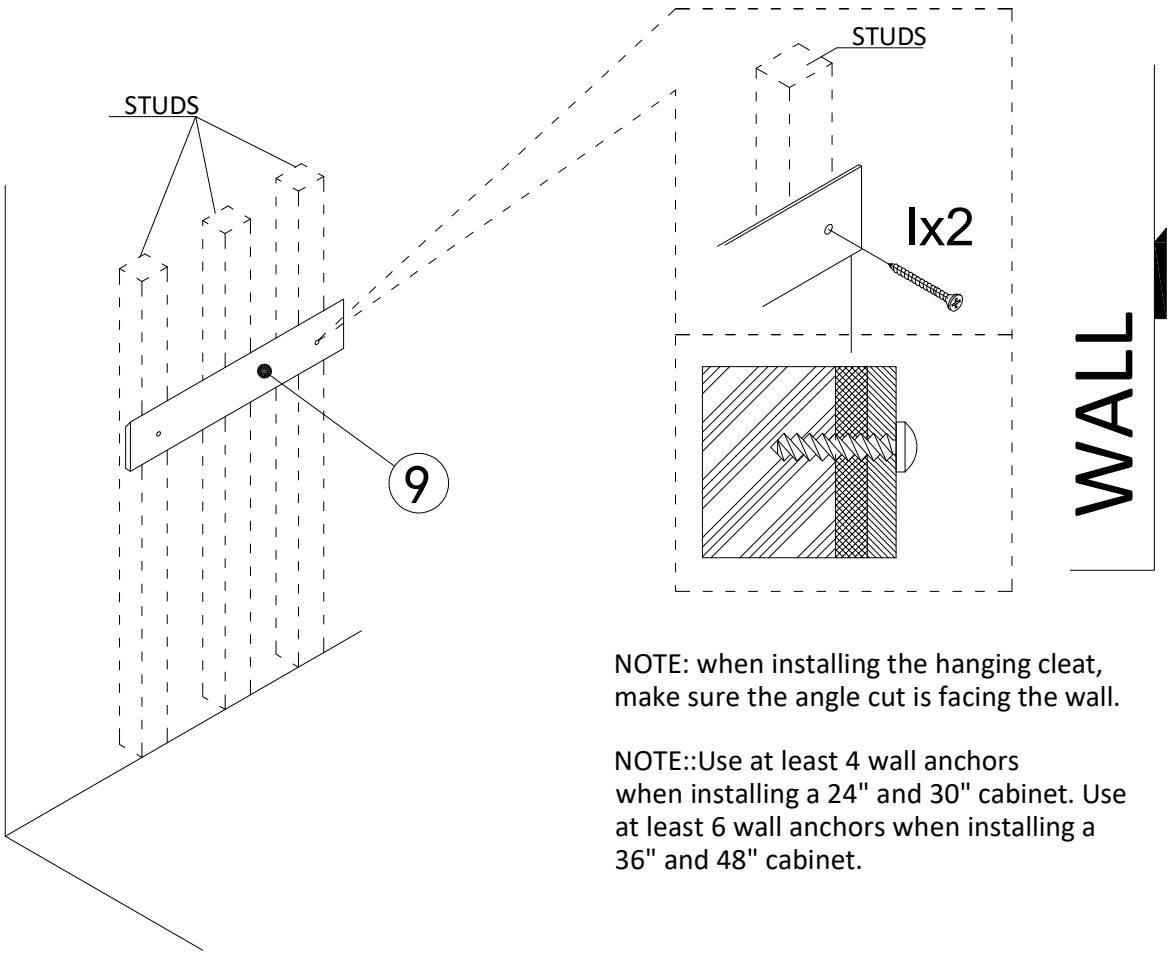


NOTE: when installing the hanging cleat, make sure the angle cut is facing the wall.

NOTE::Use at least 4 wall anchors when installing a 24" and 30" cabinet. Use at least 6 wall anchors when installing a 36" and 48" cabinet.

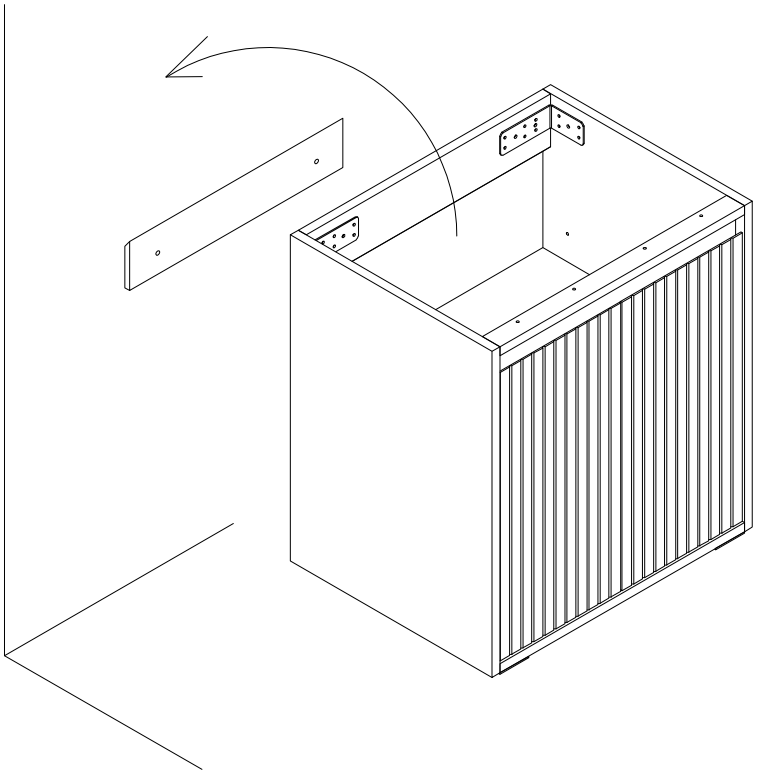


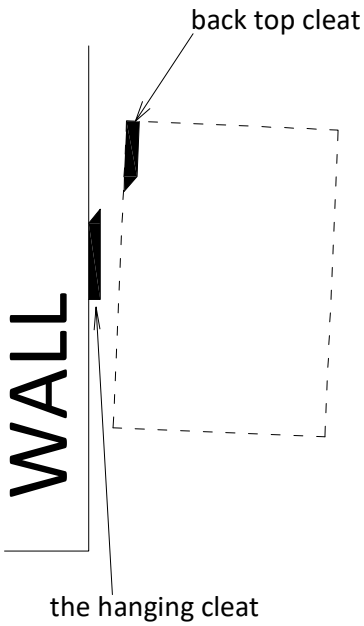

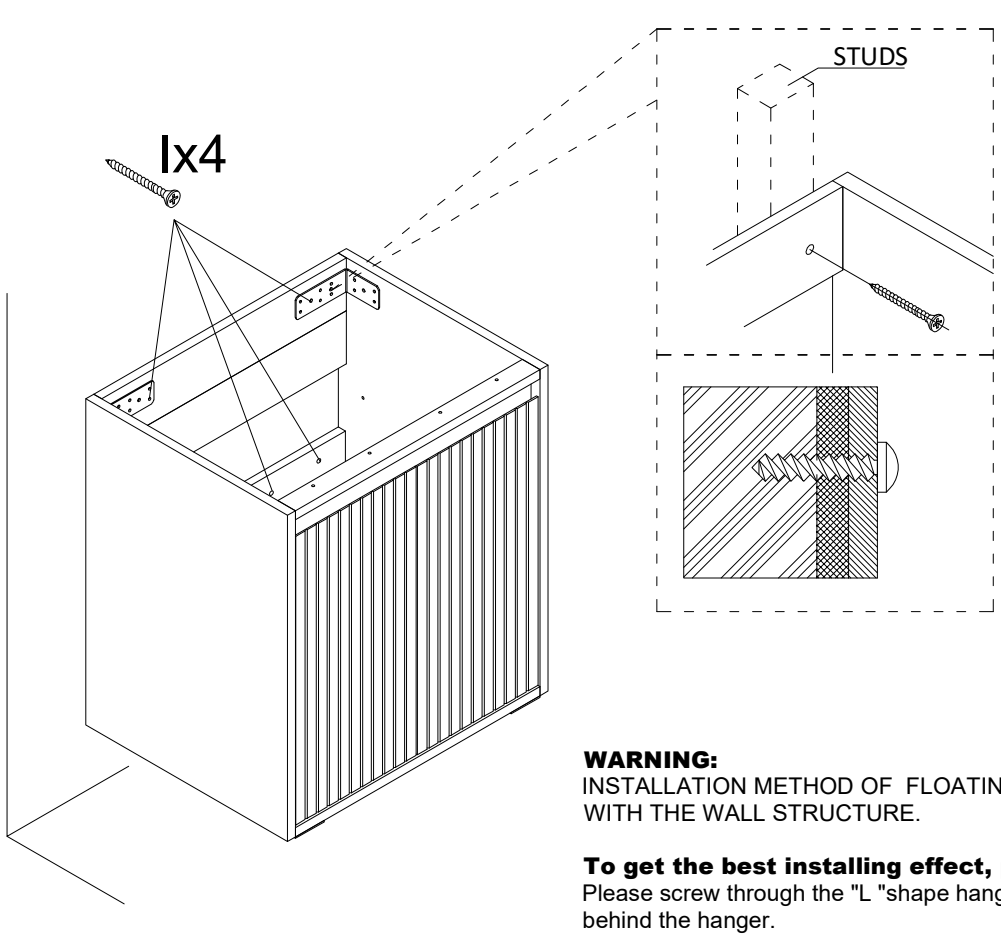

WARNING:
INSTALLATION METHOD OF FLOATING VANITY HAS BIG RELATION WITH THE WALL STRUCTURE.

To get the best installing effect, please follow as below:
Please screw through the "L "shape hanger if there is exactly wall stub behind the hanger.

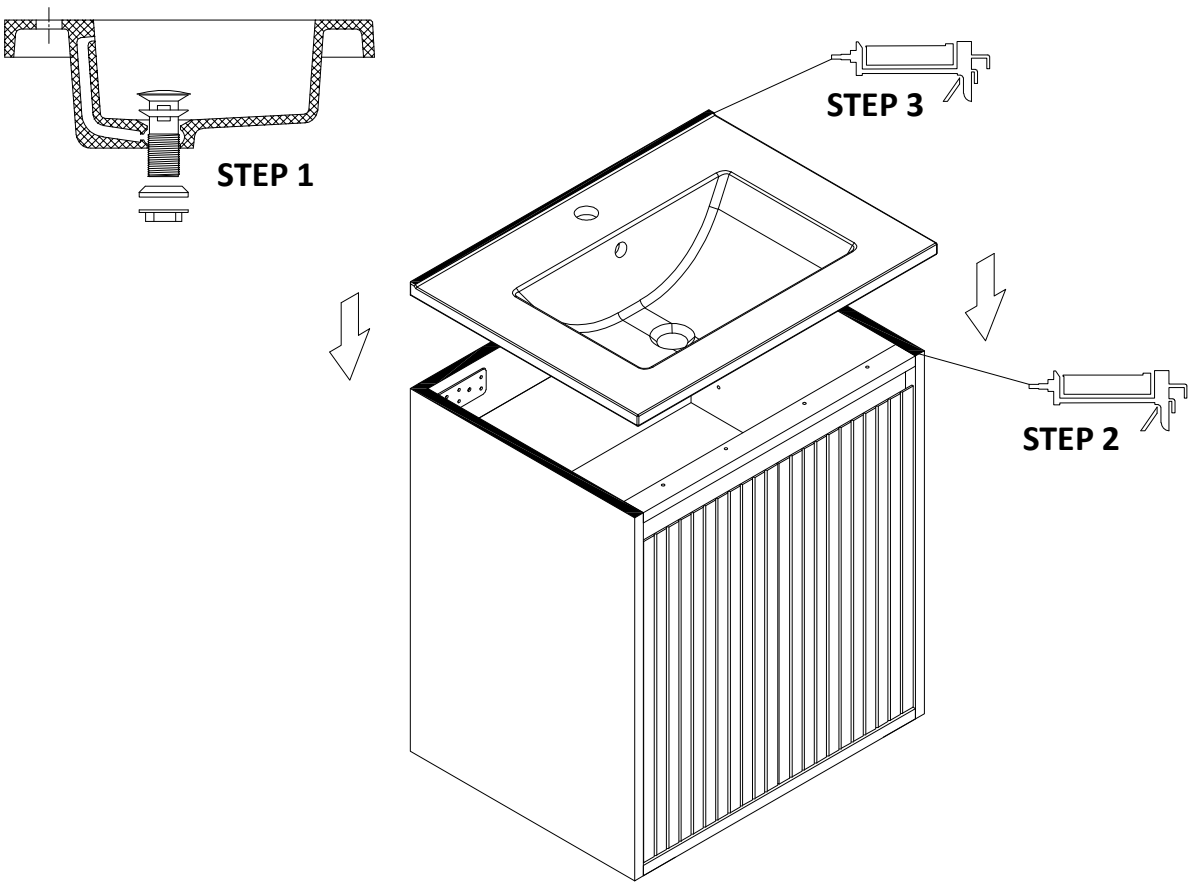

HINGE/DOOR ADJUSTMENT（IF APPLICABLE）

The door alignment was set in the factory, but it could have shiftedduring transit.If adjustment is needed, follow the instructionsprovided in chart below.

