
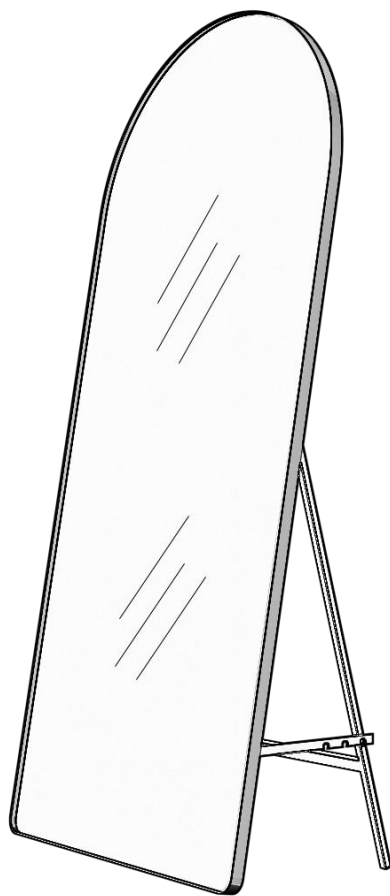






Full-length mirror

Installation Guide



TOOLS REQUIRED

DESCRIPTION	PICTURE
Pencil	
Measure	
Ø6mm Drill bit	
Power Drill	
Utility Knife	


DESCRIPTION	PICTURE
Cross Screwdriver	
Flat head Screwdriver	
Hammer	
Level	
Diagonal cutting pliers	

Full-length mirror

Option 1

Standing mirror

Step 1

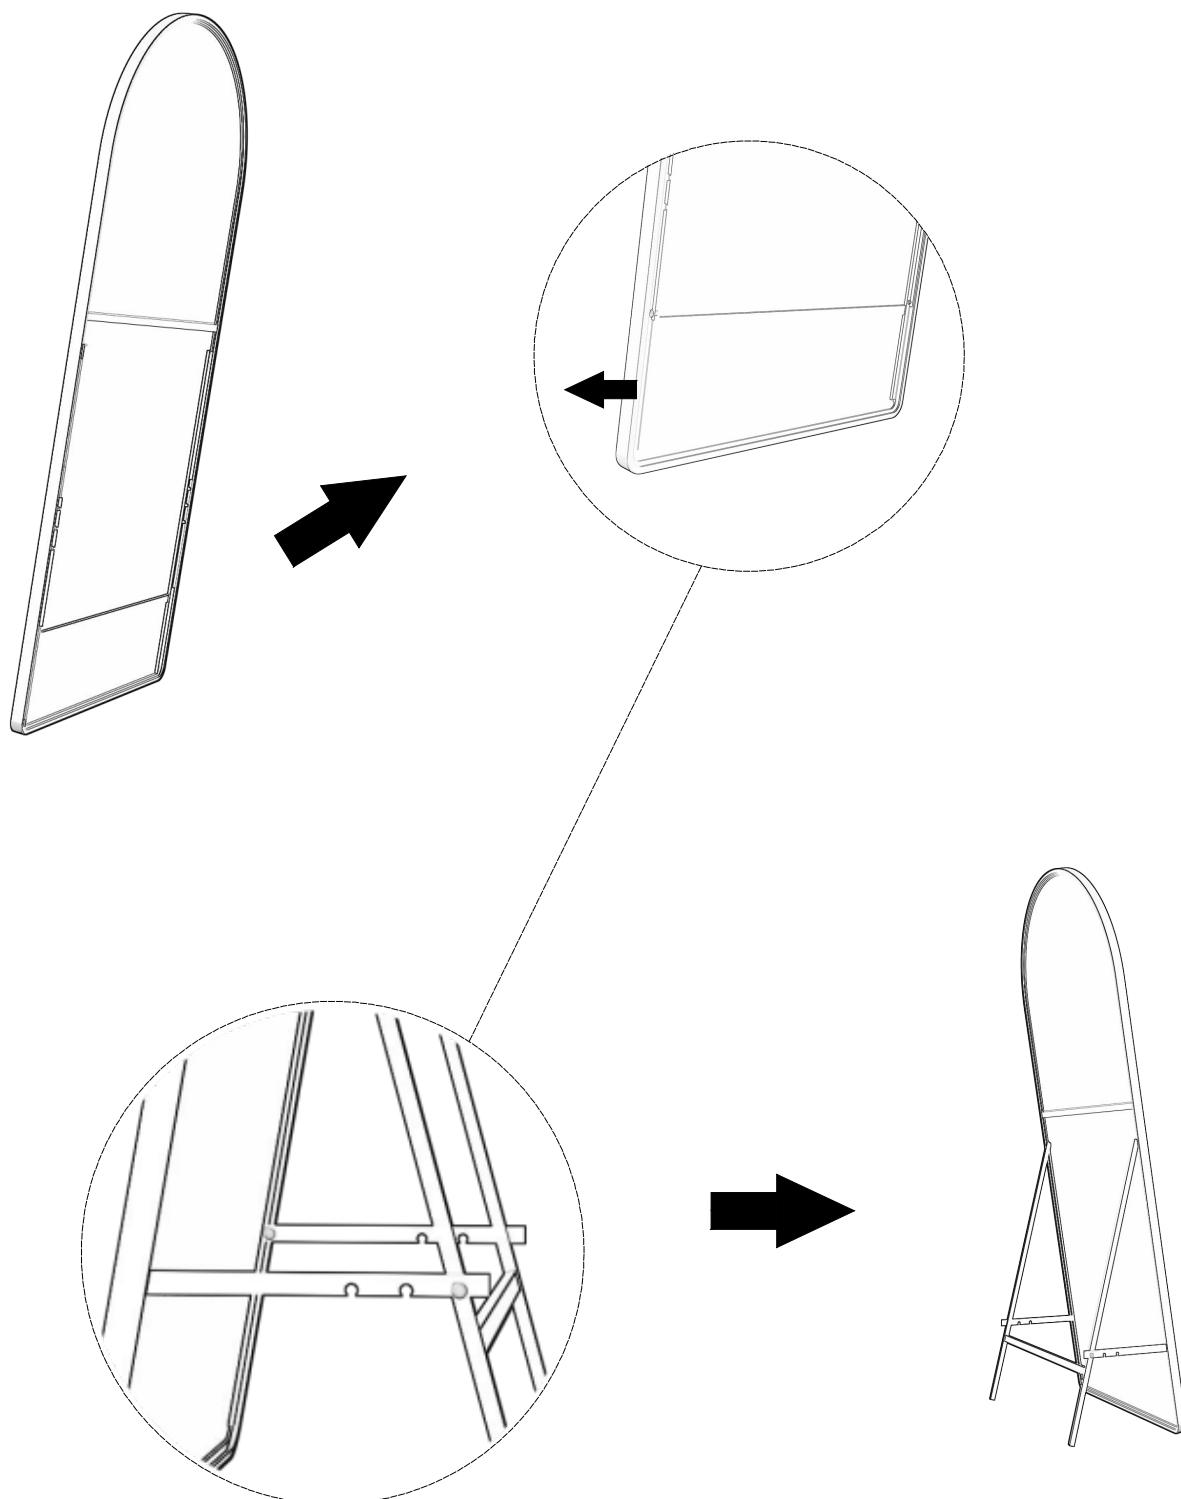

Full-length mirror

Option 2


Wall mirror

Step 1



Put away the bracket



Step 2

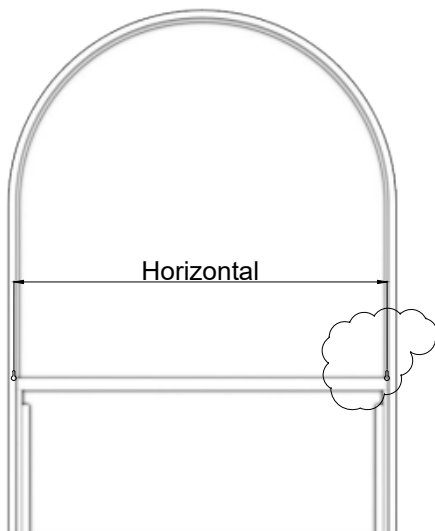

Horizontal

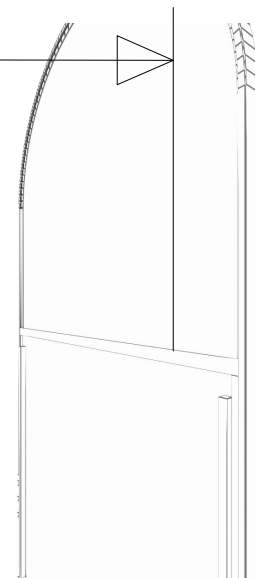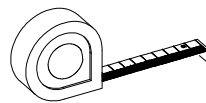


3

Full-length mirror

Step 3

Then screw the mounting brackets in place

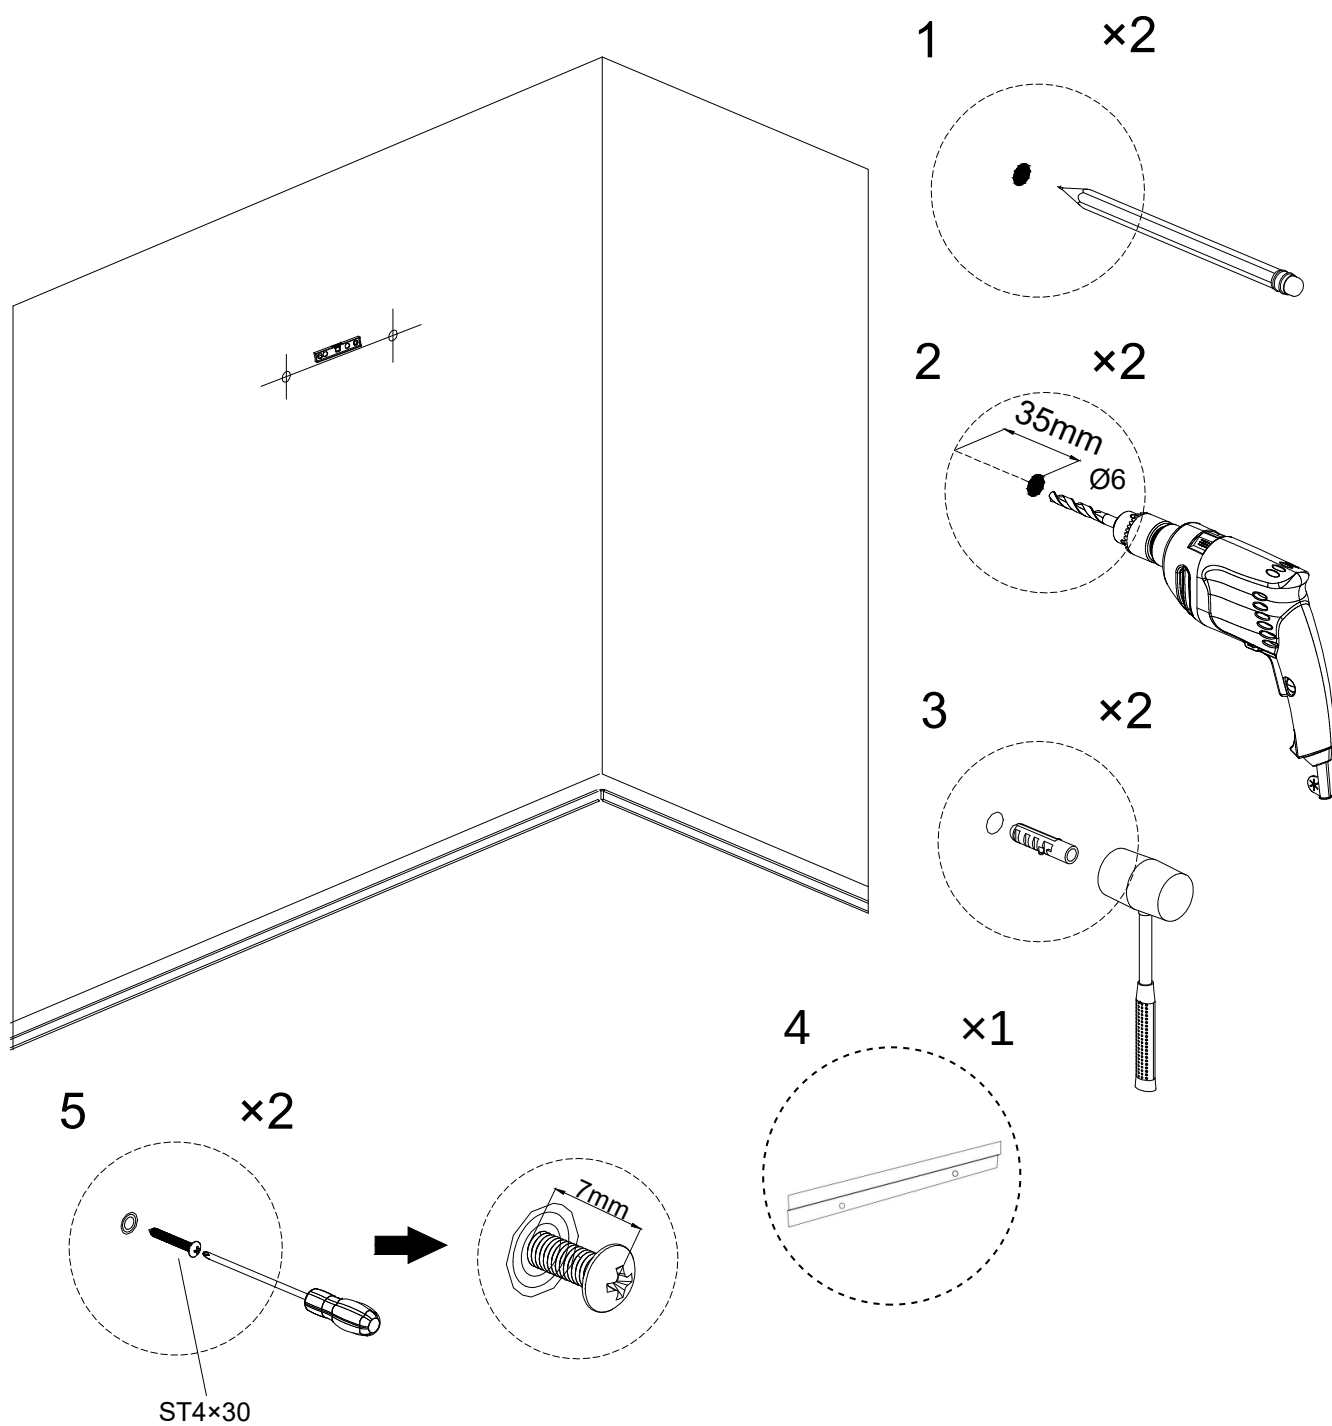

Full-length mirror

Step 4

The mirror frame is mounted with the bottle holes on the two prefabricated screws on the wall.

