




Assembly Instruction



W1138P429332 /W1138P429334

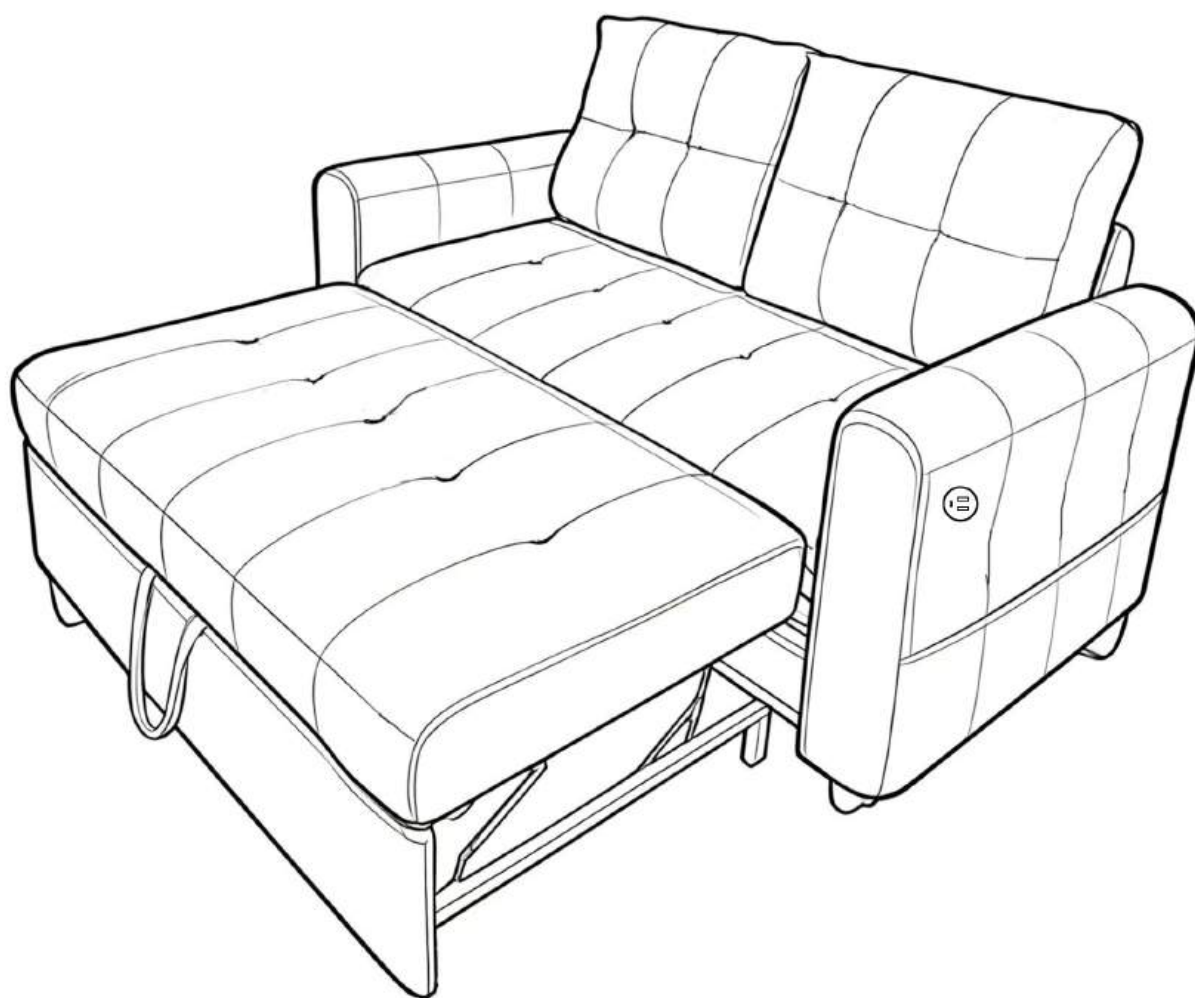


PARTS LIST

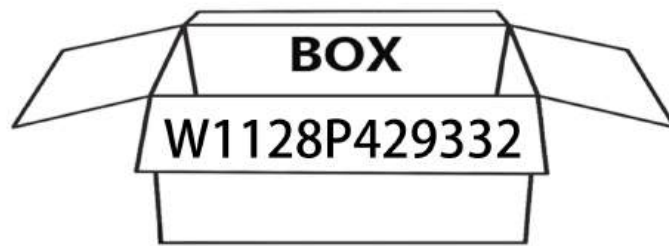





A		Backrest frame	1PC
B		Seat cushion	1PC
C		Seat frame	1PC
D		Rear panel	1PC
E		Pillow	2PCS
H		Front panel	1PC
I		Trundle bed	1Set

J		Backrest hinge	1Set
K		Plastic leg	4PCS
L		Bed frame connecting rod	1PC
M		Movable bed frame	1Set
N		Usb Power	1PC
O		Drawer hinges	1Set
P	 6*25	Screws	4PCS
Q	 6*20	Screws	14PCS
R		Screw	10PCS
S		Wrench	1PC

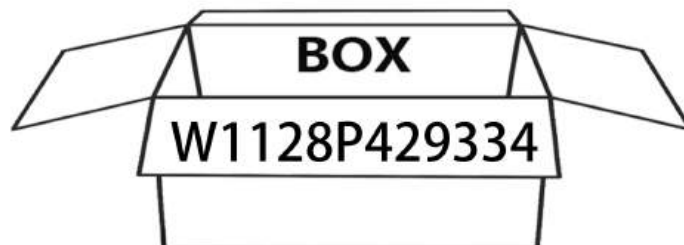


F		Left armrest	1PC
---	---	--------------	-----


G		Right armrest	1PC
---	--	---------------	-----

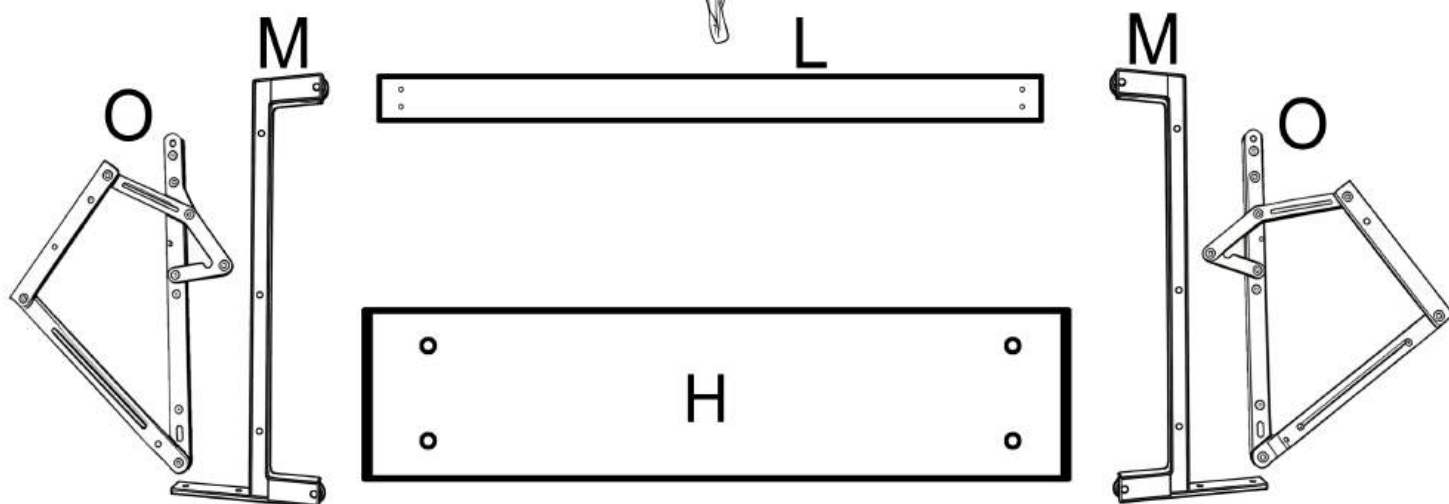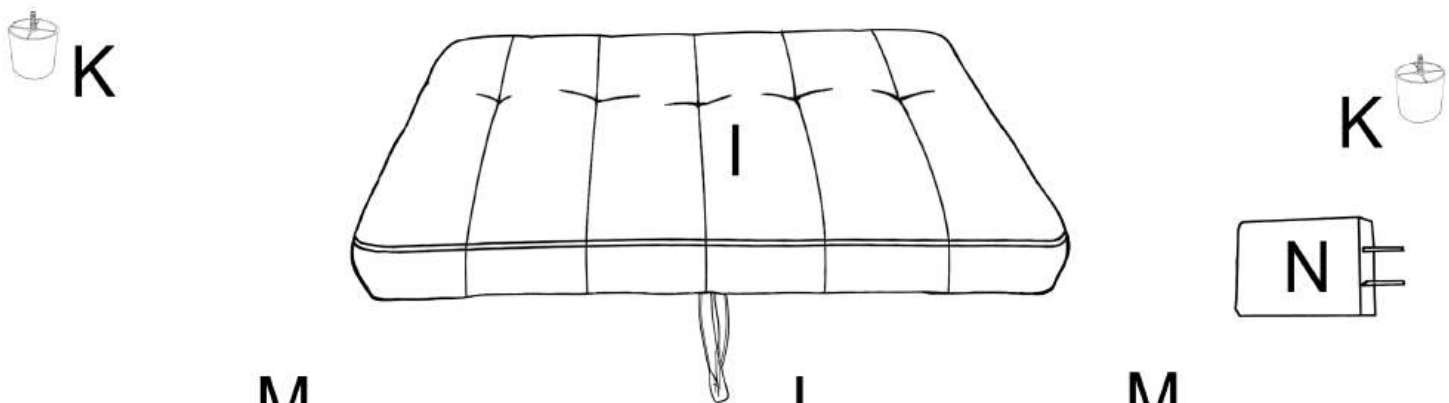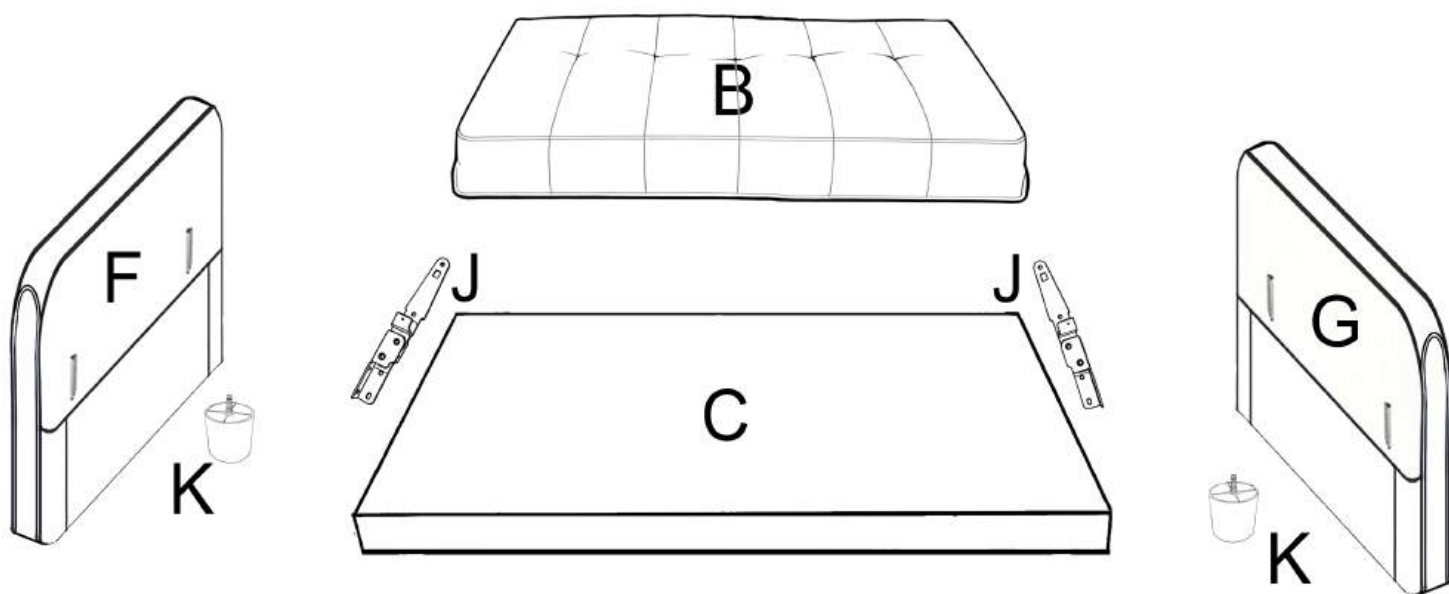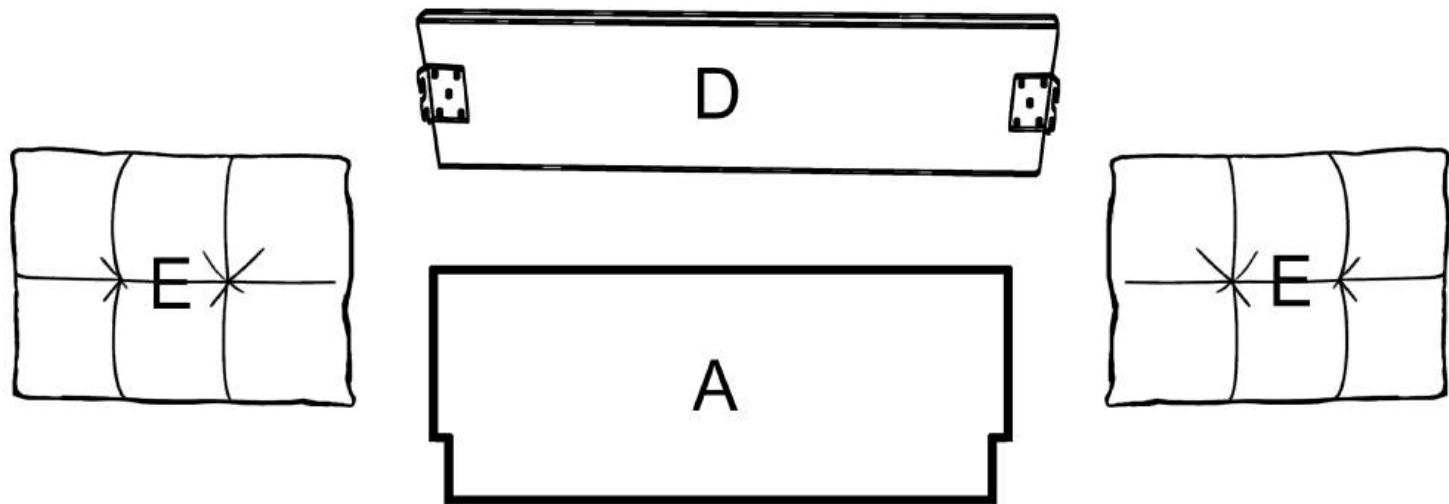


Step 1: Attach 4 plastic leg (K) to the 2 armrest (F & G).

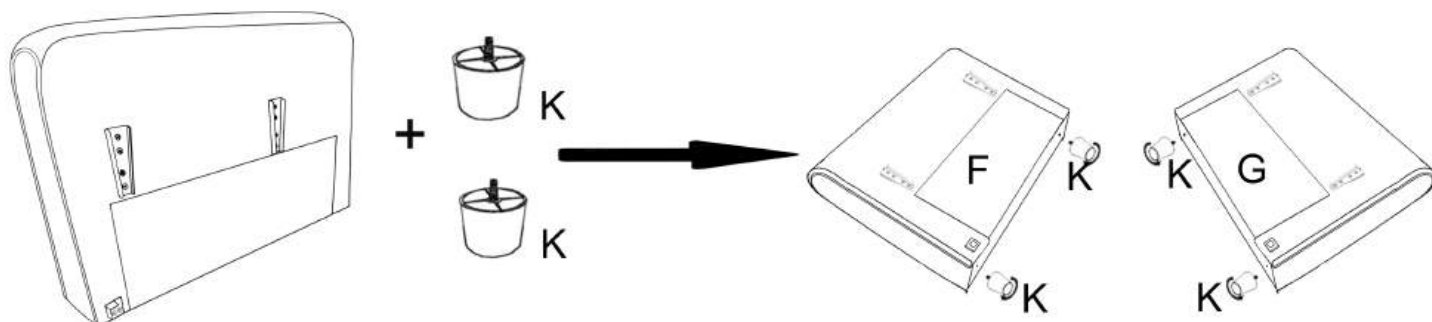


Step 2: Install the backrest hinge (J) onto the seat frame (B), ensuring correct orientation of left and right components as indicated in the accompanying diagram.

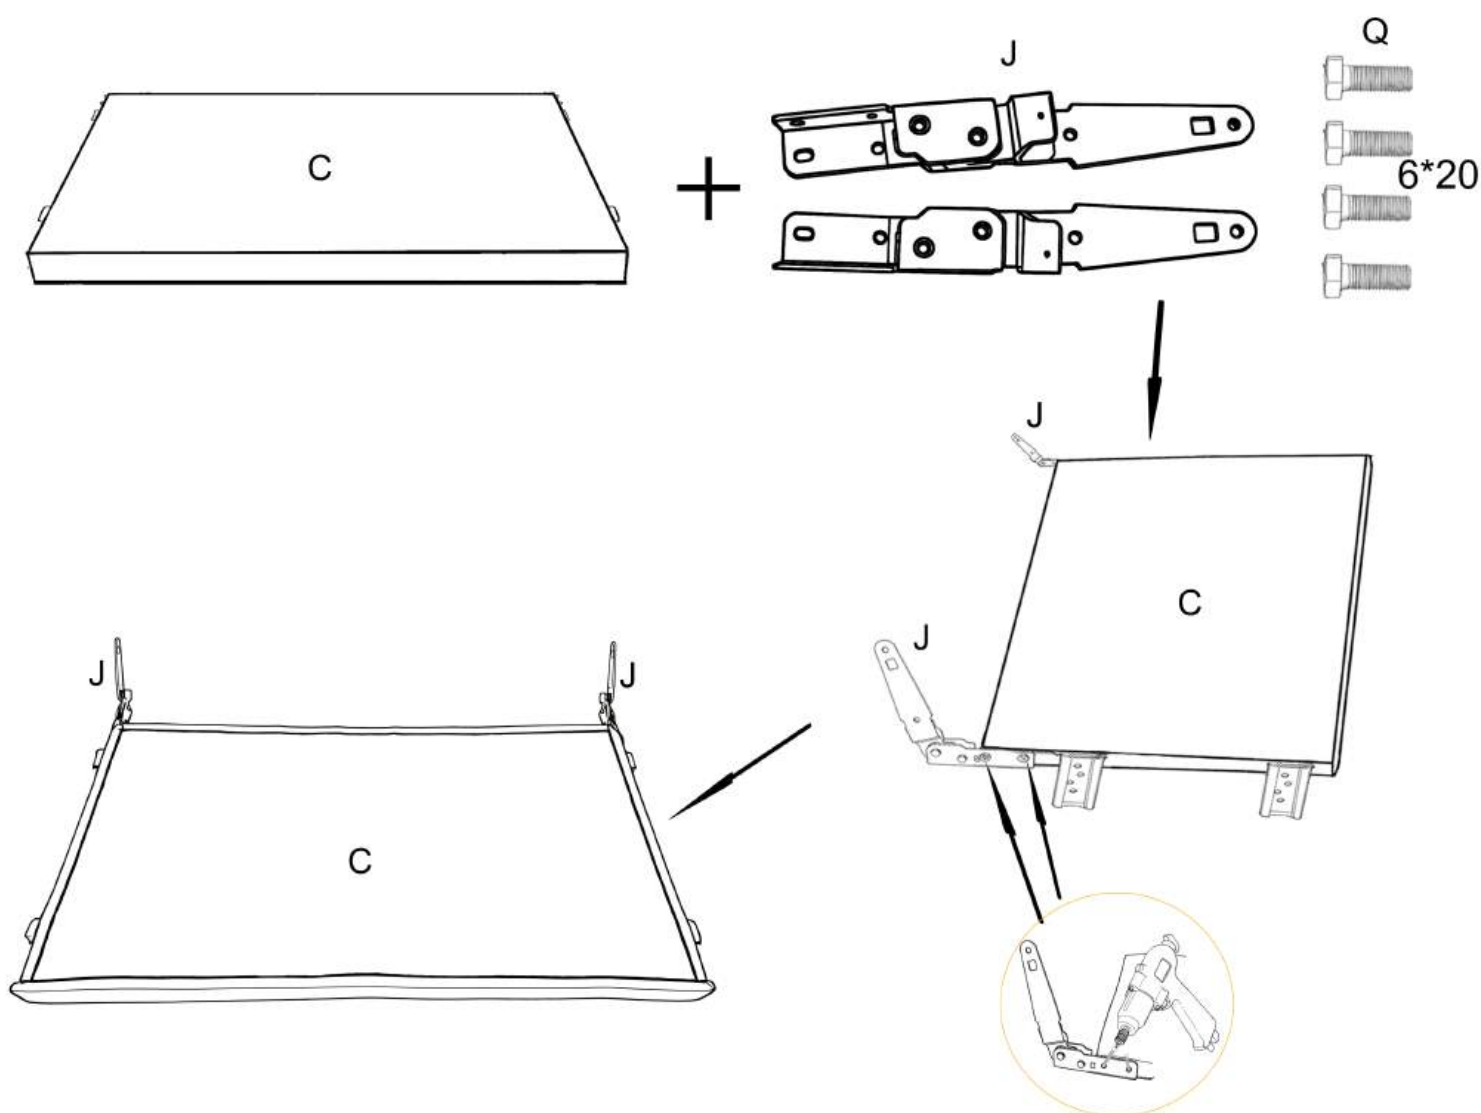


Step 3: Securely fasten the assembled armrests to both sides of the seat cushion.

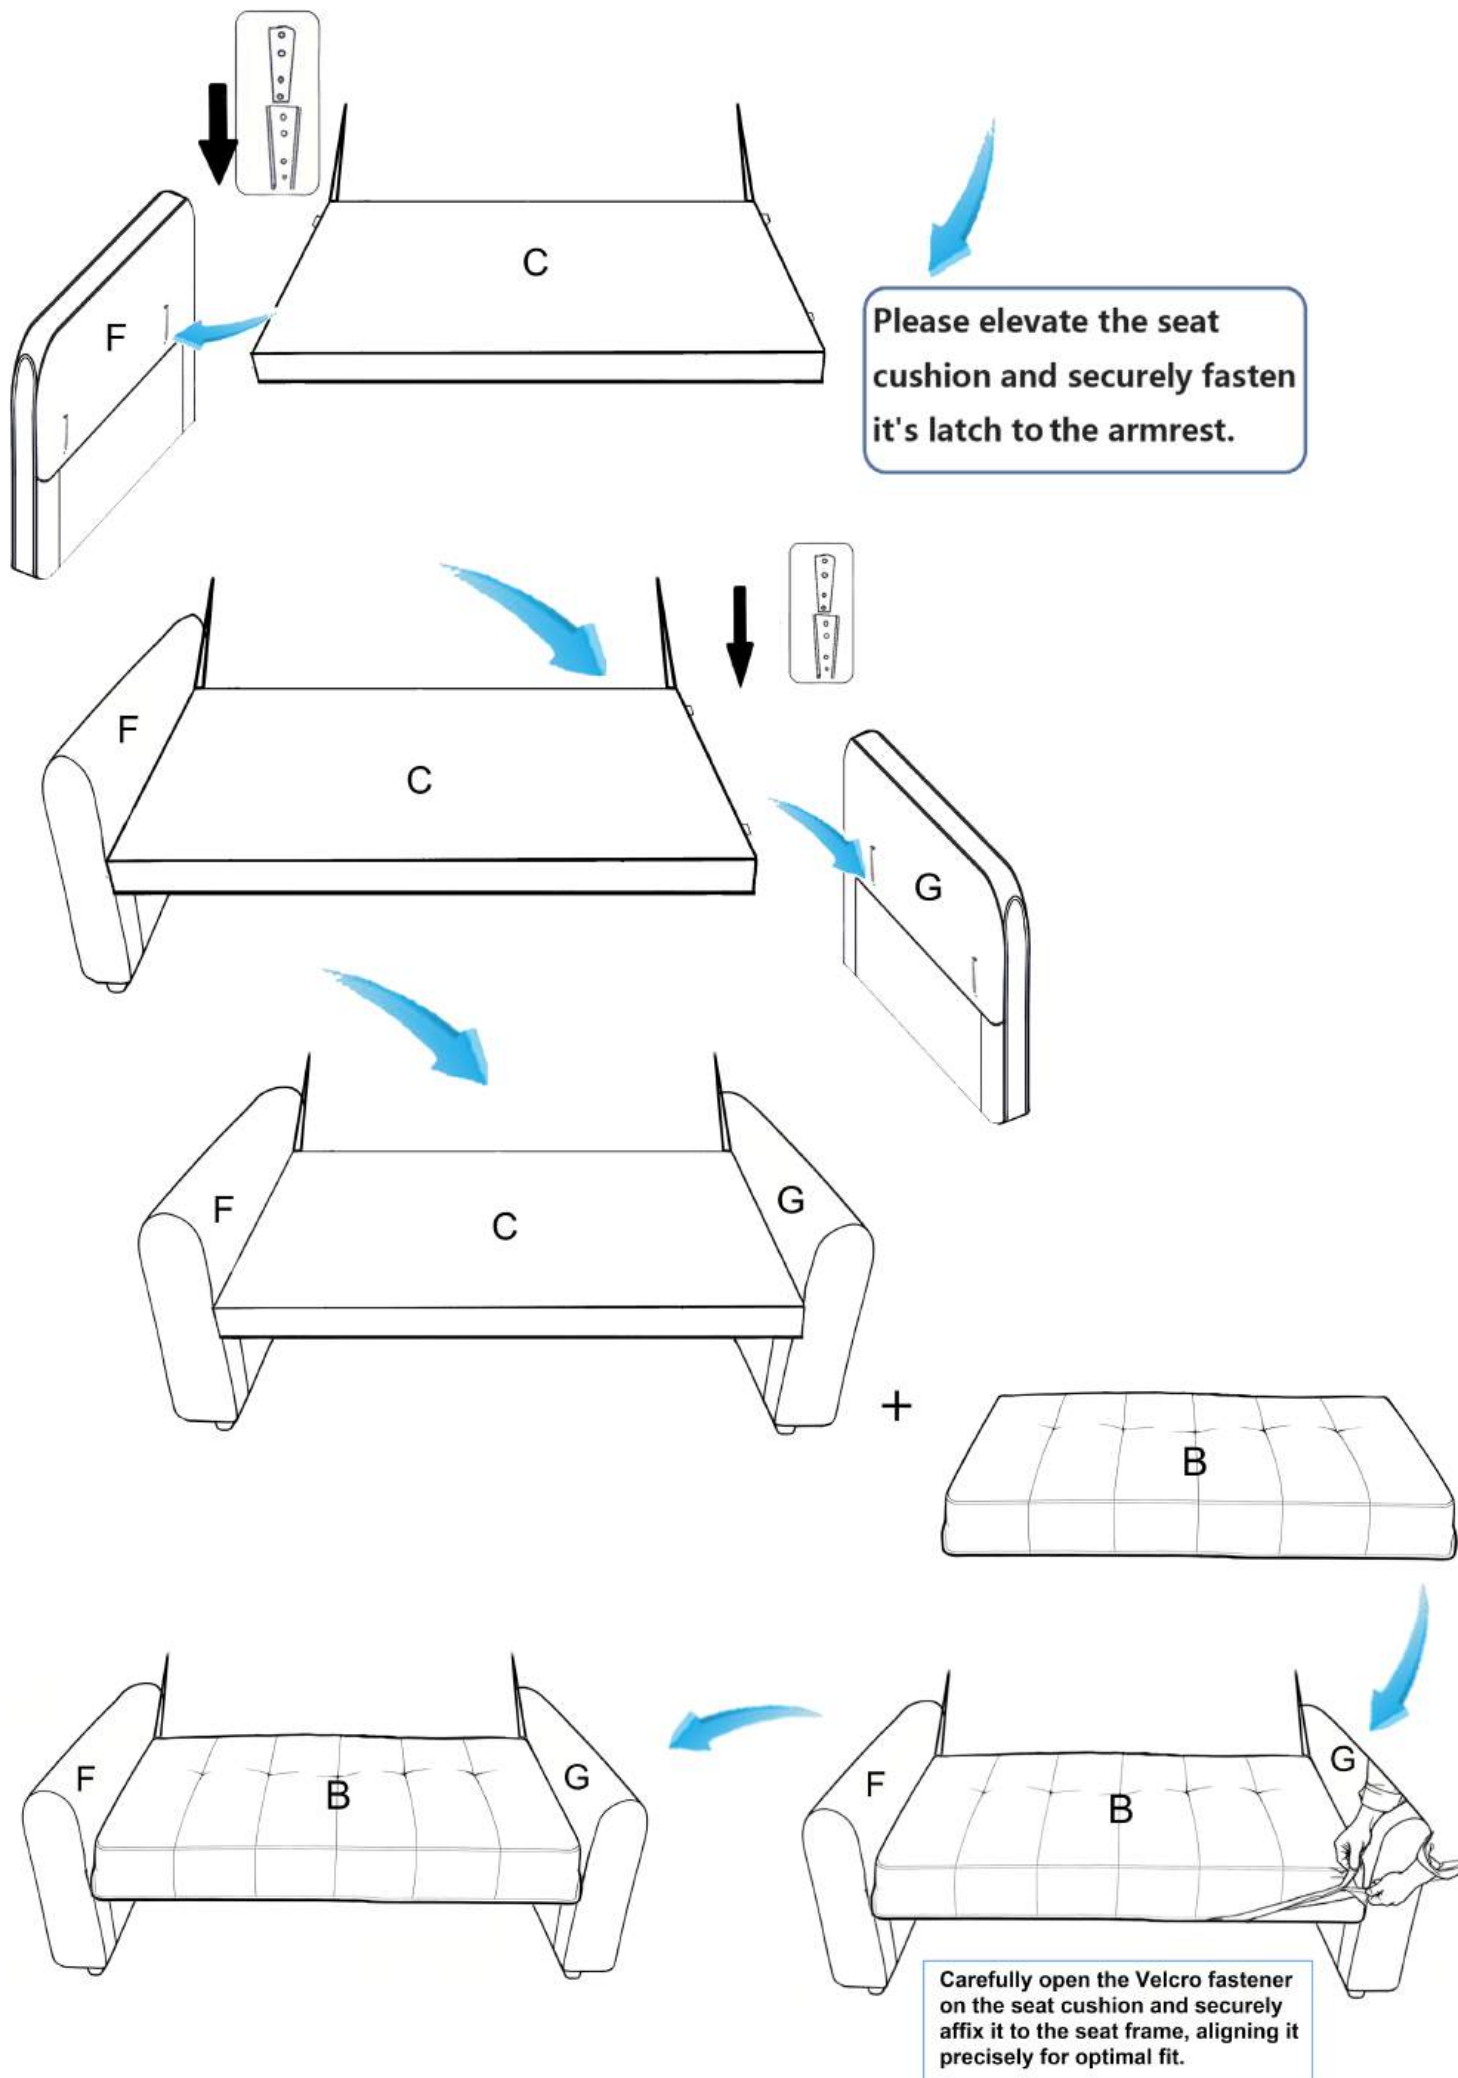


Step 4: Mount the back frame (A) onto the installed backrest hinge (J).

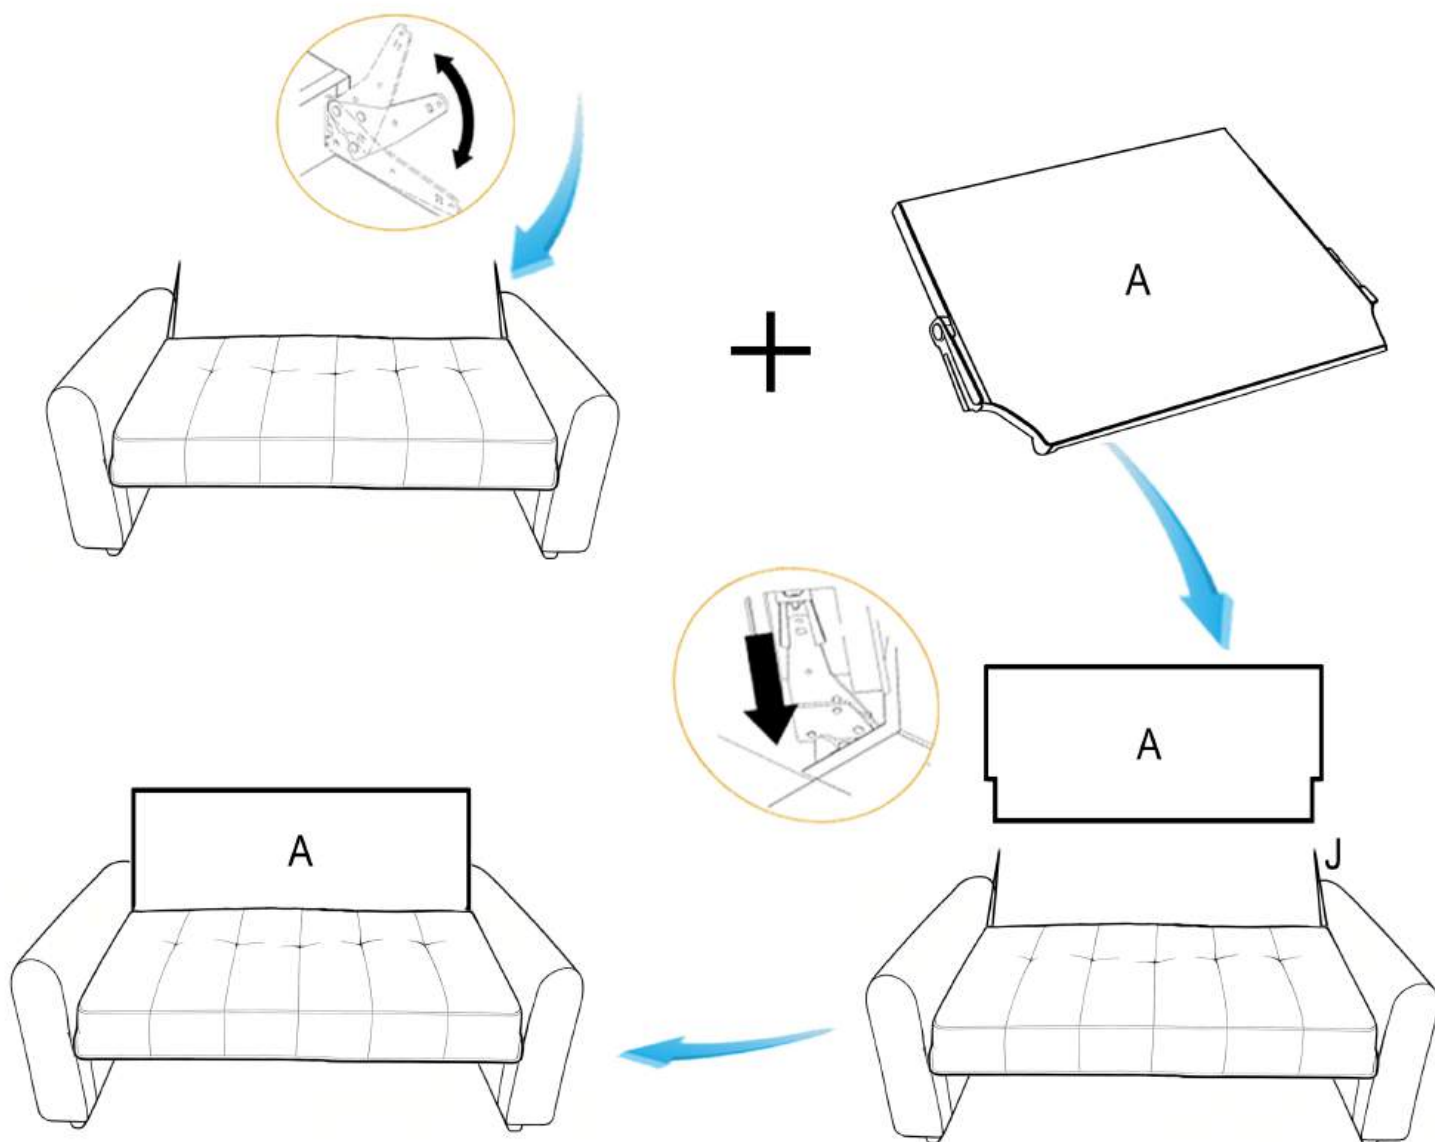


Step 5: Use a wrench to fix the back board to the rear nut of the armrests.

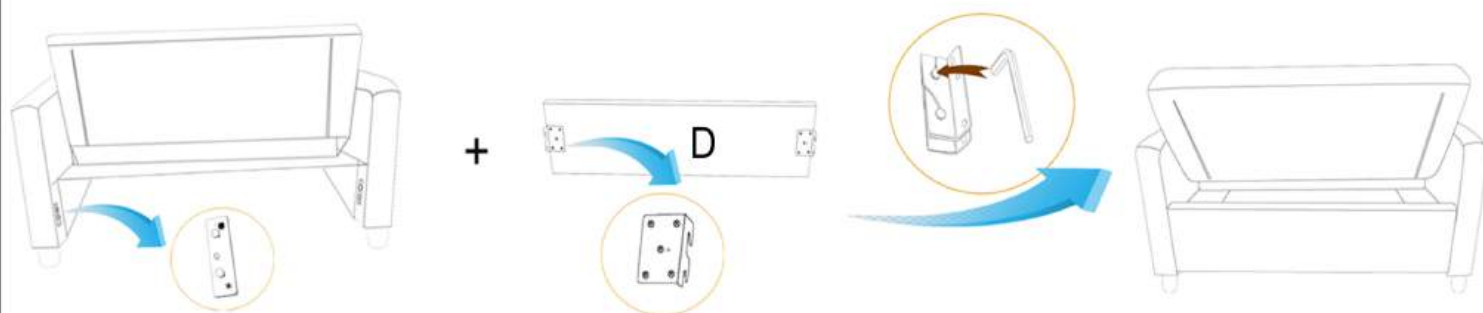

Step 6: Secure the drawer hinge (O) to the movable bed frame (M) using screws. Subsequently, attach the bed frame connecting rod (L) to the rear end of the movable bed frame (M), followed by fixing the front baffle (H) to the front end of the movable bed frame (M) with screws (P). Take care to use the appropriate screw size as specified.

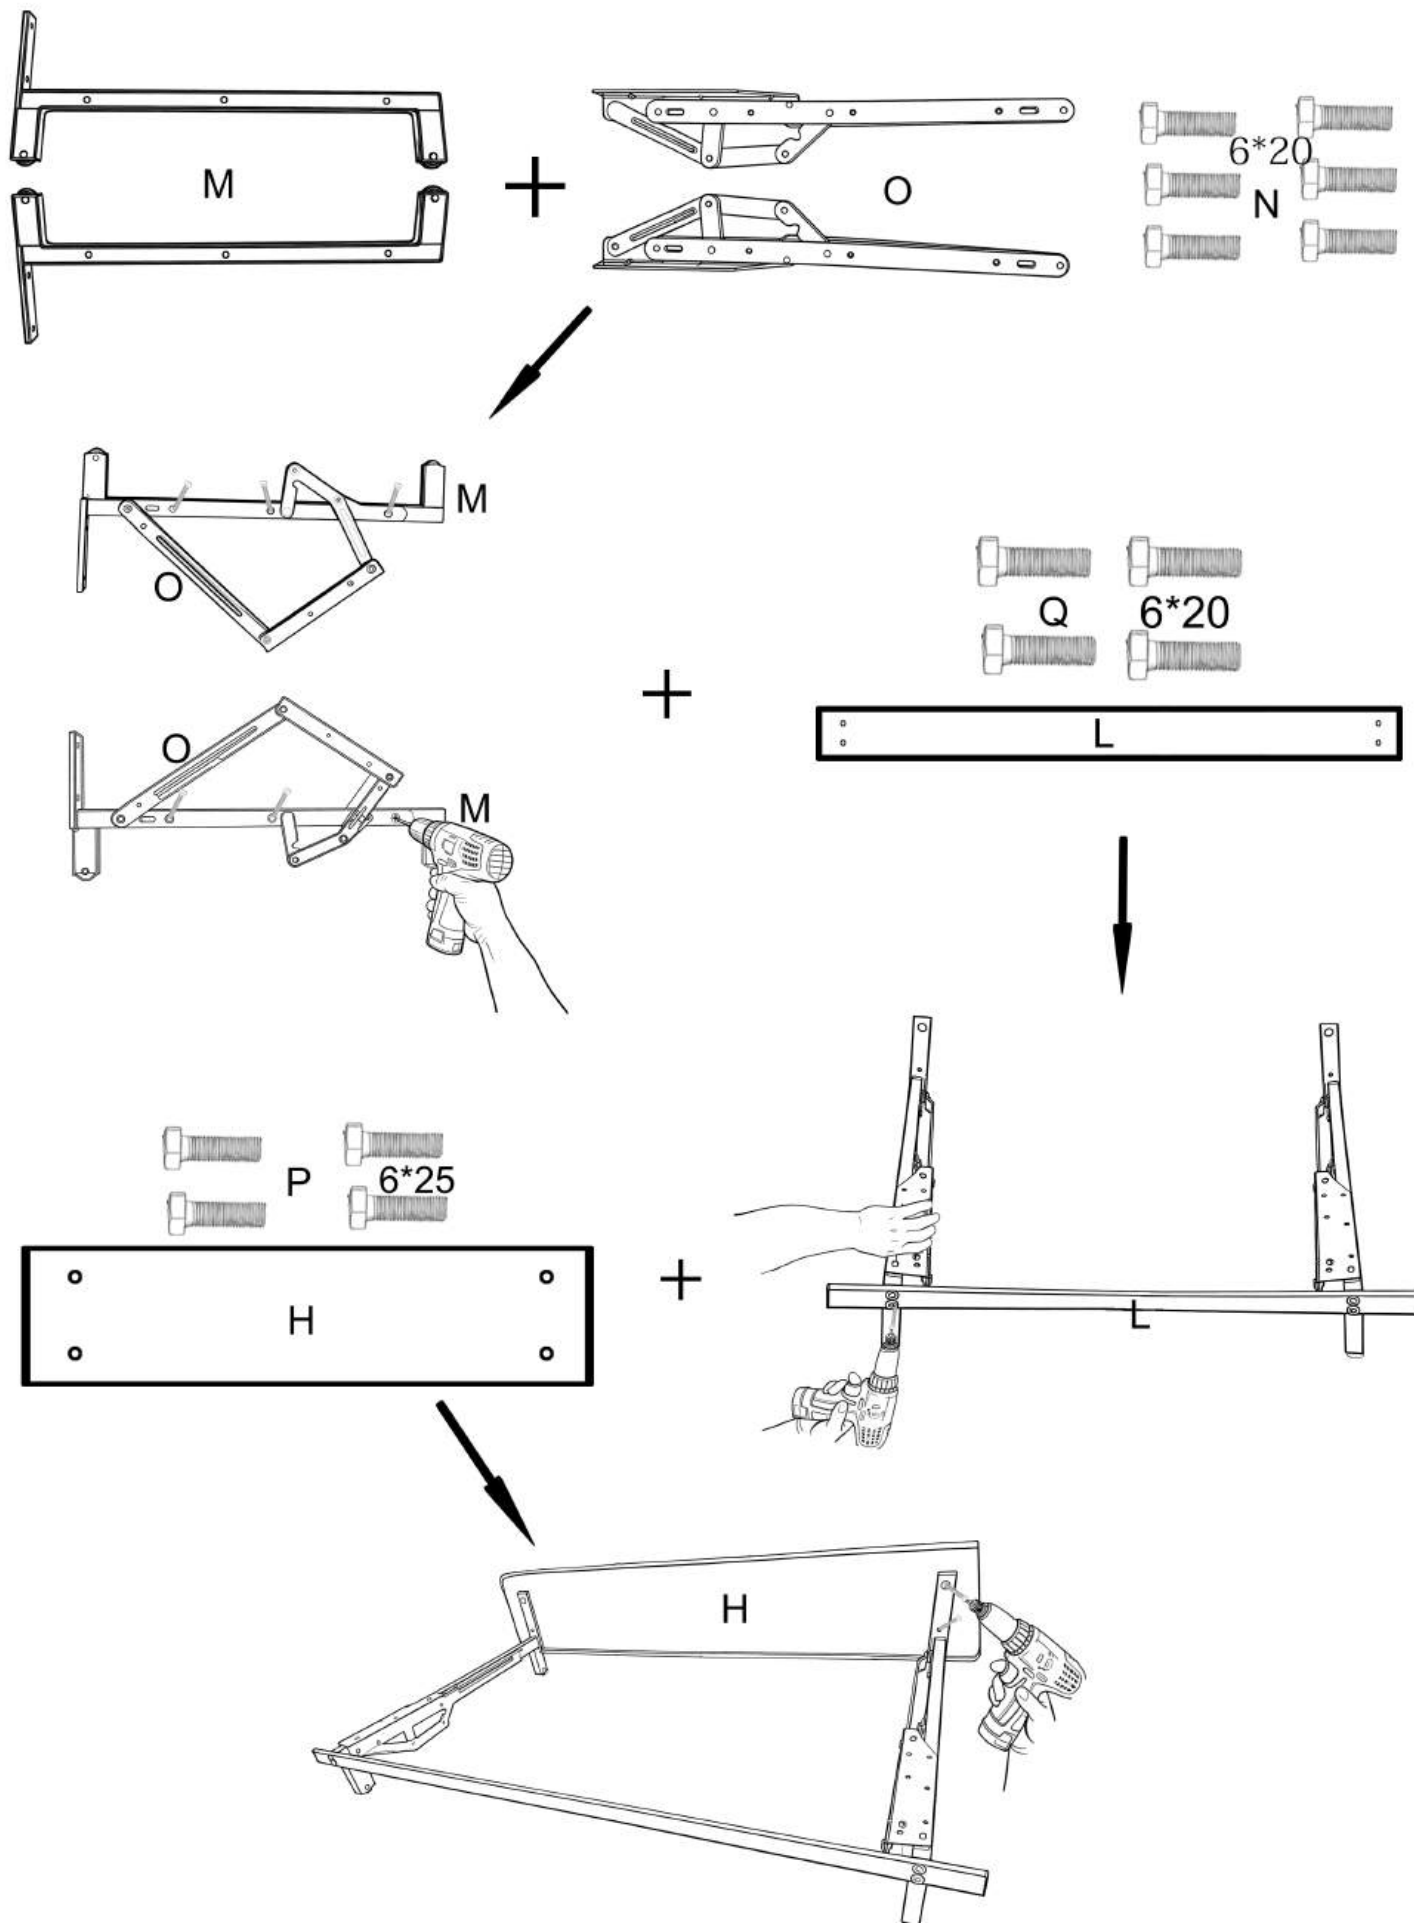

Step 7: Fasten the opposite end of the drawer hinge (O) to the designated hole on the movable bed (I) using screws (R) .

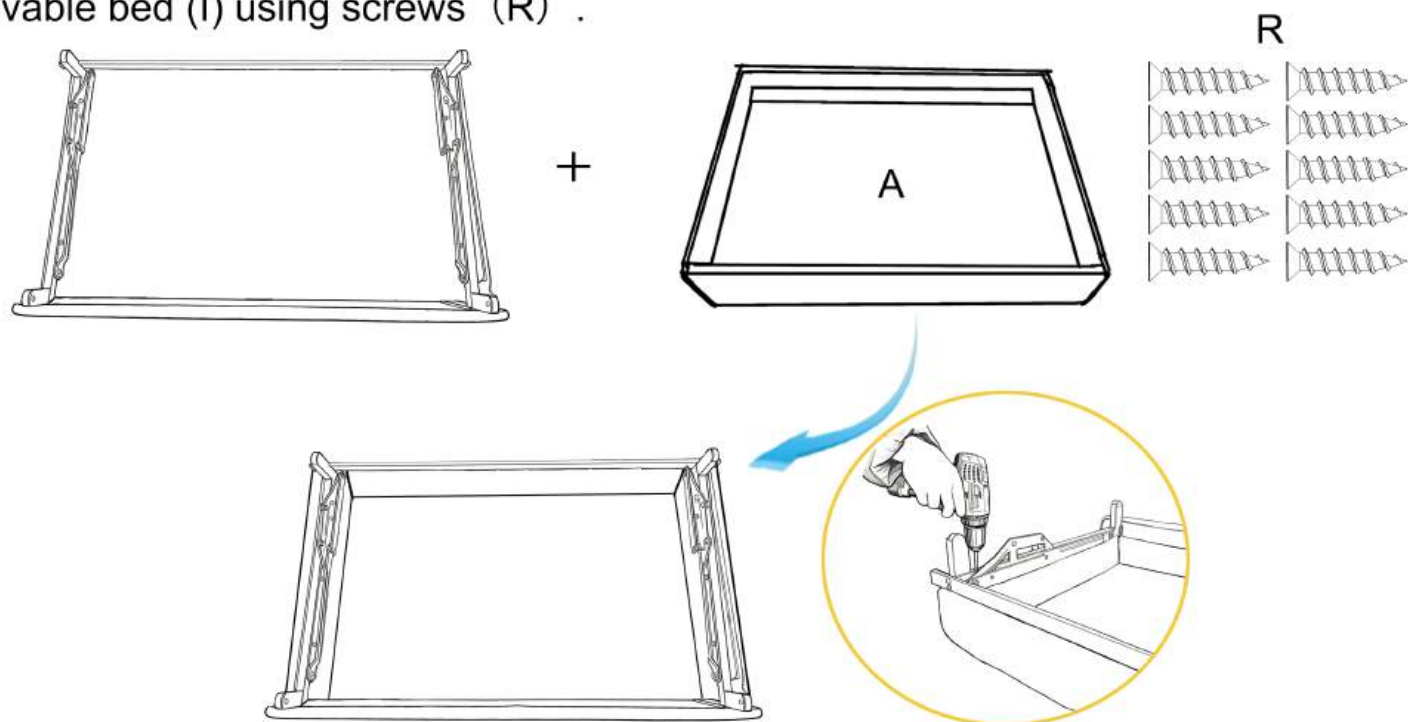

Step 8 : Place the trundle bed under the seat cushion, Please meticulously avoid the positioning components in the armrests.

