

DA0356BS01A
DA0356GR01A
DA0356HS01A

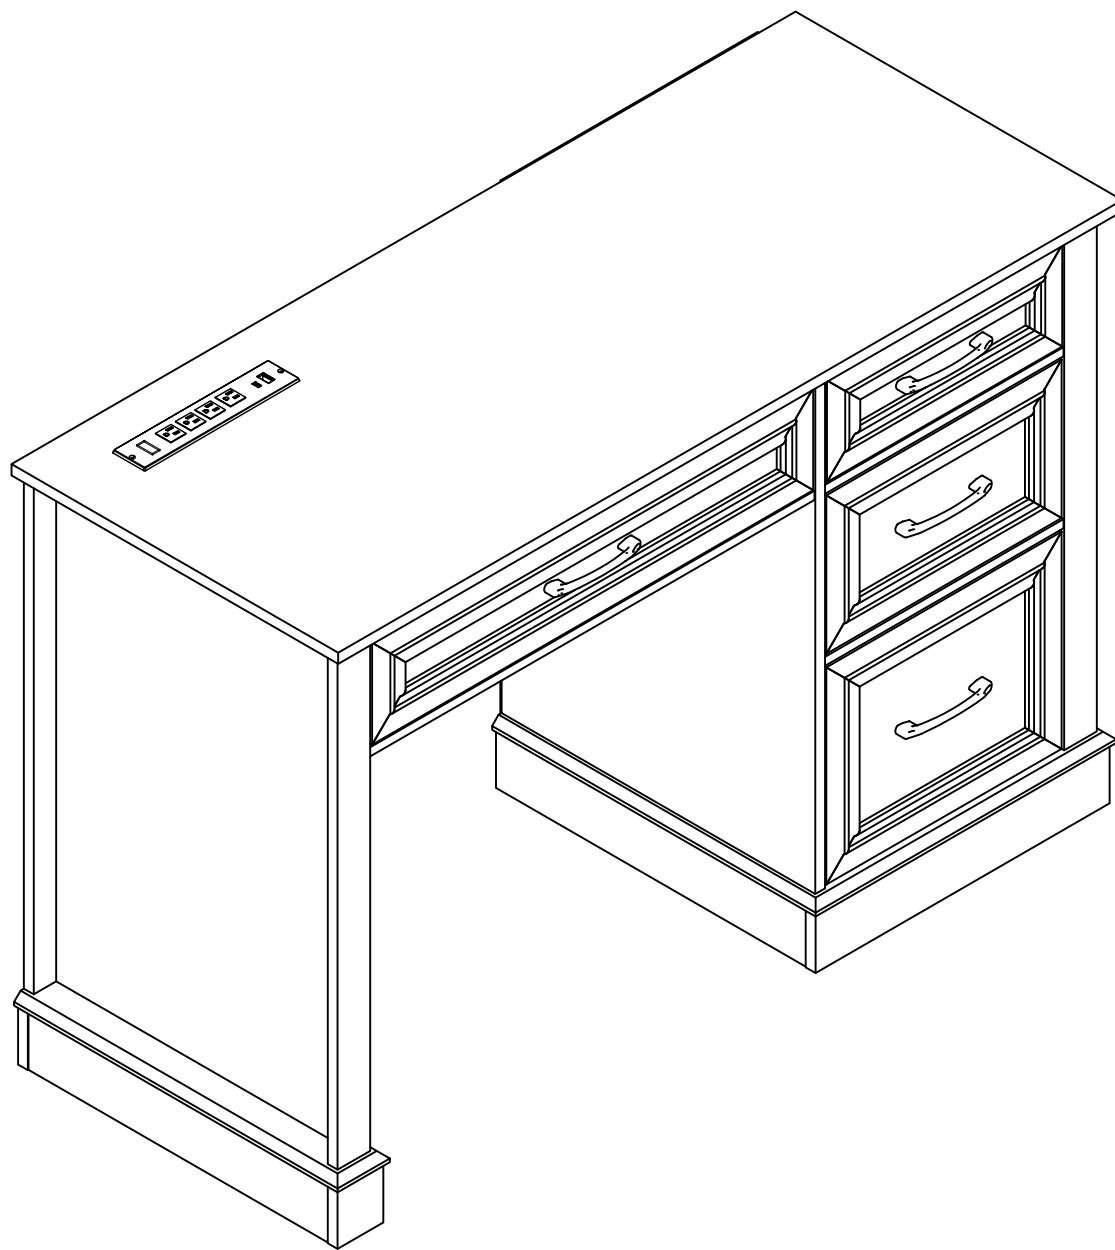


As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

hosoteservice@gmail.com

Our professional after-sales team will serve you online all day.

Before You Start



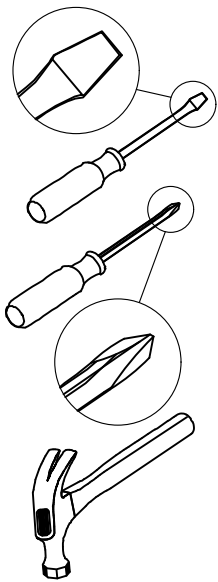


- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.

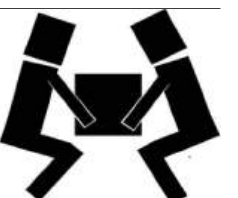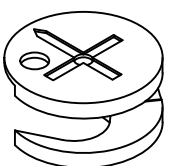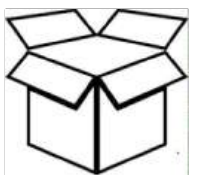


Board Identification


Not actual size

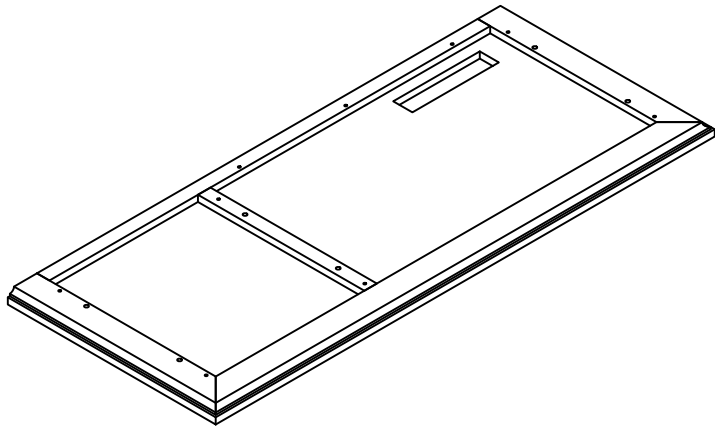


①
TOP
Qty:1

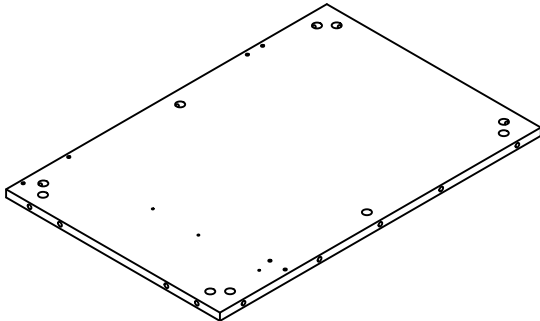


②
LEFT SIDE PANE
Qty:1

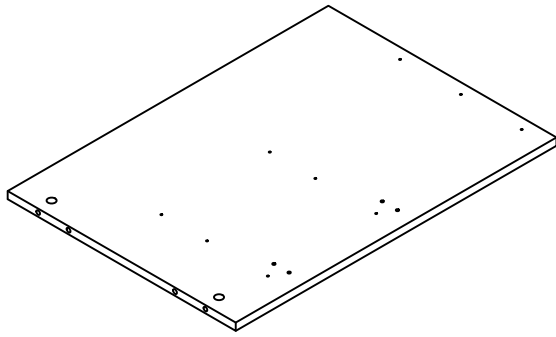


③
MIDDLE SIDE PANE
Qty:1

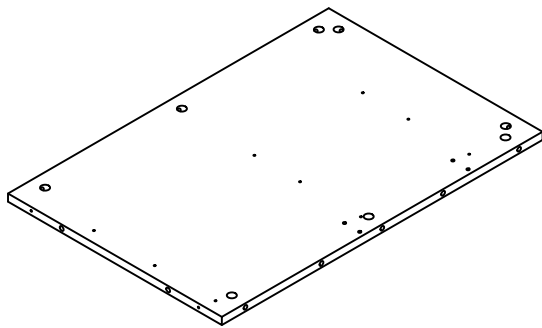


④
RIGHT SIDE PANEL
Qty:1

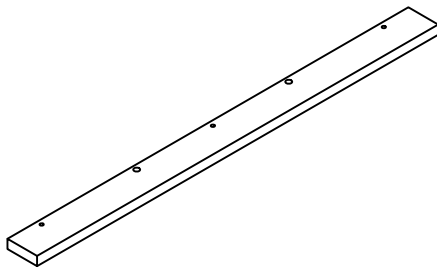


⑤
SLAT
Qty:3

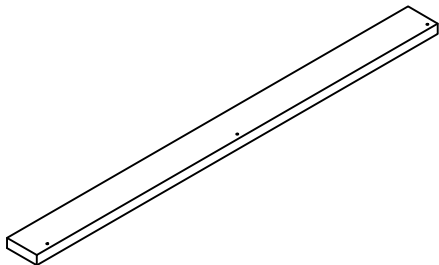


⑥
SLAT
Qty:1

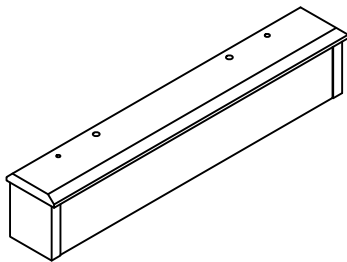

⑦
LEFT BOTTOM
Qty:1

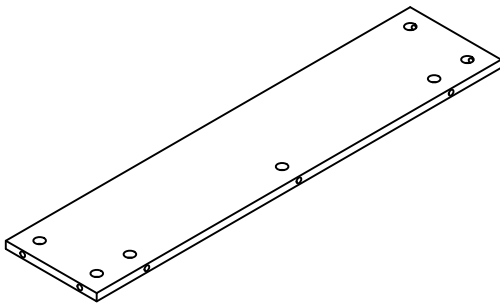


⑧
DESK BACK PANE
Qty:1

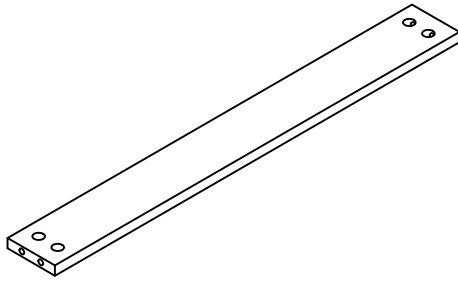

⑨
FIXED SHELF
Qty:1


Board Identification

Not actual size

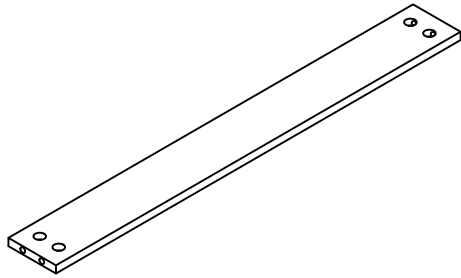


10

FIXED SHEL
Qty:1

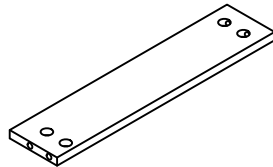


11

FIXED SHELF
Qty:2

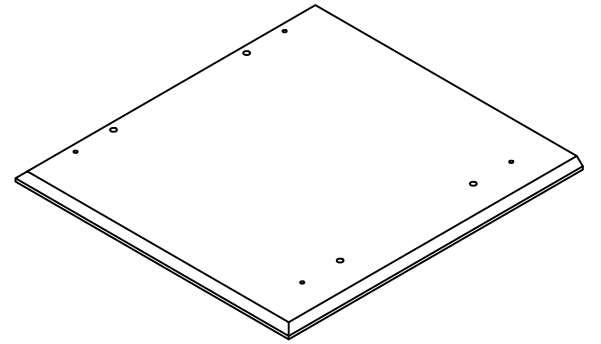


12

RIGHT BOTTOM
Qty:1

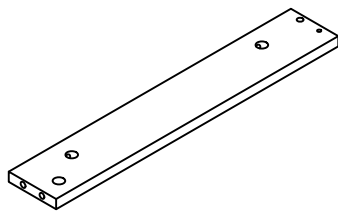


13

BOTTOM LEFT RAI
Qty:1

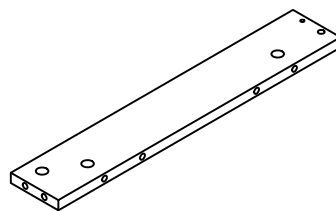


14

BOTTOM RIGHT RA
Qty:1

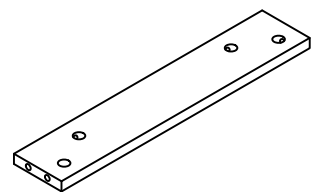


15

BOTTOM BACK RAI
Qty:1

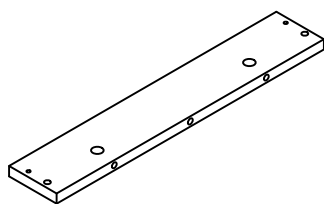


16

BOTTOM FRONT RAIL
Qty:1

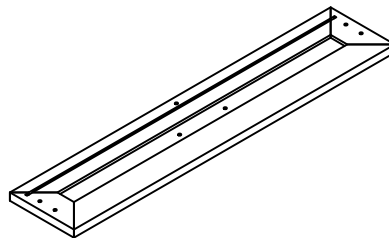

17

DRAWER FRONT
Qty:1

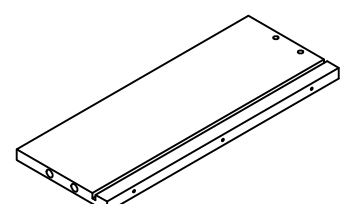


18

LEFT DRAWER SIDE
Qty:3


Board Identification

Not actual size

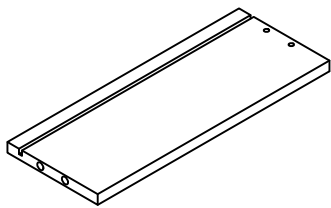


19

RIGHT DRAWER SIDE
Qty:3

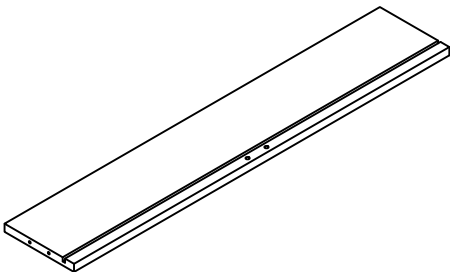


20

DRAWER BACK
Qty:1

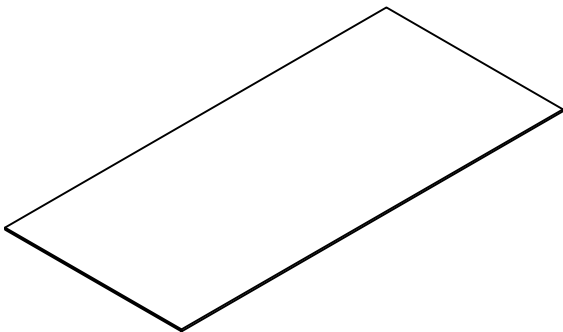


21

DRAWER BOTTOM
Qty:1

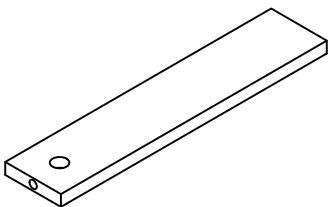


22

DRAWER SUPPORT
Qty:1

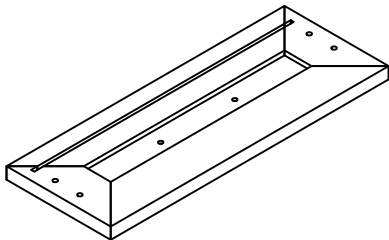


23

DRAWER FRONT
Qty:1

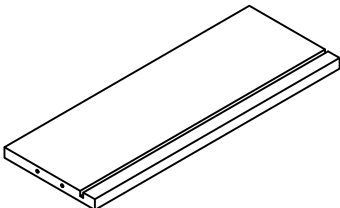


24

DRAWER BACK
Qty:2

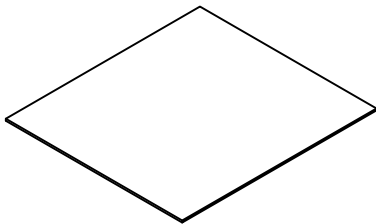


25

DRAWER BOTTOM
Qty:2

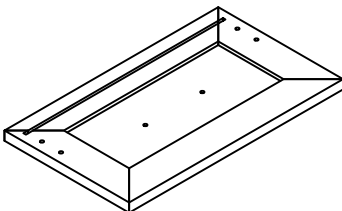

26

DRAWER FRONT
Qty:1

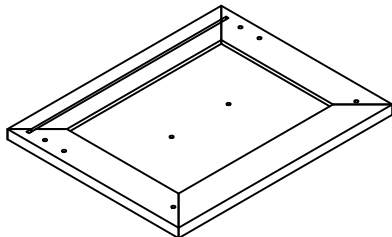


27

DRAWER FRONT
Qty:1


Board Identification

Not actual size

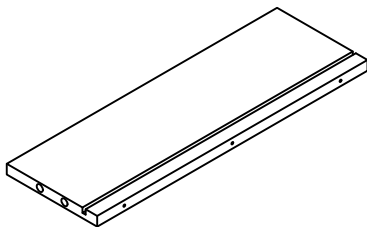


28

LEFT DRAWER SIDE
Qty:1

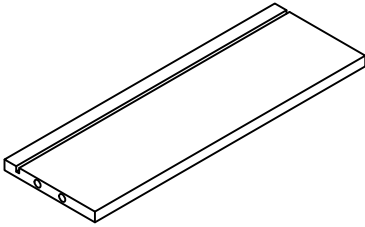


29

DRAWER FRONT
Qty:1

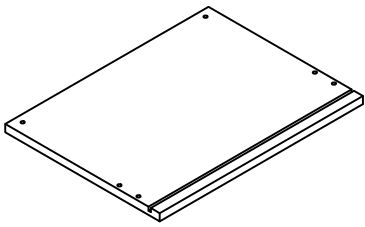


30

DRAWER BACK
Qty:1

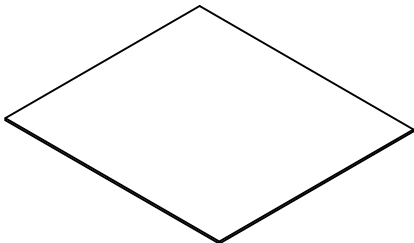

31

DRAWER BOTTOM
Qty:1

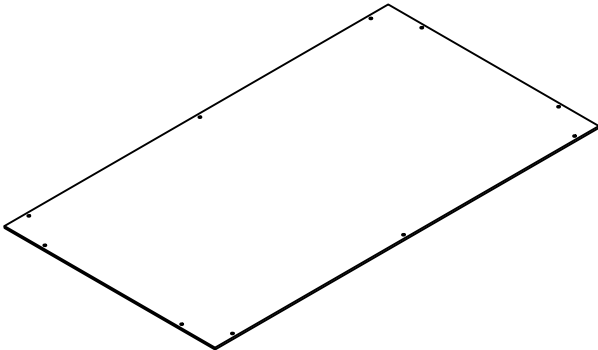

32

BACK PANEL
Qty:1

Part List



Ø15X9.5mm

A

X72

CAM LOCK
spare:3




Ø6.5X35mm

B

X72

CAM BOLT
spare:3




Ø8X30mm

C

X30

WOOD DOWEL
spare:3




Ø3.5X14mm

D

X48

SCREW
spare:3




Ø4X35mm

E

X22

SCREW
spare:2




Ø3X12mm

F

X2

SCREW
spare:1




Ø3X14mm

G

X9

SCREW
spare:1




Ø4X7mm

H

X8

SCREW
spare:1

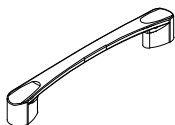

130X14X21mm

I

X4

HANDLE




Ø21mm

J

X32

PERFECT STICKER
spare:3

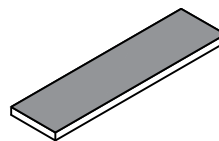


40X14X2mm

K

X8


NON SLIP MATS
spare:1

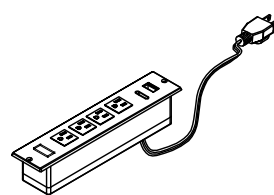

L

X1

POWER STRIP

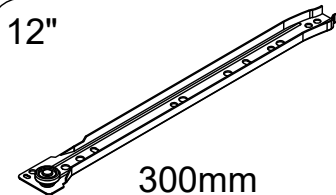


12"

300mm

M-CL

X3

LEFT CABINET MEMBER

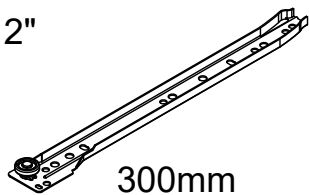


12"

300mm

M-CR

X3

RIGHT CABINET MEMBER

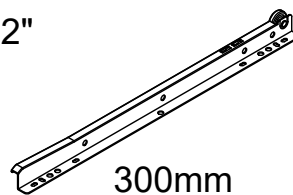


12"

300mm

M-DL

X3

LEFT DRAWER RUNNER

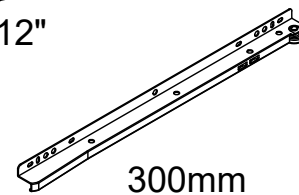


12"

300mm

M-DR

X3

RIGHT DRAWER RUNNER

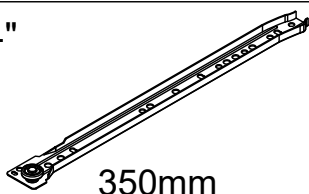


14"

350mm

N-CL

X1

LEFT CABINET MEMBER

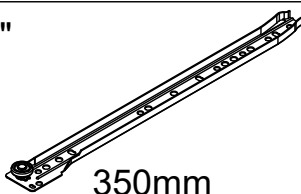


14"

350mm

N-CR

X1

RIGHT CABINET MEMBER

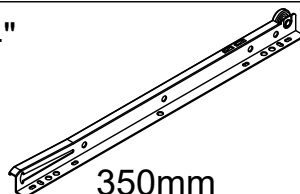


14"

350mm

N-DL

X1

LEFT DRAWER RUNNER

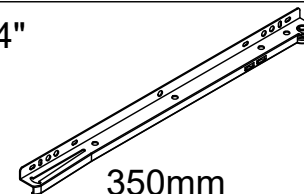

14"


350mm

N-DR


X1

RIGHT DRAWER RUNNER


Part List

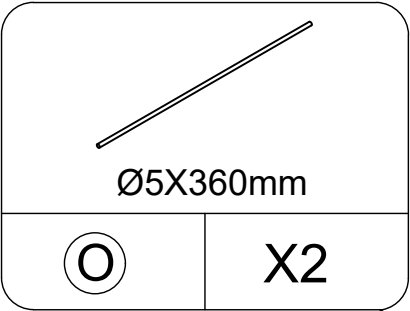

SOLID STEEL BARS

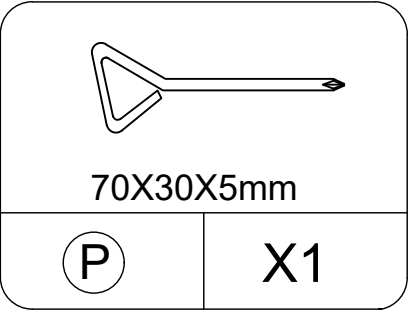


HEX KEY

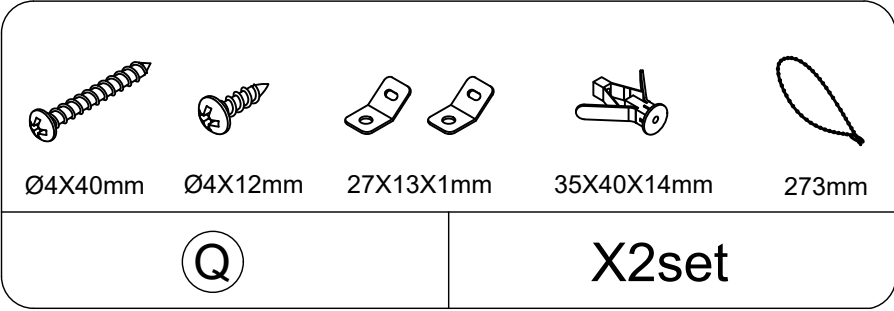

TIPPING RESTRAINT
HARDWARE KIT


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.








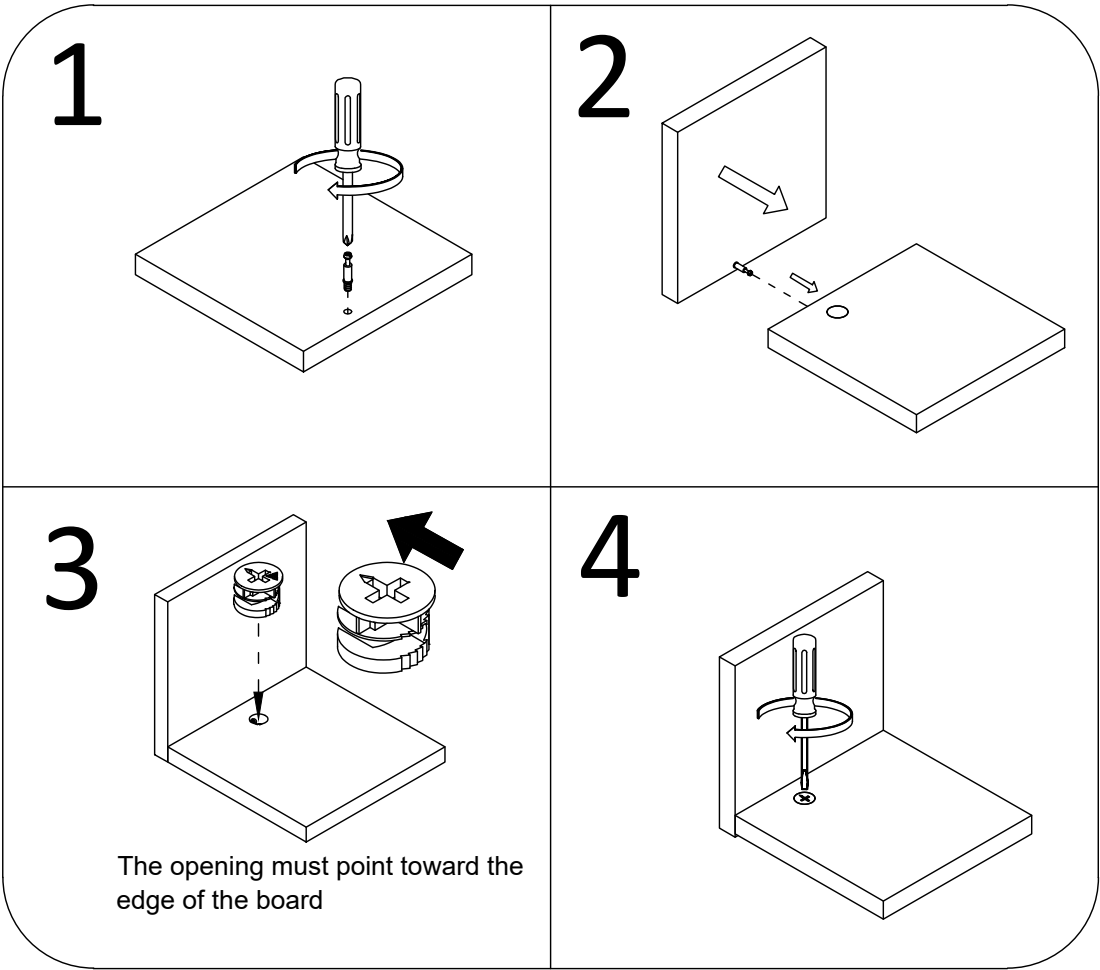


Board Identification




Not actual size

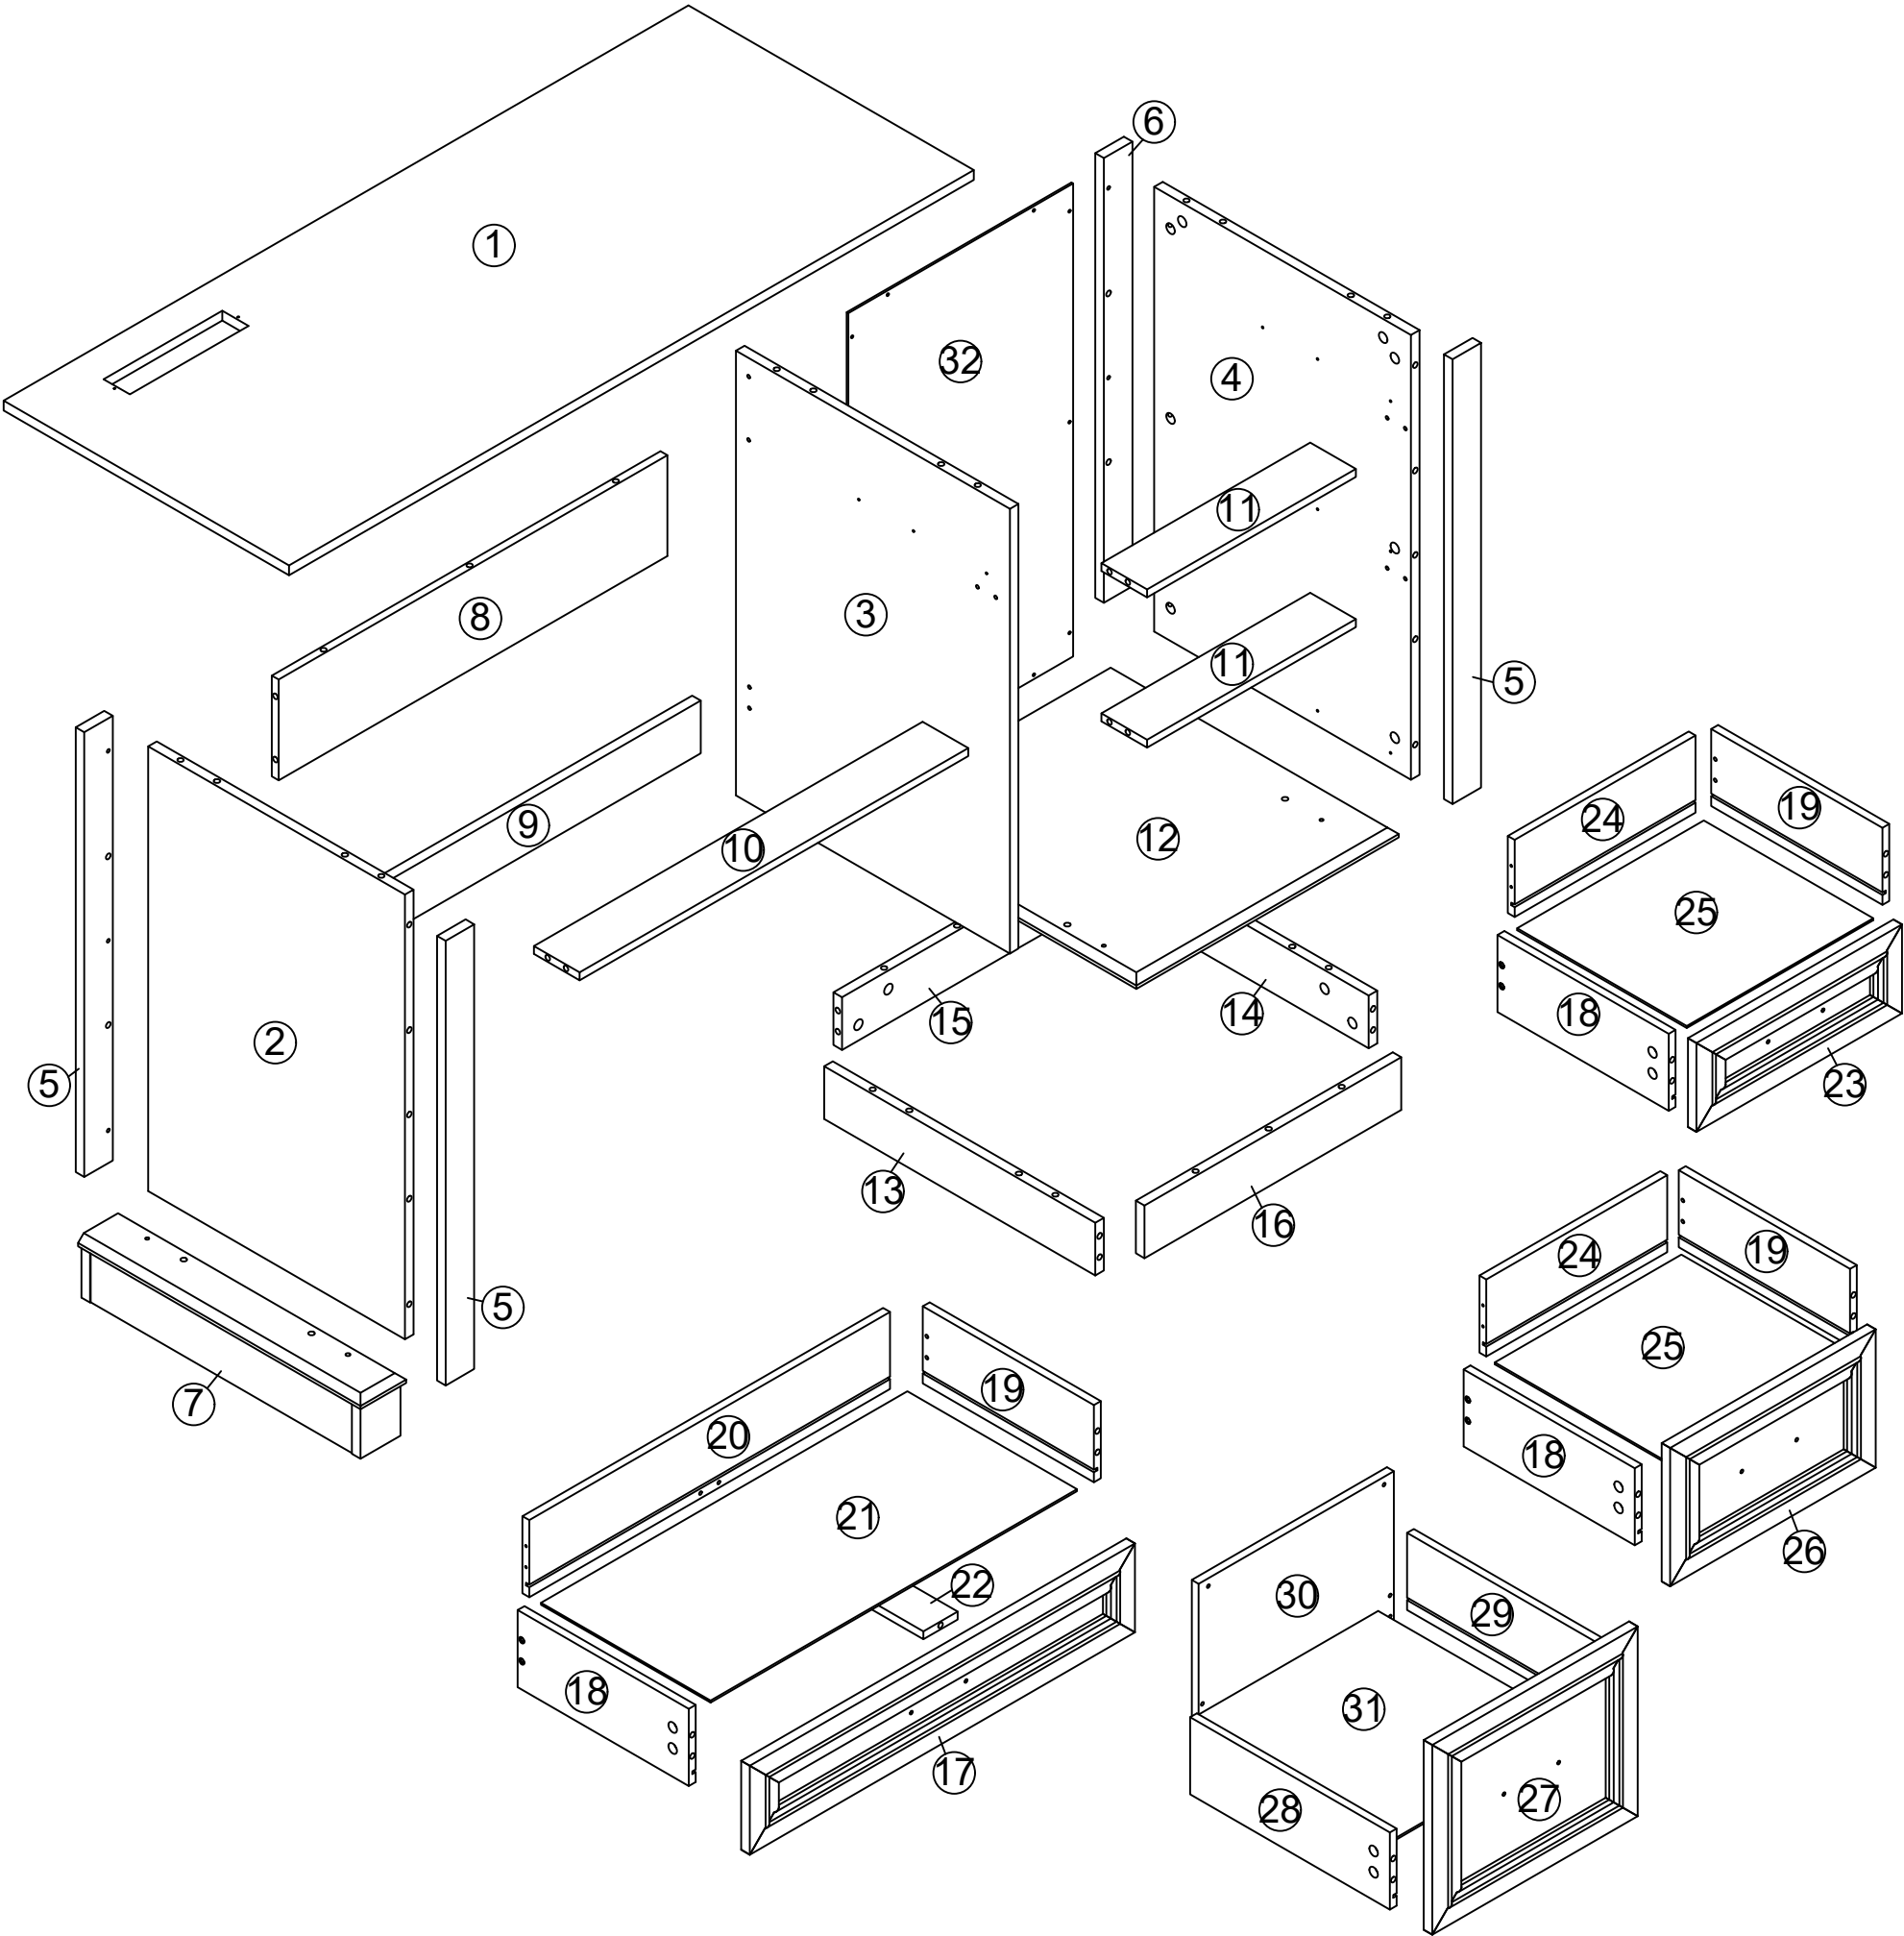

STEP1

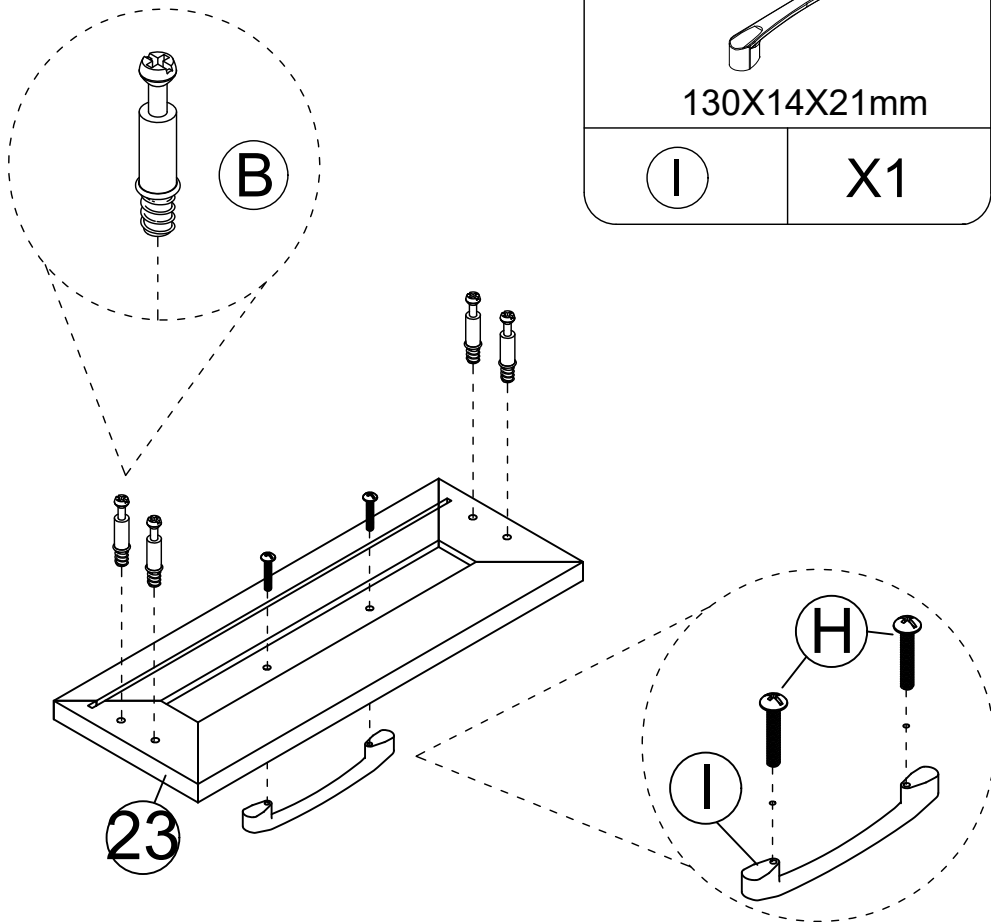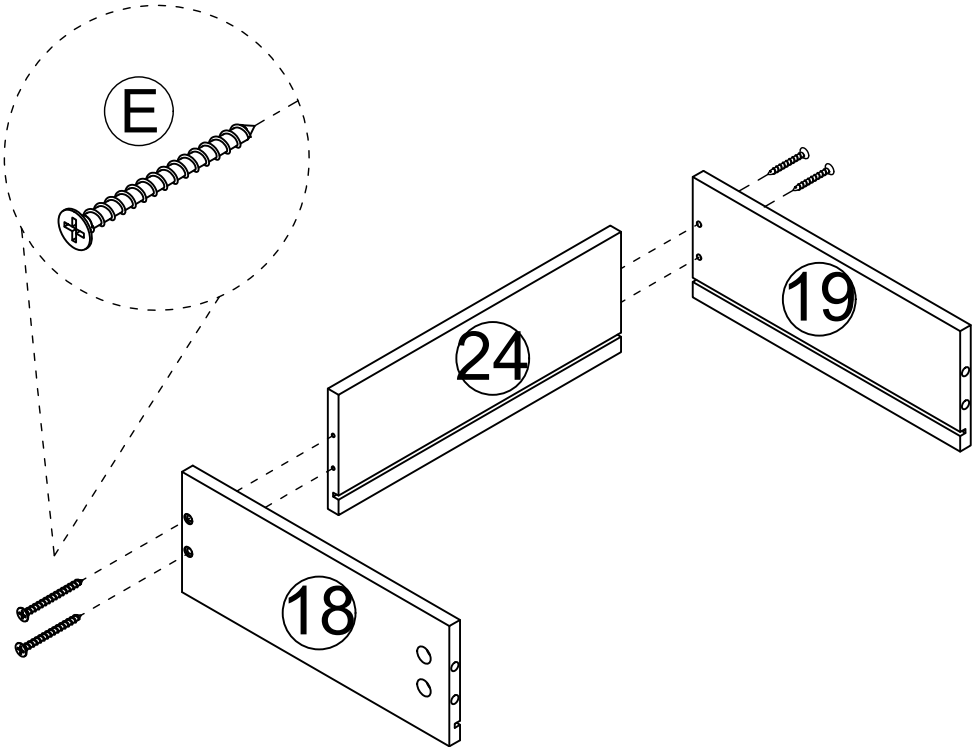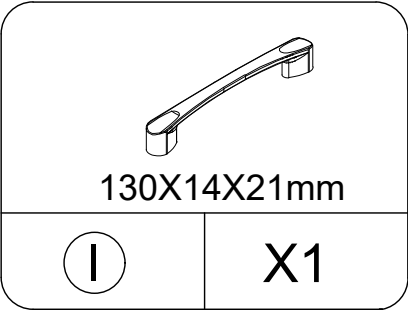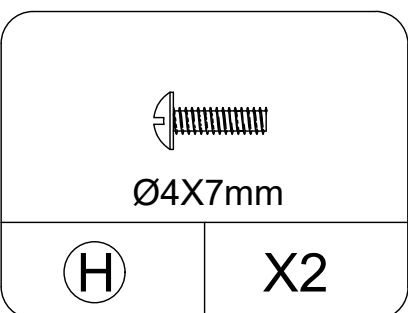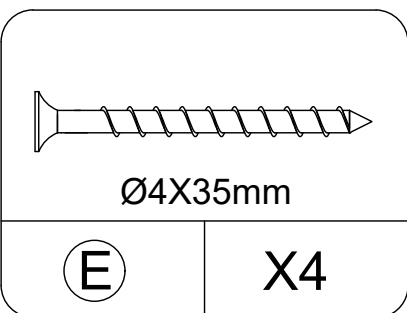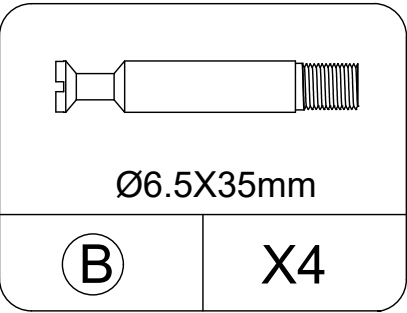
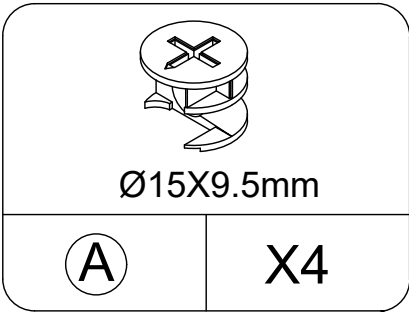
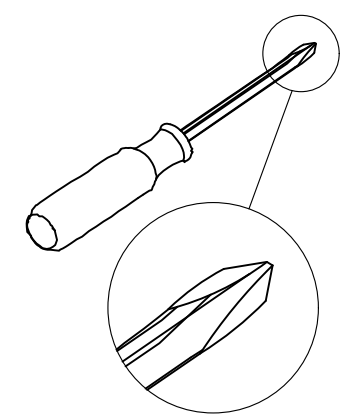


Step 1

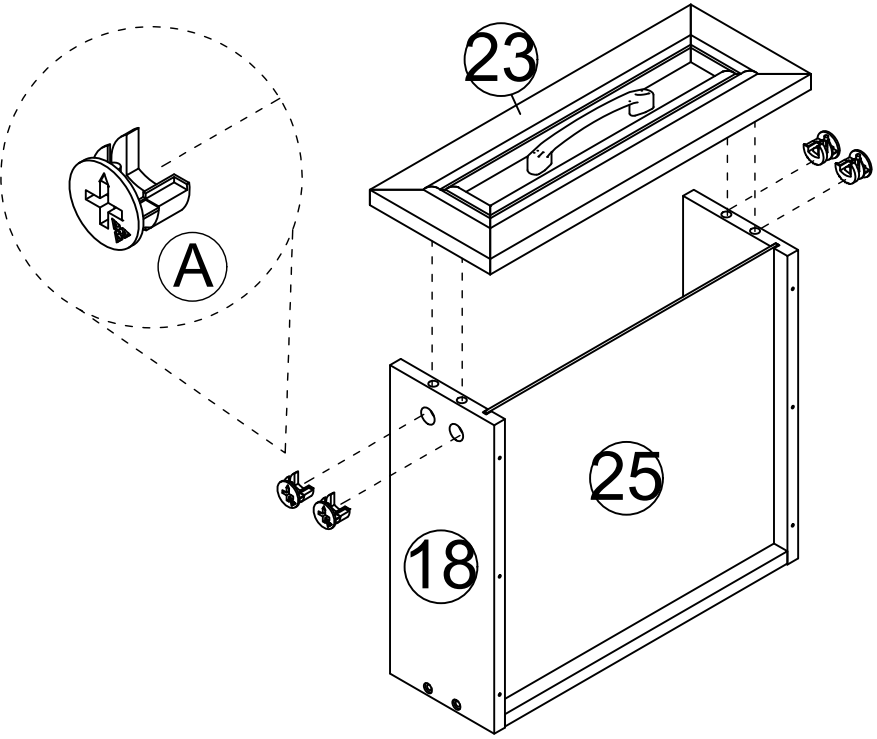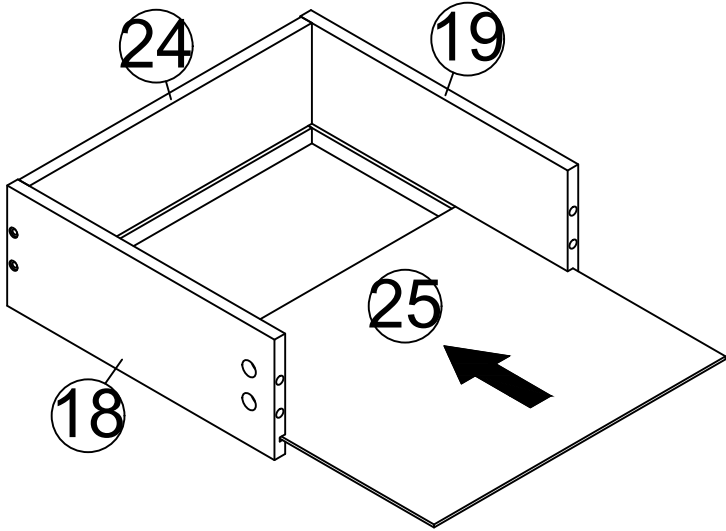

Step 2








Step 3

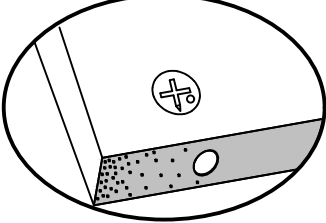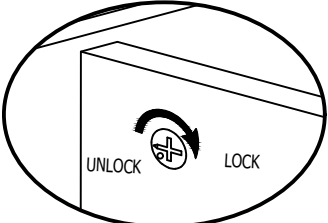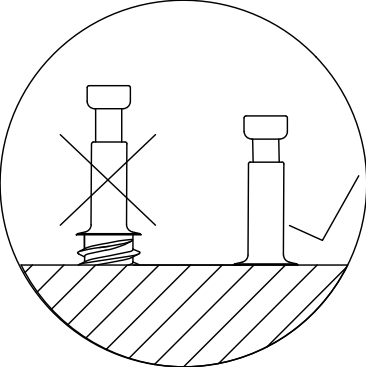



Proper orientation of CAM LOCK

Insert the cam bolt into the hole first, then insert the cam lock and lock it.


STEP2

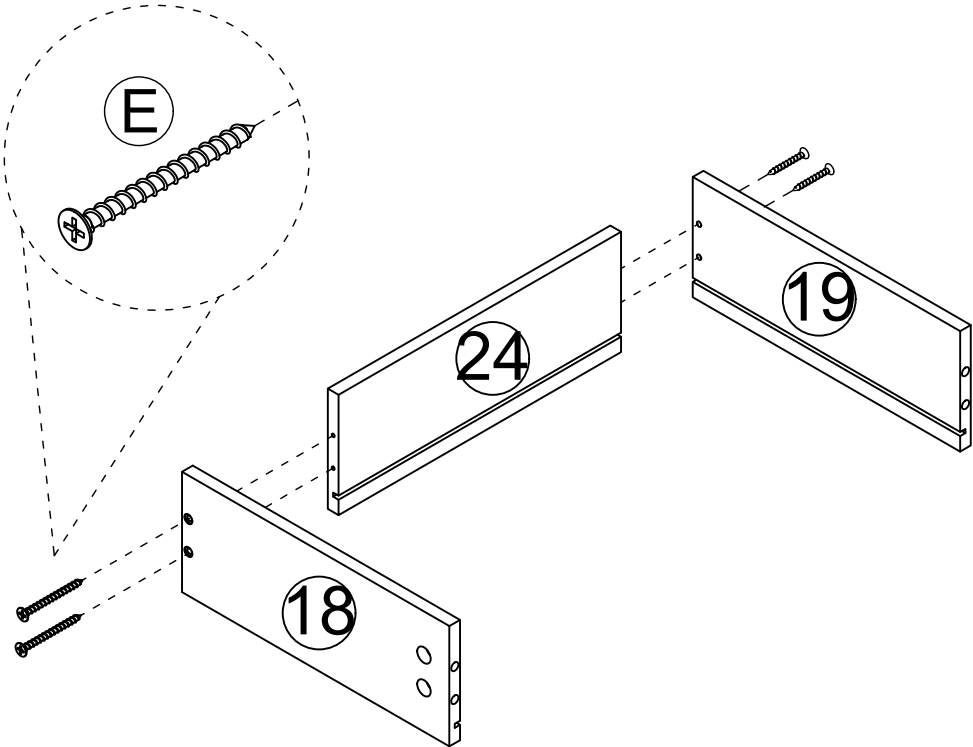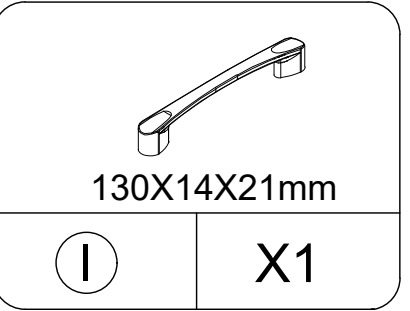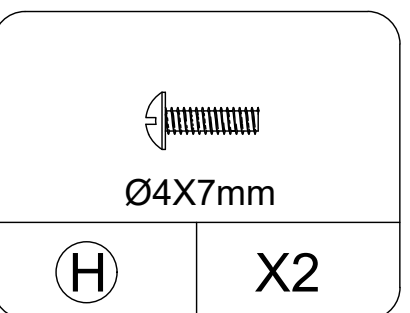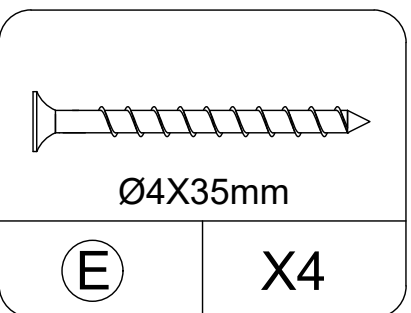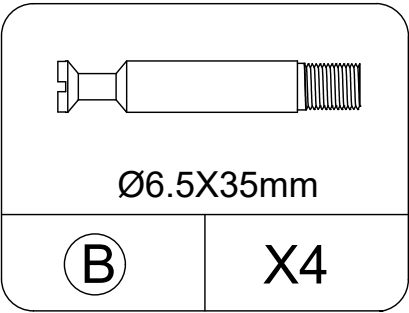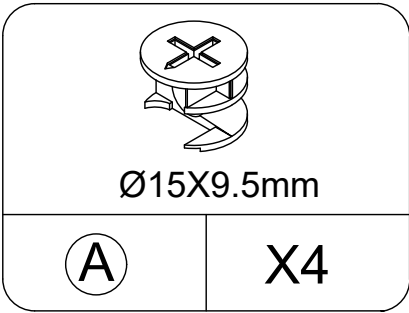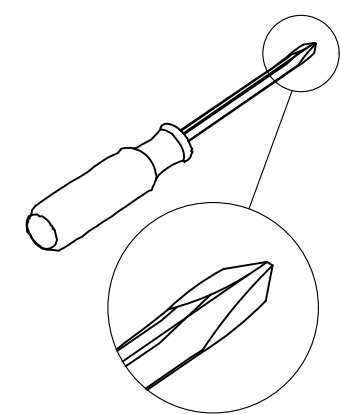




Step 1

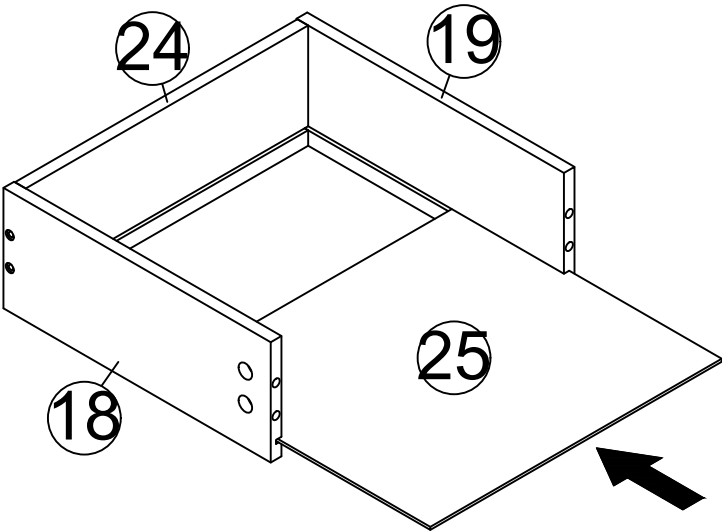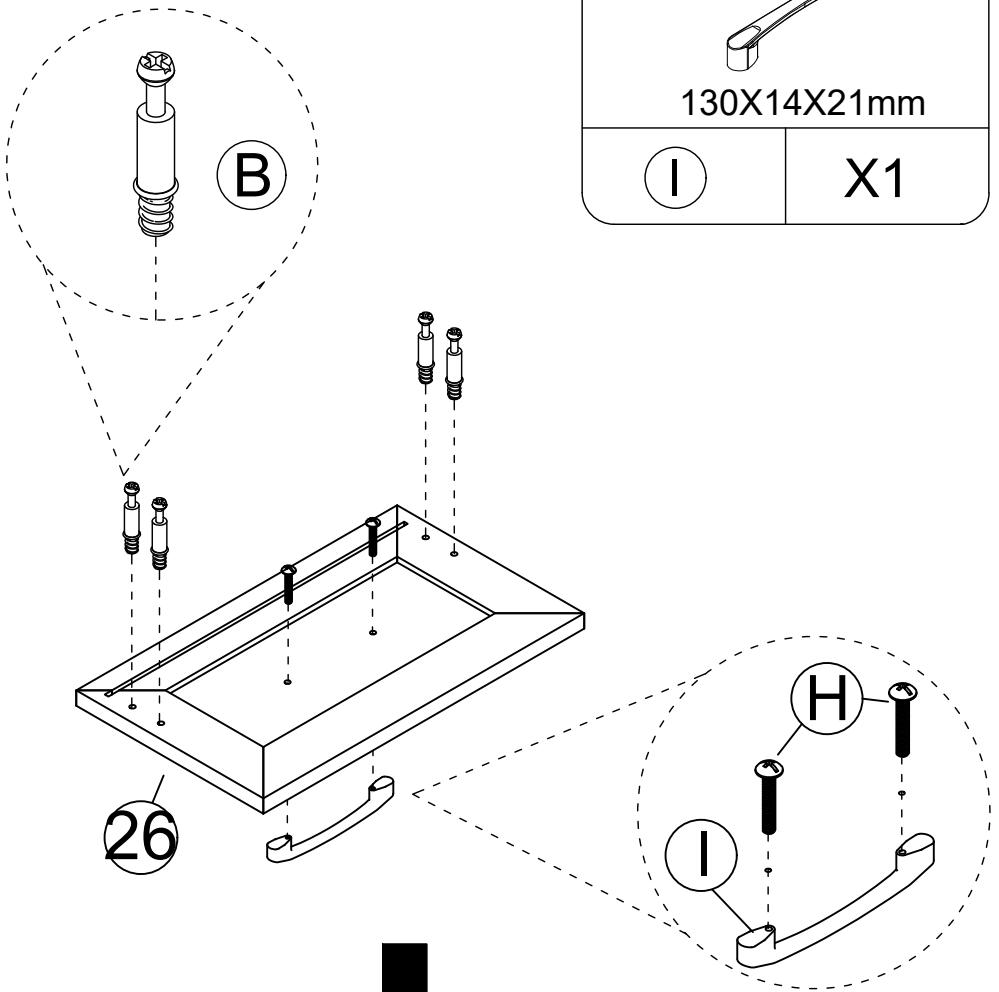

Step 2

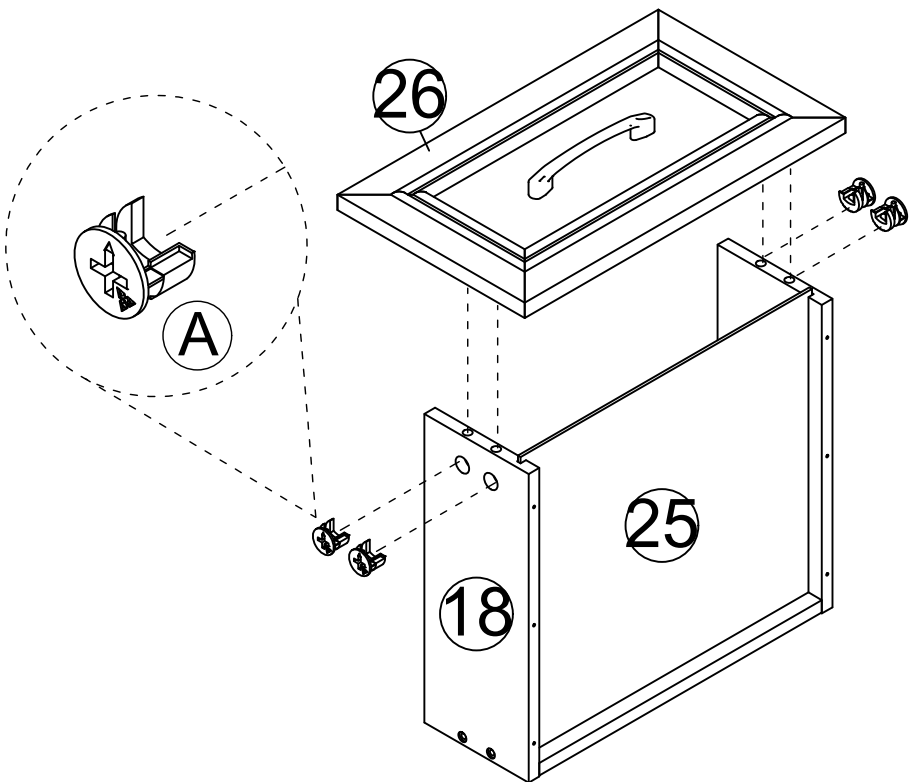


Step 3

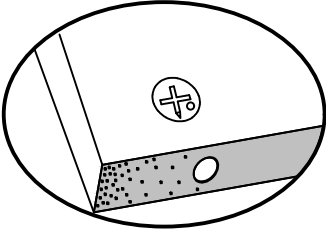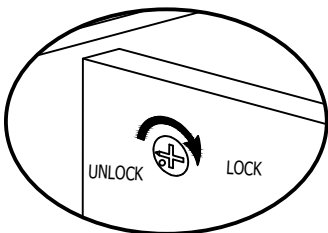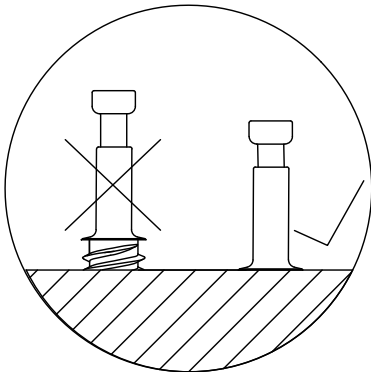


Proper orientation of CAM LOCK


Insert the cam bolt into the hole first, then insert the cam lock and lock it.


STEP3

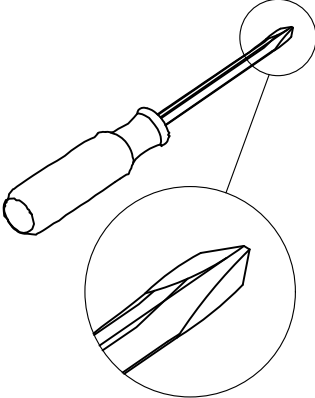



	Ø15X9.5mm
(A)	X4


	Ø6.5X35mm
(B)	X4

	Ø4X35mm
(E)	X4


	Ø4X7mm
(H)	X2

	Ø5X360mm
(O)	X2

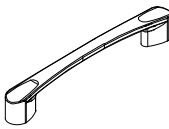
	130X14X21mm
(I)	X1

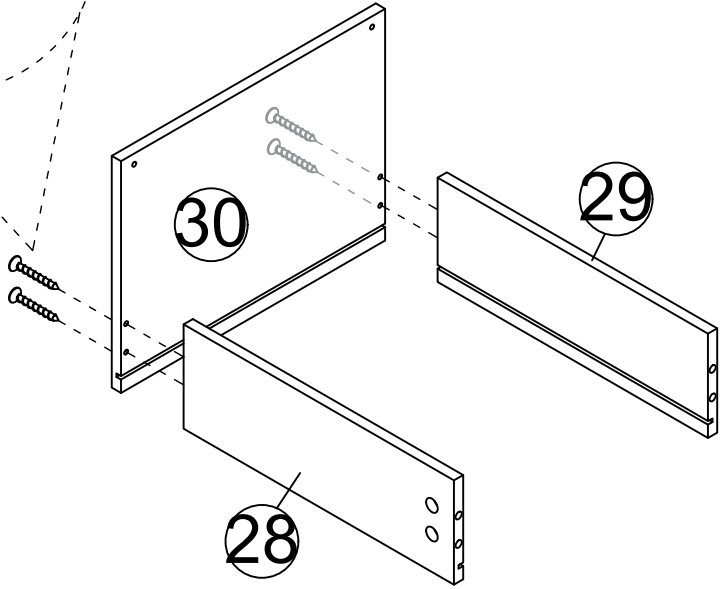




Step 1

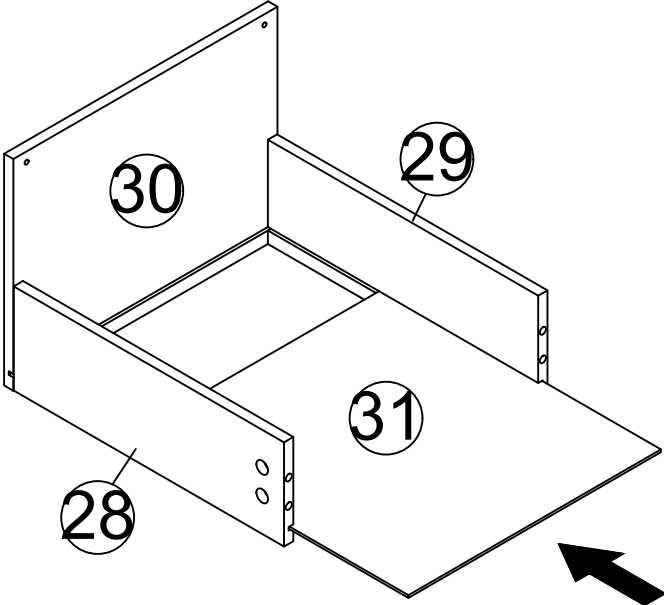

Step 2

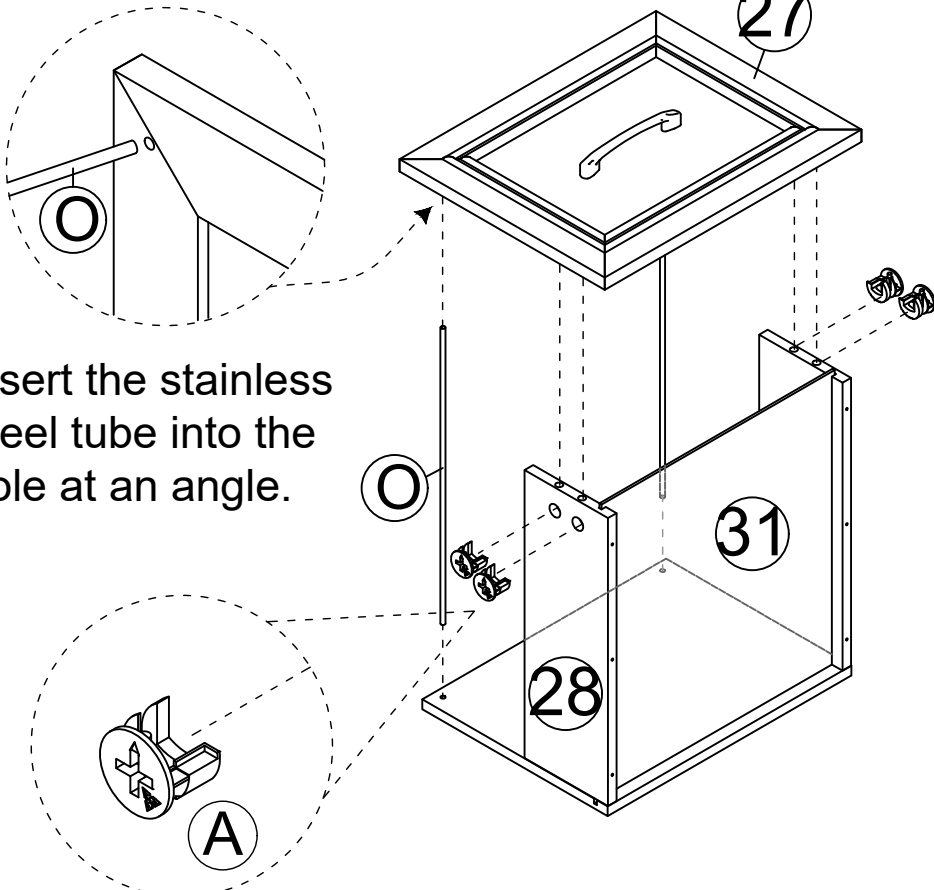








Step 3

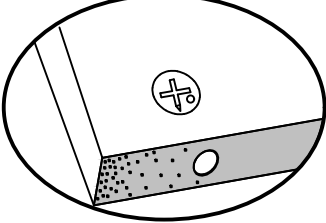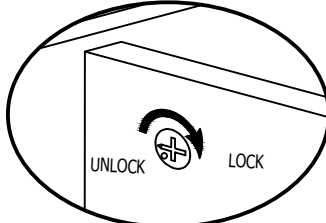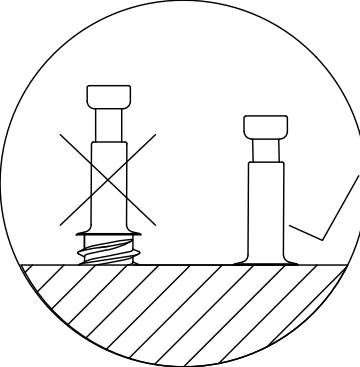




Proper orientation of CAM LOCK

Insert the cam bolt into the hole first, then insert the cam lock and lock it.


STEP4

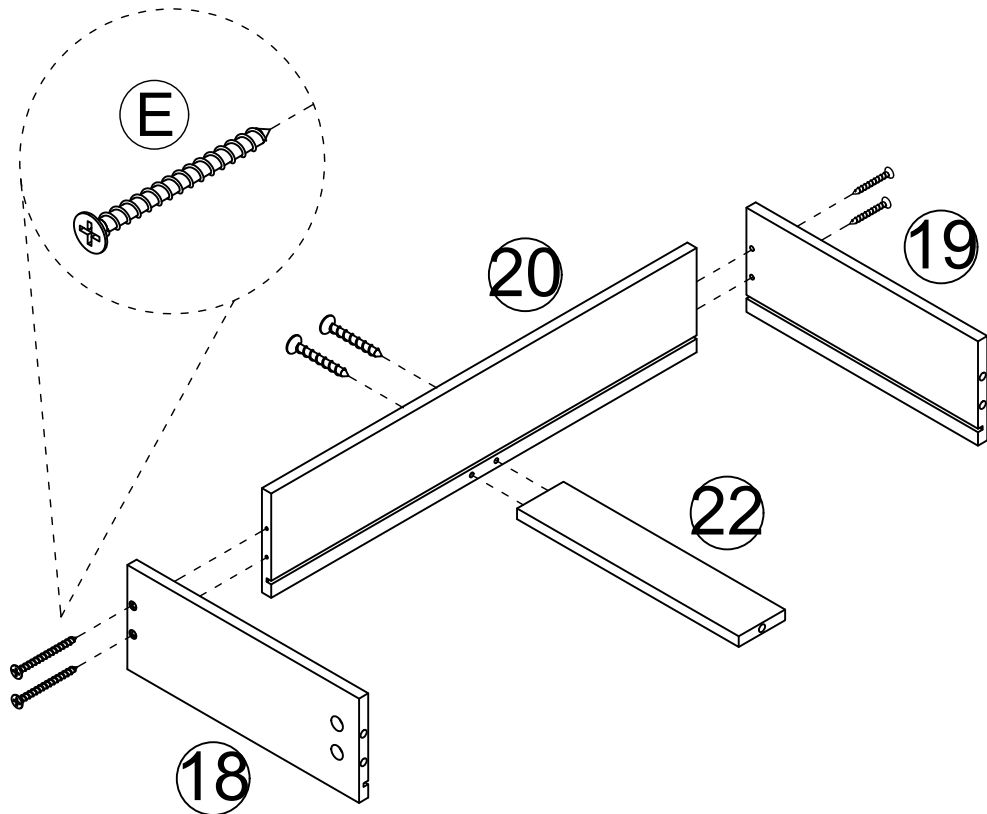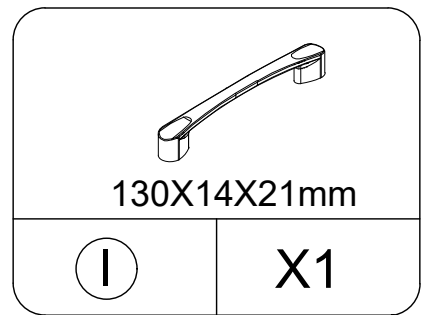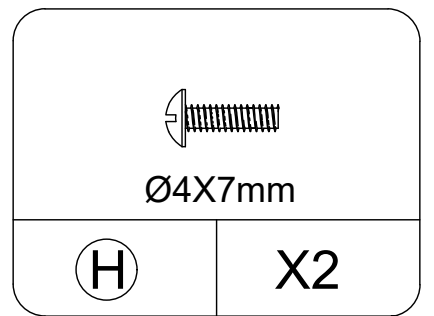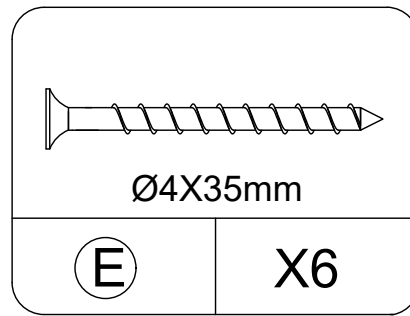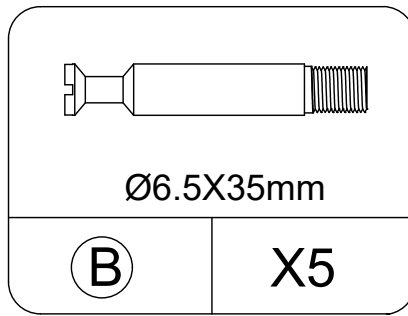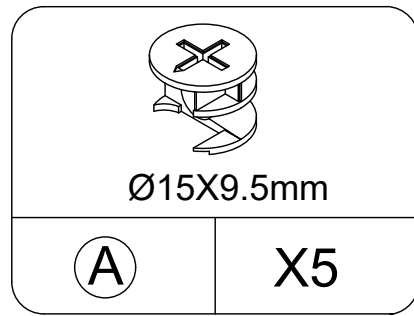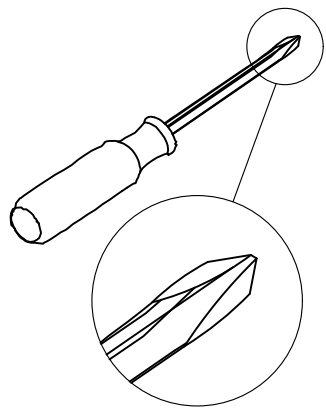




Step 1

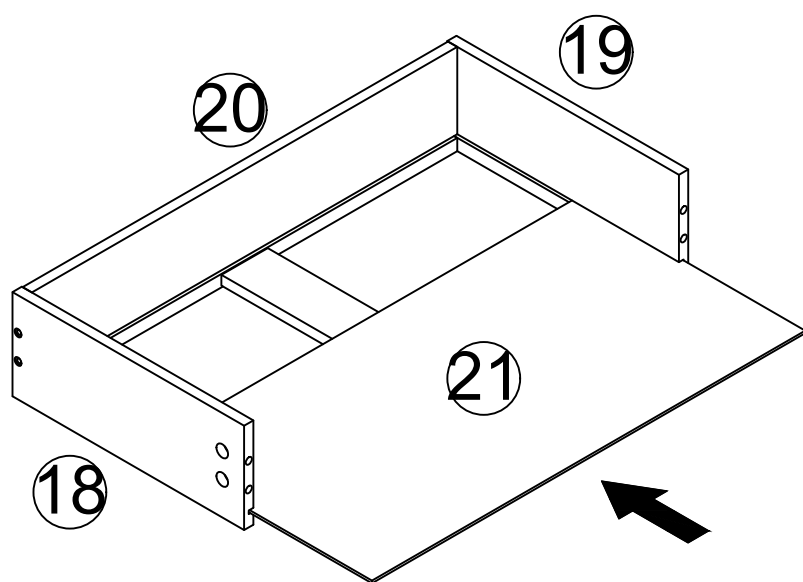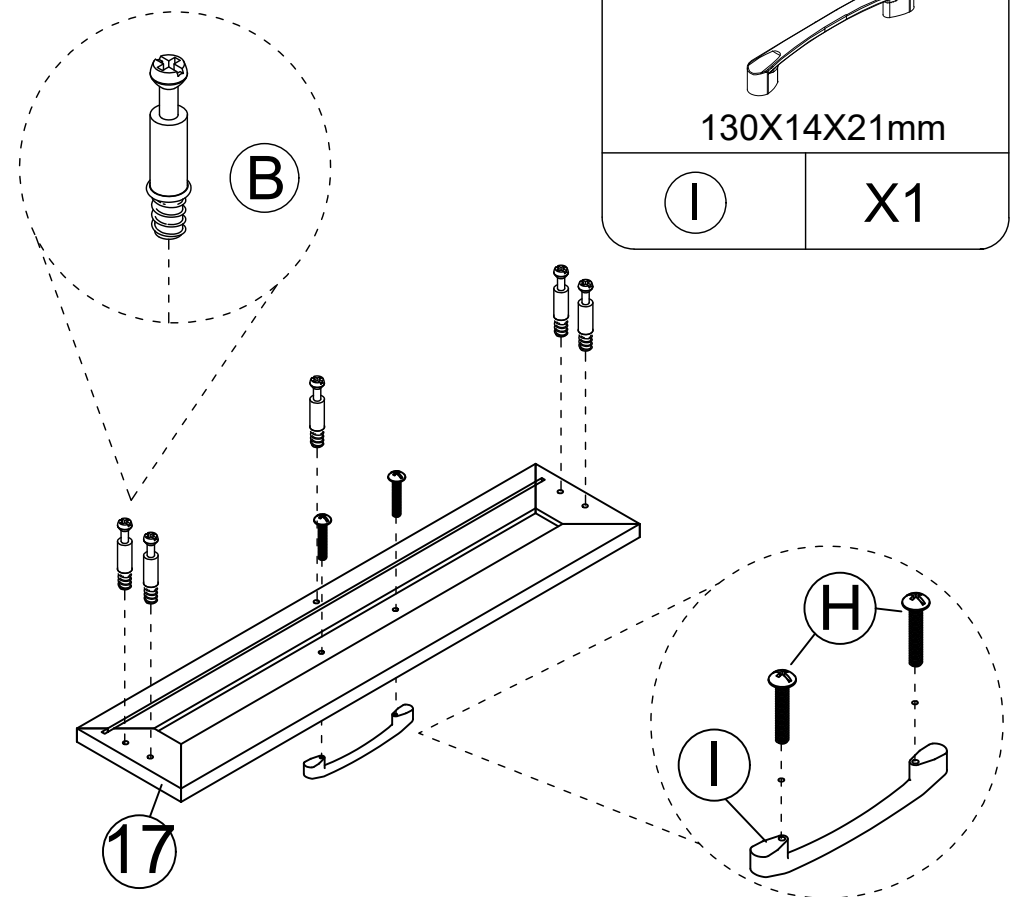

Step 2

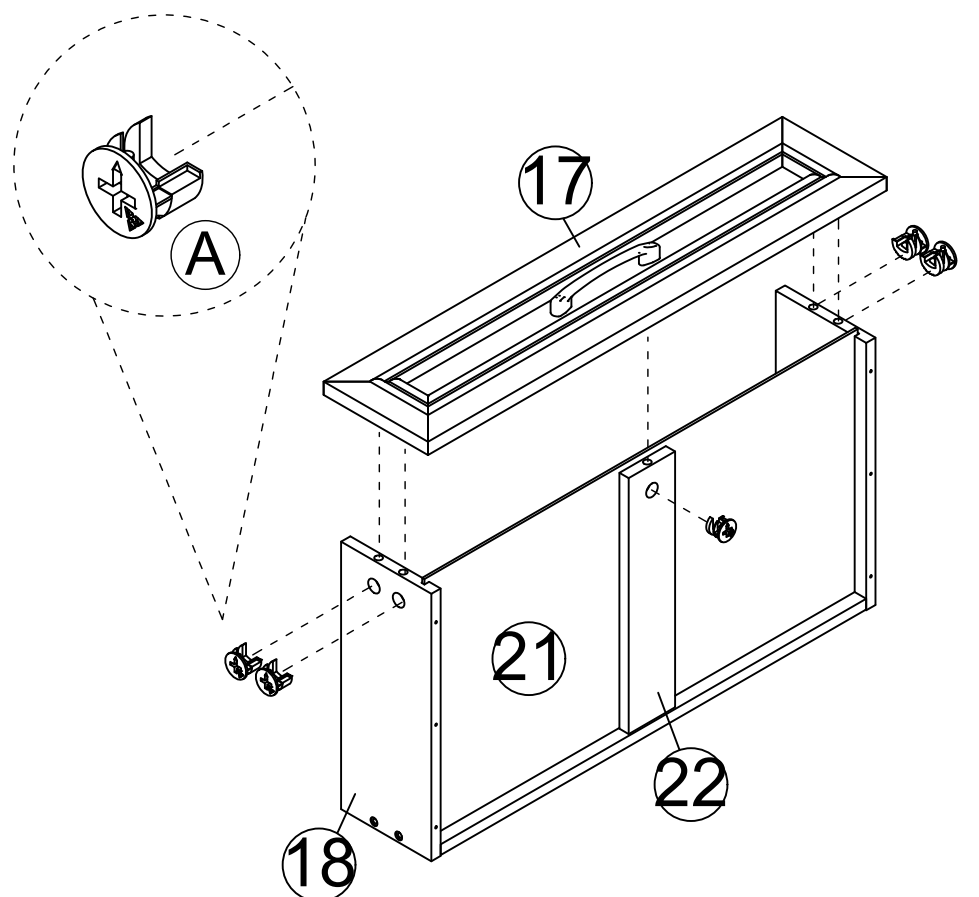



Step 3

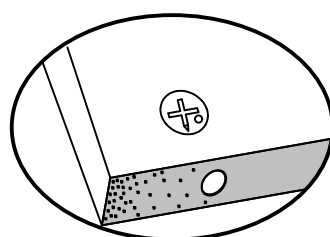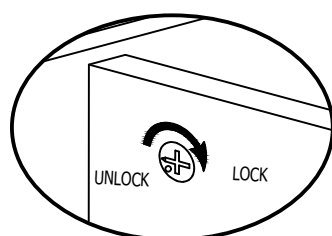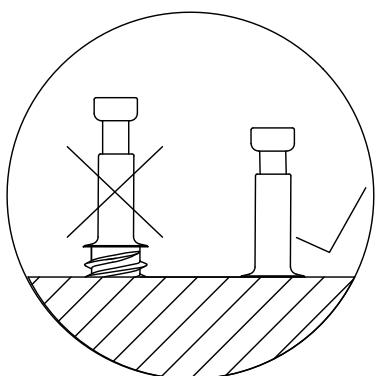



Insert the cam bolt into the hole first, then insert the cam lock and lock it.


STEP5

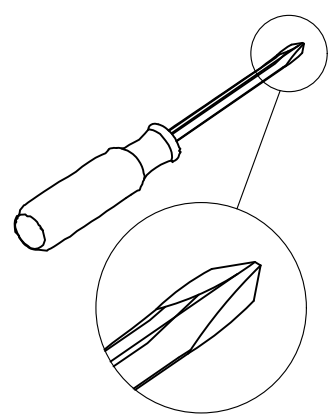


 Ø3.5X14mm	
D	X6

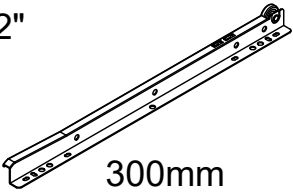
12"  300mm	
M-DL	X1

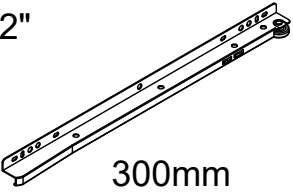
12"  300mm	
M-DR	X1

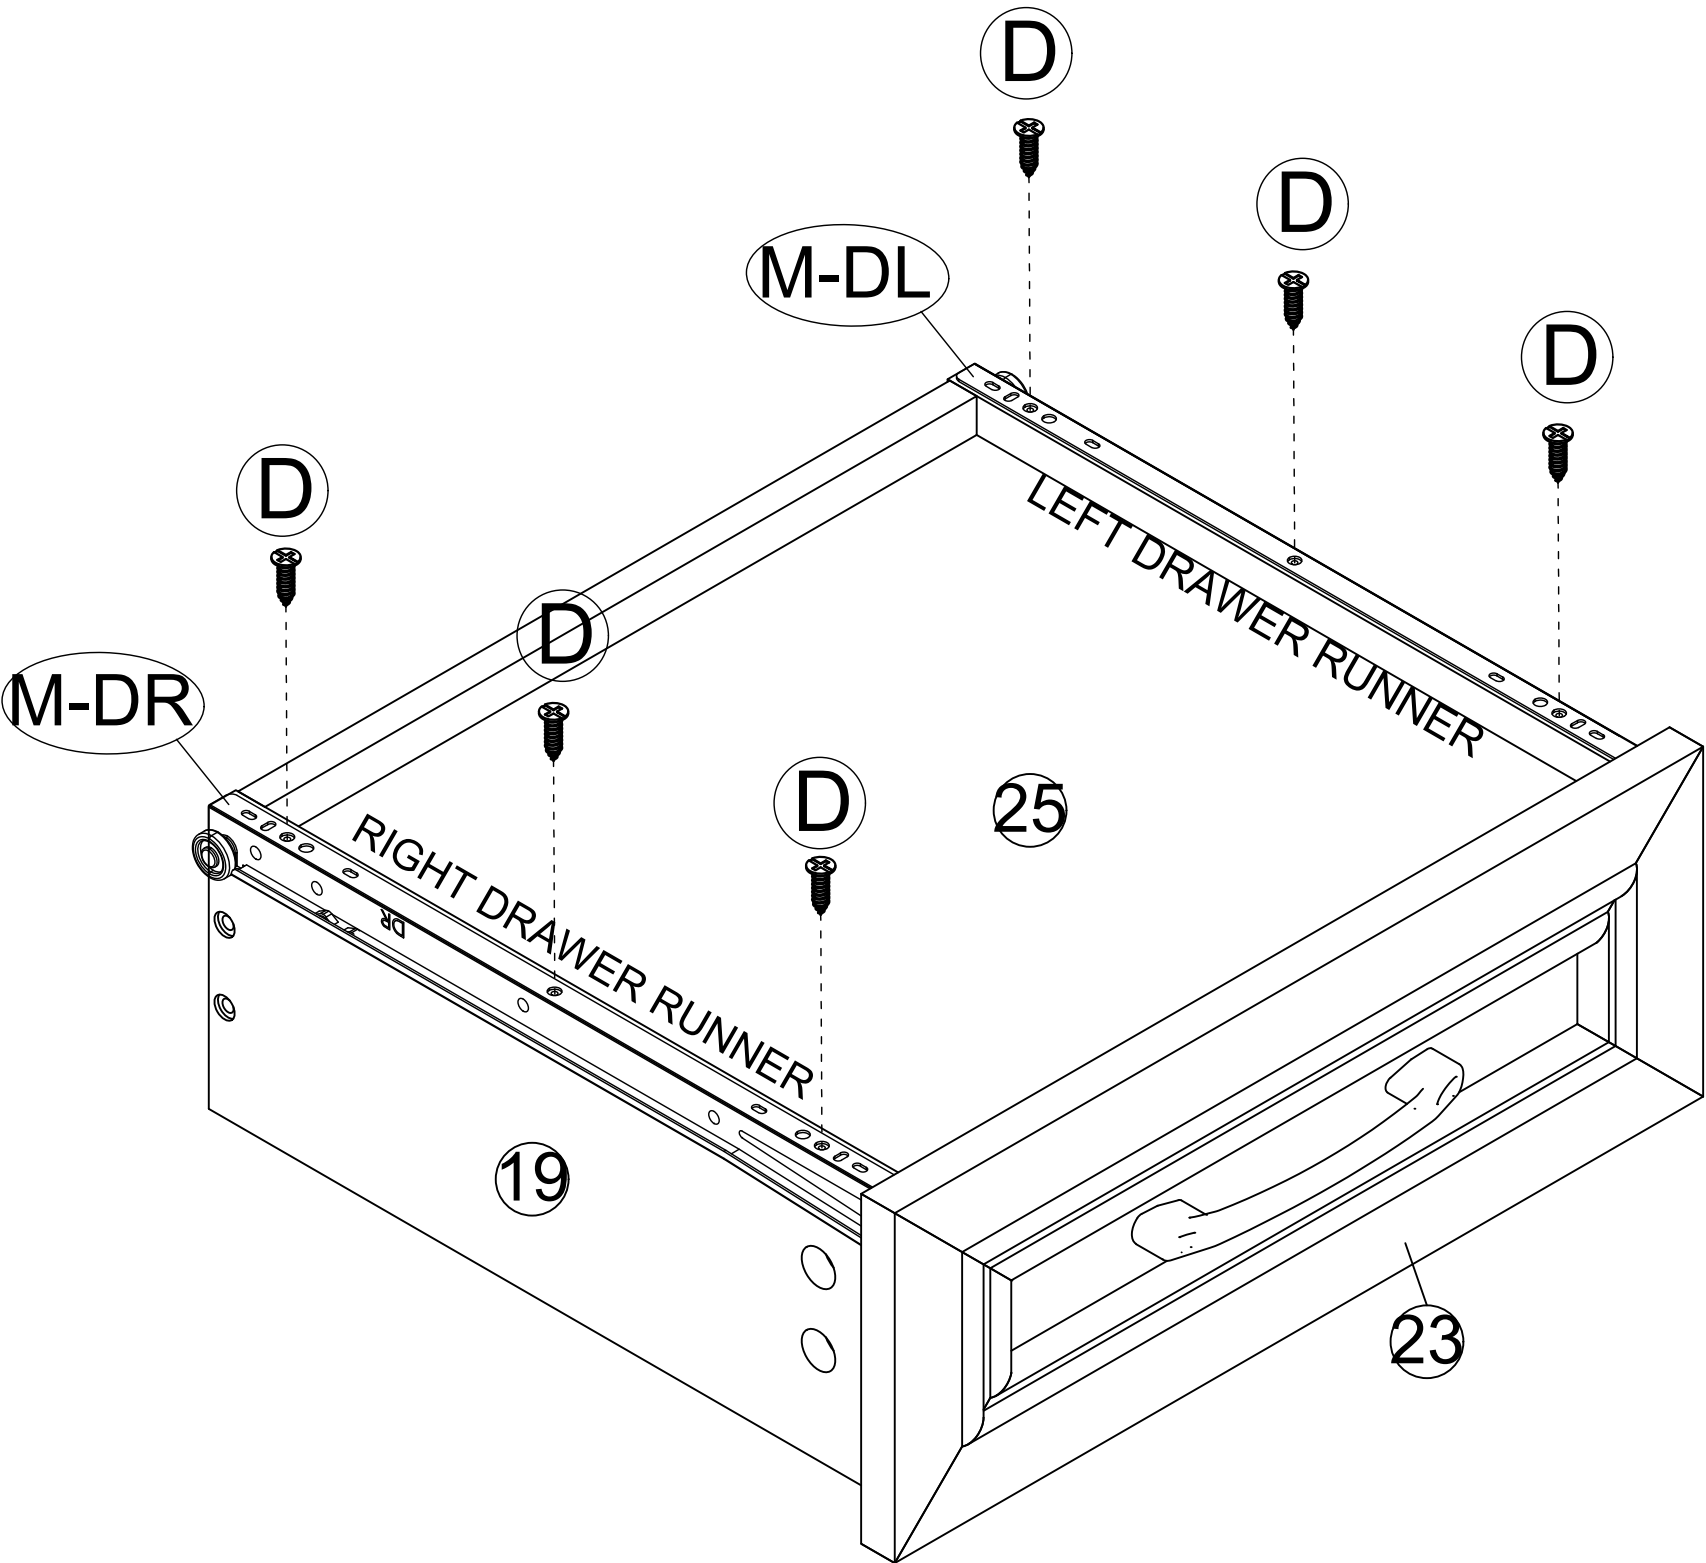



STEP6

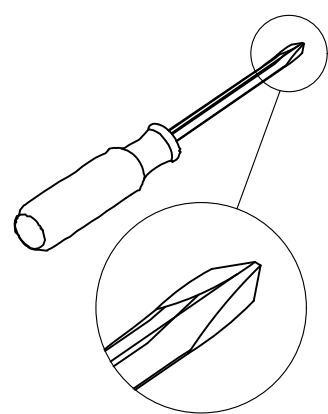


 Ø3.5X14mm	
D	X6

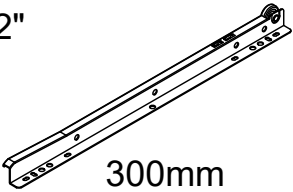
12"  300mm	
M-DL	X1

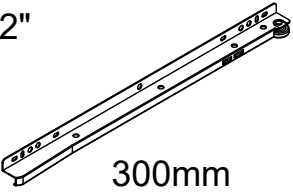
12"  300mm	
M-DR	X1

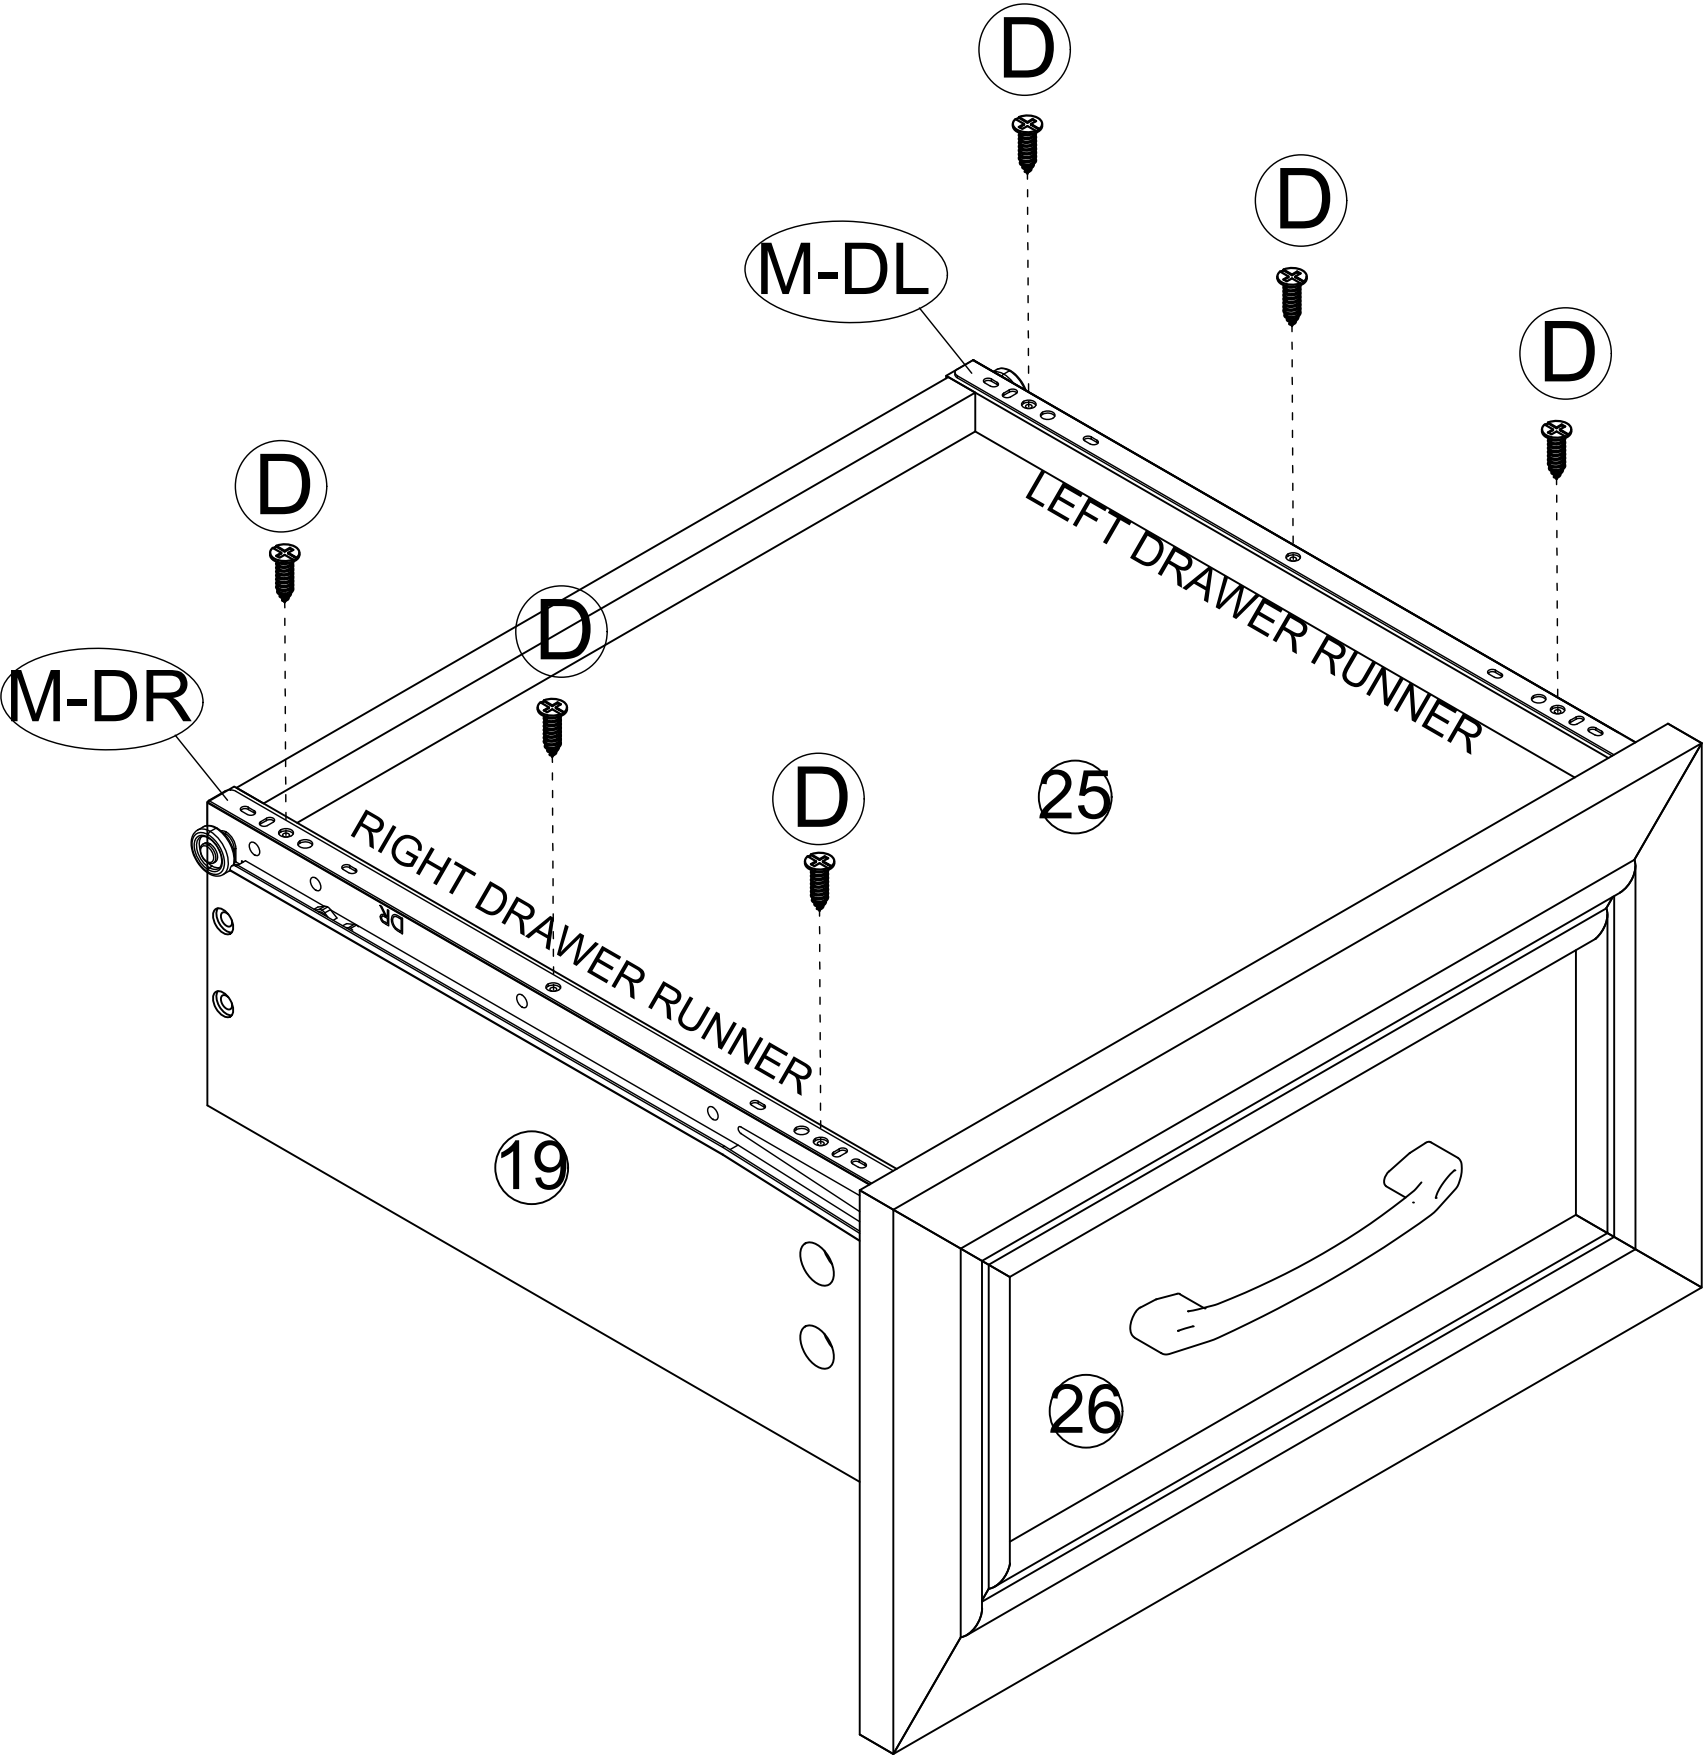



STEP7

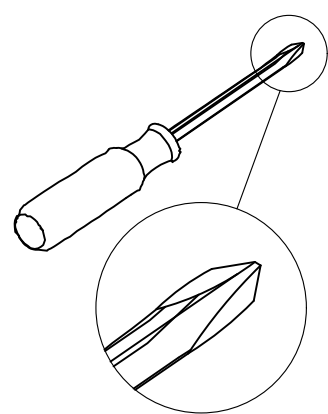


 Ø3.5X14mm	
D	X6

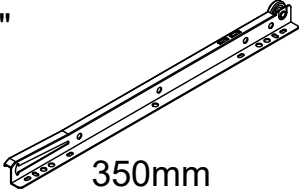
14"  350mm	
N-DL	X1

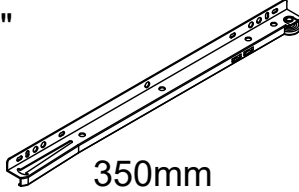
14"  350mm	
N-DR	X1

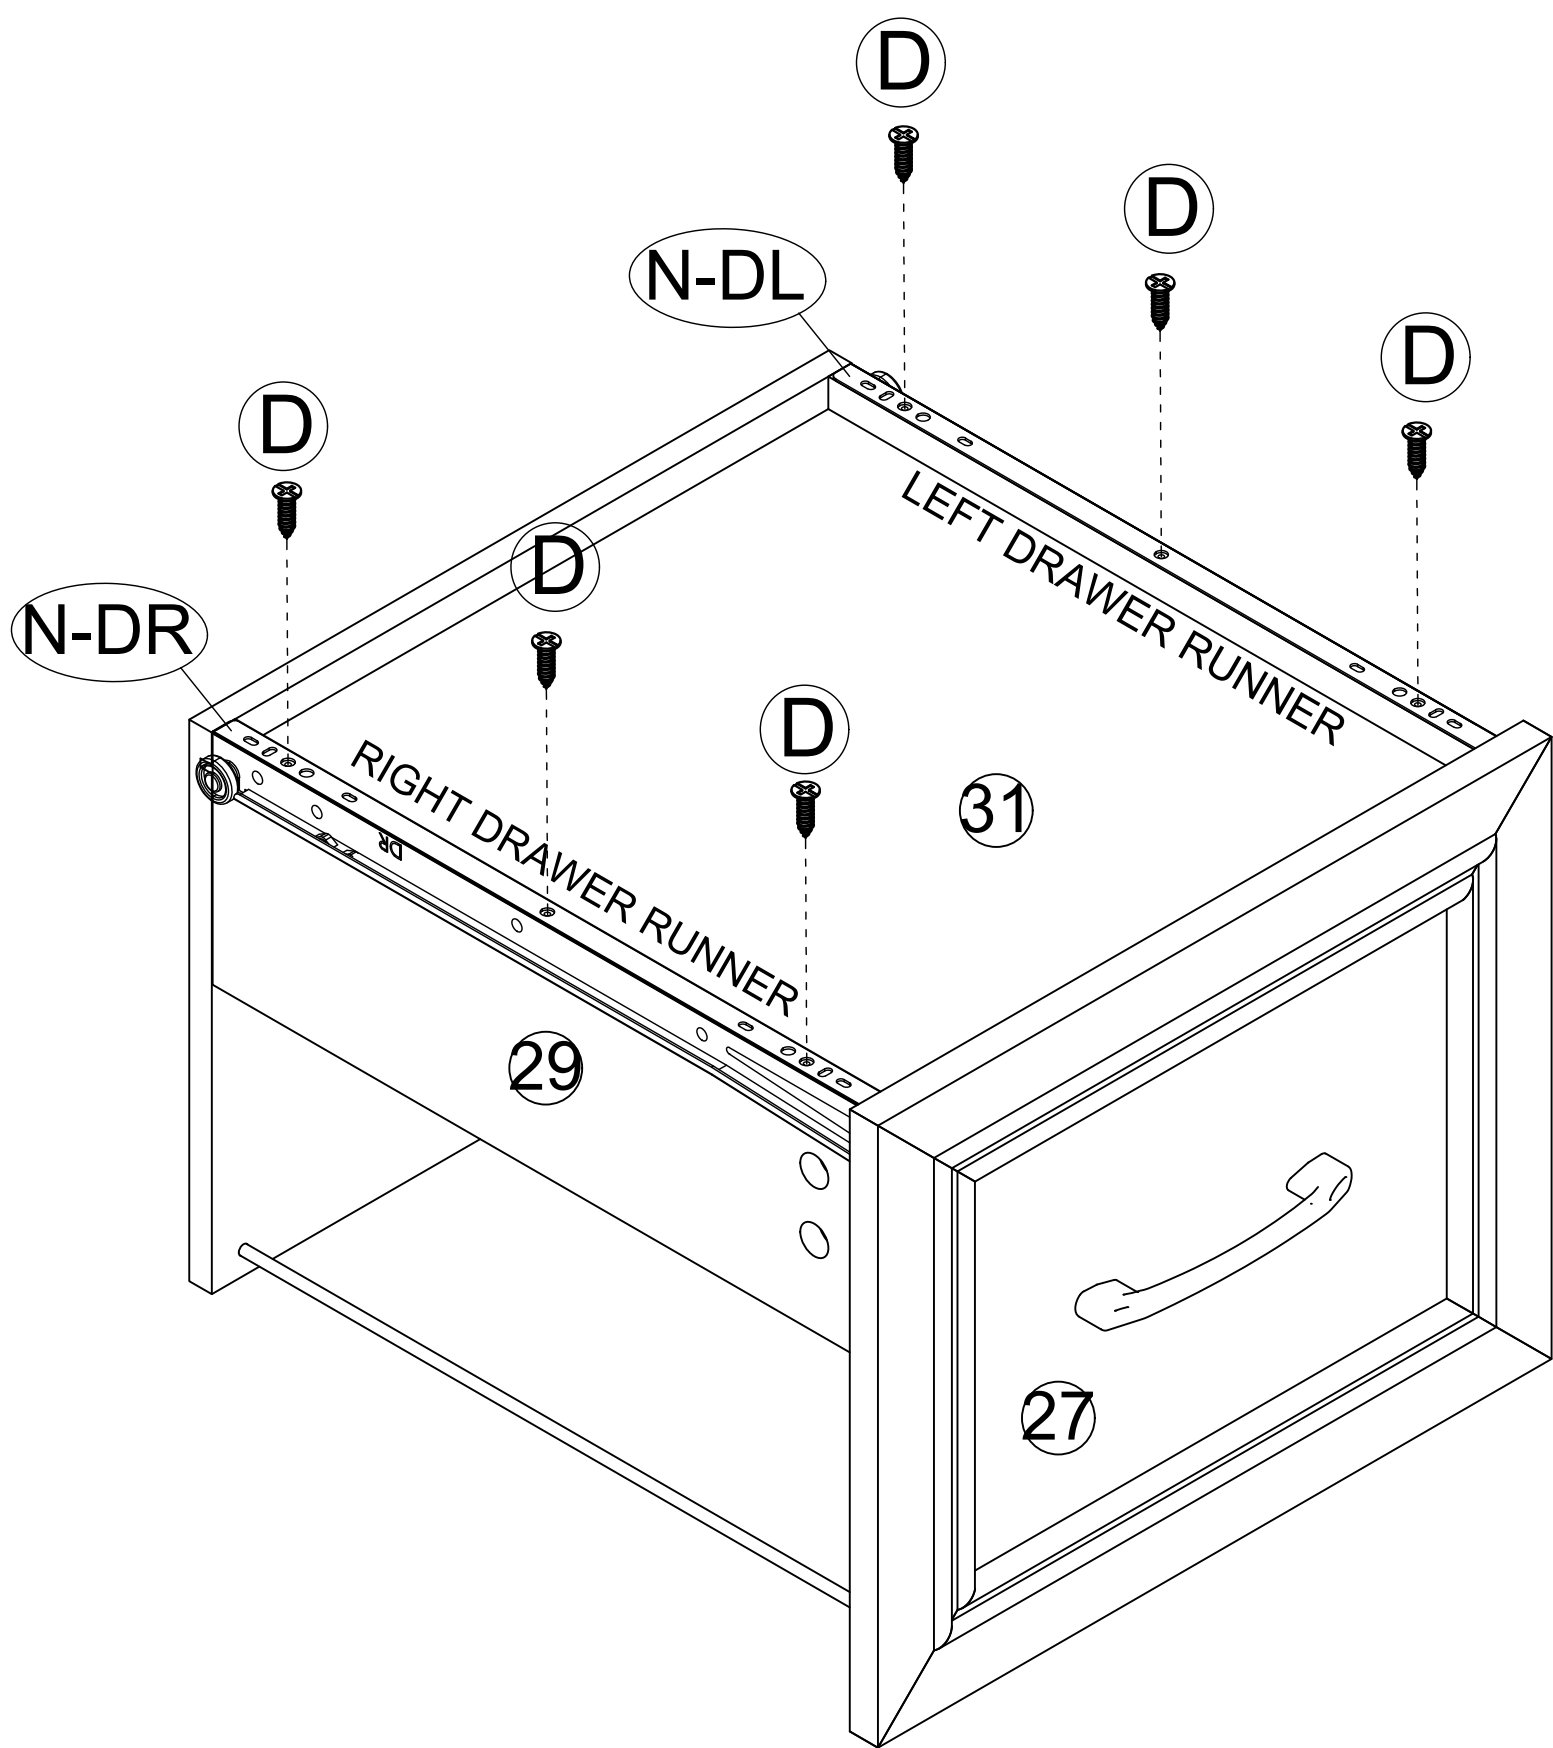



STEP8

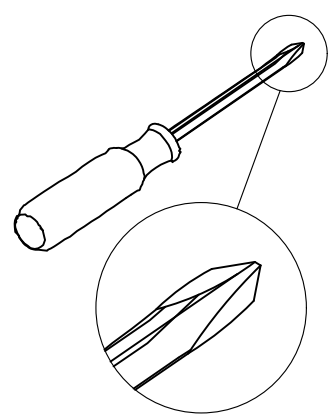





 Ø3.5X14mm	
D	X6

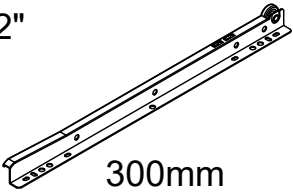12"  300mm	
M-DL	X1


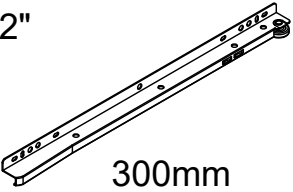
12"  300mm	
M-DR	X1

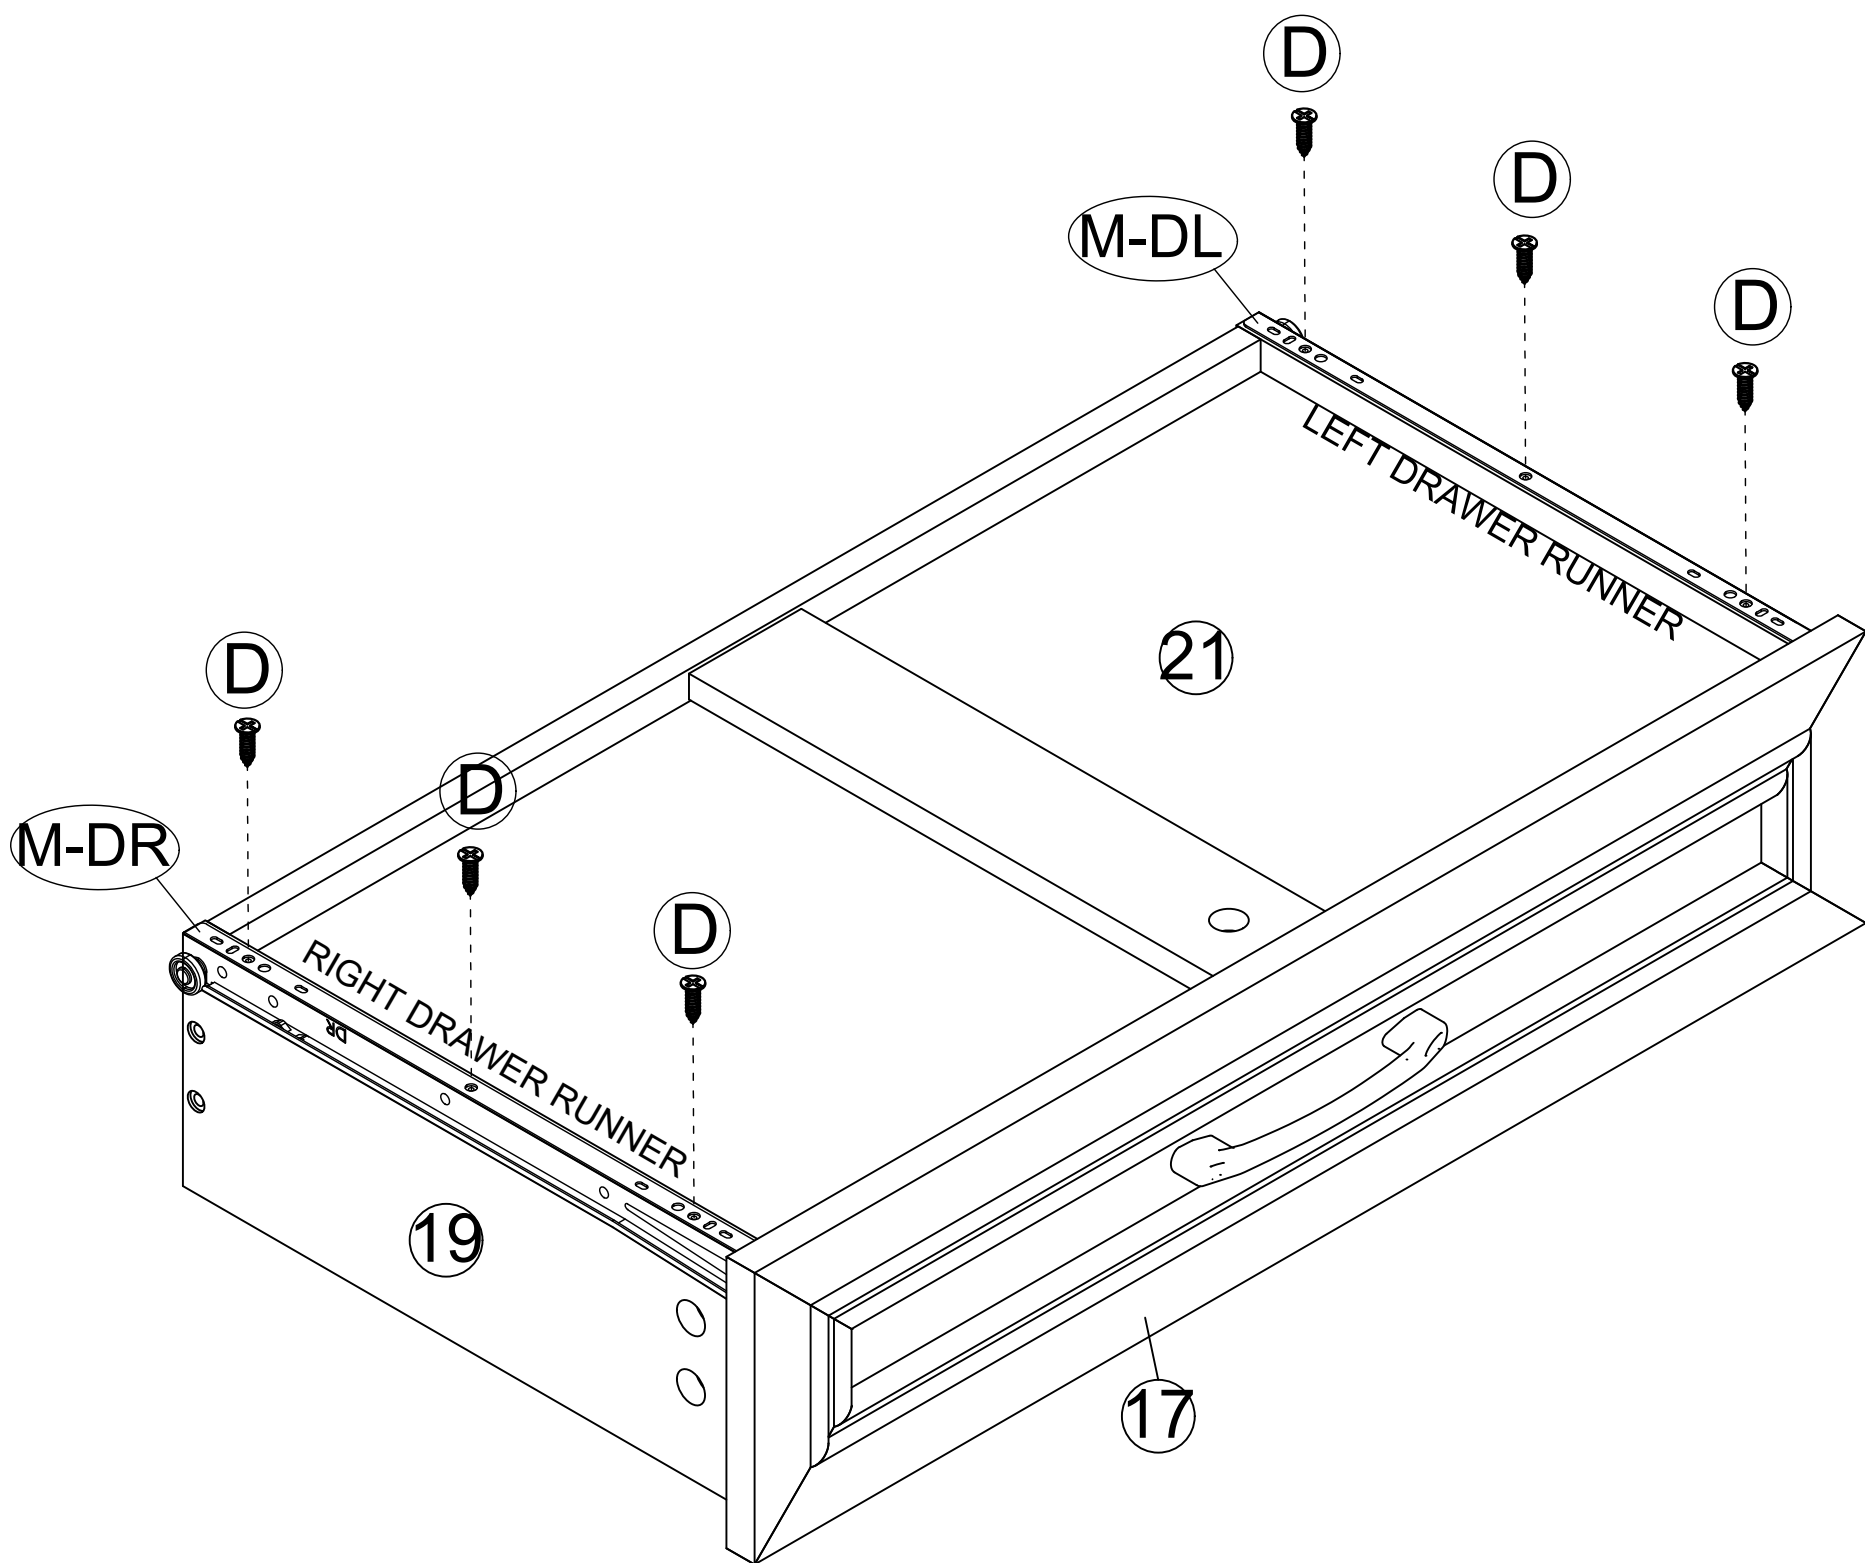


STEP9

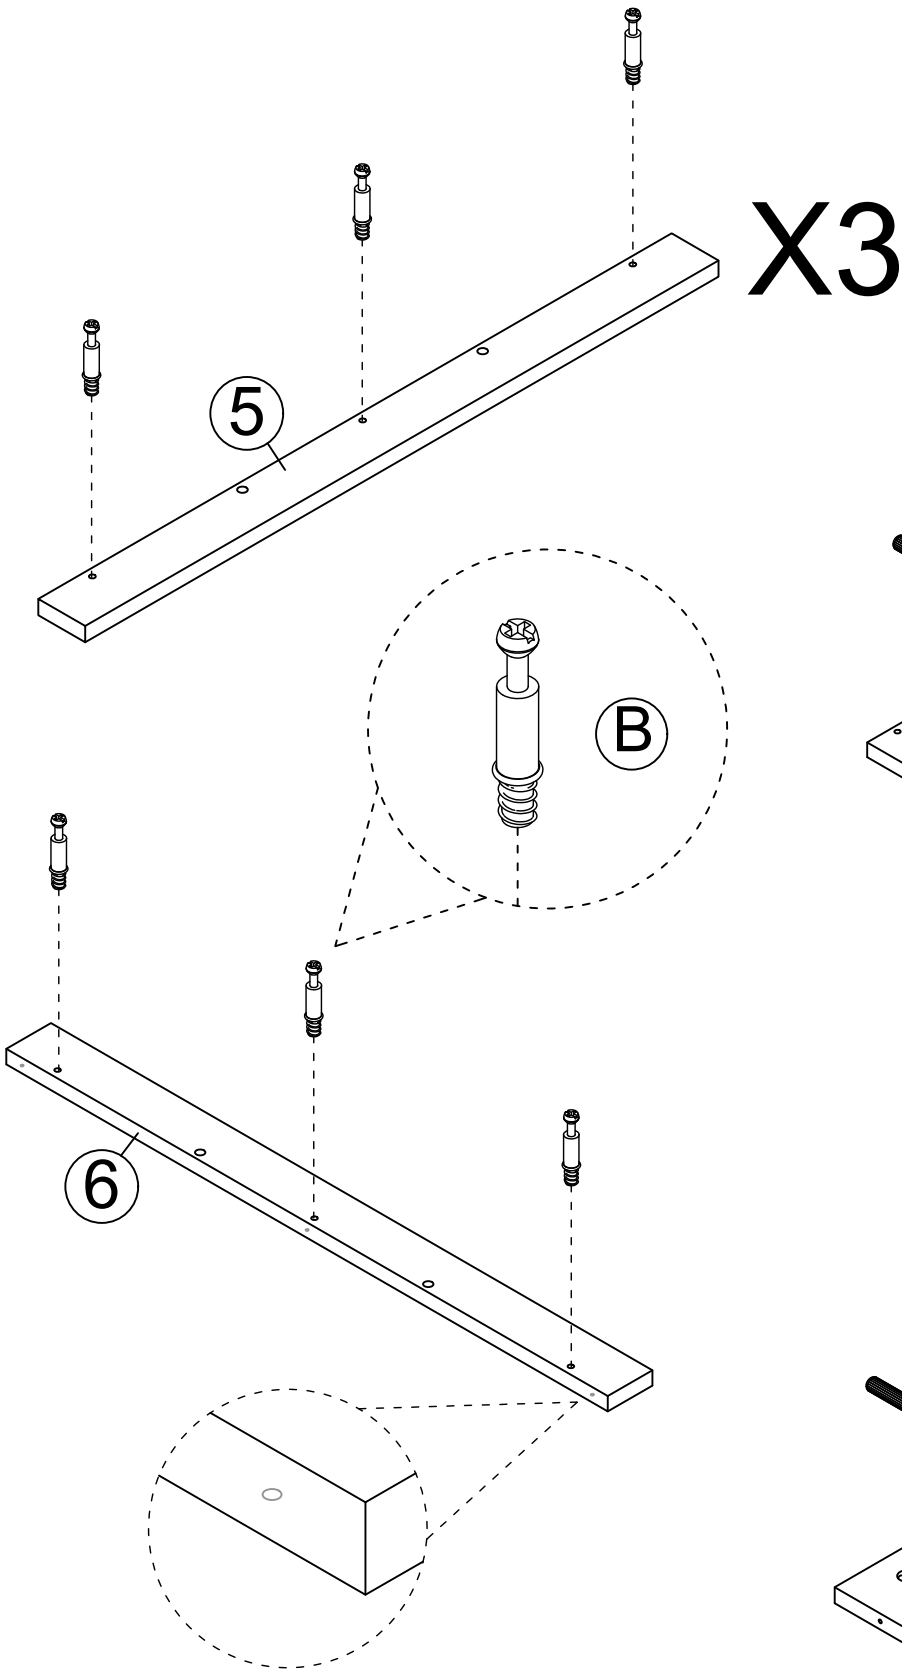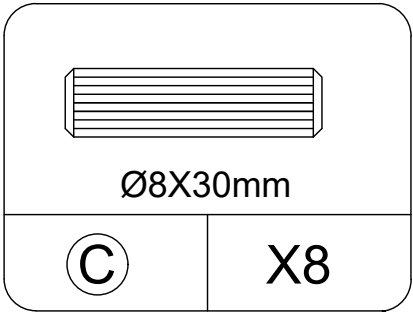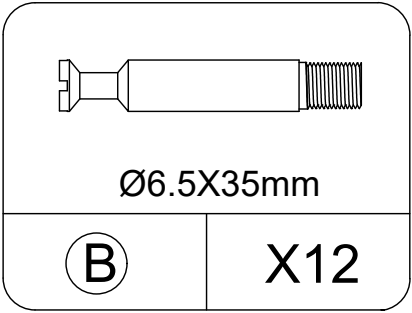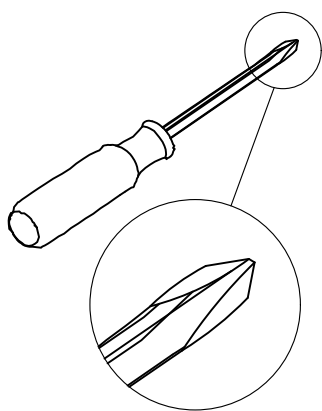



There are holes in the back.

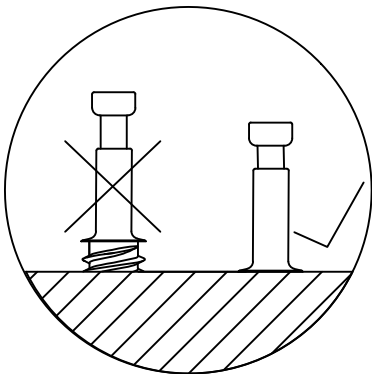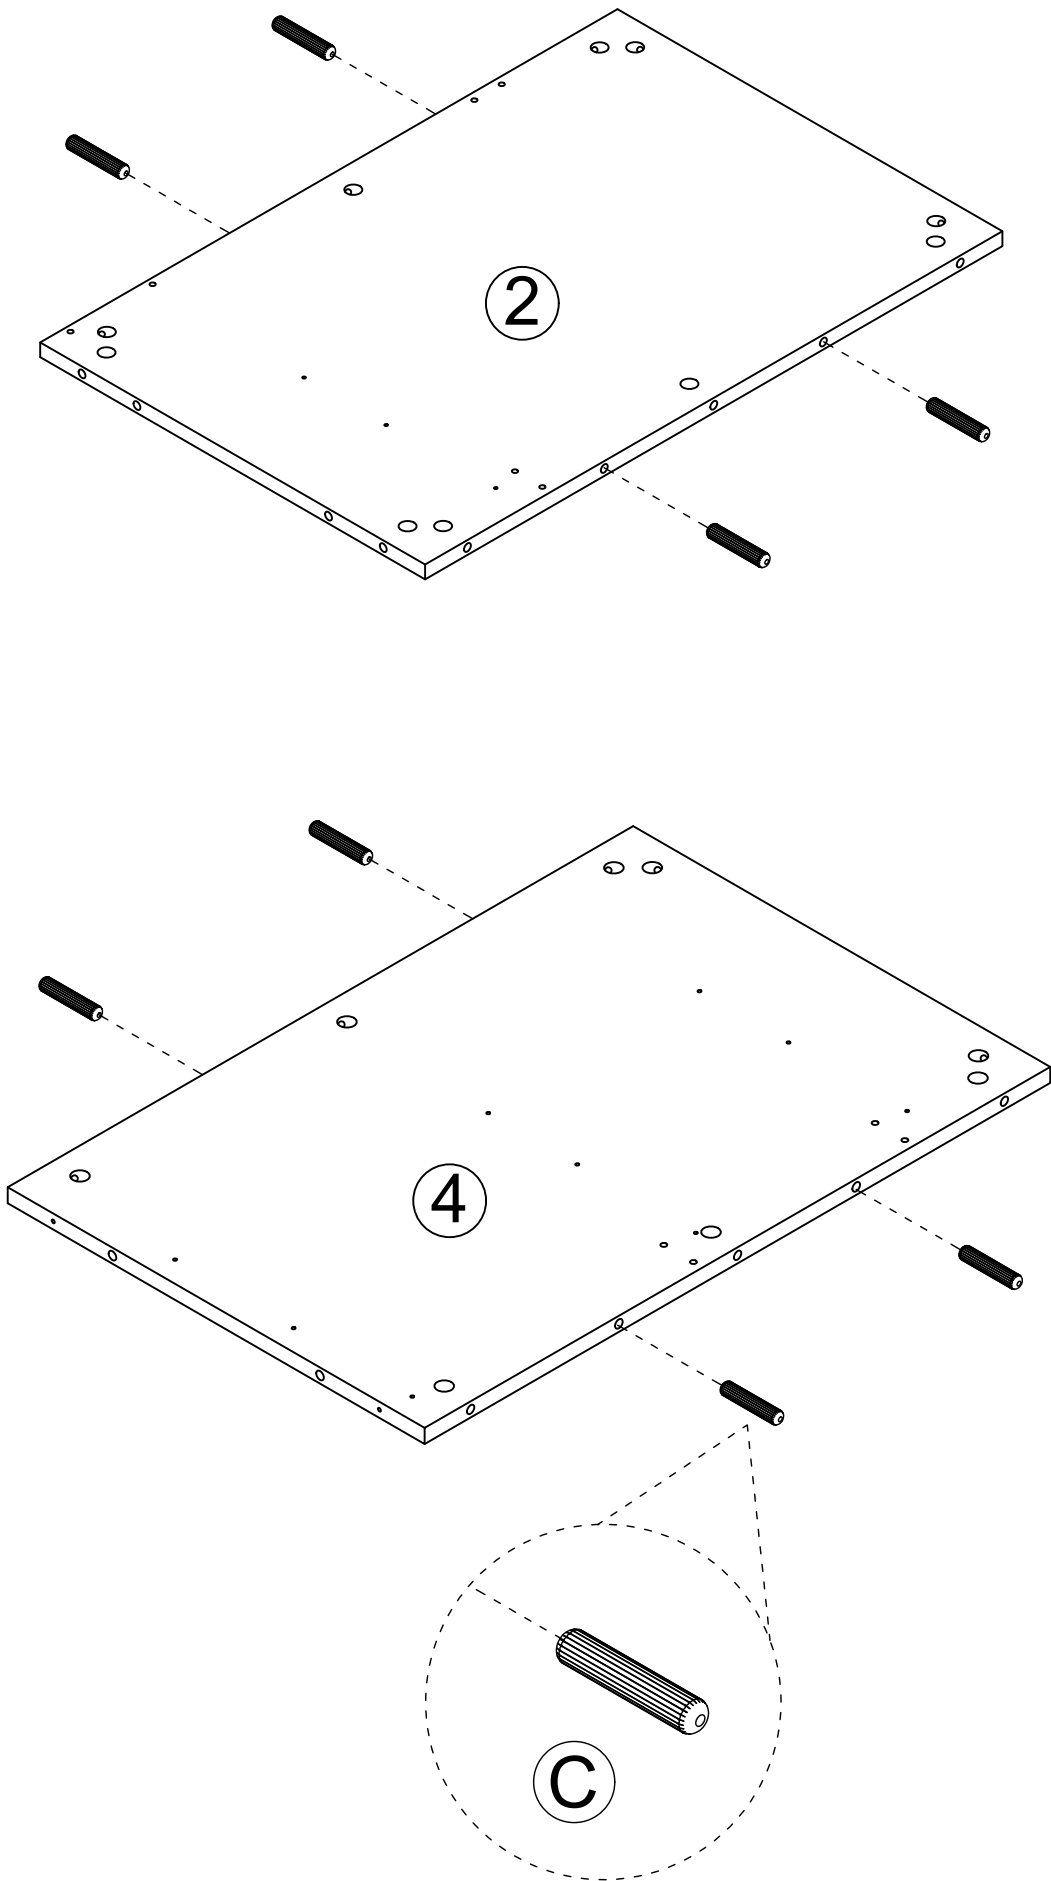


STEP10

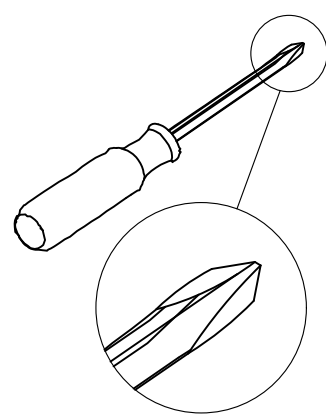


 Ø15X9.5mm		 Ø21mm	
(A)	X12	(J)	X12

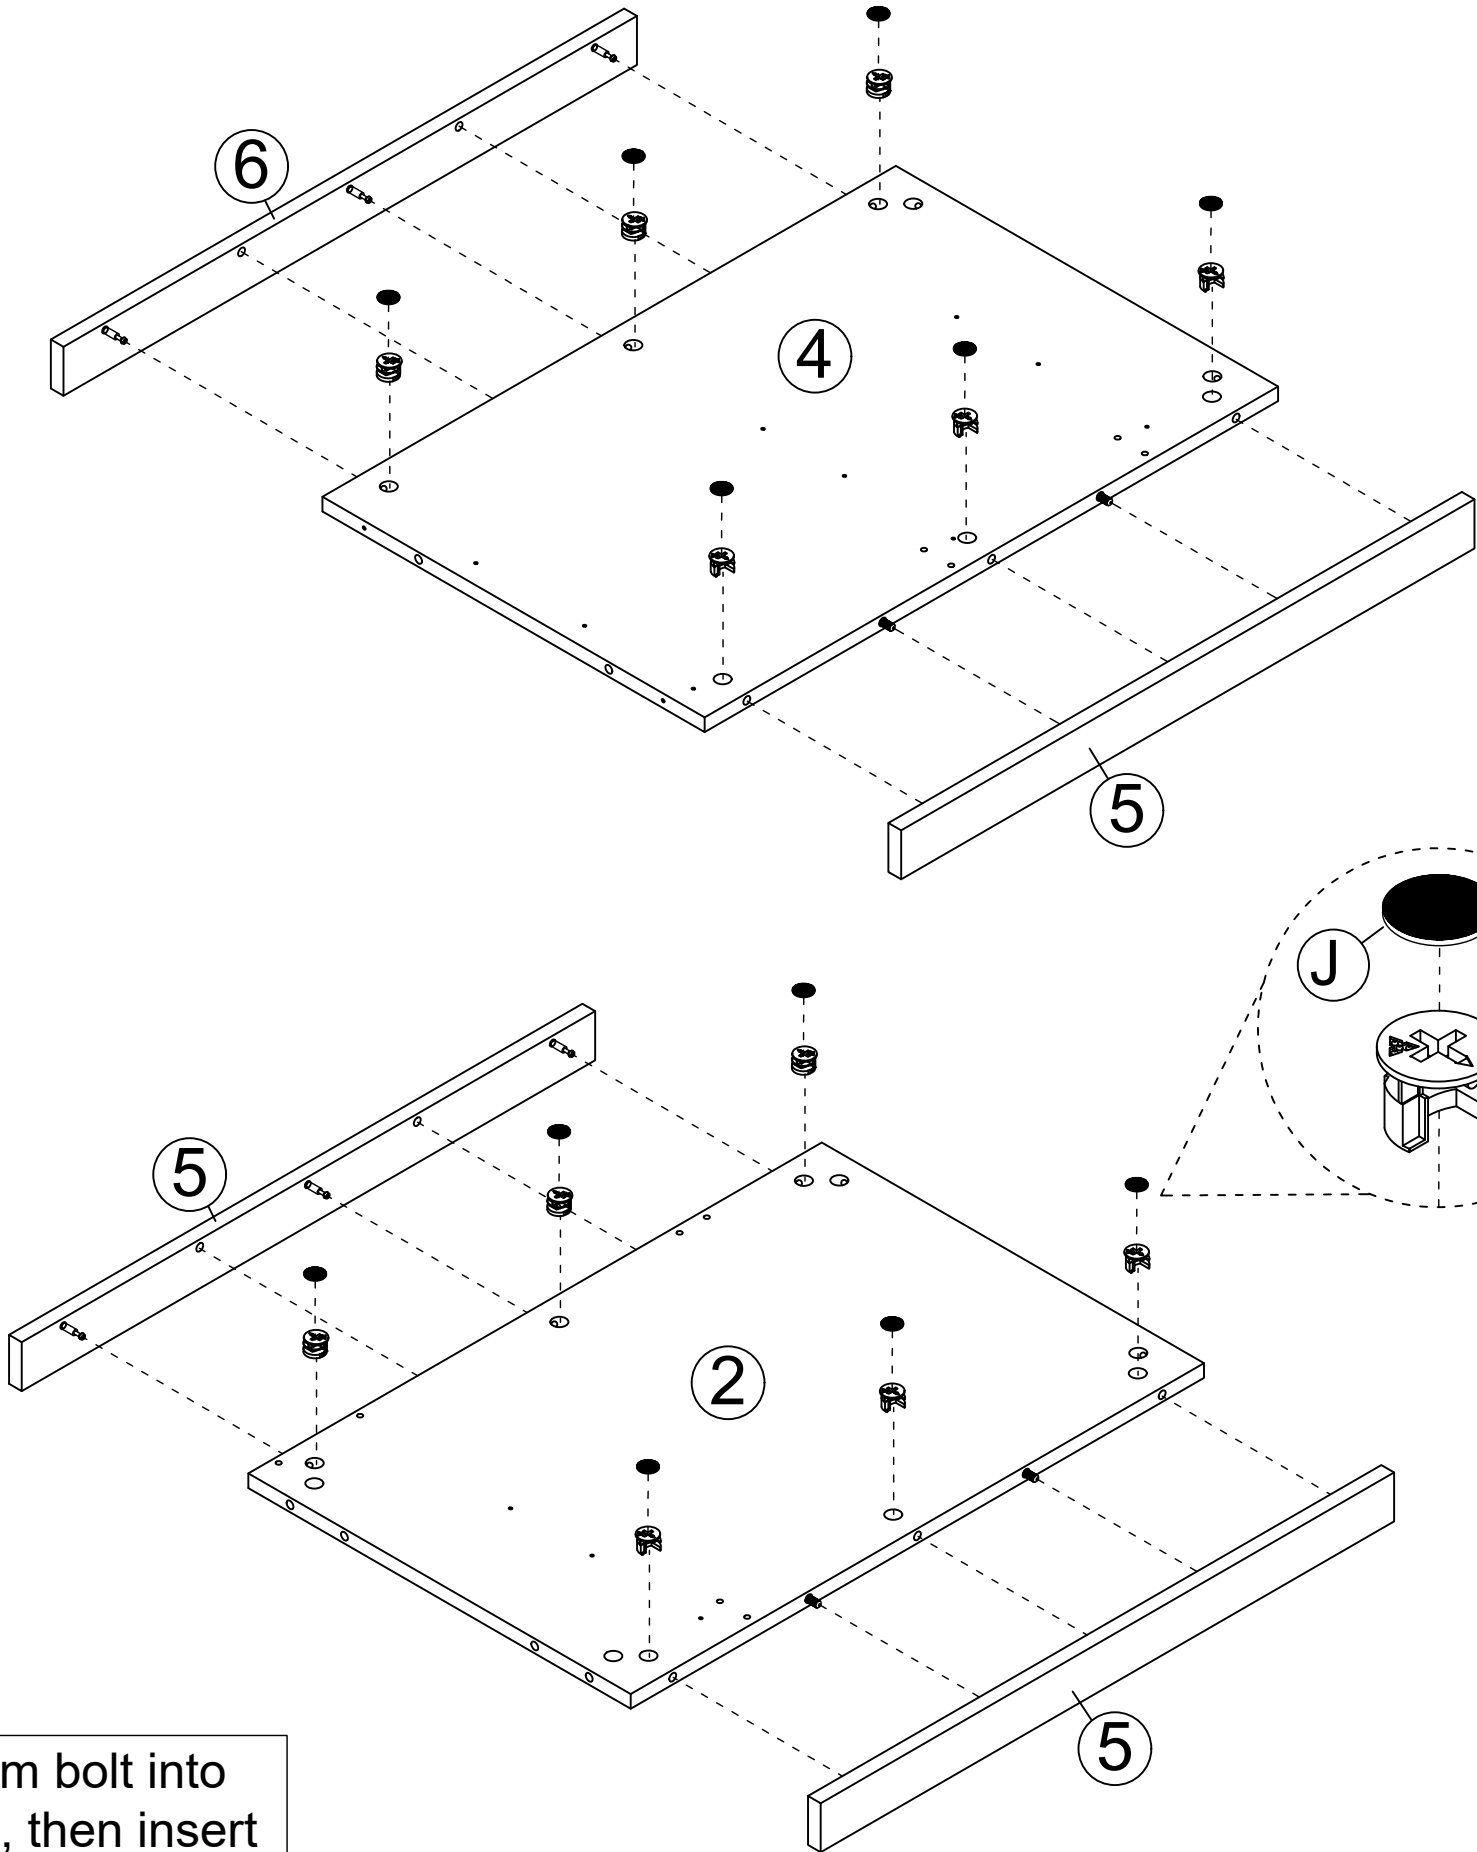



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

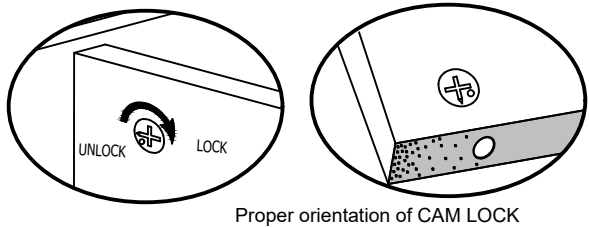



STEP11

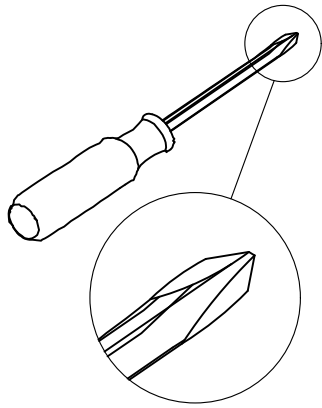


 Ø3.5X14mm	
D	X12

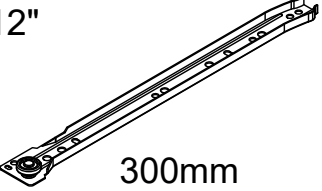
12"  300mm	
M-CL	X1

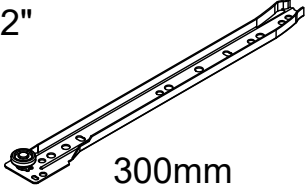12"  300mm	
M-CR	X2








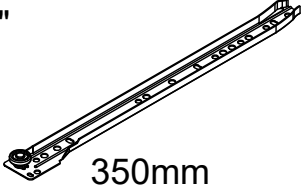
14"  350mm	
N-CR	X1

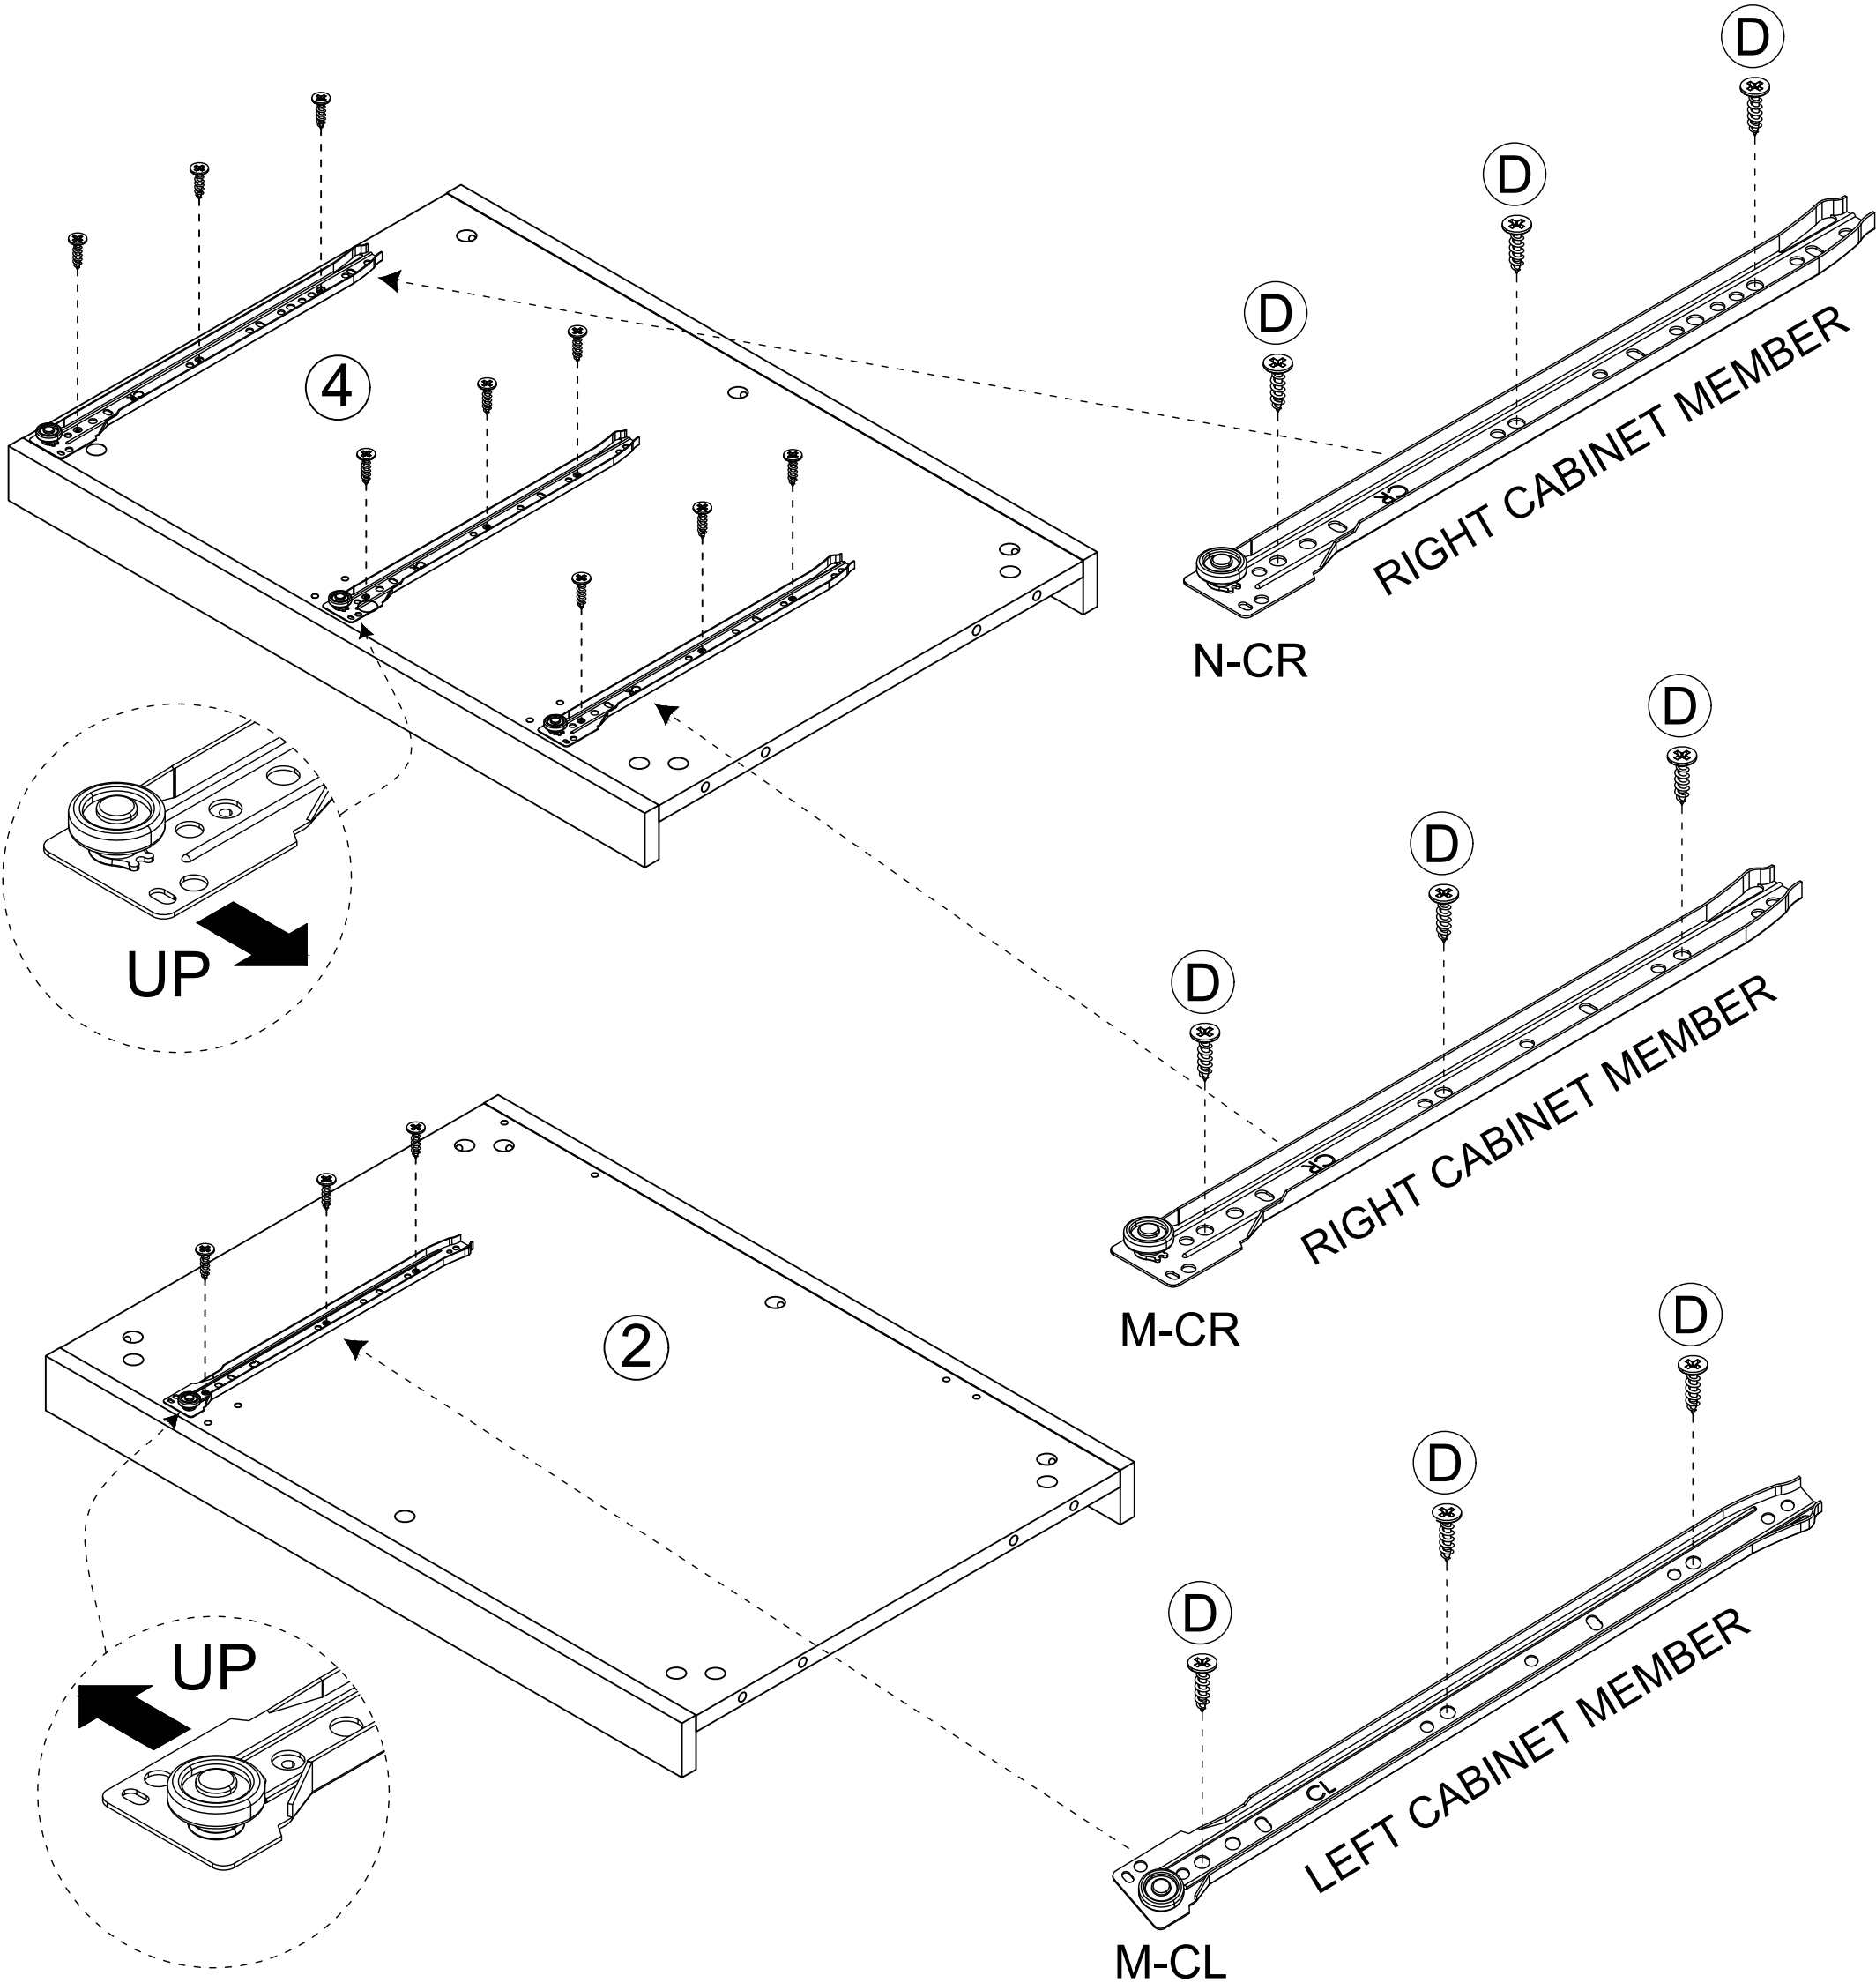


STEP12

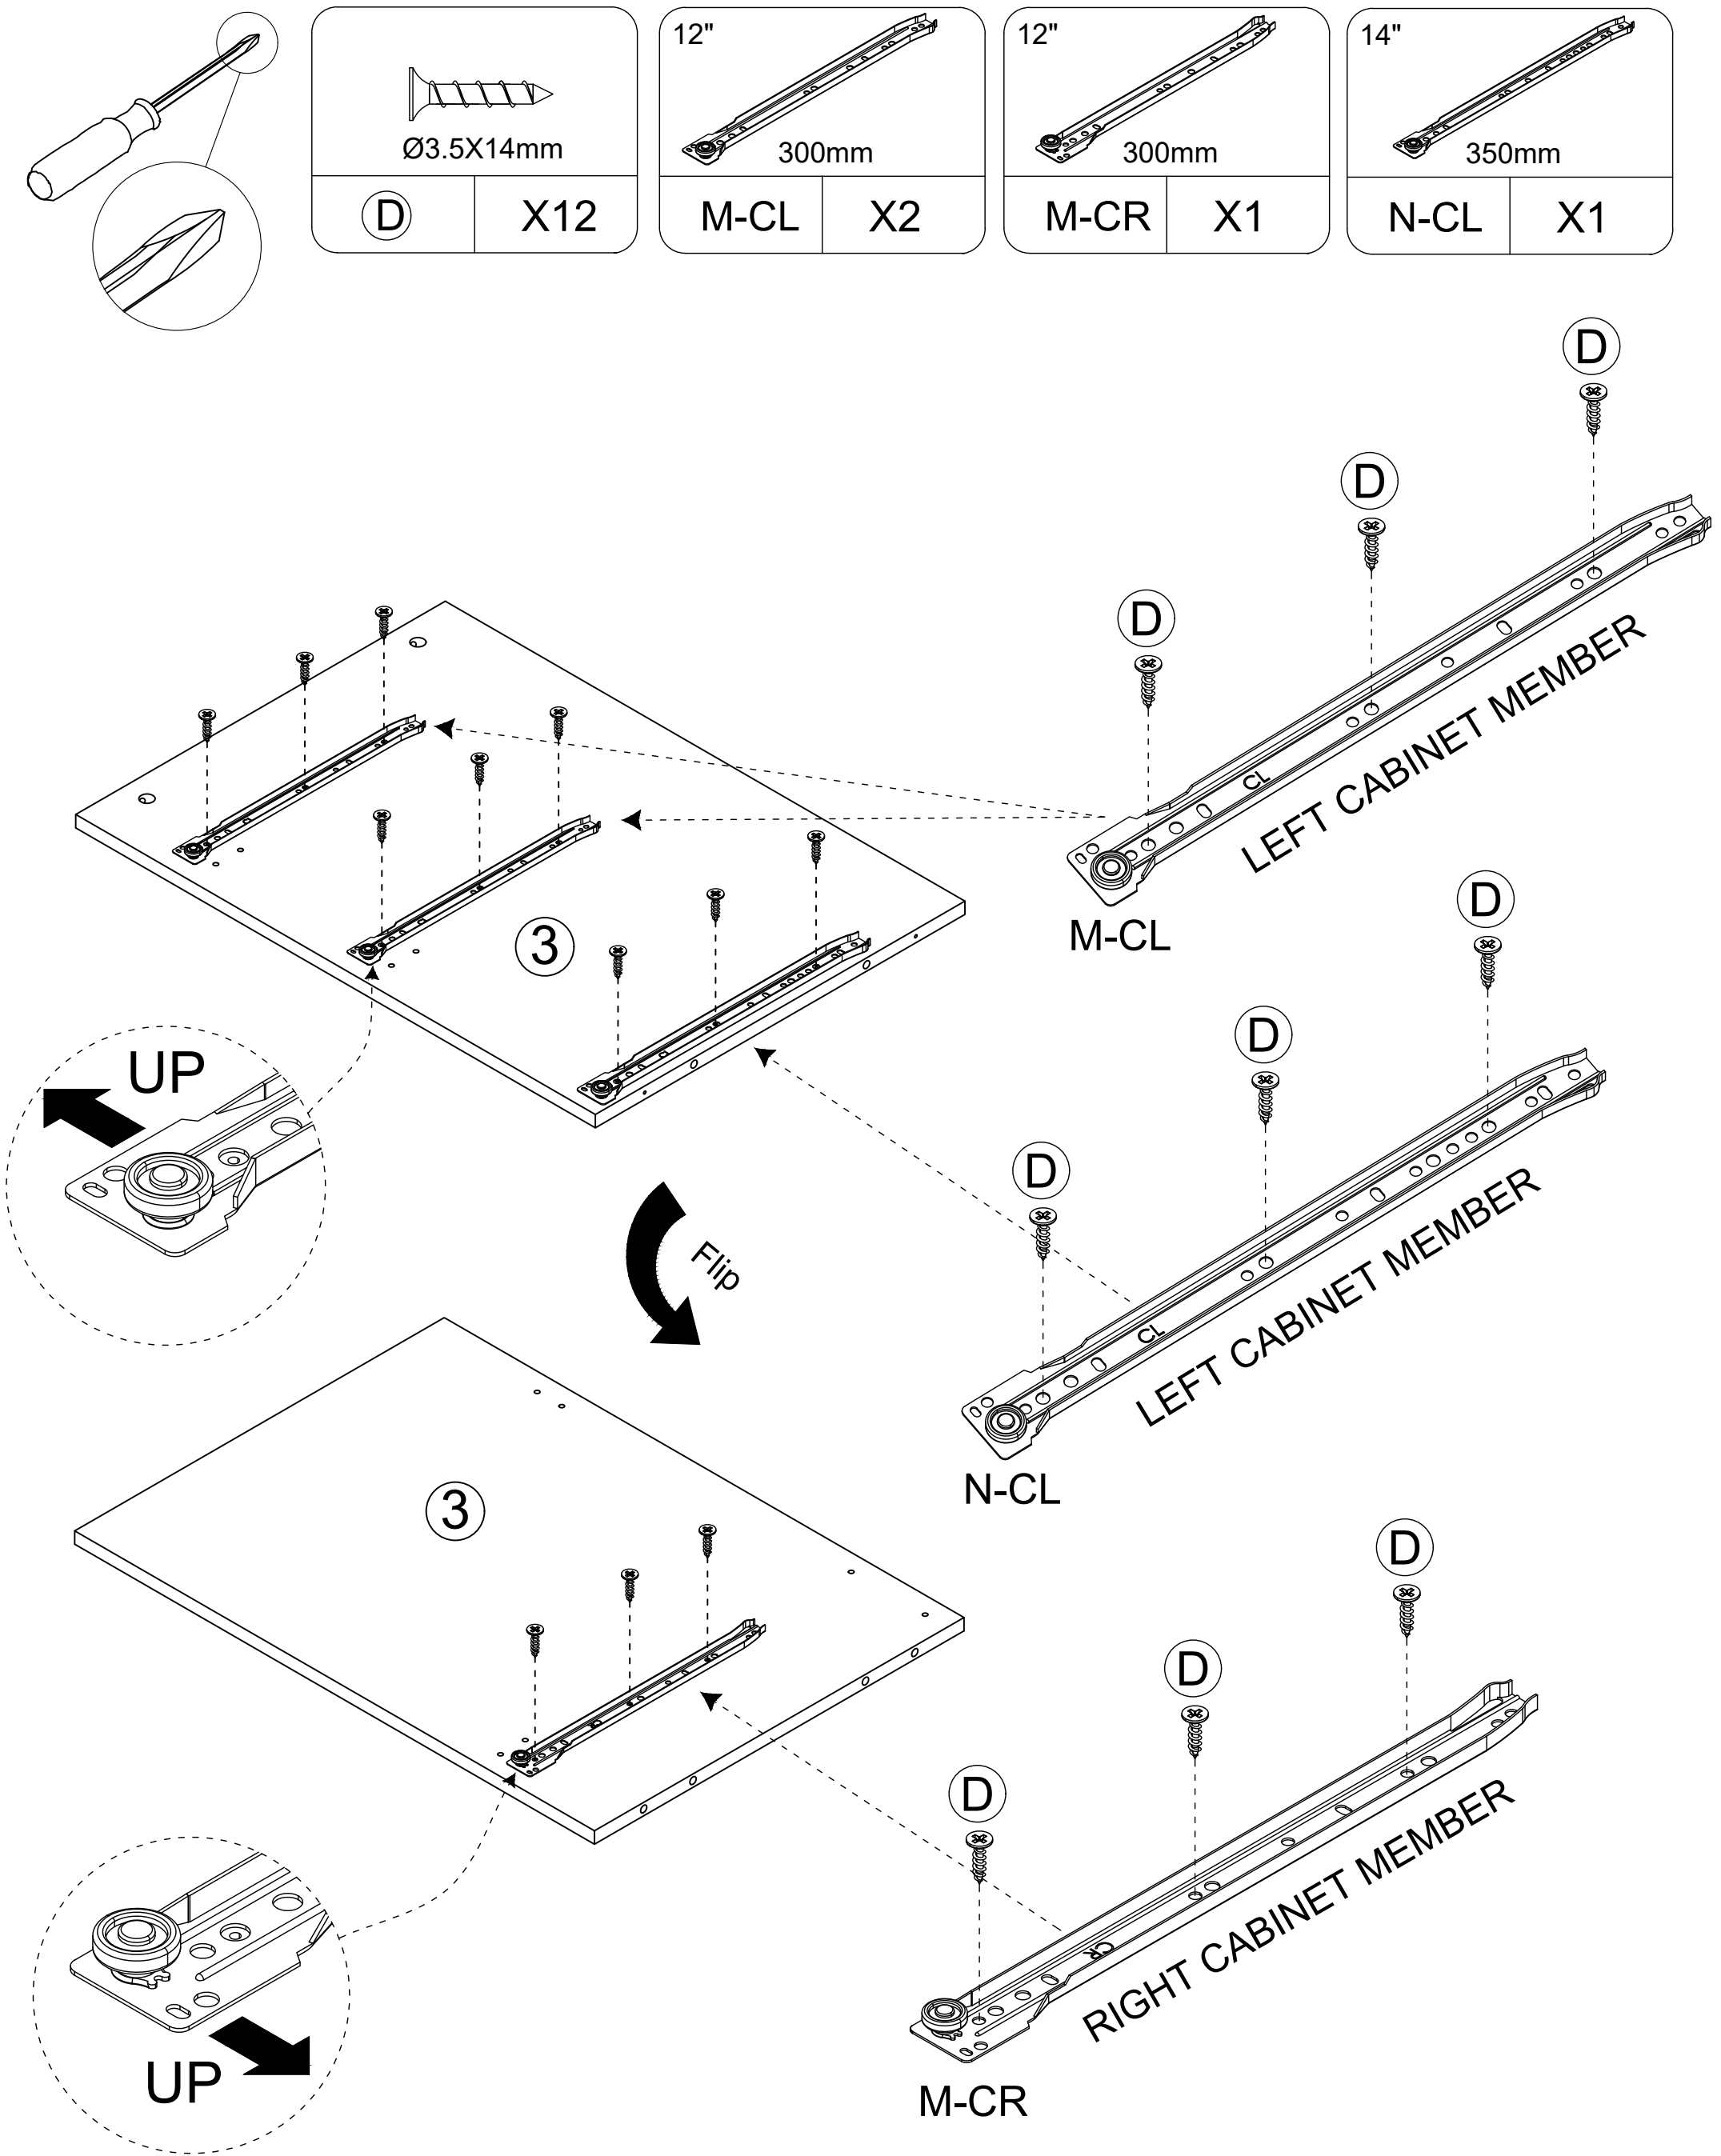


STEP13

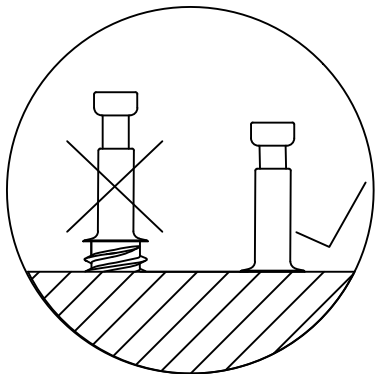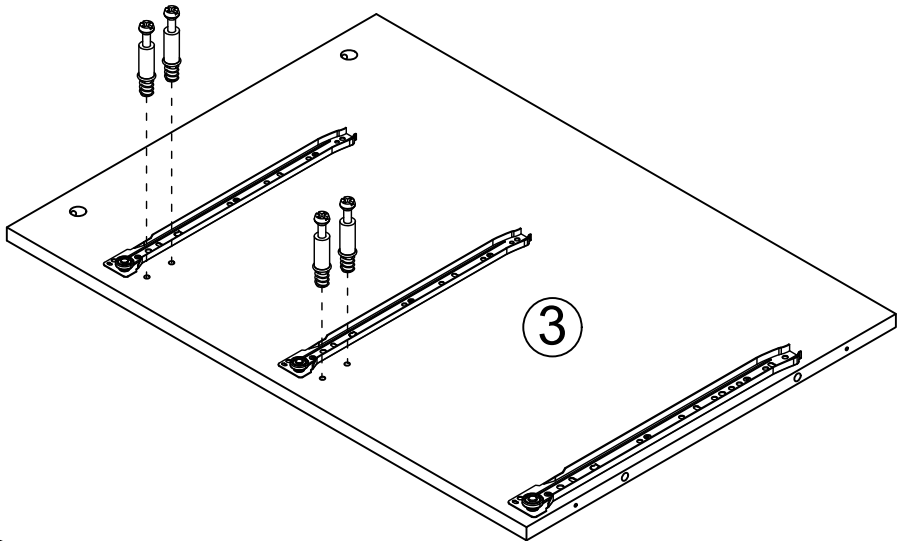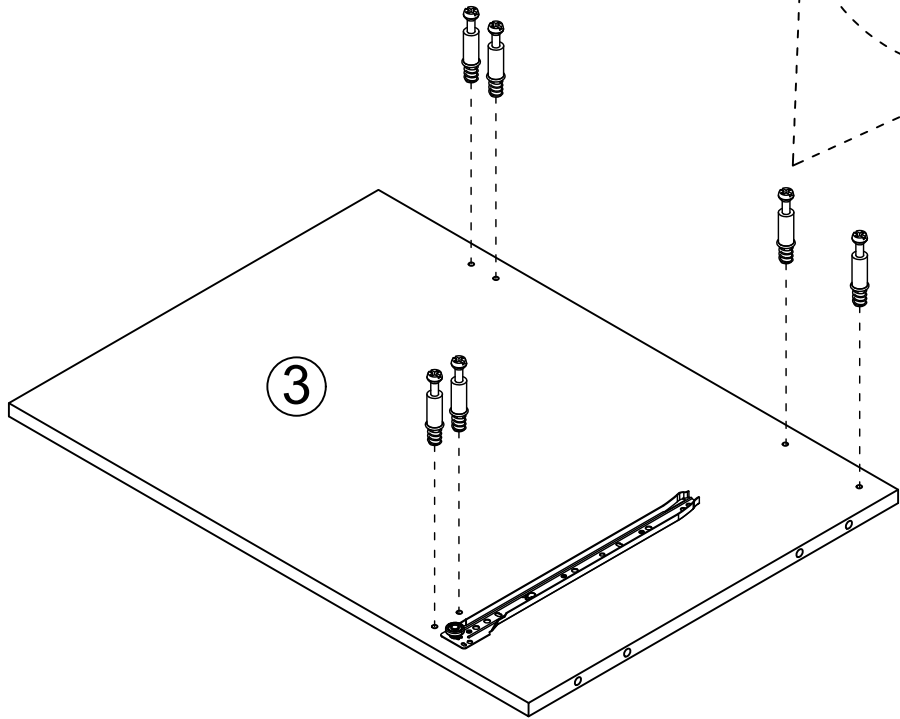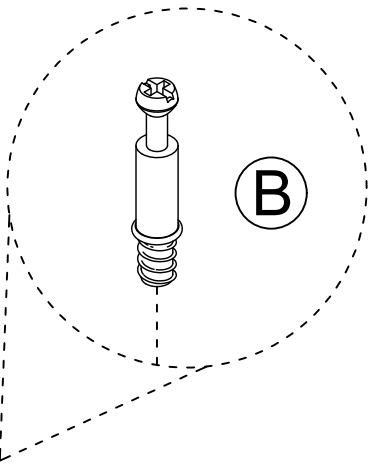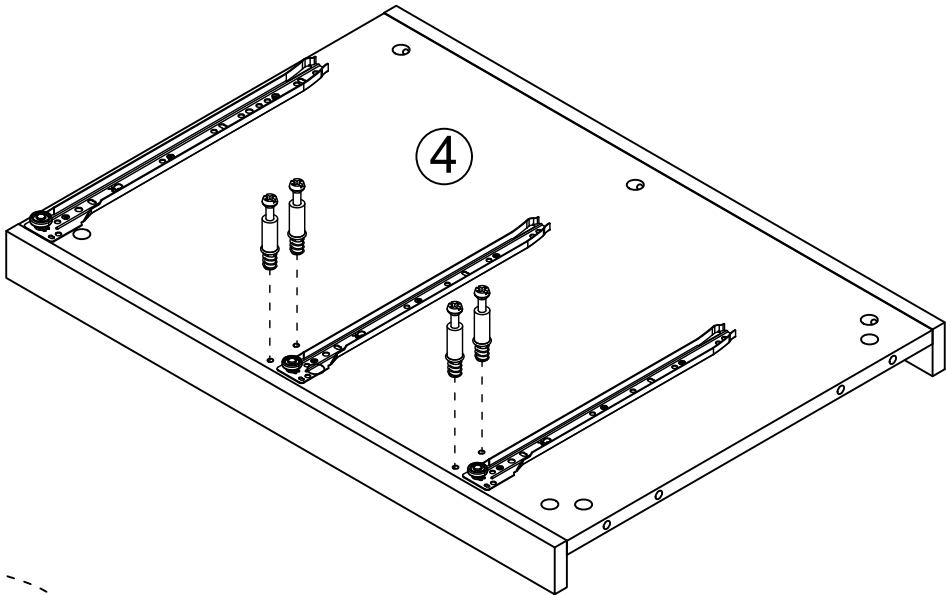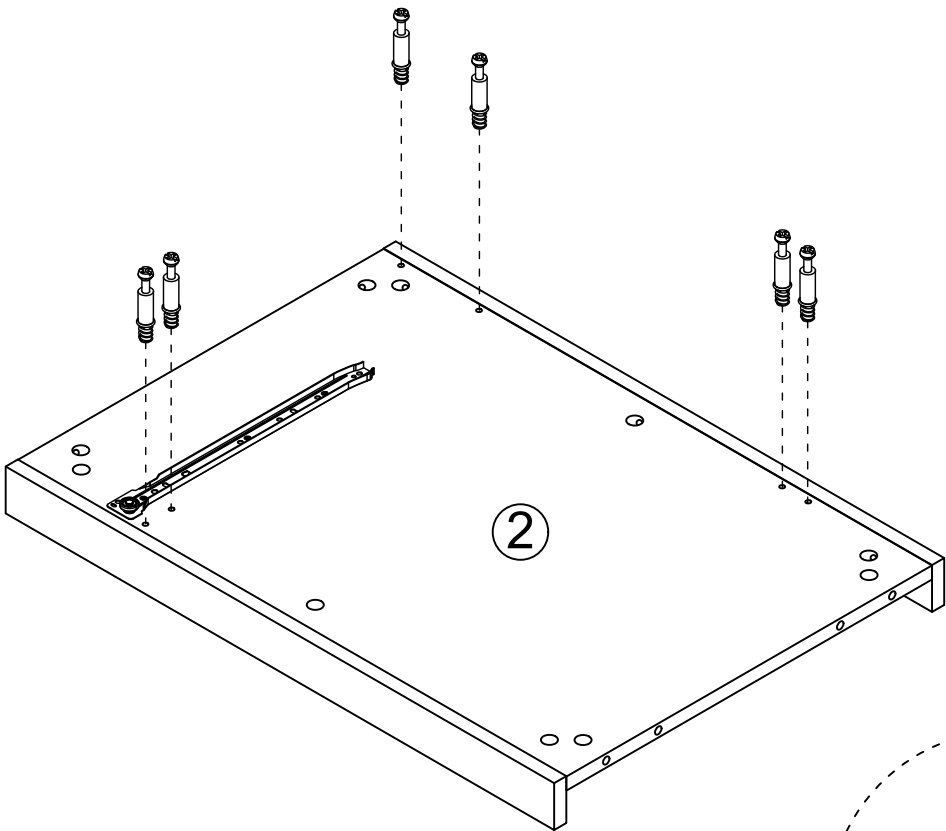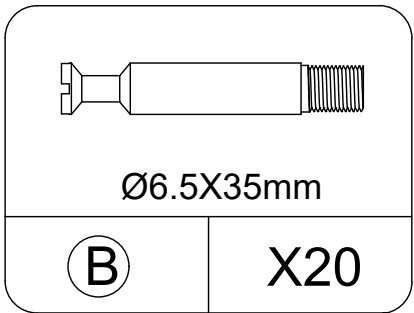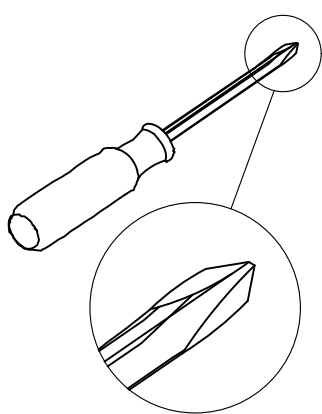


STEP14

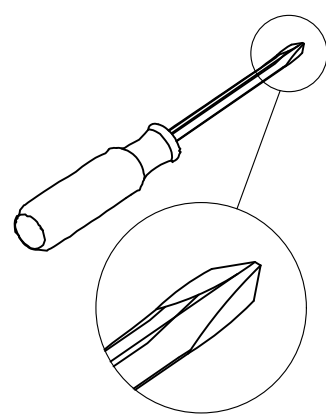





 Ø15X9.5mm		 Ø21mm	
(A)	X12	(J)	X4

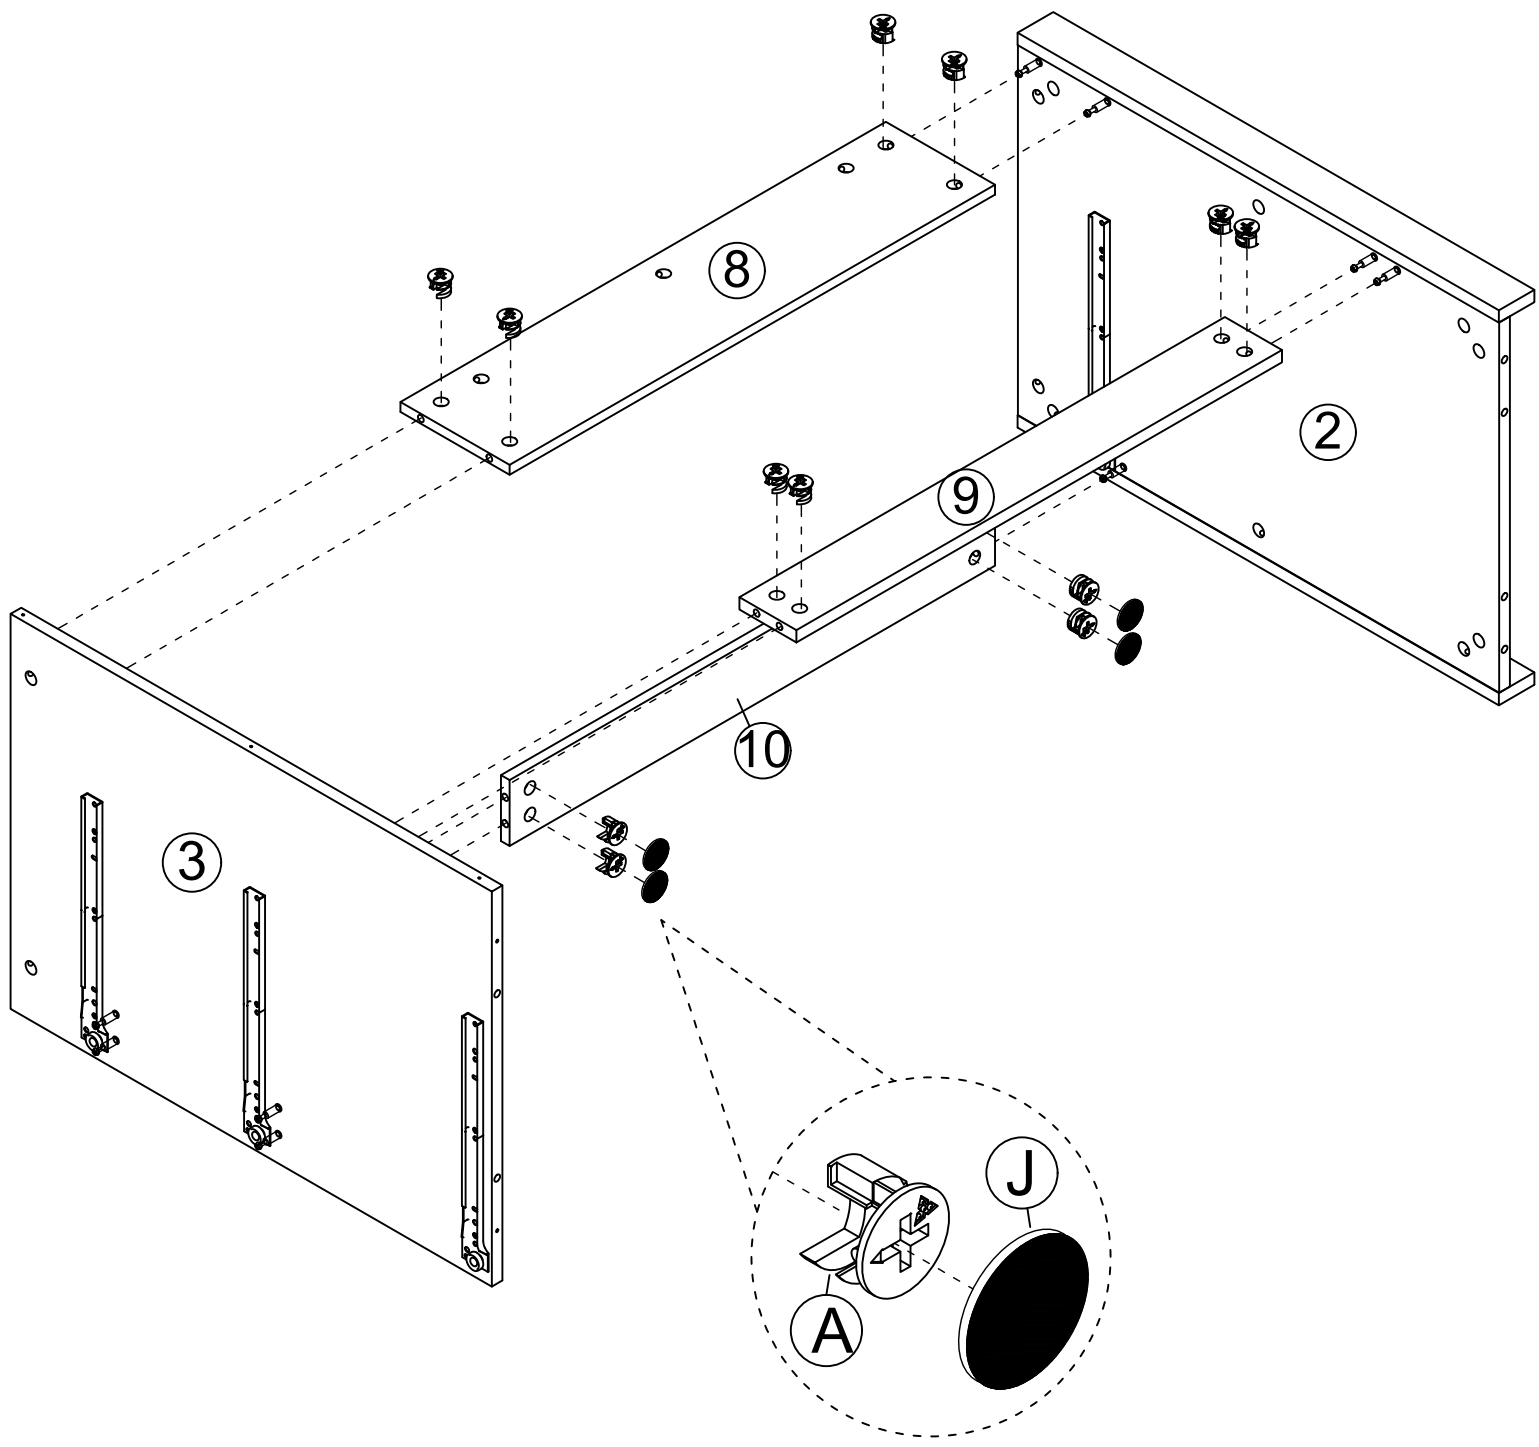


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

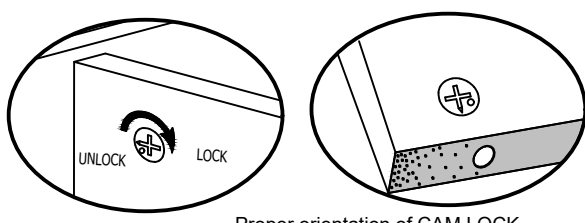





STEP15

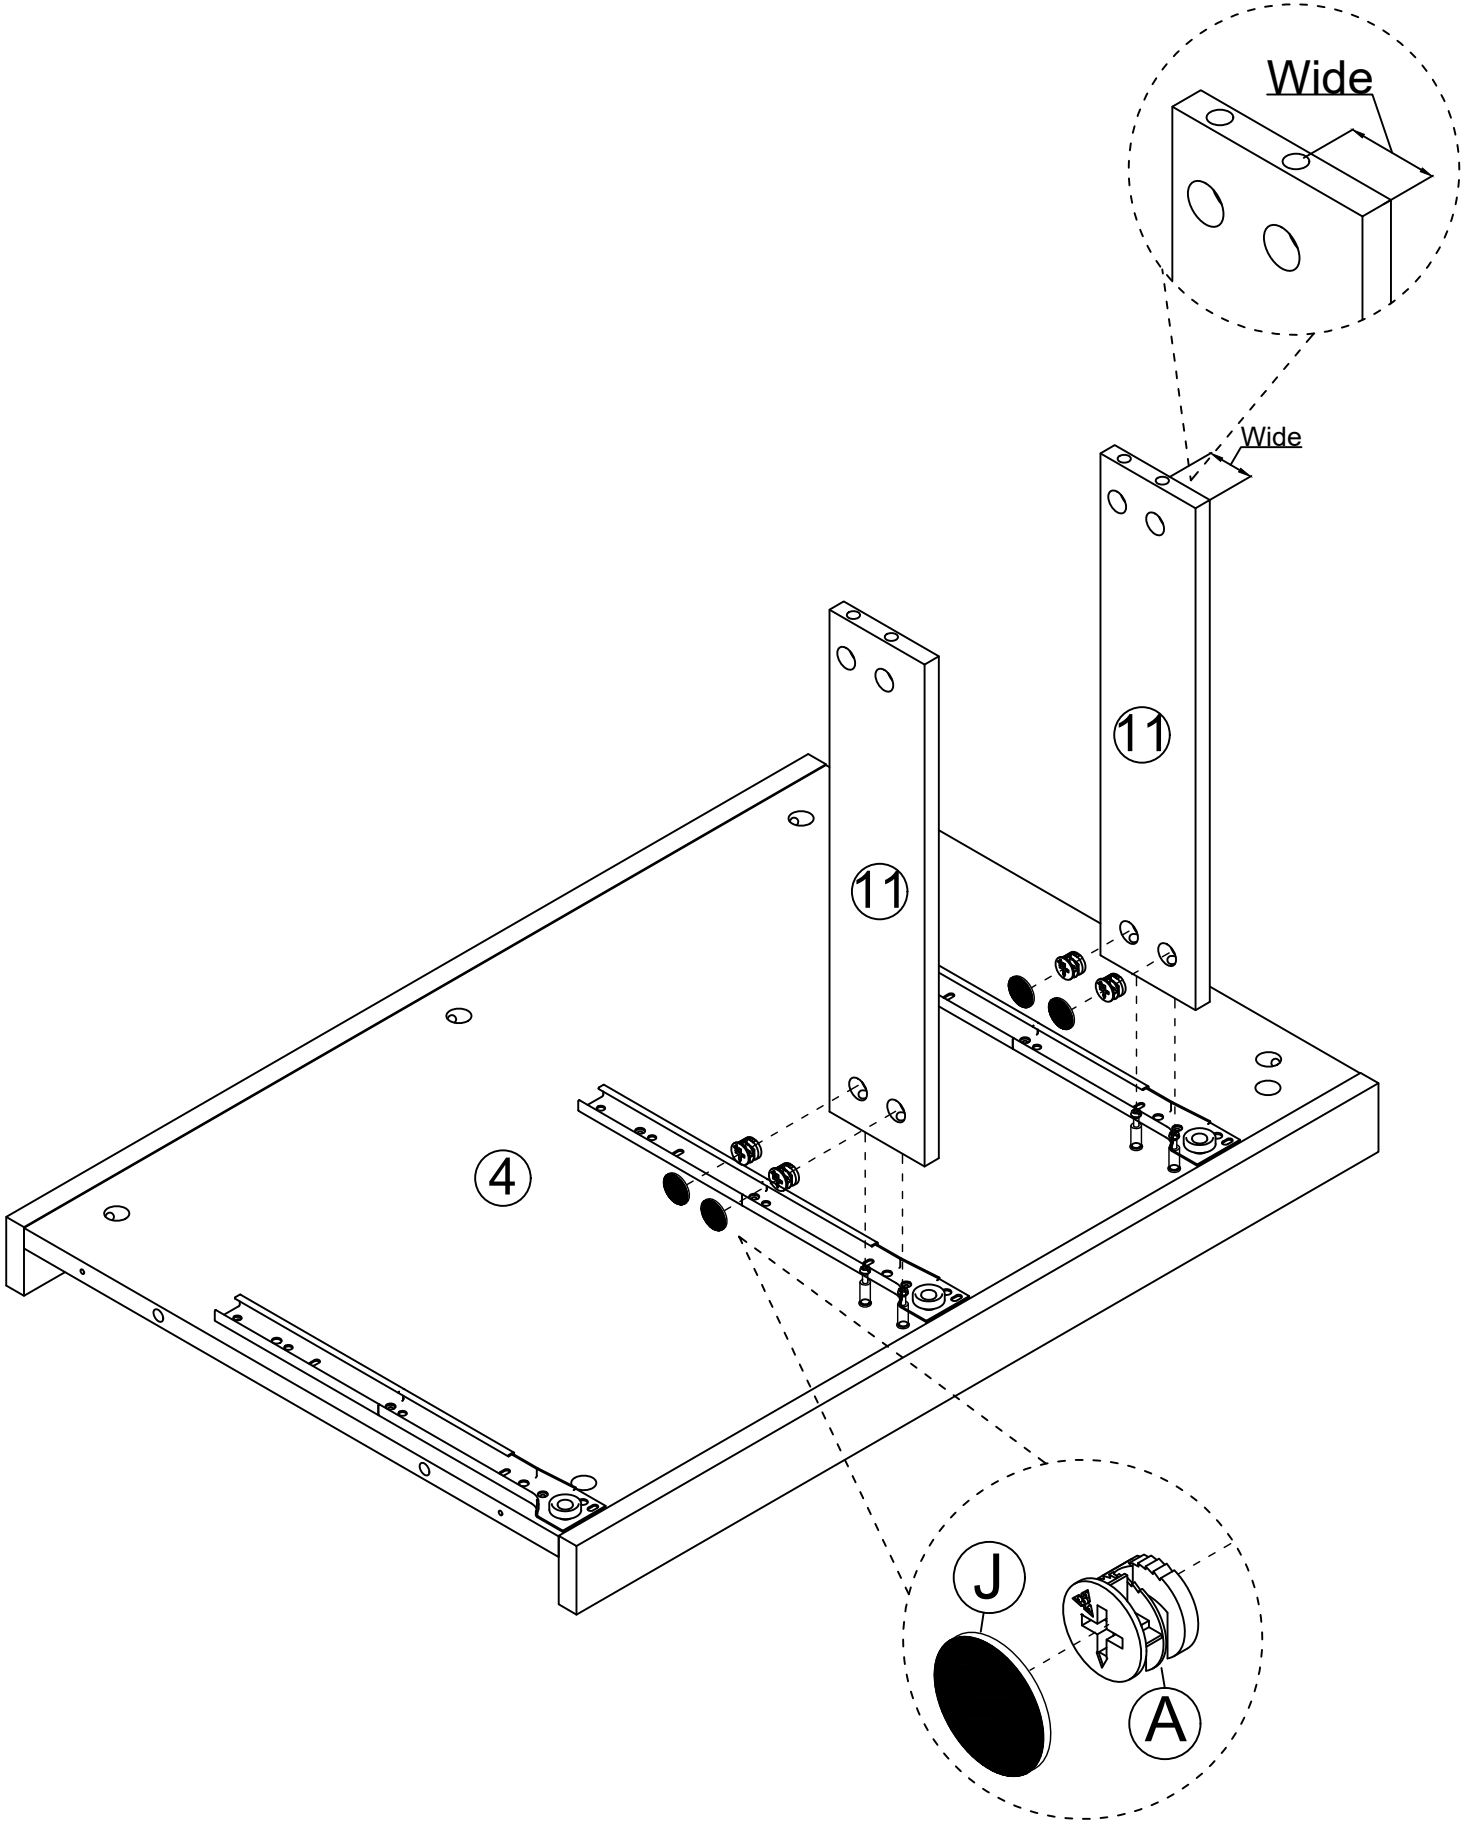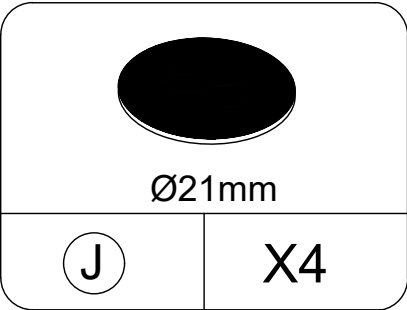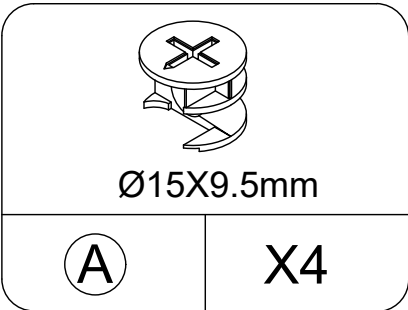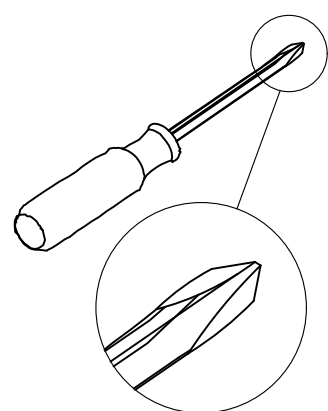


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

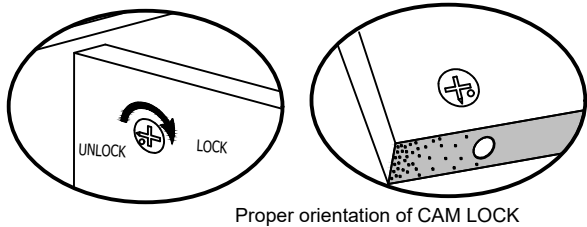

STEP16

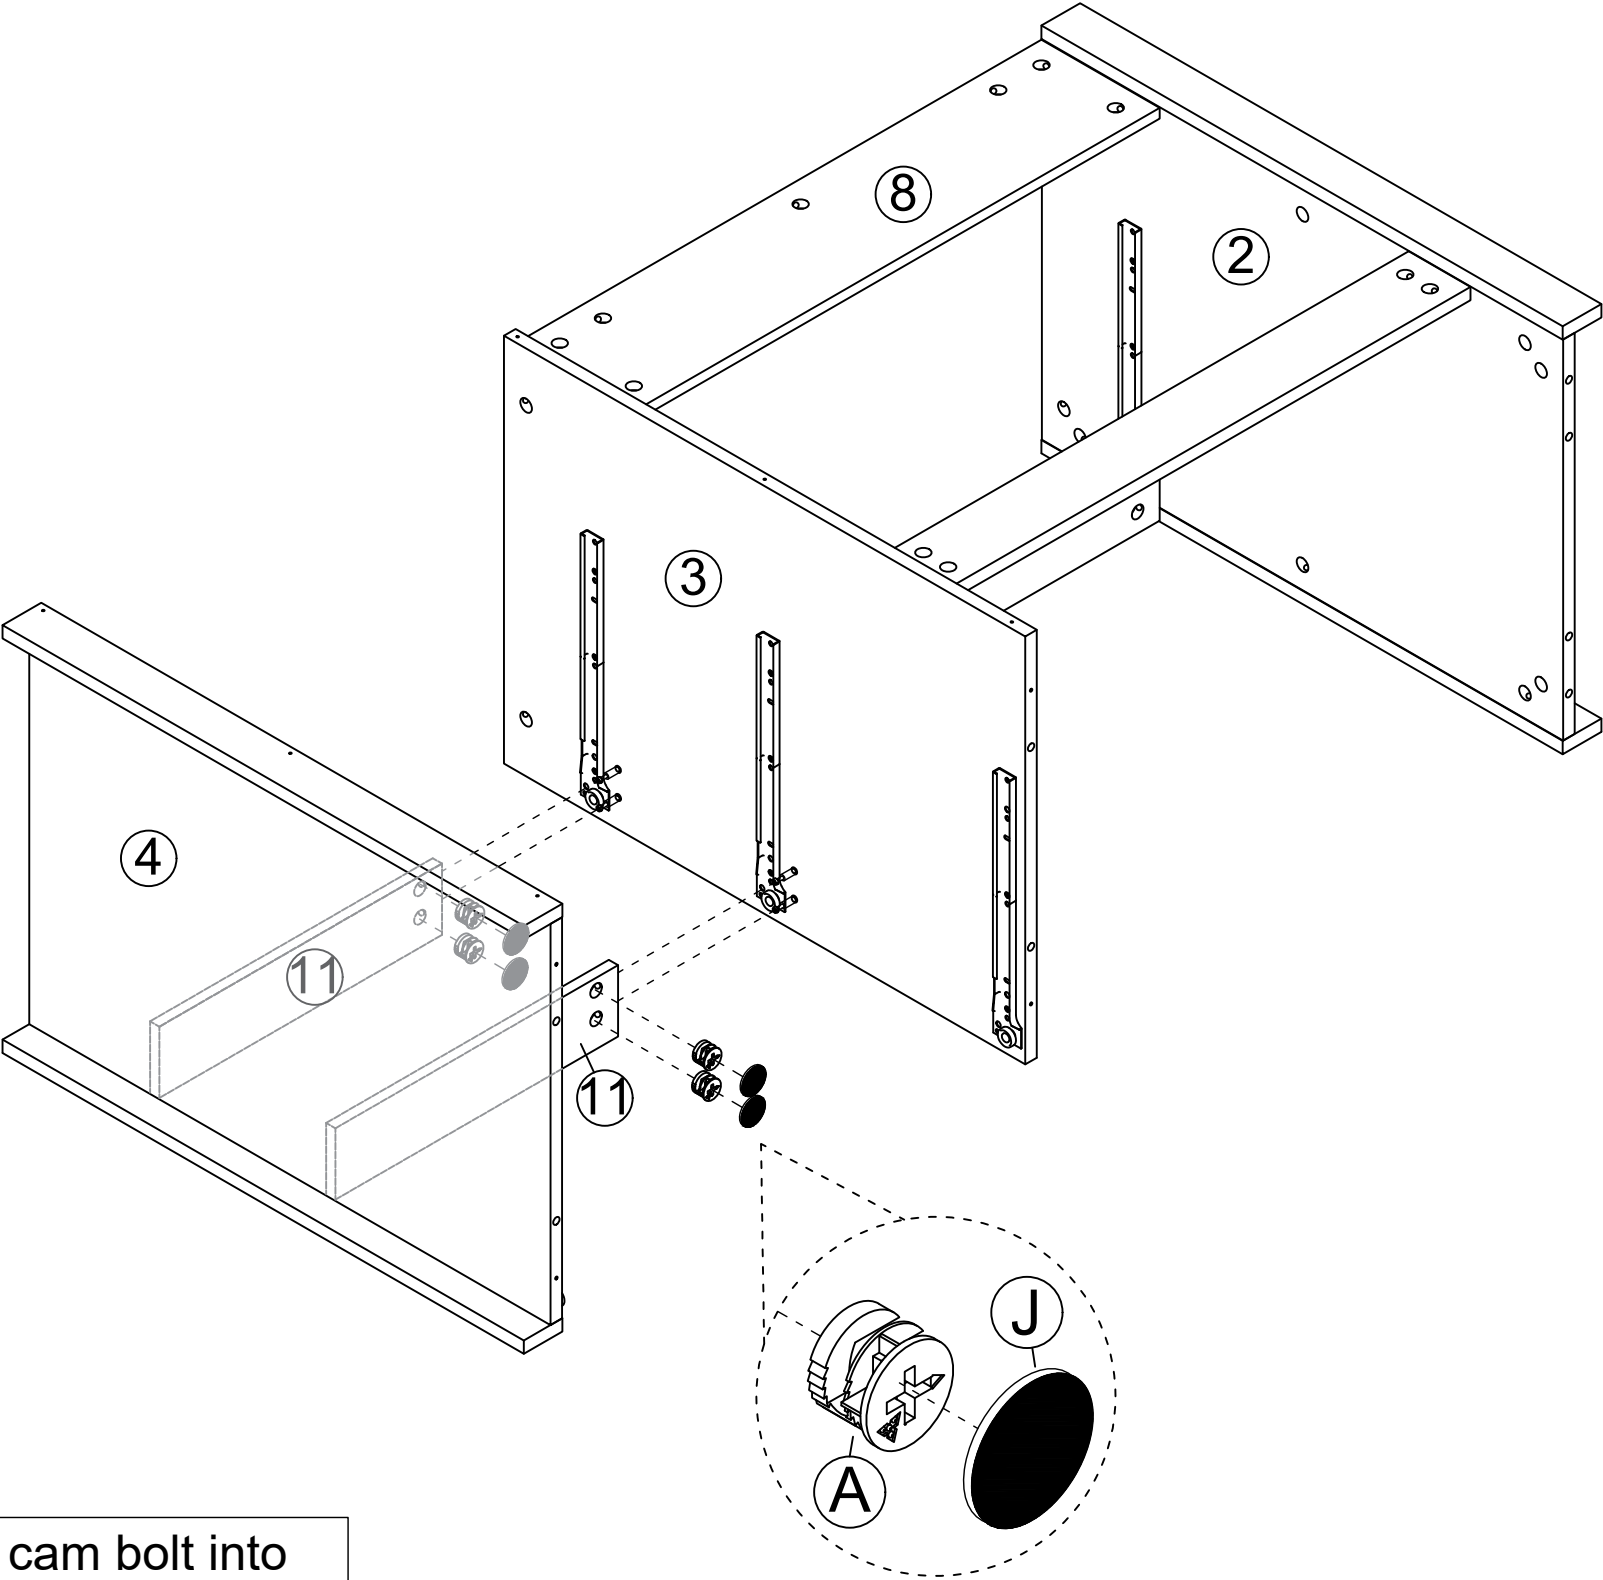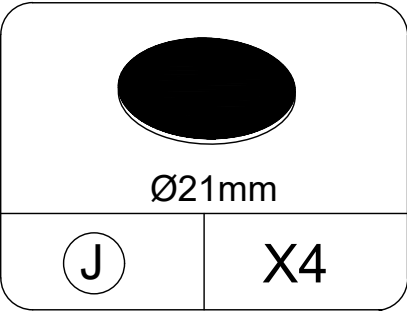
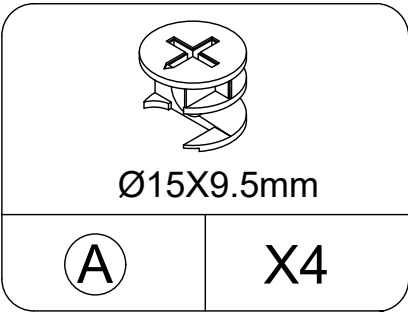
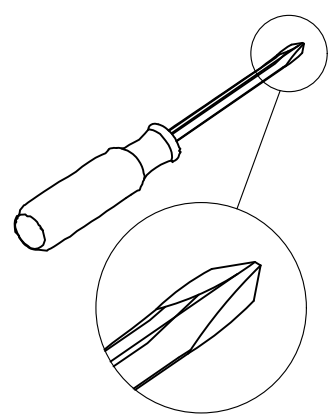


Insert the cam bolt into the hole first, then insert the cam lock and lock it.




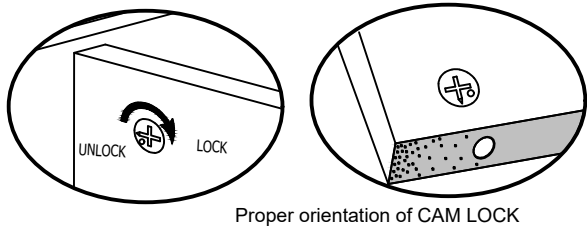


Proper orientation of CAM LOCK



STEP17

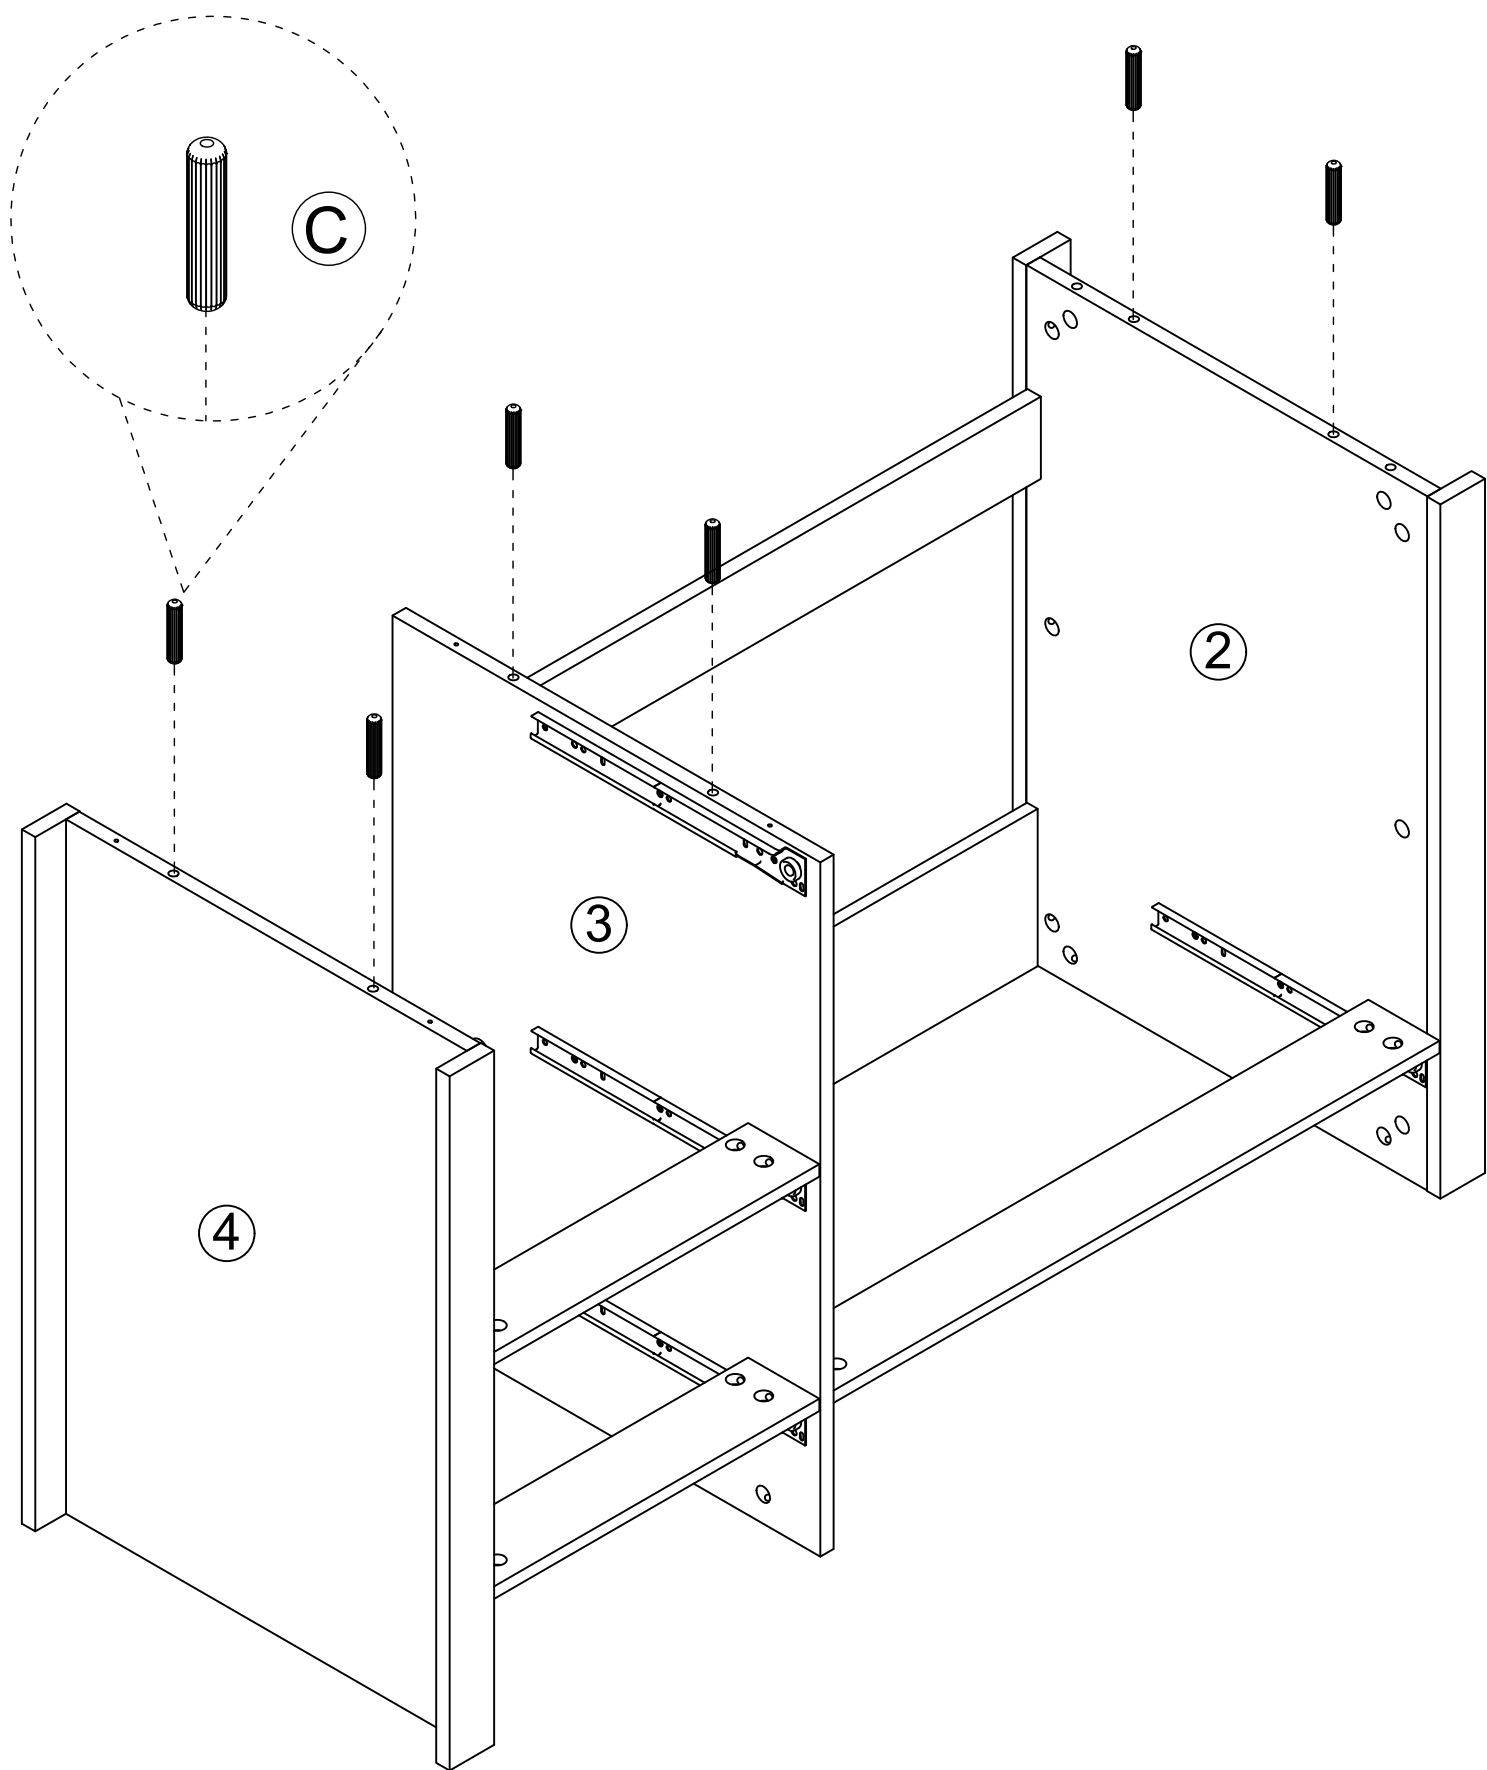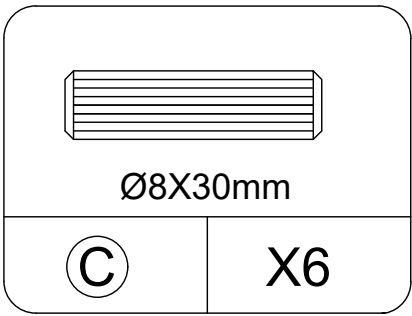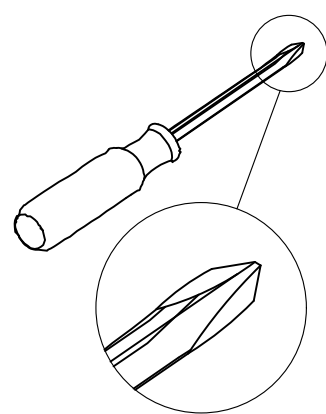






STEP18

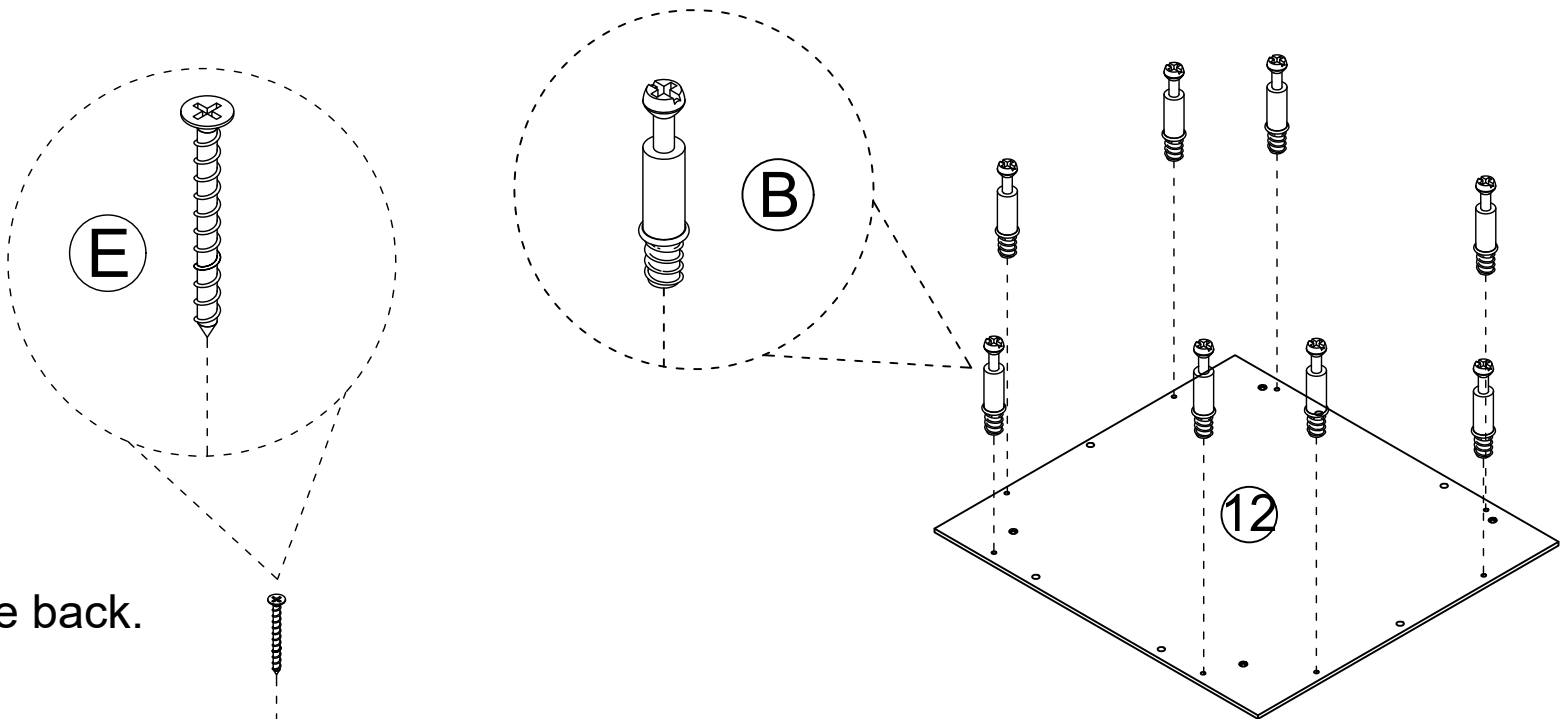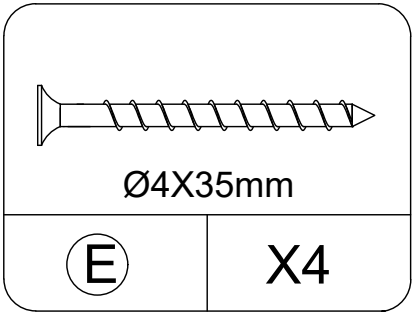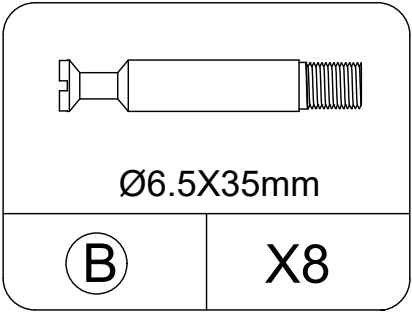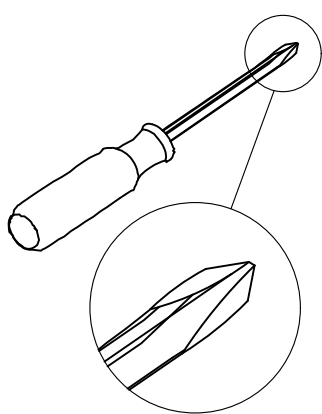



There are holes in the back.

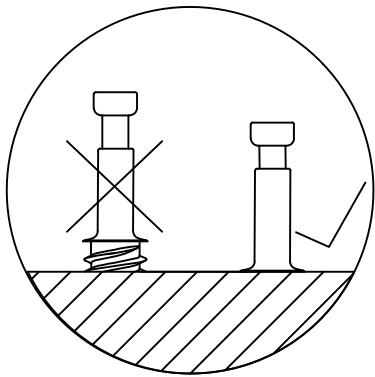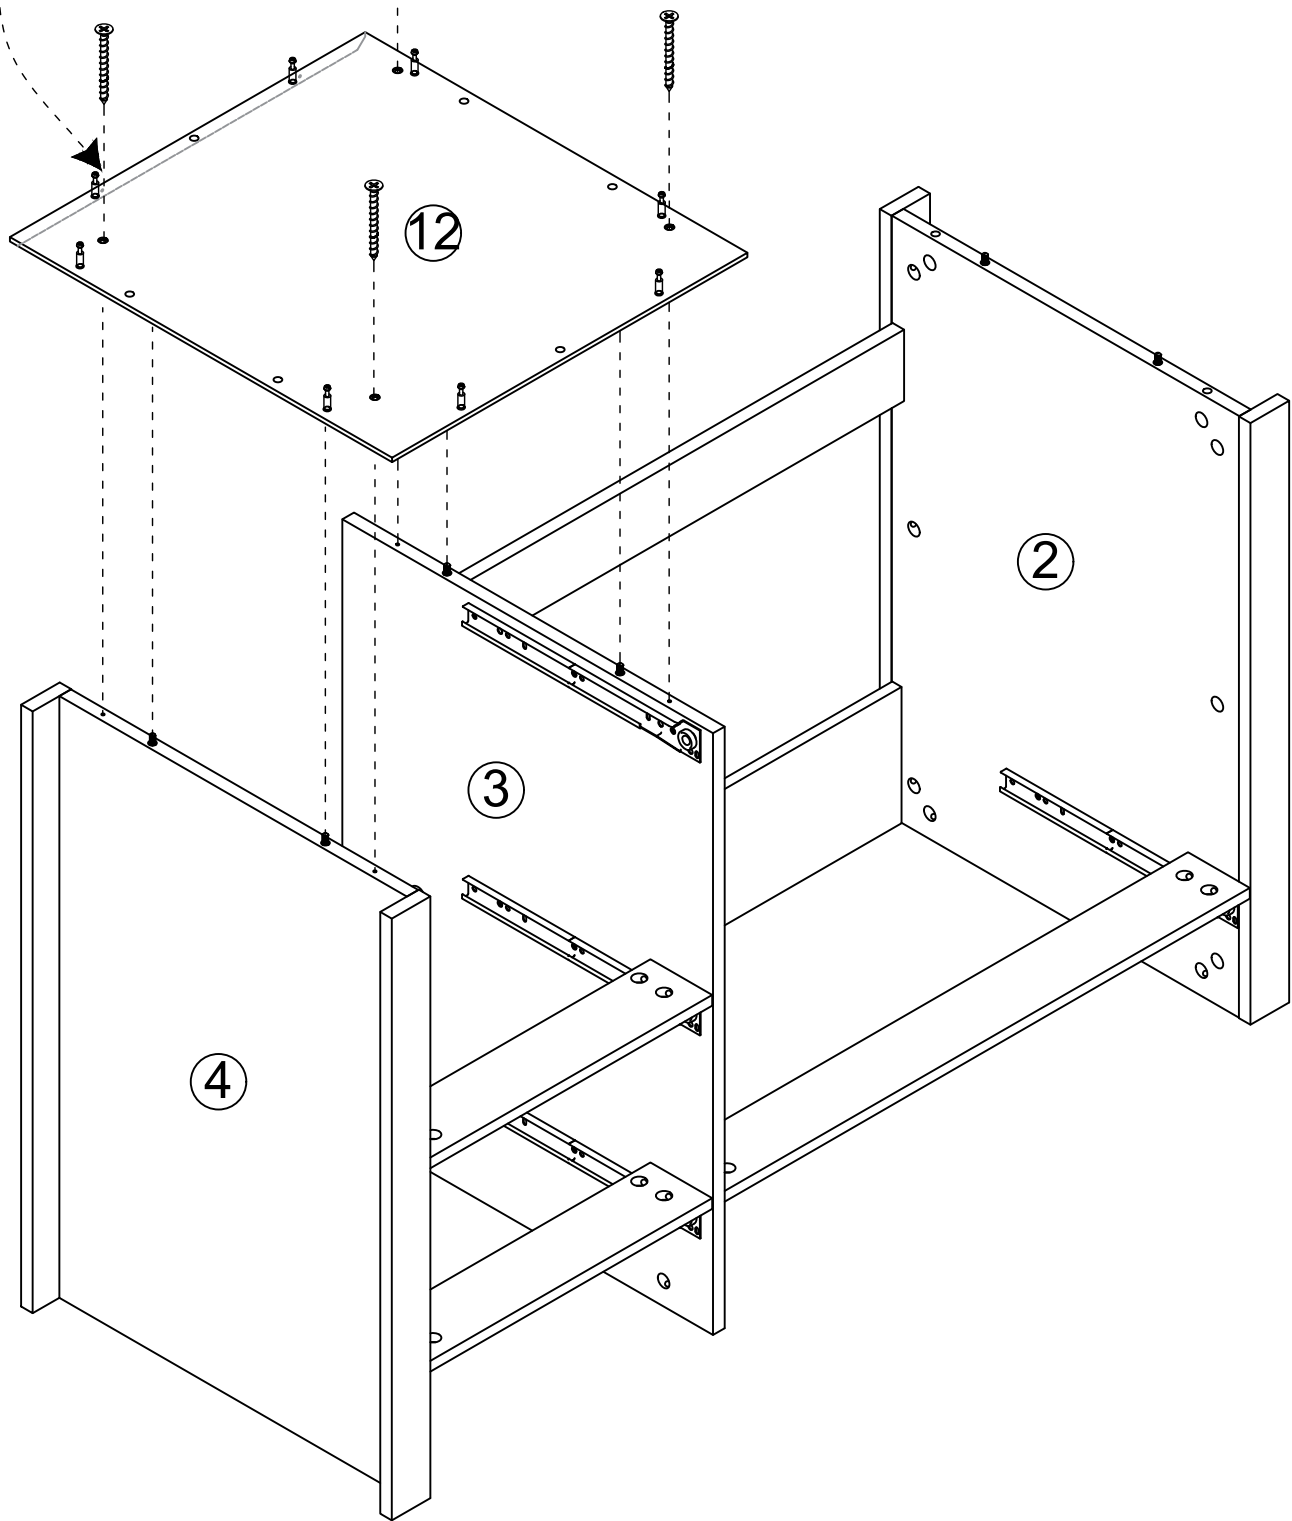

STEP19





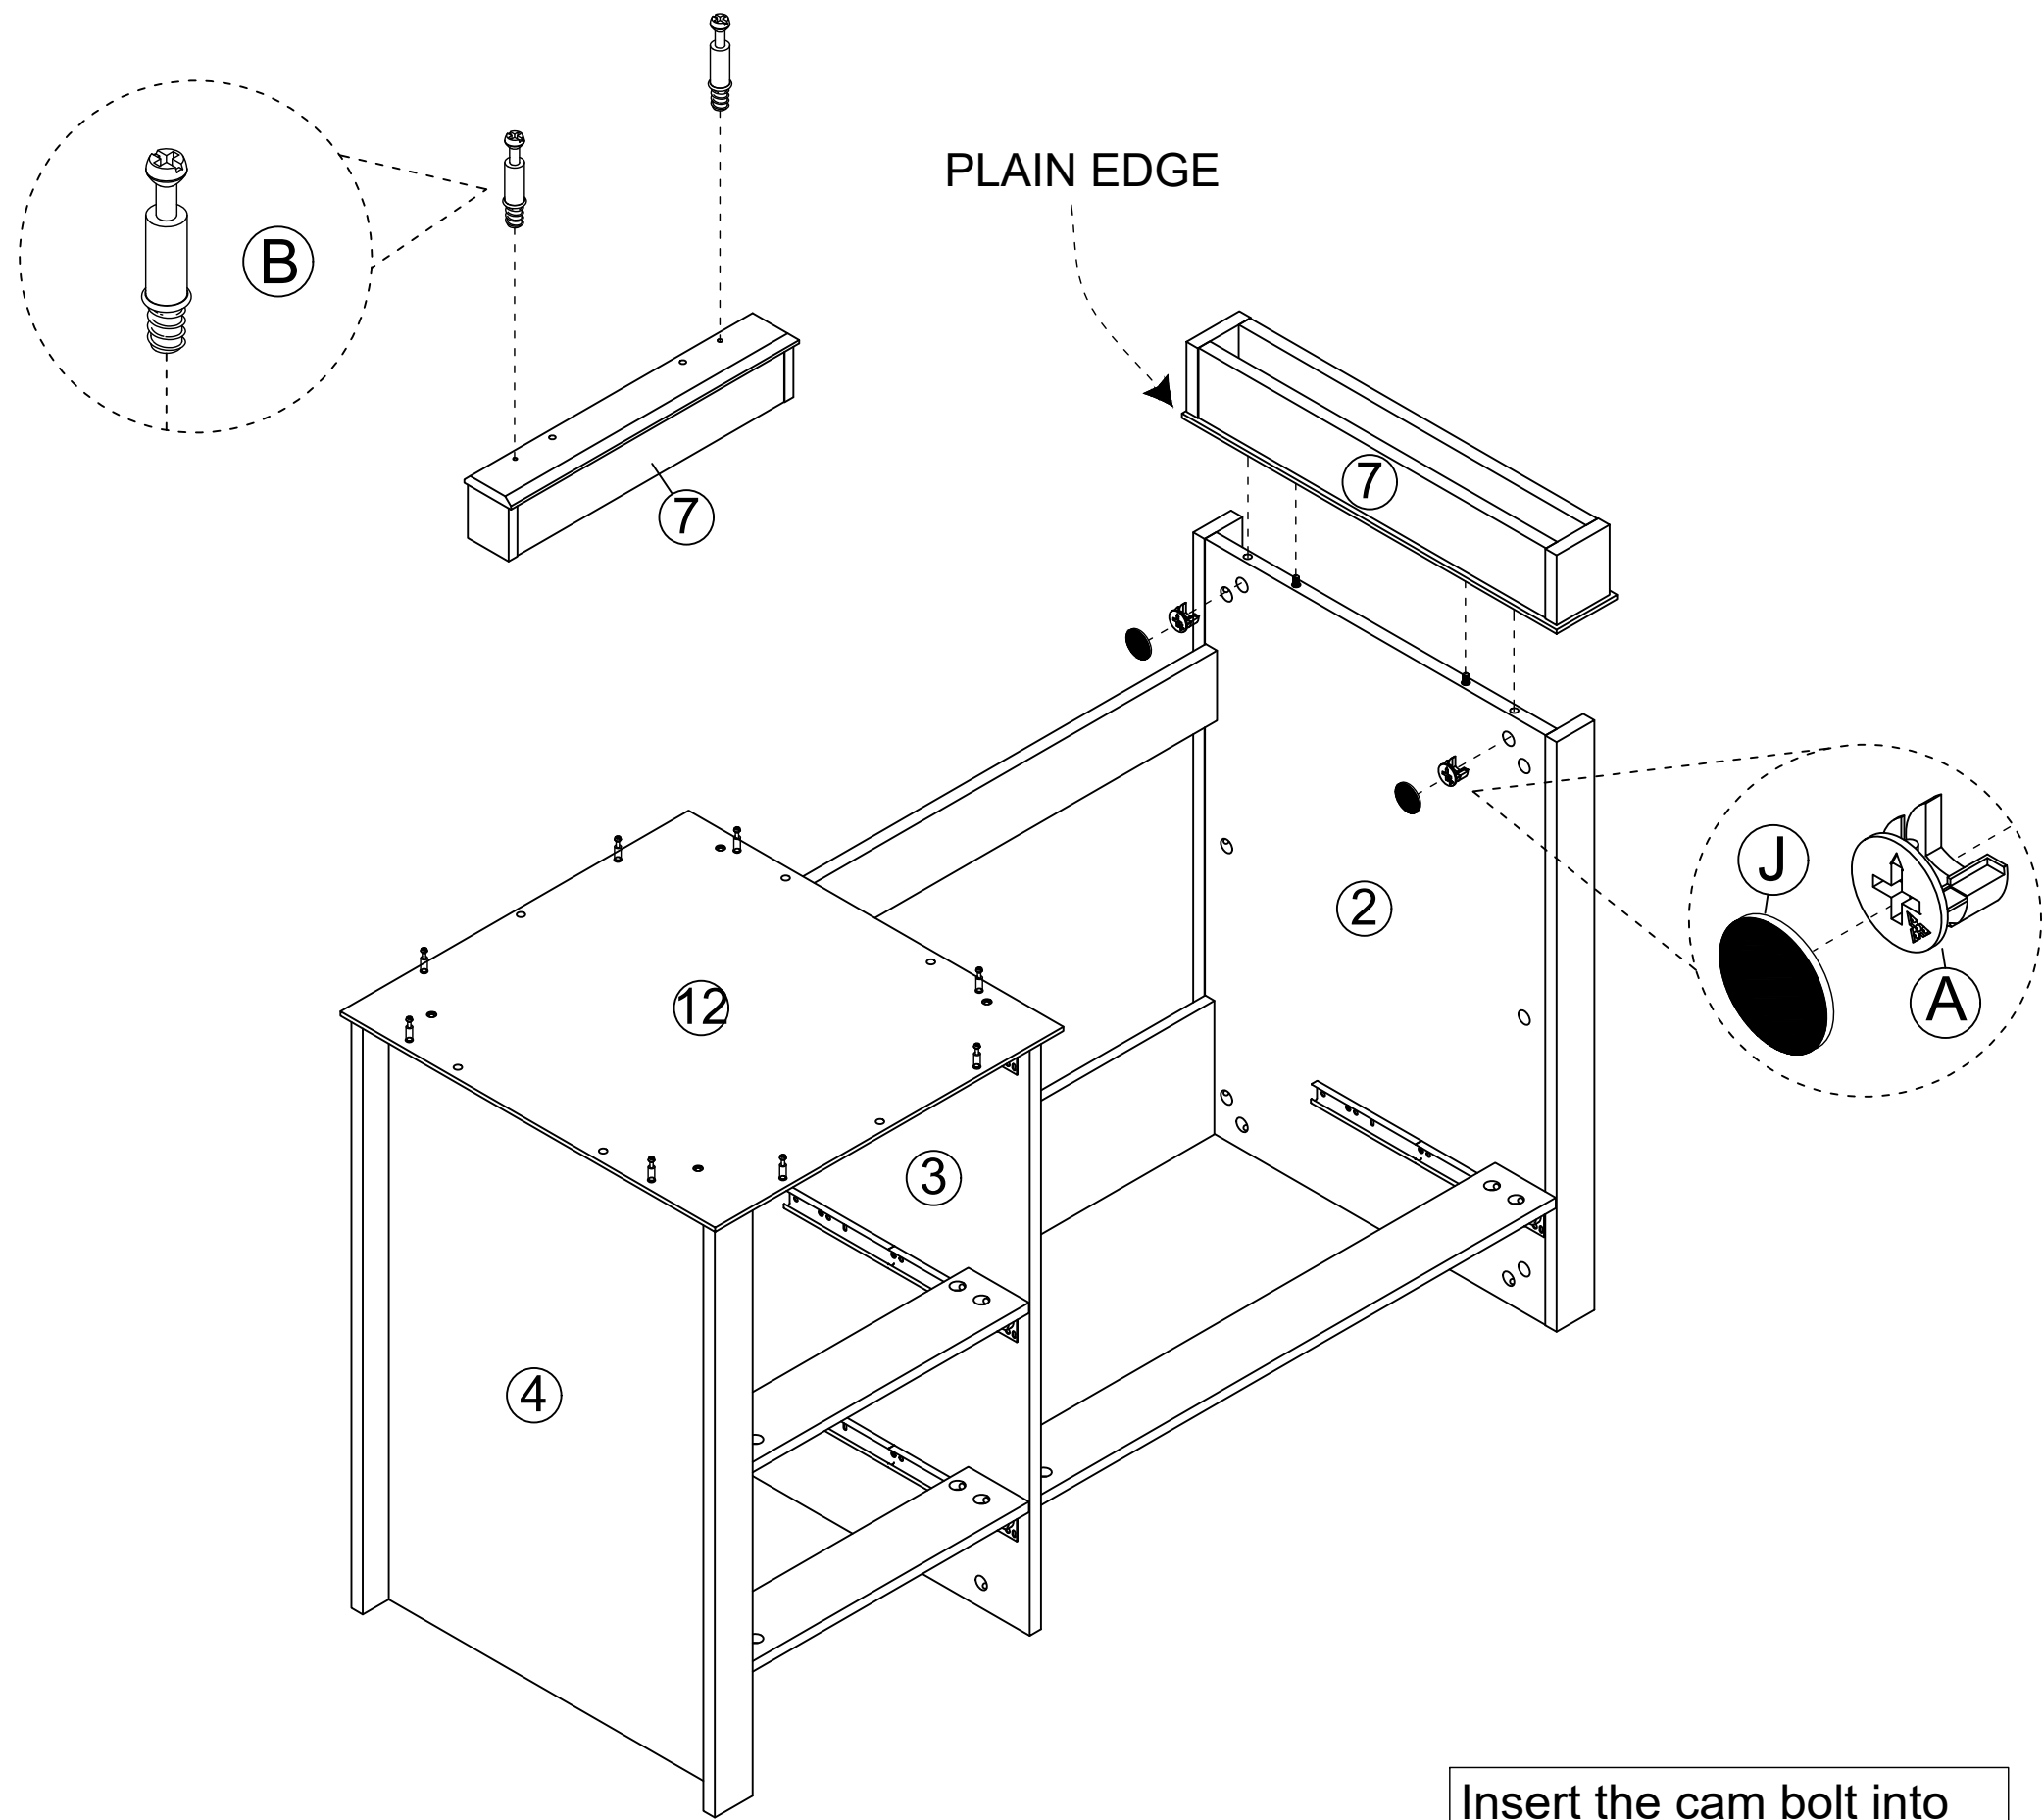
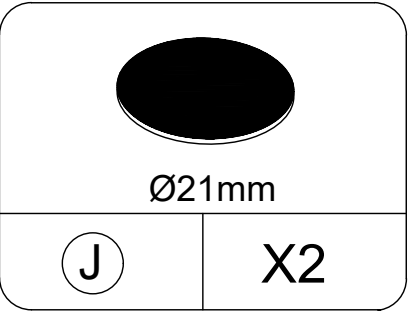
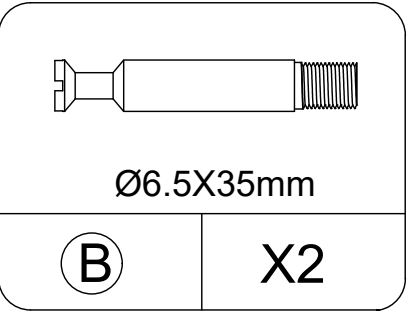
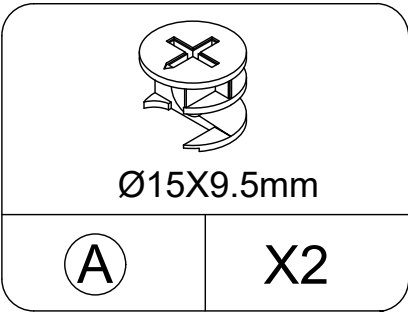
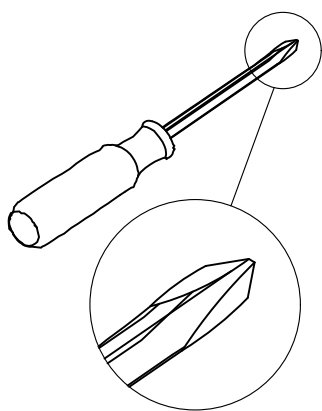


Insert the cam bolt into the hole first, then insert the cam lock and lock it.



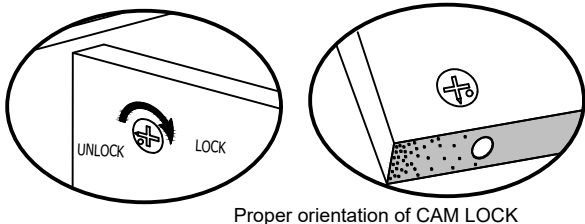
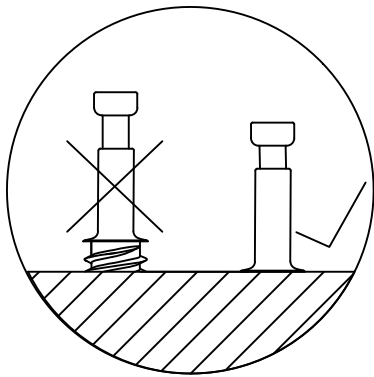


Proper orientation of CAM LOCK


STEP20

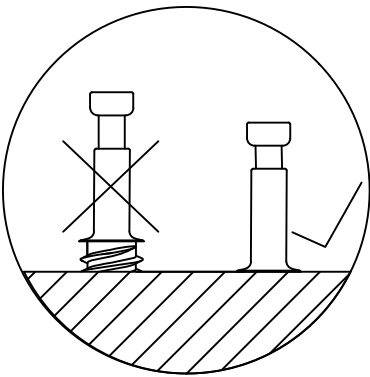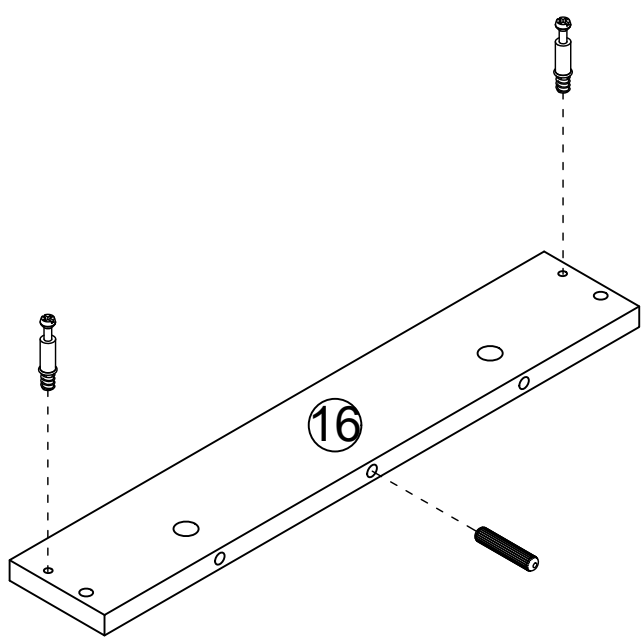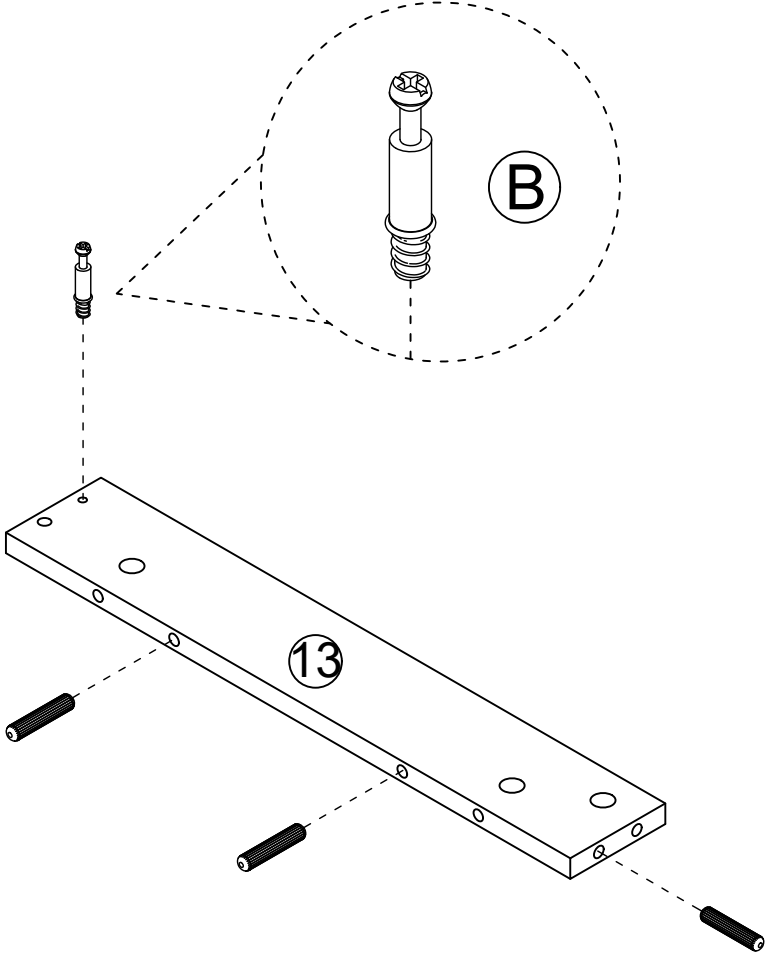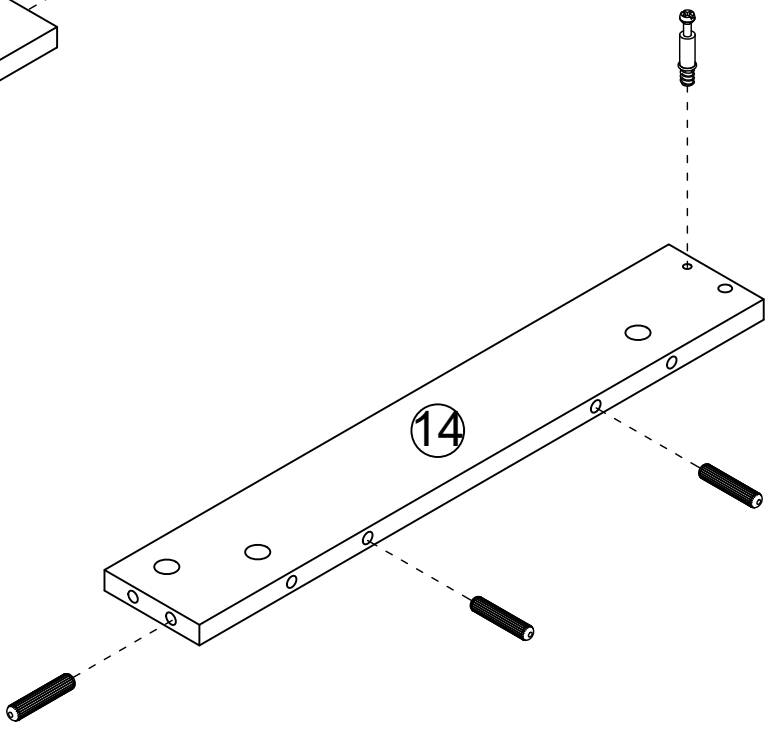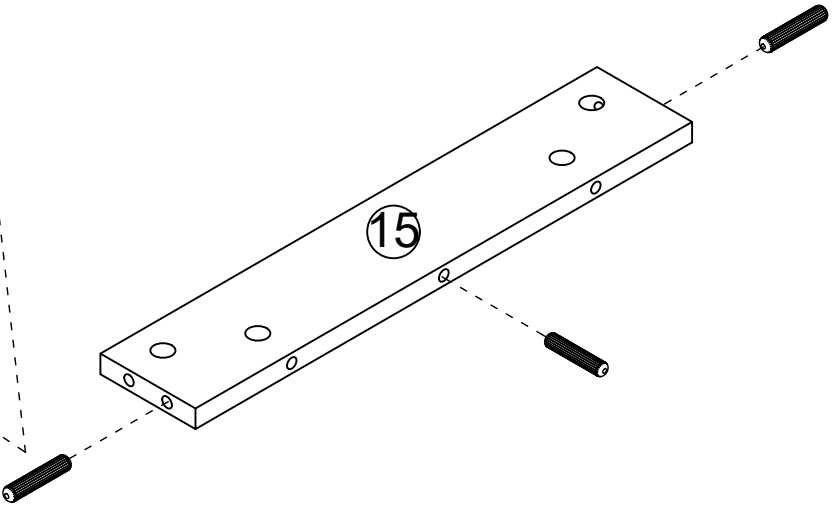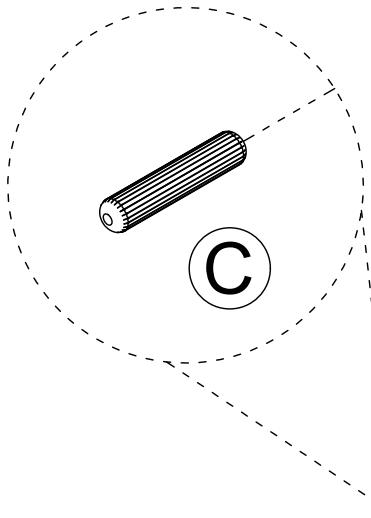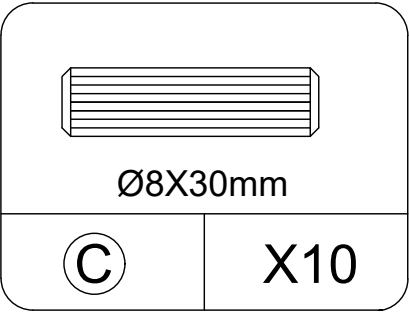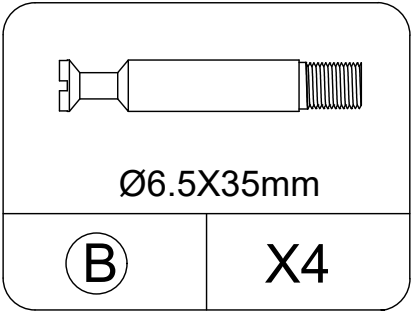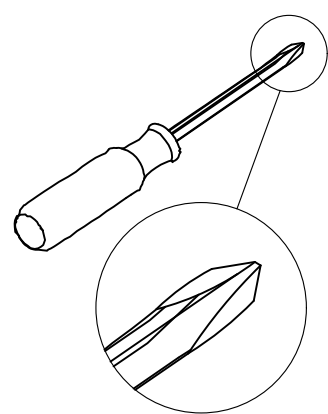




STEP21

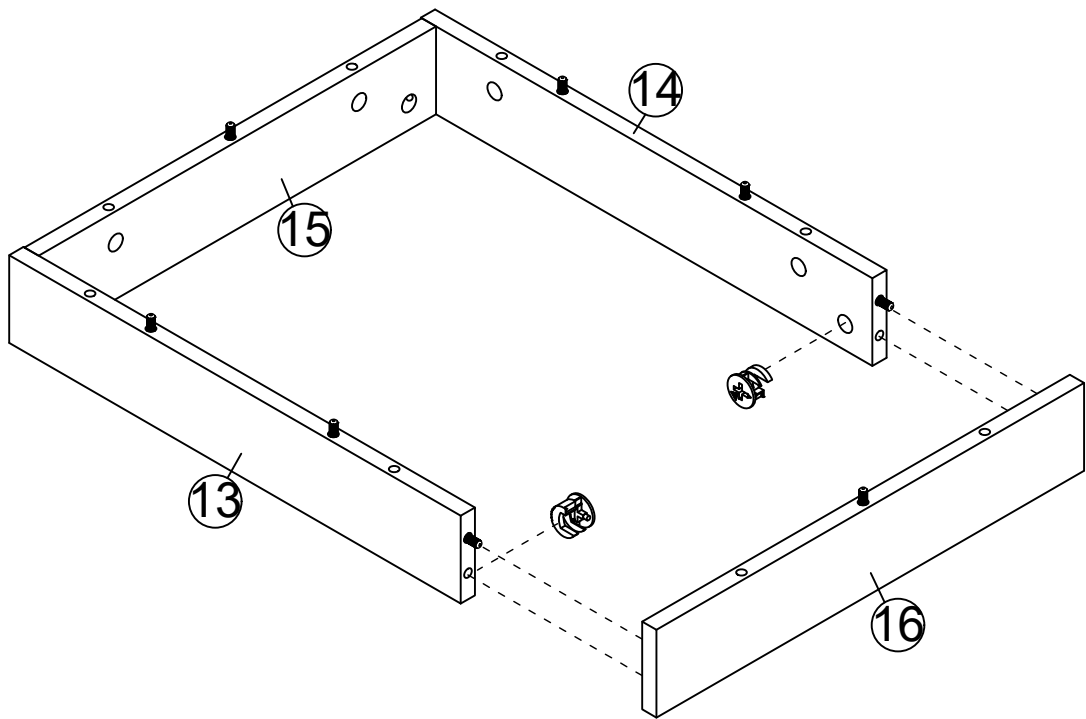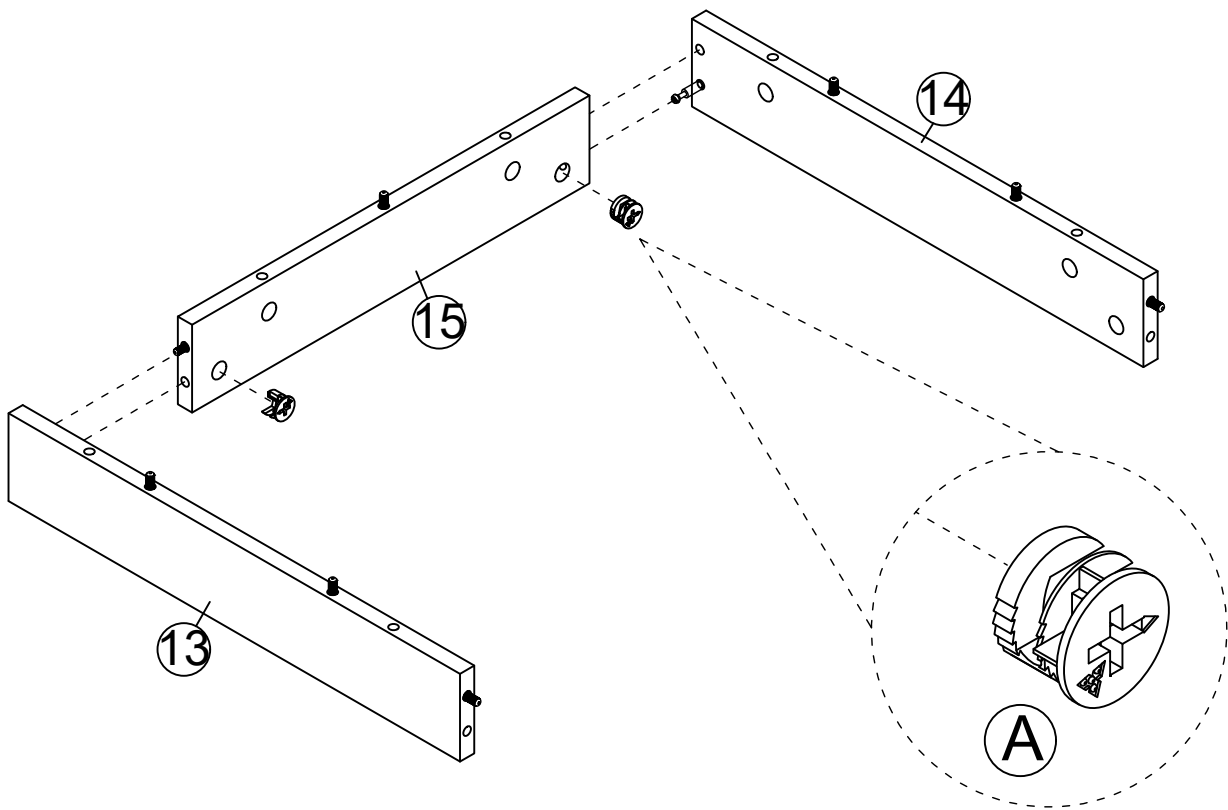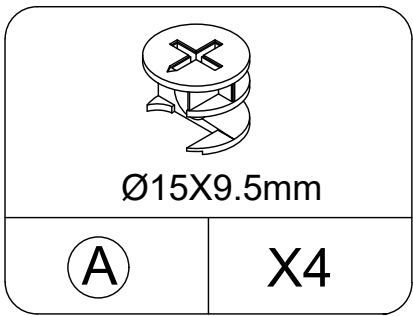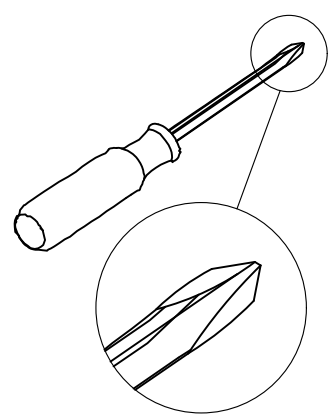


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

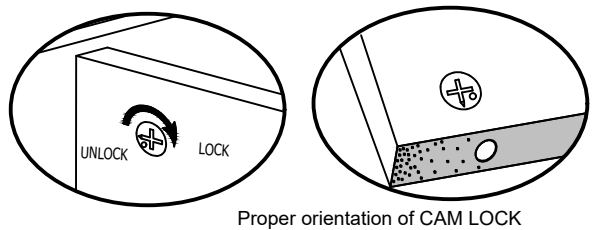

STEP22

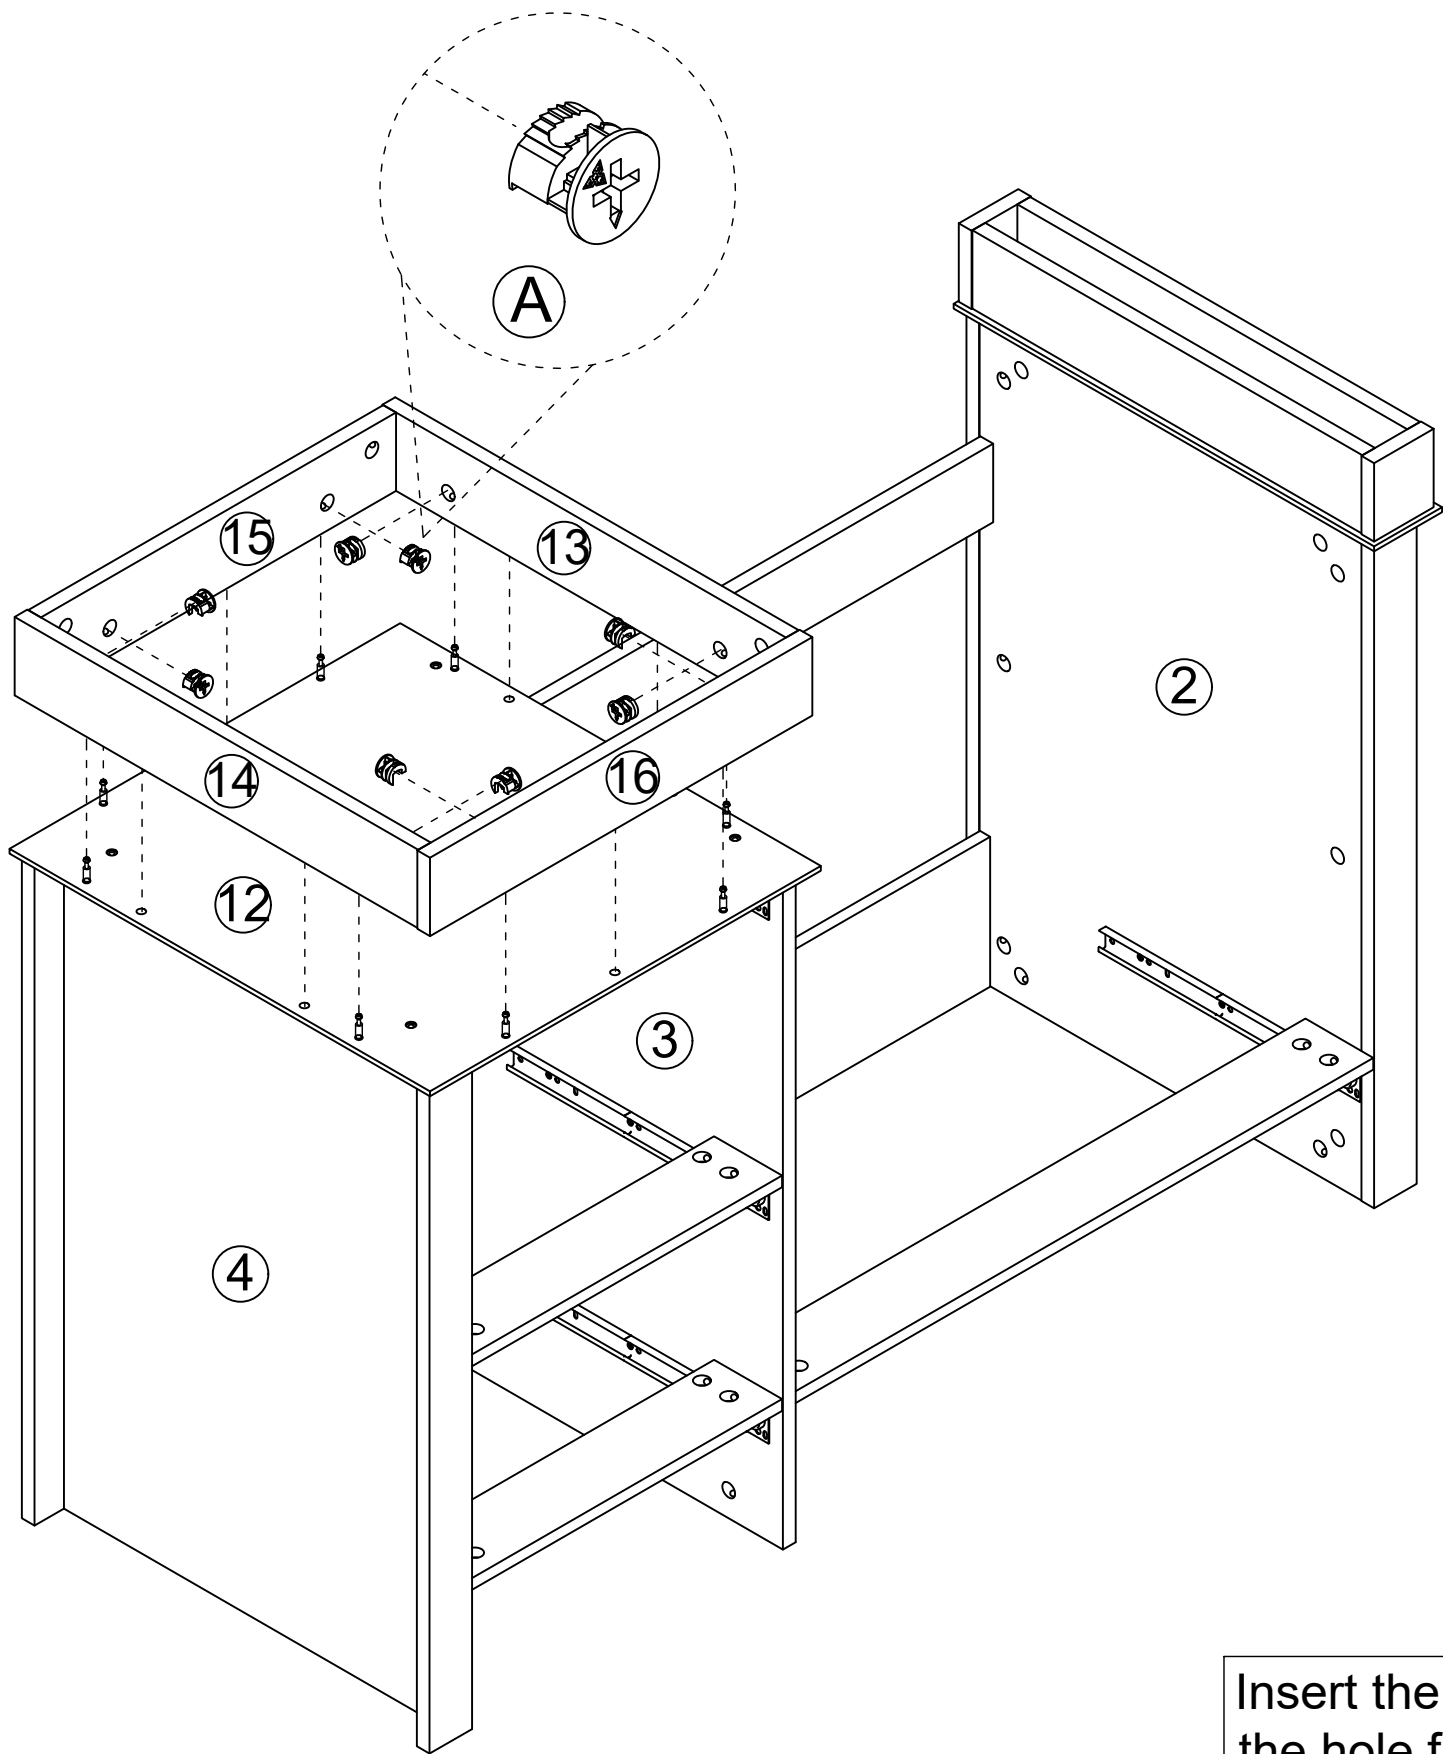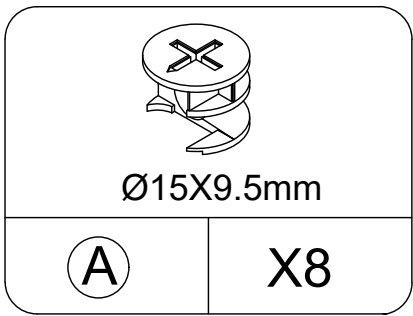
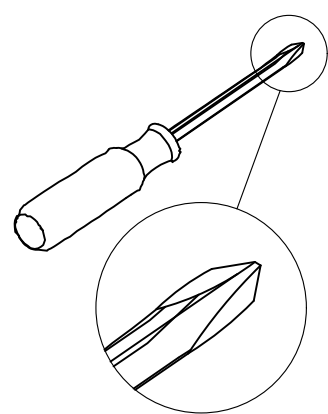


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

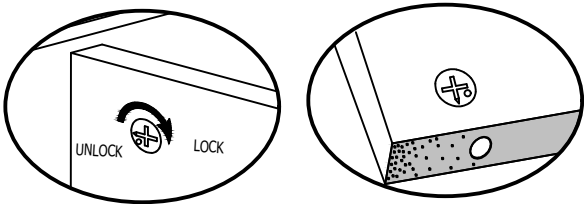




Proper orientation of CAM LOCK

STEP23





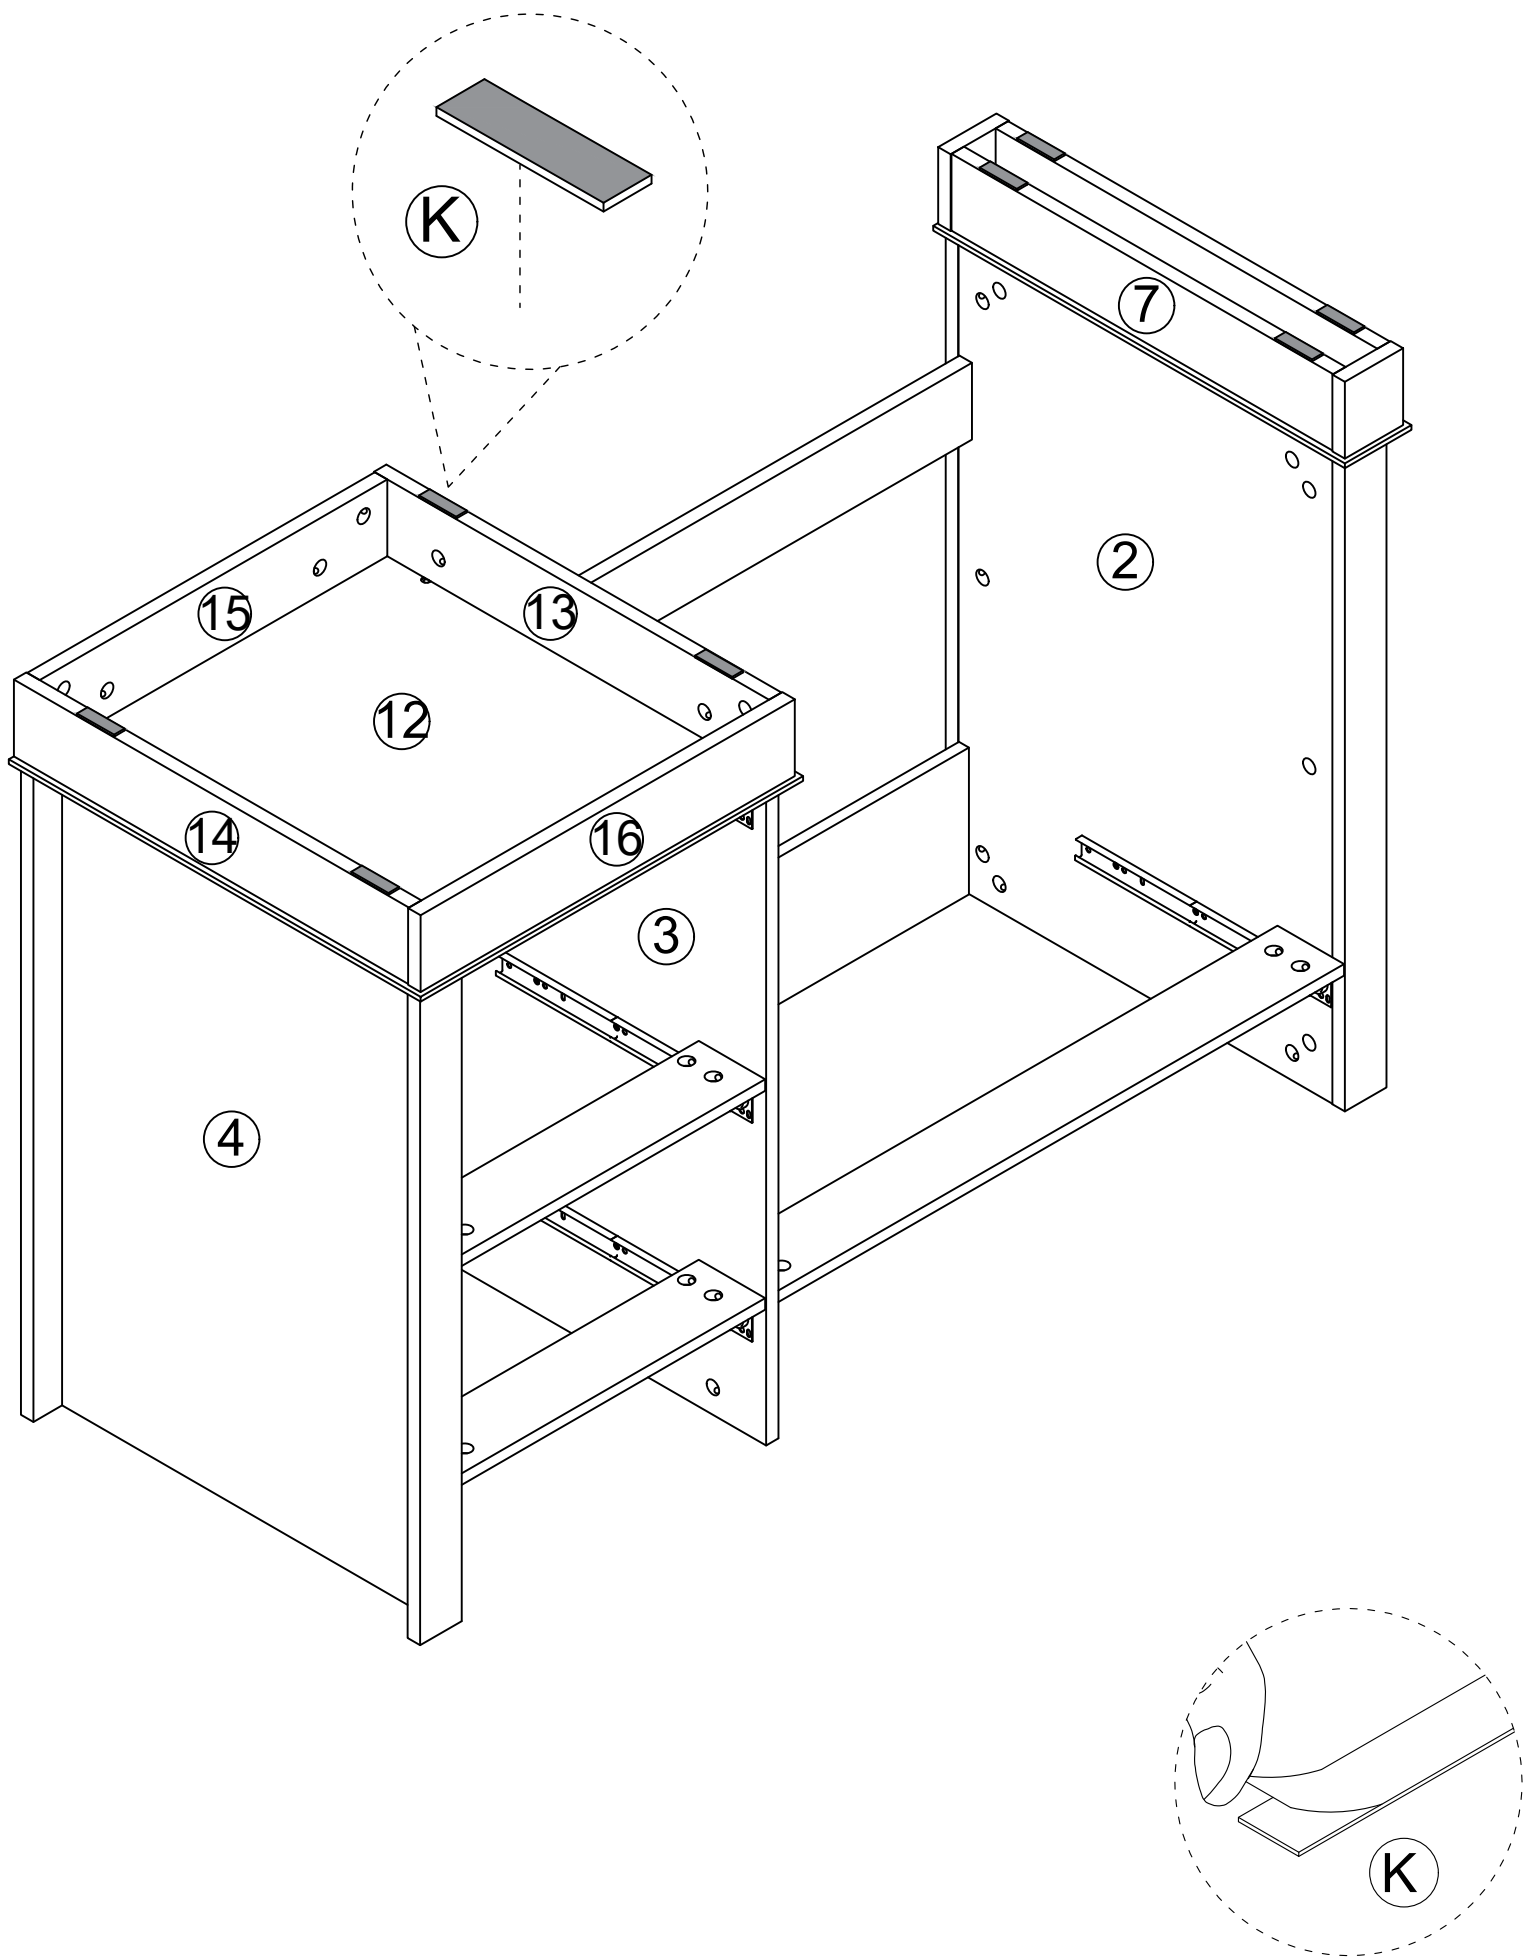
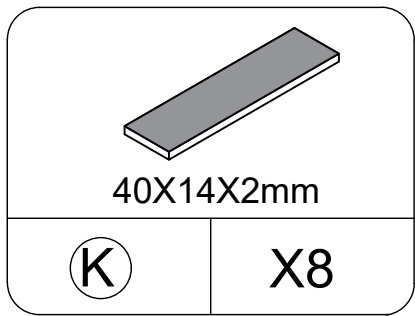


Tear off the protective film on the back of the part K and stick it to the bottom of the plate.



STEP24

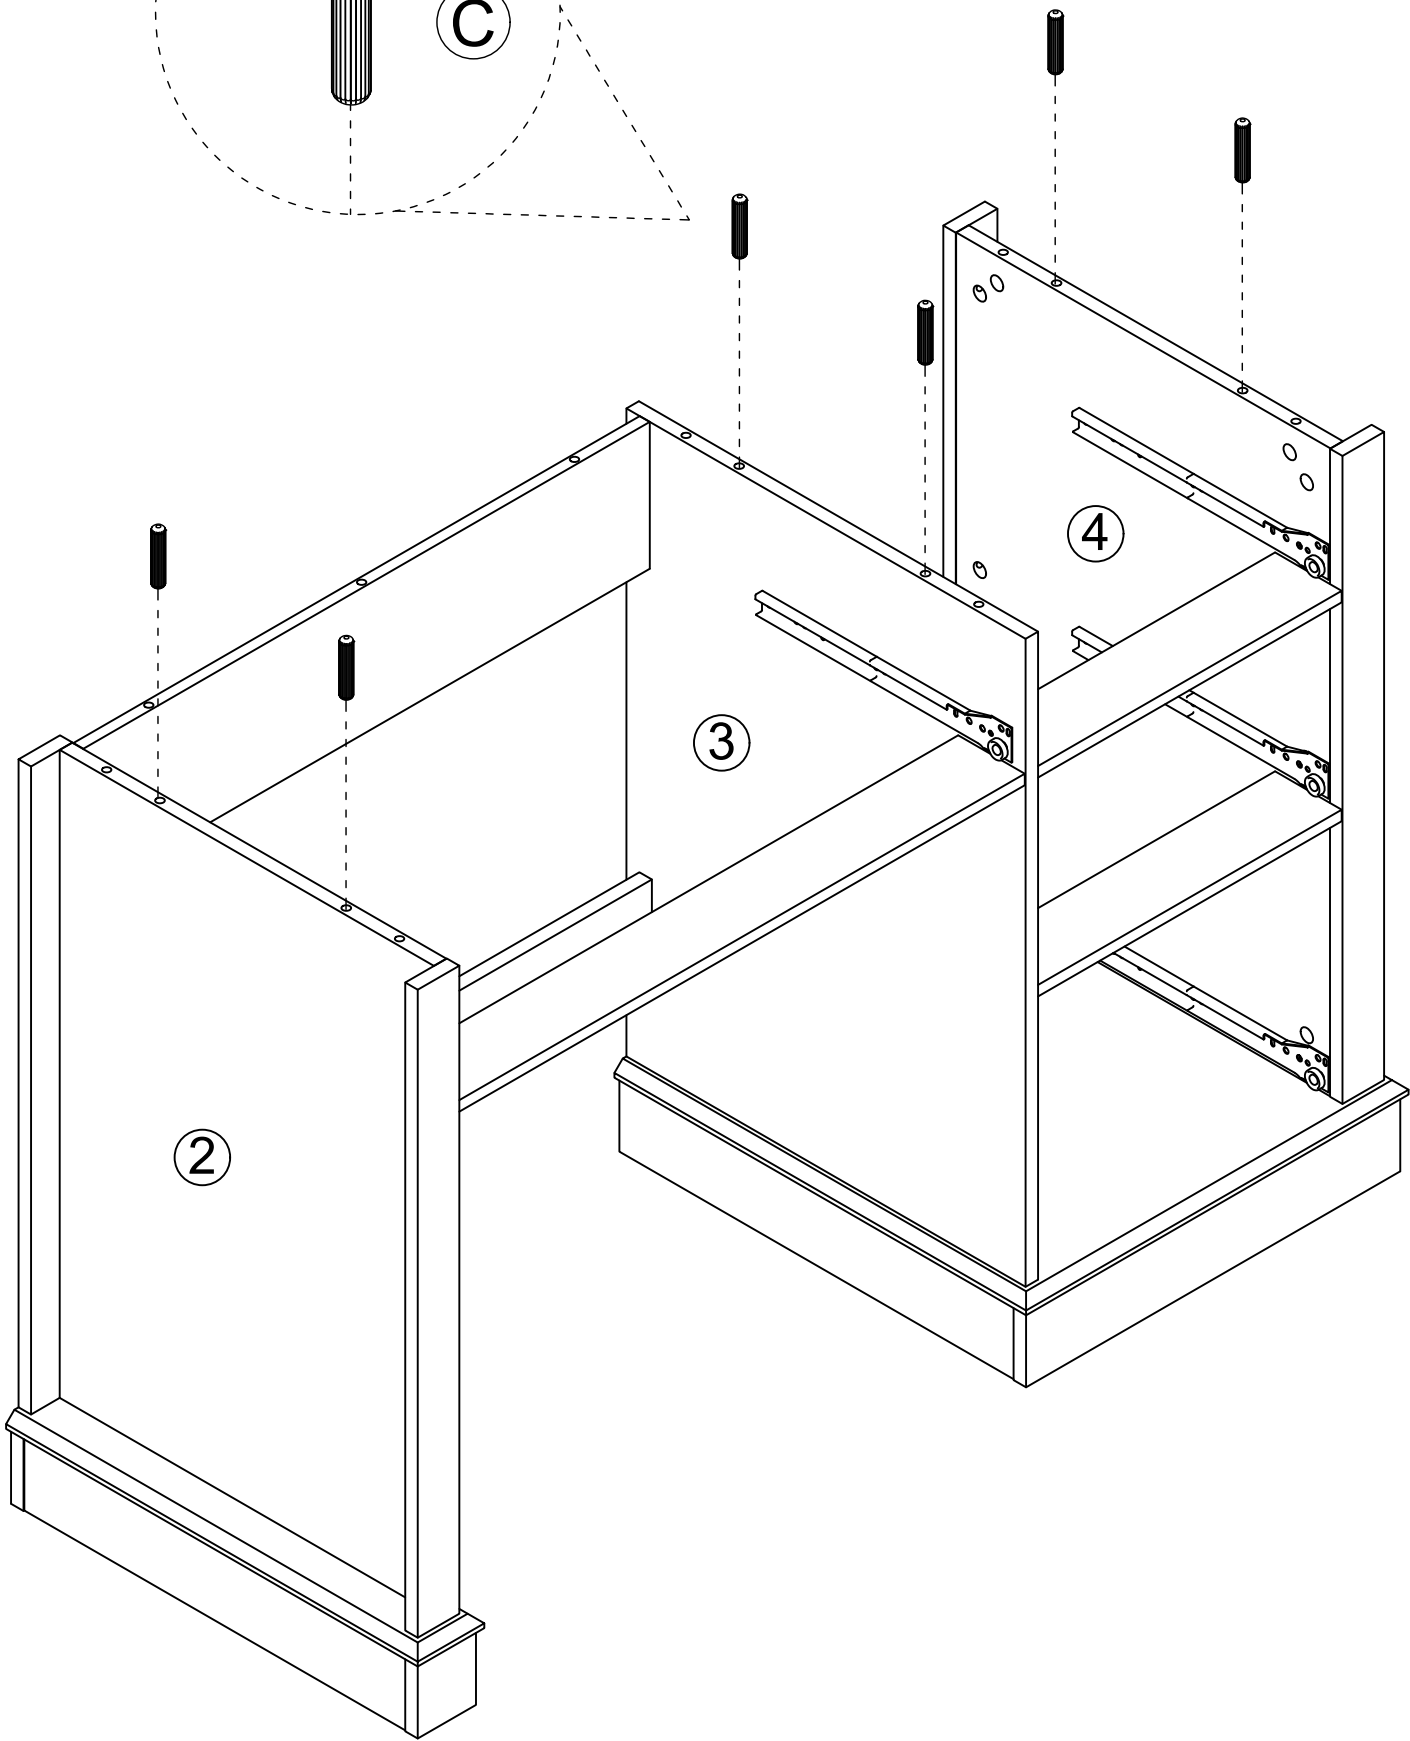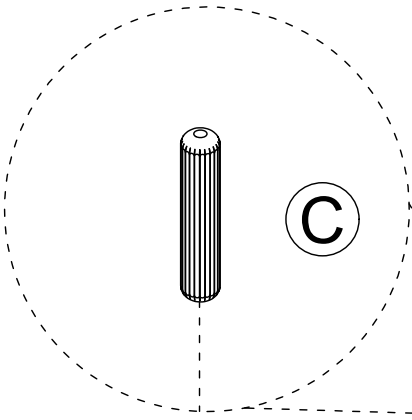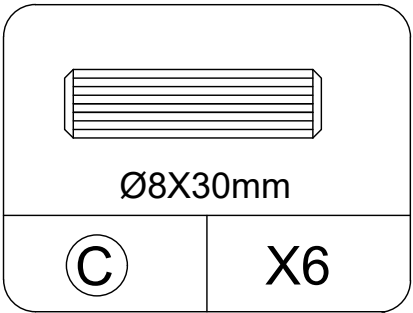

STEP25

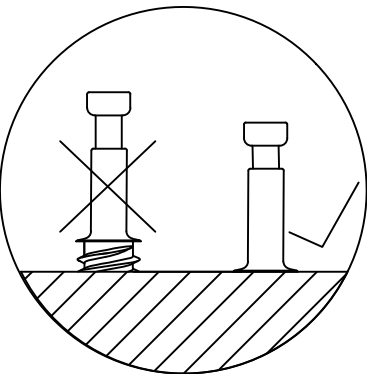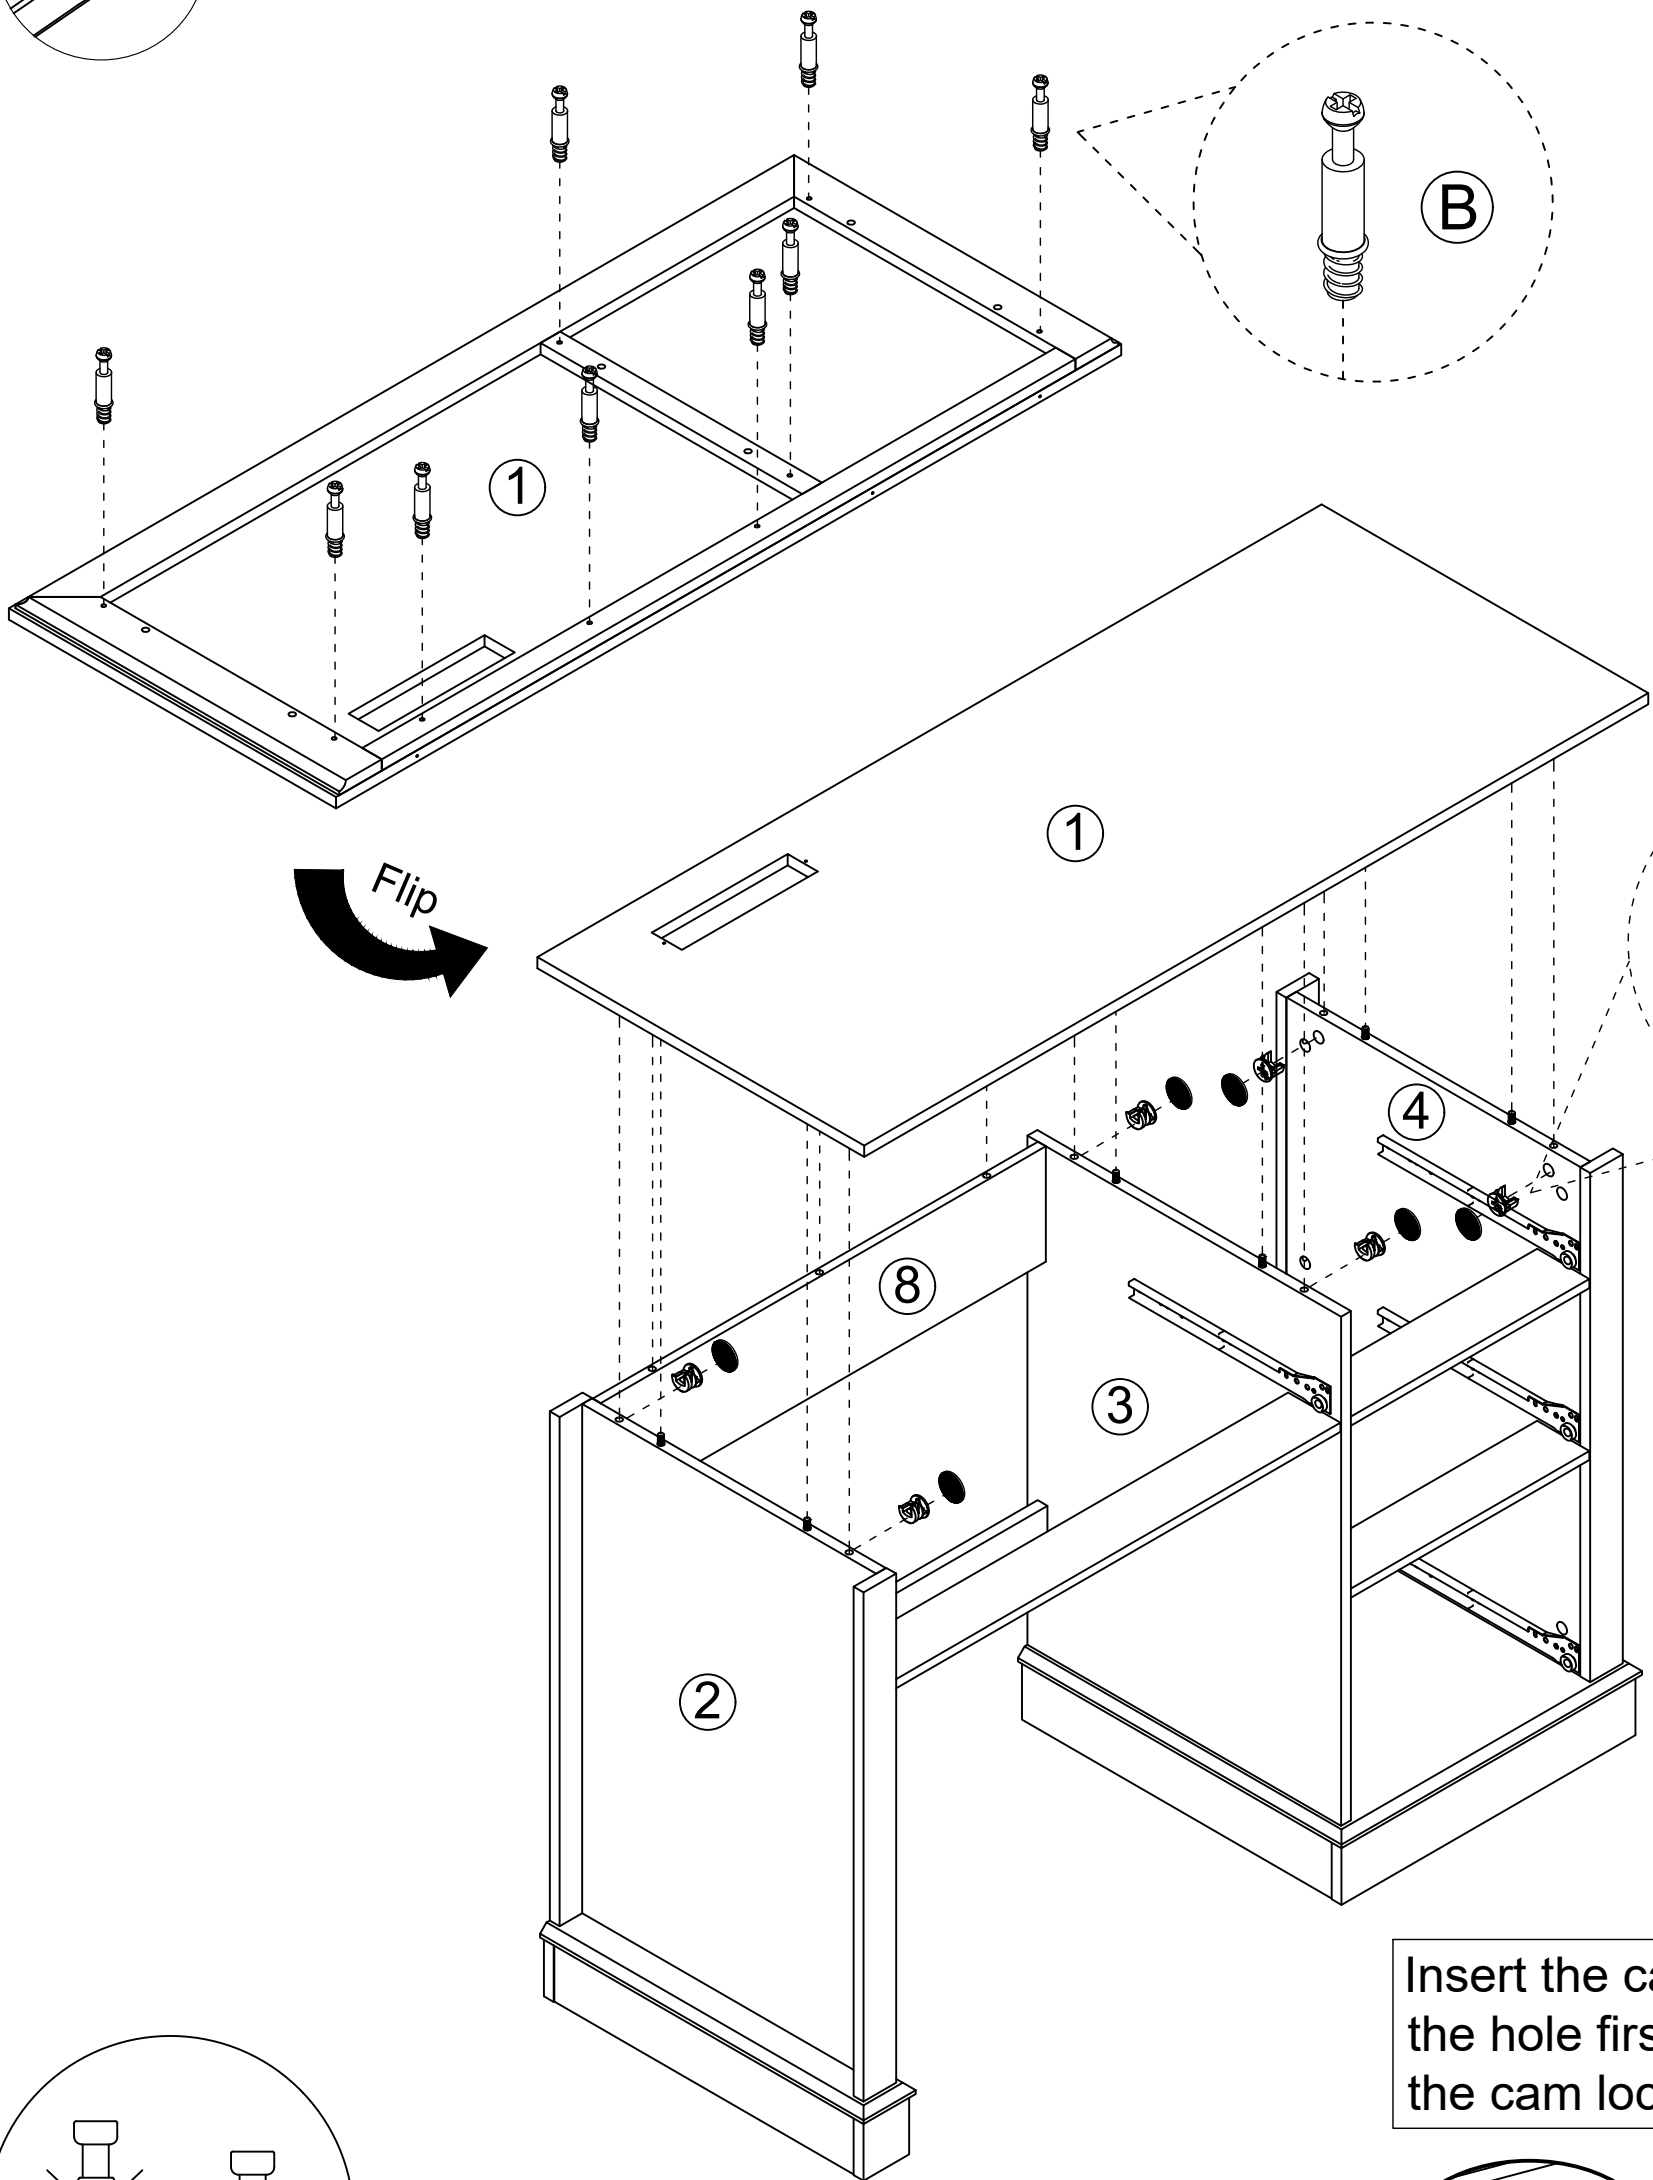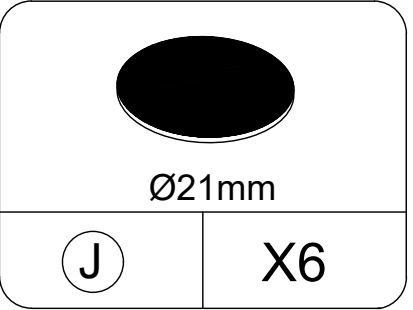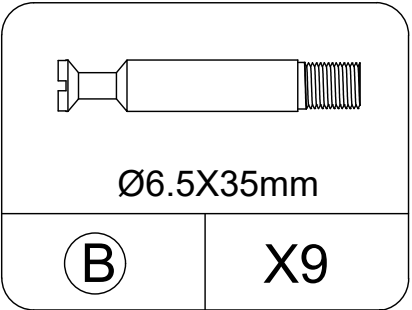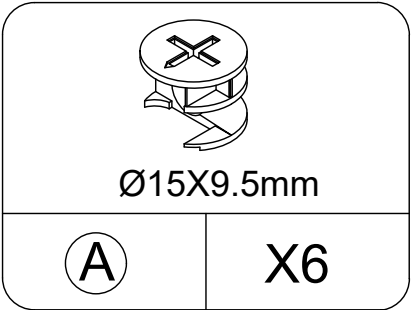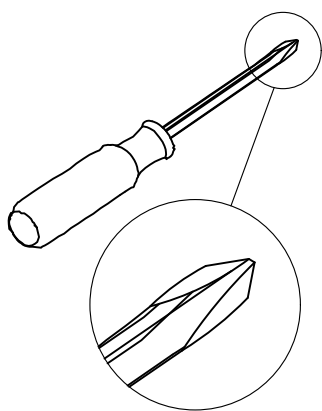


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

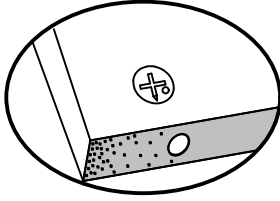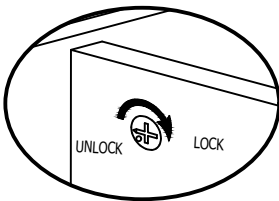




Proper orientation of CAM LOCK


STEP26

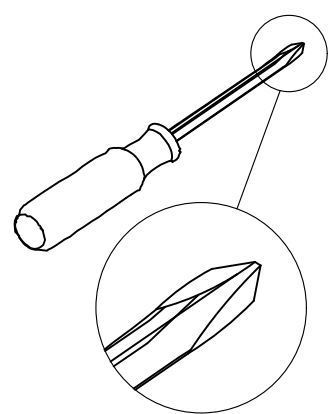

 Ø15X9.5mm	
A	X3


 Ø3X14mm	
G	X9


 4X12mm	
 27X13X1mm	
Q	X2set

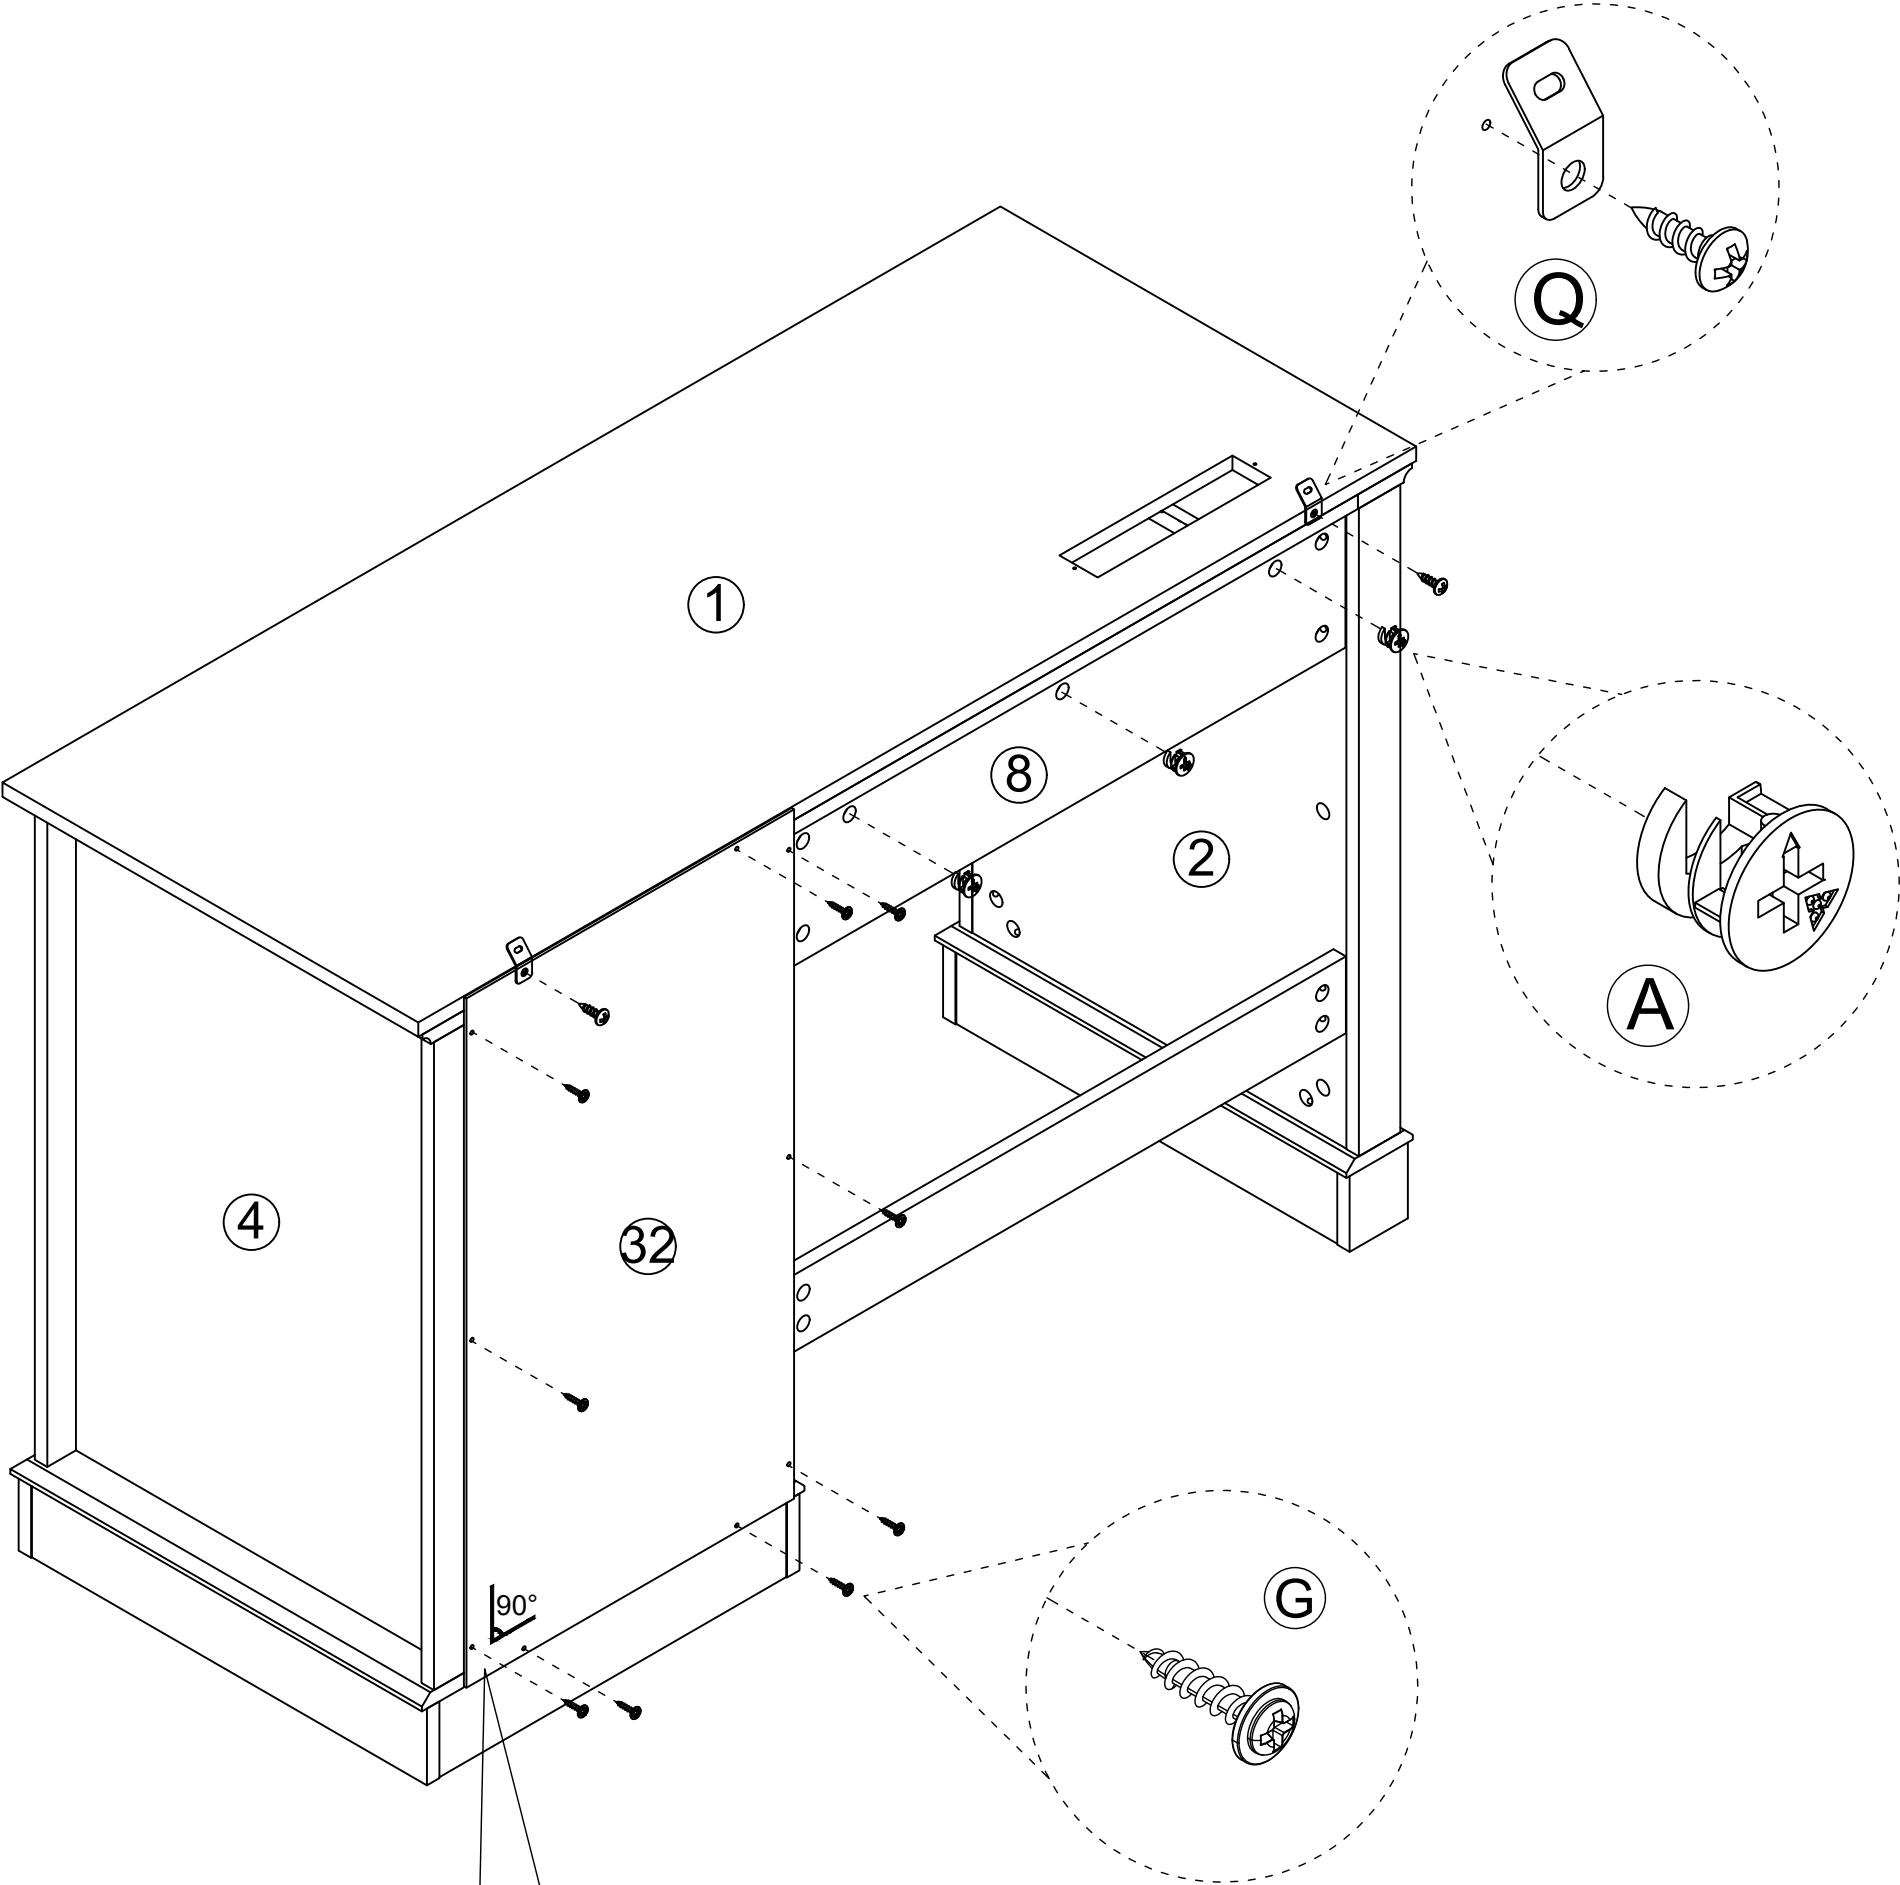


Before attaching the back panel,
be sure that the unit is at 90°.

STEP27

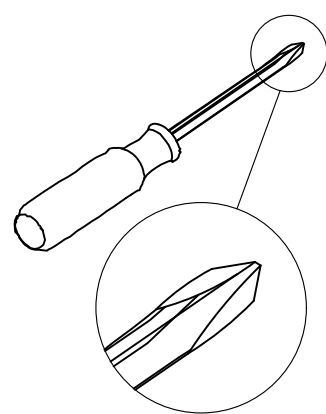


Ø3X12mm



F	X2
---	----

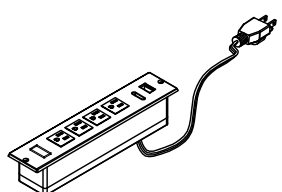


L	X1
---	----





The power of using electrical appliances cannot exceed 1500W.

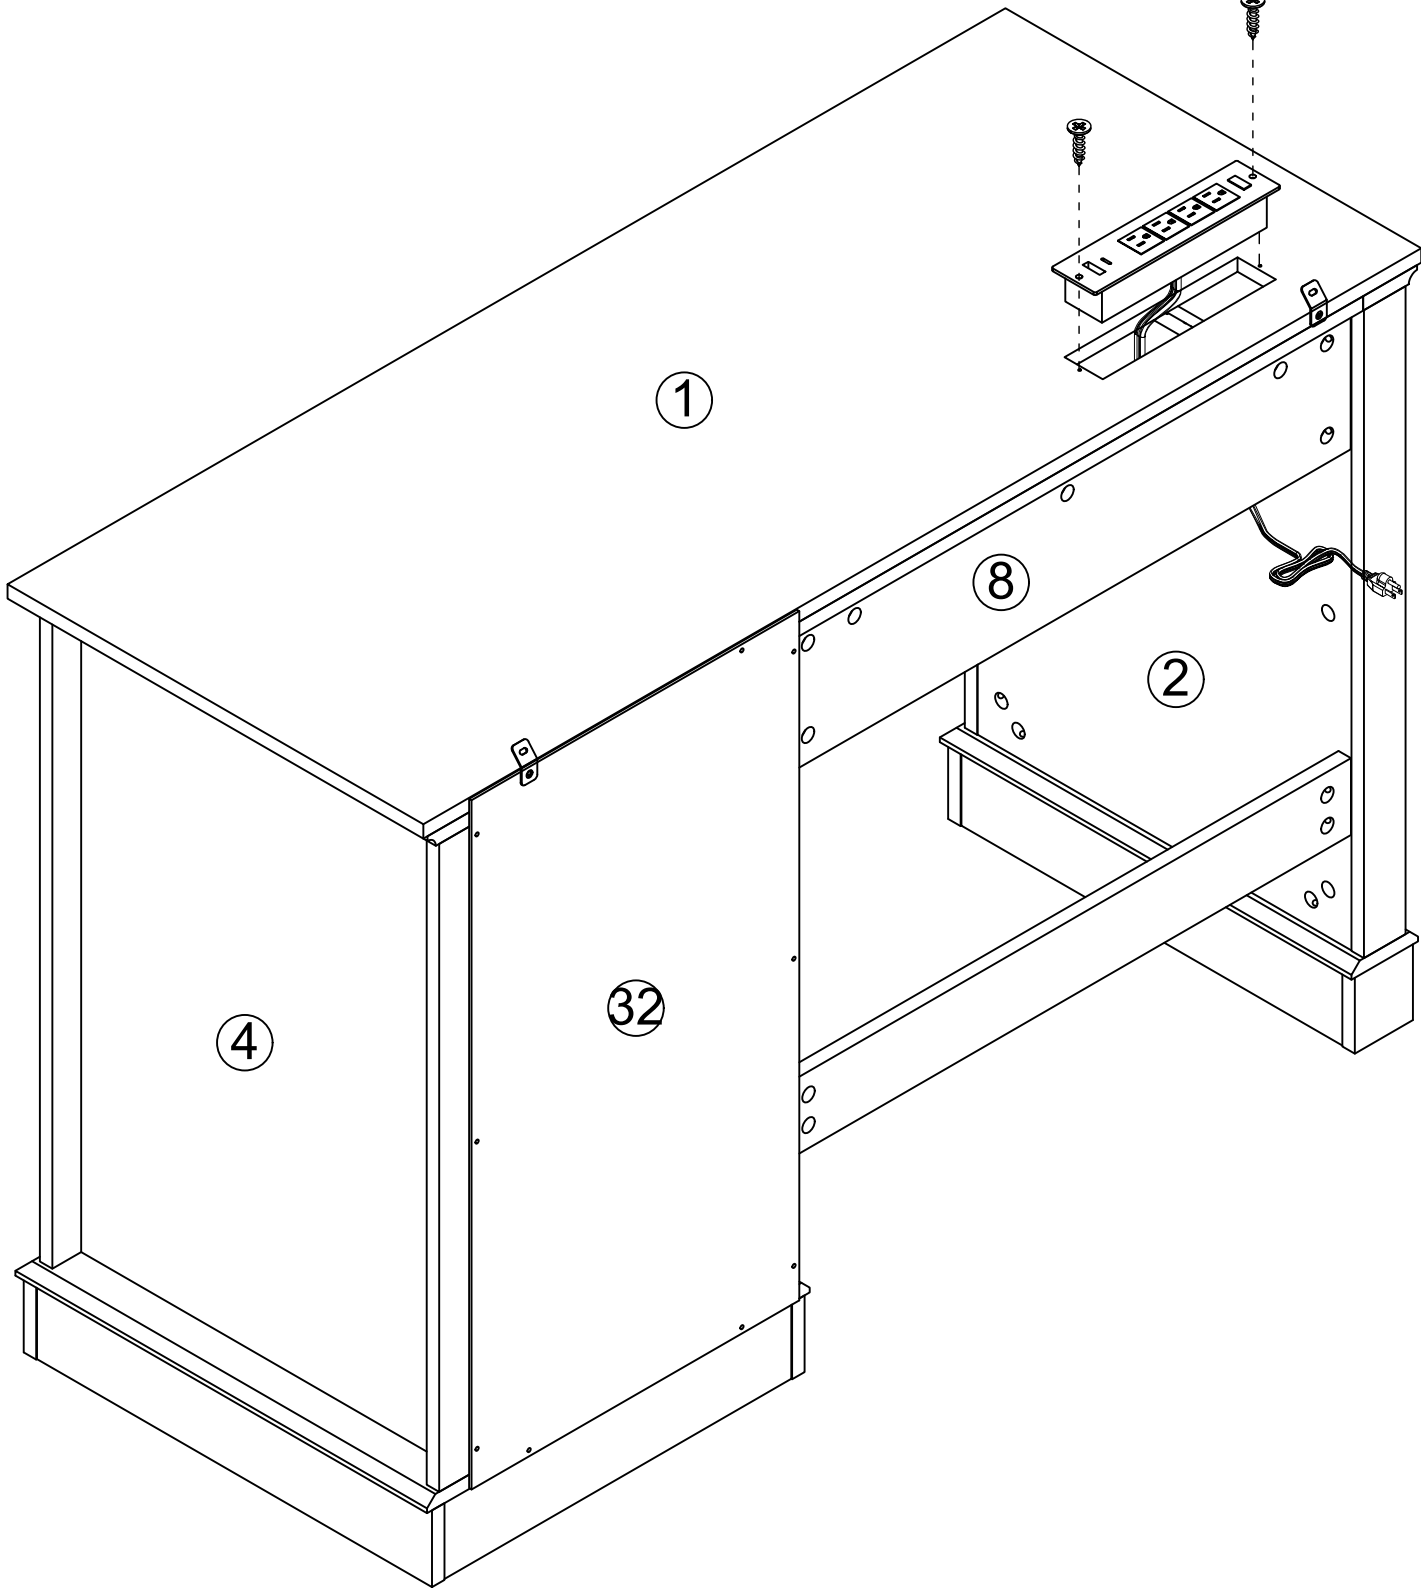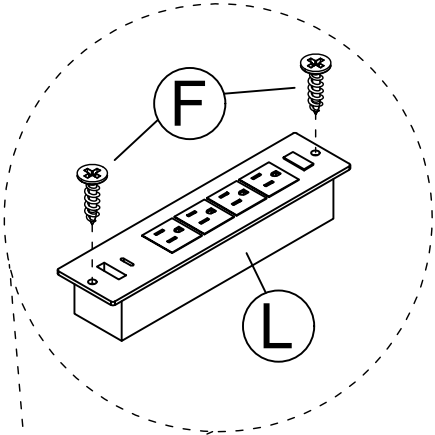

STEP28

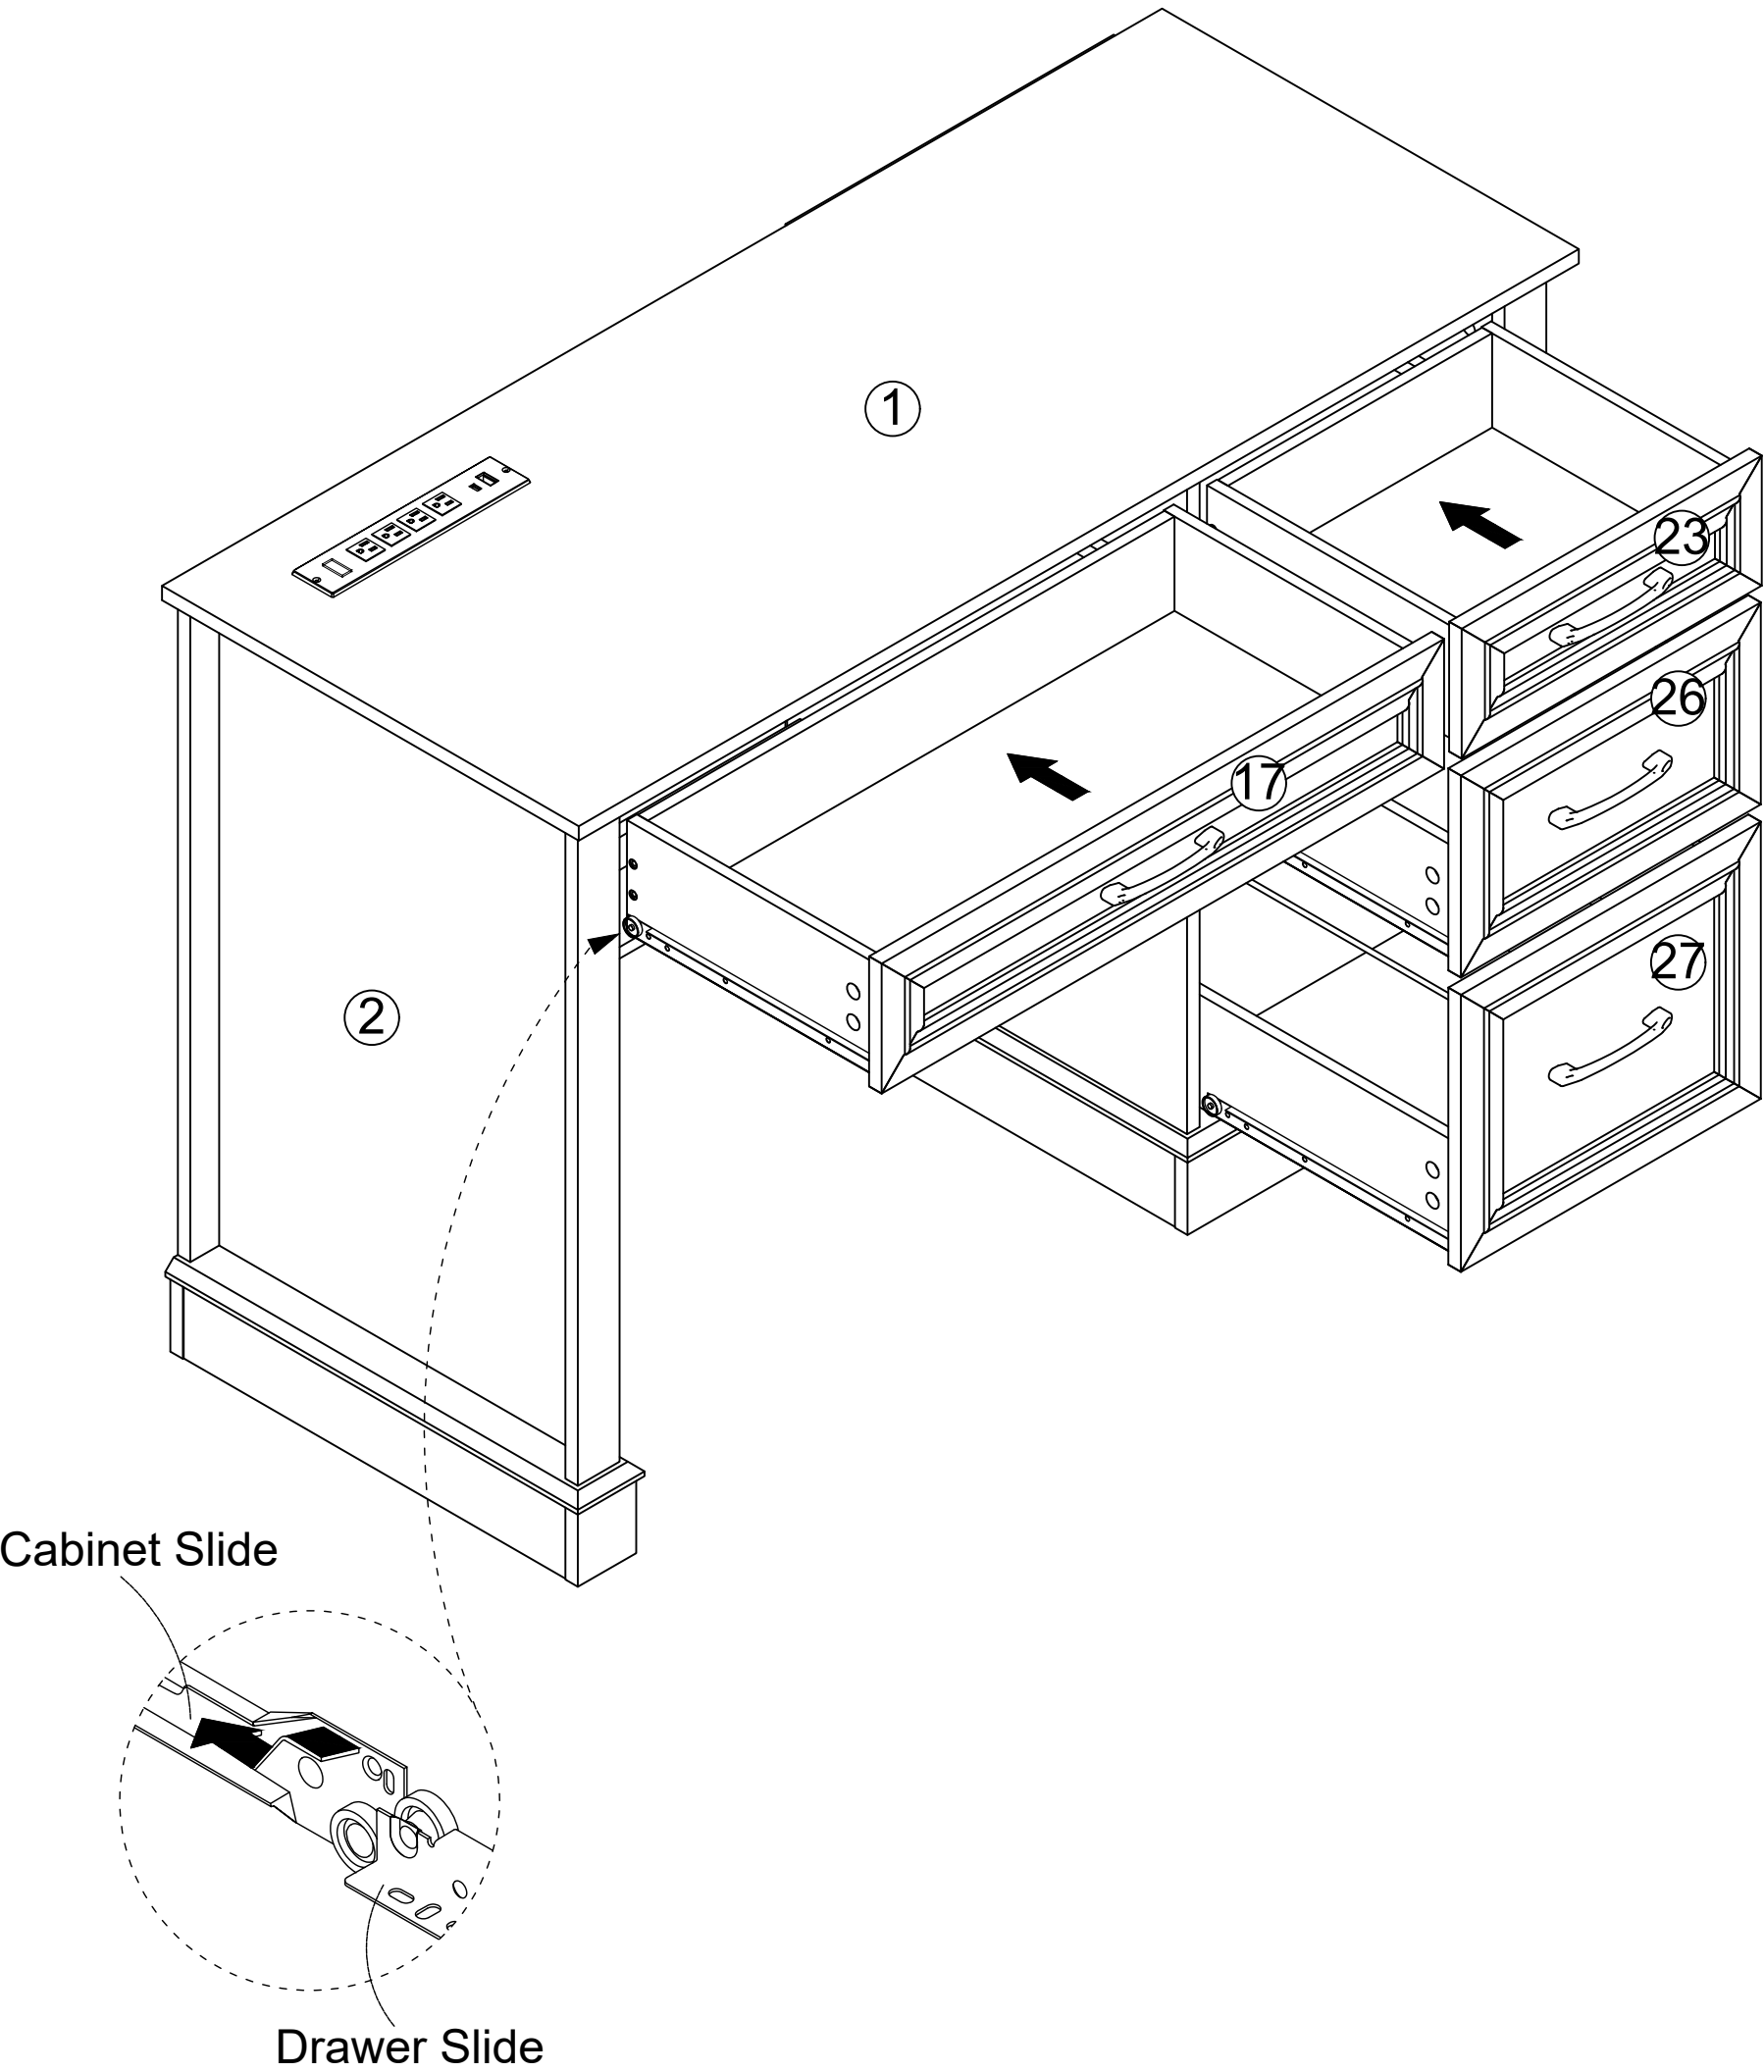


STEP29


			
4X40mm	27X13X1mm	35X40X14mm	273mm
Q		X2set	

NOTE:The tipping restraint hardware included is for wooden stud wall construction. It must be attached to a wall stud. Depending upon your wall construction different anchor hardware maybe required. Please contact your local hardware store for assistance. Young children can be seriously injured by tipping furniture. You must install the tipping restraint hardware with the unit to prevent the unit from tipping, causing any accidents or damage. The tipping restraints are intended only as a deterrent and are not a substitute for proper adult supervision. The tipping restraints are not earthquake restraints. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.


Install the tipping restraint hard ware

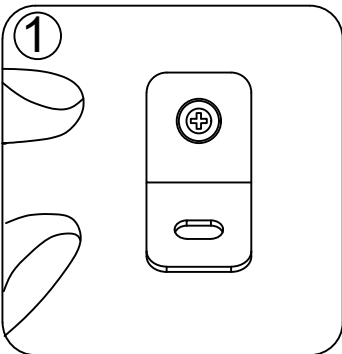


1.make mark on the wall

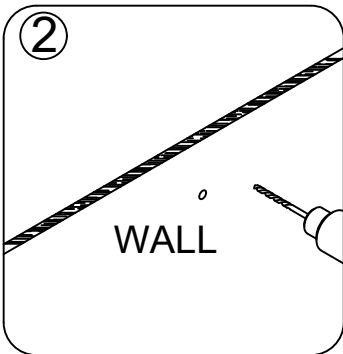


2.drill two Ø6 holes on the wall

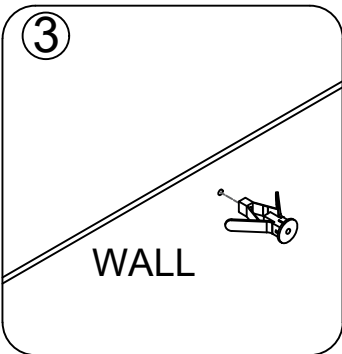


3.put two anchors in the holes

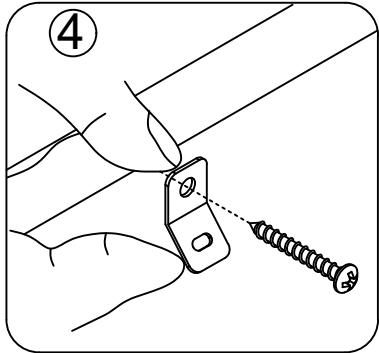

4.fix the device on the wall by the long screws

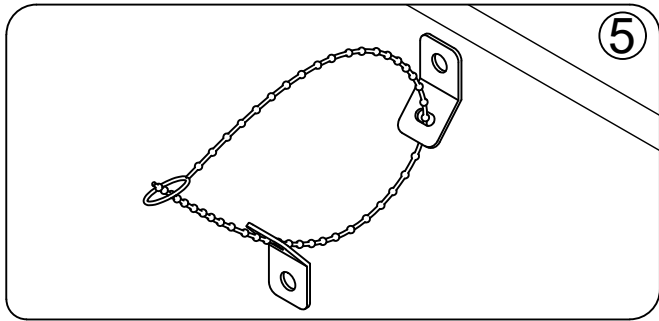

5.Push the cabinet close to the wall so that the two bases are close to each other, and then put on nylon tie to tighten it.

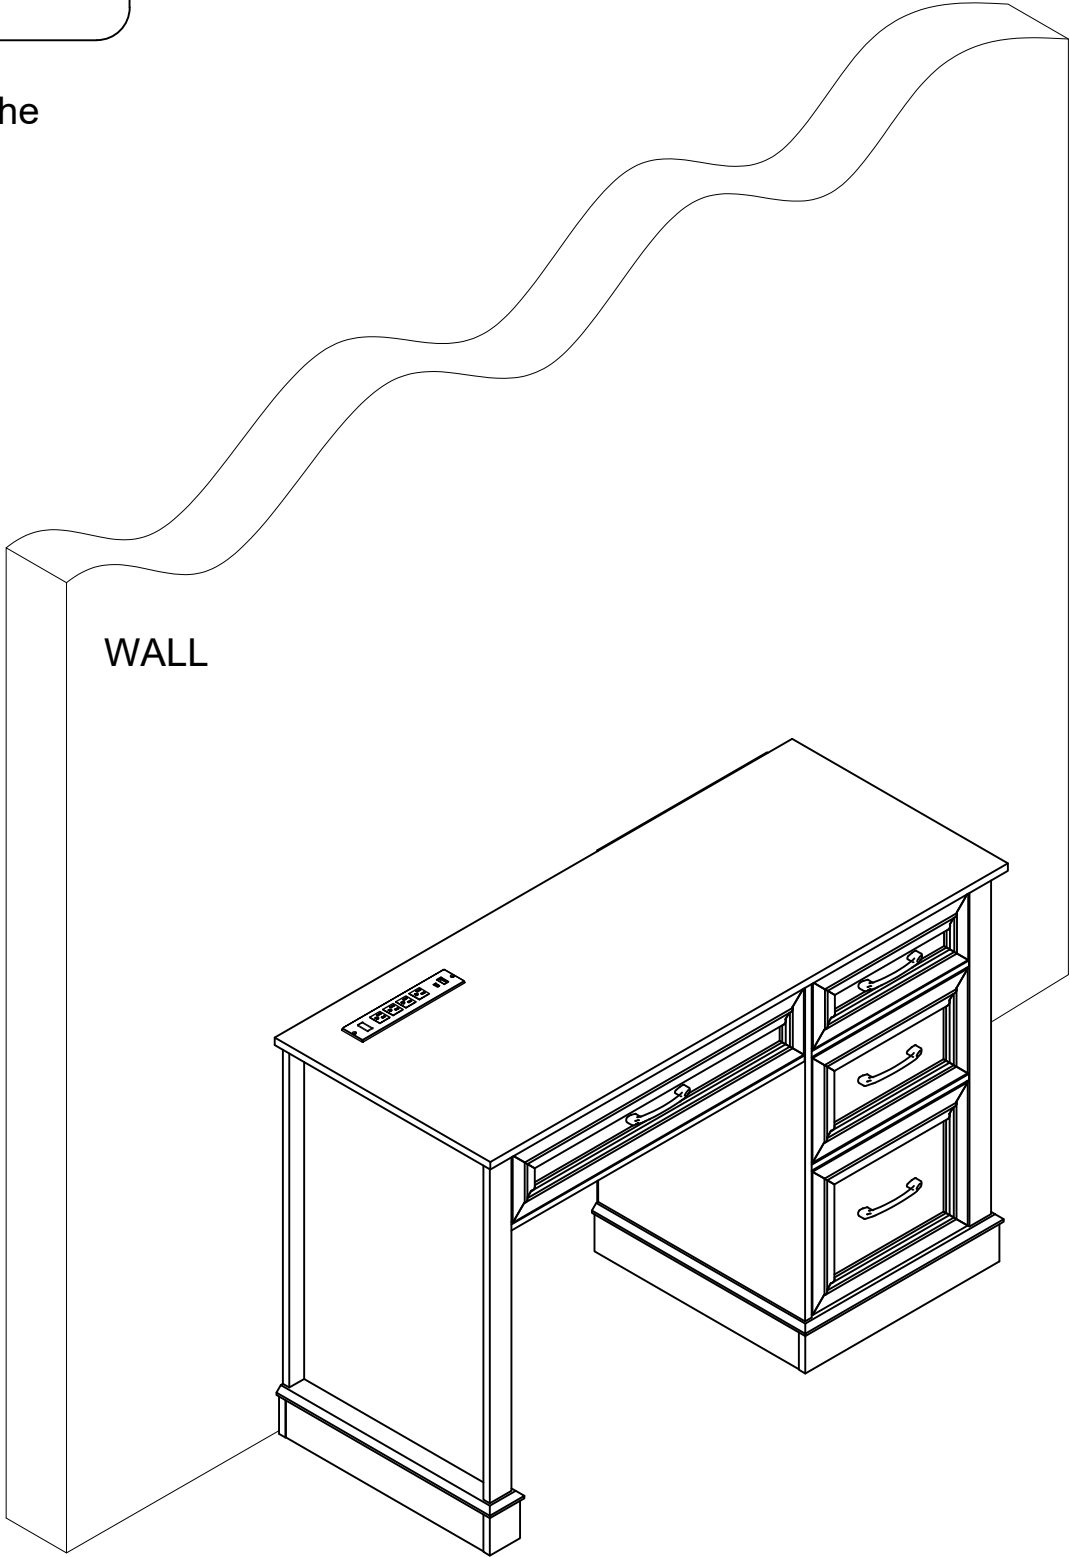

WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.
- Do not defeat or remove the drawer interlock system.

This is a permanent label.

Do not remove!

ATTENTION



Des enfants sont morts du basculement des meubles. Pour réduire le risque de basculement des meubles:

- TOUJOURS installer la retenue de basculement fournie.
- NE JAMAIS mettre de téléviseur sur ce produit.
- NE JAMAIS permettre aux enfants de se tenir debout, de grimper ou de s'accrocher à des tiroirs, des portes ou des étagères.
- N'ouvrez JAMAIS plus d'un tiroir à la fois.
- Placez les objets les plus lourds dans les tiroirs les plus bas.
- Ne désactivez pas et ne retirez pas le système de verrouillage du tiroir.

Ceci est une étiquette permanente.

Ne pas enlever!

WARNUNG



Kinder sind an einem Möbelkipp gestorben. So verringern Sie das Risiko eines Umkippens von Möbeln:

- Installieren Sie IMMER die mitgelieferte Kipprückhaltevorrichtung.
- Stellen Sie NIEMALS einen Fernseher an dieses Produkt.
- Lassen Sie Kinder NIEMALS an Schubladen, Türen oder Regalen stehen klettern oder hängen.
- Öffnen Sie NIEMALS mehr als eine Schublade gleichzeitig.
- Legen Sie schwerste Gegenstände in die untersten Schubladen.
- Besiegen oder entfernen Sie das Schubladenverriegelungssystem nicht.

Dies ist ein dauerhaftes Etikett.

Nicht entfernen!