


Installation & Assembly

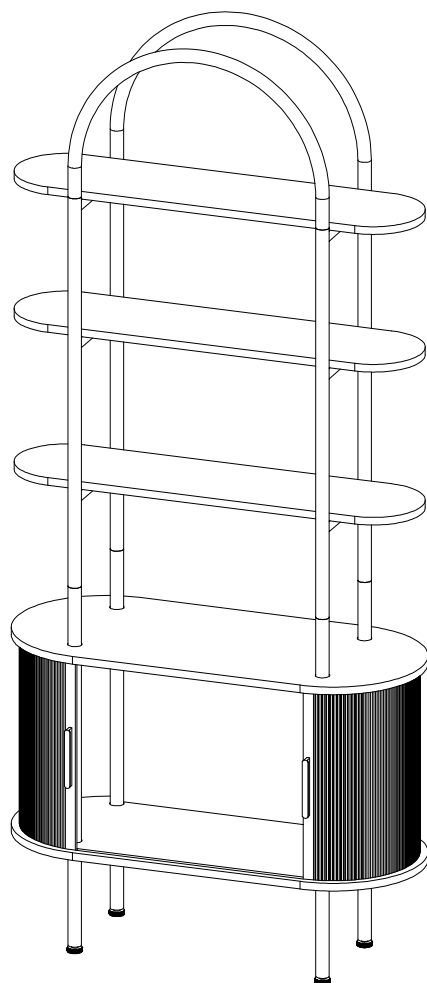

Before You Start



1. Read each step carefully and follow the correct order.
2. Separate and count all parts and hardware.
3. Leave enough space for the assembly process.
4. Prepare the following tools: Flat Head Screwdriver, Cross Head Screwdriver and Hammer.
5. Note: If you use an electric drill or electric screwdriver to tighten the screws, please be careful to slow down and stop when tightening the screws. Otherwise, the screws may fall off.
(Using an electric screwdriver can increase assembly speed).

Useful Tips


Assembly Personnel Required: 1-2 People

- Unpack the item in the area where you plan to store it to avoid excessive lifting.
- Identify, sort, and count the parts before attempting assembly.
- Use a hammer to gently tap in the compression pins.
- The sliders are marked with R (right) and L (left) for proper placement.
- Make sure to always point the tip of the top of the cam lock toward the outer edge.
- If there is a back panel in the package, install it to ensure your unit is complete and sturdy.
- Tighten all the screws provided for the back panel, which can enhance the stability of the product. If it is difficult to tighten, you can use a hammer to secure it and then tighten it.
- Do not use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.



Board Identification


Not actual size

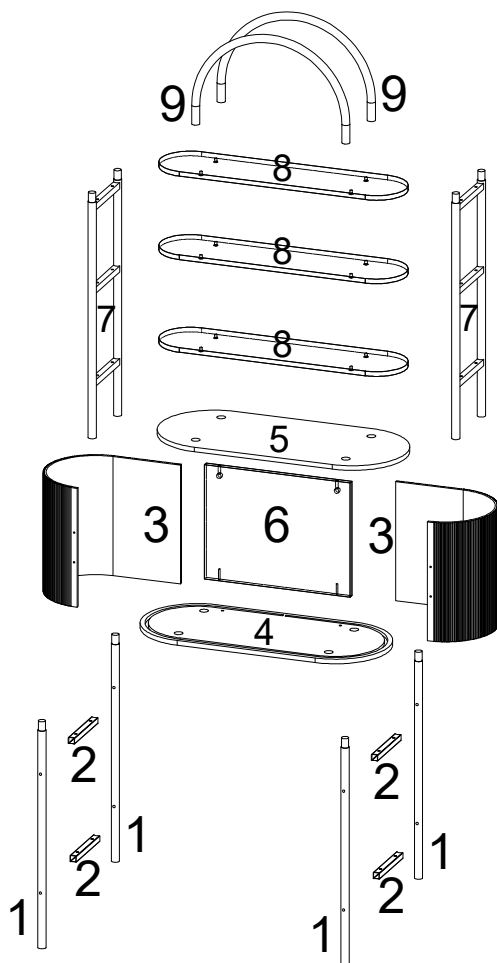

Note: Don't tighten all screws during installation.


Board Identification

Not actual size

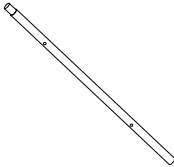


1

Qty:4




2

Qty:4

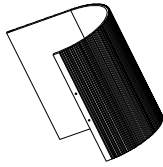


3

Qty:2

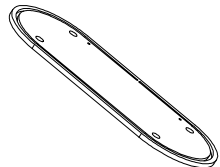


4

Qty:1

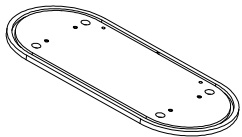


5

Qty:1

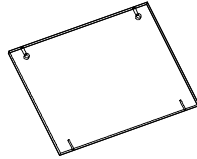


6

Qty:1

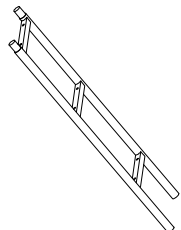


7

Qty:2

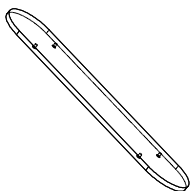

8


Qty:3




9

Qty:2


Parts List

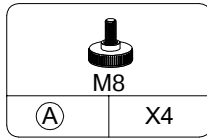


ADJUST FOOT

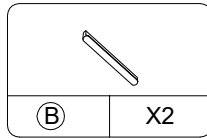


HANDLE

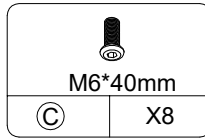


BOLT
spare:1

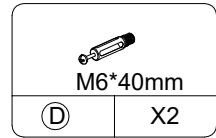


CAM BOLT
spare:1

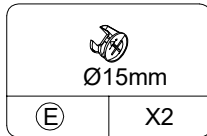


CAM LOCK
spare:1

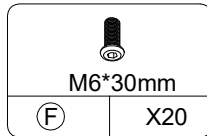


BOLT
spare:2

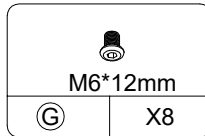


BOLT
spare:1

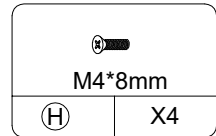


BOLT
spare:1

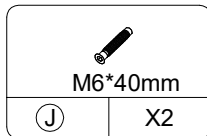


SCREW
spare:1

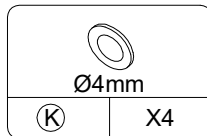

WAHSER
spare:1

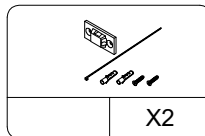

ANTI TIP BELT

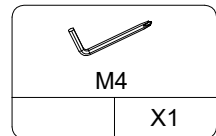


Parts List


Cam Lock Fastening System

insert the cam bolt into
the hole first, then insert
the cam lock and lock it.


1

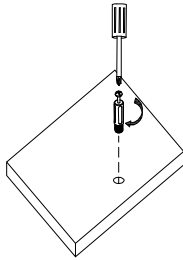

2

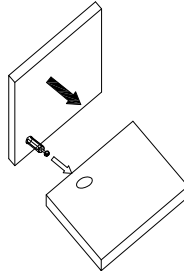


3

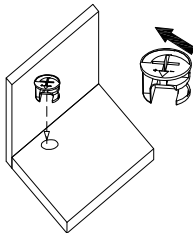

The opening must point toward
the edge of the board

4

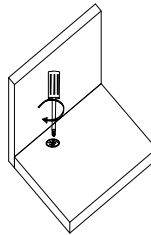


Step 1

	
M6*30mm	
(F)	X4

	
M6*40mm	
(C)	X4

	
M4	
	X1

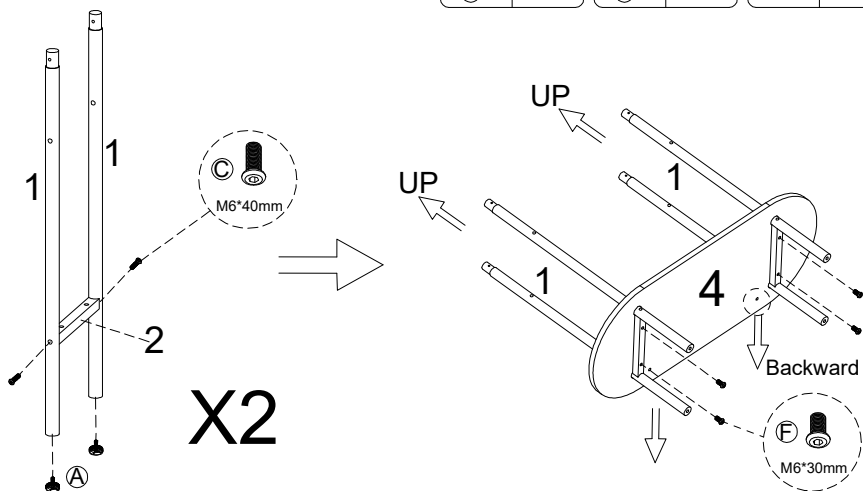


Step 2

	
M6*40mm	
(D)	X2







	
M6*40mm	
(C)	X4

	
M6*40mm	
(J)	X2

	
M4	
	X1




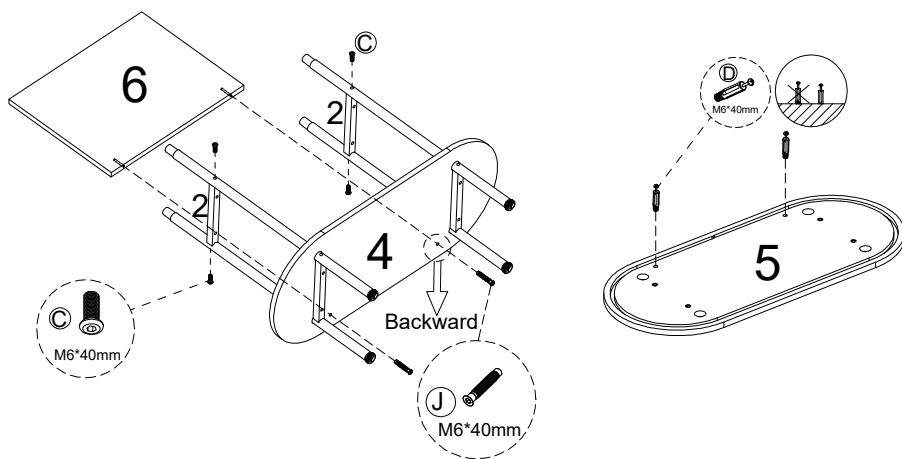


Step 3

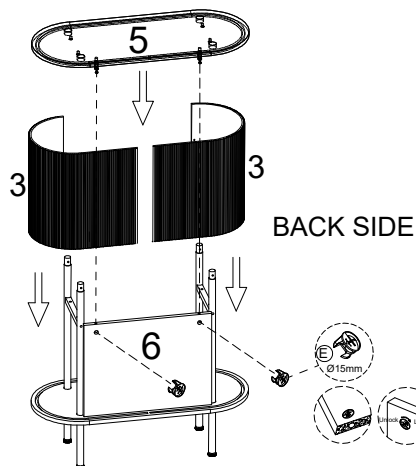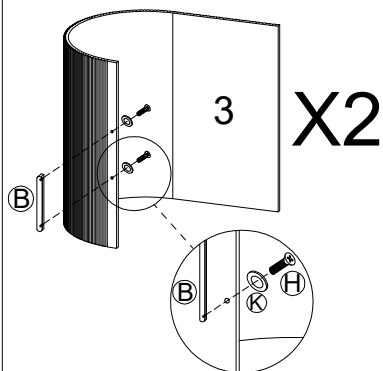


Ensure #3 fits into the bottom curved track with the handle facing forward.

Step 4

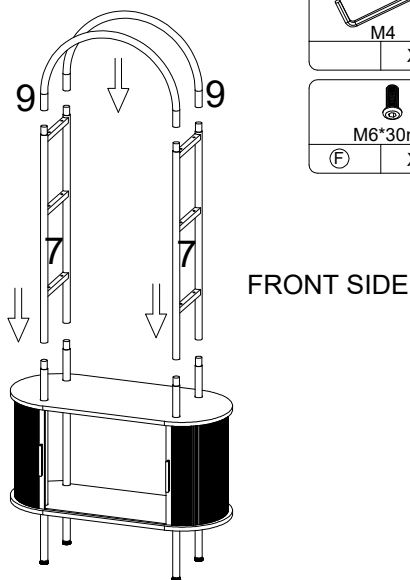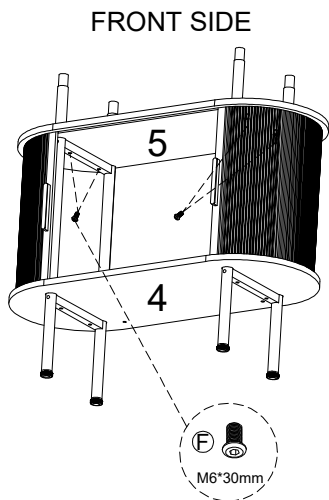


Step 5

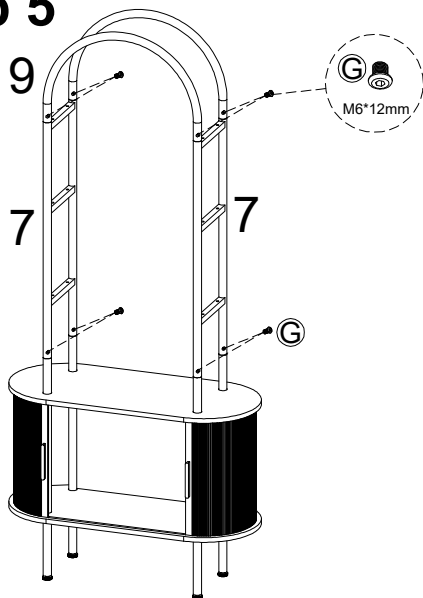

 M6*12mm	
(G)	X8

 M4	
	X1


Step 6

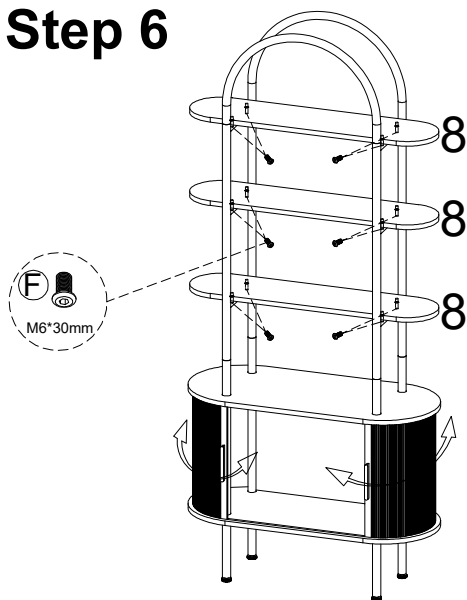


 M6*30mm	
(F)	X12

 M4	
	X1


Step 7

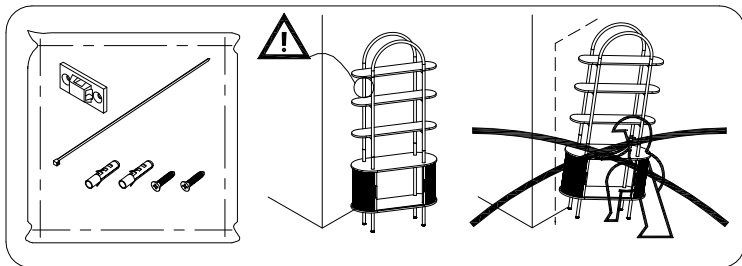


Please assemble part H to avoid dumping.

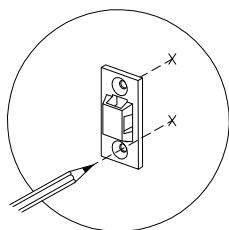


a. Mark on the wall

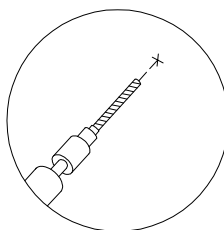


b. Make holes in the wall

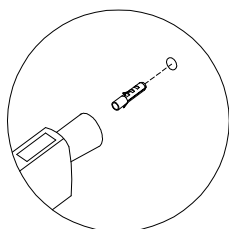

c. Push in the plastic wall anchor

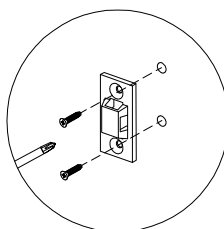

d. Insert long screws 4x35mm
into the wall to fix the iron clasp

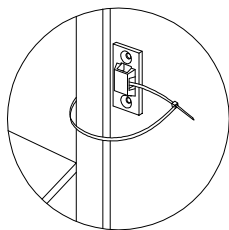

e. The plastic straps pass through the iron clasp
and then ring the steel frame and tighten it