

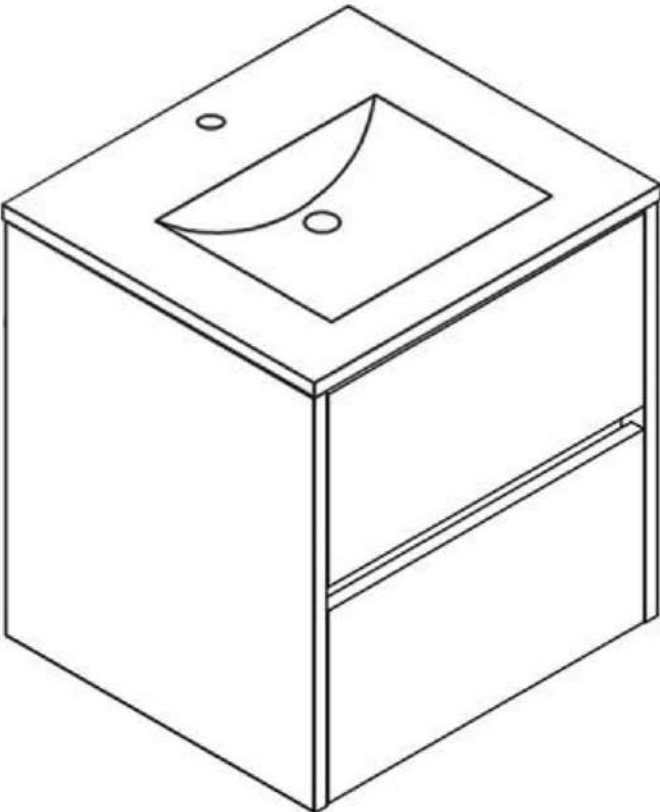
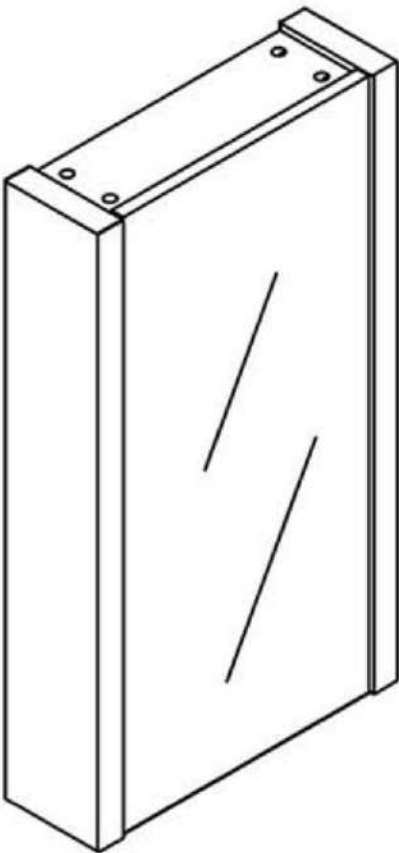
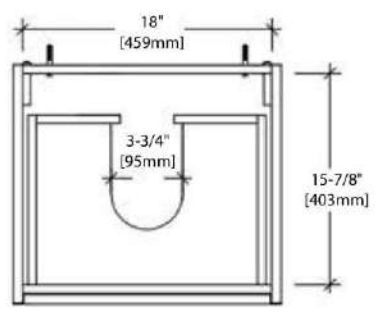


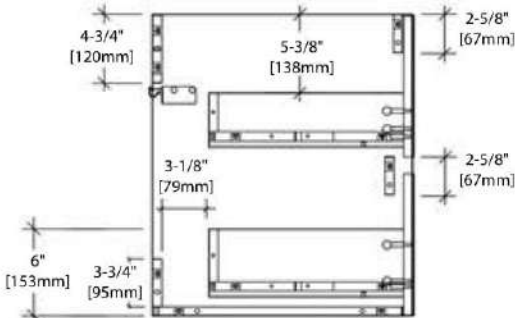




20" VANITY

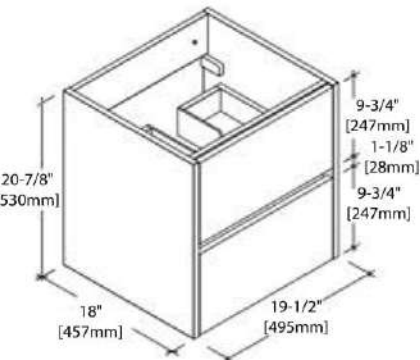

SIDE VIEW

TOP VIEW




24" VANITY

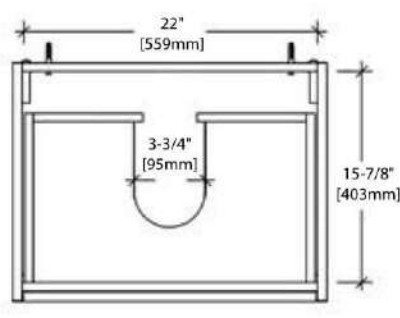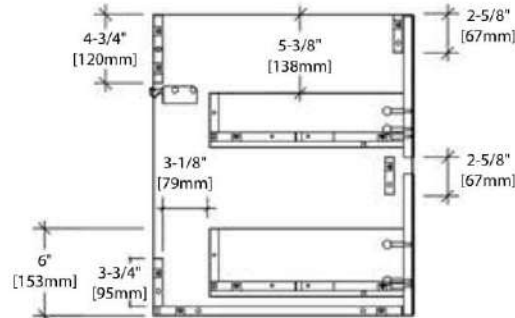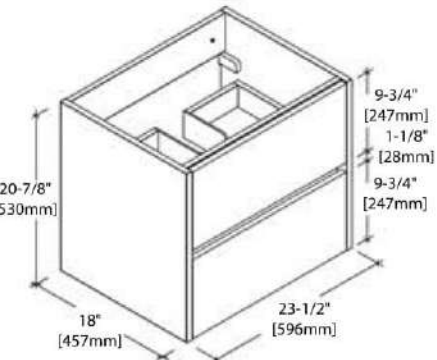

SIDE VIEW

TOP VIEW




30" VANITY

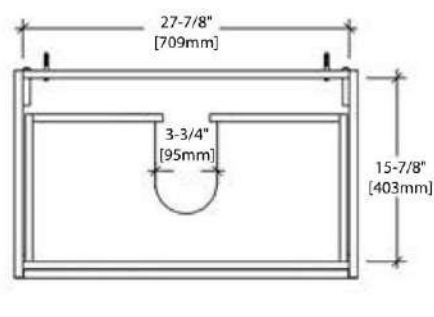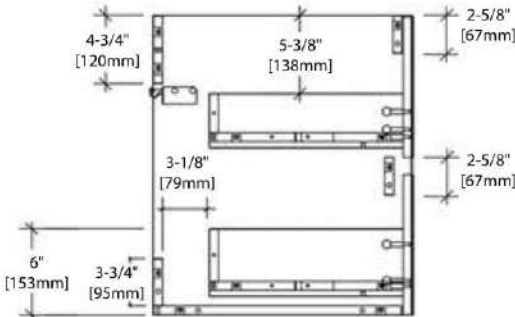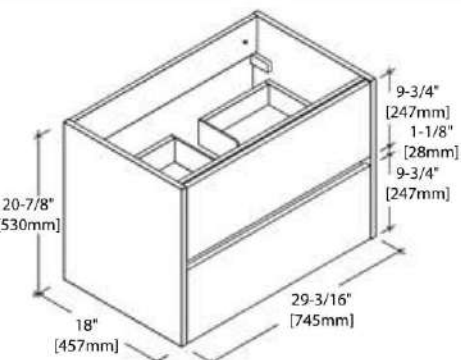

SIDE VIEW

TOP VIEW


36" VANITY

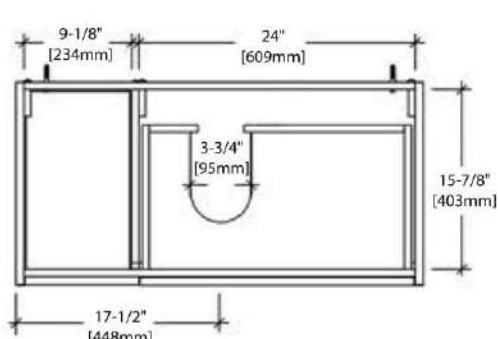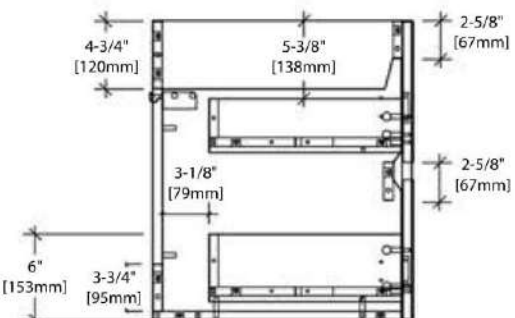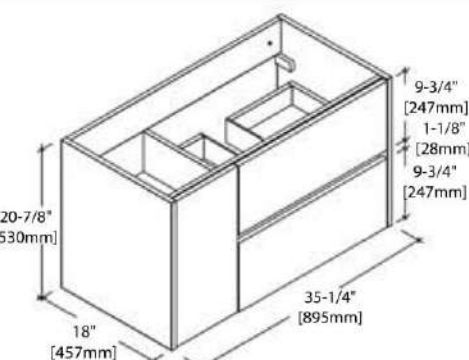

SIDE VIEW


TOP VIEW

20" TOP-MOUNT BASIN

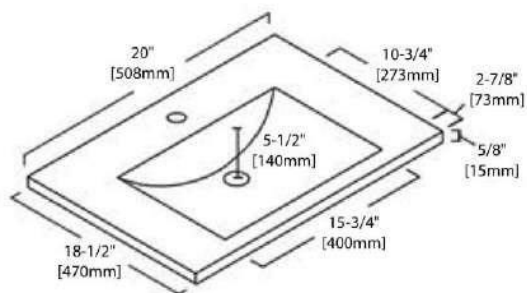


SINGLE HOLE

24" TOP-MOUNT BASIN

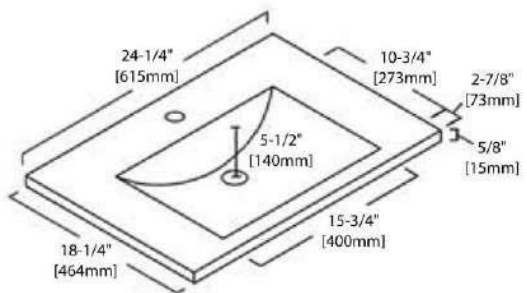


SINGLE HOLE

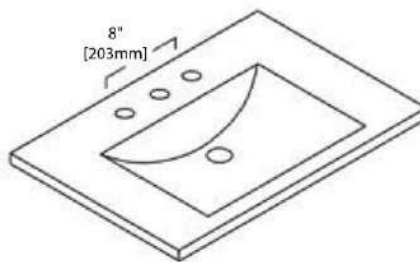


8" WIDESPREAD

30" TOP-MOUNT BASIN

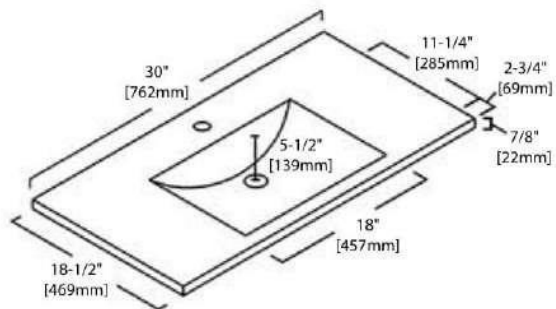


SINGLE HOLE

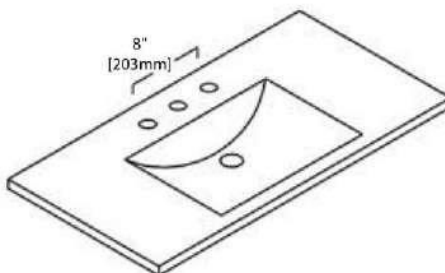


8" WIDESPREAD

36" TOP-MOUNT BASIN

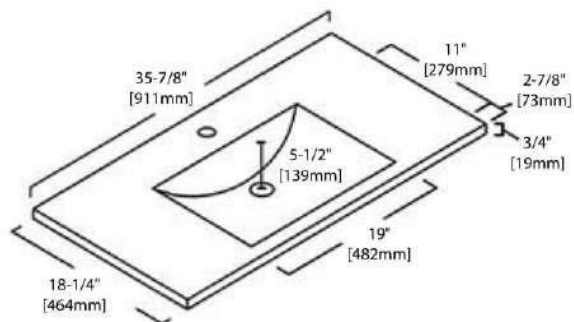


SINGLE HOLE

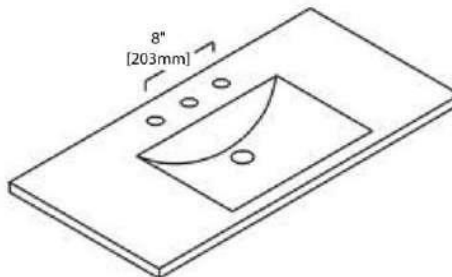


8" WIDESPREAD


48" SINGLE VANITY

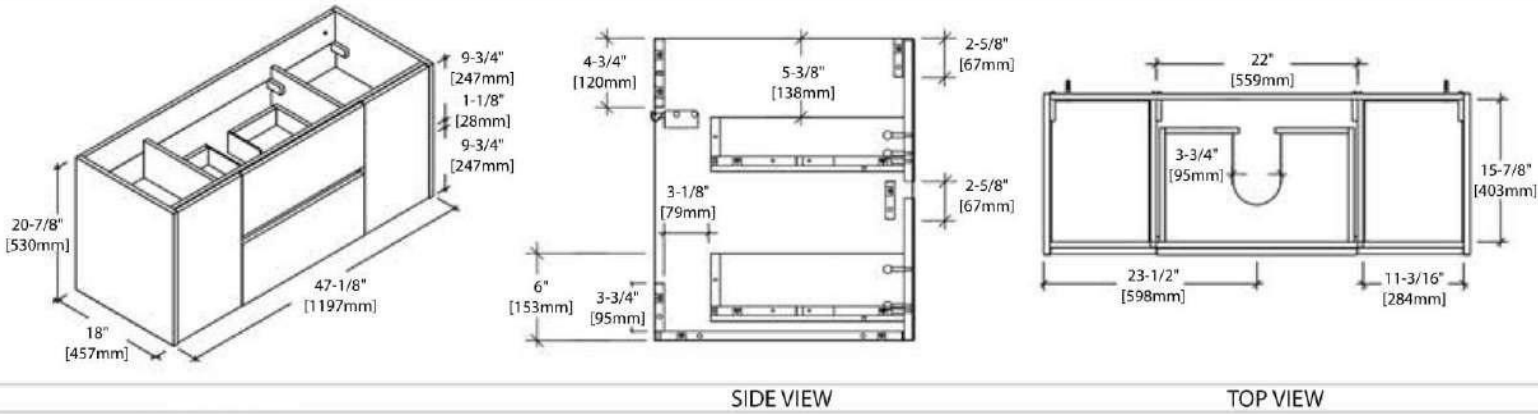


48" DOUBLE VANITY

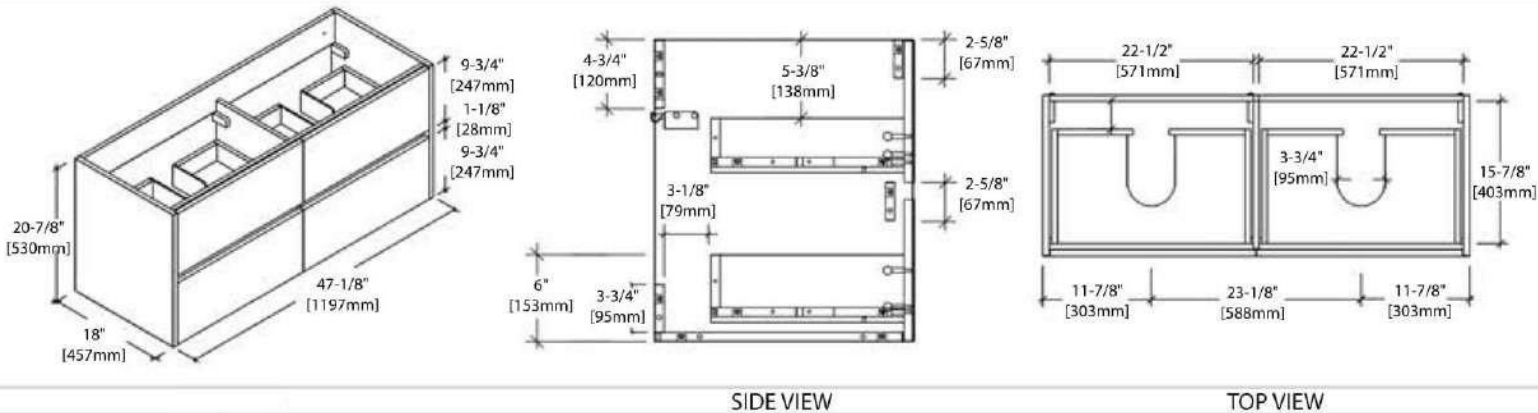



48" SINGLE TOP-MOUNT BASIN

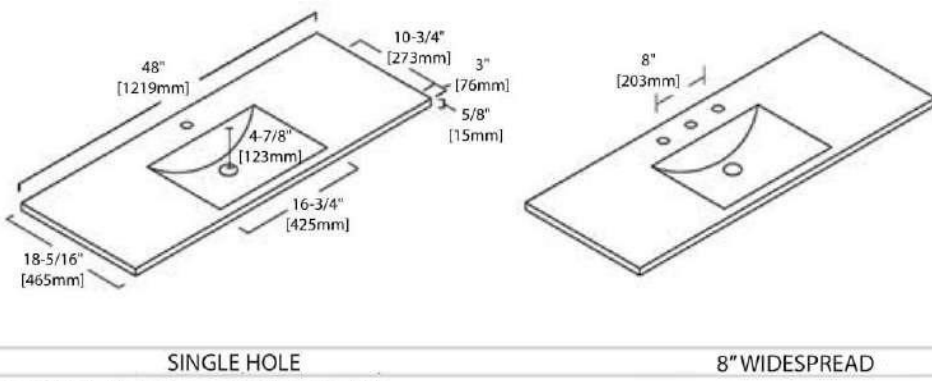



48" DOUBLE TOP-MOUNT BASIN

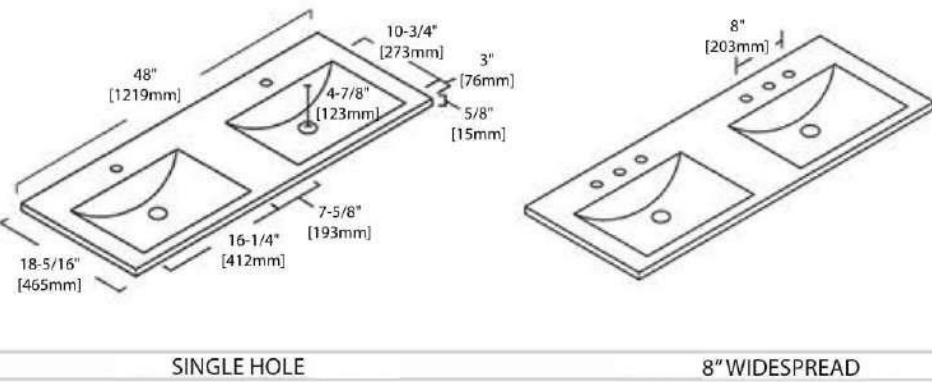



20" MIRROR / MEDICINE CABINET

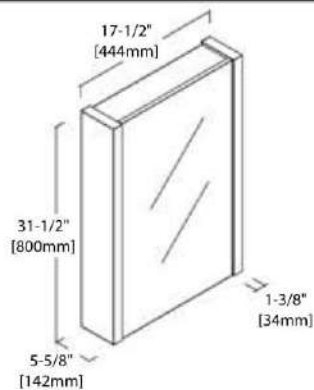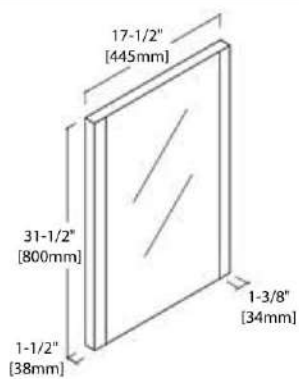


24" MIRROR / MEDICINE CABINET

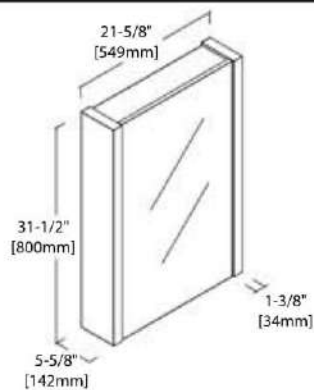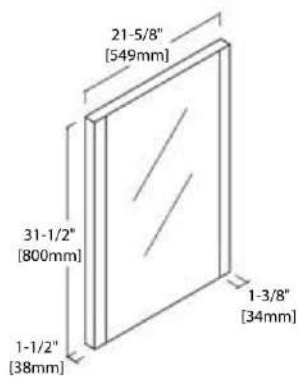


30" MIRROR / MEDICINE CABINET

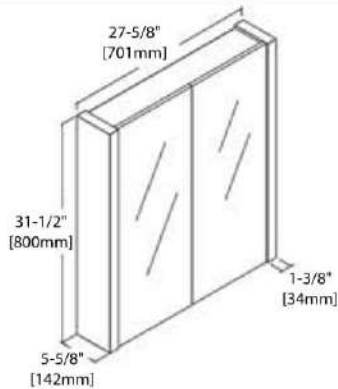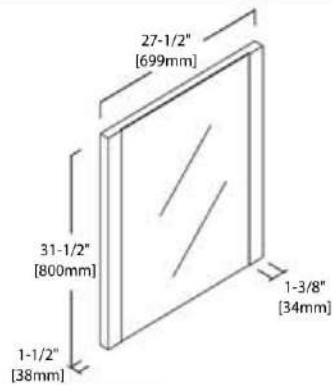

36" MIRROR

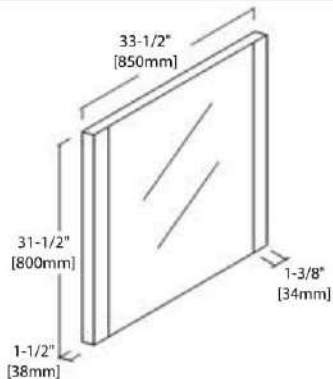

48" MIRROR

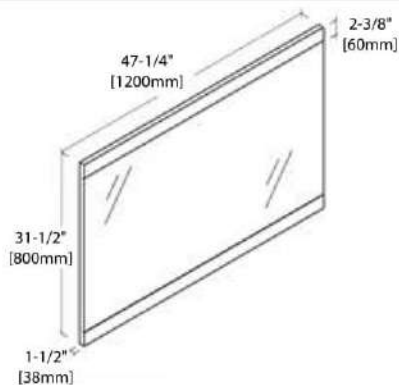

REQUIRED TOOLS



Tape Measure



Pencil



Electric Drill



Drill Bit (6mm)



Silicone



Screwdriver



Spirit Level

PARTS INCLUDED



A




B




C



D

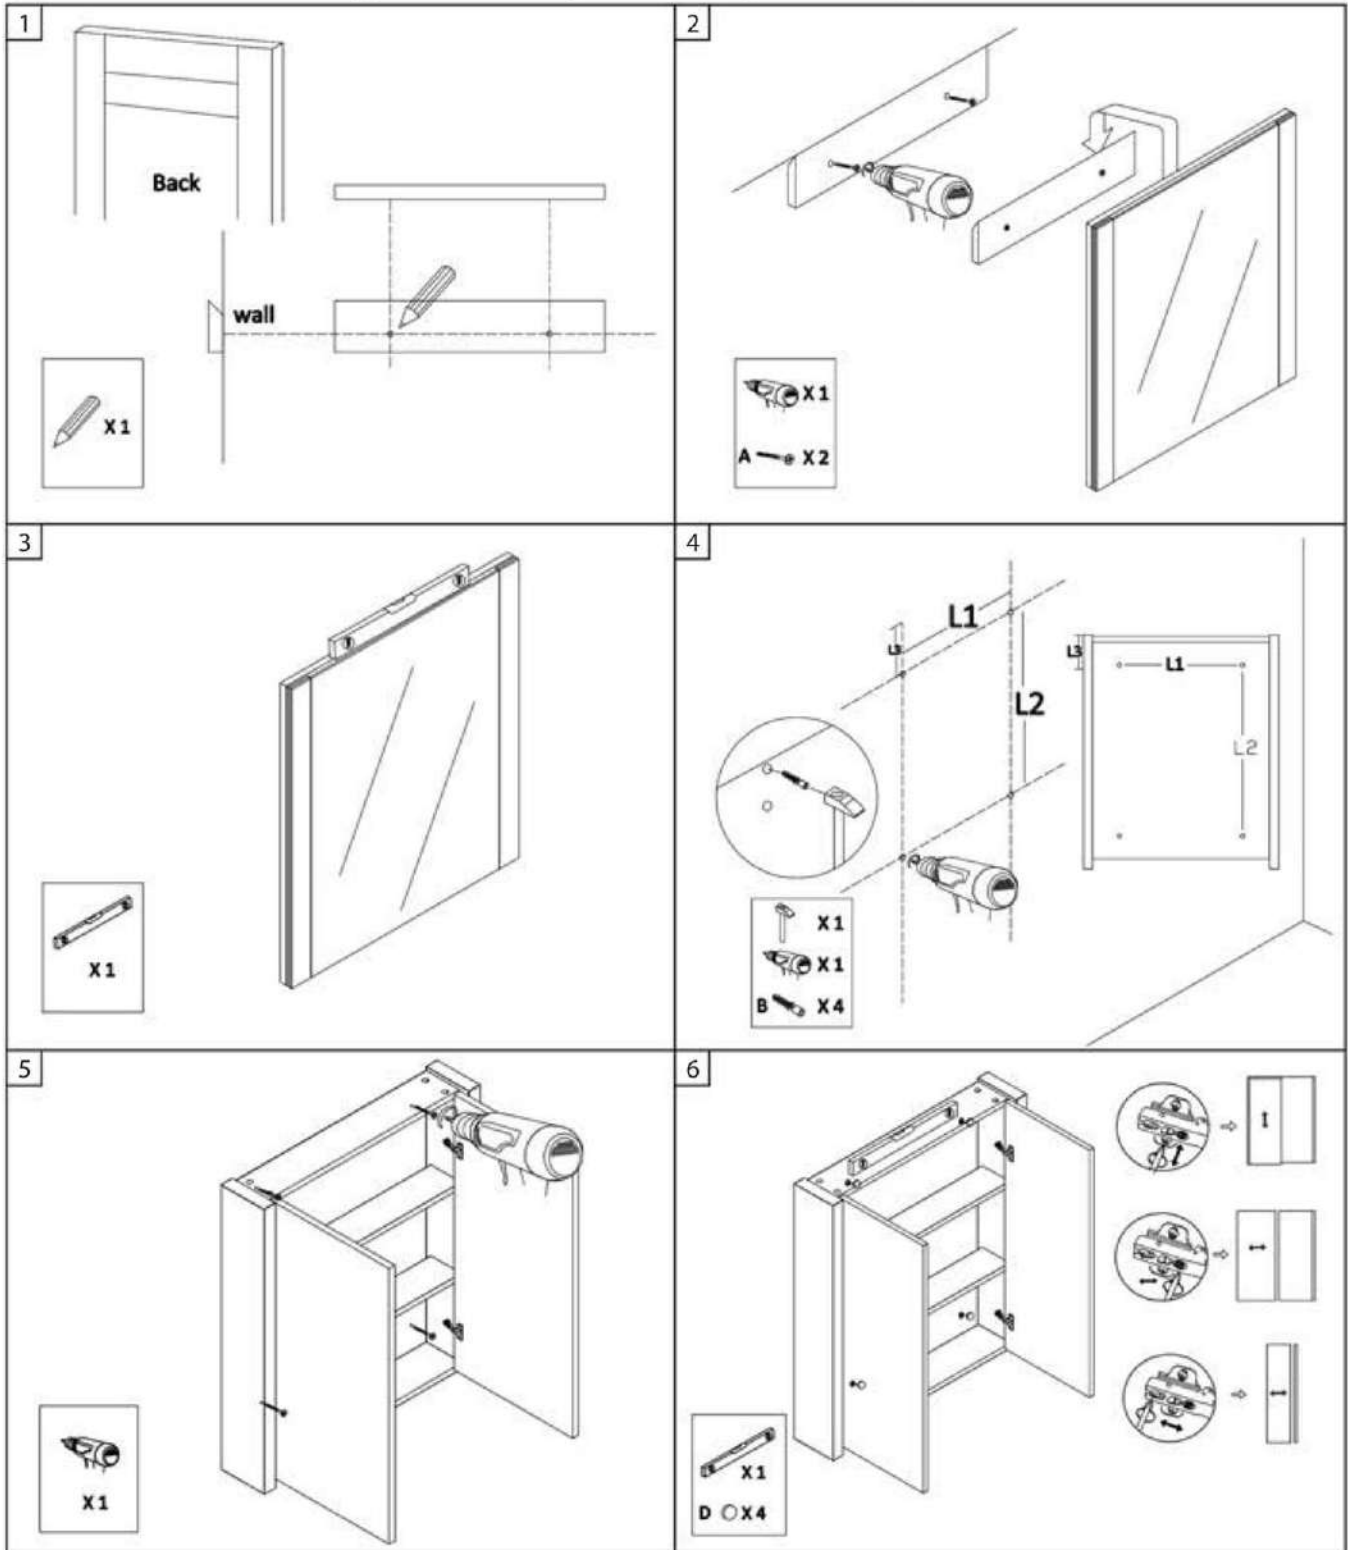

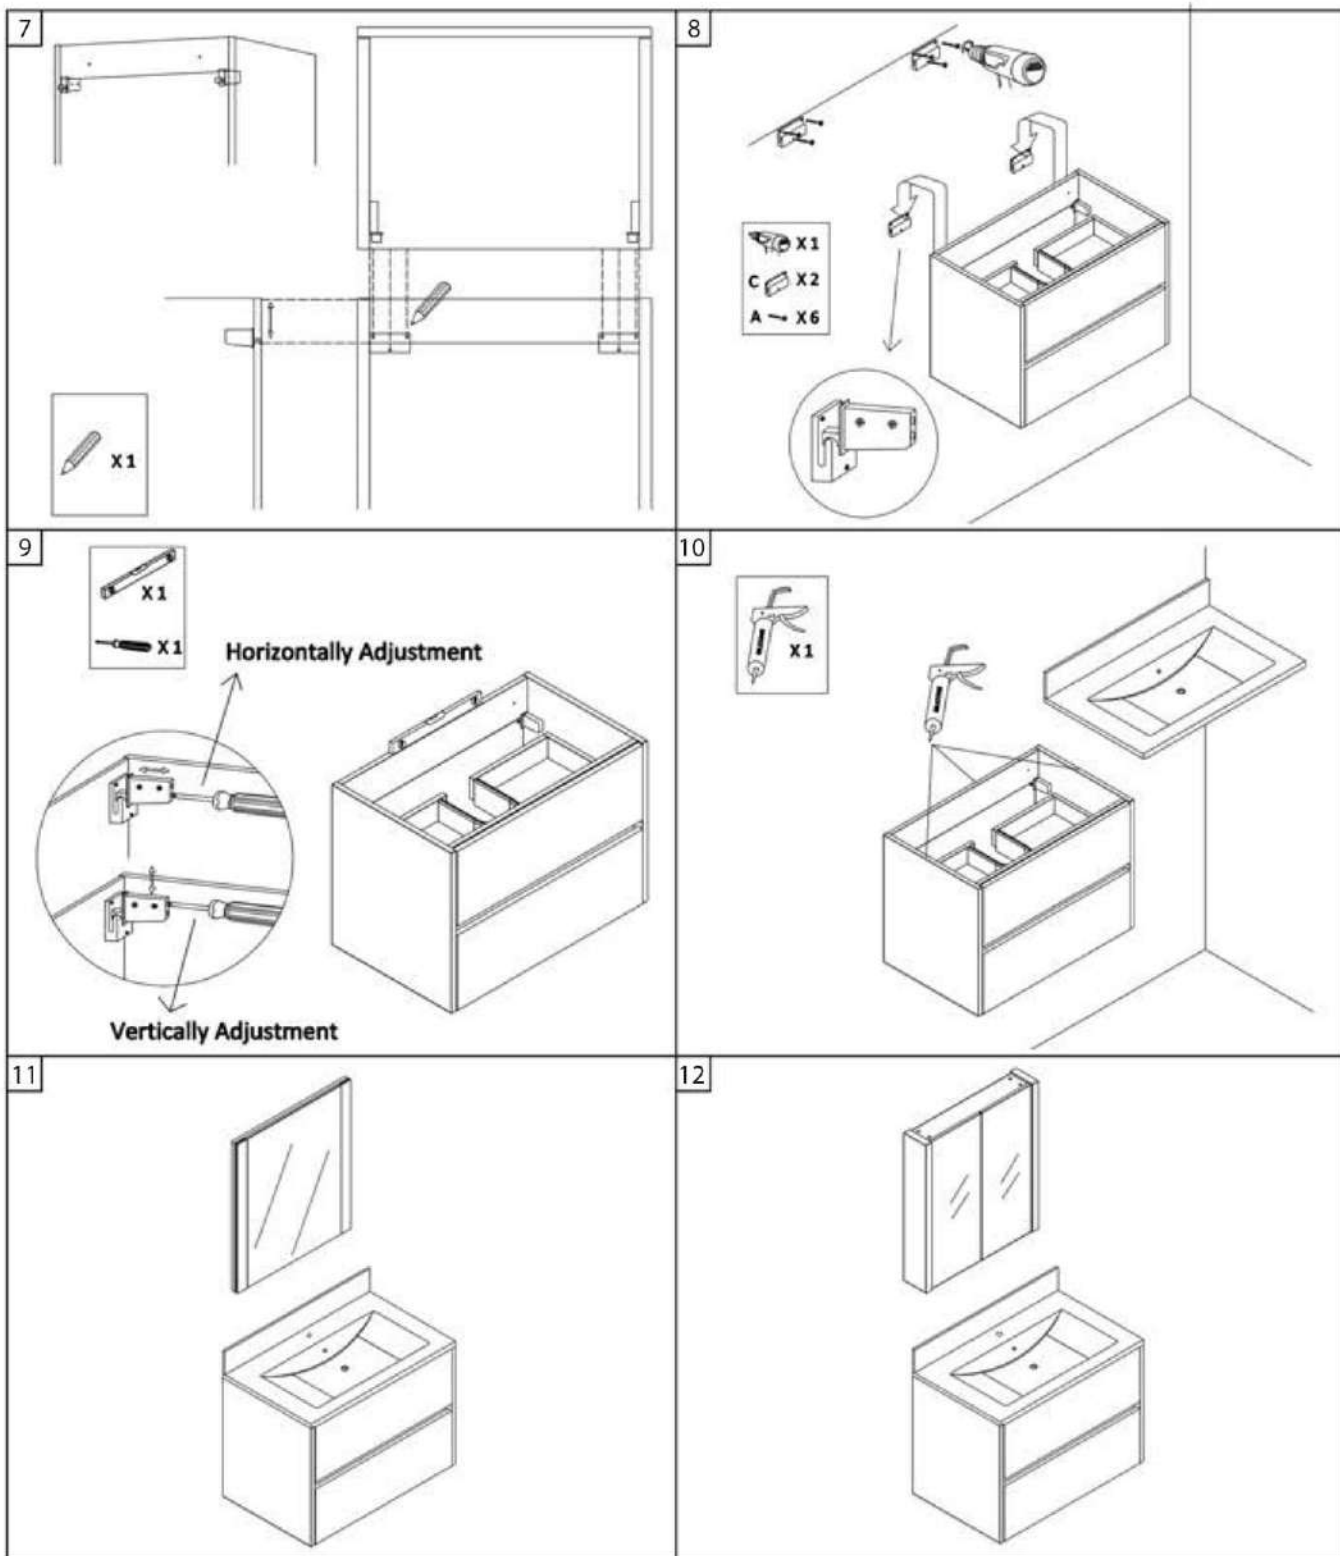

DRAWER REMOVAL & INSTALLATION

