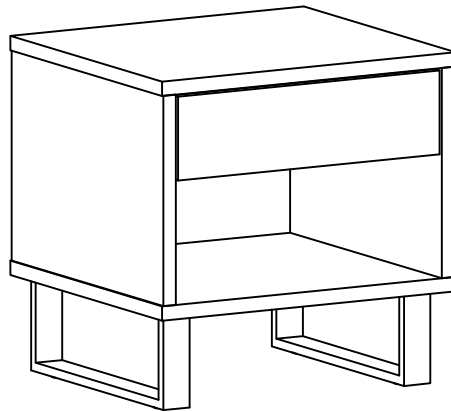


END TABLE

ASSEMBLY INSTRUCTION



ASSEMBLY INSTRUCTION

ASSEMBLY INSTRUCTION

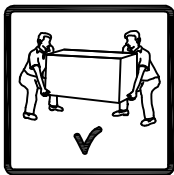
ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



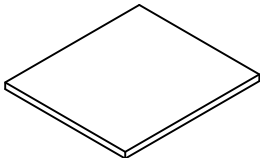
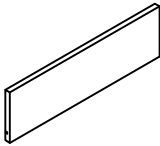
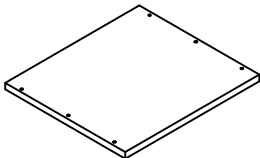

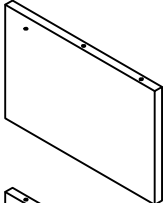

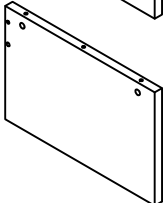
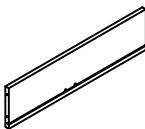
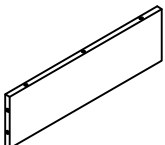
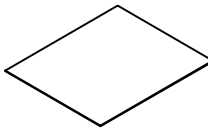
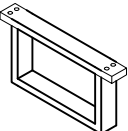

Warning !!

1. Don't attempt to repair or modify parts that are broken or defective .Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.
















ASSEMBLY TIME PER UNIT: 20 MINUTES

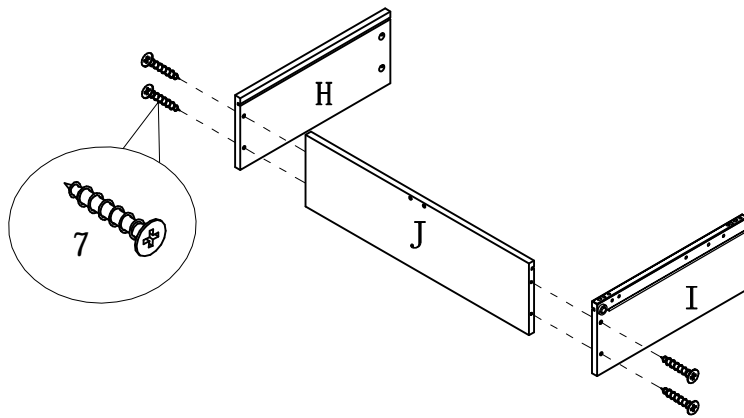
PARTS IDENTIFICATION

(A) TOP		1 PC	(G) DRAWER FRONT PANEL		1 PC
(B) BOTTOM PANEL		1 PC	(H) DRAWER LEFT SIDE PANEL		1 PC
(C) LEFT SIDE PANEL		1 PC	(I) DRAWER RIGHT SIDE PANEL		1 PC
(D) RIGHT SIDE PANEL		1 PC	(J) DRAWER BACK PANEL		1 PC
(E) BACK PANEL		1 PC	(K) DRAWER BOTTOM PANEL		1 PC
(F) LEG FRAME		2 PCS	(L) DRAWER BOTTOM SUPPORT		1 PC

ASSEMBLY INSTRUCTION

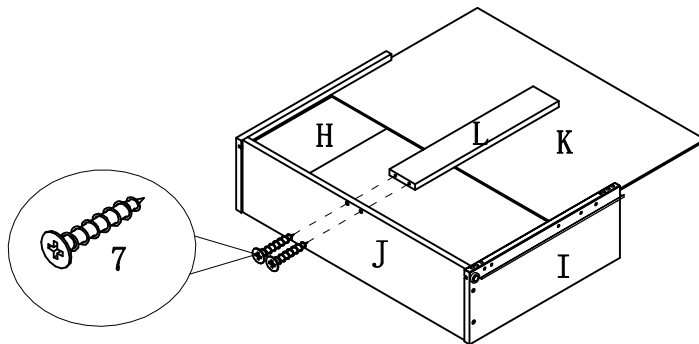
Z	HARDWARE PACKAGE		
NO	DESCRIPTION	FIGURE	Q' TY
1	LARGE CAMBOLT L=29mm		8pcs
2	LARGE CAMLOCK Ø15mm		8pcs
3	SMALL CAMBOLT L=20mm		4pcs
4	SMALL CAMLOCK ET12mm		4pcs
5	LONG DOWEL Ø8×25mm		7pcs
6	SHORT DOWEL Ø6×30mm		2pcs
7	SCREW Ø4x30mm		6pcs
8	WOOD SCREW Ø7x48mm		4pcs
9	WASHER Ø8X16X2mm		4pcs
10	WRENCH M4mm		1pc
11	INNER HEX SCREW M6x20mm		8pcs
12	STICKER Ø22mm		8pcs
13	GLUE		1pc

ASSEMBLY INSTRUCTION

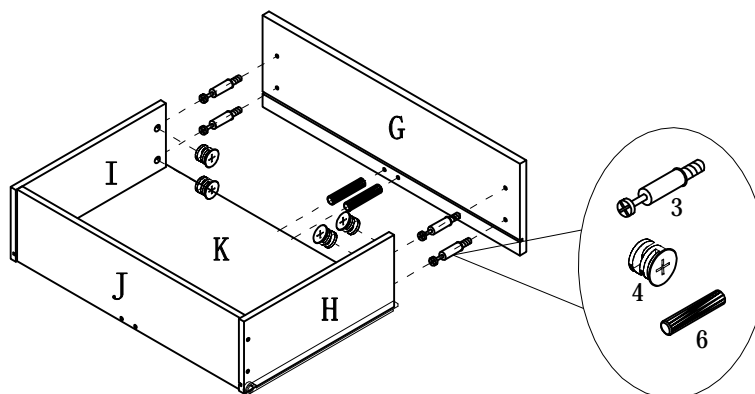


STEP1



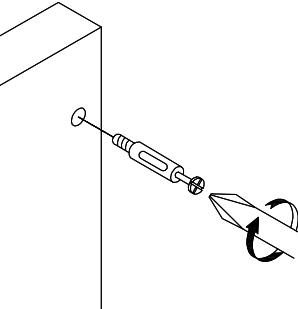
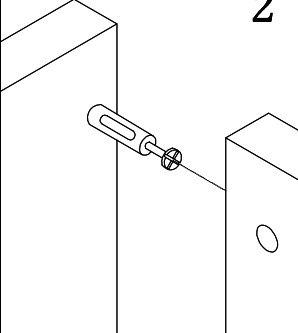
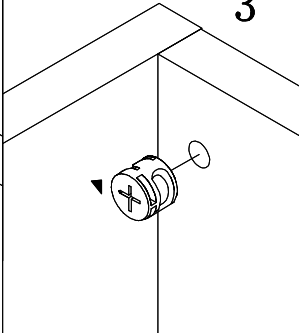
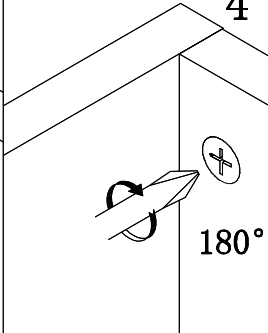
STEP2



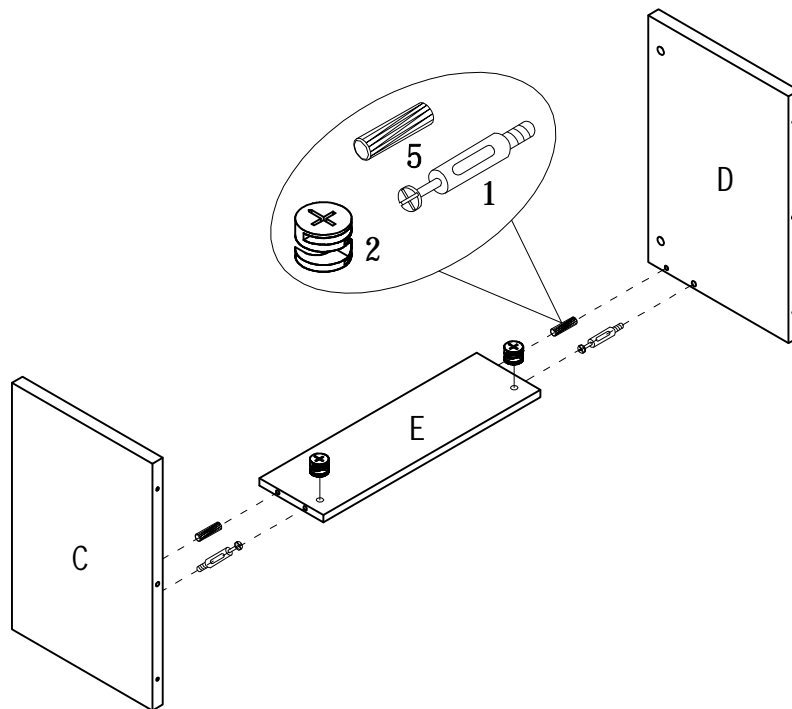
STEP3



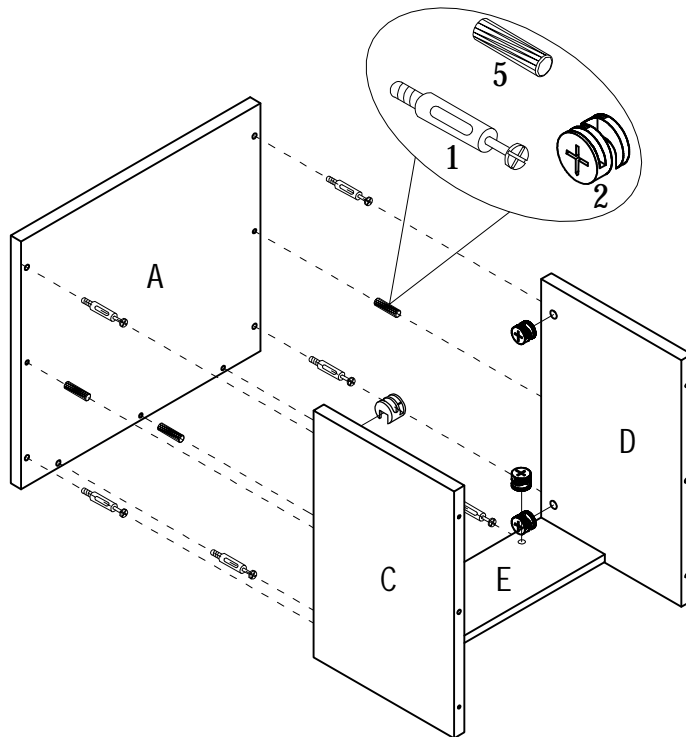
ASSEMBLY INSTRUCTION

HOW TO	1	2	3	4
 Cam Bolt  Cam Lock	 1. Screw Cam Bolt into panel.	 2. Insert Cam Bolt into bolt hole of joining panel.	 3. Insert Cam Lock. arrow facing bolt.	 4. Gently turn Cam Lock clockwise to lock position.

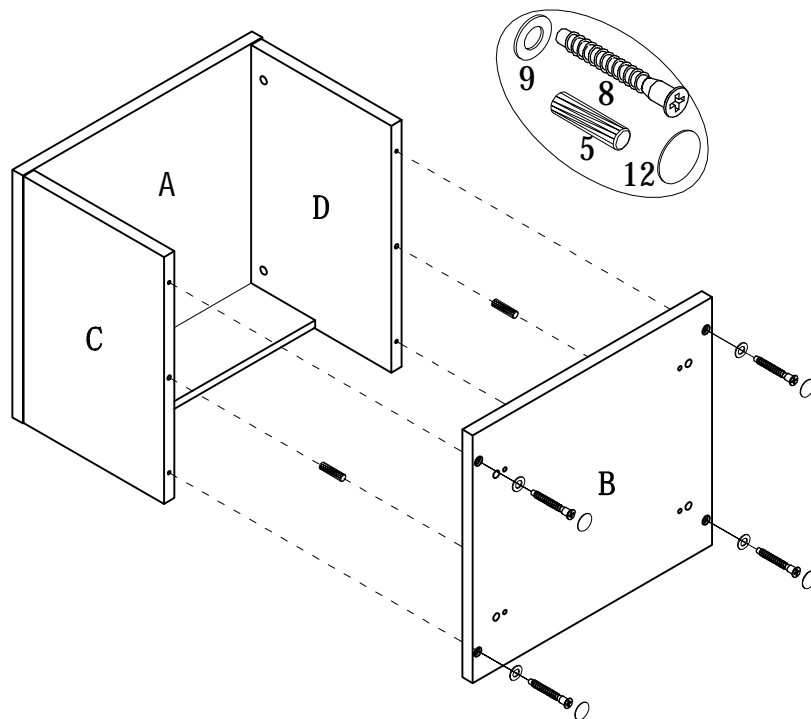
STEP4



ASSEMBLY INSTRUCTION

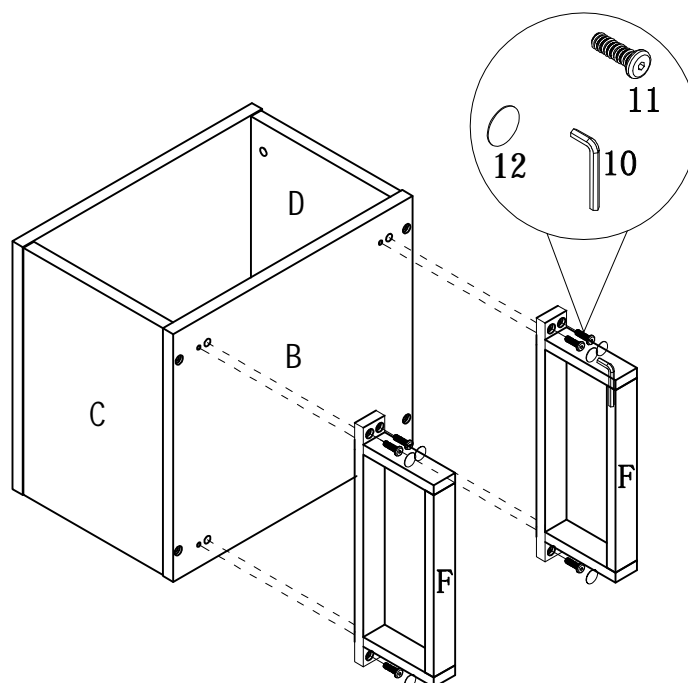


STEP5



STEP6

ASSEMBLY INSTRUCTION



STEP7

STEP8

