


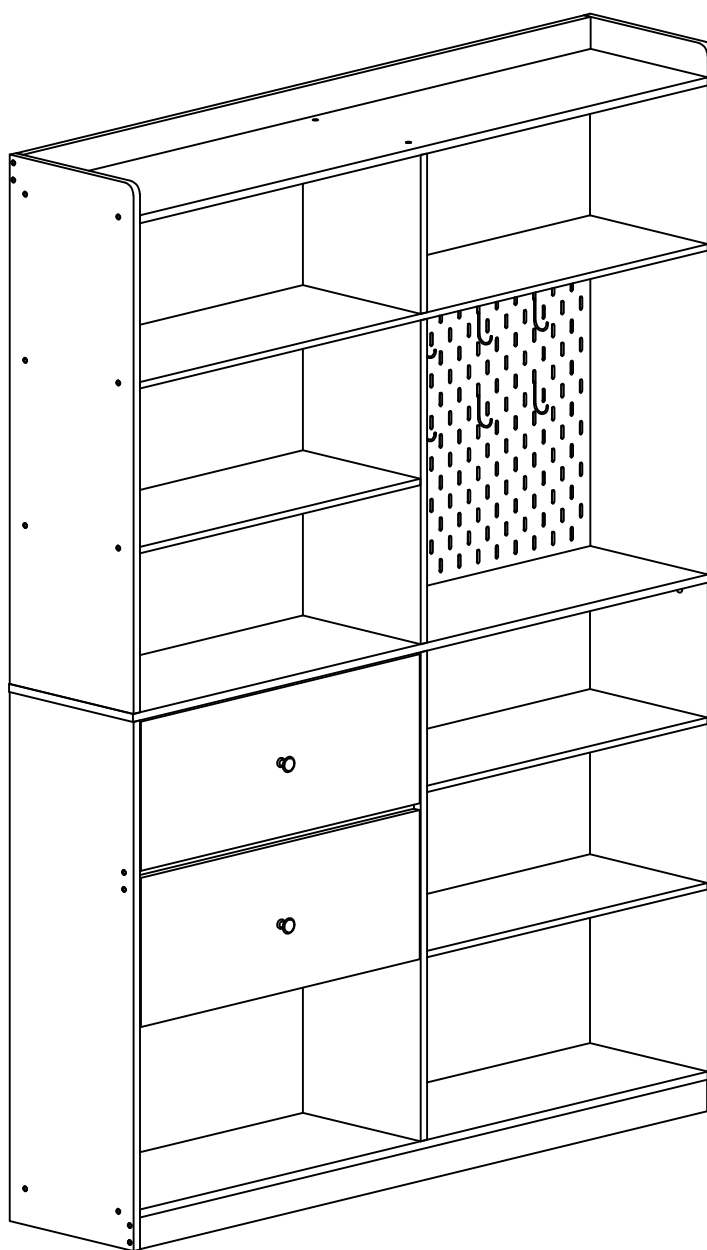

Installation Instruction
























Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other.







MADE IN CHINA


1.

HARDWARE LIST

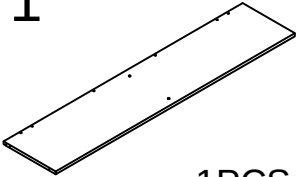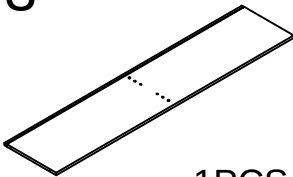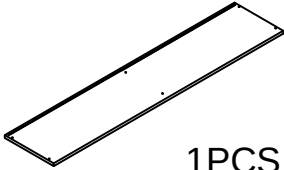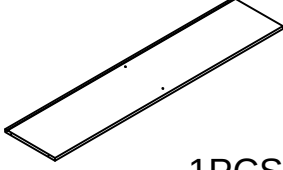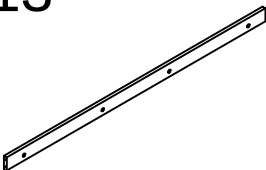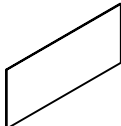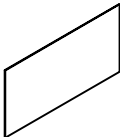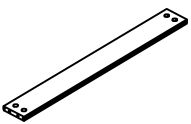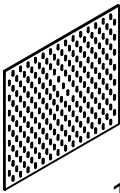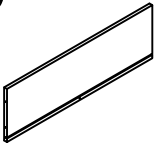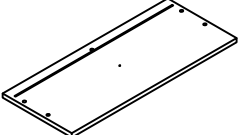1  1PCS	2  1PCS	3  1PCS	4  1PCS
5  1PCS	6  1PCS	7  1PCS	8  1PCS
9  1PCS	10  1PCS	11  1PCS	12  3PCS
13  2PCS	14  5PCS	15  4PCS	16  1PCS
17  2PCS	18  1PCS	19  1PCS	20  2PCS
21  2PCS	22  2PCS	23  2PCS	24  2PCS
25  2PCS			



PARTA LIST

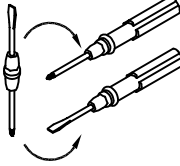A  M5*45mm 48+2PCS	B  M6*32mm 34+2PCS	C  34+2PCS	D  ø8*30mm 12+2PCS
E  M3.5*12mm 16+2PCS	F  ø4*35mm 10+2PCS	G1  2PCS G2  2PCS G3  2PCS G4  2PCS	H1  2PCS H2  2PCS
J1  40PCS J1  40PCS	K  8PCS	 1SETS	 M4 1PCS
CL  2PCS CR  2PCS DL  2PCS DR  2PCS L:250mm			


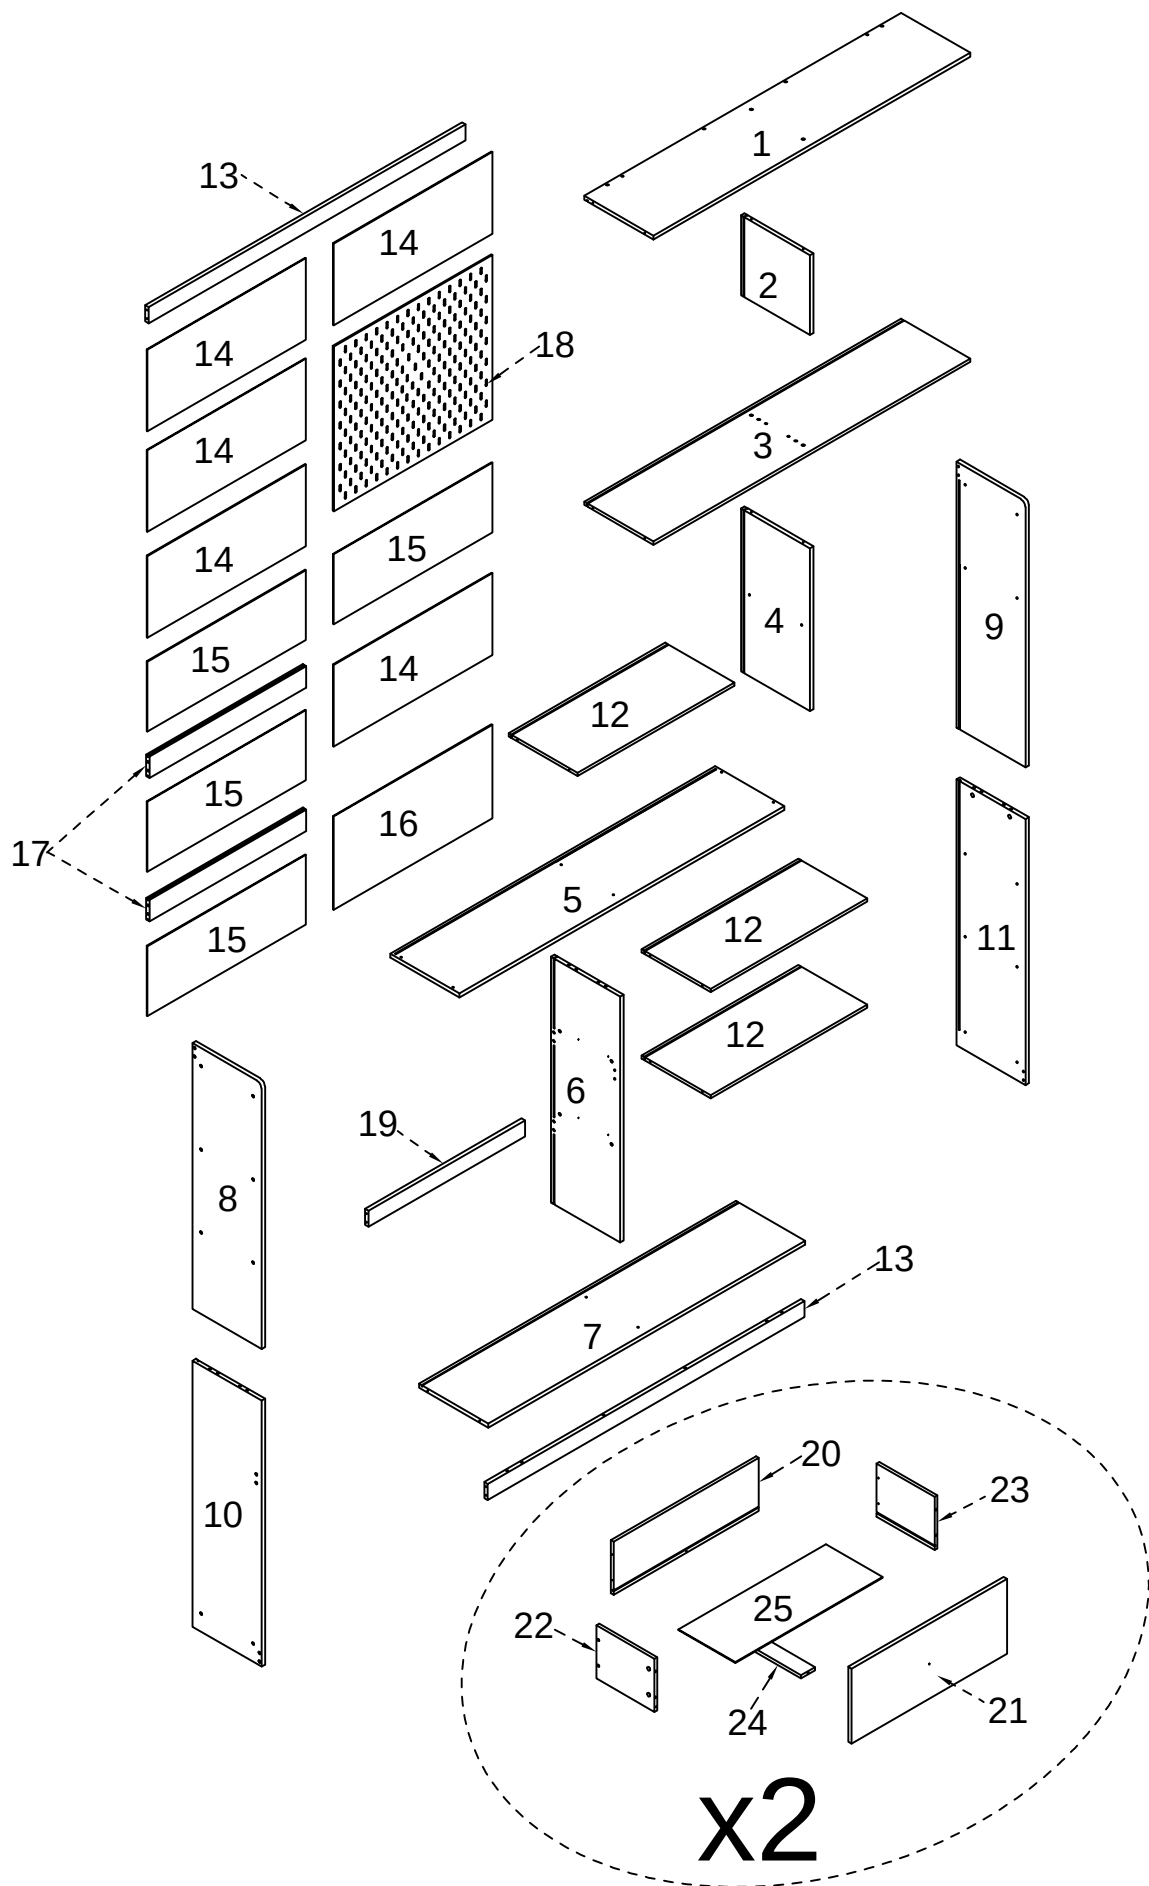


1




Important reminder: Please assemble the E screw according to the hole indicated by the arrow

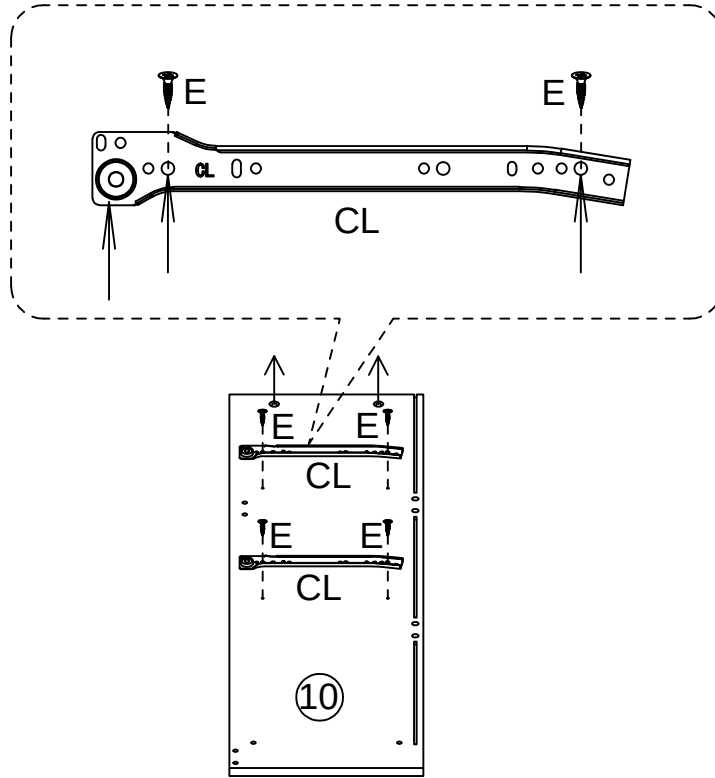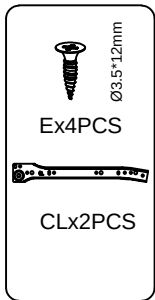


2

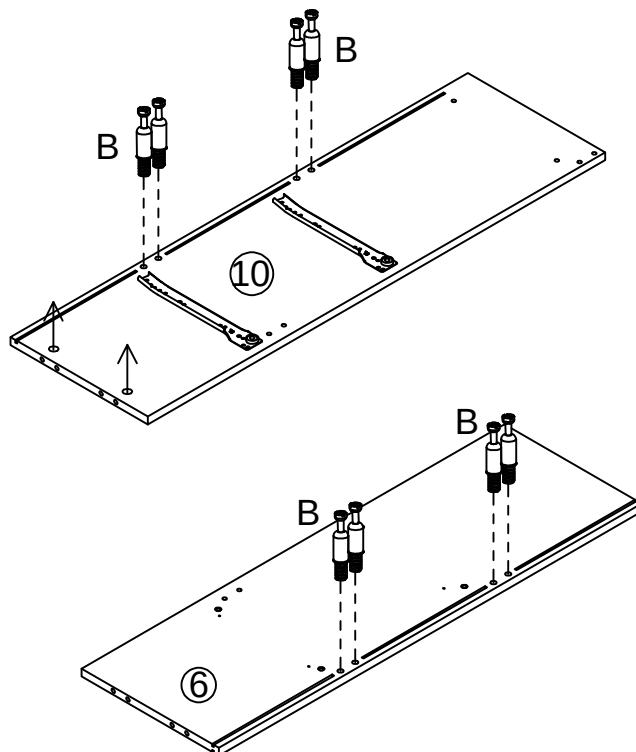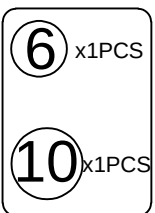

3

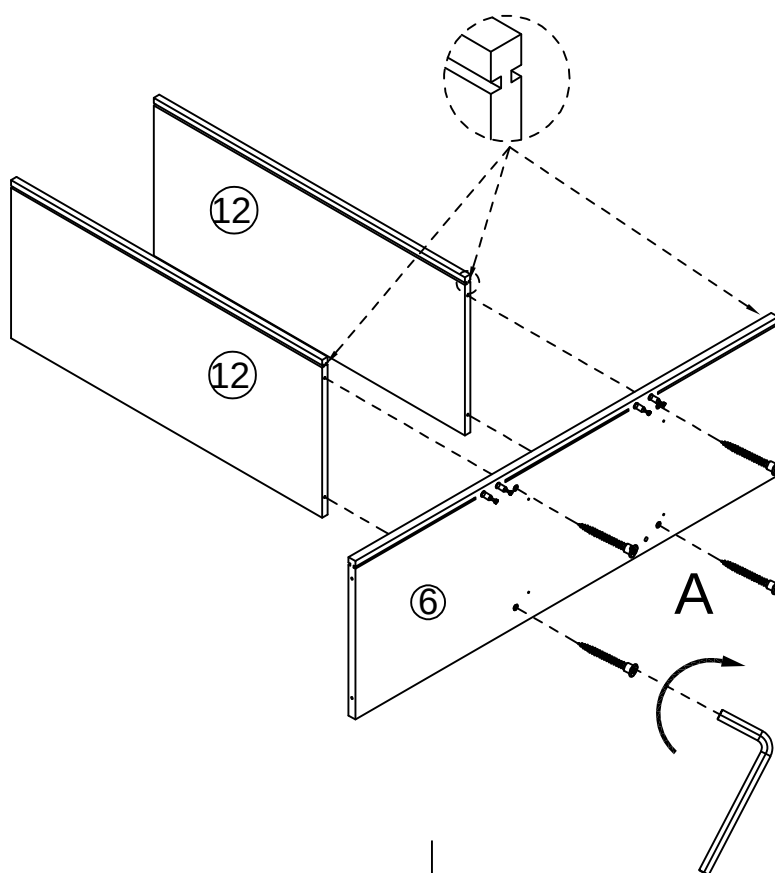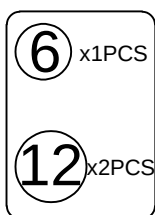
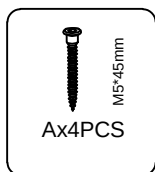


4

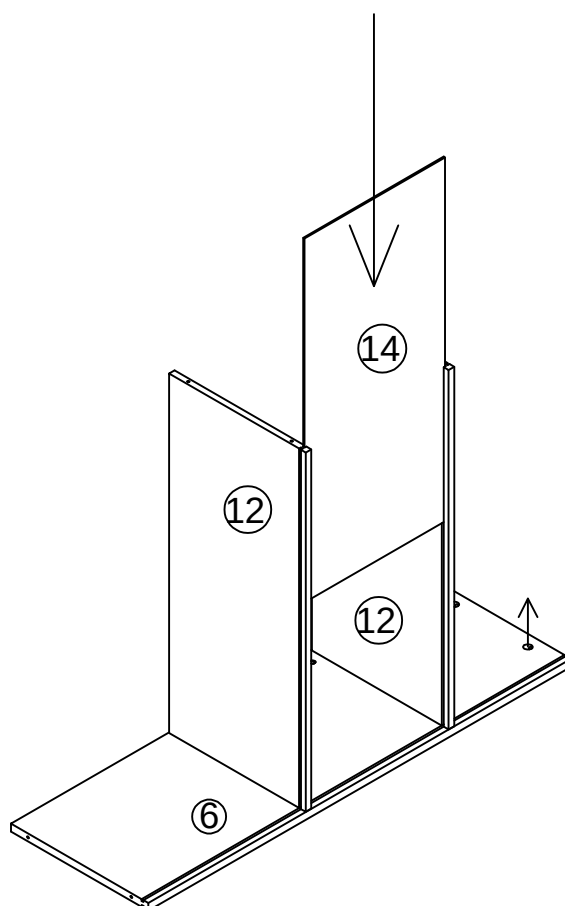

6.





5

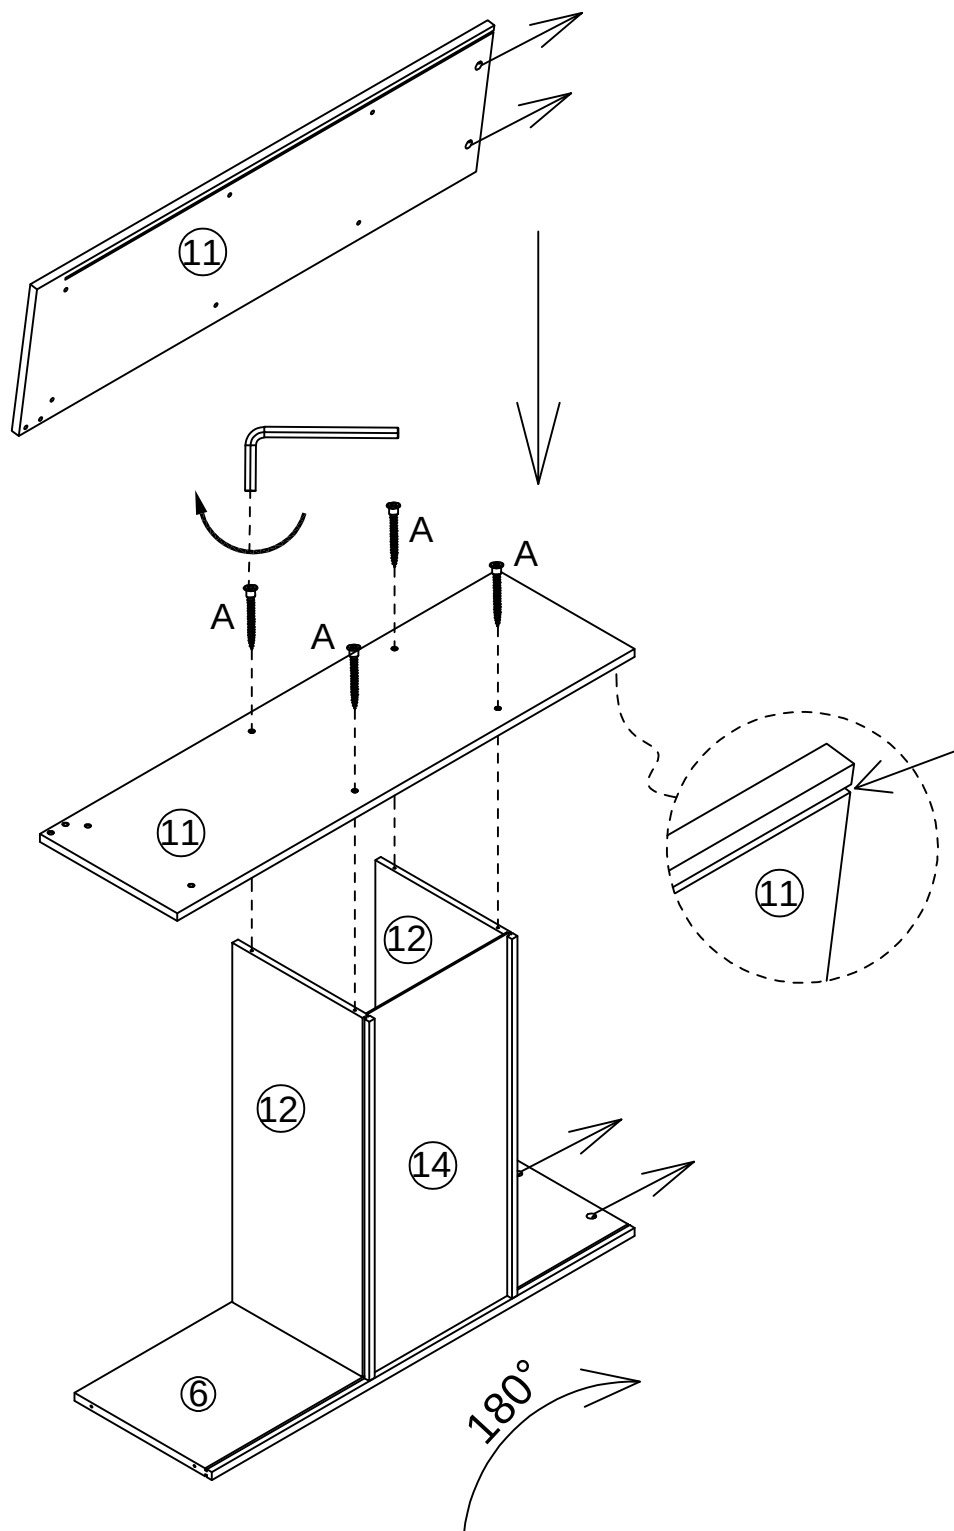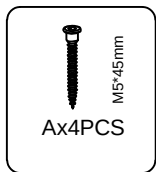


7.

6



Important reminder: Please assemble the E screw according to the hole indicated by the arrow

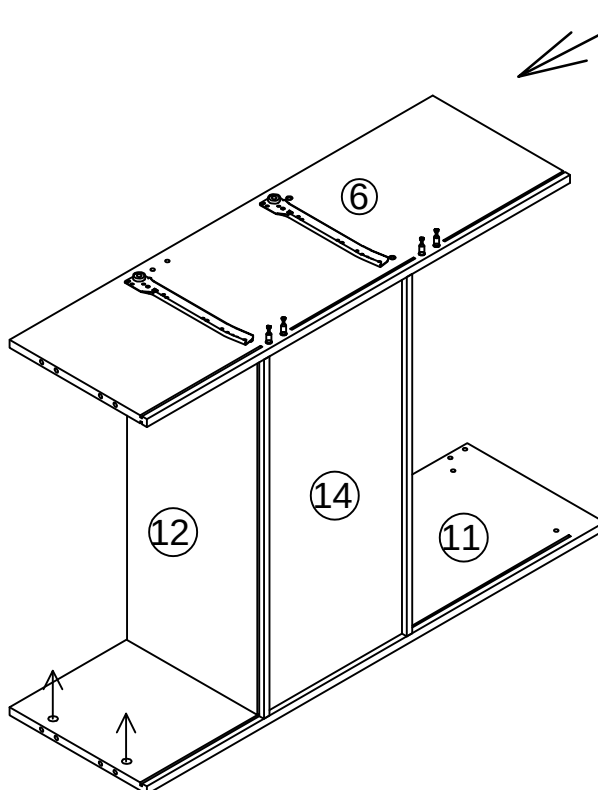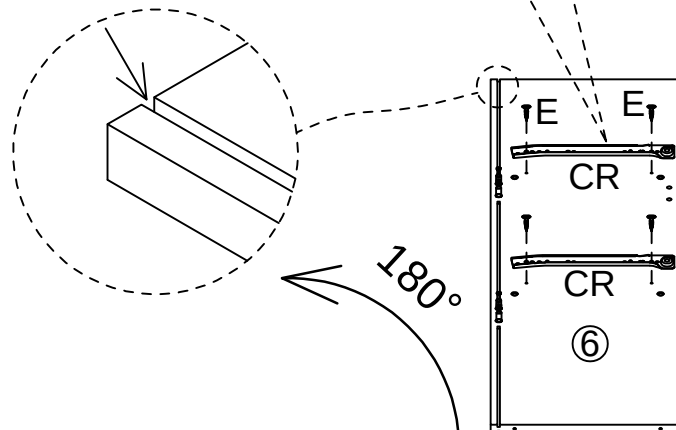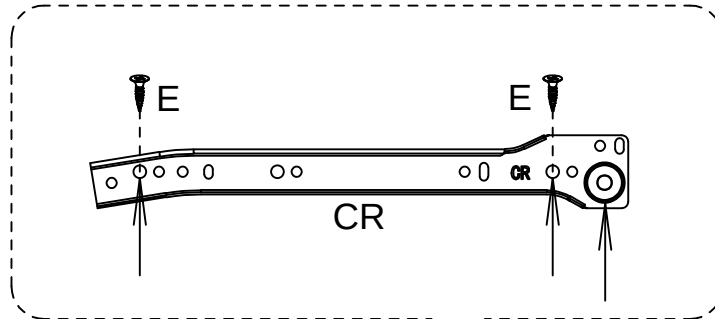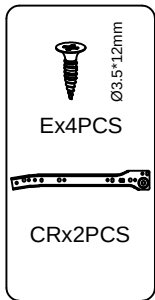

7

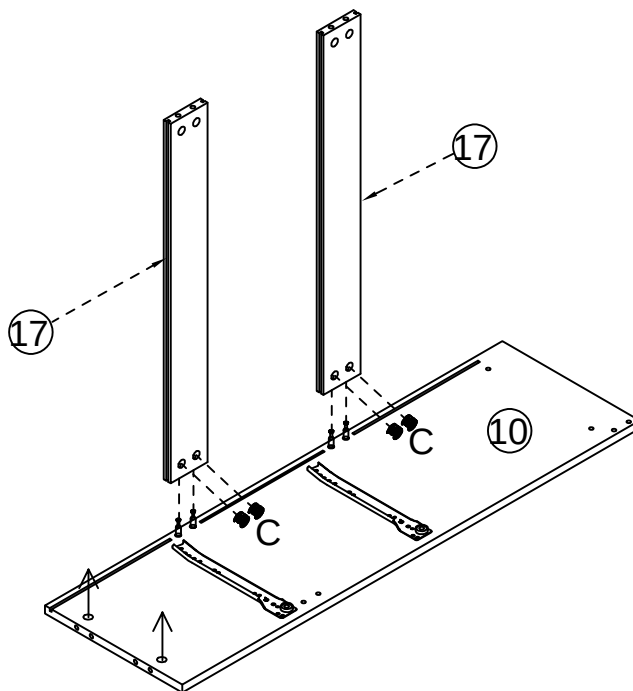


8

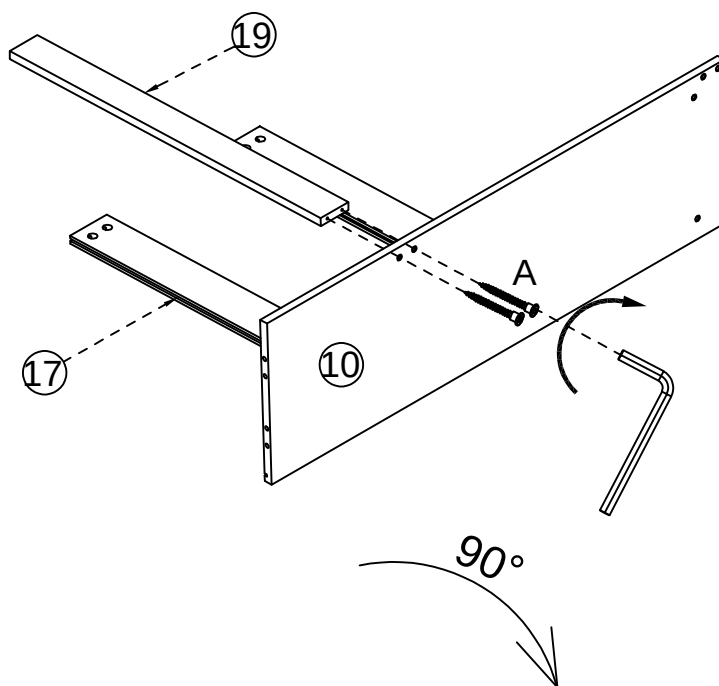
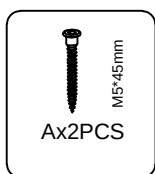


9.

9


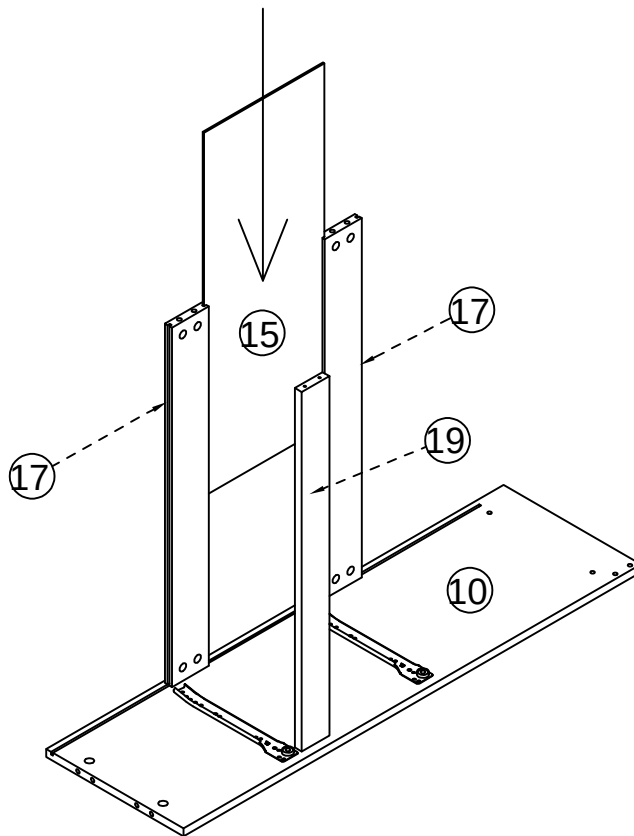






10

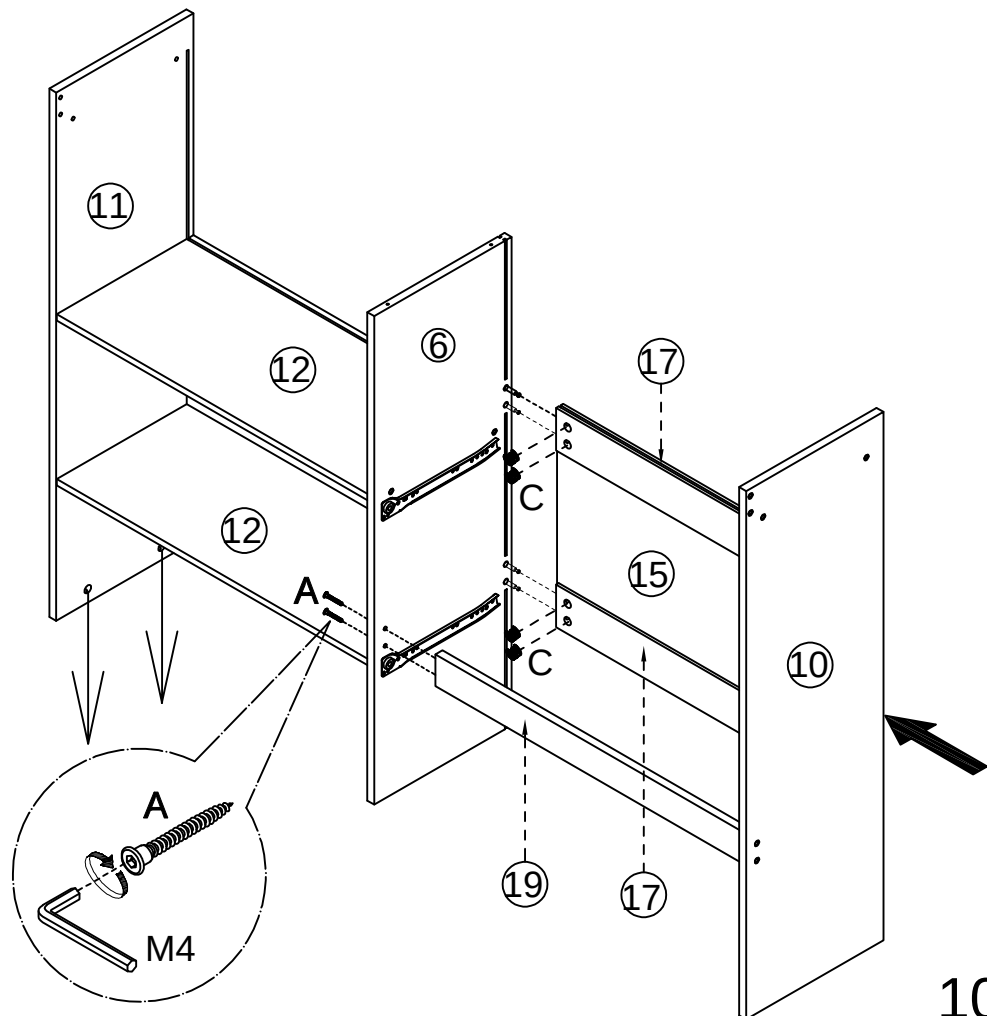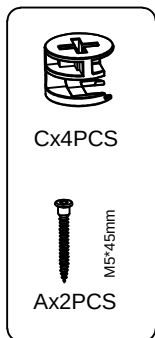





10.

11

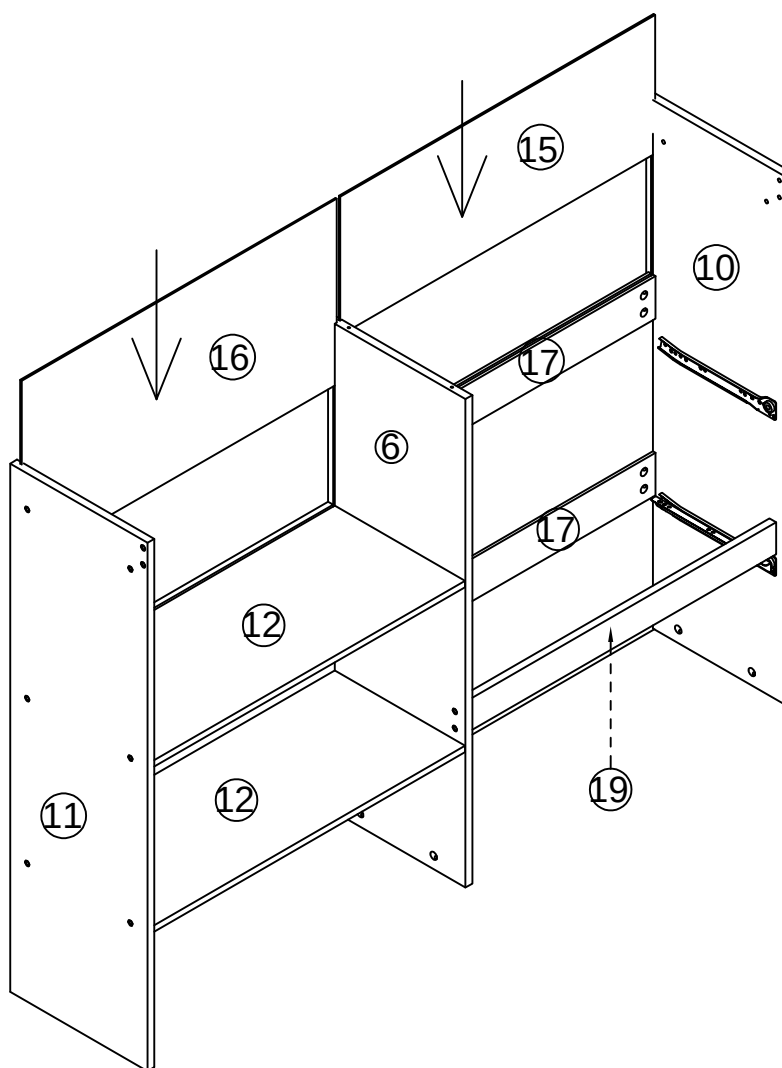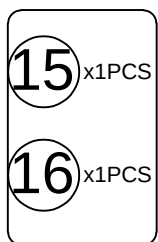


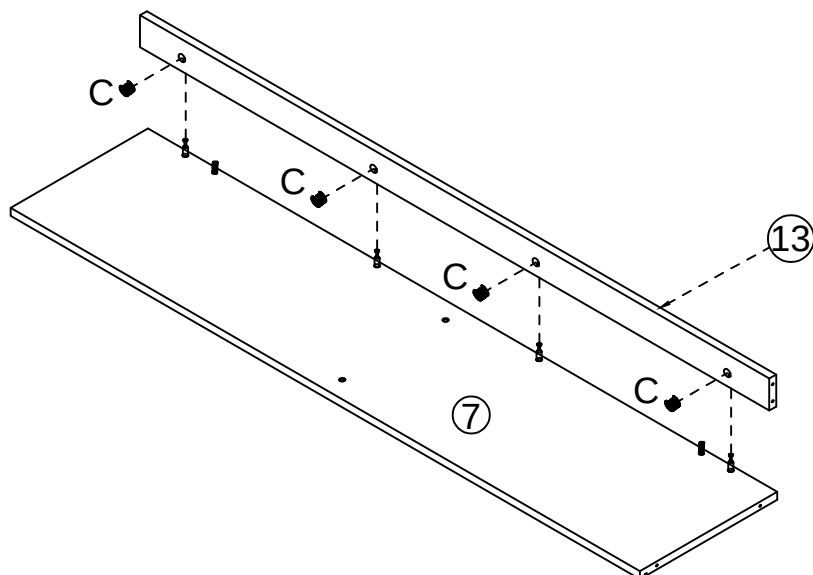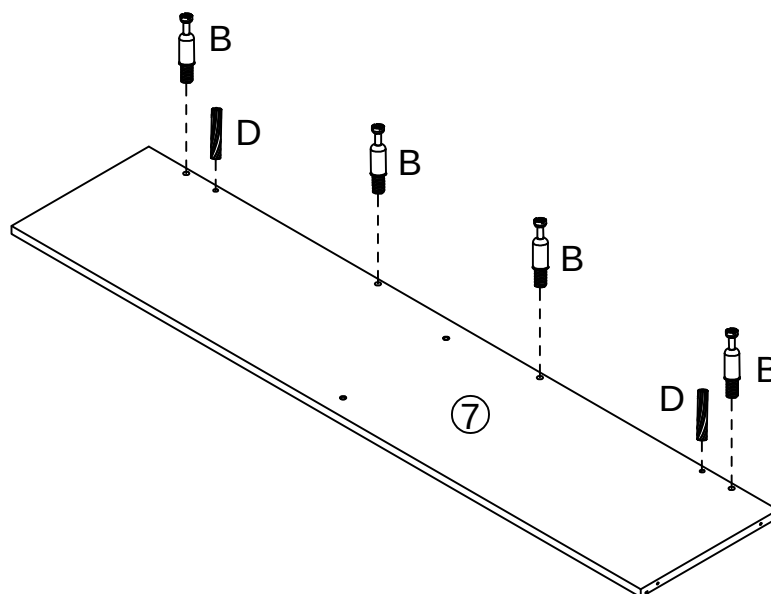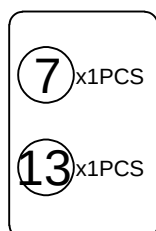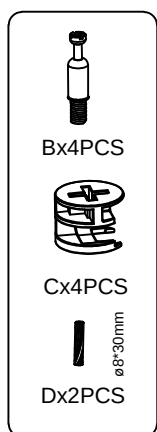




13

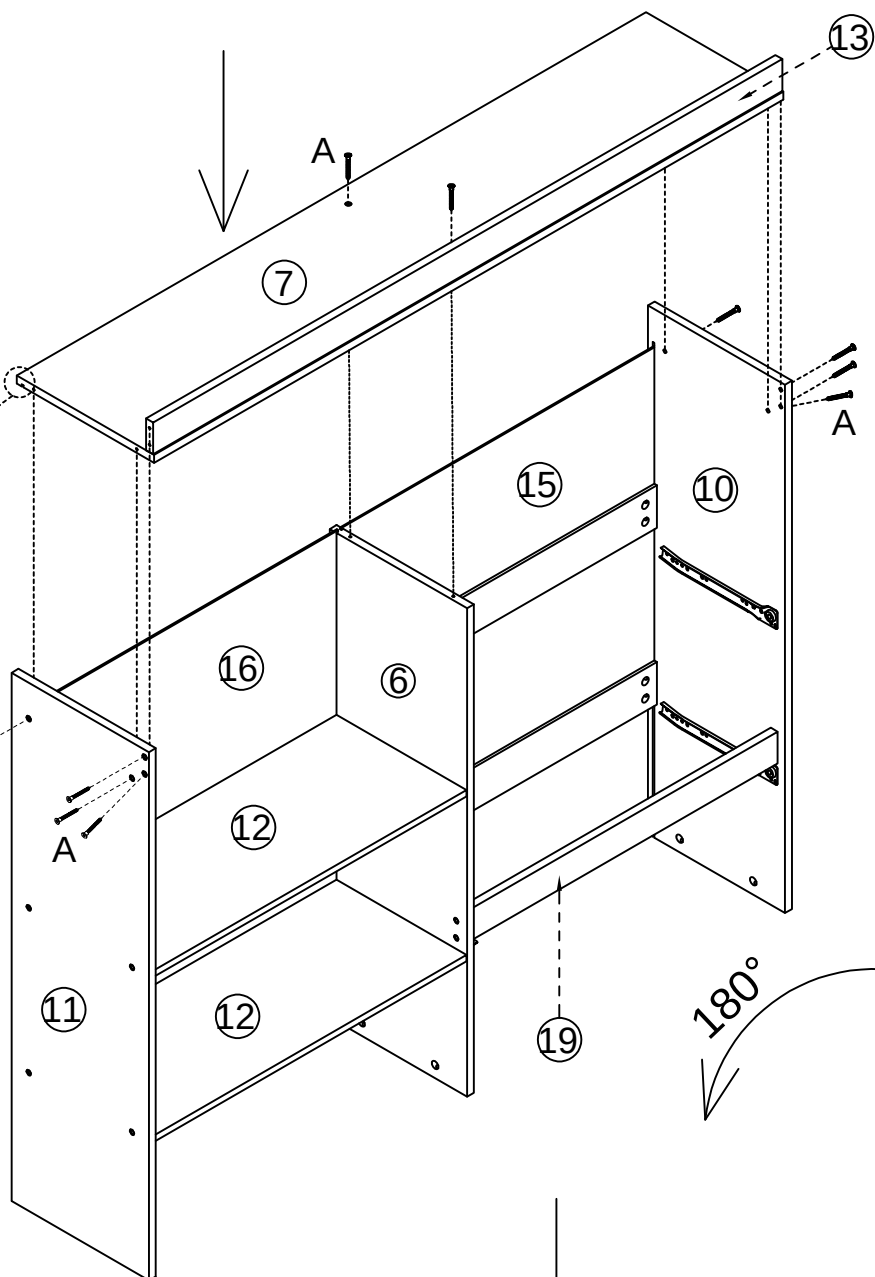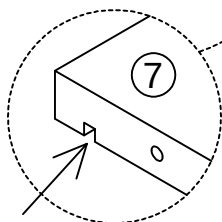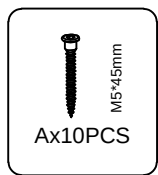


14

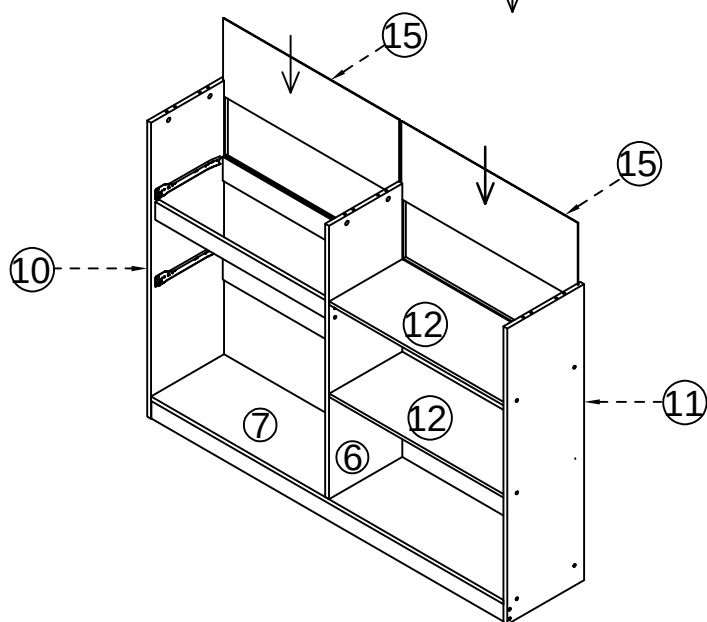



15

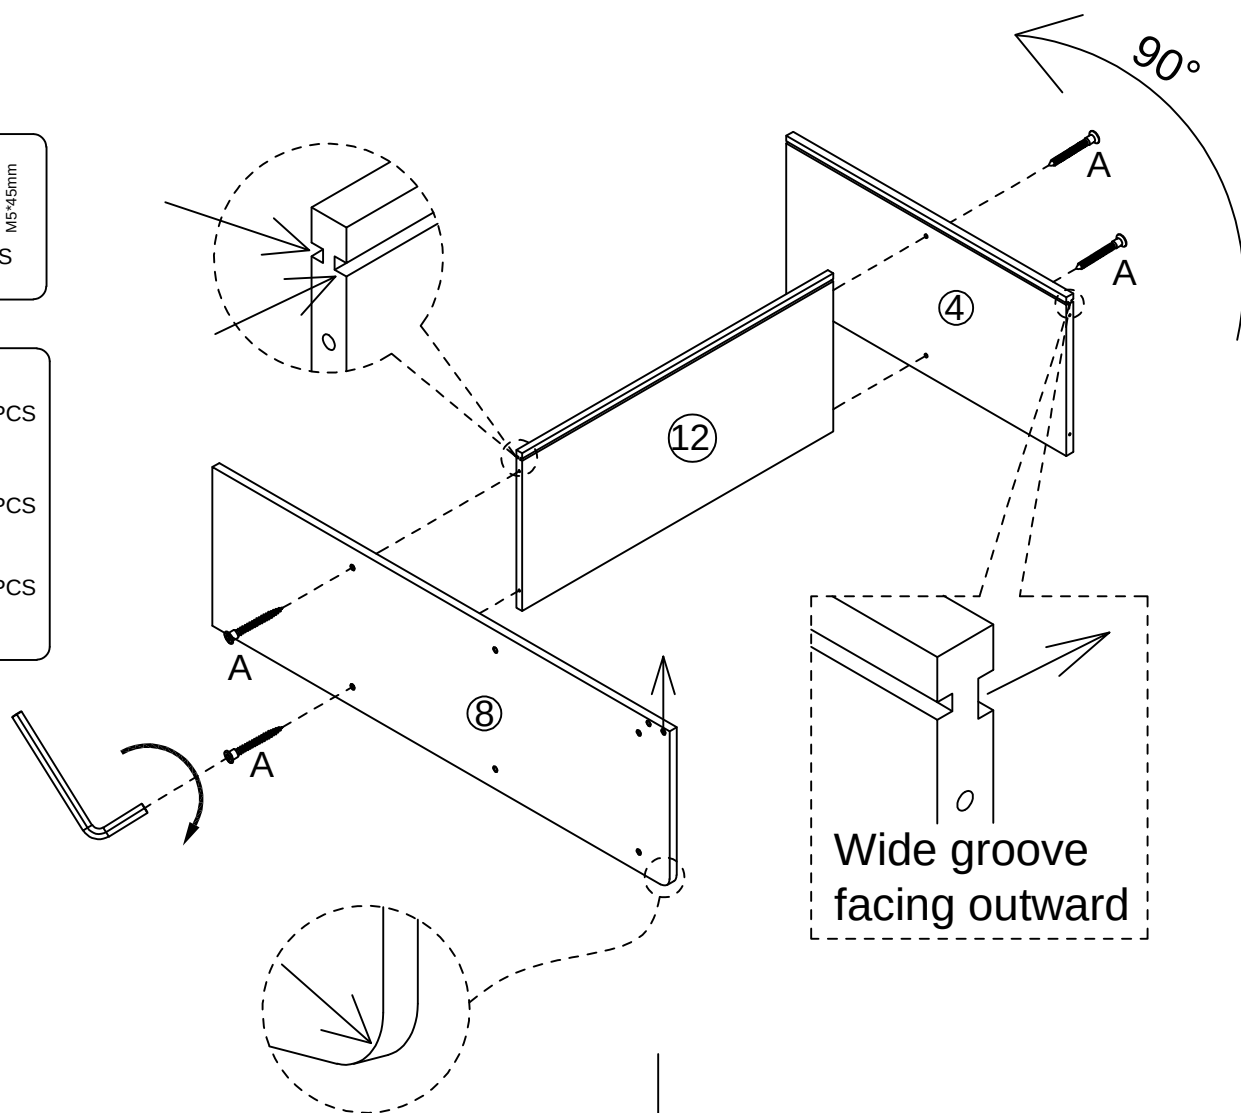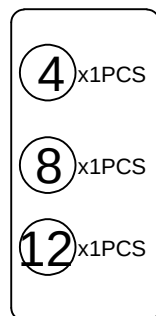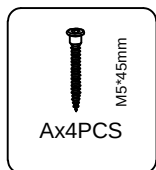

16



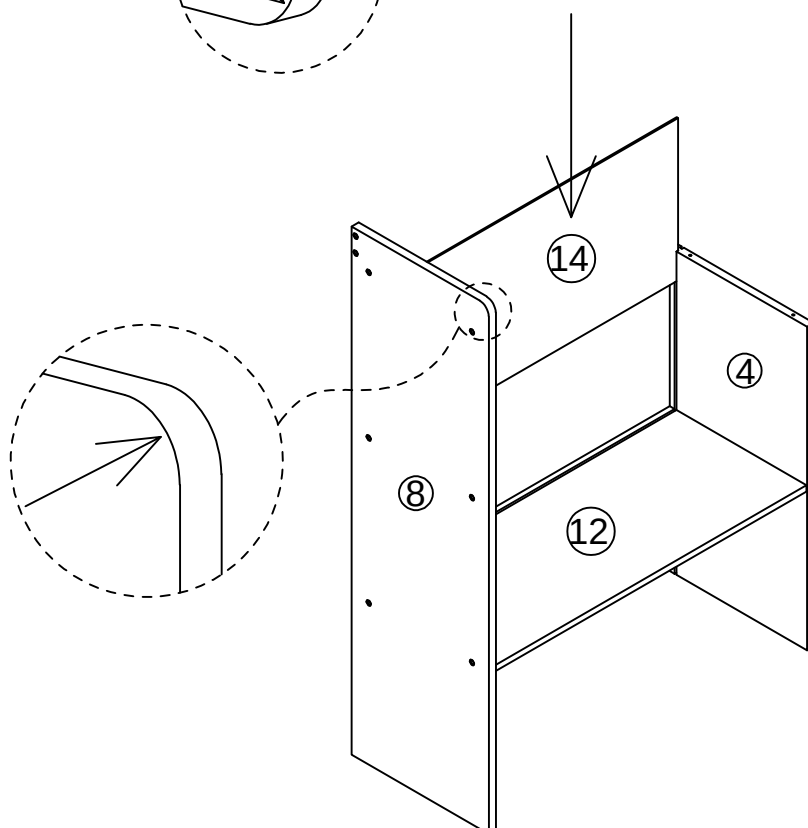


17

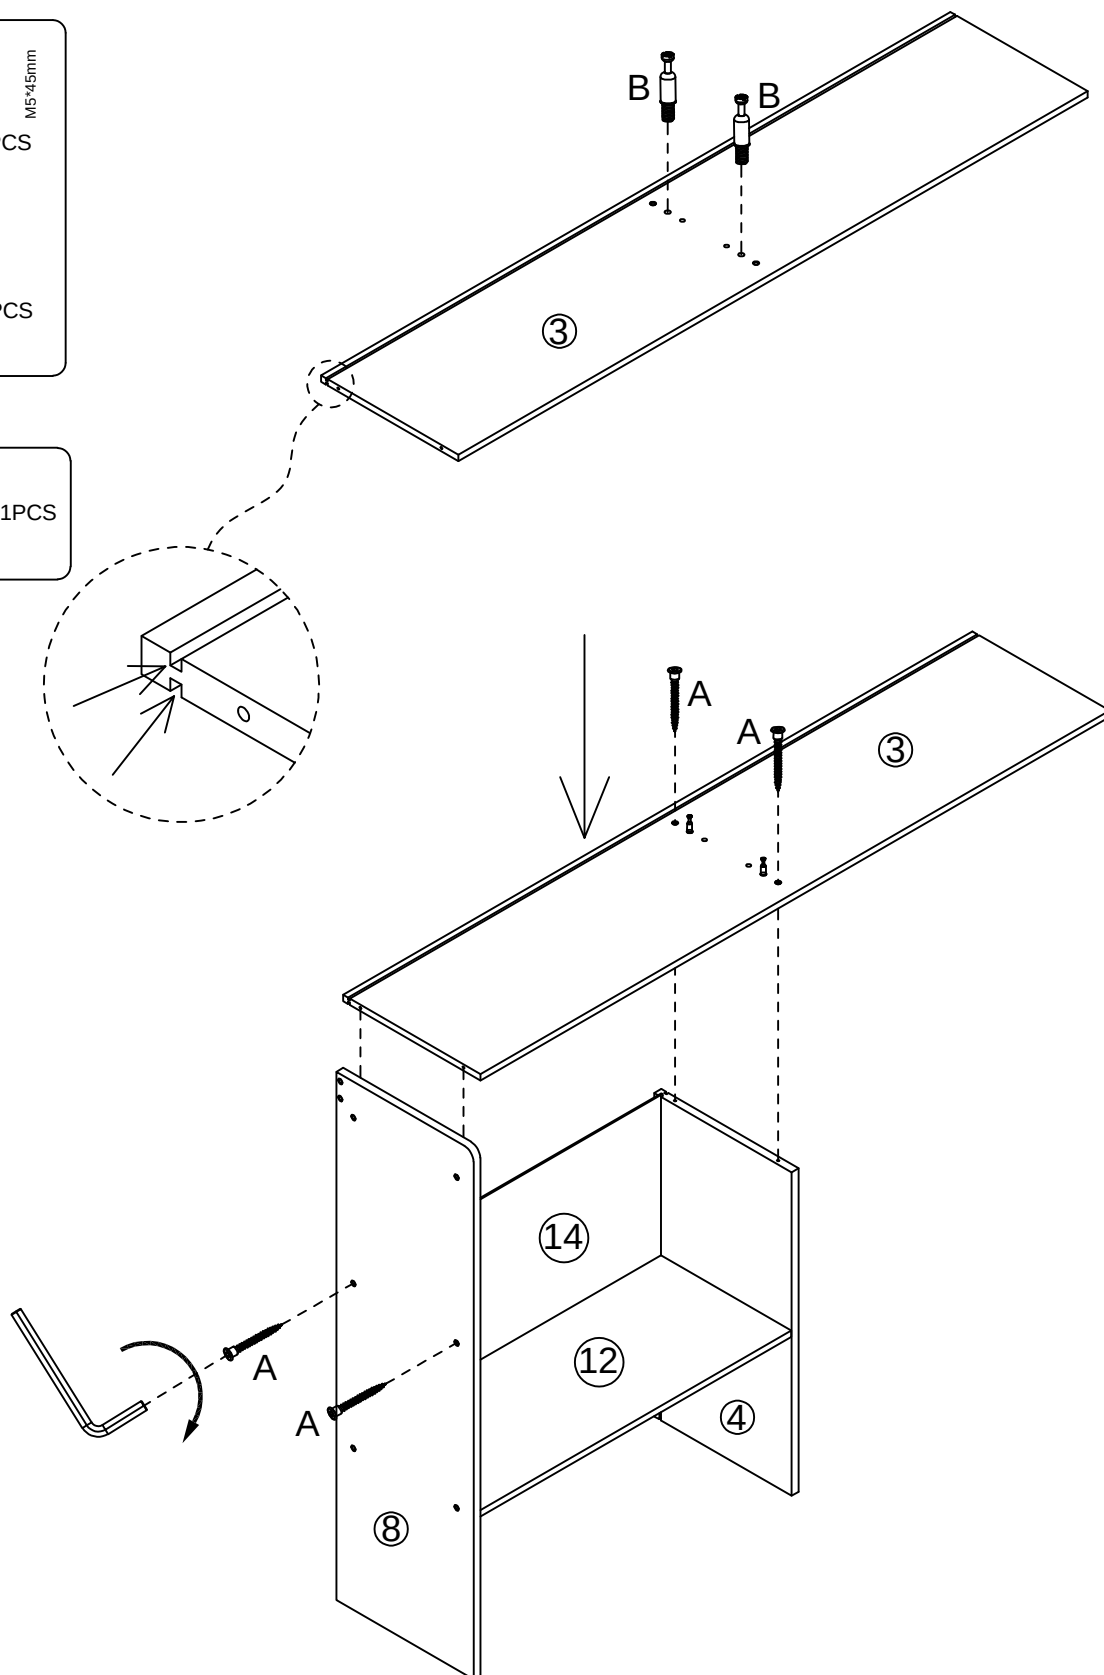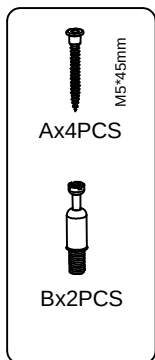






15.

18

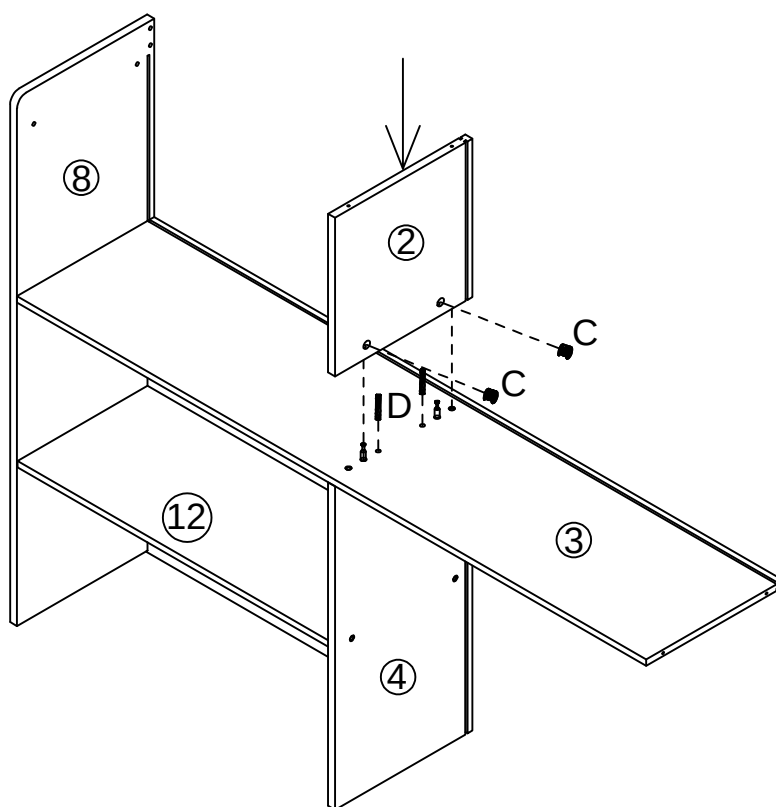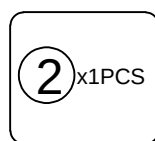
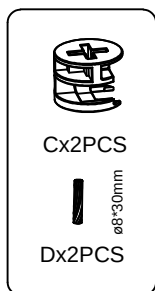


19

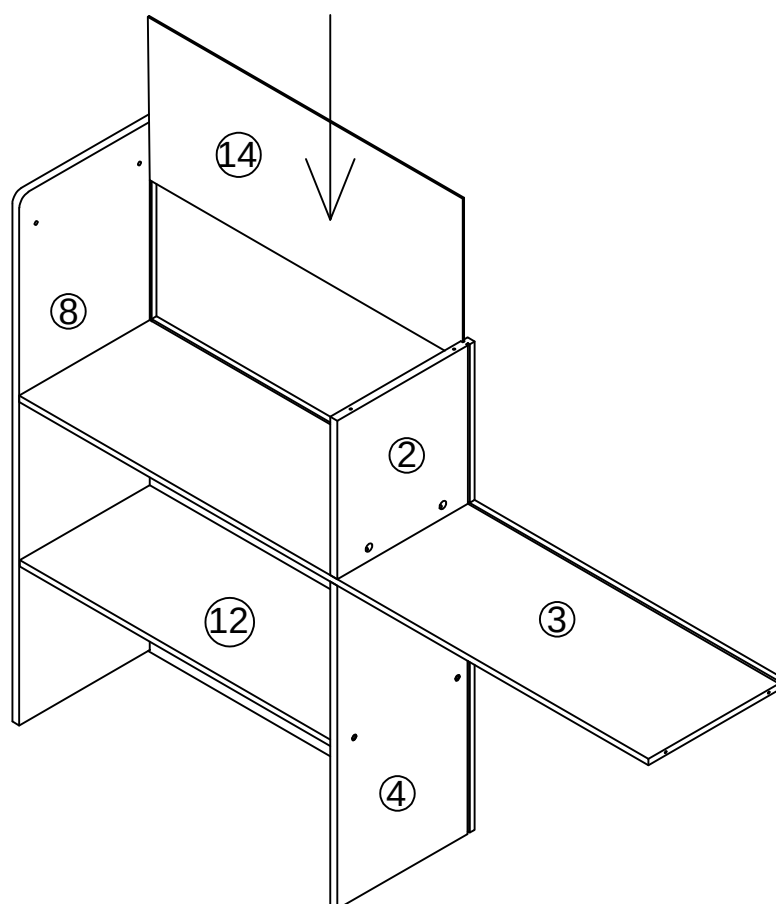


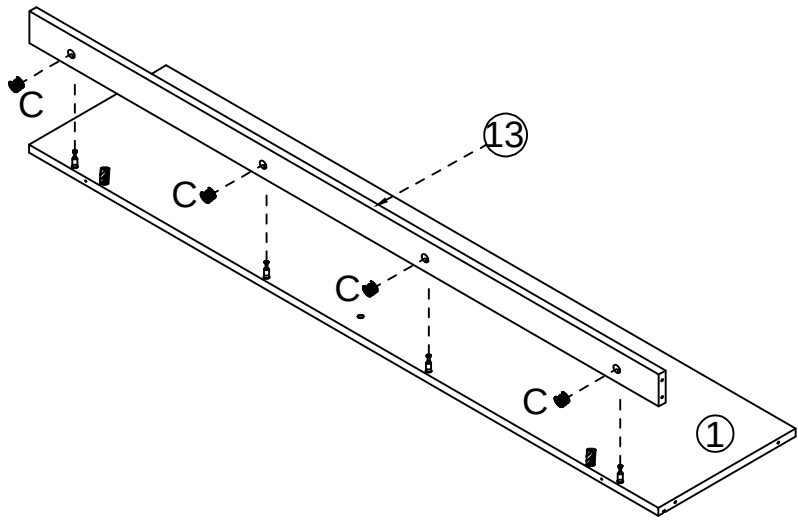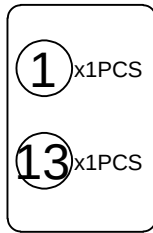
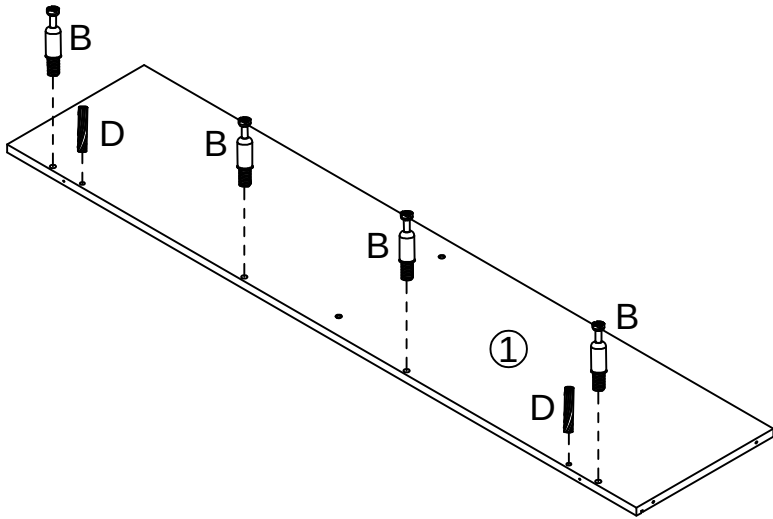
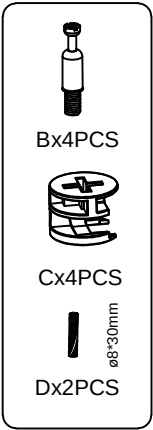




21

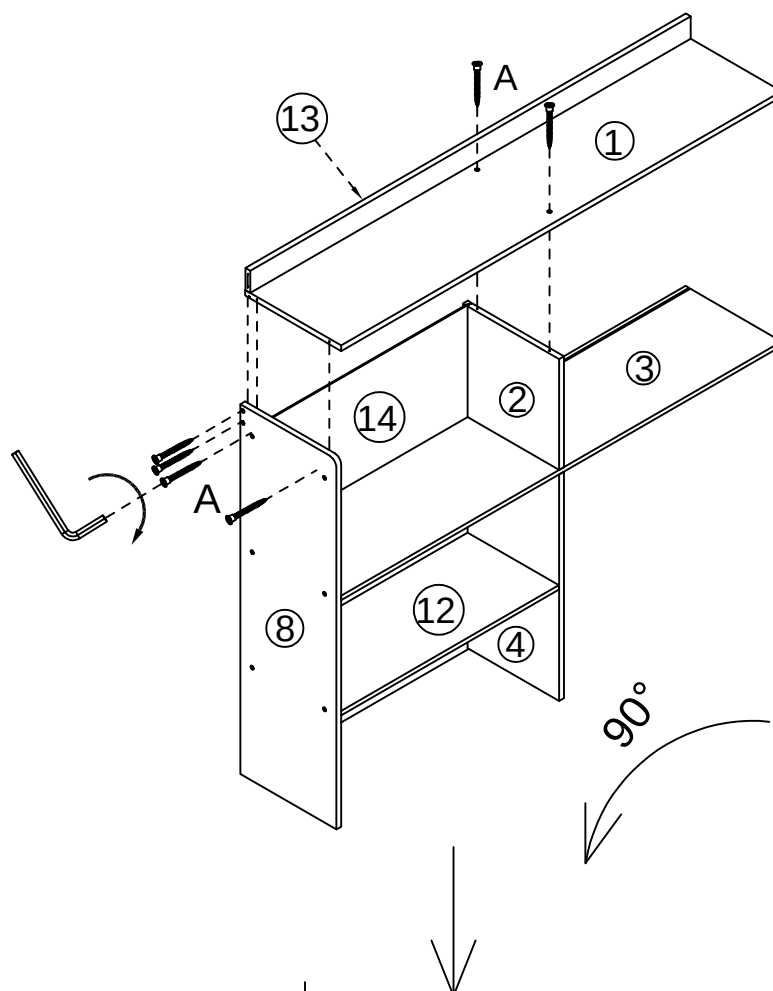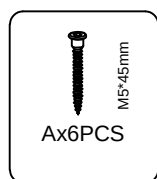




22

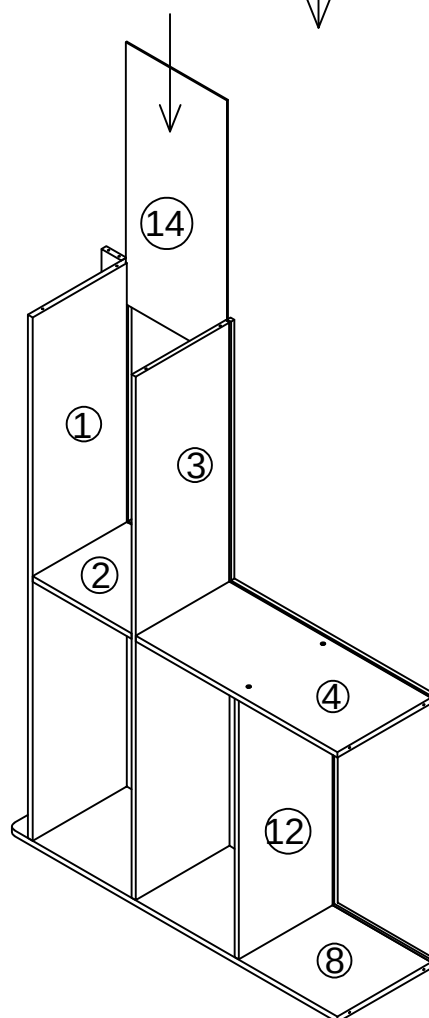

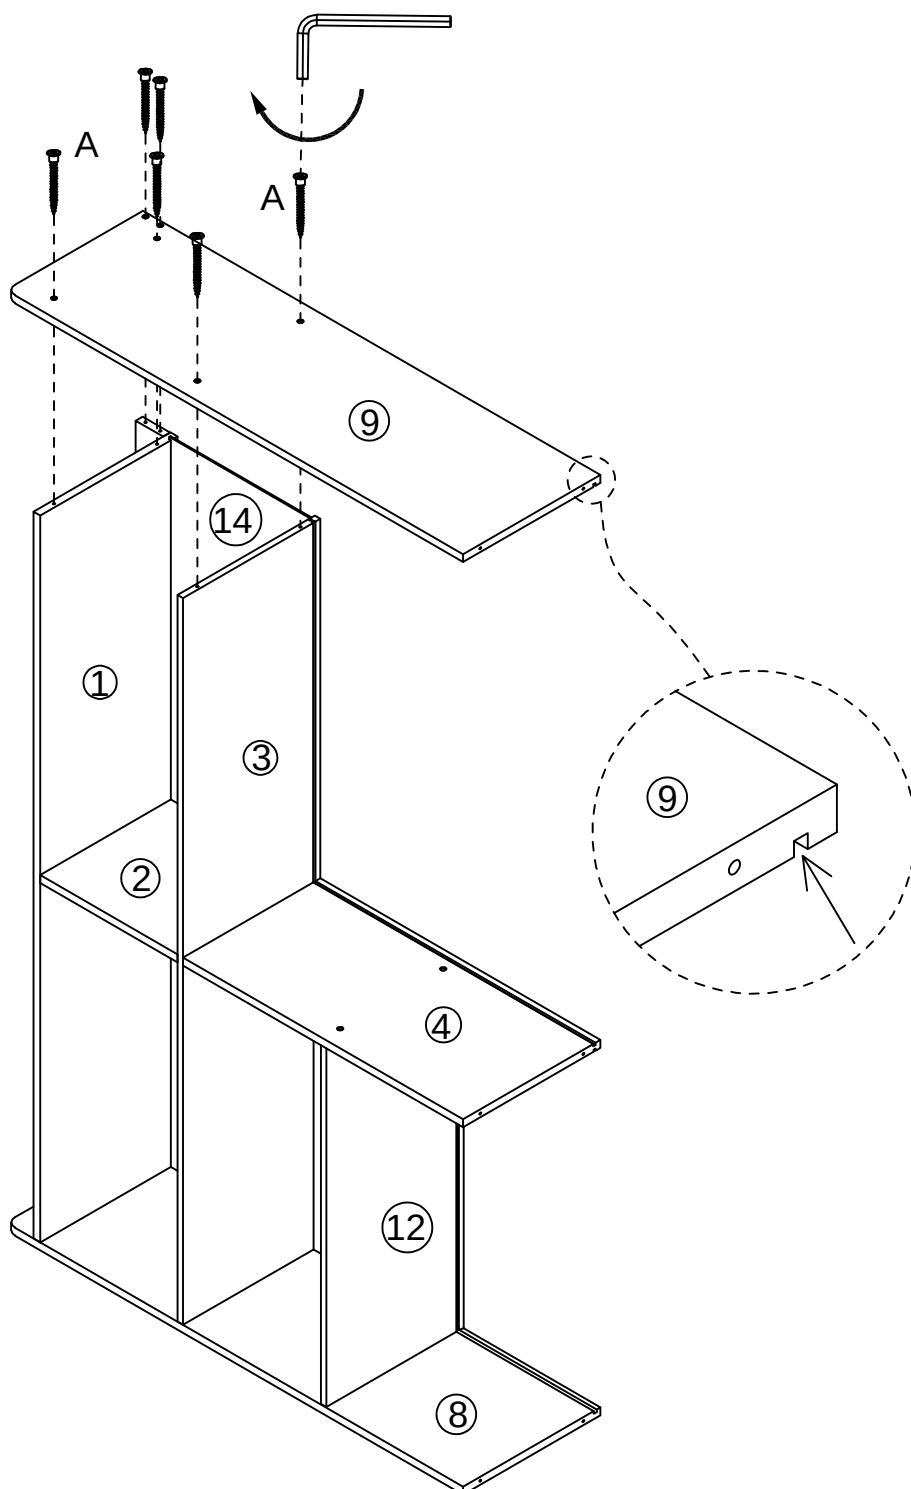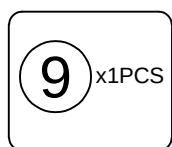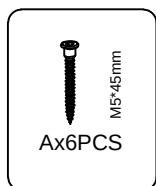

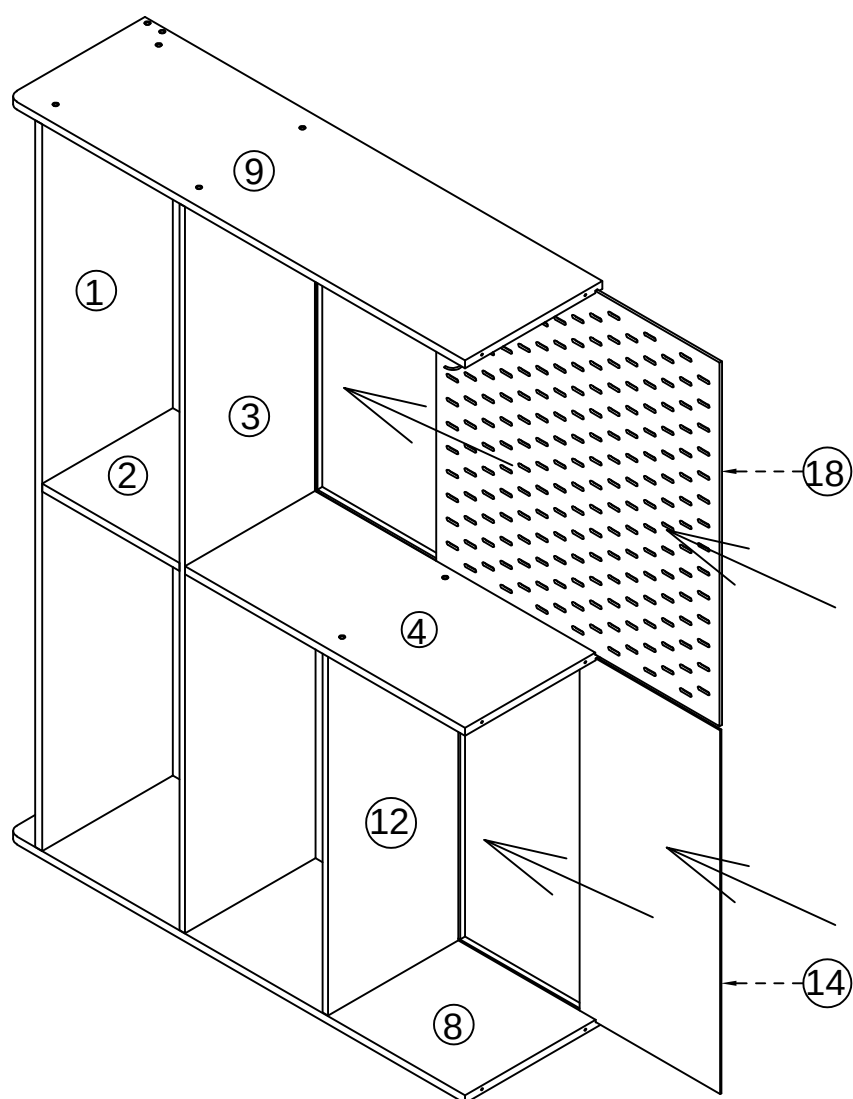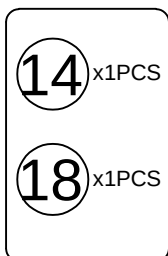



25

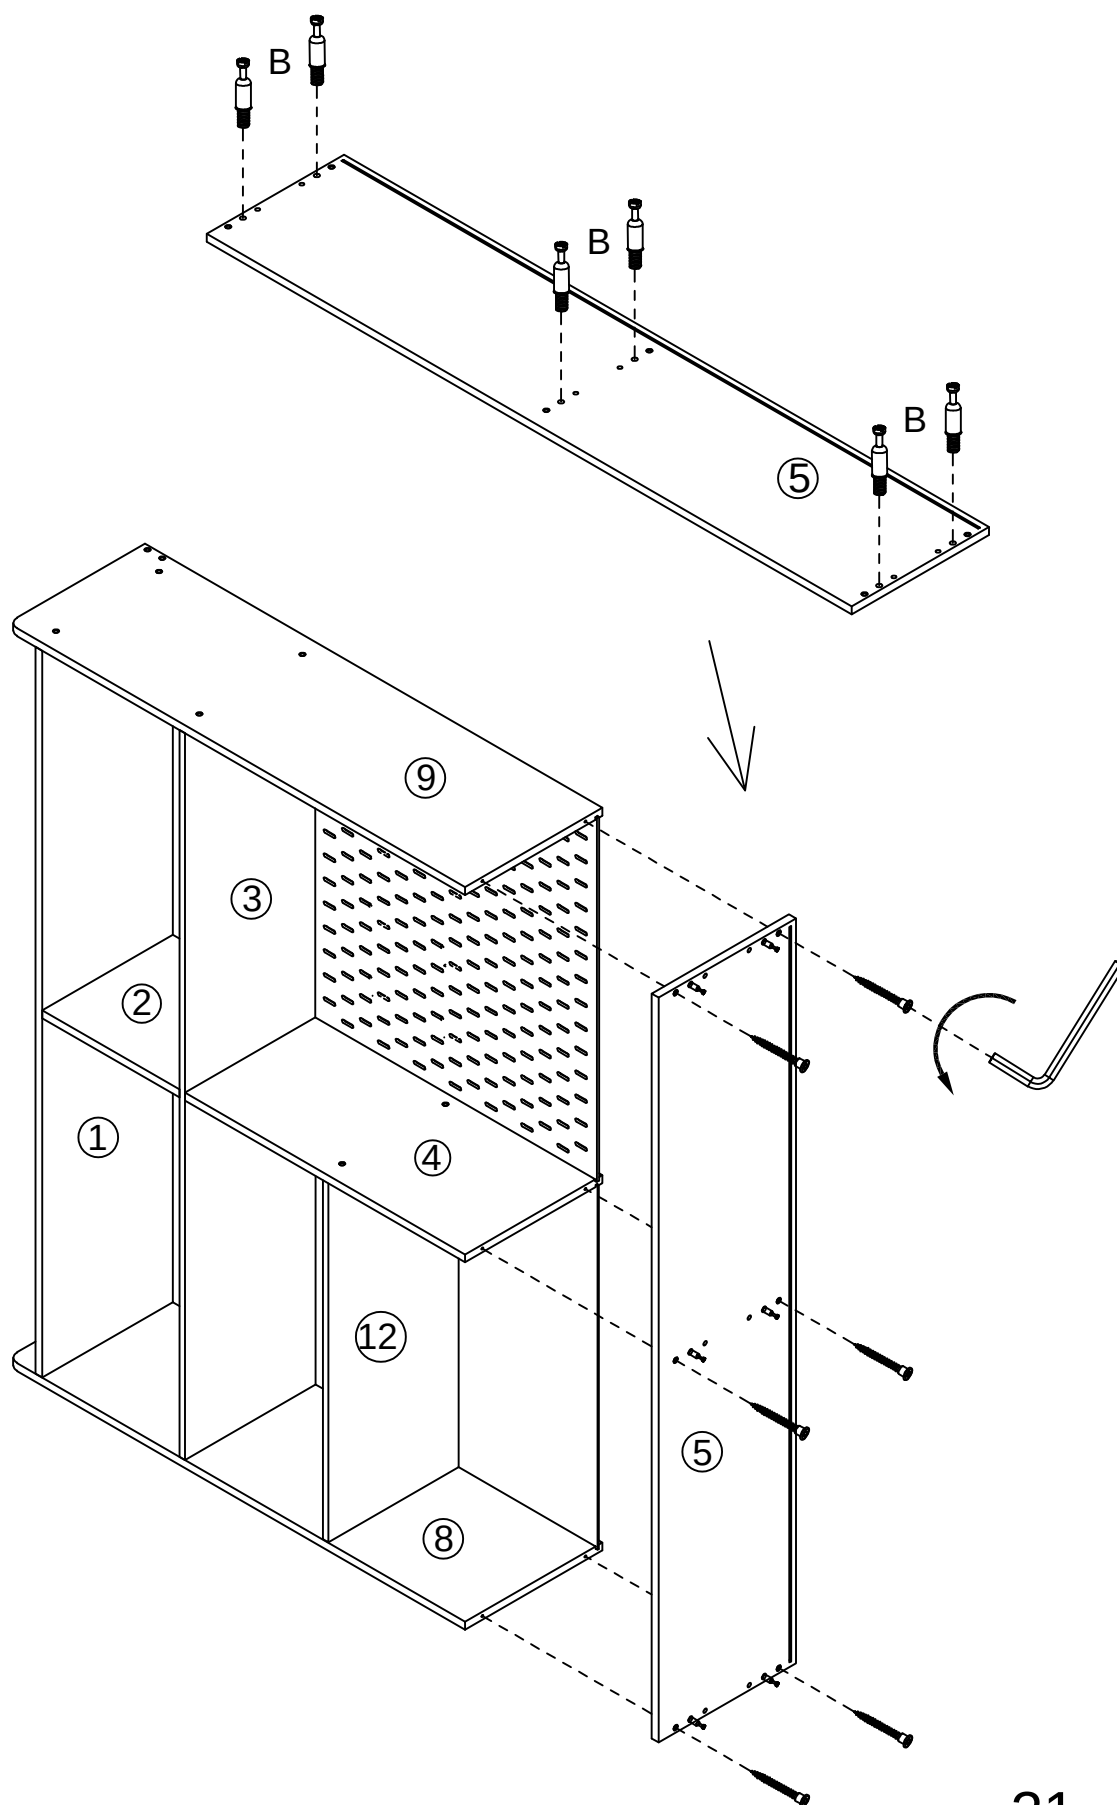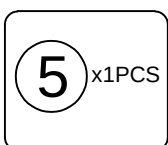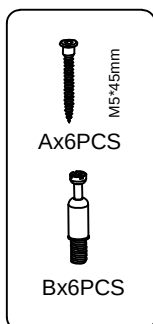



21.

Important reminder: At least two or more people must be present during assembly to ensure absolute safety!


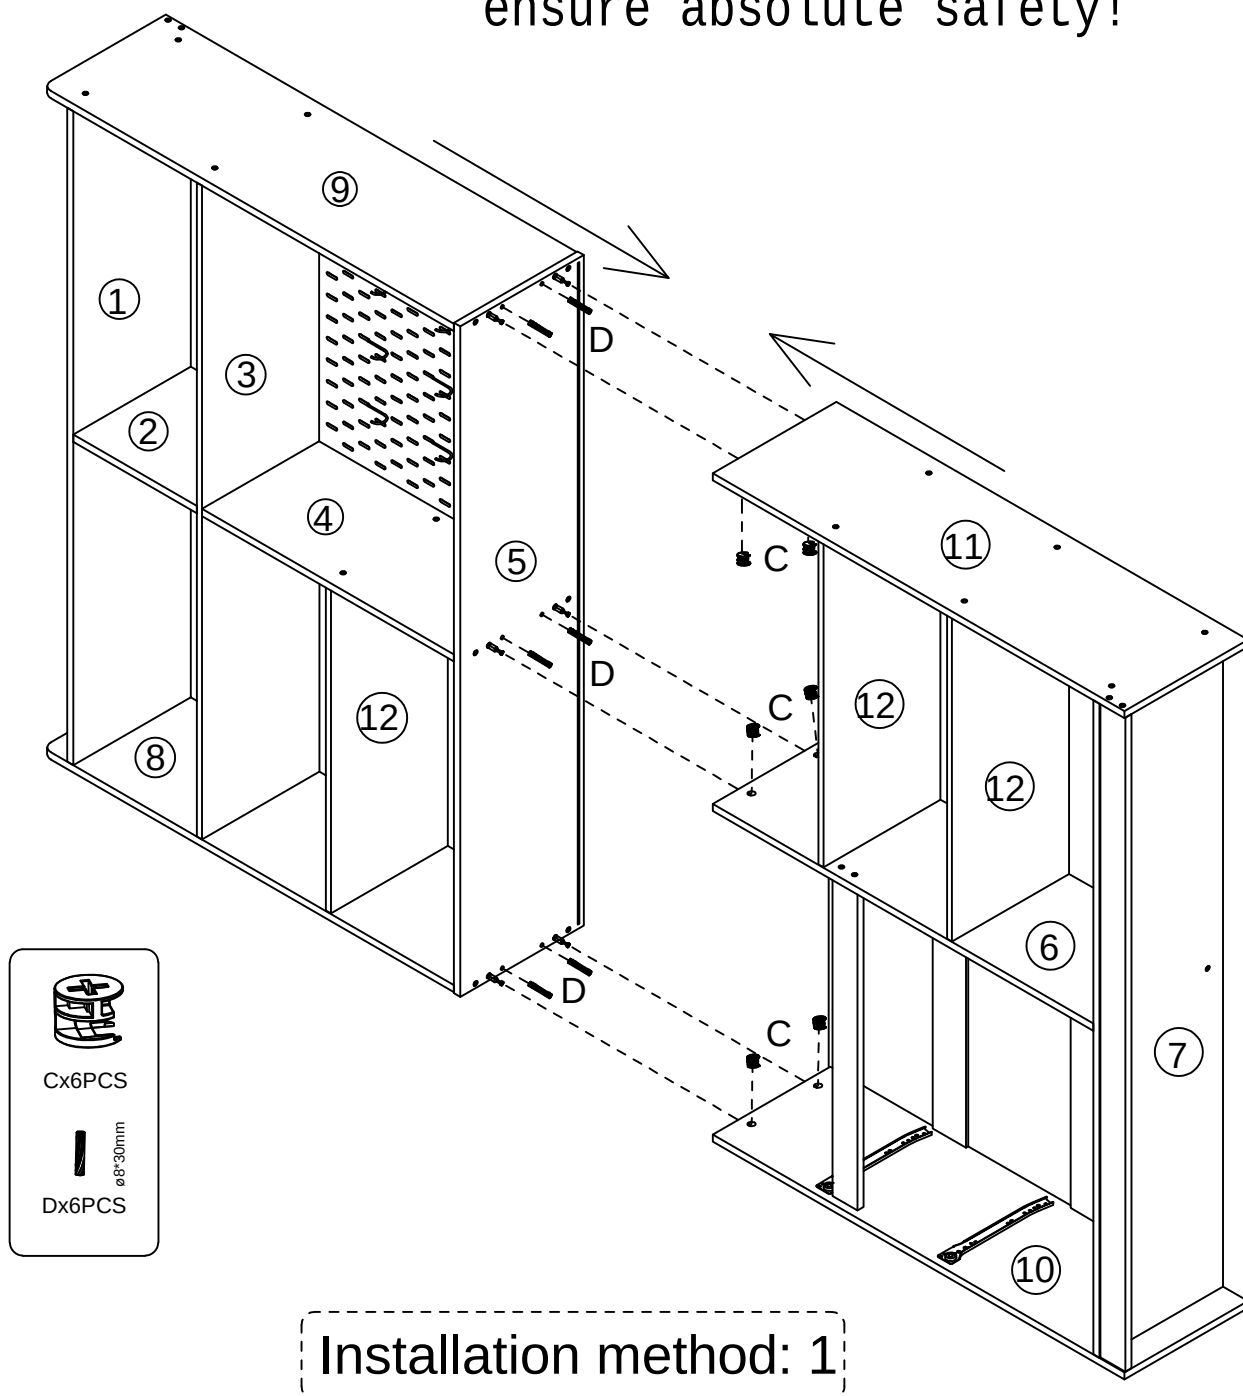


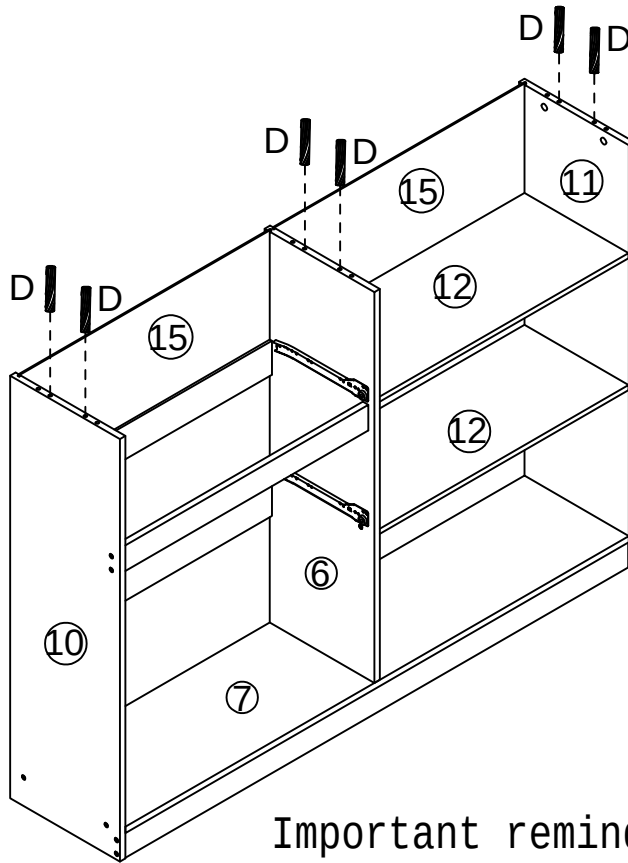



Important reminder: At least two or more people must be present during assembly to ensure absolute safety!

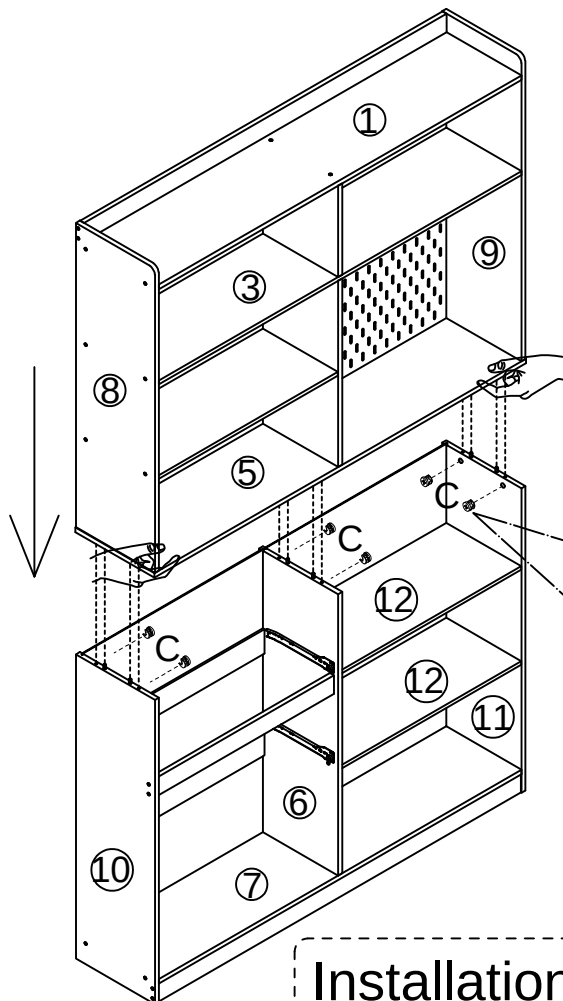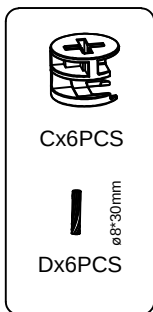




This step requires cooperation between two people to complete

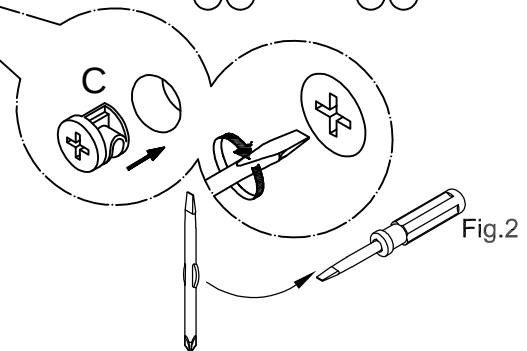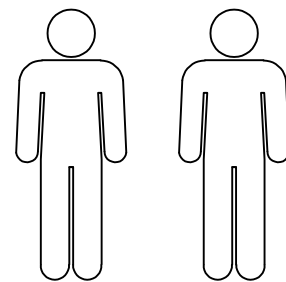




Installation method: 2

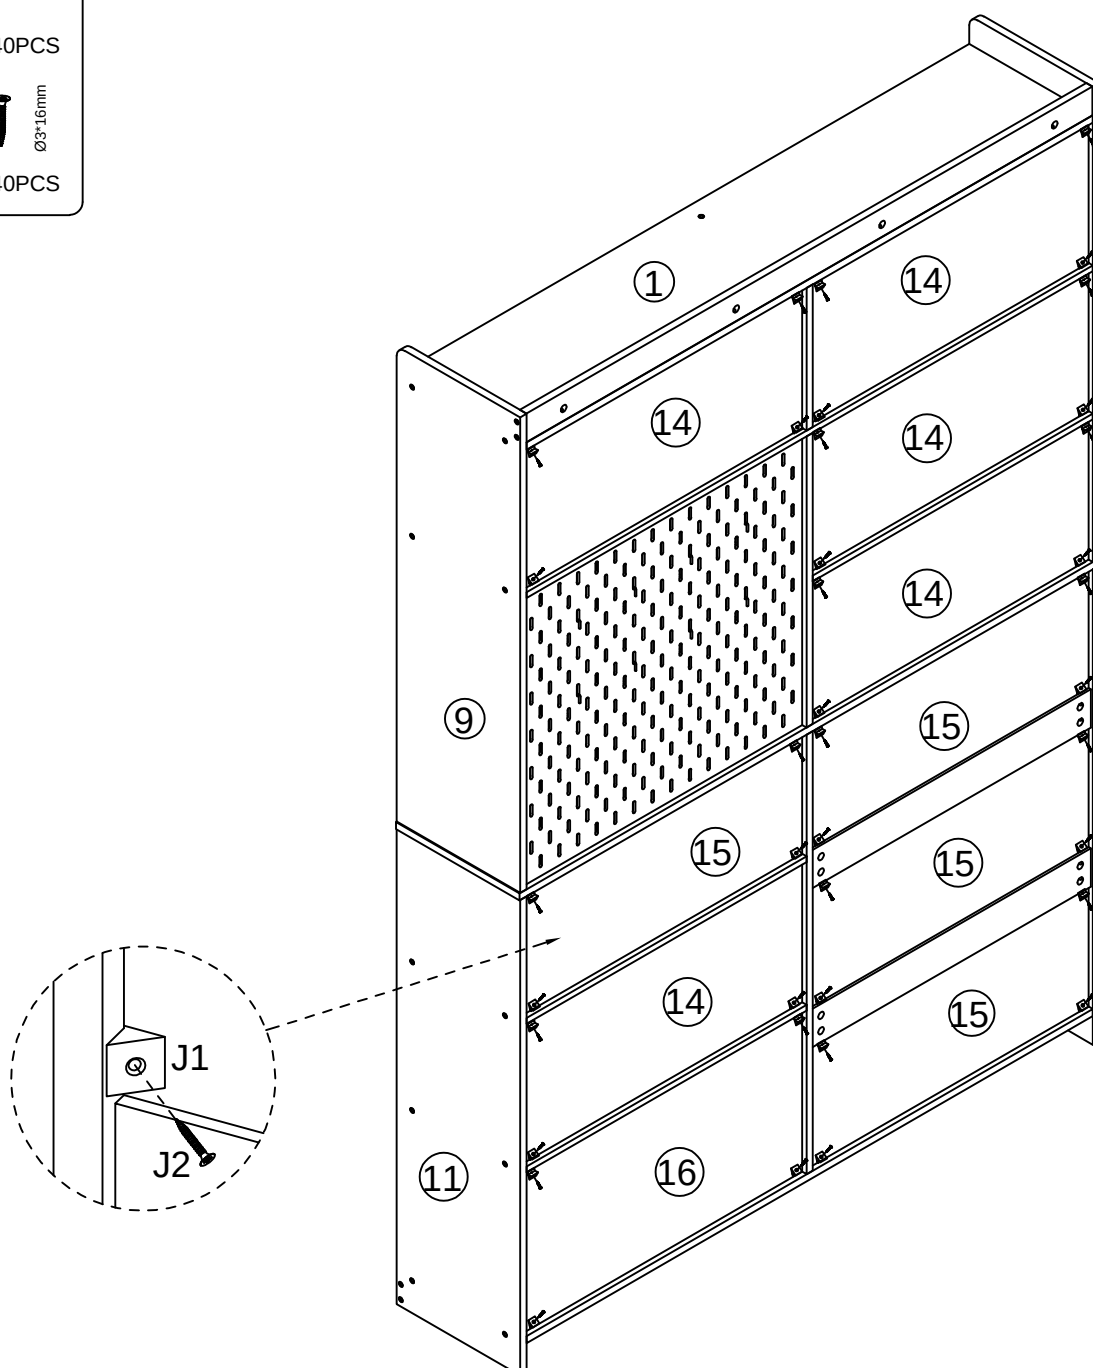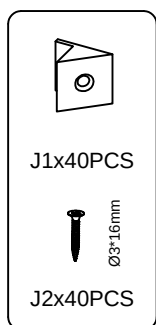


29

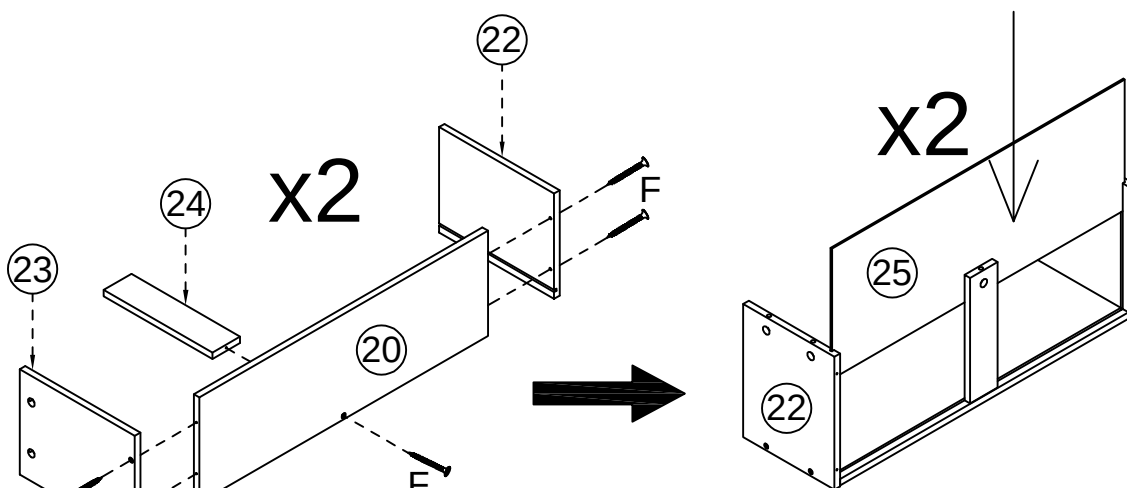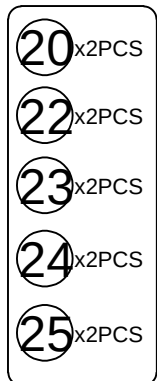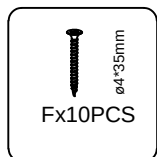


30

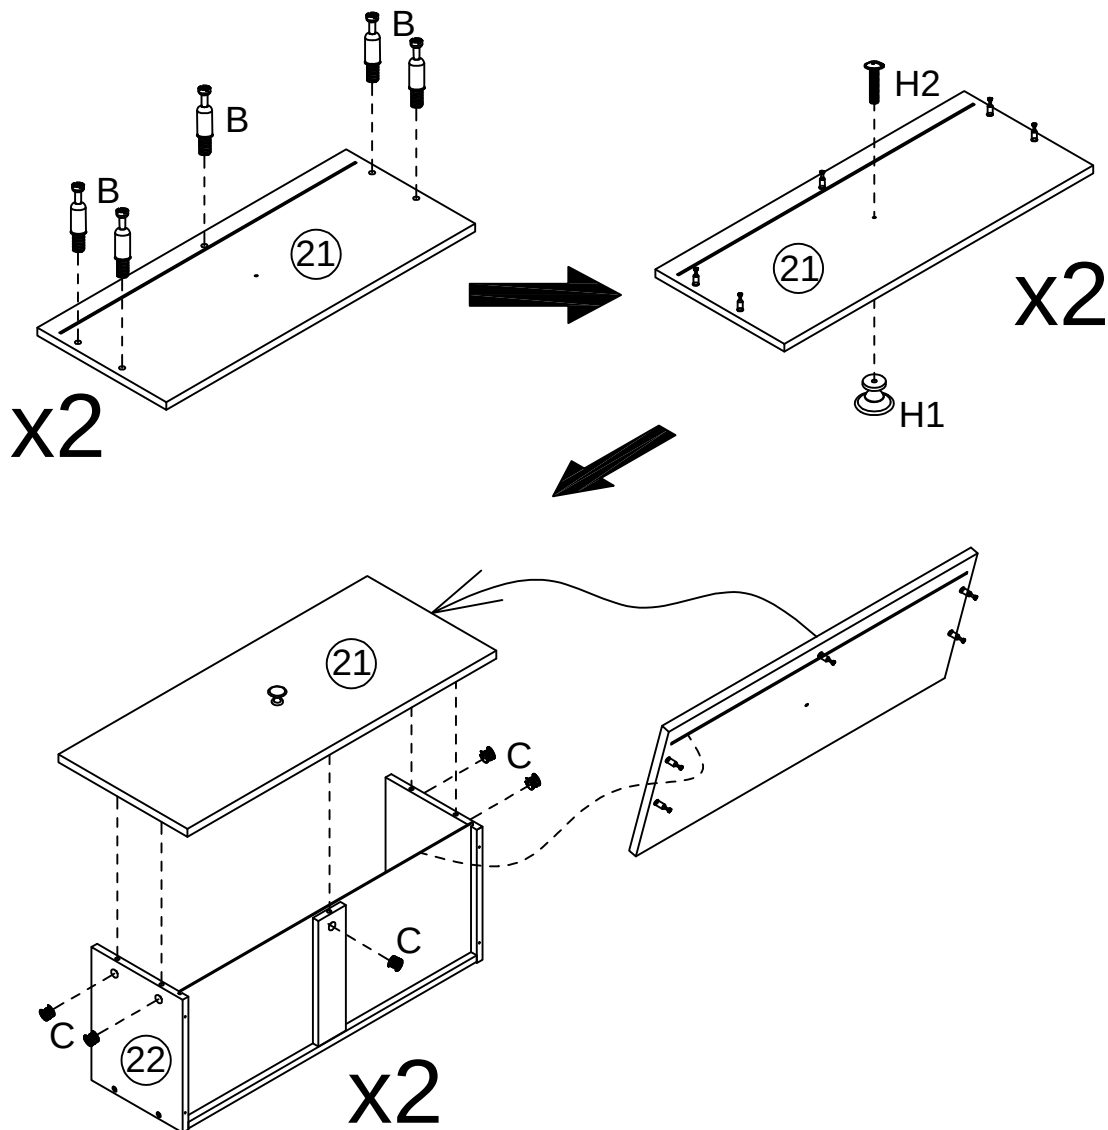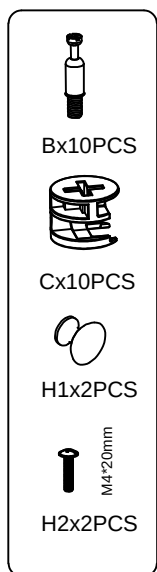



30


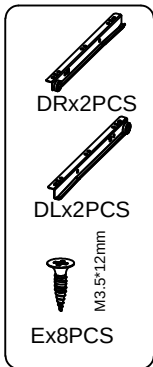


Important reminder: Please assemble the E screw according to the hole indicated by the arrow



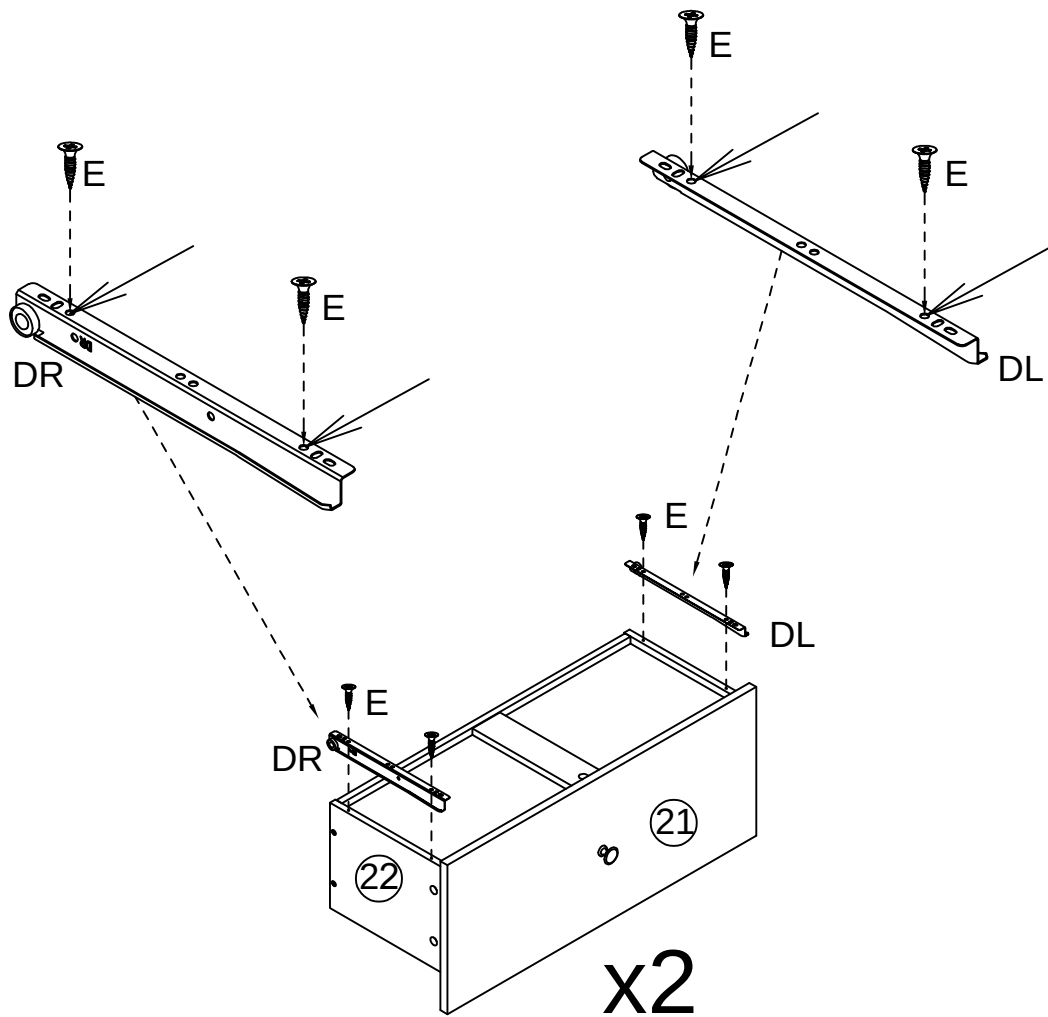


31

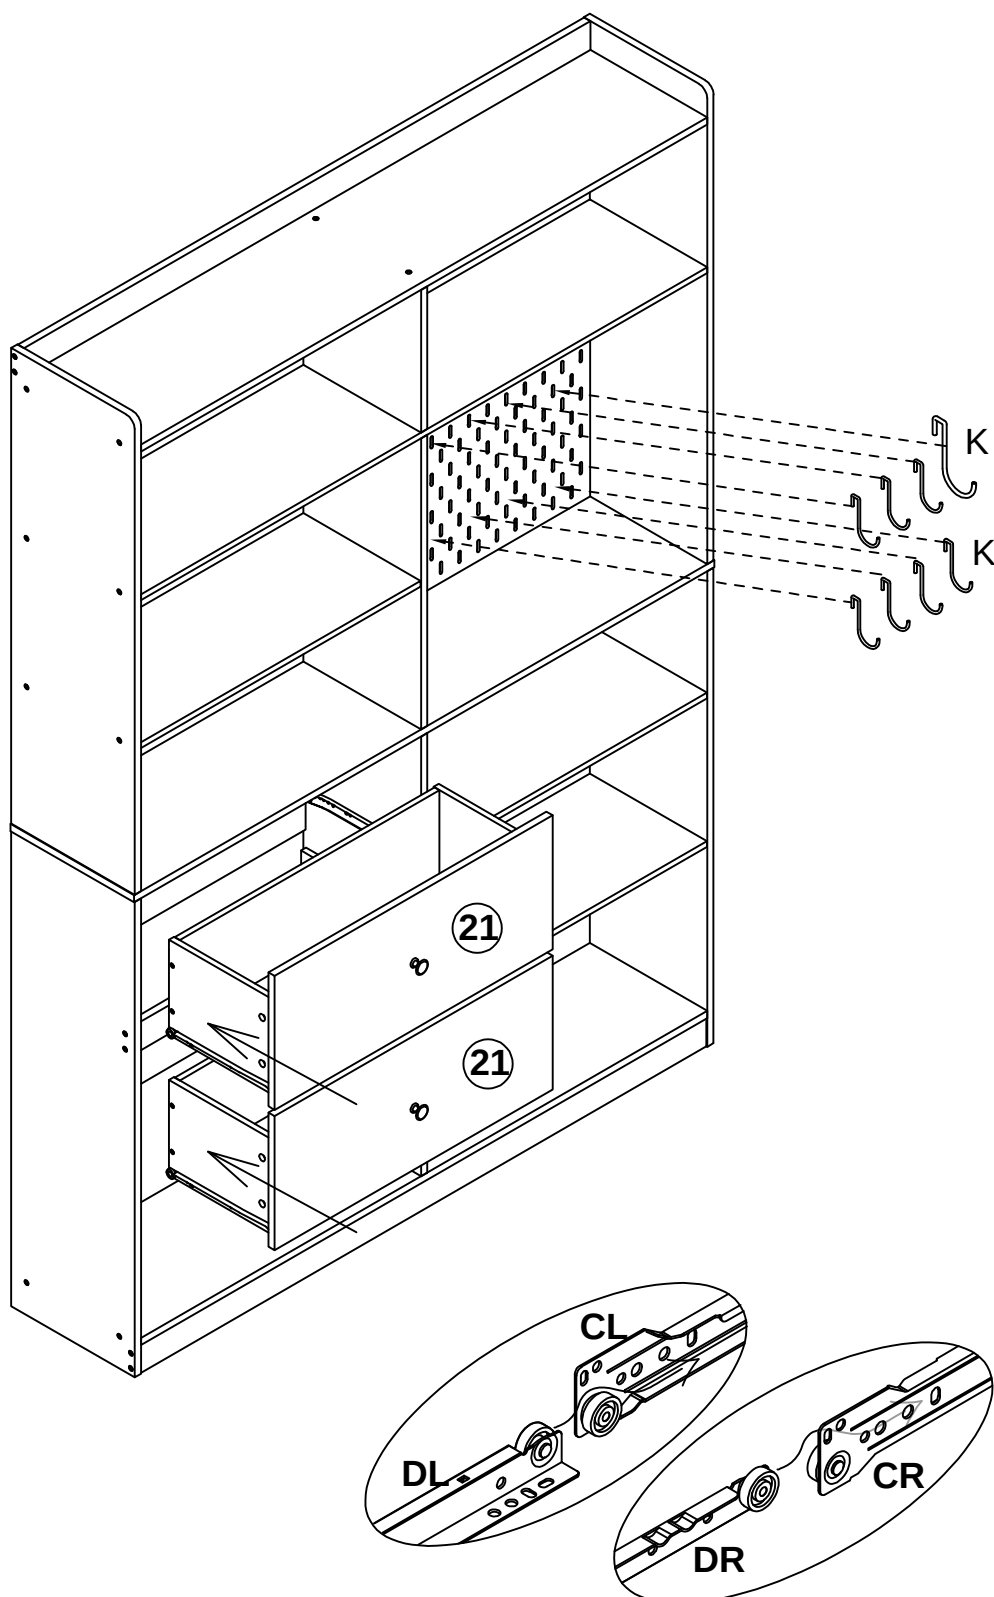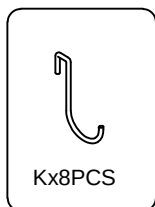

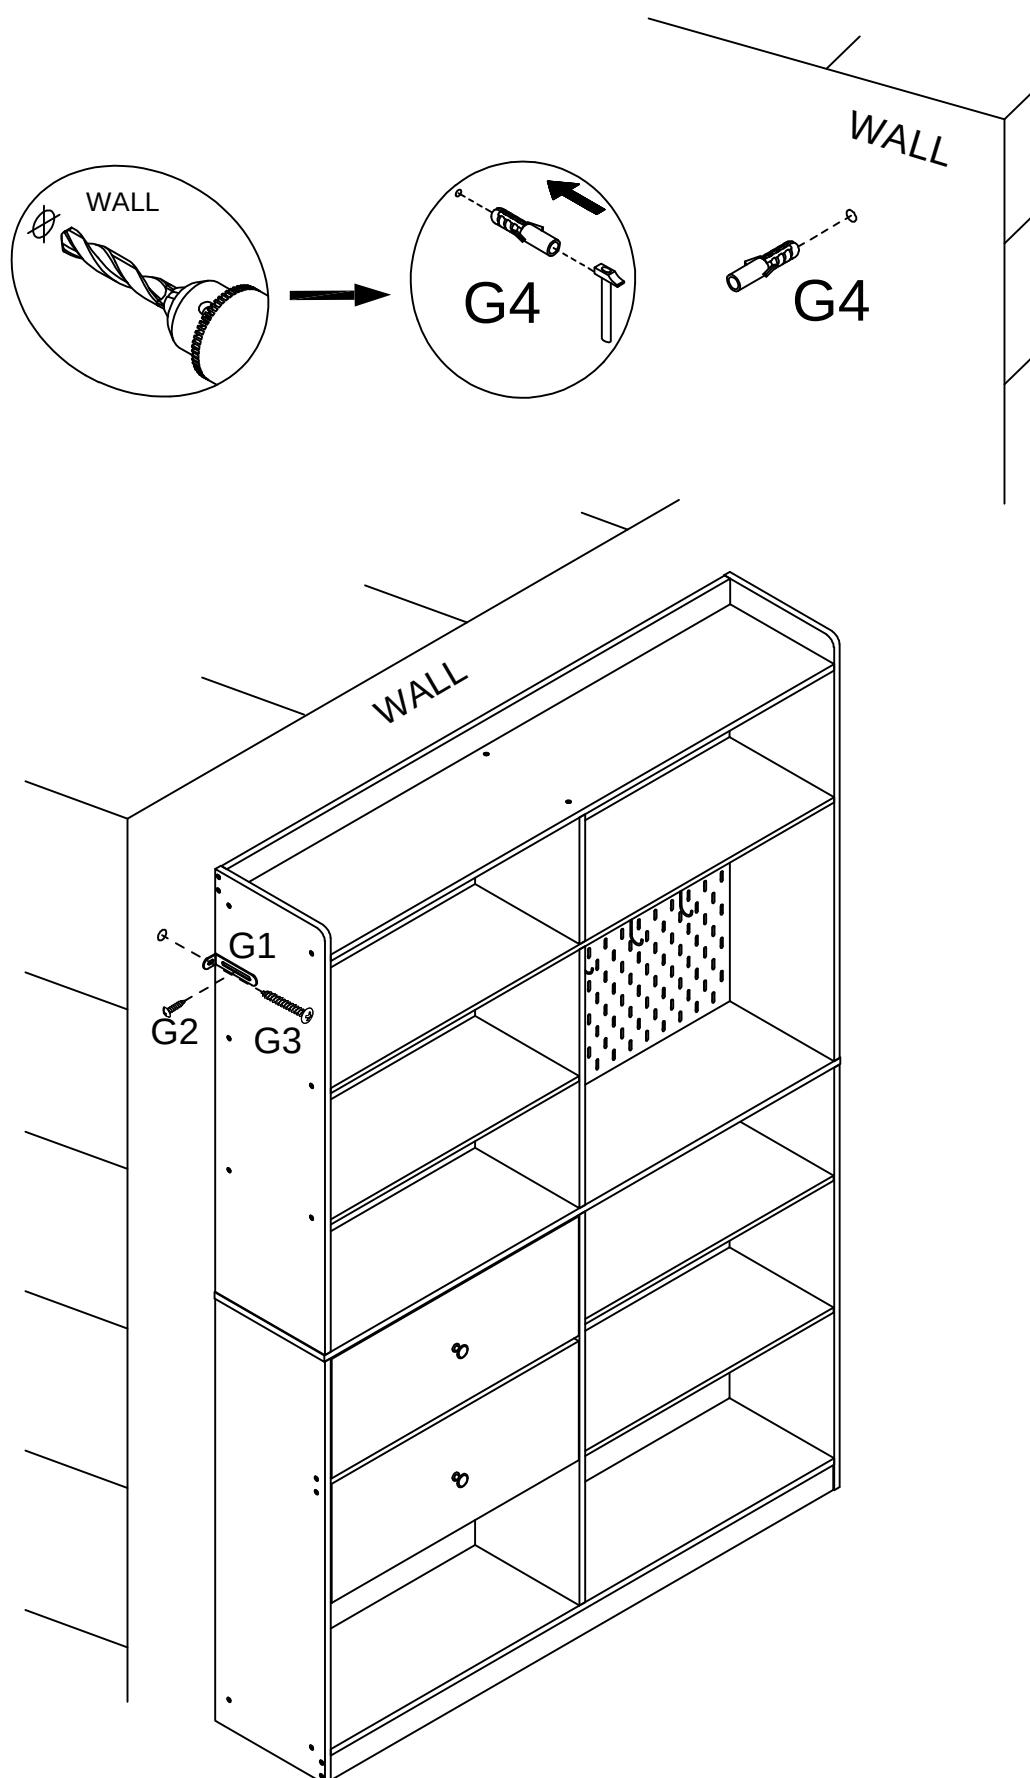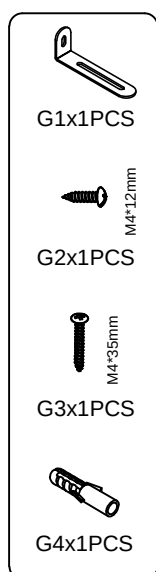

33

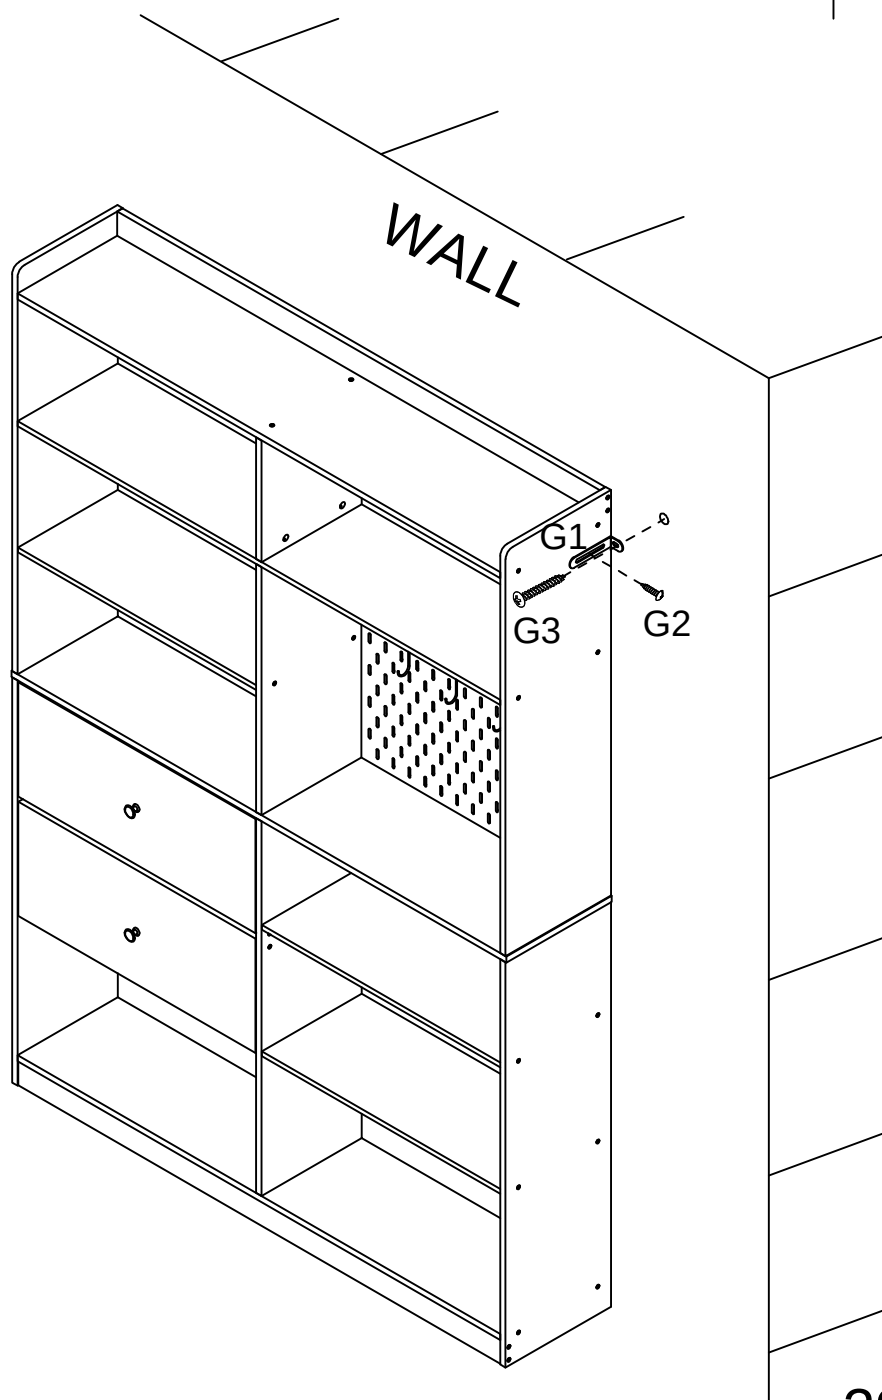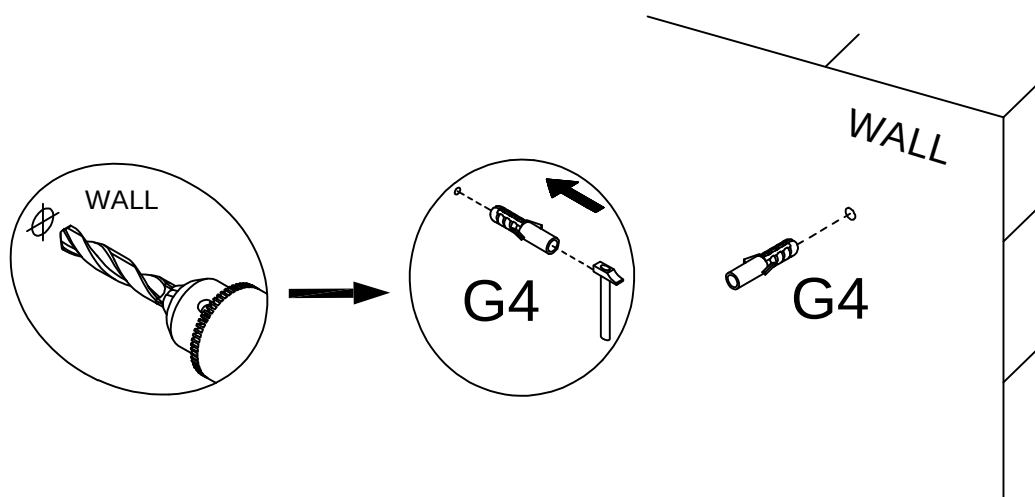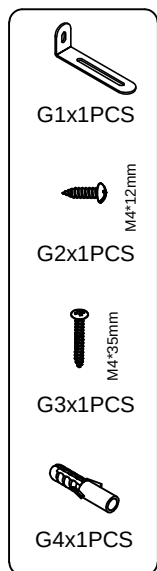

29.