

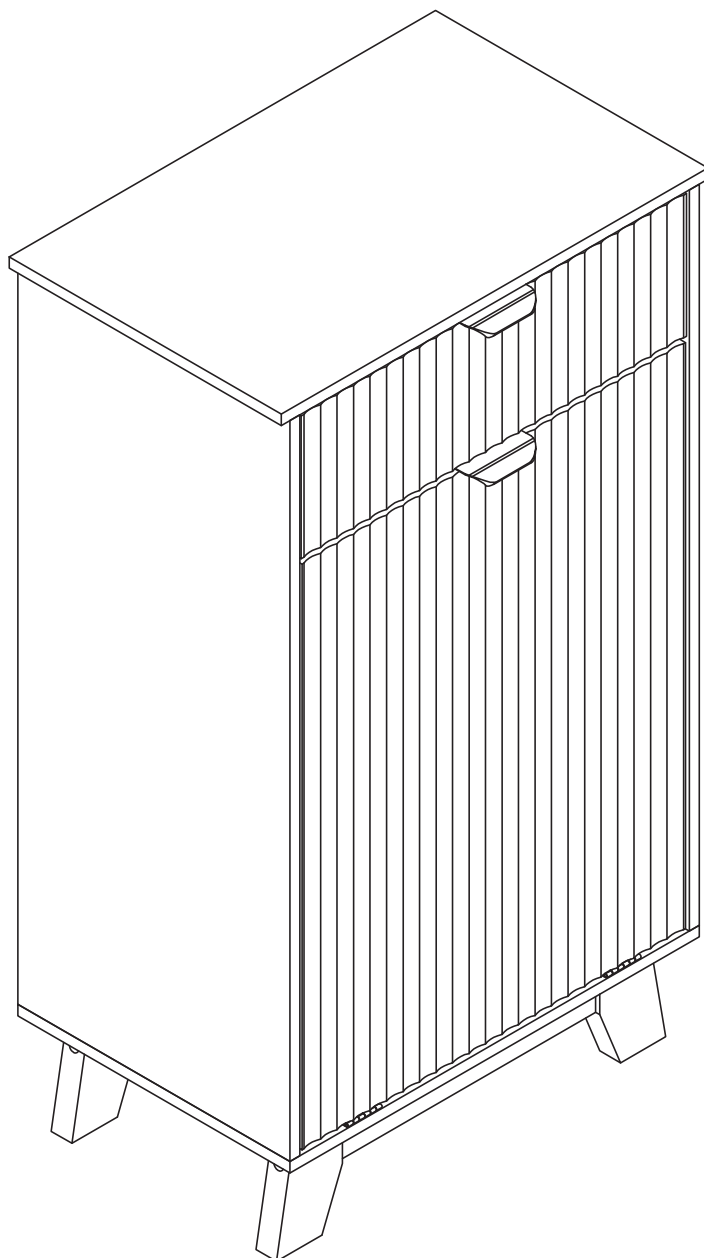
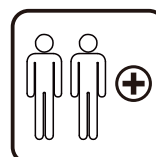
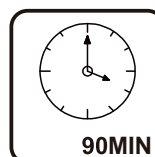


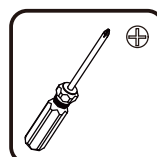


HLG124


Version:1.0

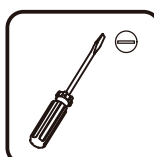


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

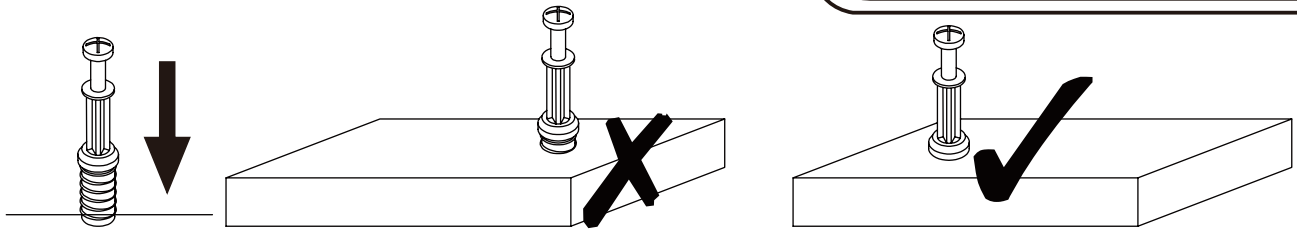


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

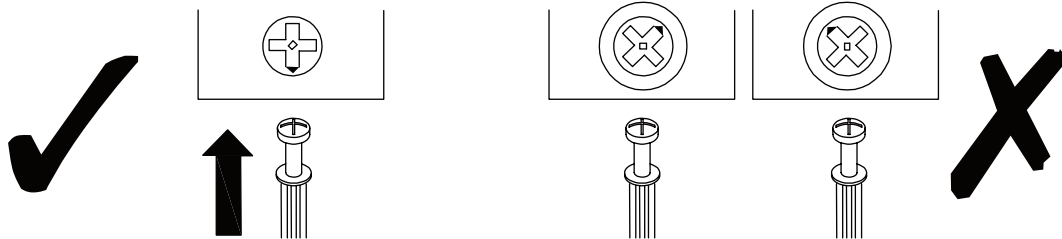










EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.











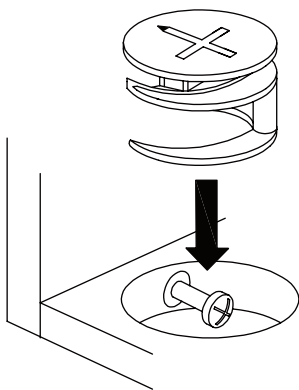




EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

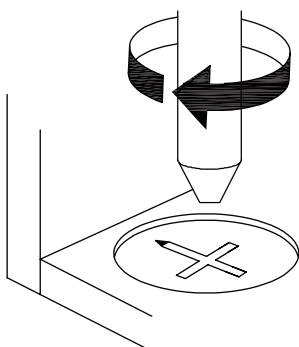











EN_Turn cam lock clockwise to tighten.

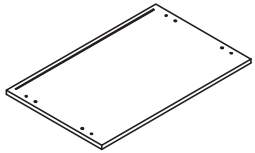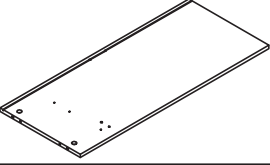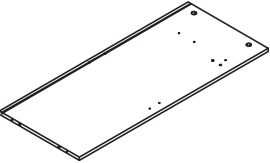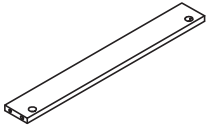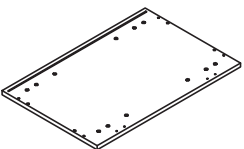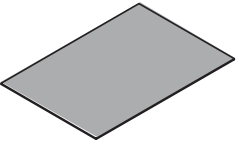

NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x1	
⑥		x2	
⑦		x1	
⑧		x2	
⑨		x2	
⑩		x2	
⑪		x2	

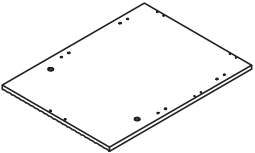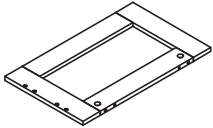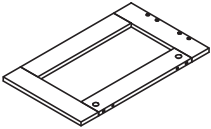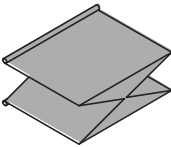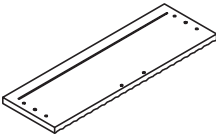
NO.	PARTS	QTY	SPARE
⑫		x1	
⑬		x1	
⑭		x1	
⑮		x1	
⑯		x1	
⑰		x2	
⑱		x1	
⑲		x2	
⑳		x1	
㉑		x1	
㉒		x1	

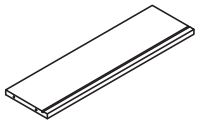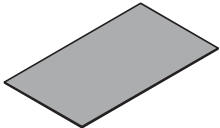NO.	PARTS	QTY	SPARE
②③		x1	
②④		x1	
	 Hardware Kit	x1	


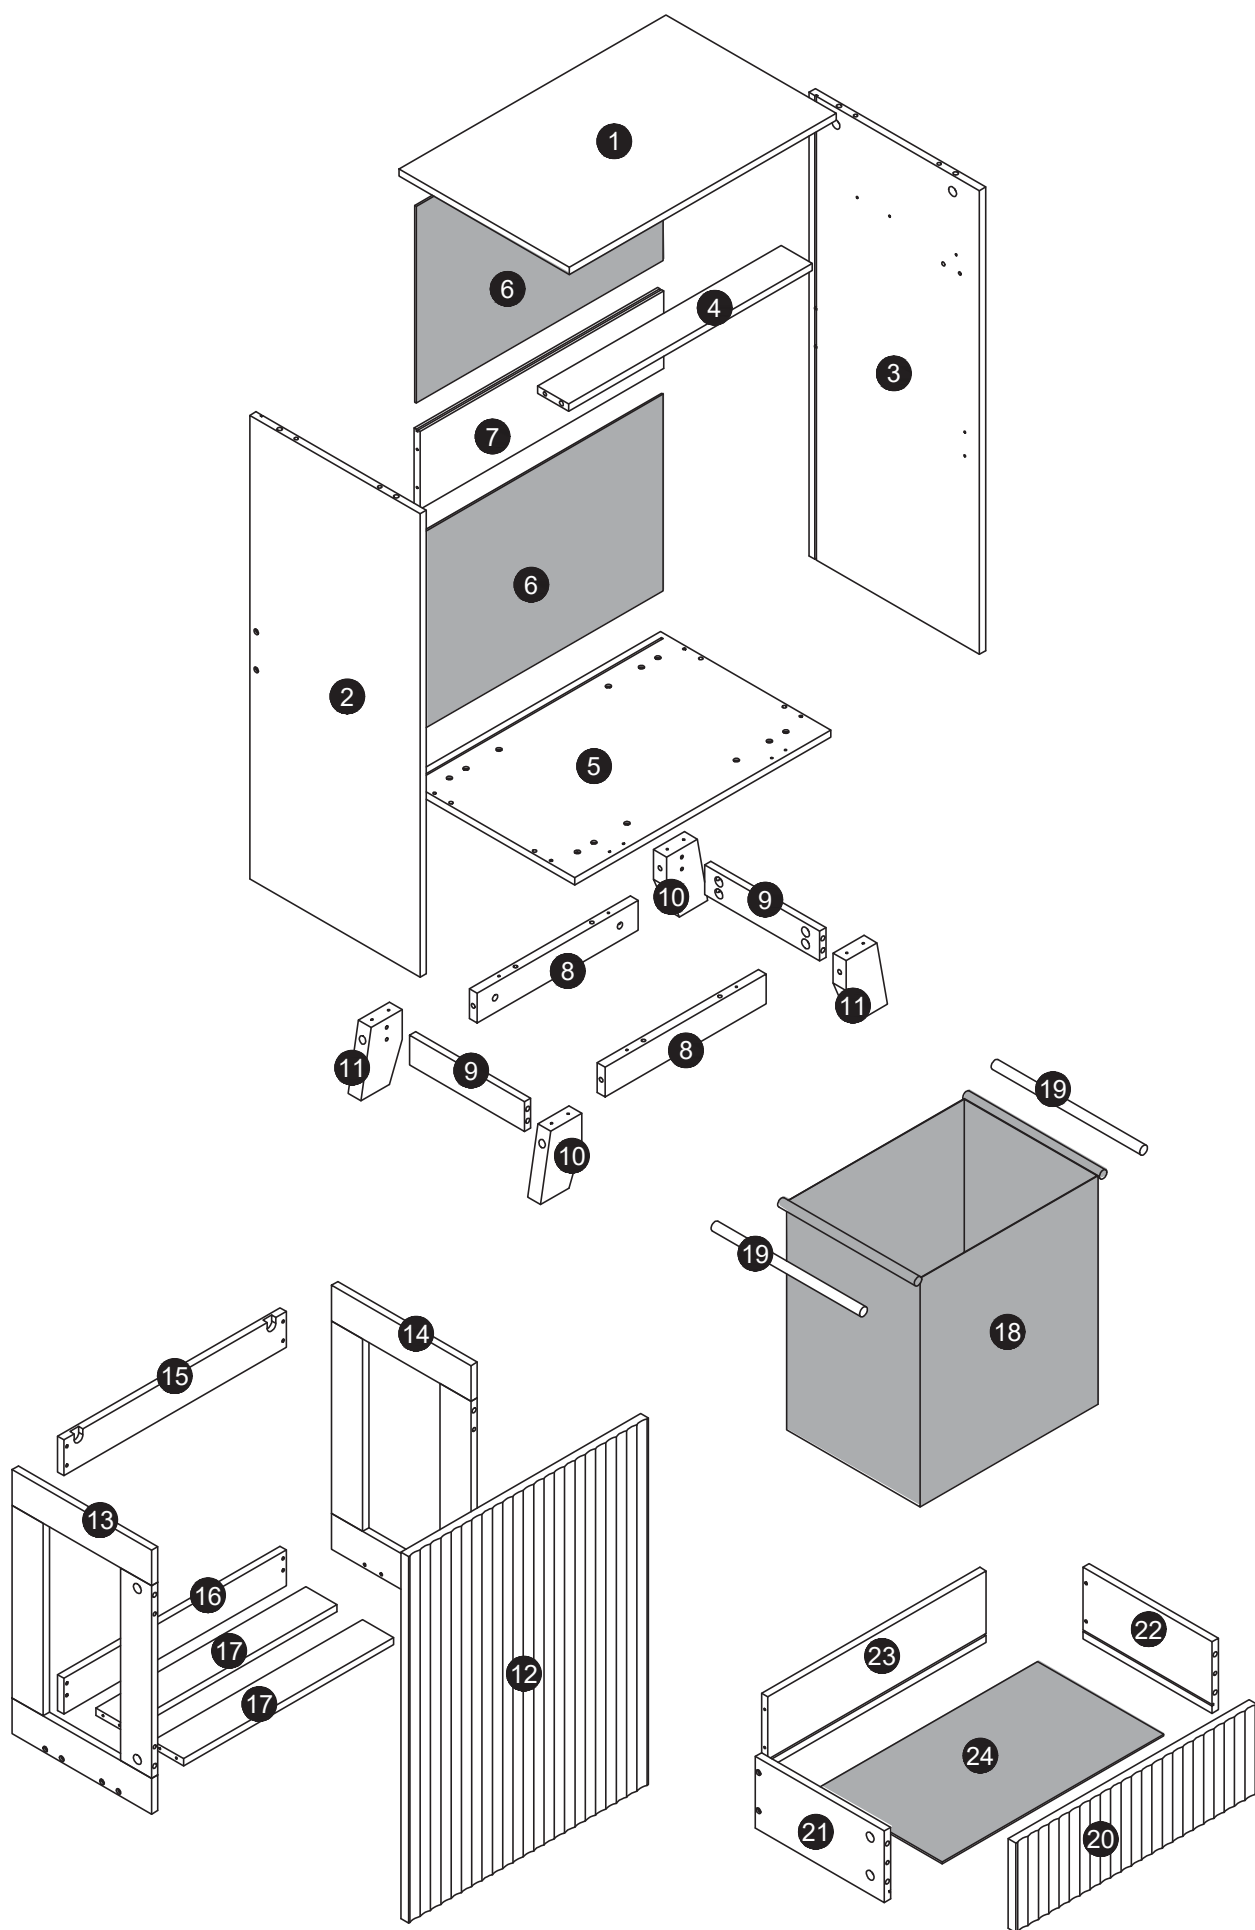


 A x22 Ø6x35mm +2(spare)	 B x22 Ø15x10mm +2(spare)	 C x20 Ø6x30mm +2(spare)	 D x30 Ø4x35mm +3(spare)	 E x12 Ø3.5x12mm +1(spare)	 F x2
 G x2	 H x1	 I x12 Ø4x30mm +1(spare)	 J x4	 K x4	 L x4 Ø15mm
 M x2 Ø6x30mm	 N x2 Ø4x14mm N-1 N-2	 O x8 Ø3x16mm O-1 O-2	 P x4	 Q x14 Ø3.5x12mm +1(spare)	
 CL x1 L250mm	 CR x1 L250mm	 DL x1 L250mm	 DR x1 L250mm		

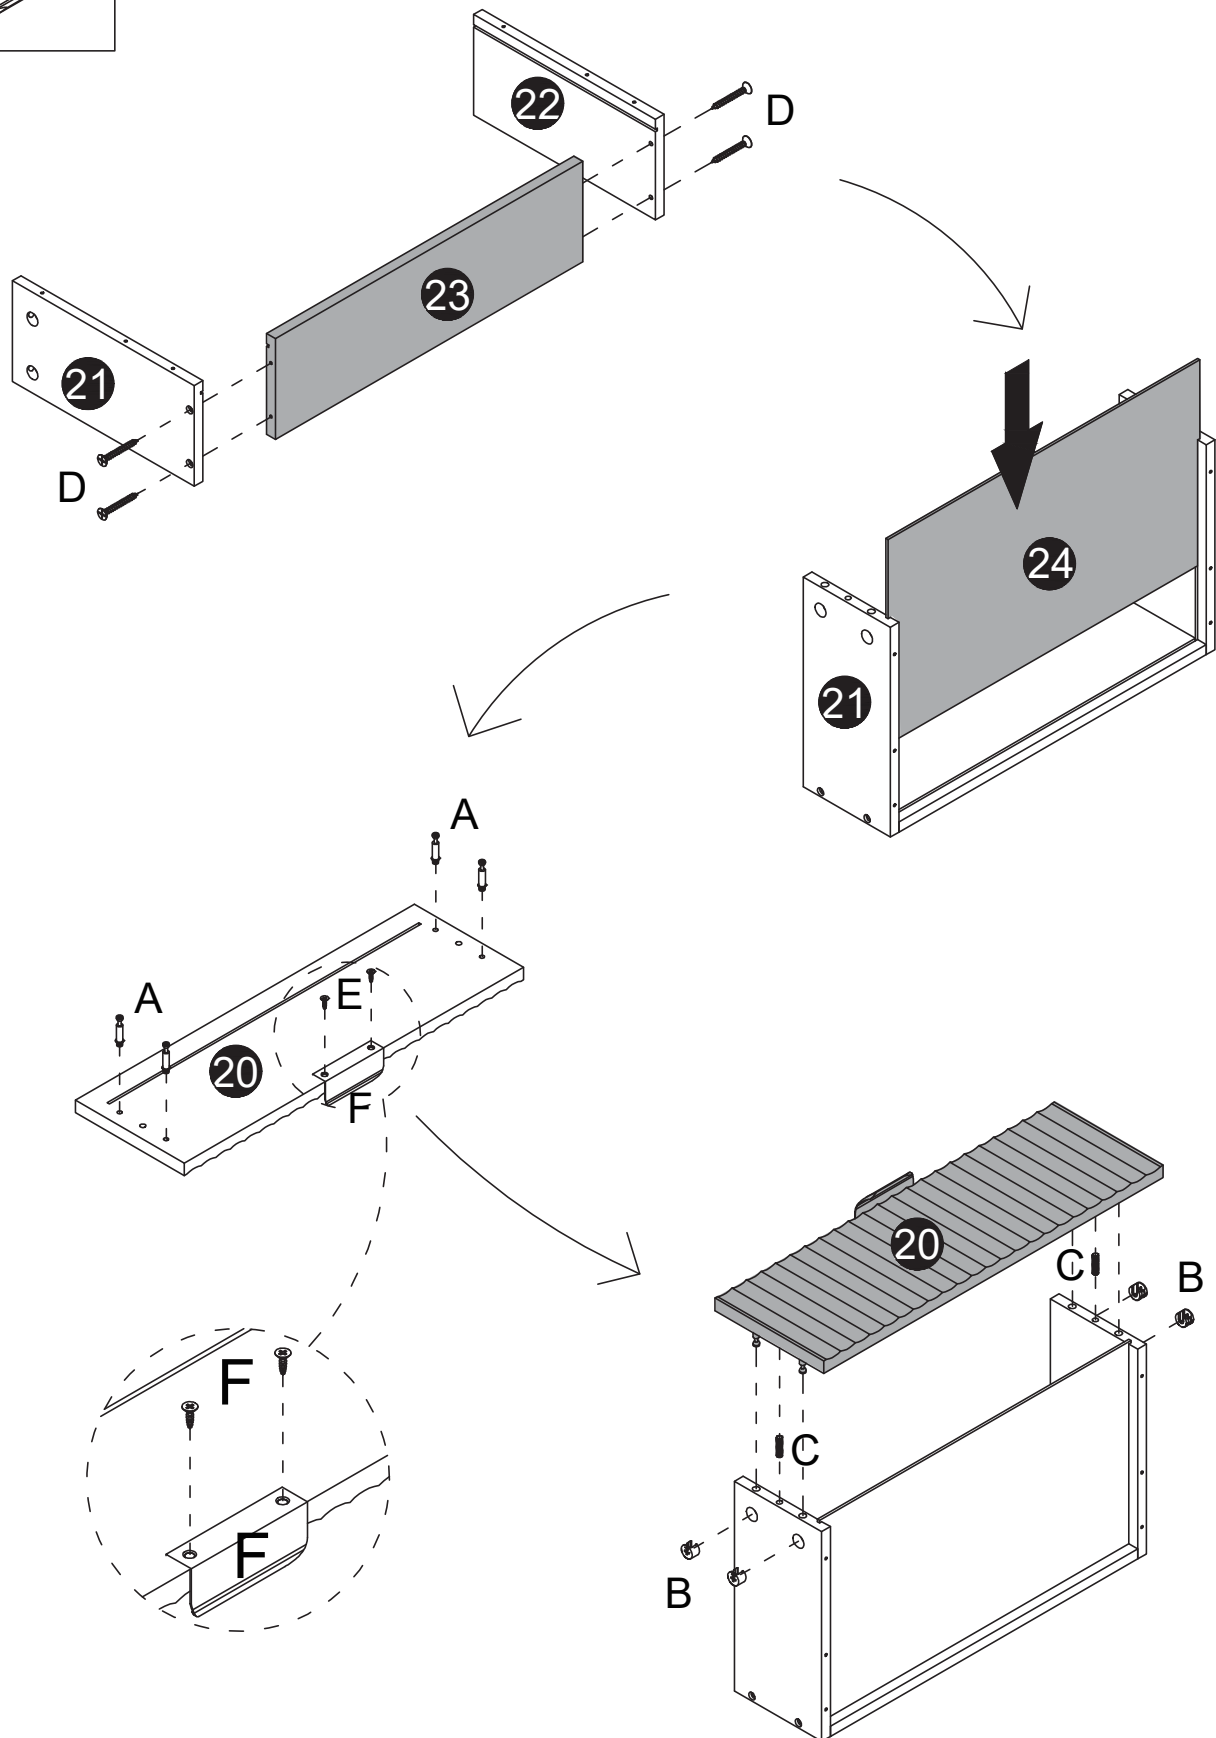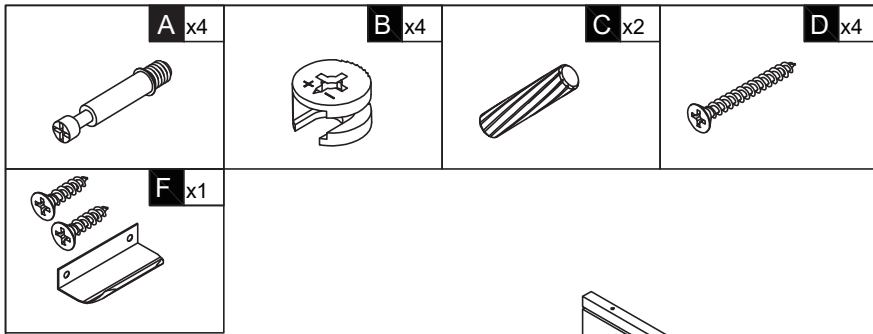

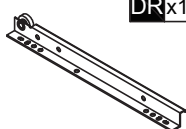


21

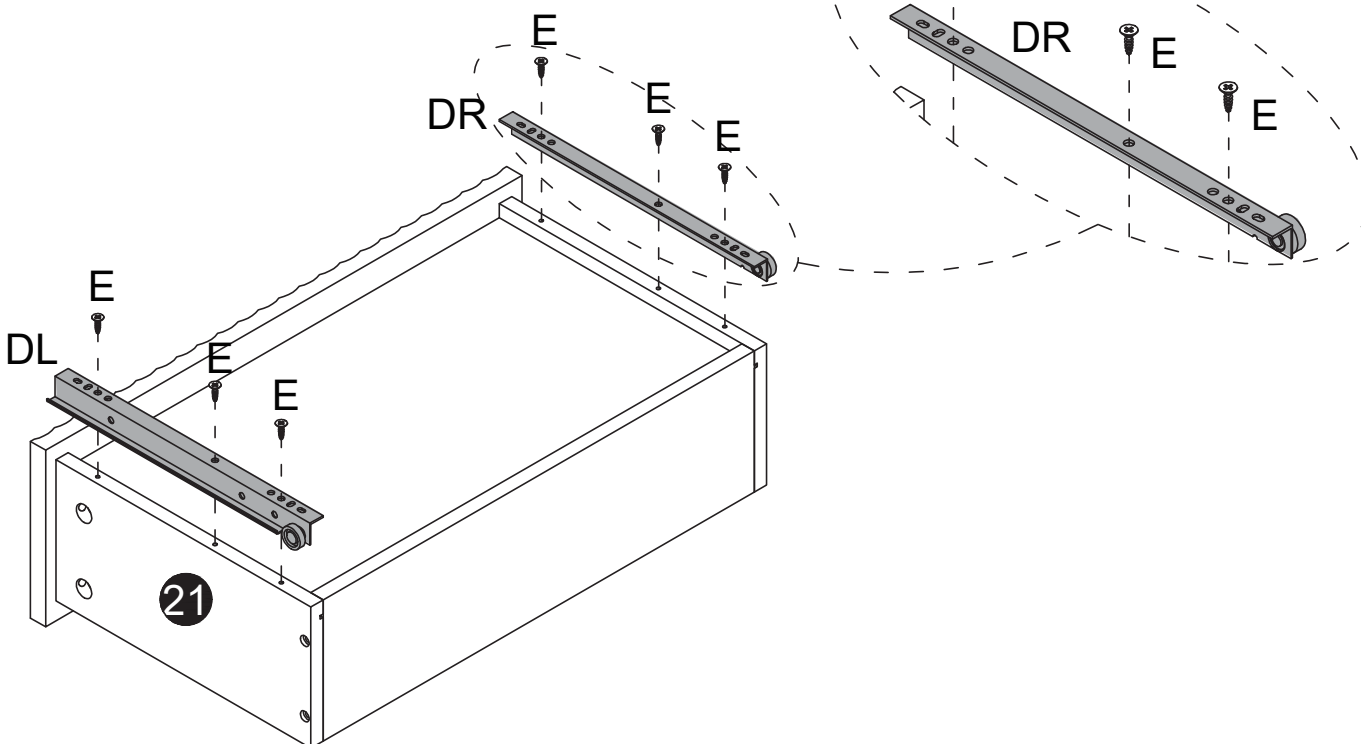

Q




12

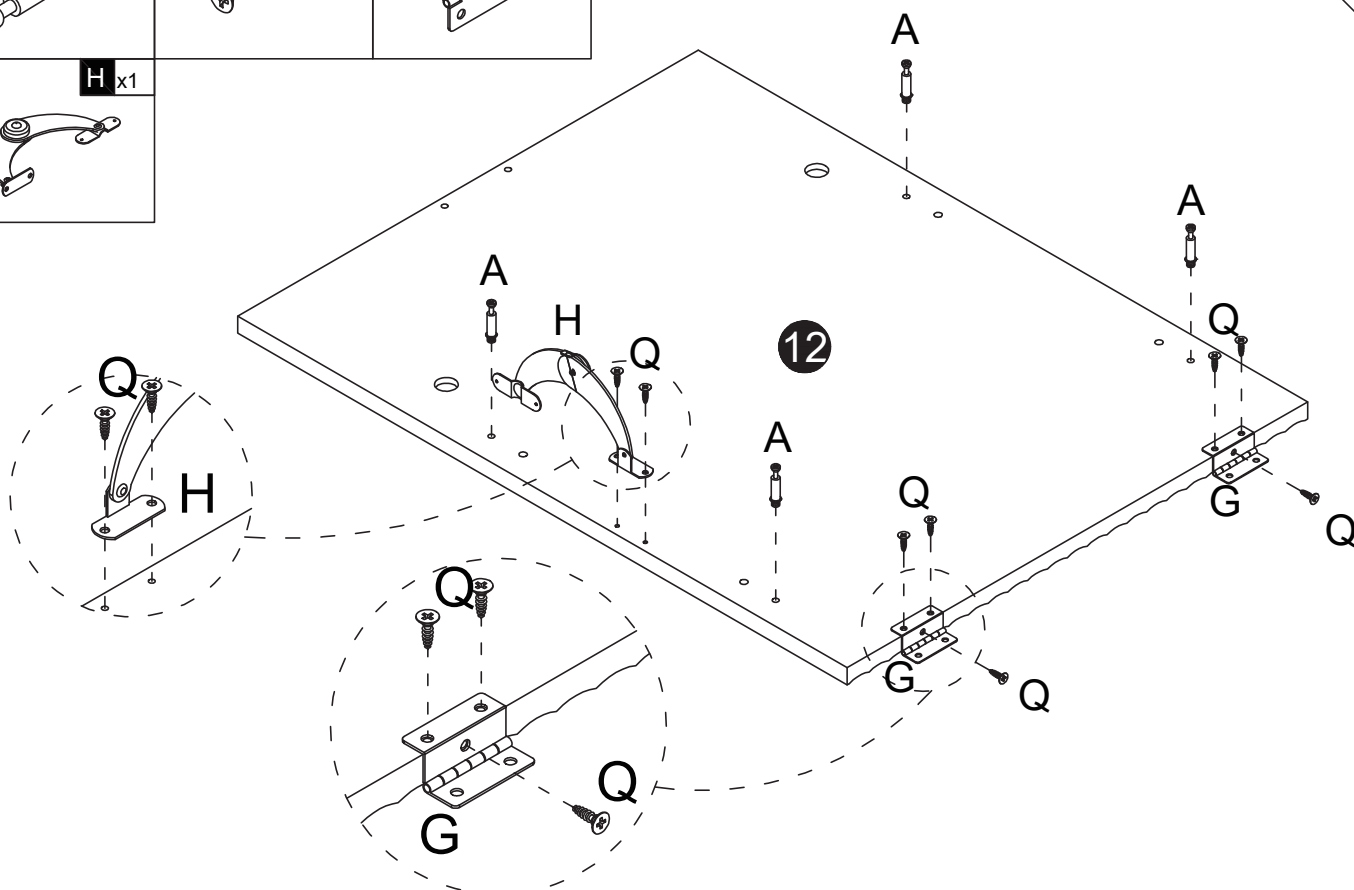

D x8



04

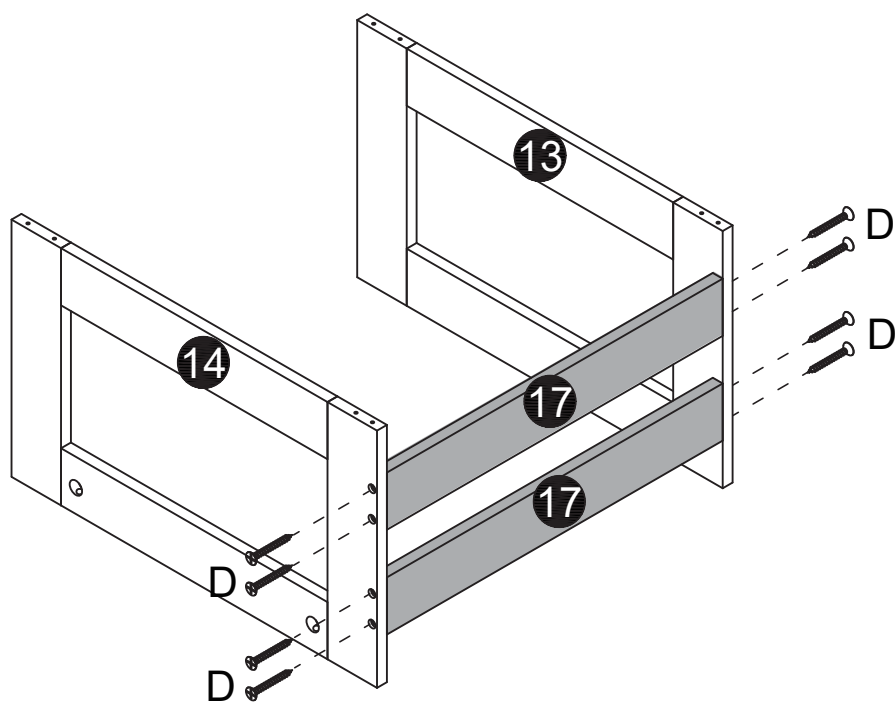


B x4







C x4



05

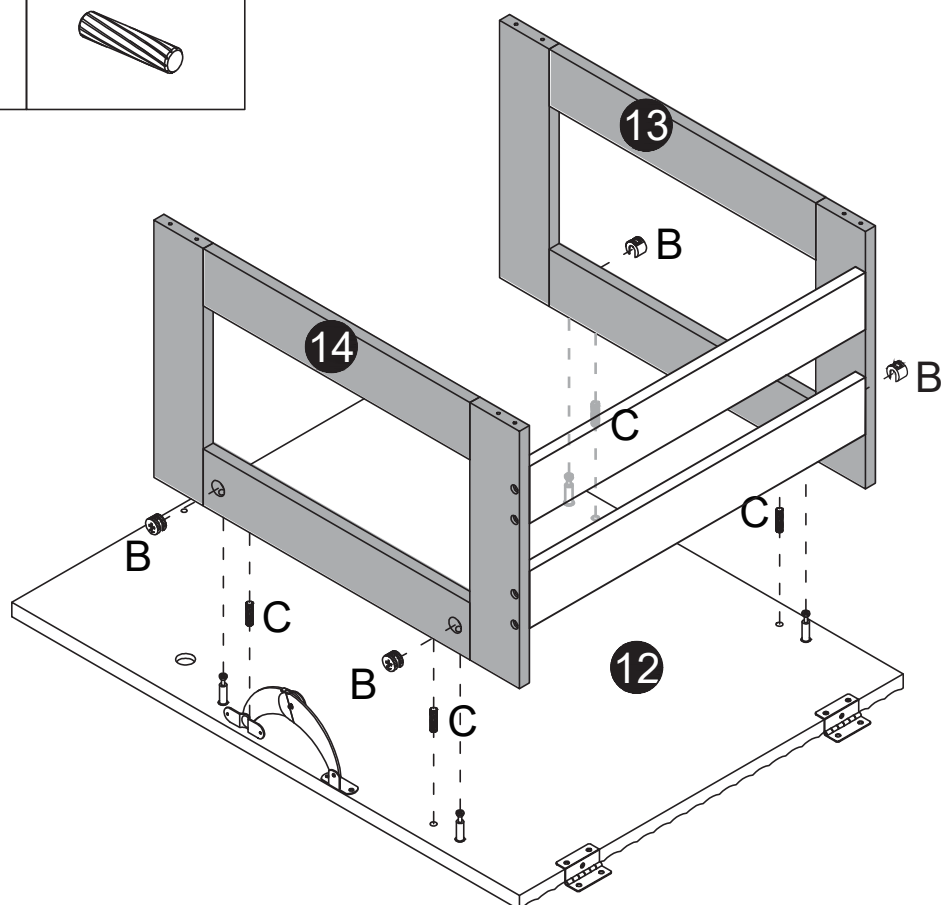


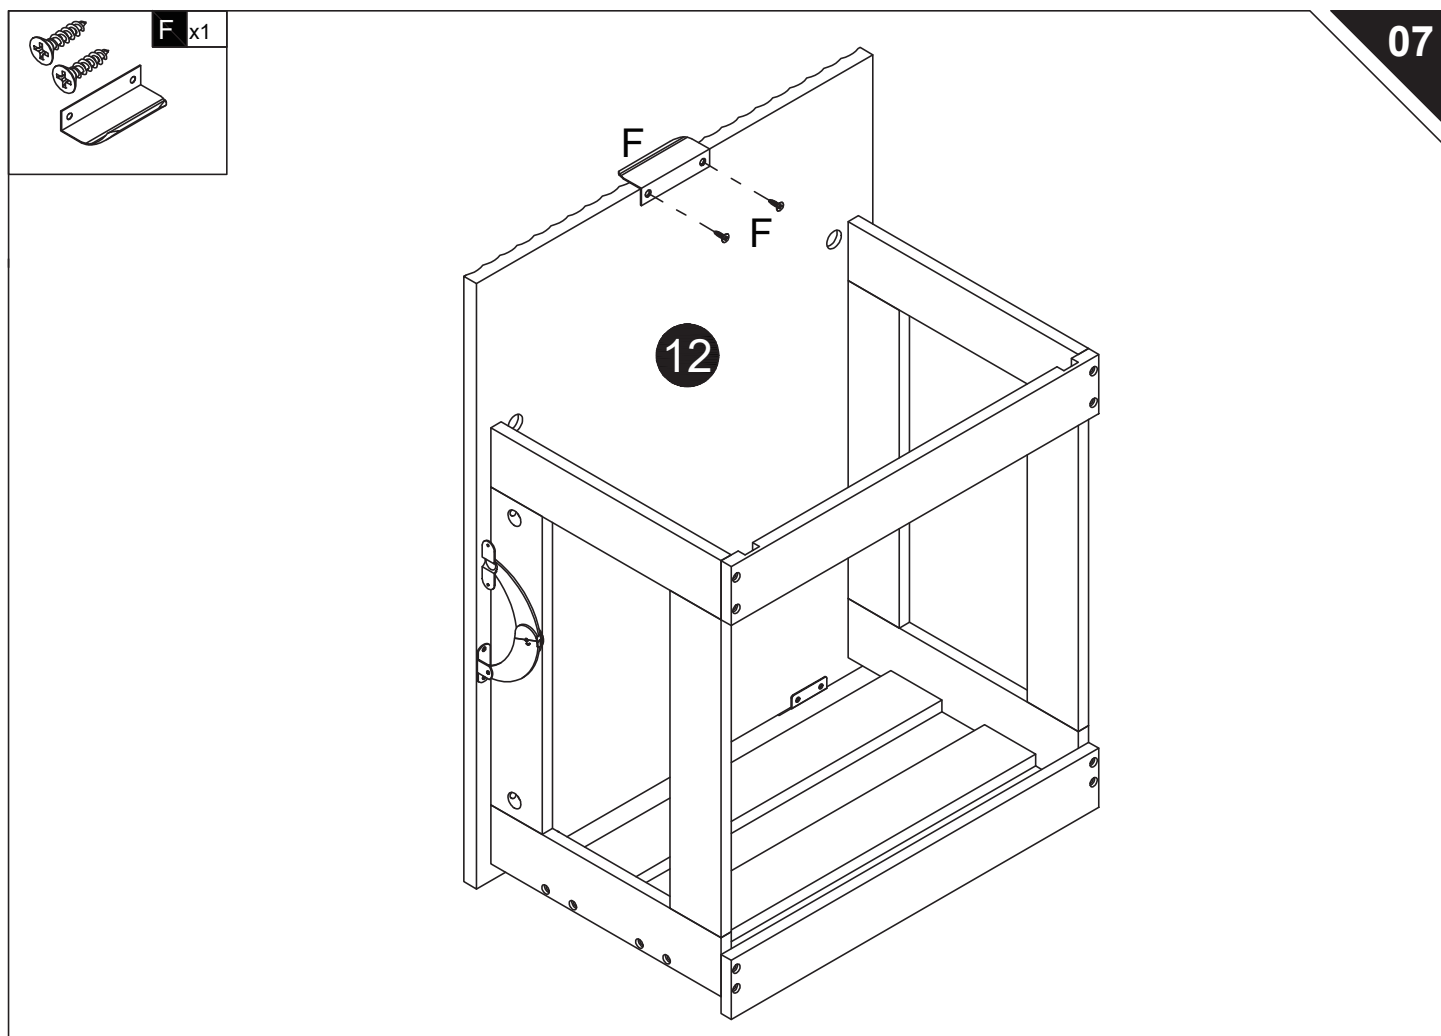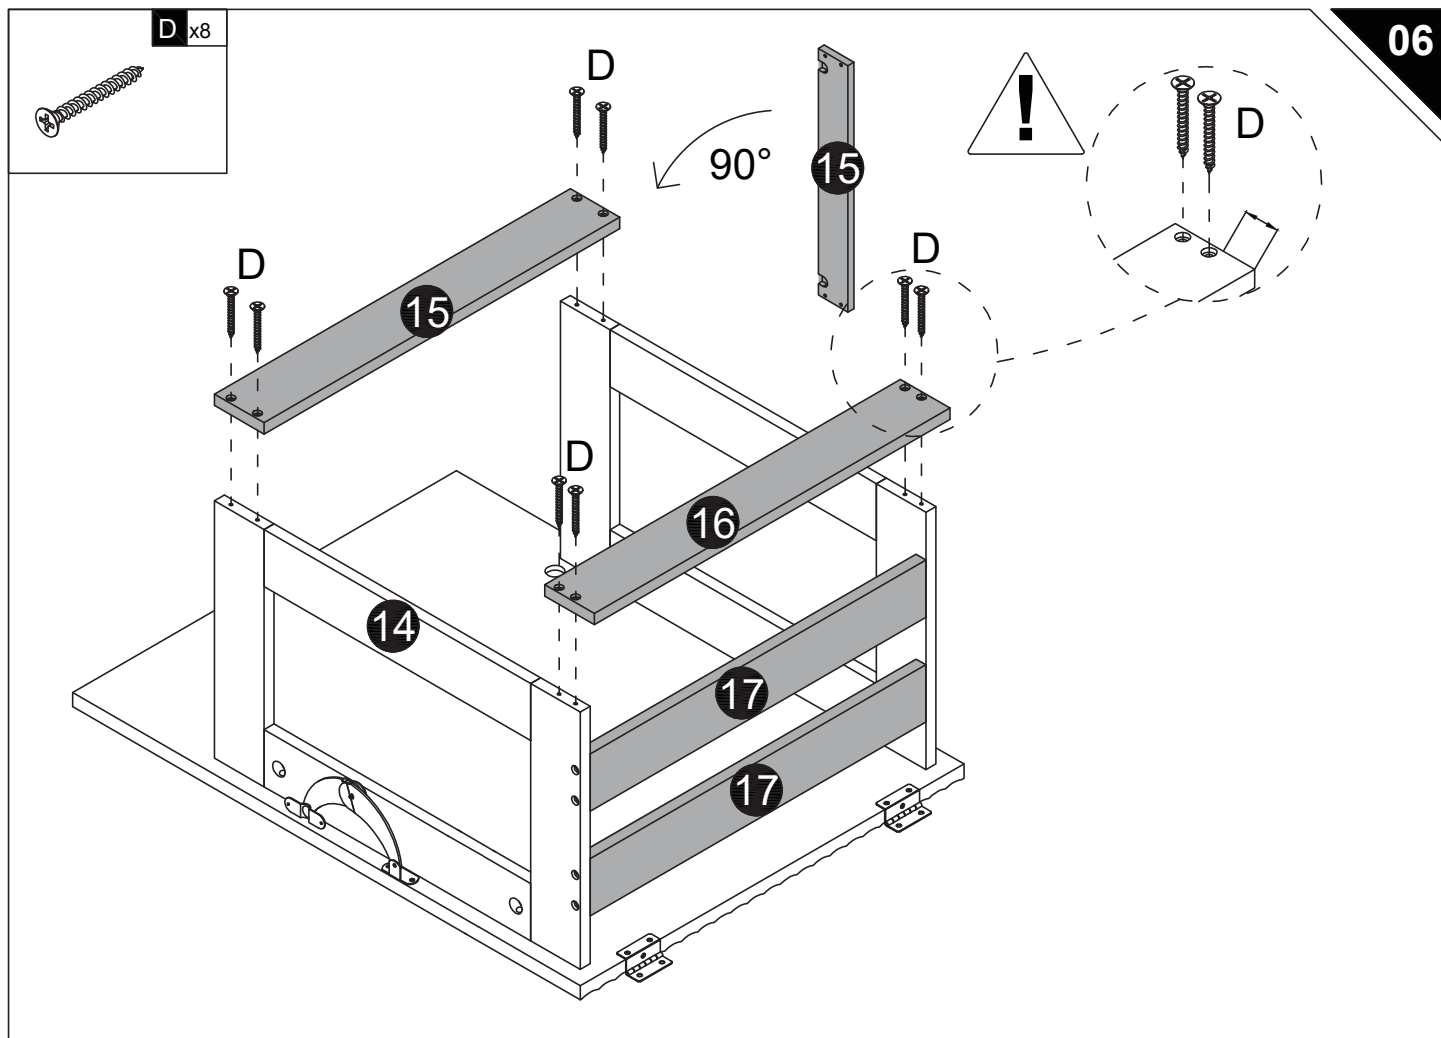

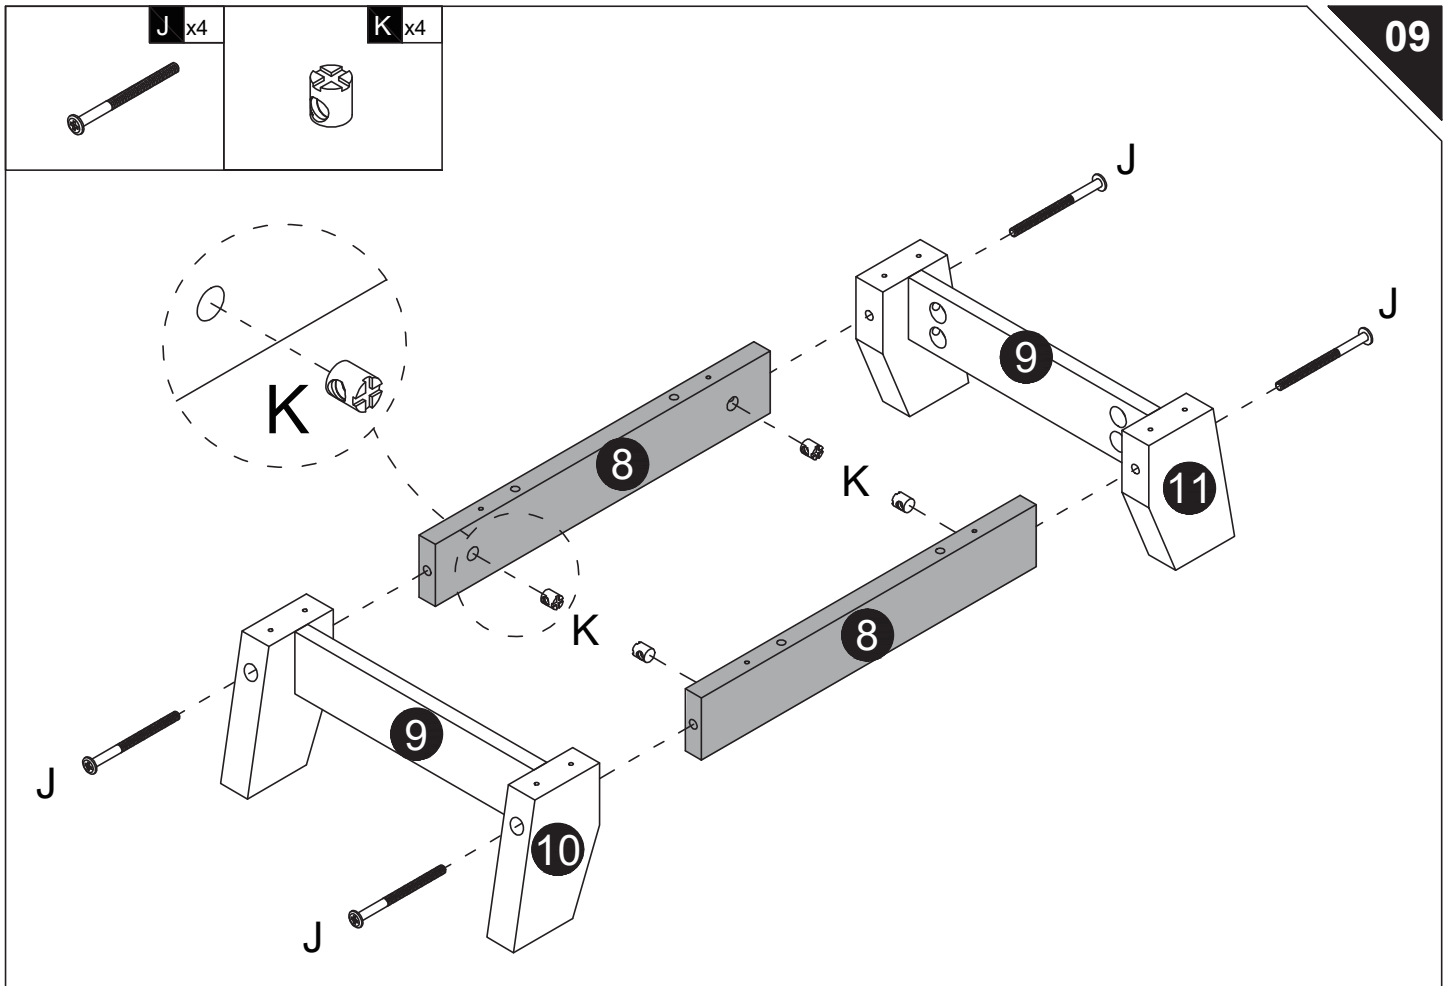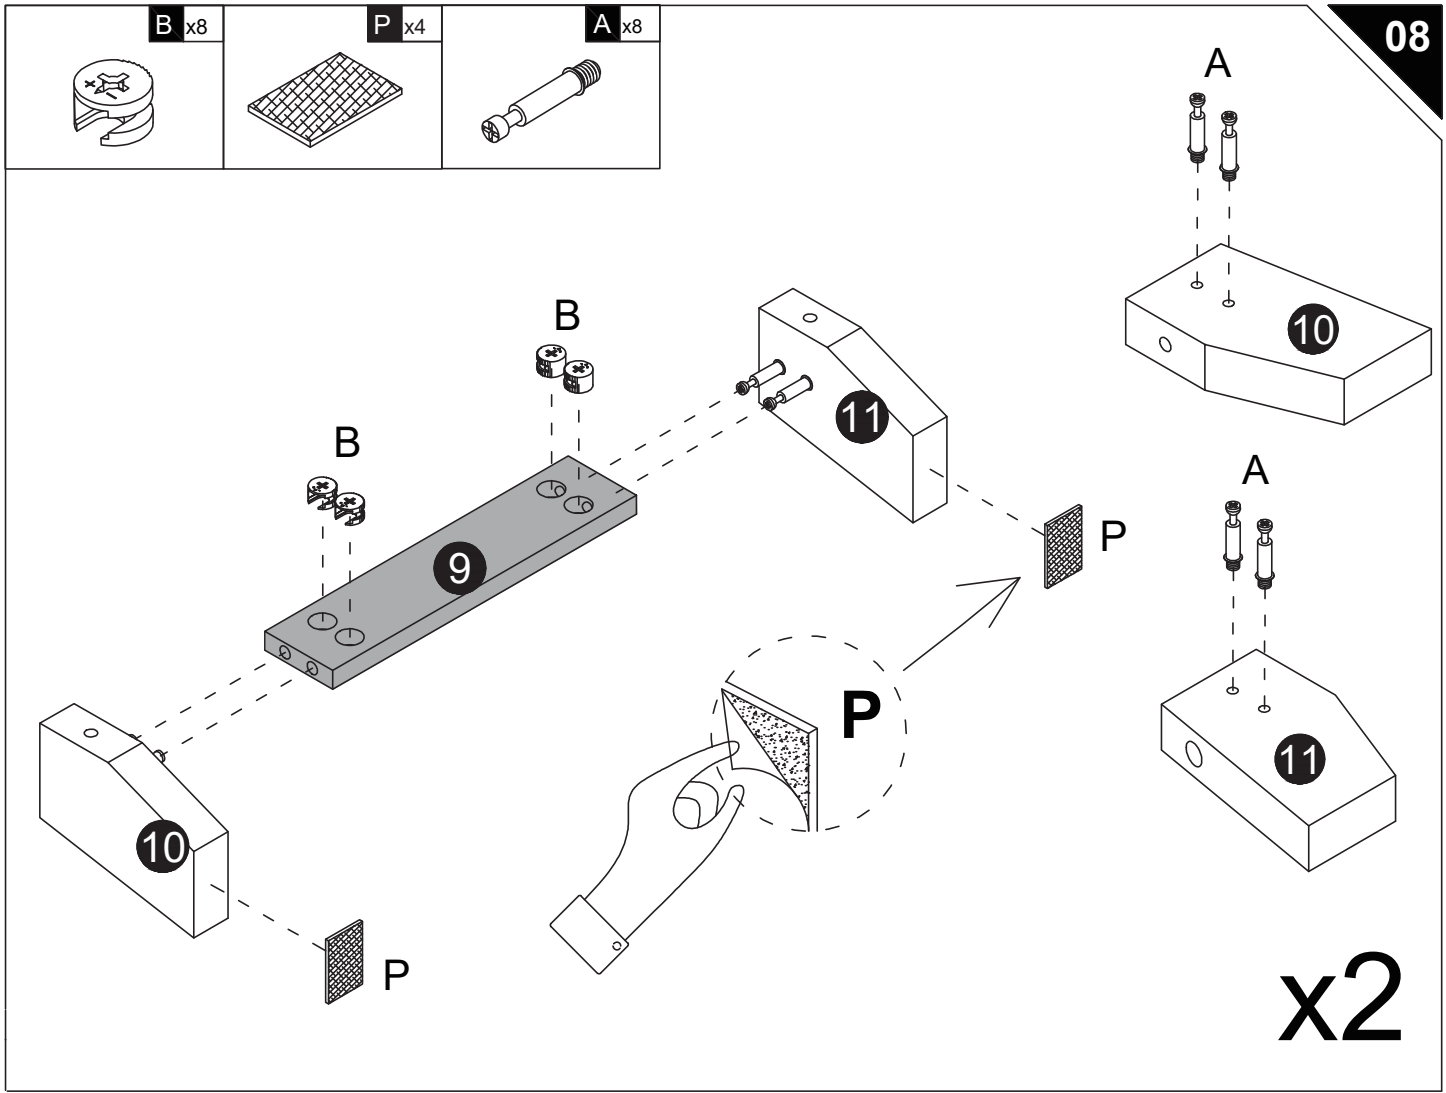


C x4

I x12

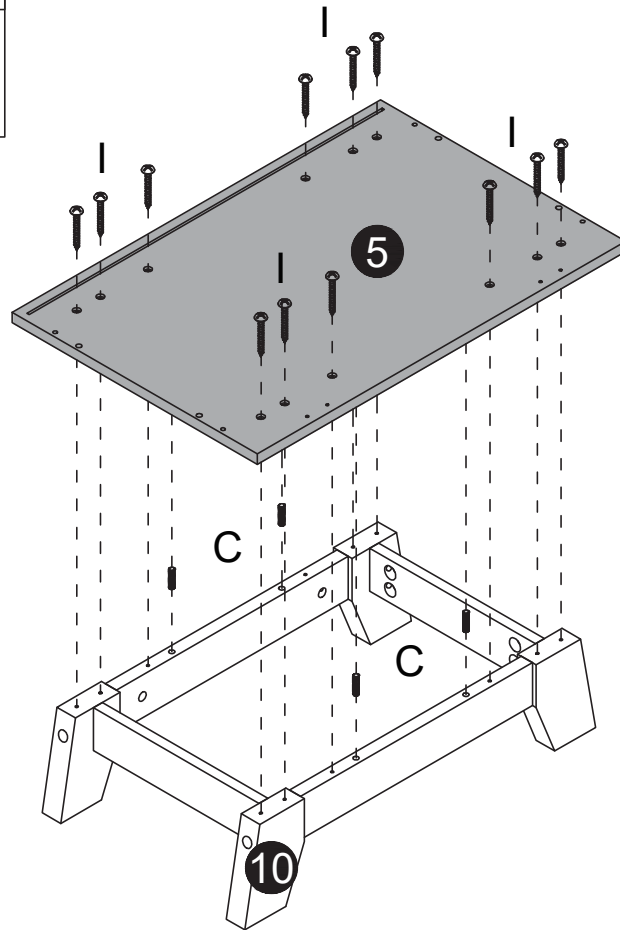


A x2



E x6





CL x1

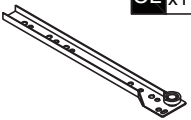

CR x1

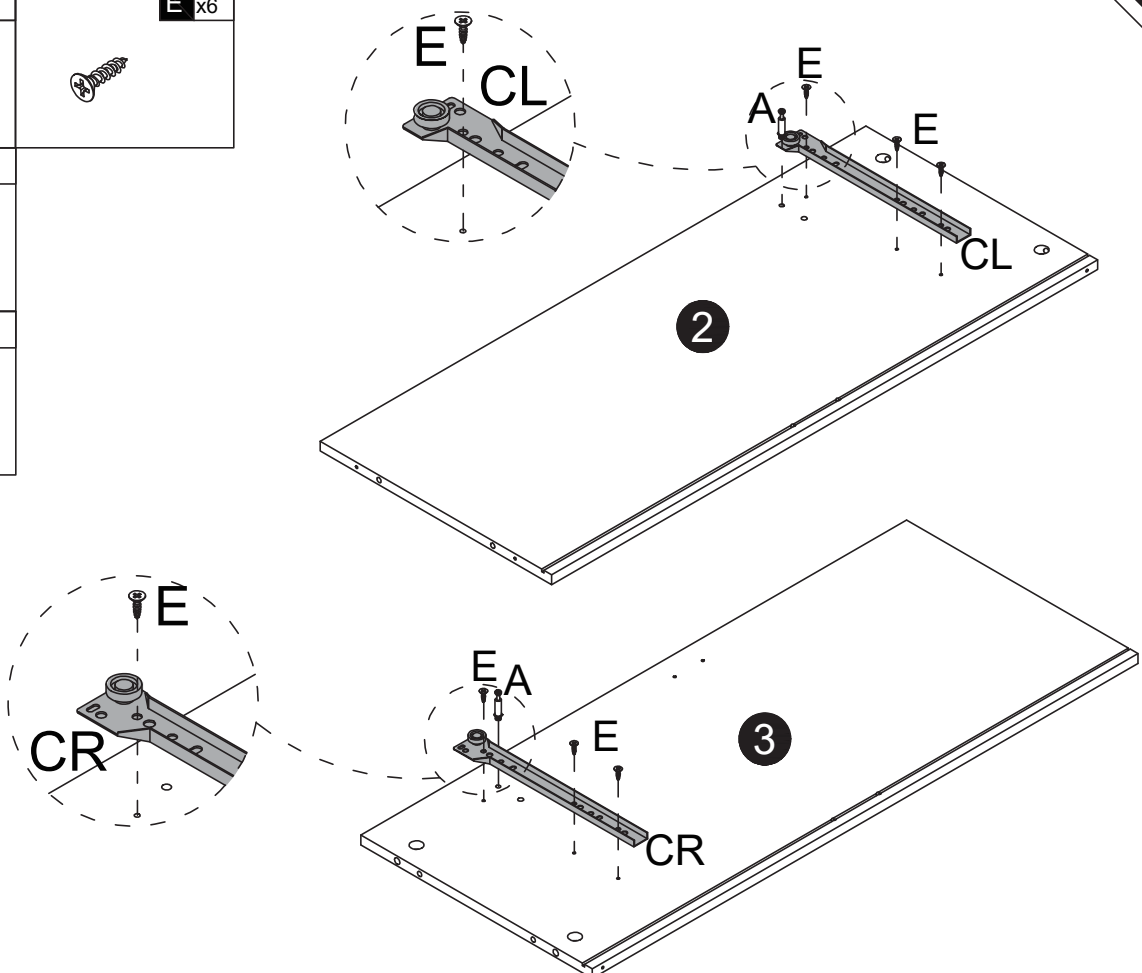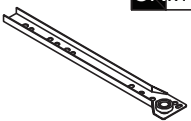


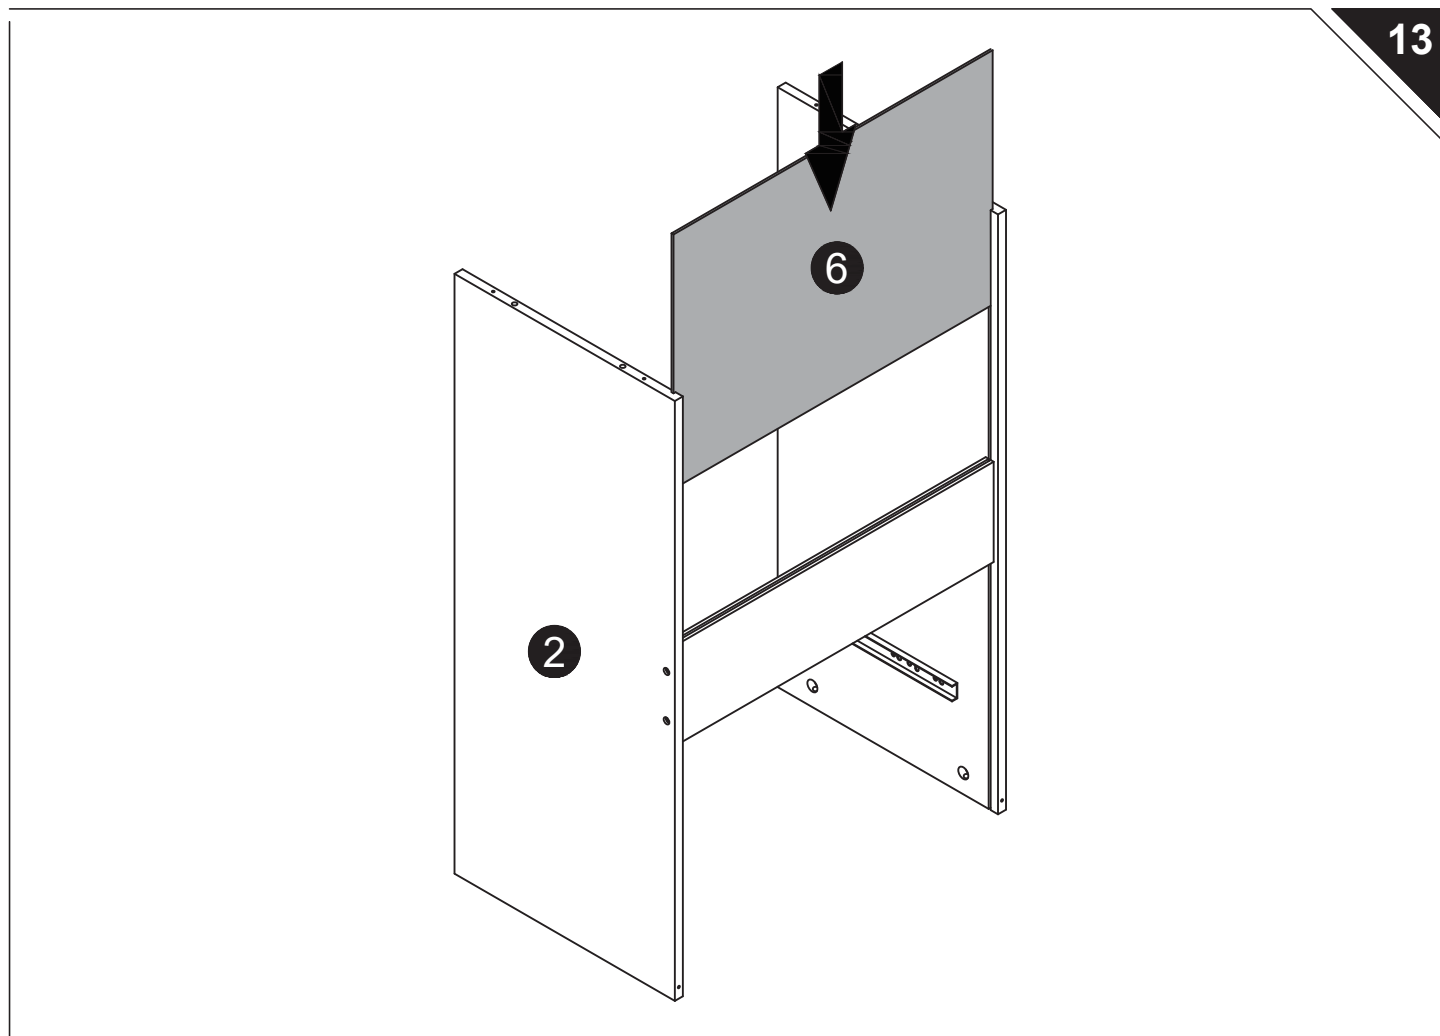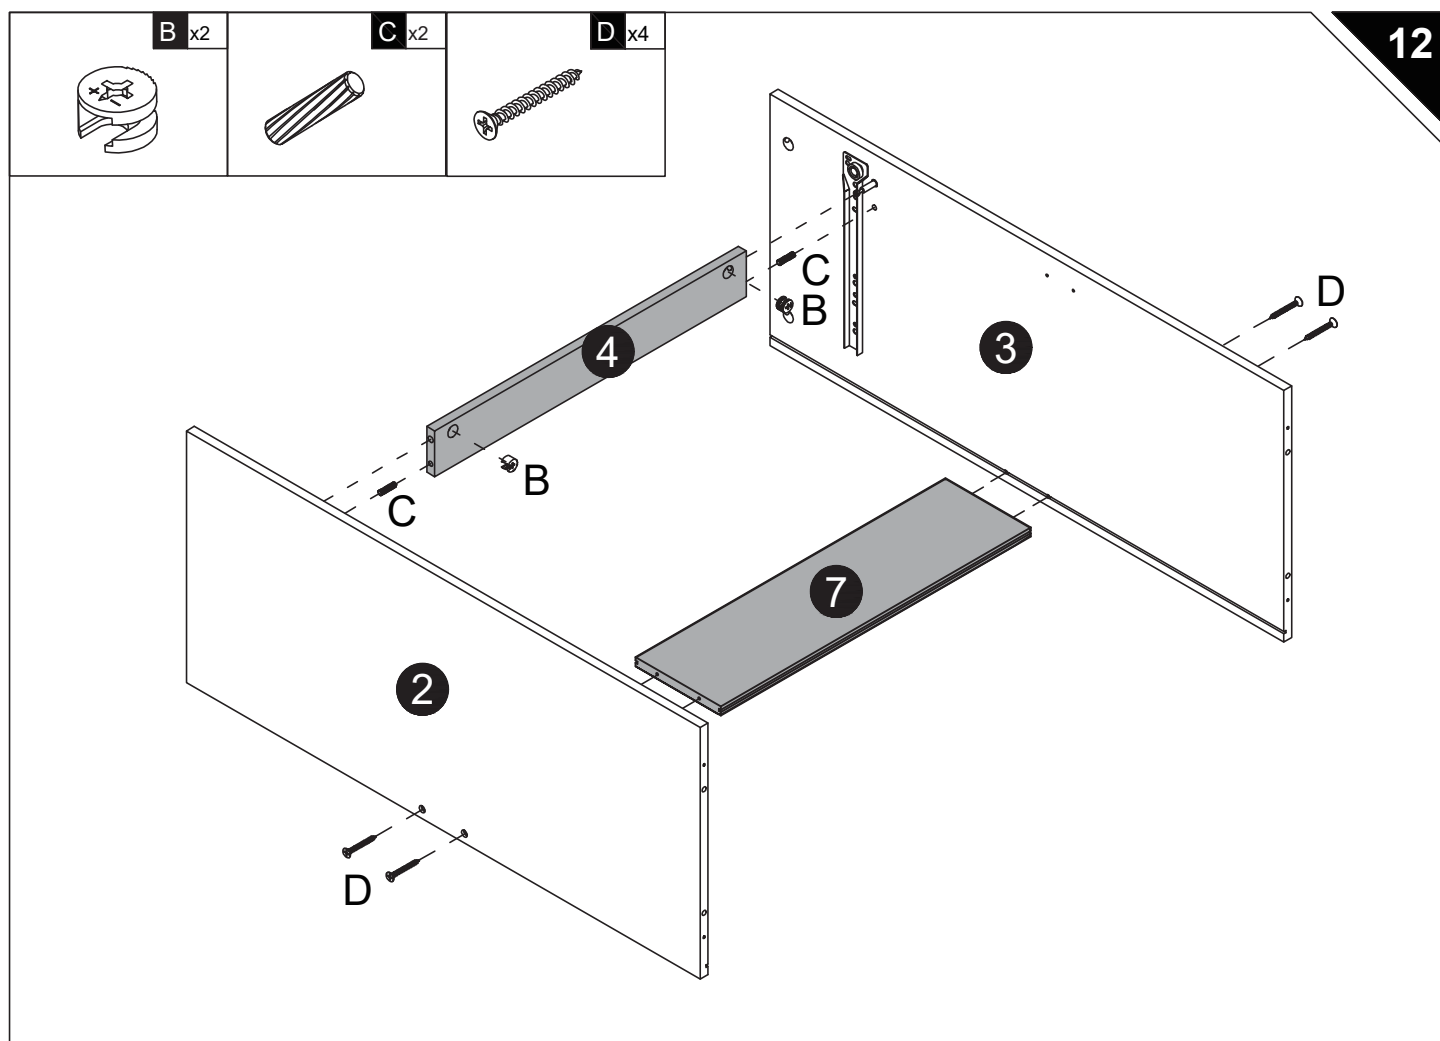


C x4




D x4

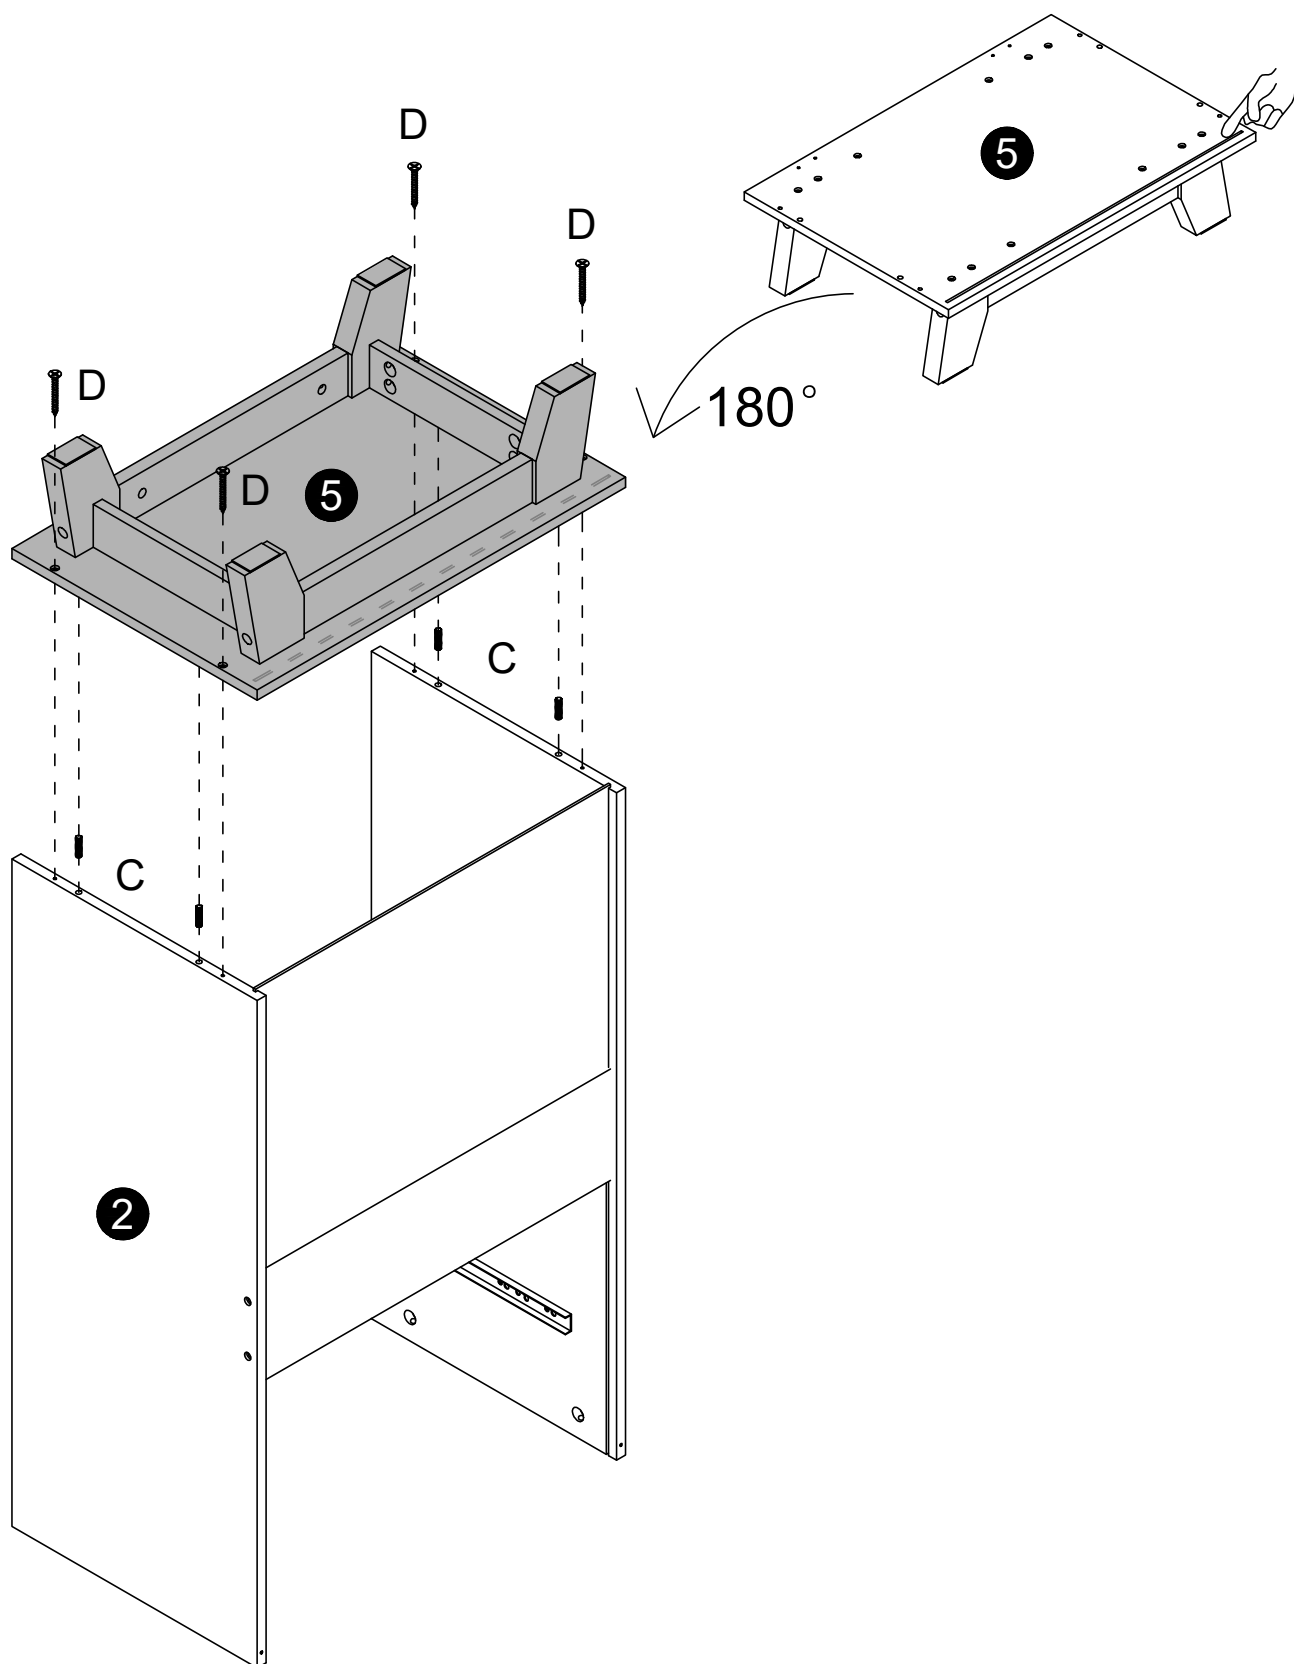

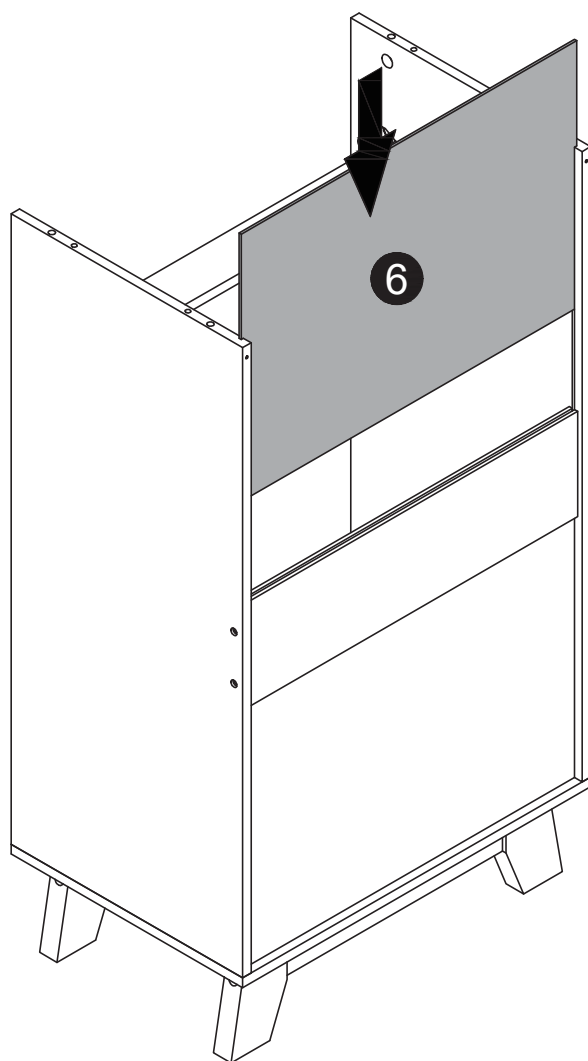

A x4




B x4









C x4






17

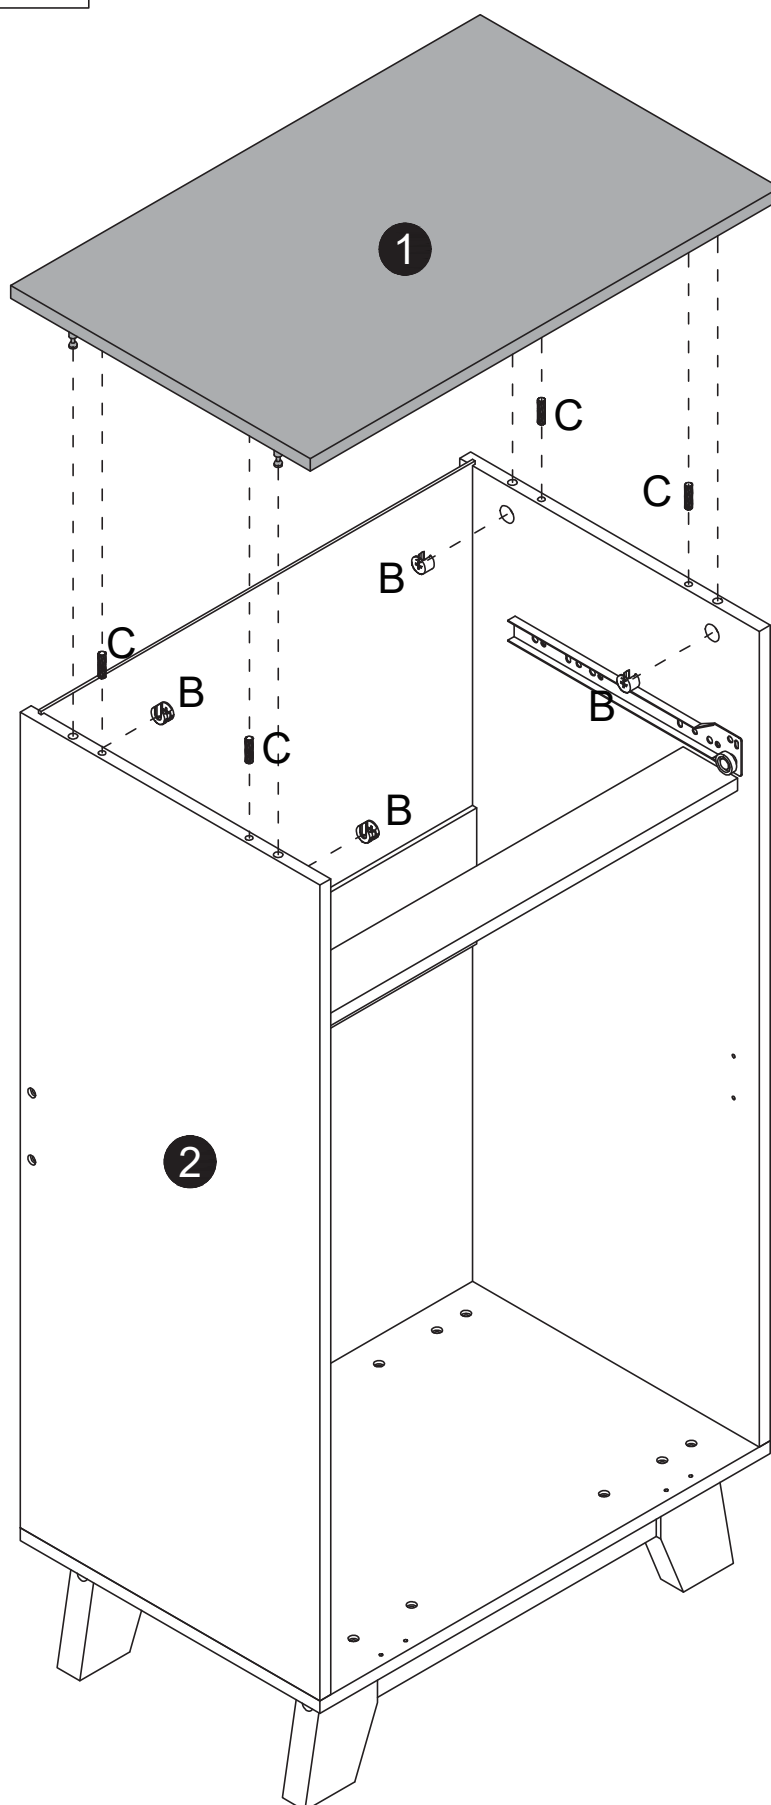

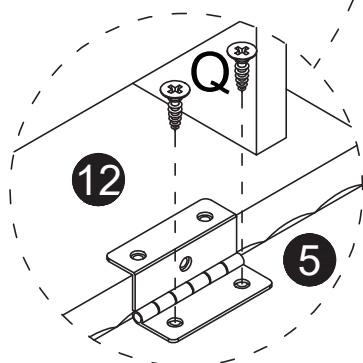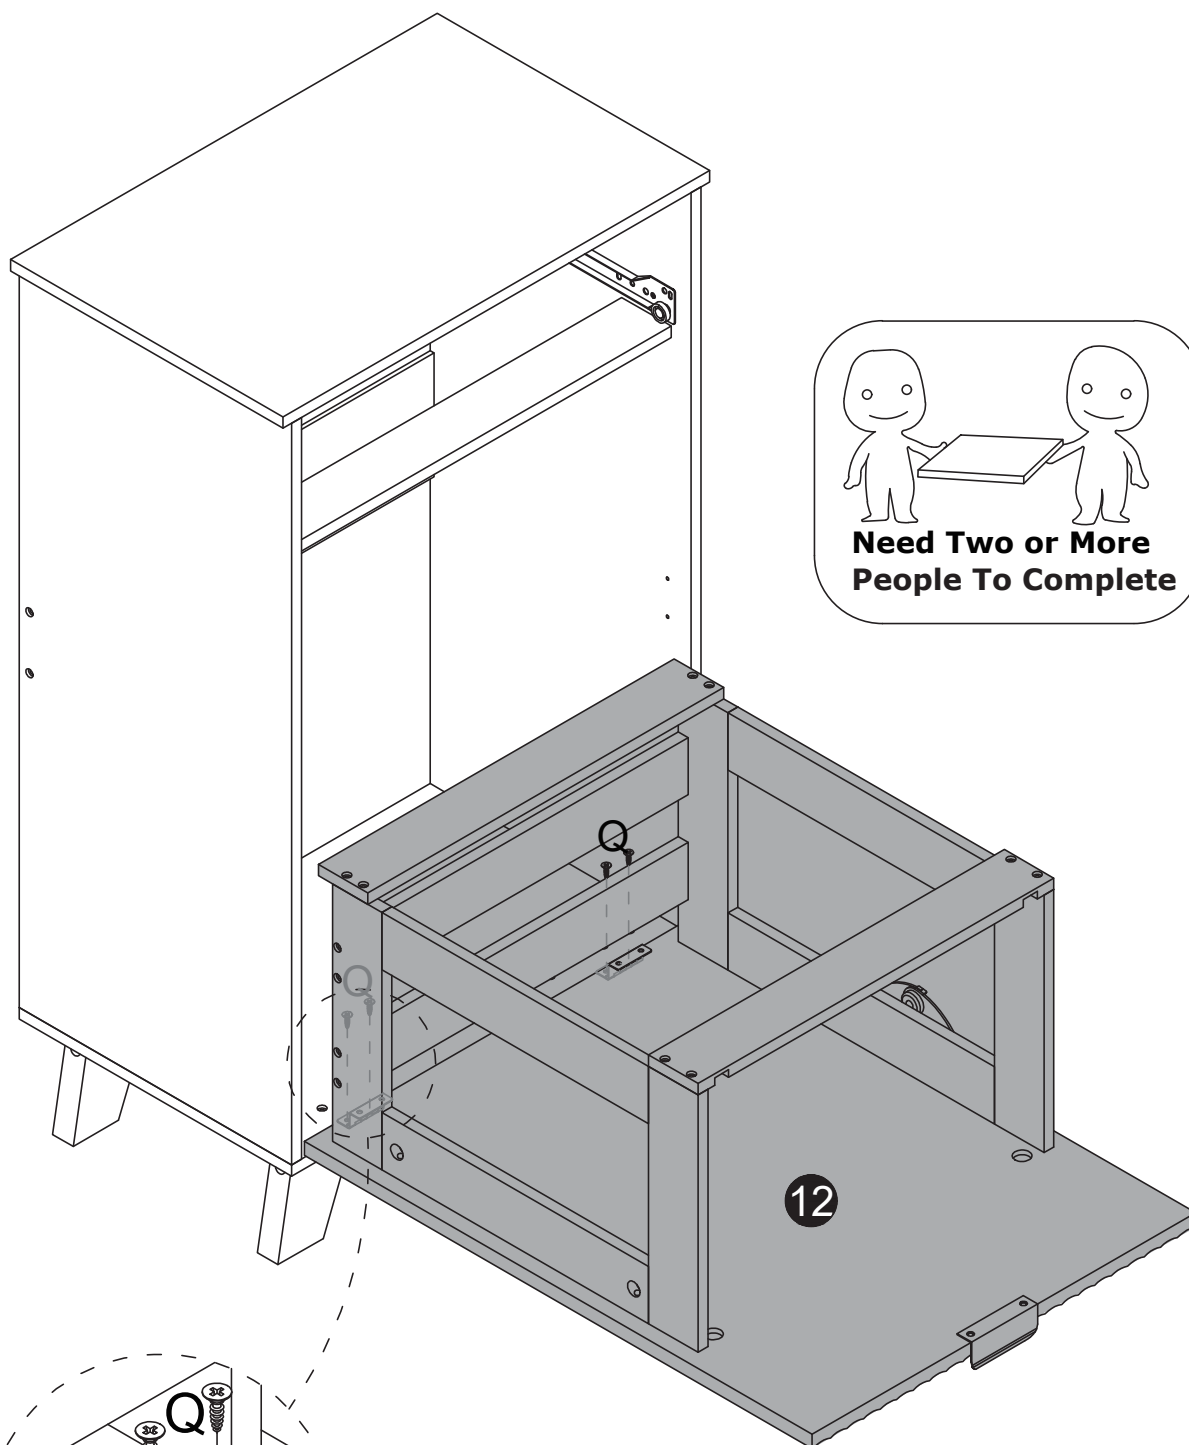

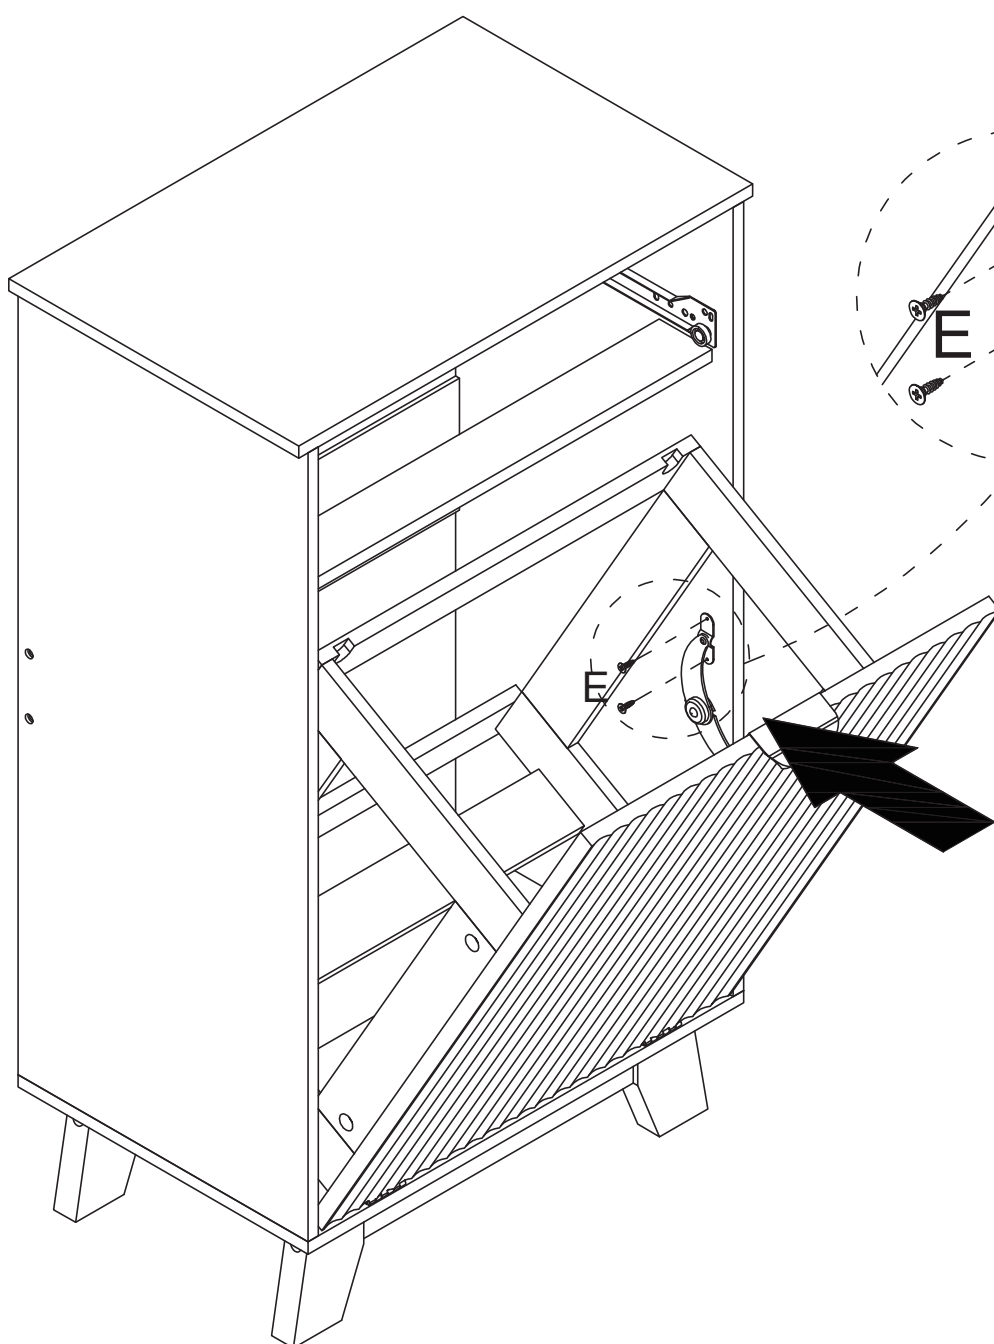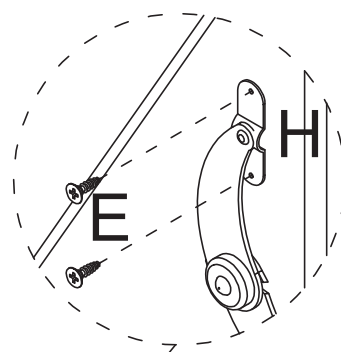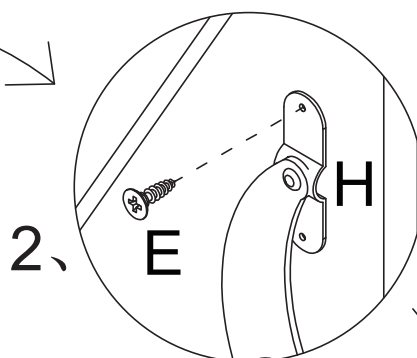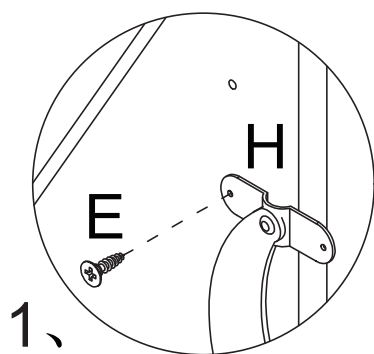

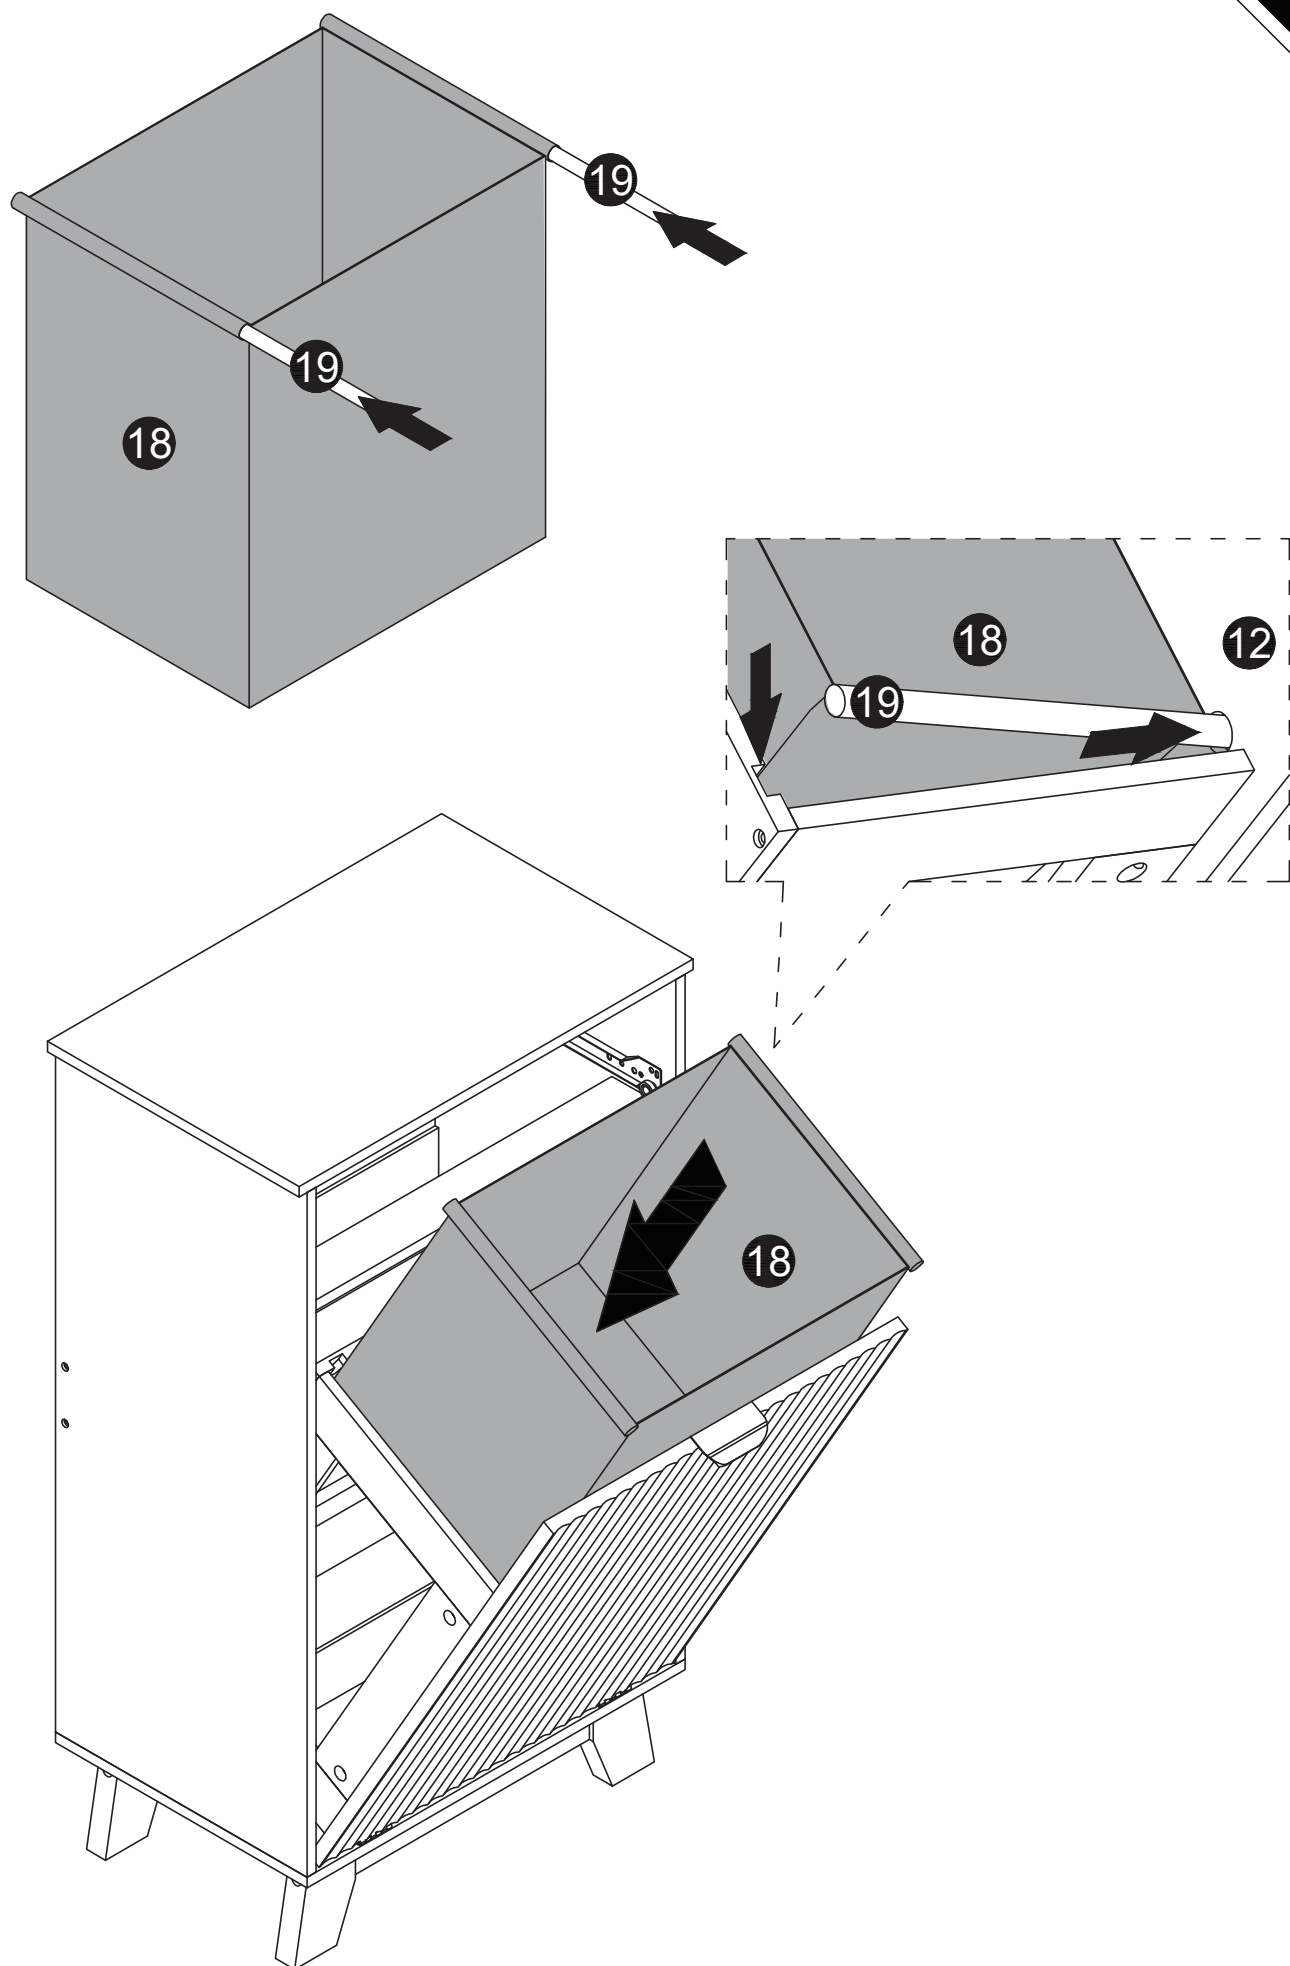

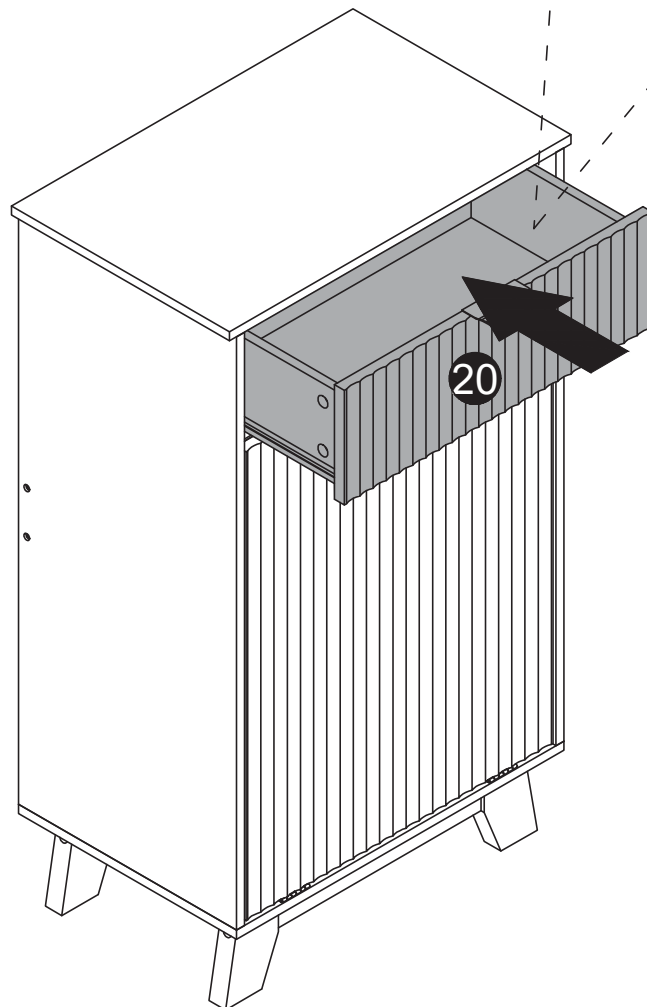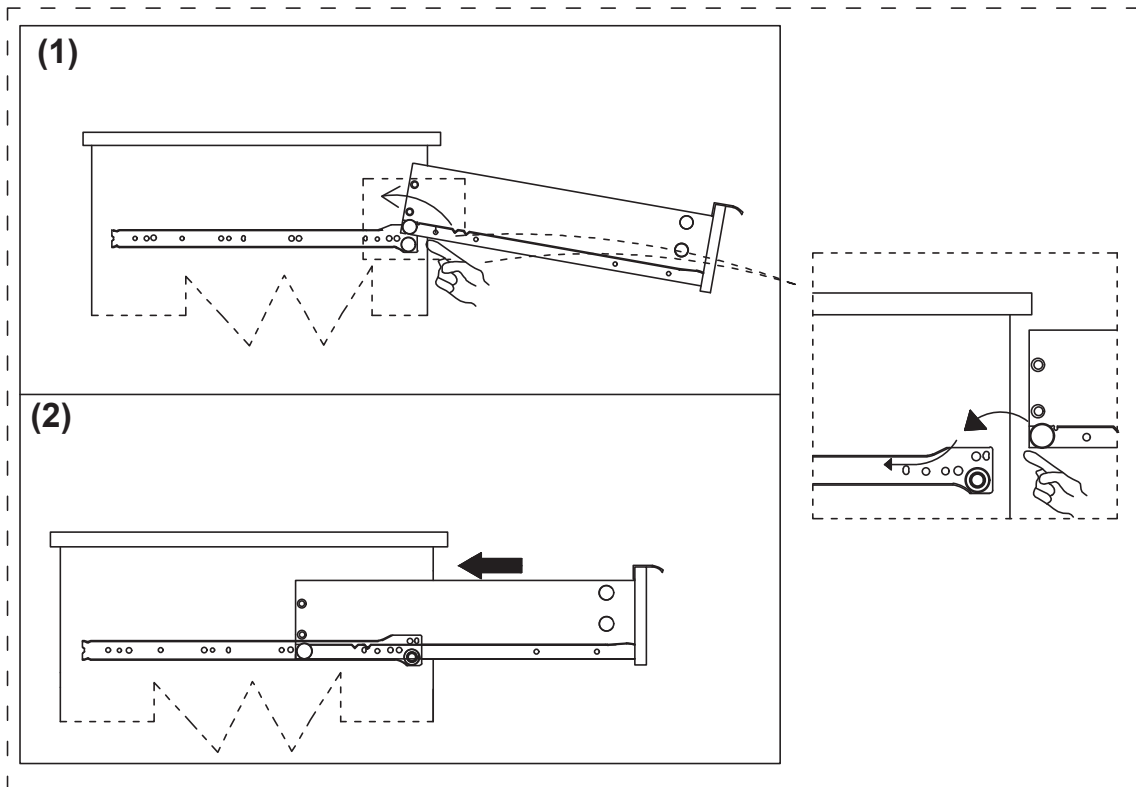

L x4




O x8



O-1




O-2

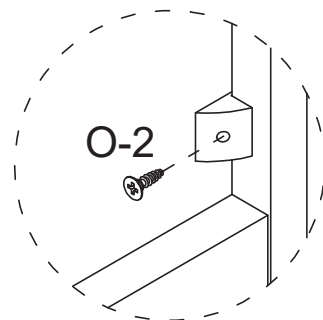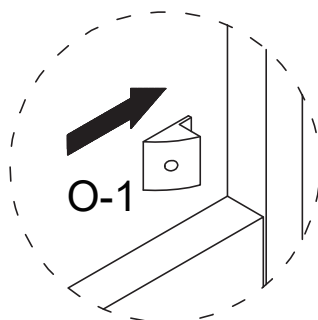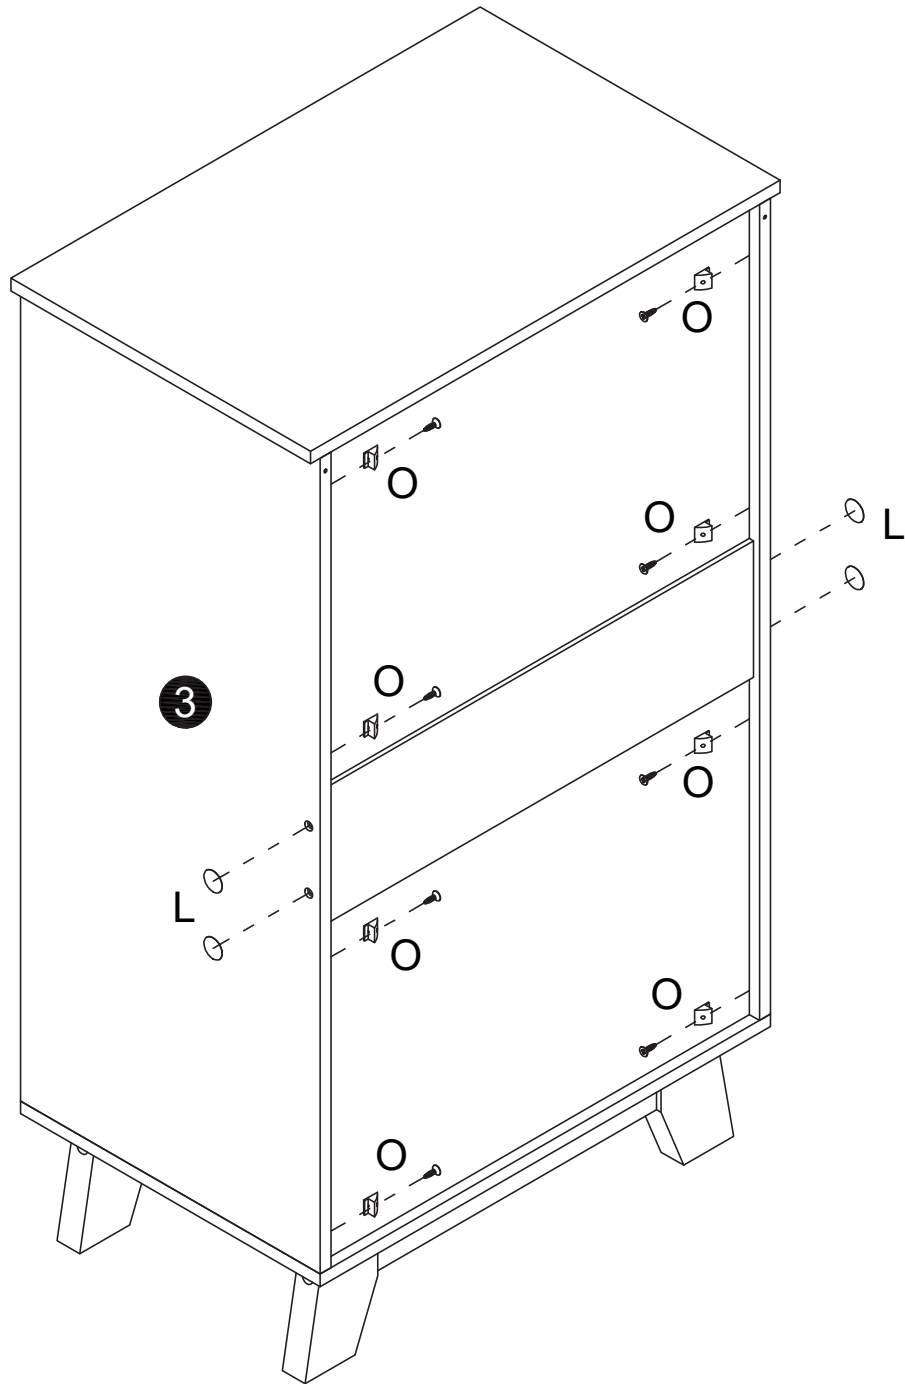

D x2



M x2



N x2




N-1




N-2

N-1

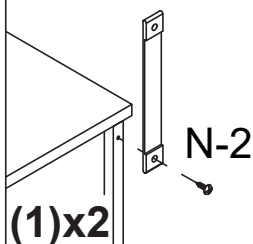

First fix the anti-rewind screw in the reserved hole of the product.


WALL

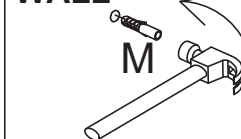

Then, put the expansion bolt into the hole


(4)x2

WALL

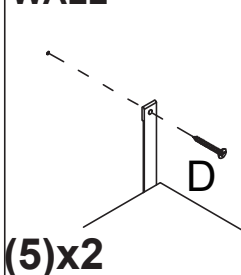

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

(5)x2

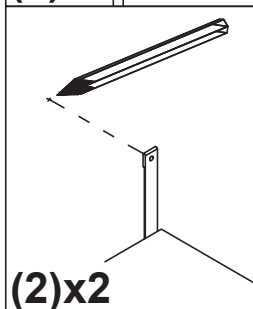

then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

WALL



(3)x2

Then use a tape drill to make holes in the wall that are suitable for the product screws.

