

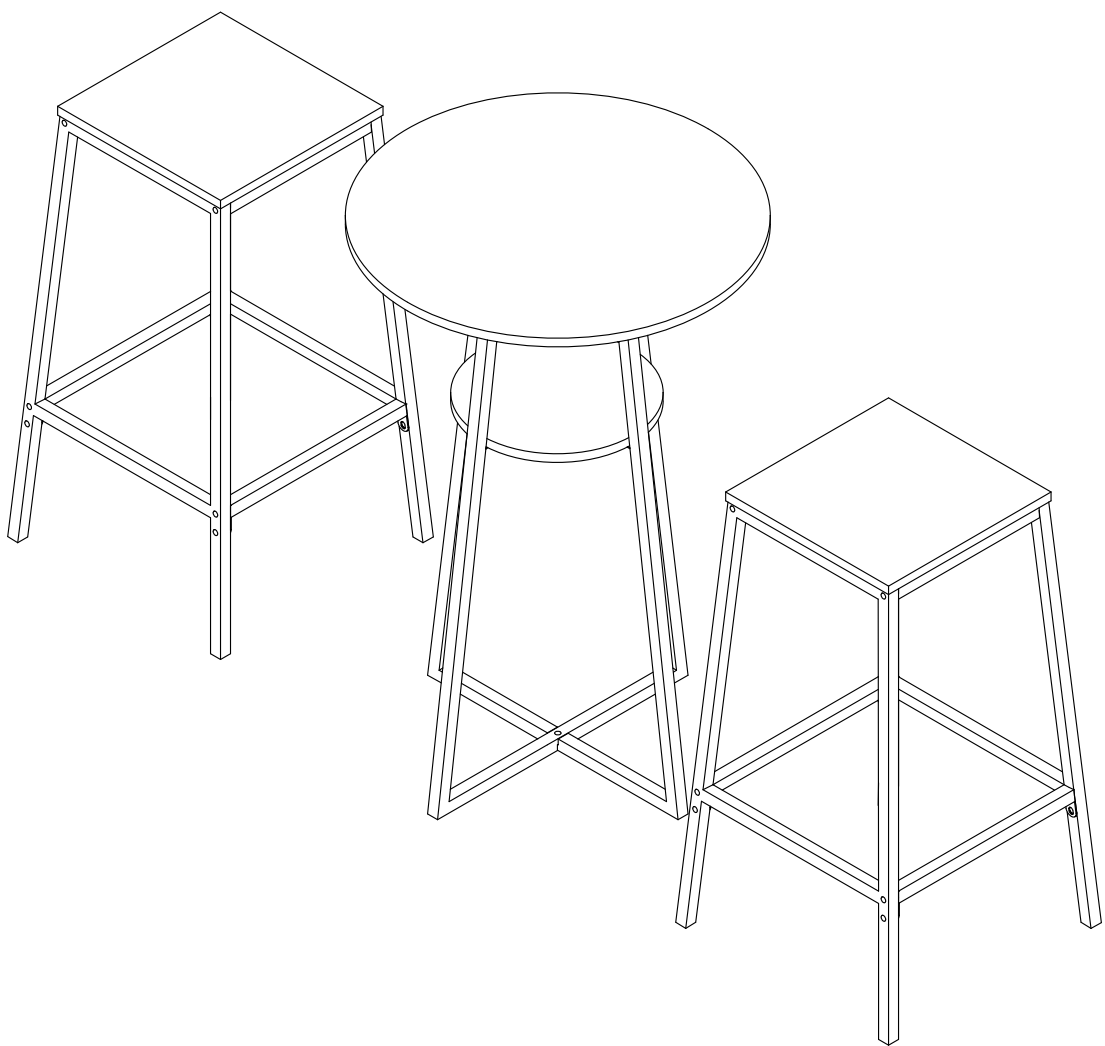
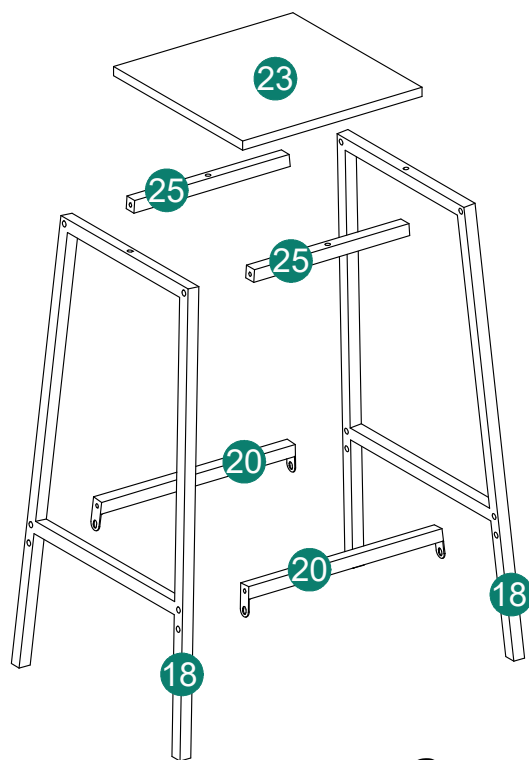



ASSEMBLY INSTRUCTION

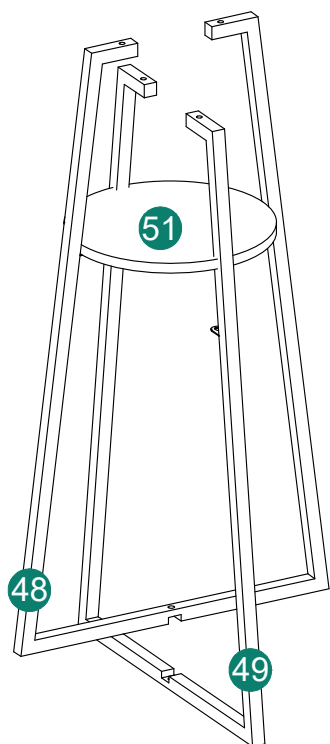

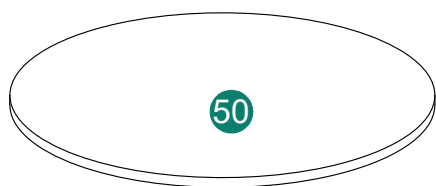


x2

18

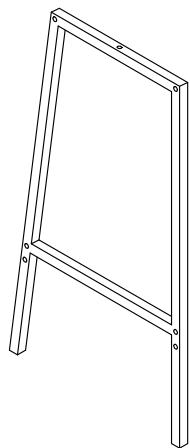


4PCS

20

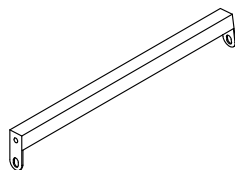


4PCS

23

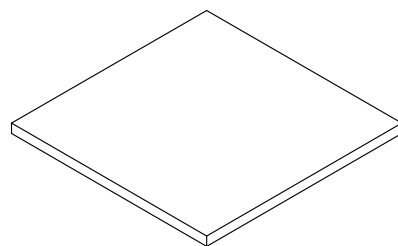


2PCS

25

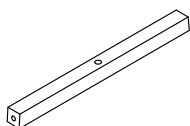


4PCS

48

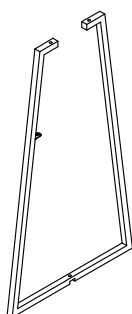


1PCS

49

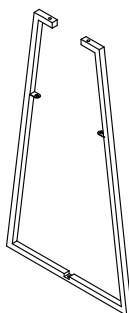


1PCS

50

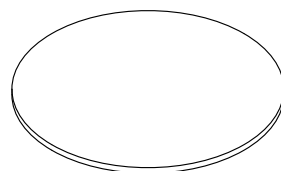


1PCS

51

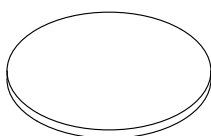

1PCS


A

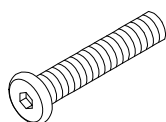

M6*40mm

16+1PCS


B



M6*30mm

20+2PCS


C



M6*12mm

4+1PCS

D




M6


8+1PCS

E

E1




E2





M6*16mm

1+1PCS

F






4+1PCS


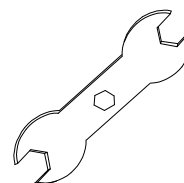


4mm


1

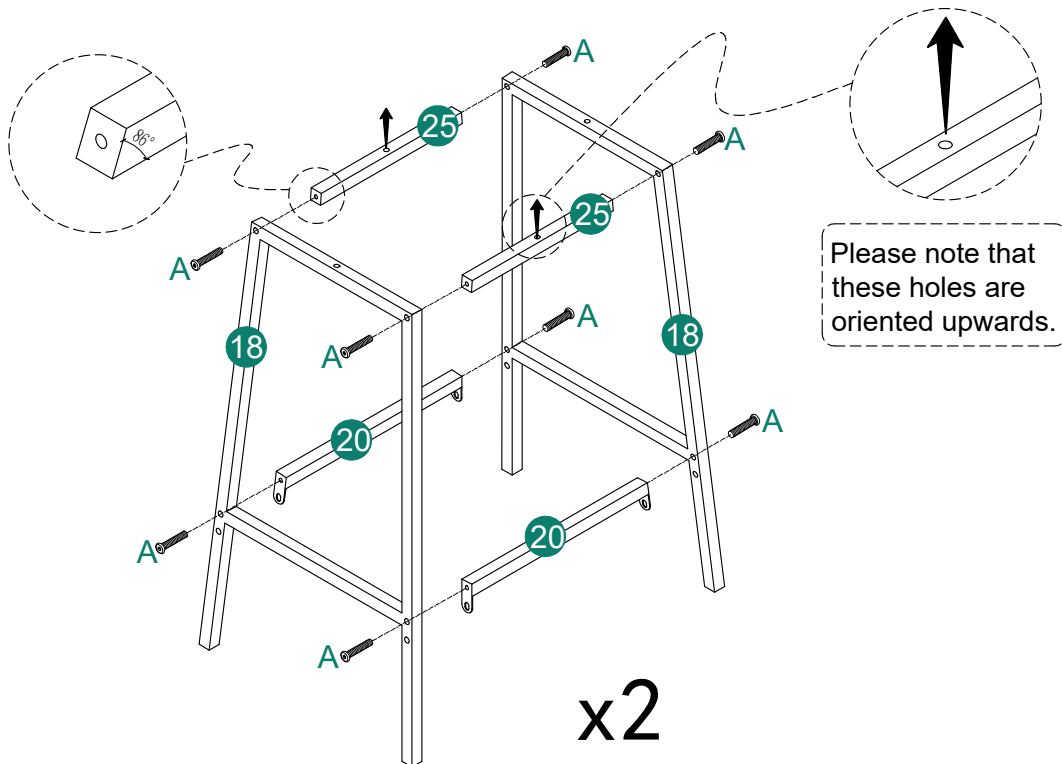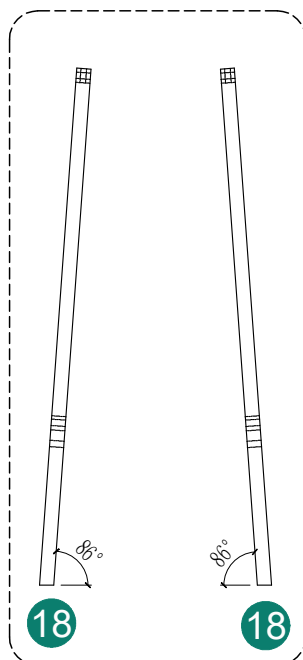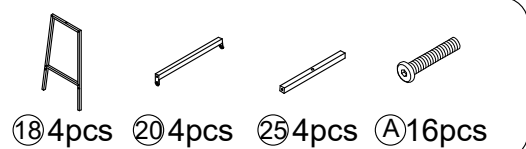

2

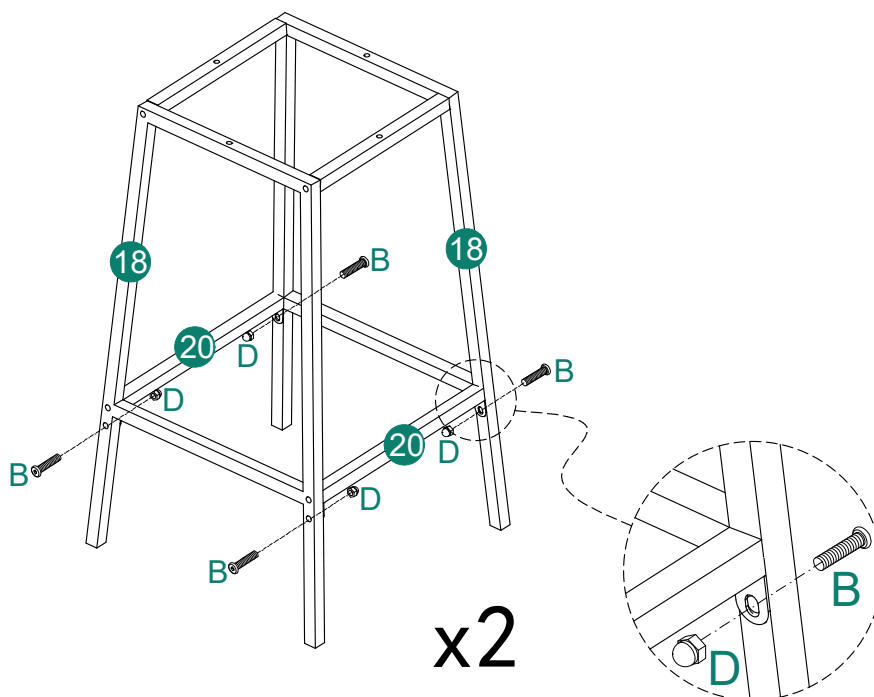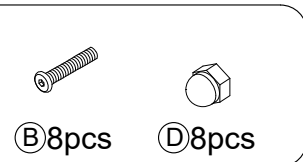


3



23 2pcs



B 8pcs

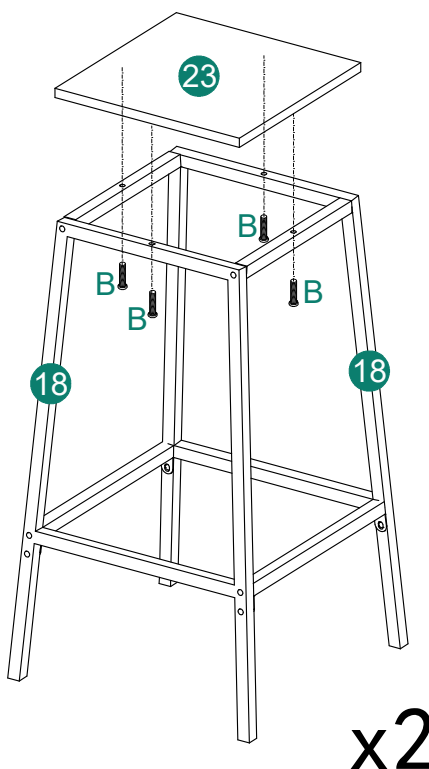

4



48 1pcs



49 1pcs



51 1pcs



C 4pcs





E1



E2

E 1pcs

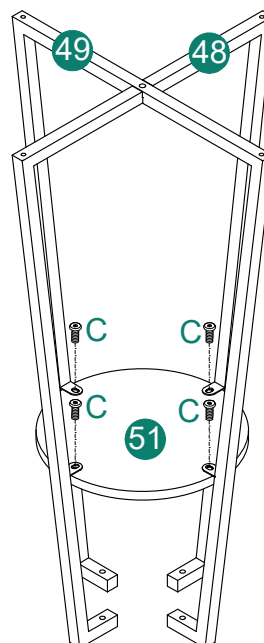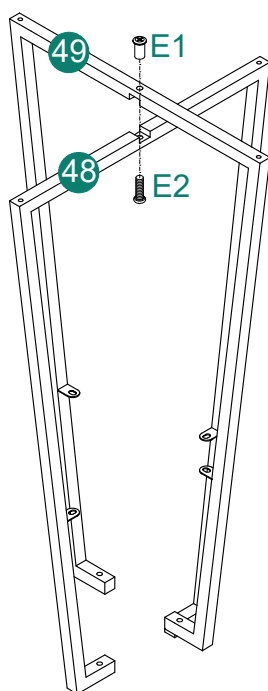

5





50 1pcs



B 4pcs



F 4pcs

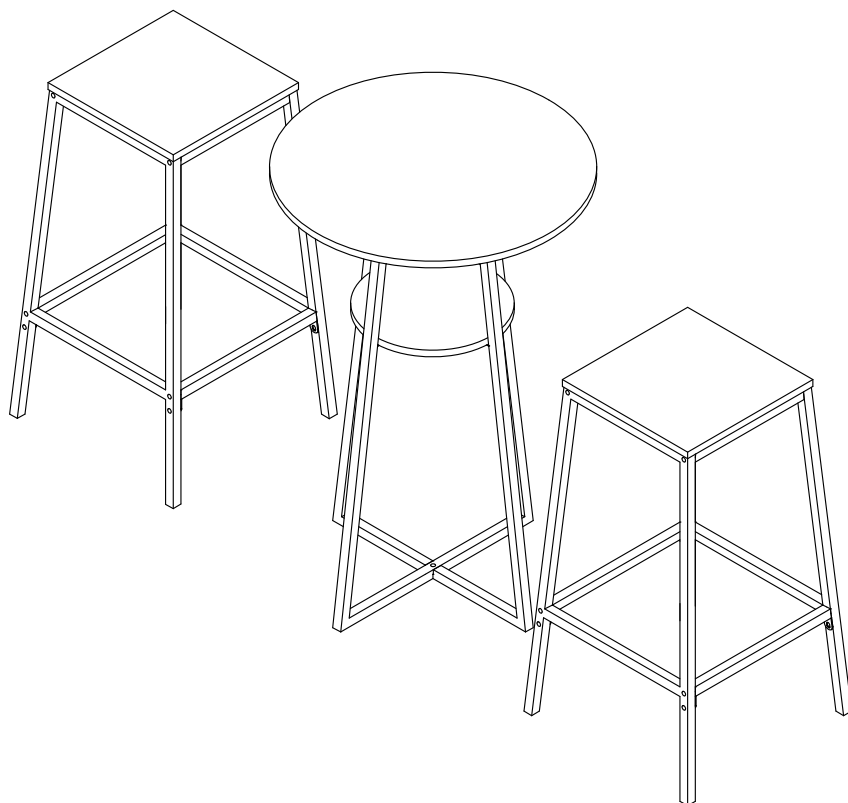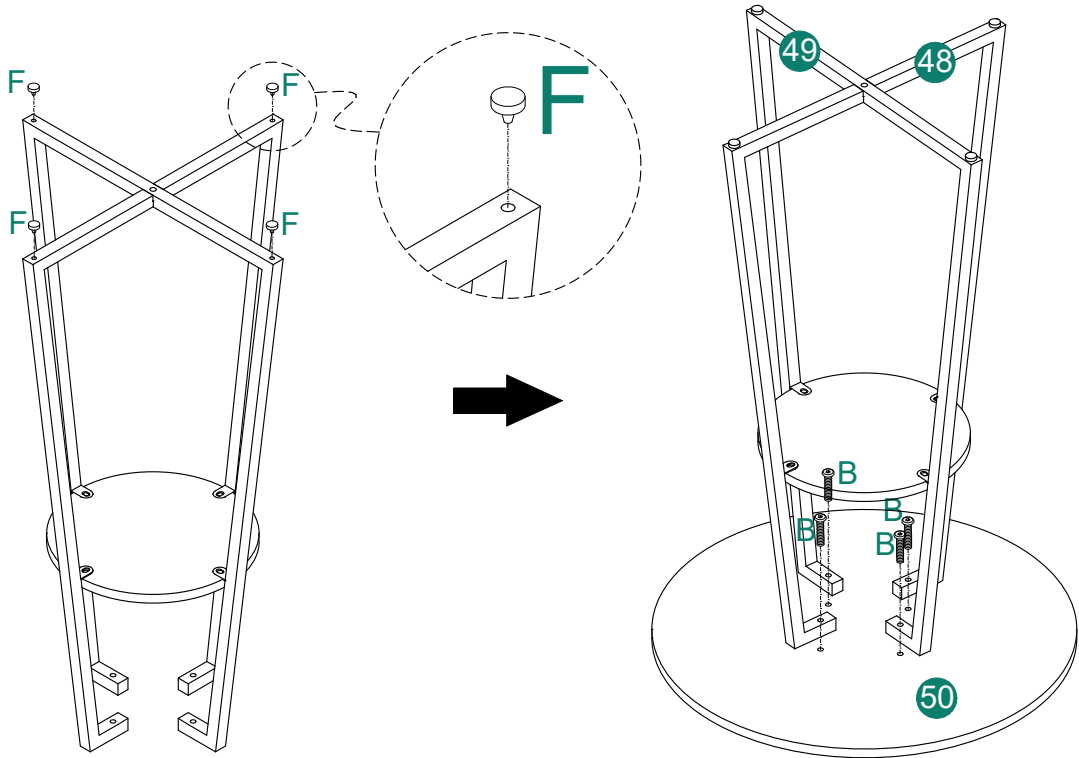

Installation Completed