

Outdoor Storage Shed


Assembly Guide



5 Hours



x 2

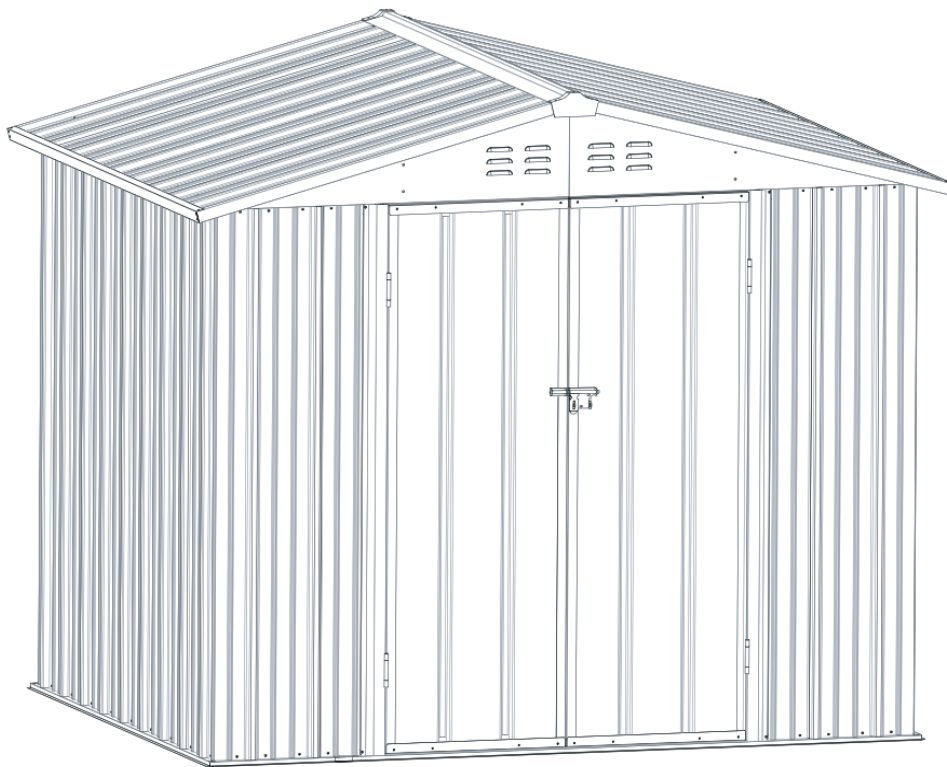




CUSTOMER FIRST, SERVICE FOREMOST!




QUESTIONS? ISSUES?

CONTACT US

REPLY WITHIN 24 HOURS IN BUSINESS DAYS


Exploded View

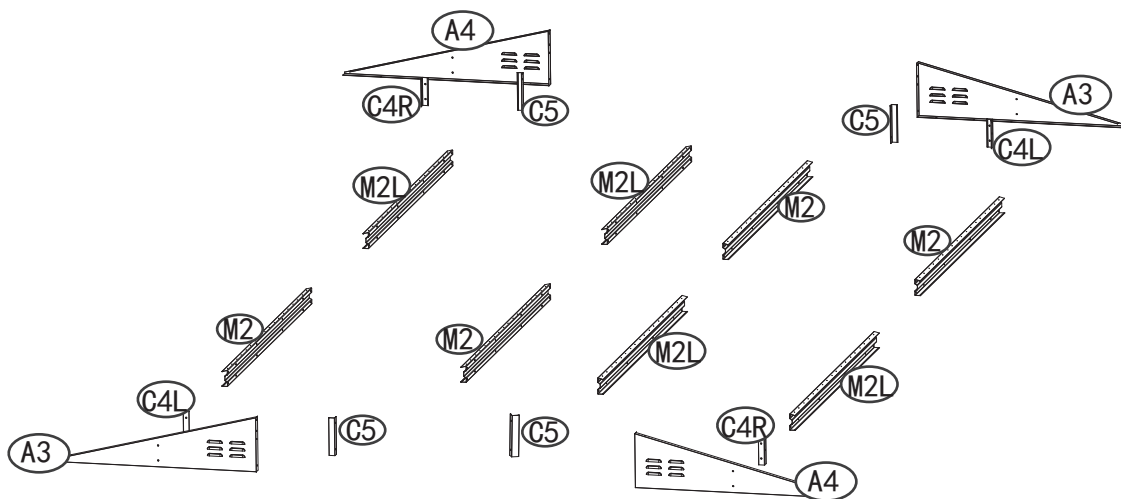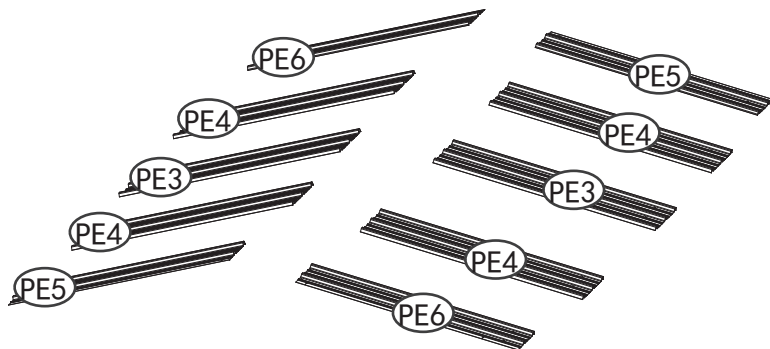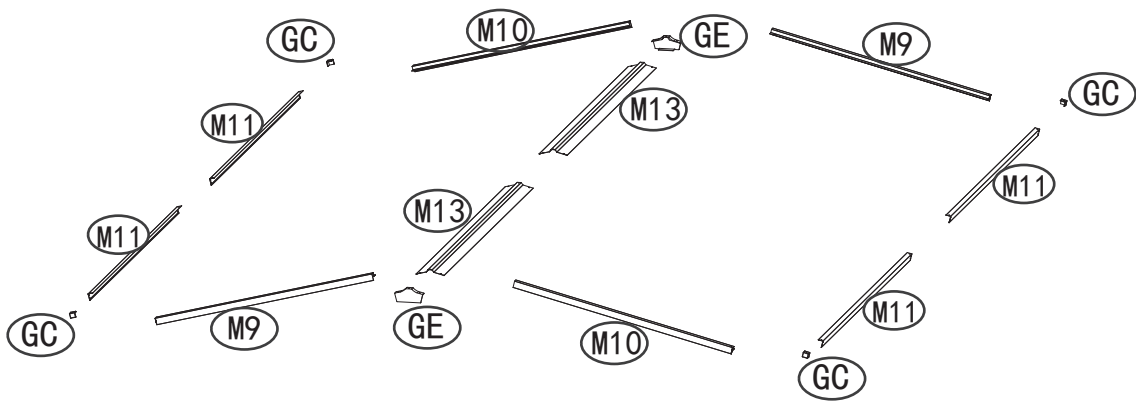

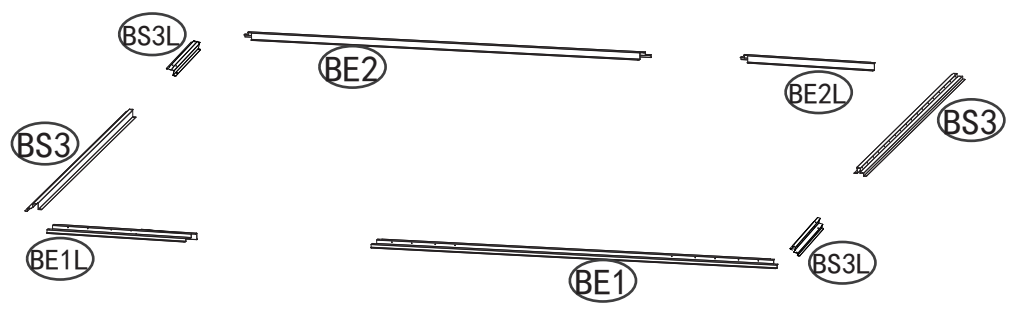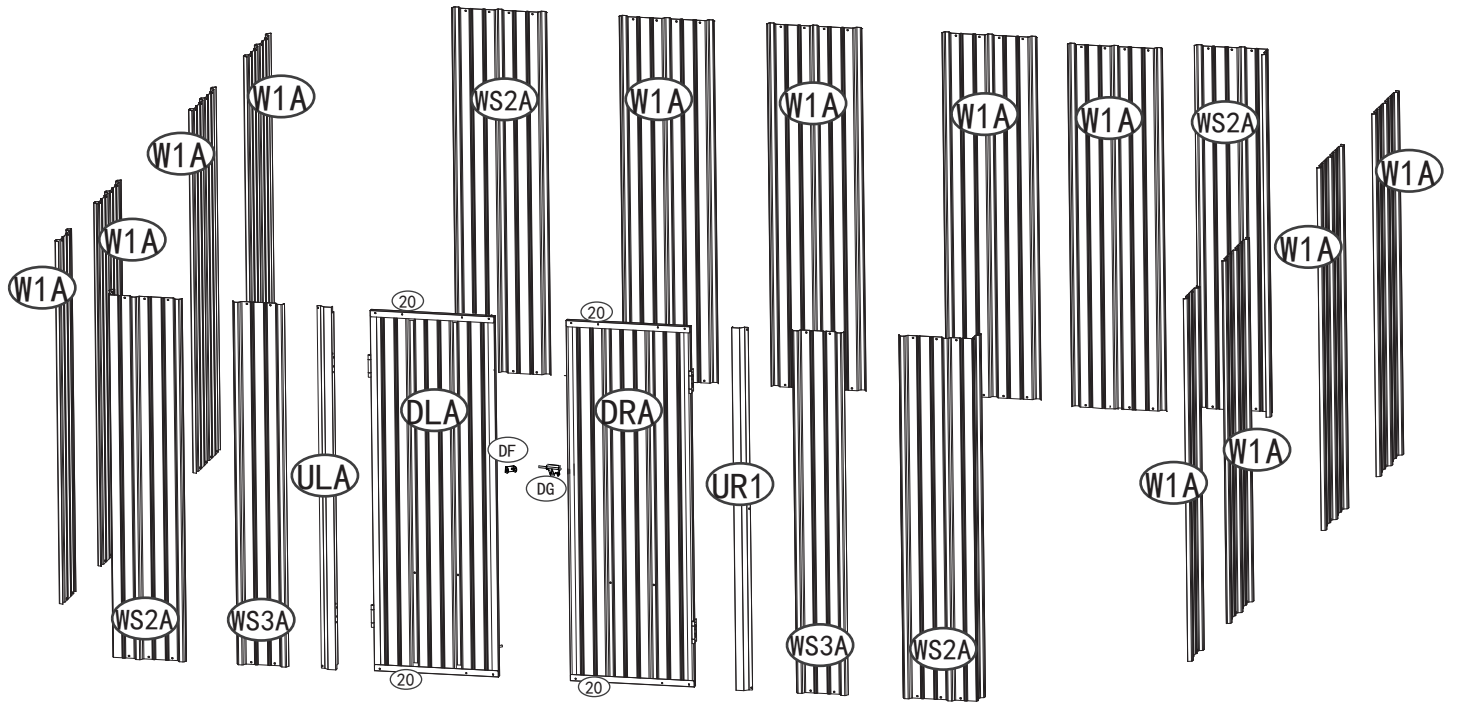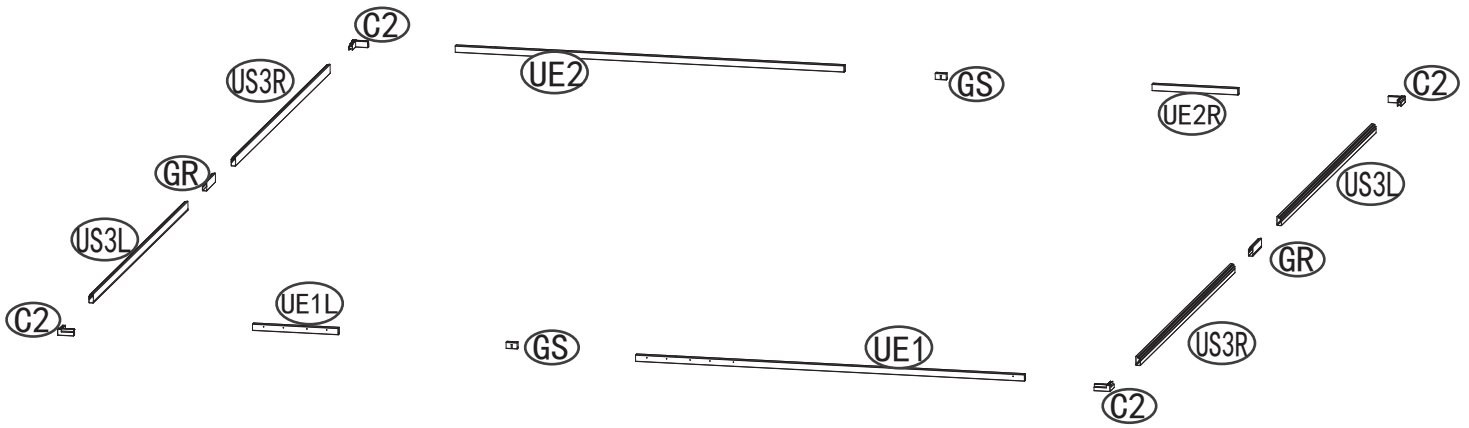


Thank you for purchasing this item, please read this instruction guide carefully before assembly and keep it for future reference.

WHAT DO YOU GET?

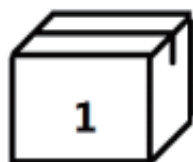

BOX 1

+

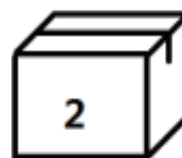

BOX 2

Attention: These 2 boxes may arrive at different times, please wait patiently.

THE TOOLS YOU NEED TO PREPARE



WARNING

- Remove all parts from the 2 boxes and sort them by number. Ensure all parts are present before assembly.
- Wear work gloves, long sleeves and safety goggles during assembly. Some components contain sharp edges that may cause damage.
- Set your drill's torque limit to prevent damage to the metal parts.
- Ensure ground stability is adequate when necessary to use a ladder. Never rest your entire weight on the roof or on any other part of the storage shed.
- Do not attempt to assemble the storage shed in strong windy conditions.
- Keep children and animals away from the assembly site.

NOTICE: If there is slight bending on the corners



- ① Pls wear gloves and stretch the corners slightly until they are flat















- ② Then the sheets will be normal and there is no effect to the assembling









Part list

The parts are stacked together for easier transportation. When you think something is missing, please try to separate every part first and check.

NO.	PART	Qty.
A3		2
A4		2
BE1		1
BE1L		1
BE2		1
BE2L		1
BS3		2
BS3L		2
C2		4
C5		4
C4R		2
C4L		2
DLA		1
DRA		1
UE1		1
UE1L		1
UE2		1
UE2R		1
US3L		2
US3R		2


NO.	PART	Qty.
ULA		1
UR1		1
DC		2
V1		50
V2		309
20		4
DG		1
F6	 M10X100	4
F7		4
LOOK		1



Part list

NO.	PART	Qty.
W1A		12
WS2A		4
WS3A		2
PE3		2
PE5		2
PE6		2
PE4		4
M2		4
M2L		4
M13		2
M9		2
M10		2
M11		4
GC		4
GE		2
GS		2
GR		2

NO.	PART	Qty.
F1		335
F2		44
F3		32
DH		4
DX2		4
F4		5
DF		1


Step 1


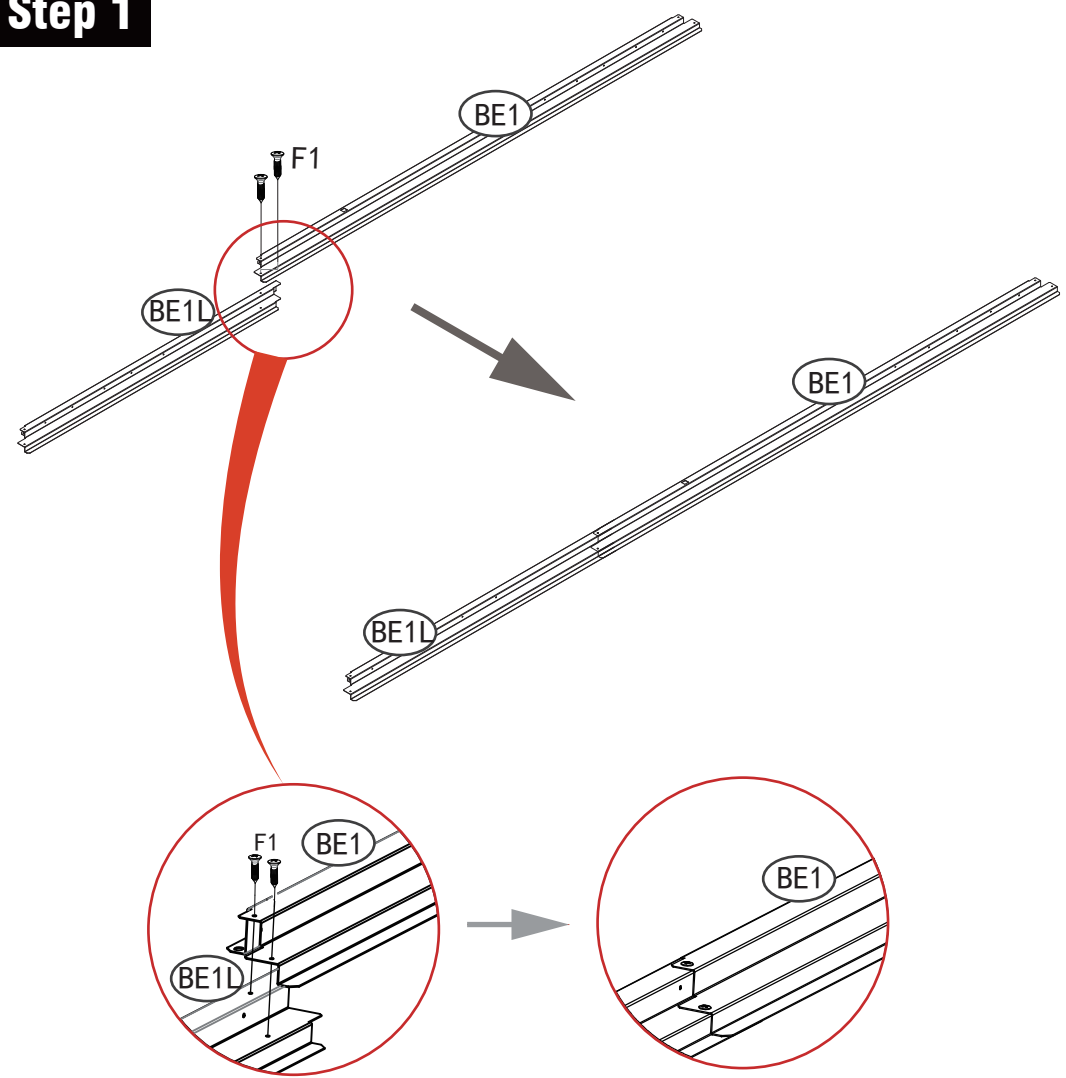


BE1

1 PC
BE1L

1 PC
F1

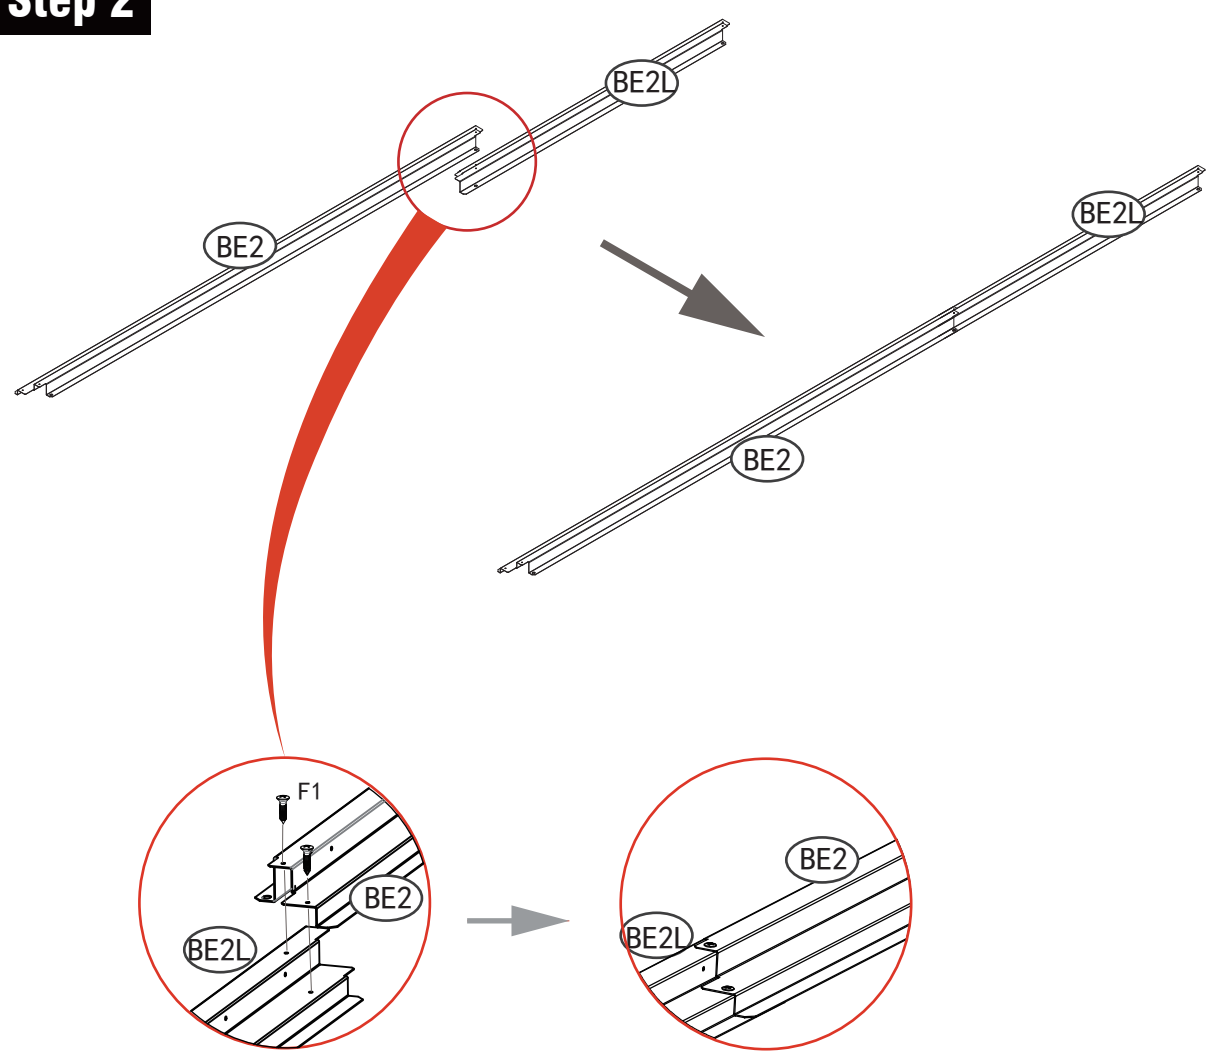2 PC


Step 2




BE2

1 PC
BE2L

1 PC
F1

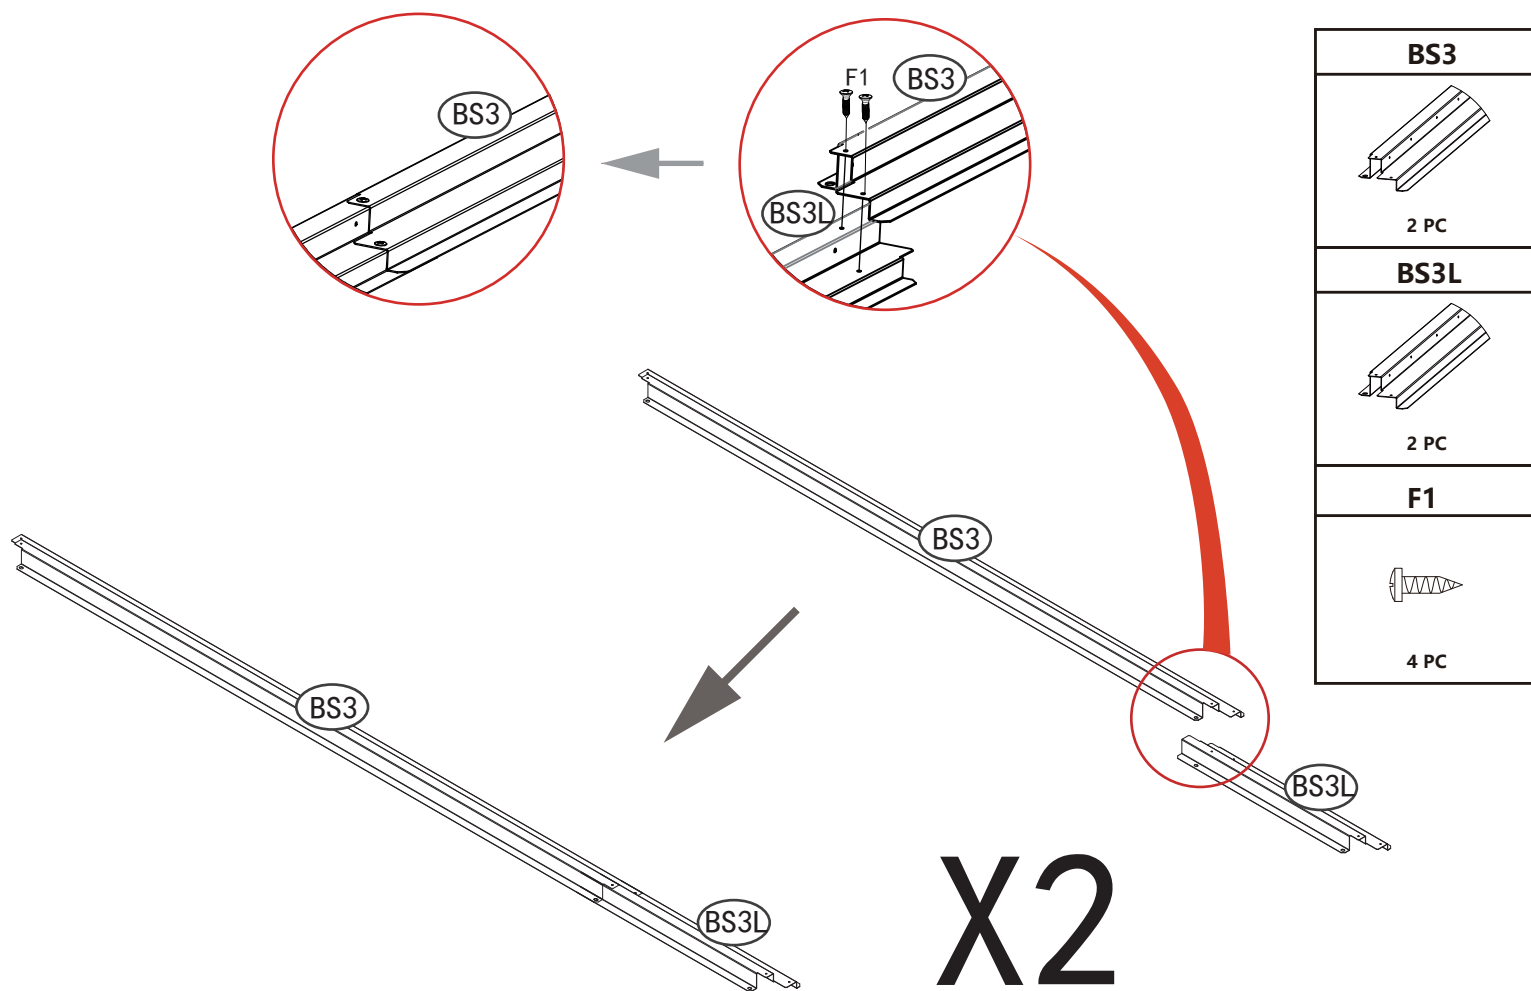2 PC


Step 3

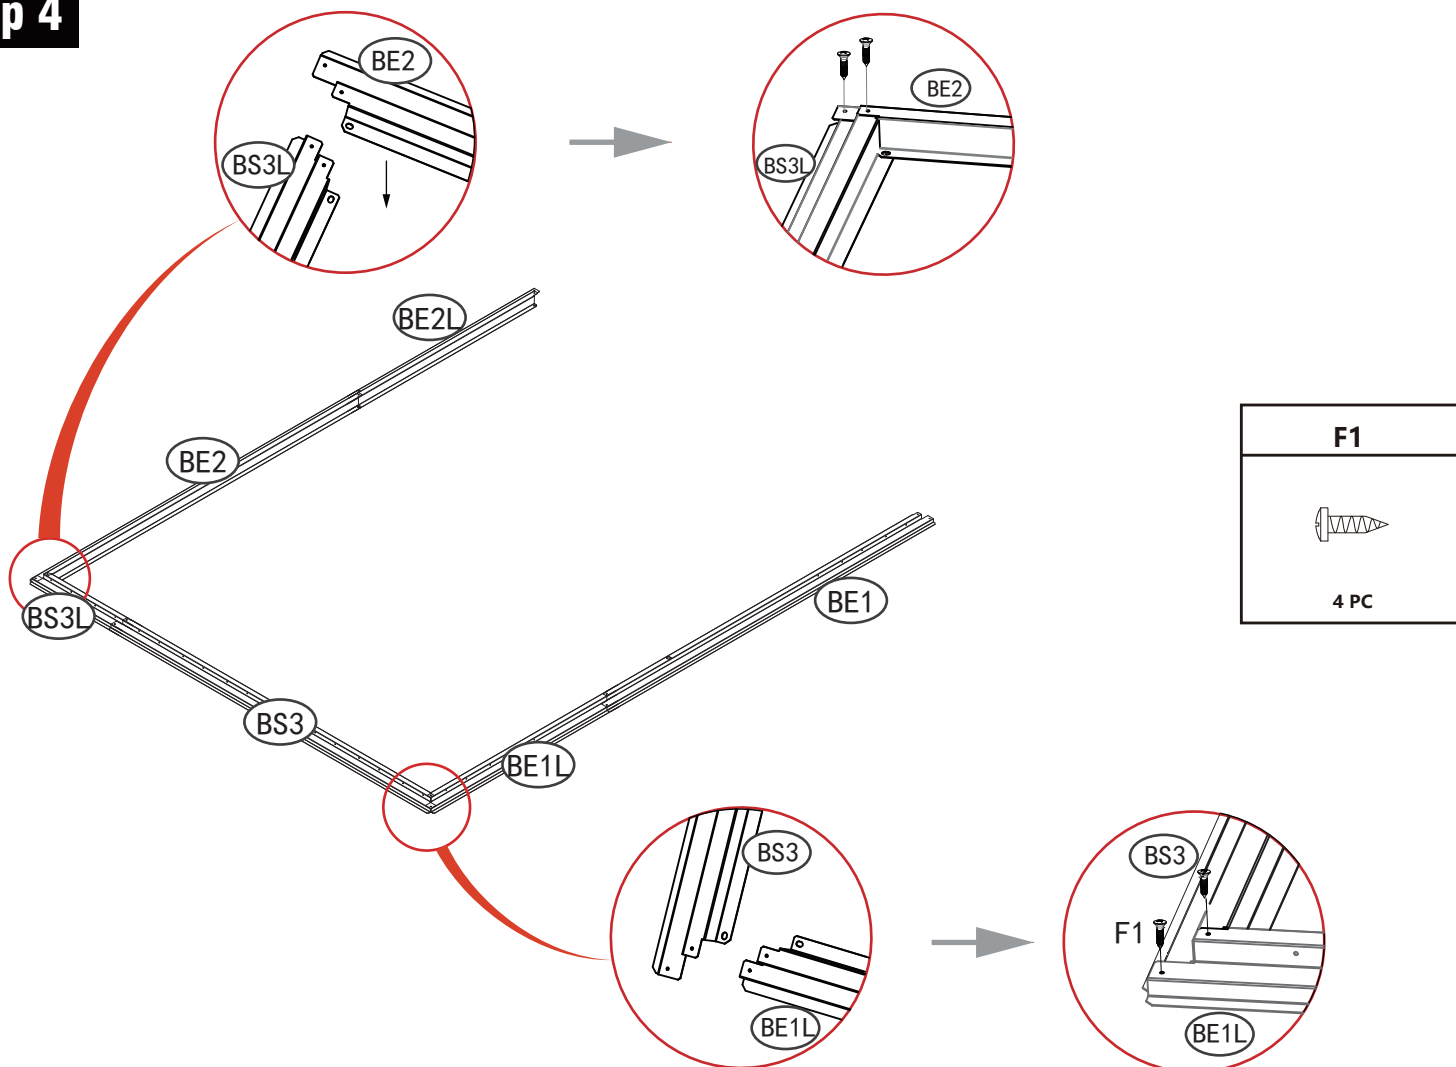


Step 4




Step 5

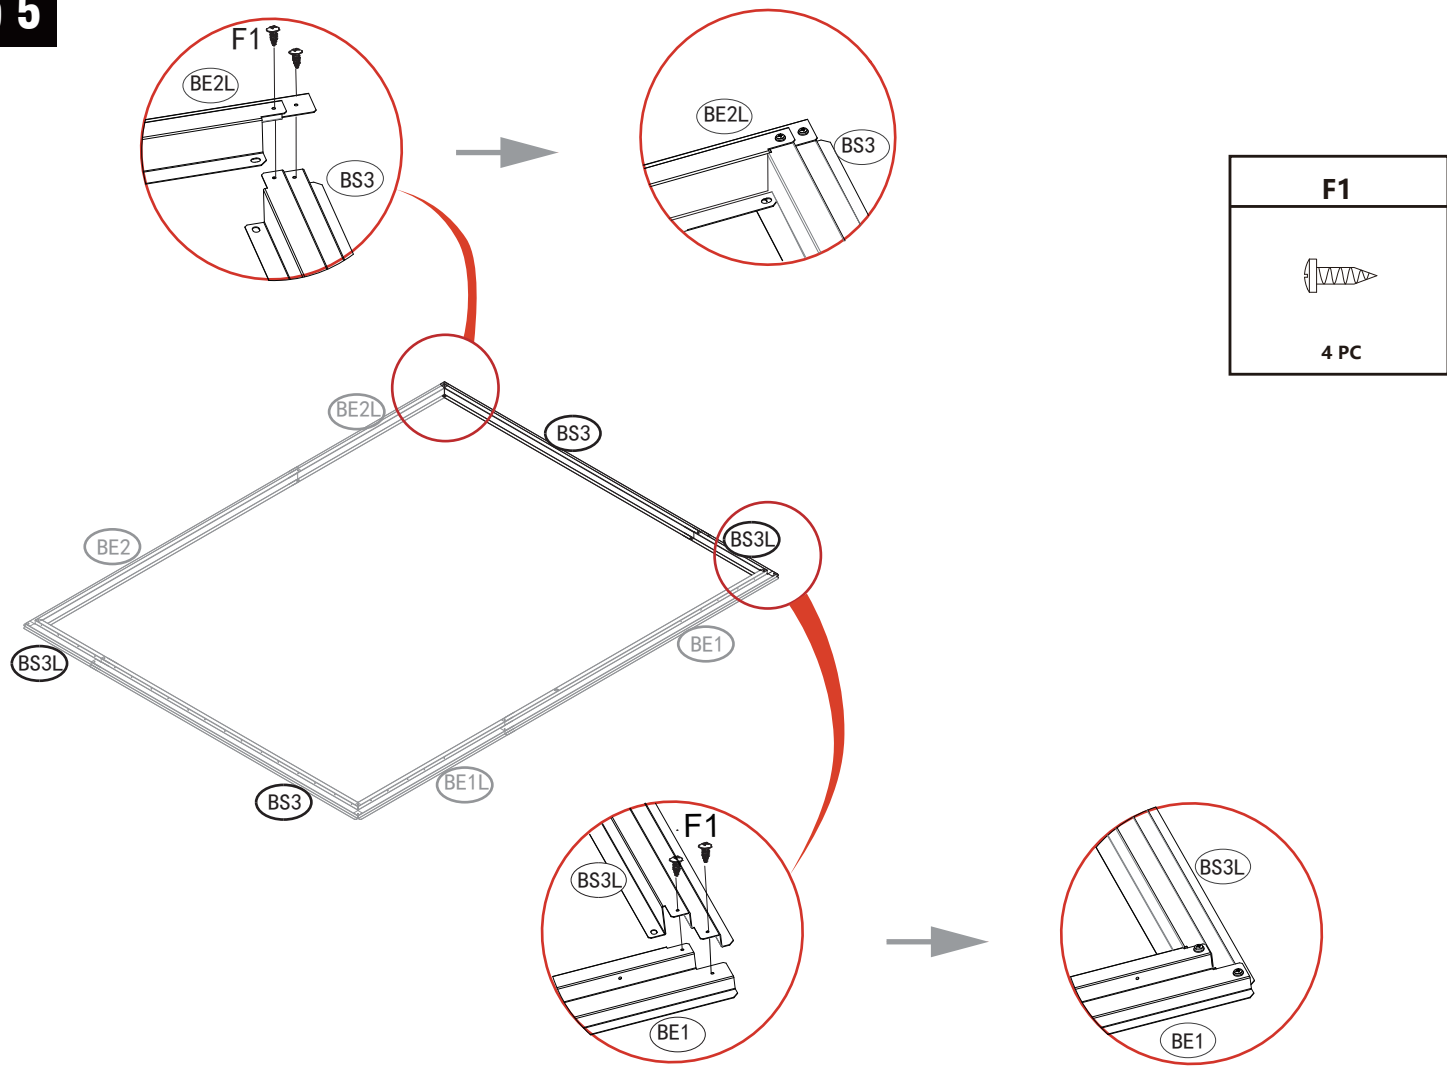


Step 6

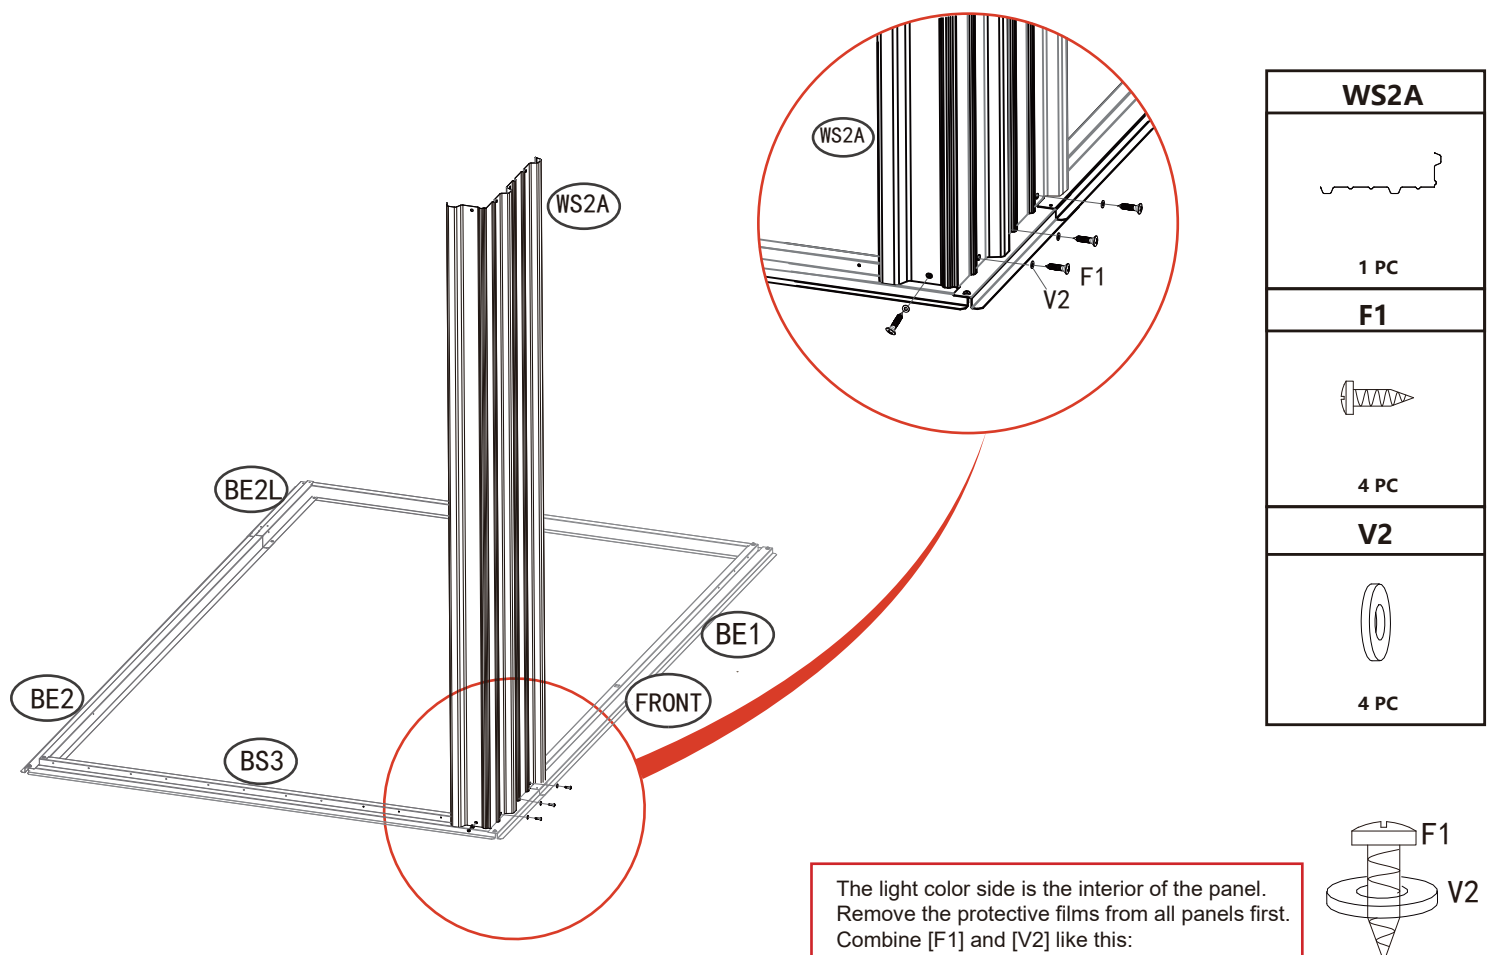

The light color side is the interior of the panel. Remove the protective films from all panels first. Combine [F1] and [V2] like this:

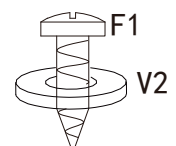

Step 7

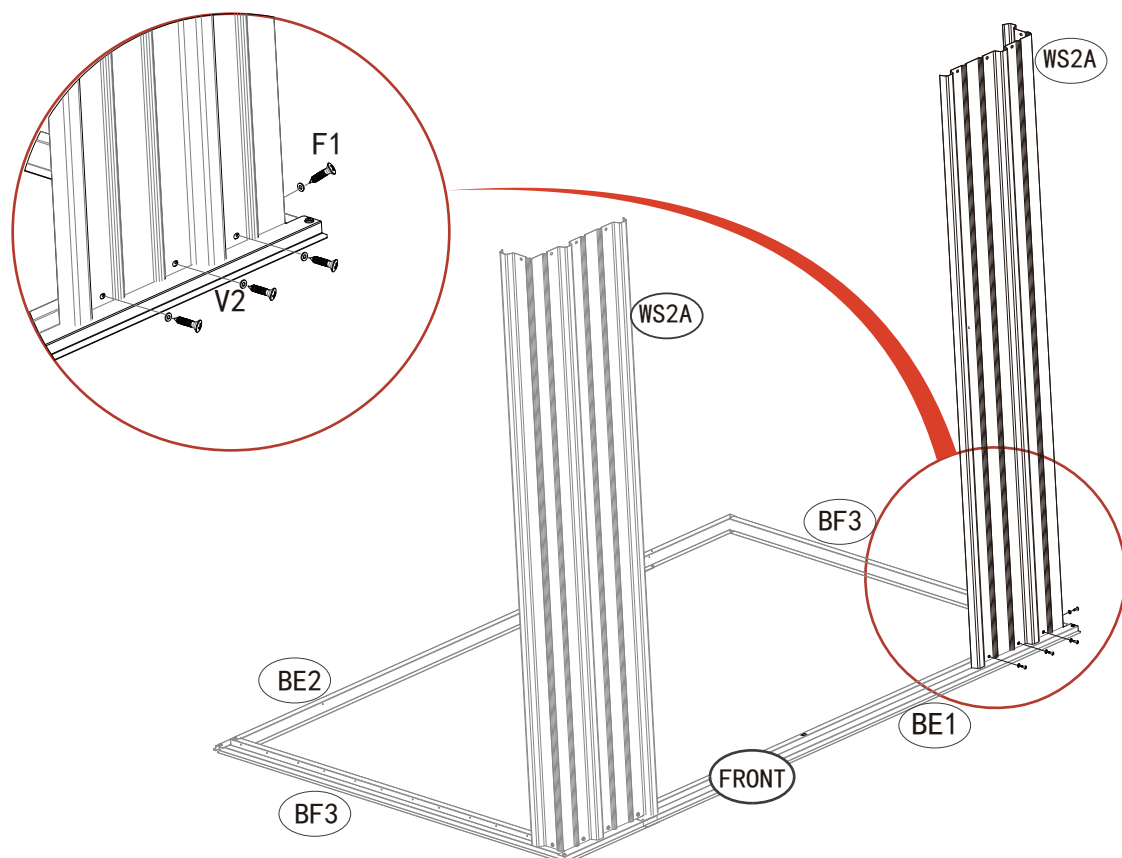


WS2A

1 PC
F1

4 PC
V2

4 PC

Step 8

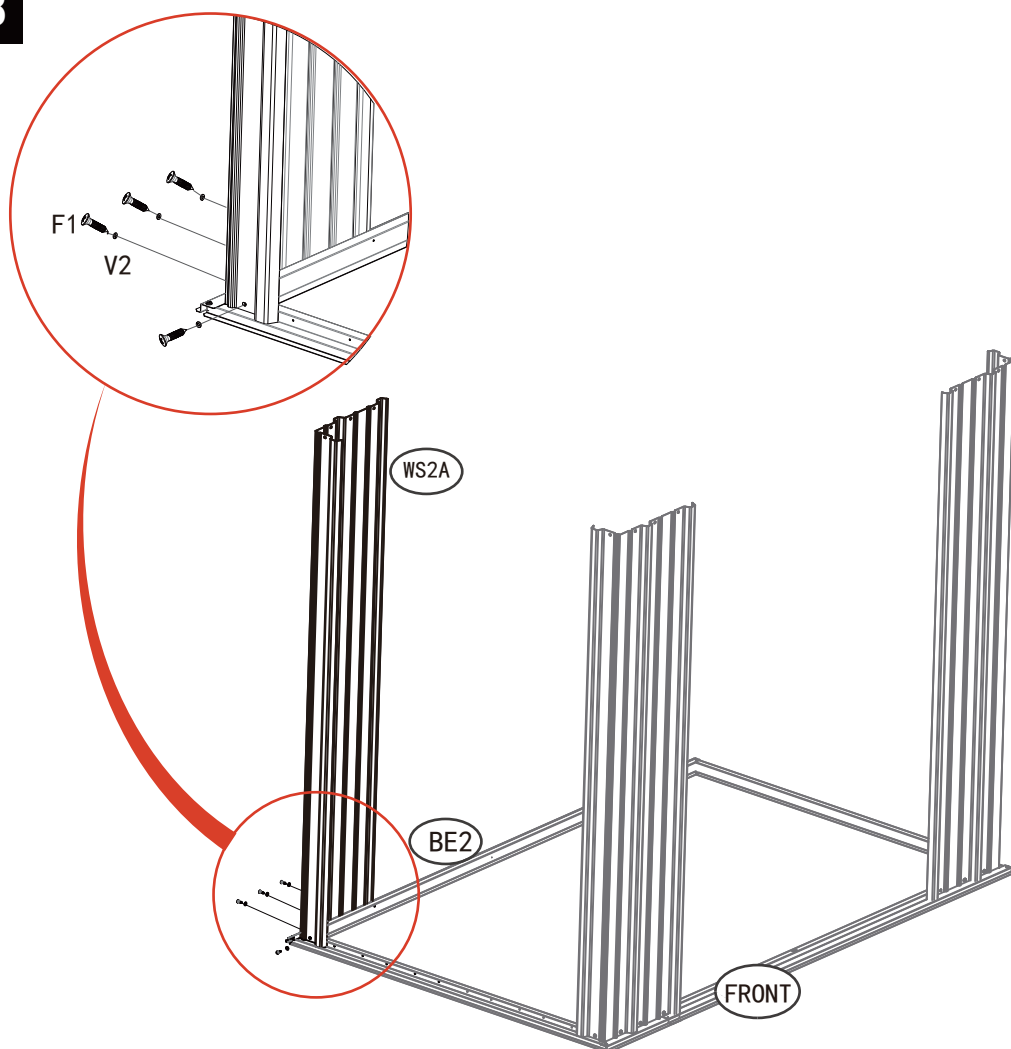



WS2A

1 PC
F1

4 PC
V2

4 PC

Step 9

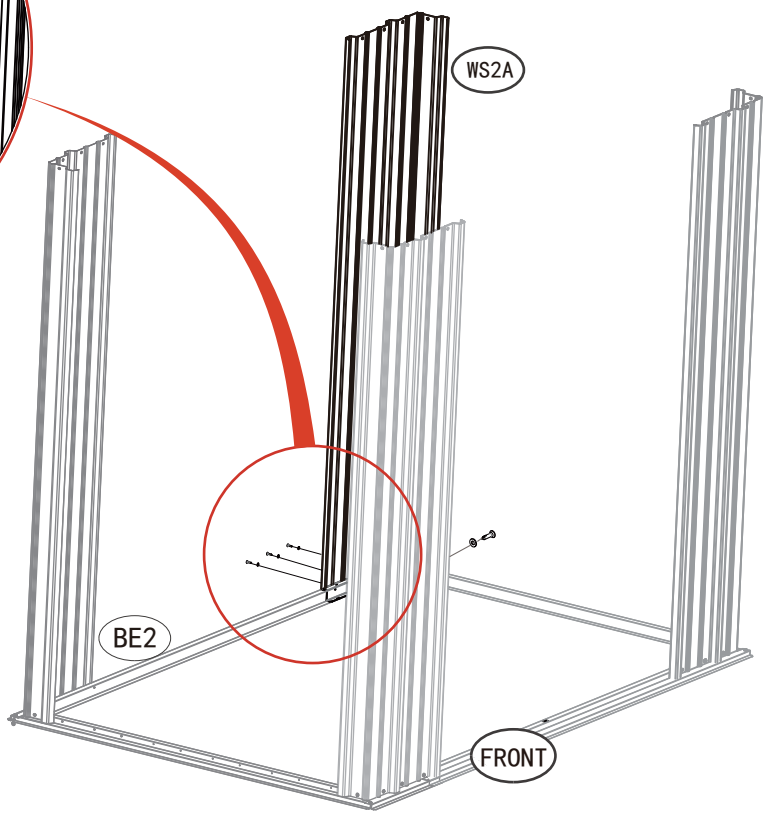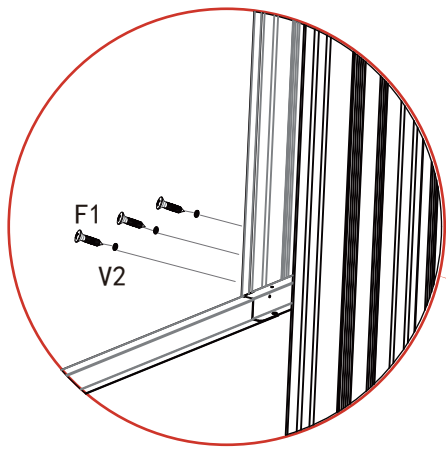





WS2A

1 PC
F1

4 PC
V2

4 PC

Step 10

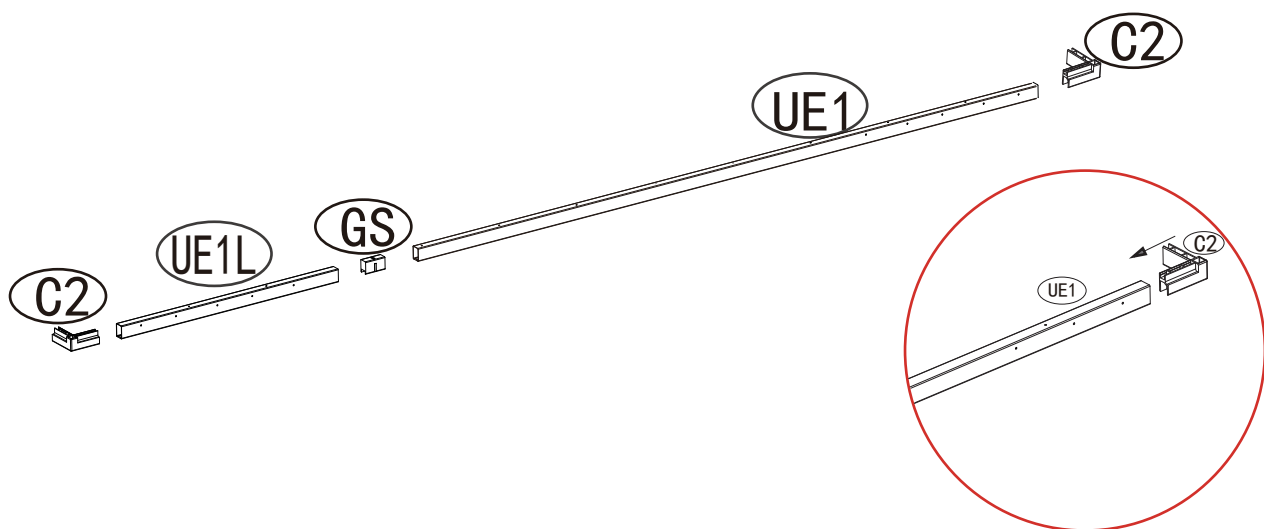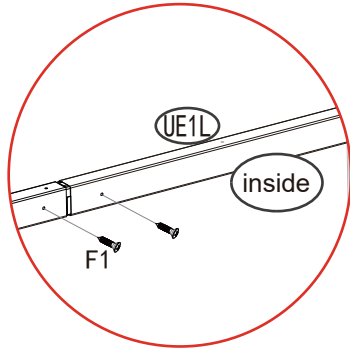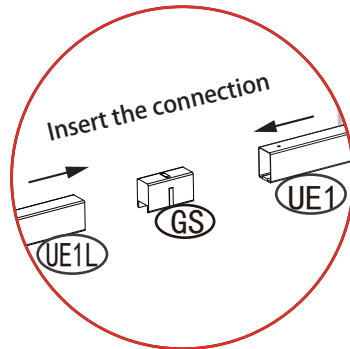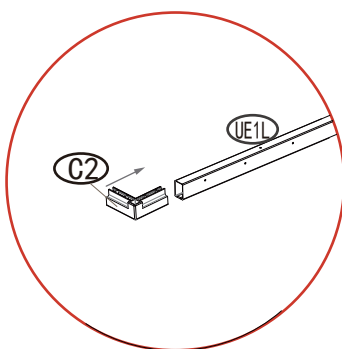

UE1L

1 PC
UE1


1 PC
C2

2 PC
GS

1 PC
F1

2 PC

Step 11

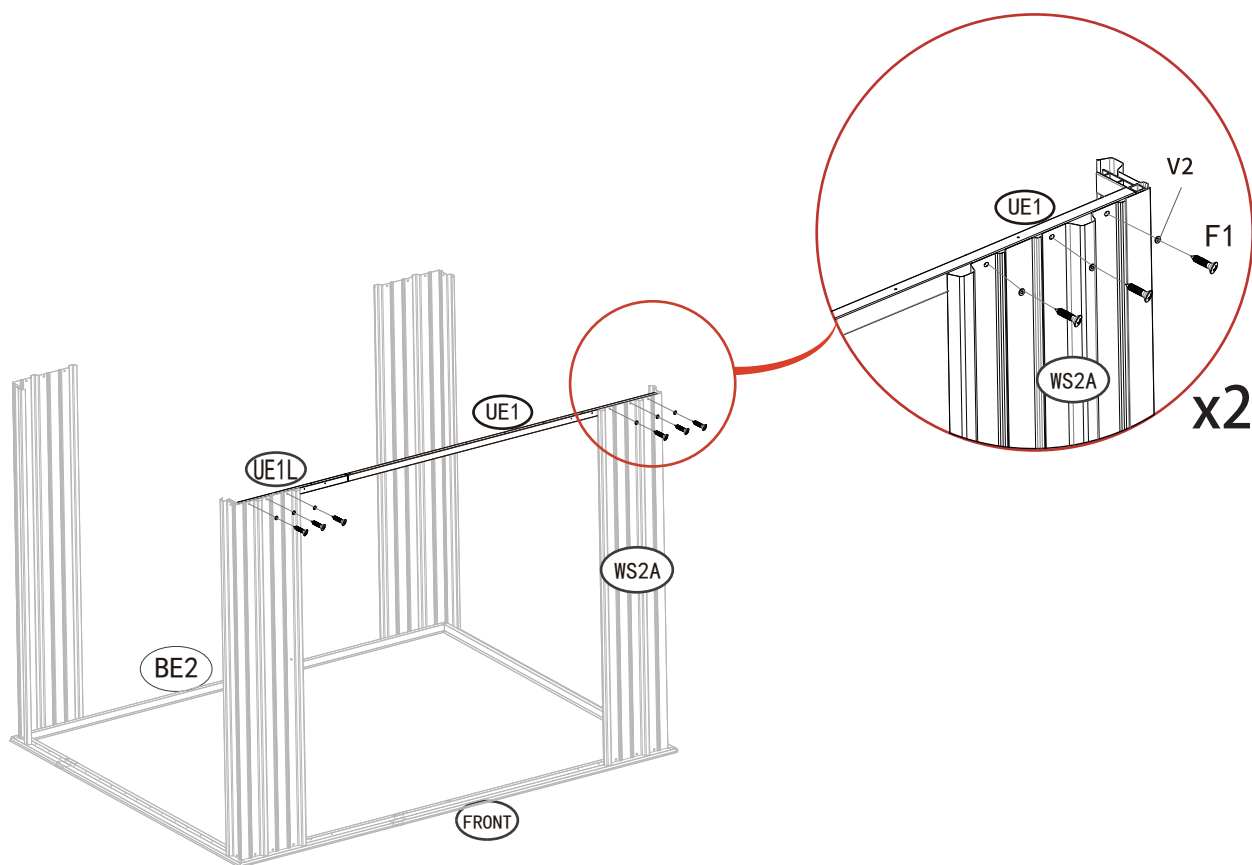


F1

6 PC
V2

6 PC

Step 12

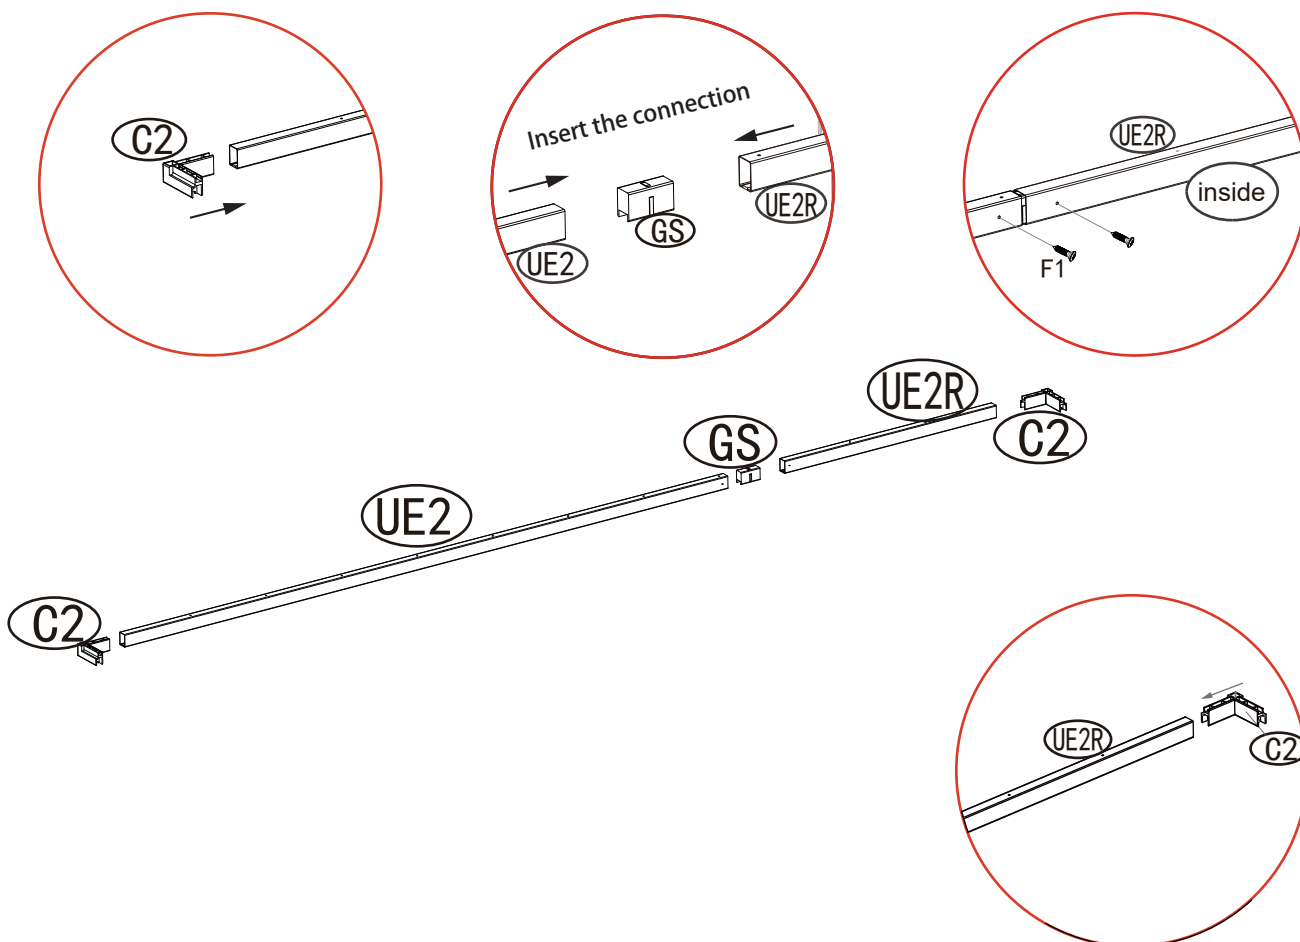

UE2R

1 PC
UE2


1 PC
C2

2 PC
GS

1 PC
F1

2 PC

Step 13

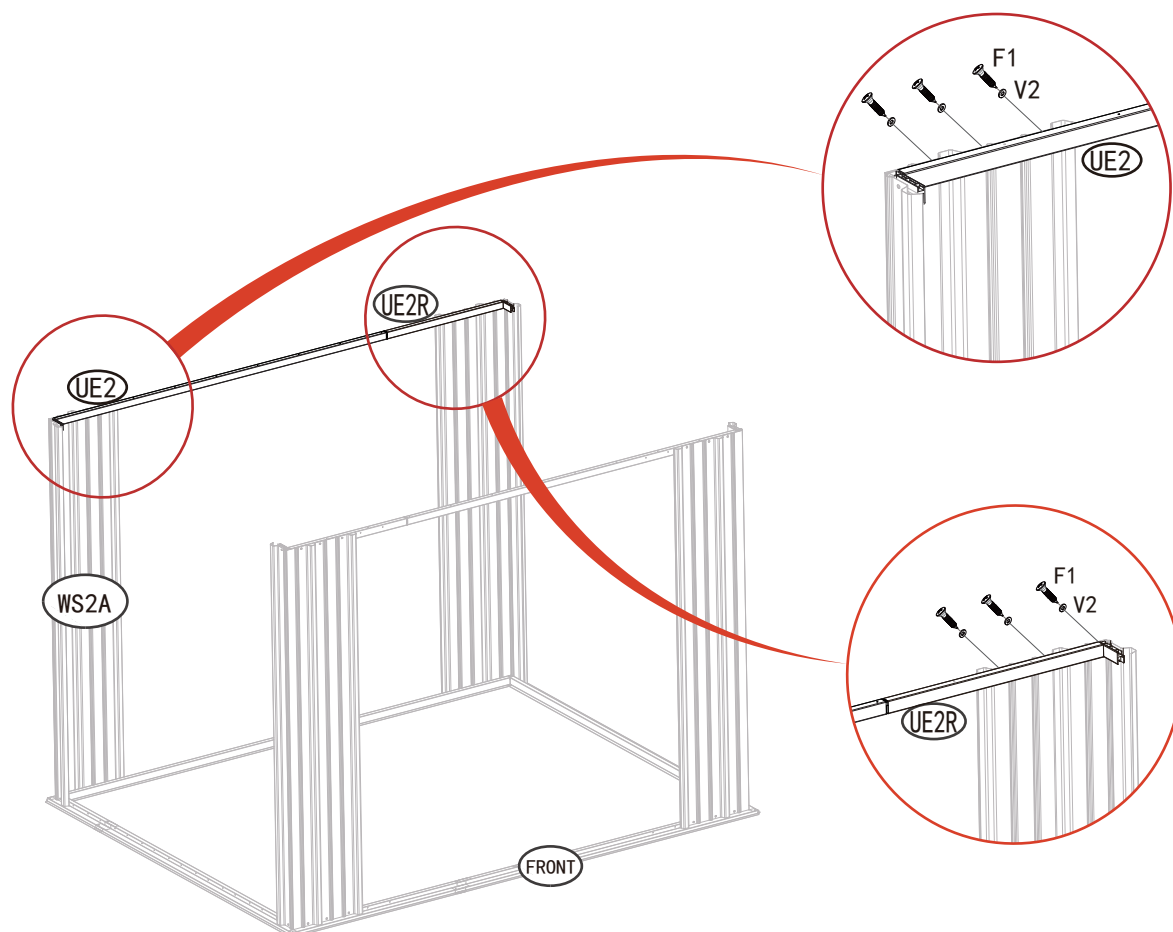


F1

6 PC
V2

6 PC

Step 14

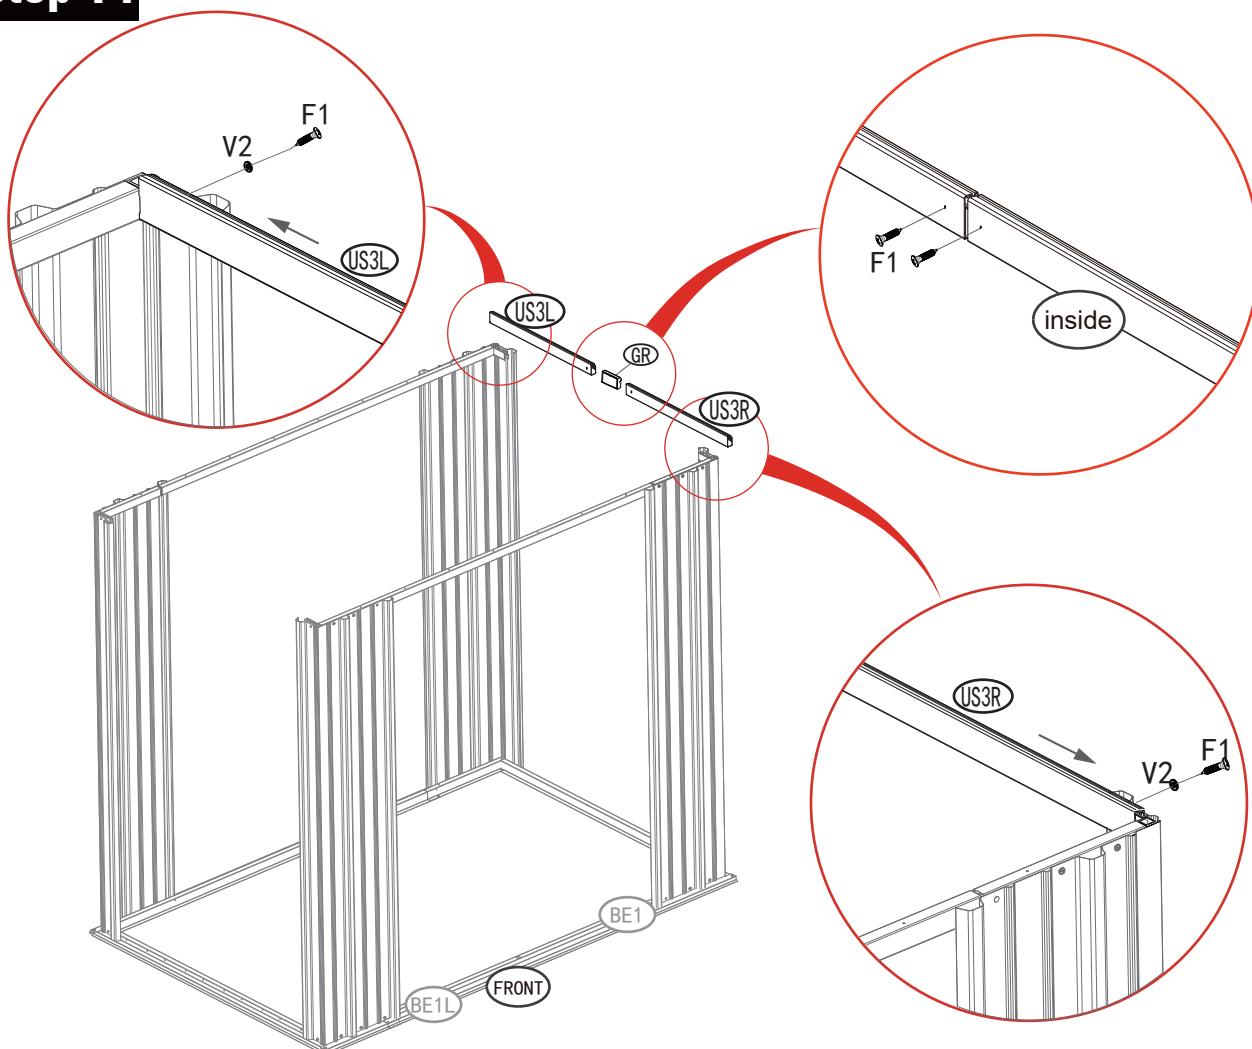

US3L

1 PC
US3R


1 PC
GR

1 PC
F1

4 PC
V2


2 PC

Step 15

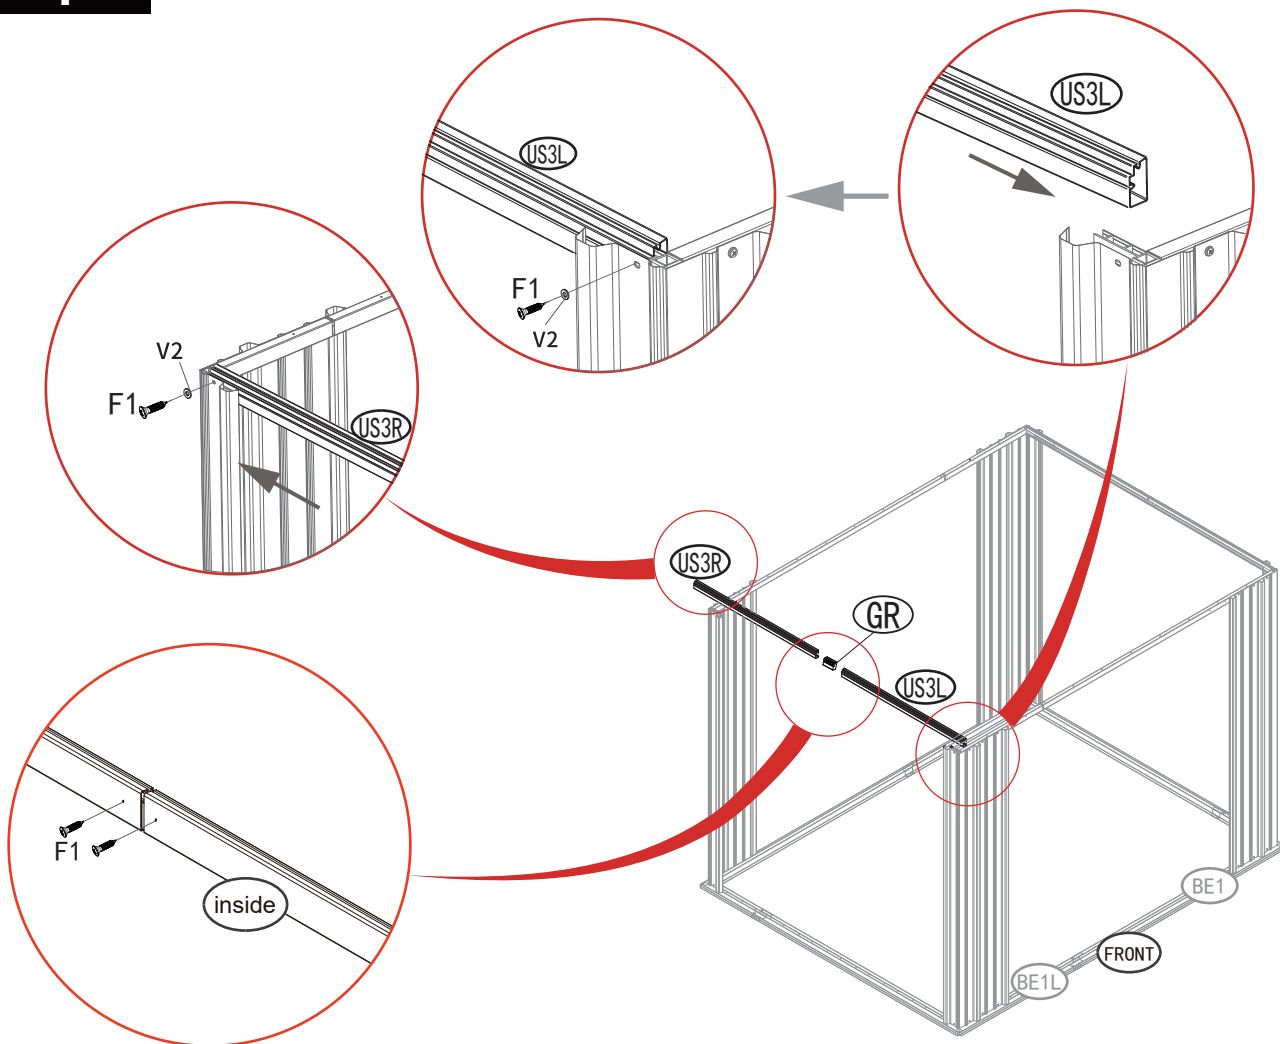


US3L
1 PC
US3R
1 PC
GR
1 PC
F1
4 PC
V2
2 PC


Step 16

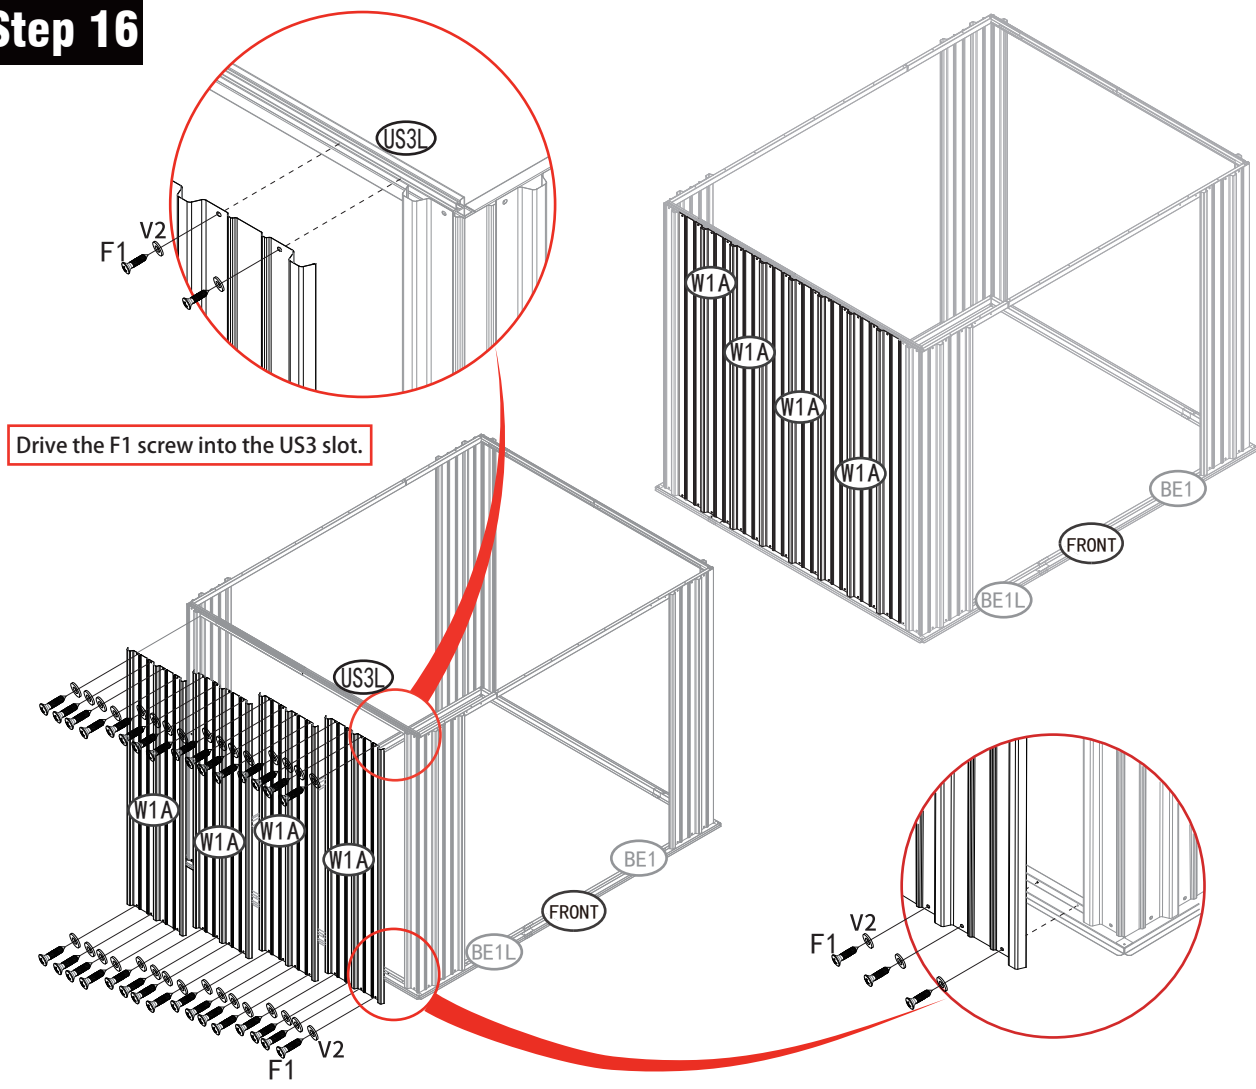


W1A
4 PC
F1
32 PC
V2
32 PC


Step 17

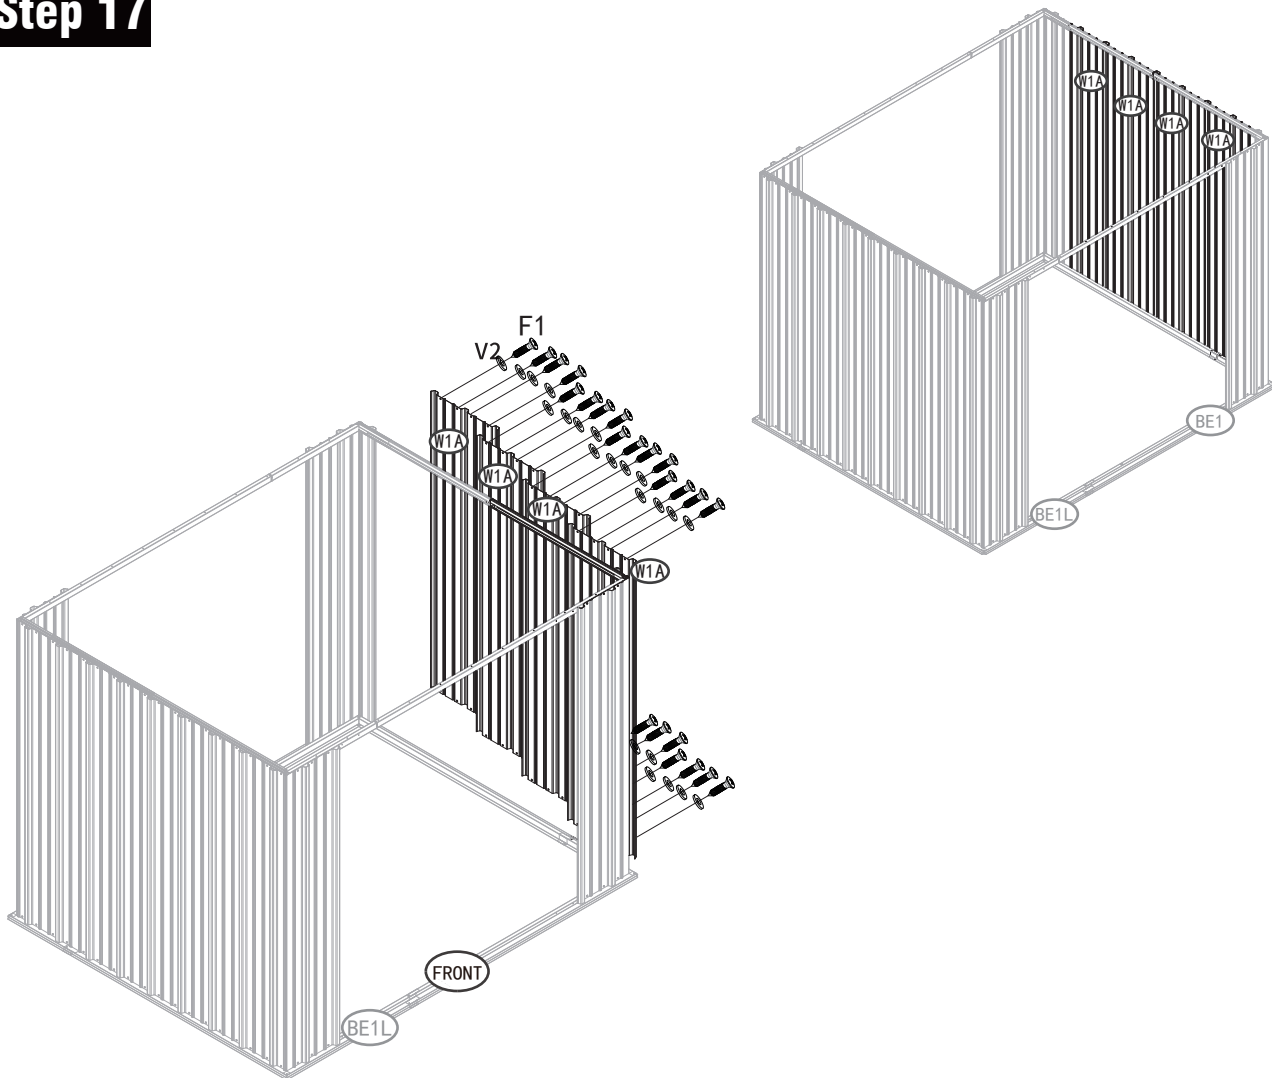


W1A
 4 PC
F1
 32 PC
V2
 32 PC


Step 18

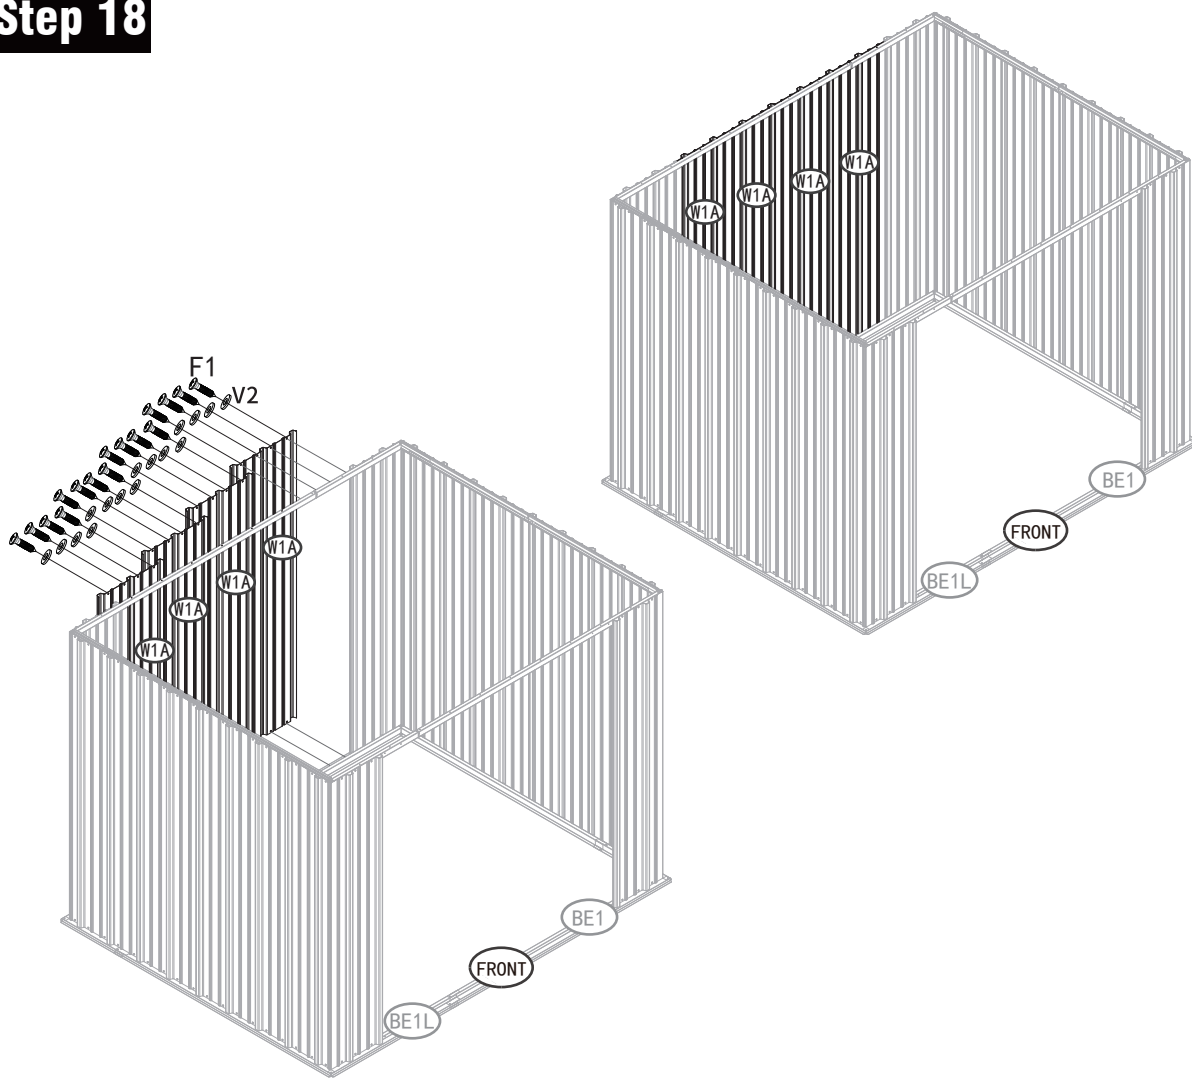

W1A
 4 PC
F1
 32 PC
V2
 32 PC

Step 19

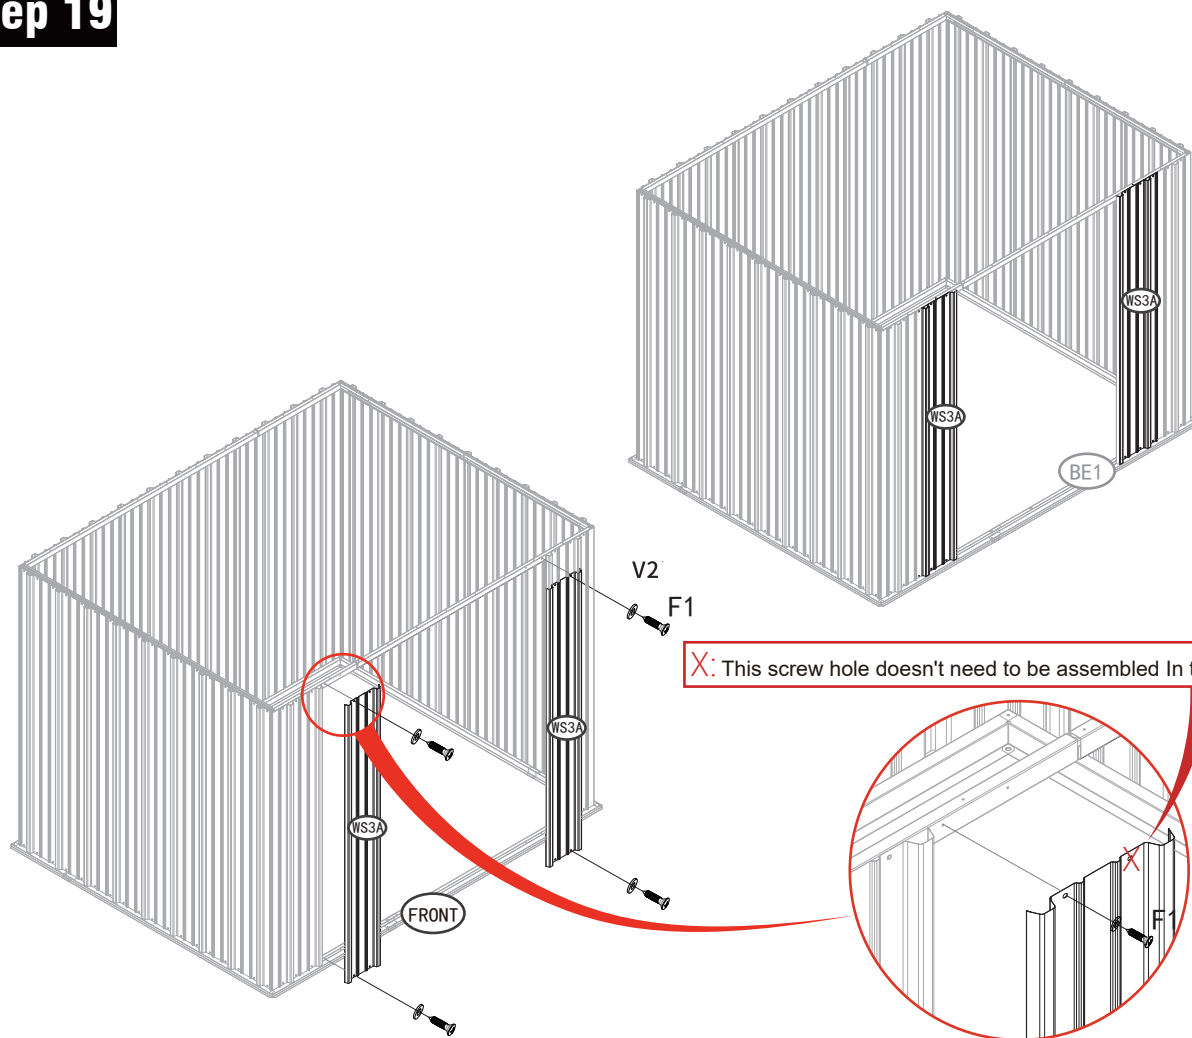


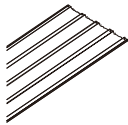WS3A

1 PC
F1

4 PC
V2

4 PC

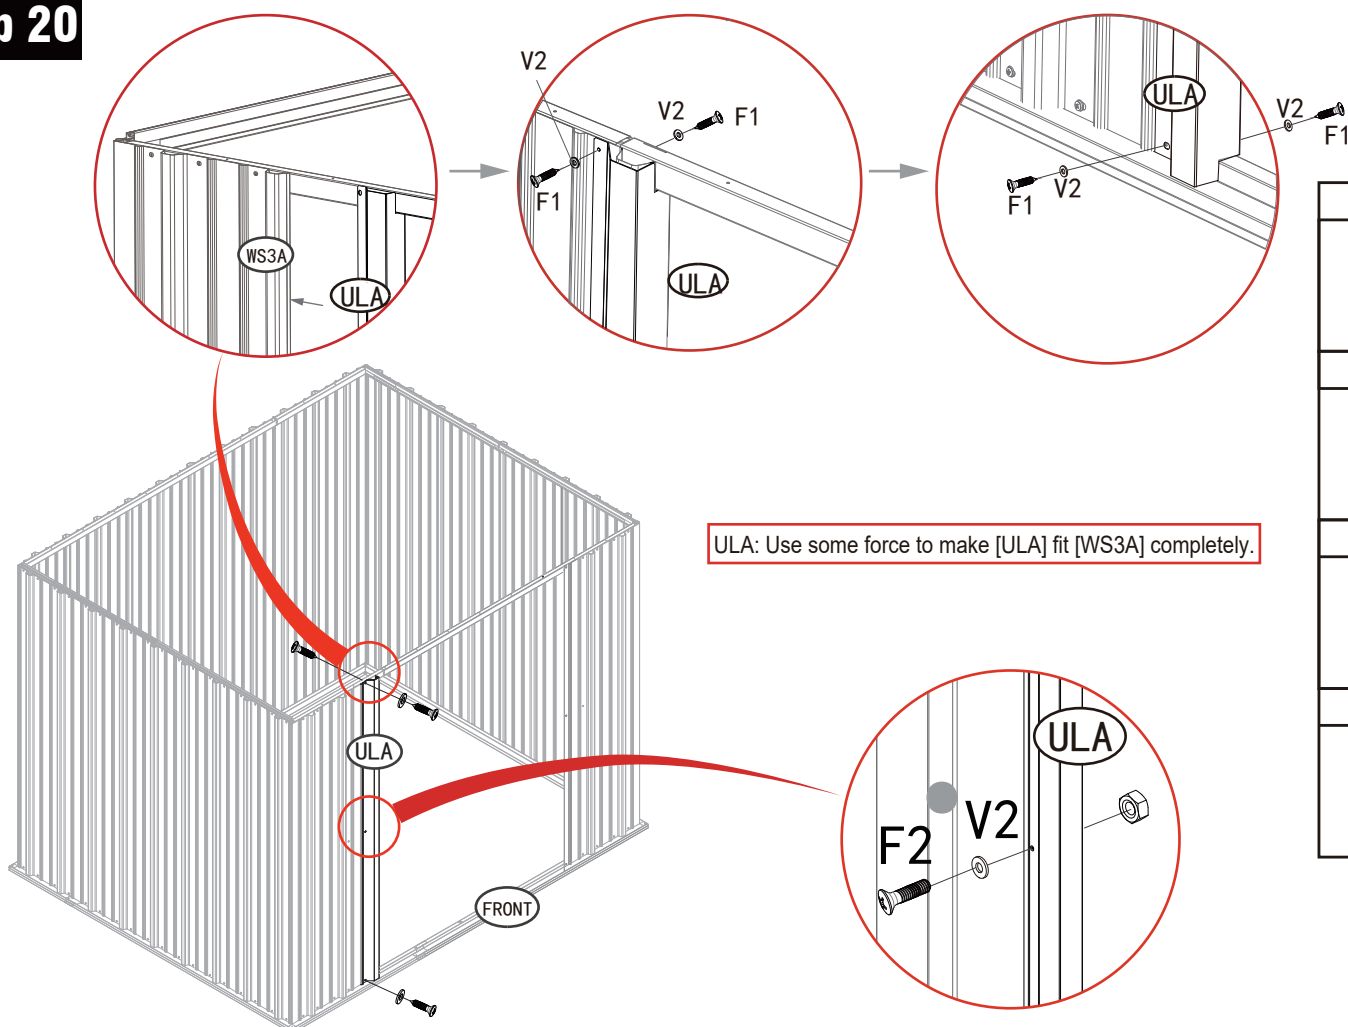Step 20



ULA

1 PC
F1


4 PC
V2

5 PC
F2


1 PC

ULA: Use some force to make [ULA] fit [WS3A] completely.

Step 21

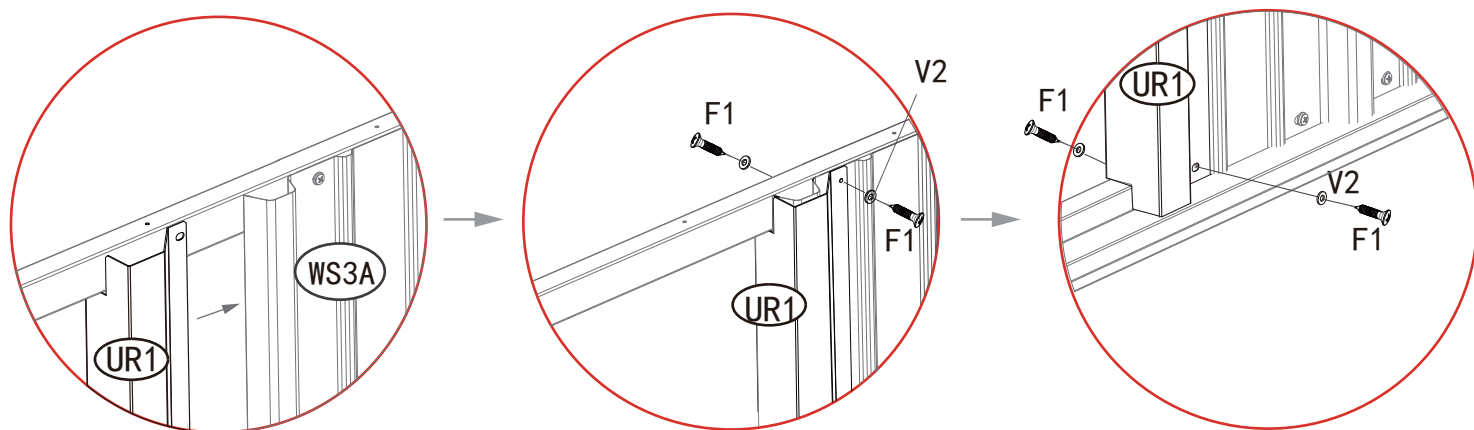

UR1: Use some force to make [UR1] fit [WS3A] completely.

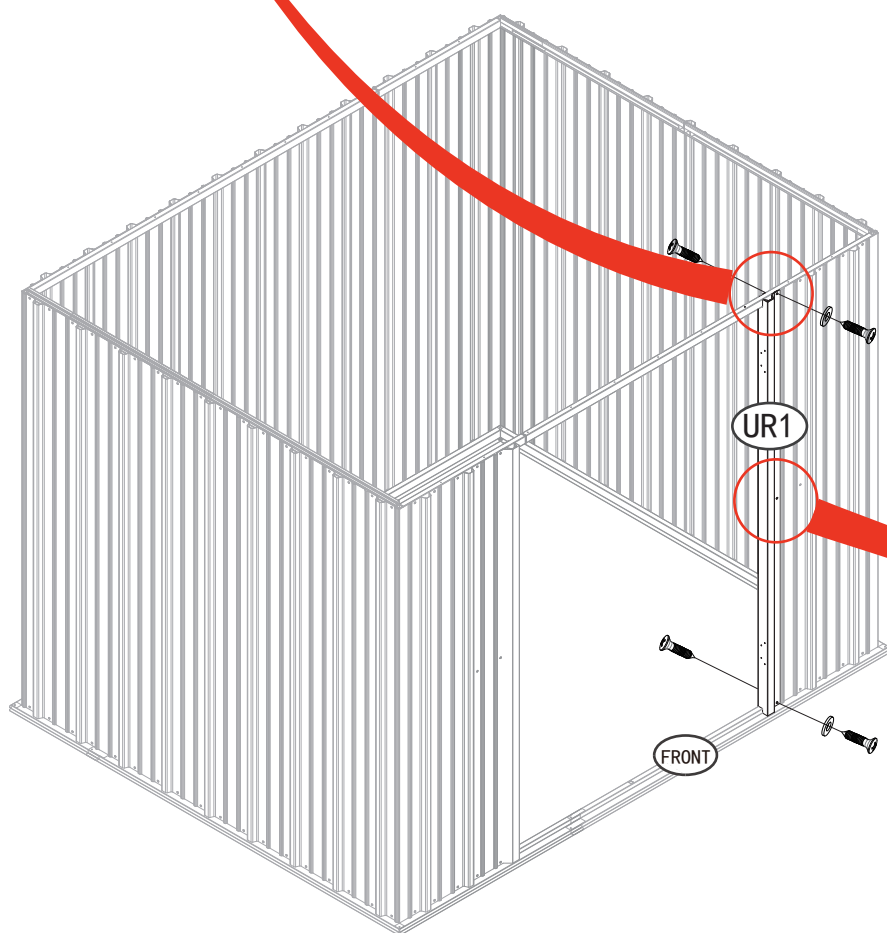


UR1

1 PC
F1



4 PC
V2

5 PC
F2

1 PC

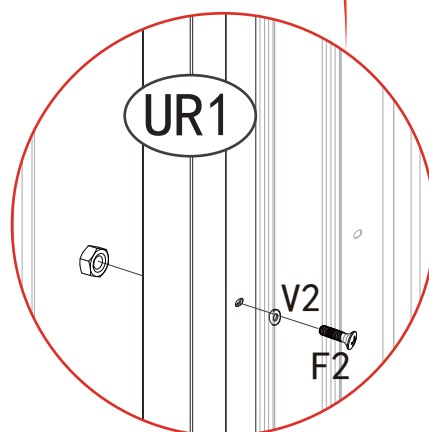


Step 22

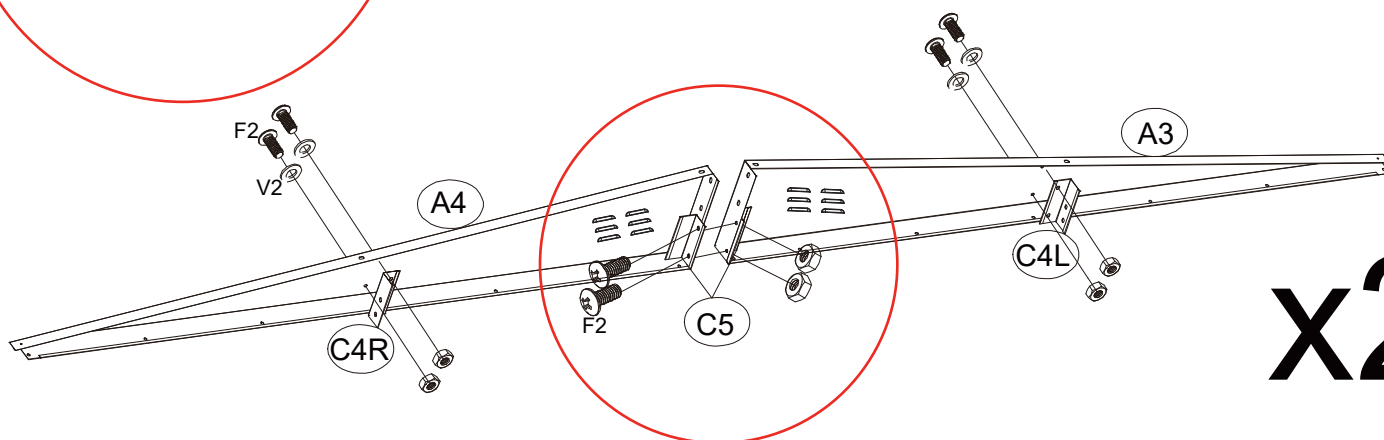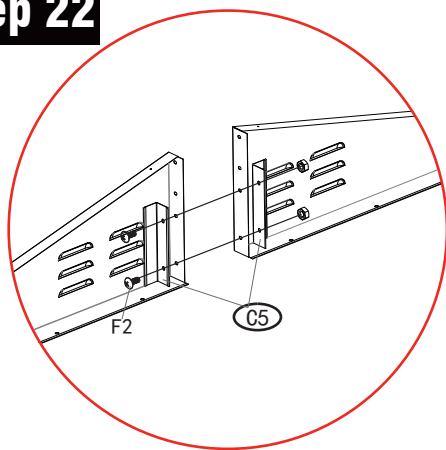

A3	A4	C4L	C4R	C5	F2	V2
2 PC	2 PC	2 PC	2 PC	4 PC	12 PC	8 PC




Step 23

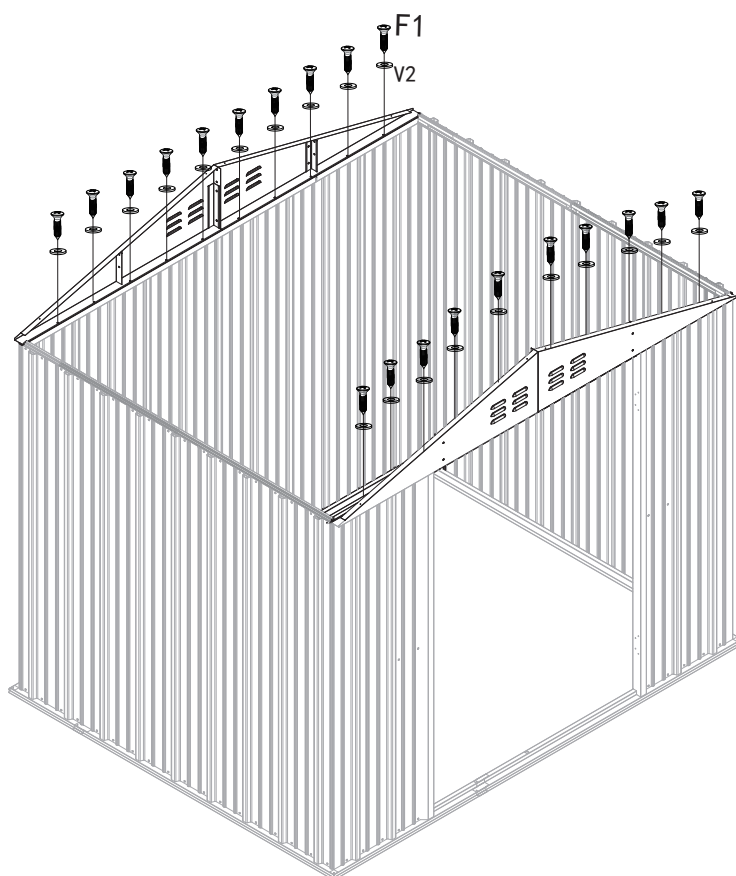


F1
20 PC
V2
20 PC

Step 24

M2	M2L	F2	F7
			
2 PC	2 PC	12 PC	4 PC

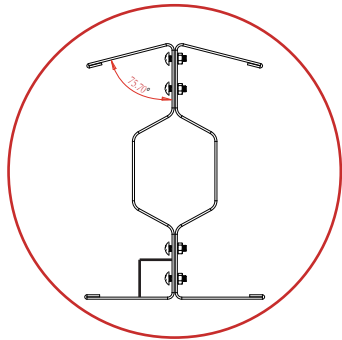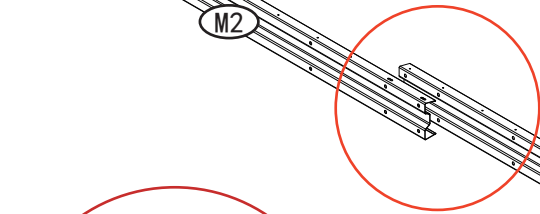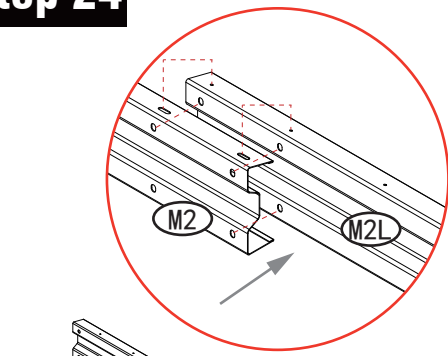




Cross-sectional view: Please place M2L and M2 beveled side up.

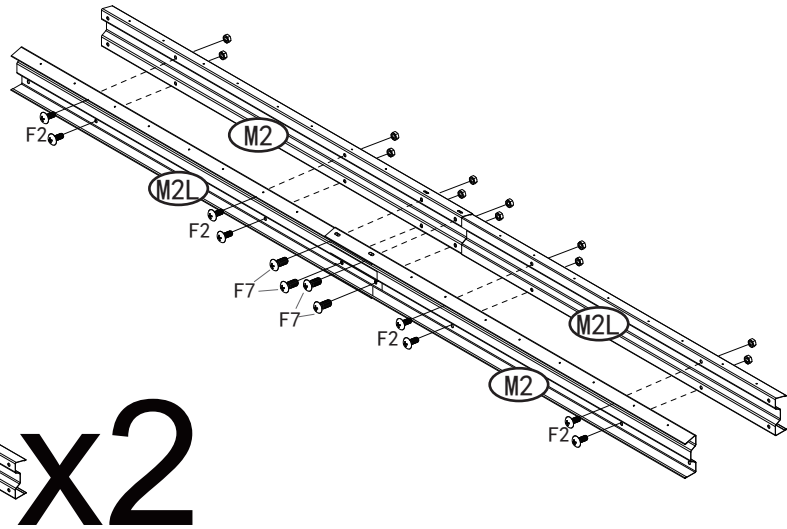



Step 25


F2

4 PC

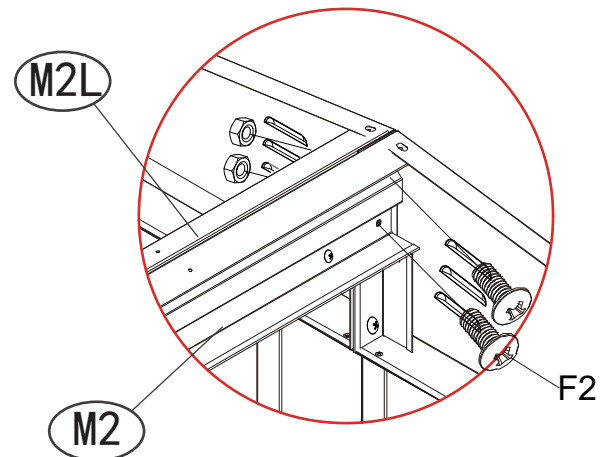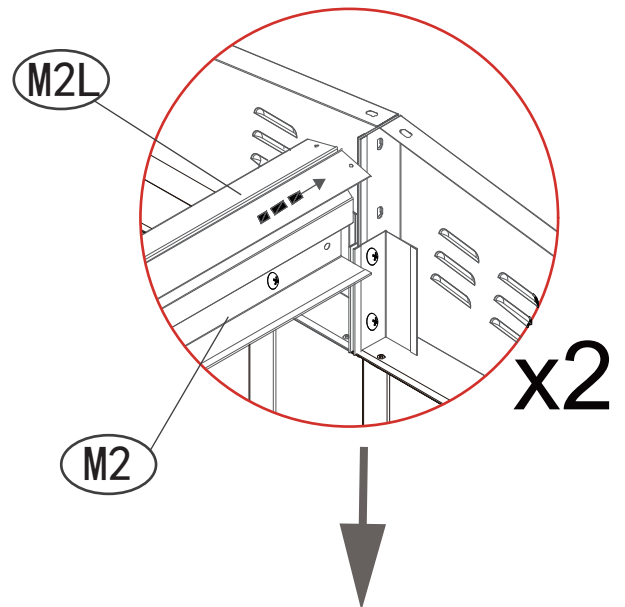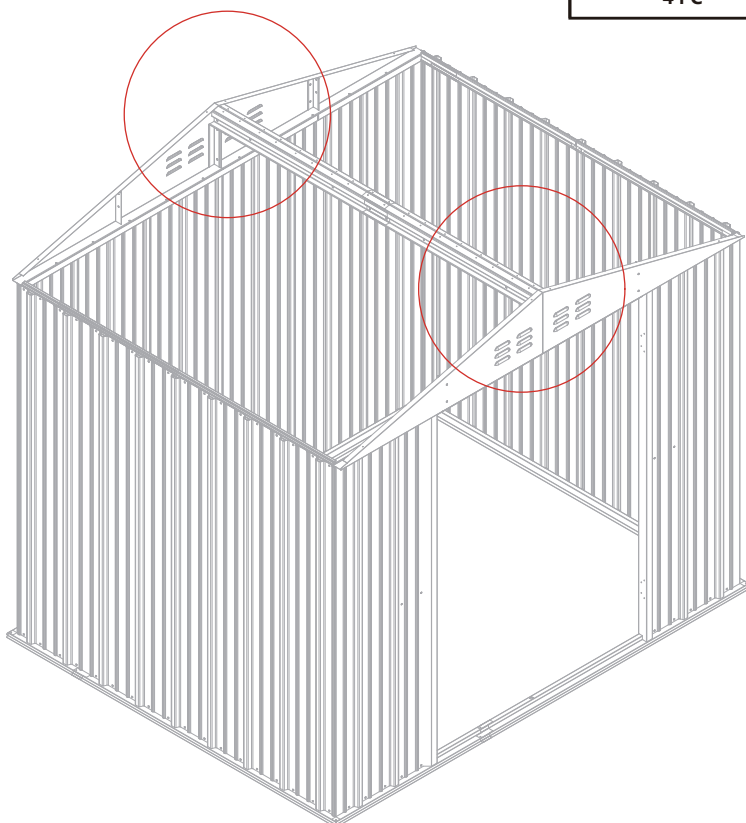

Step 26


M2	M2L	F2
		
2 PC	2 PC	8 PC

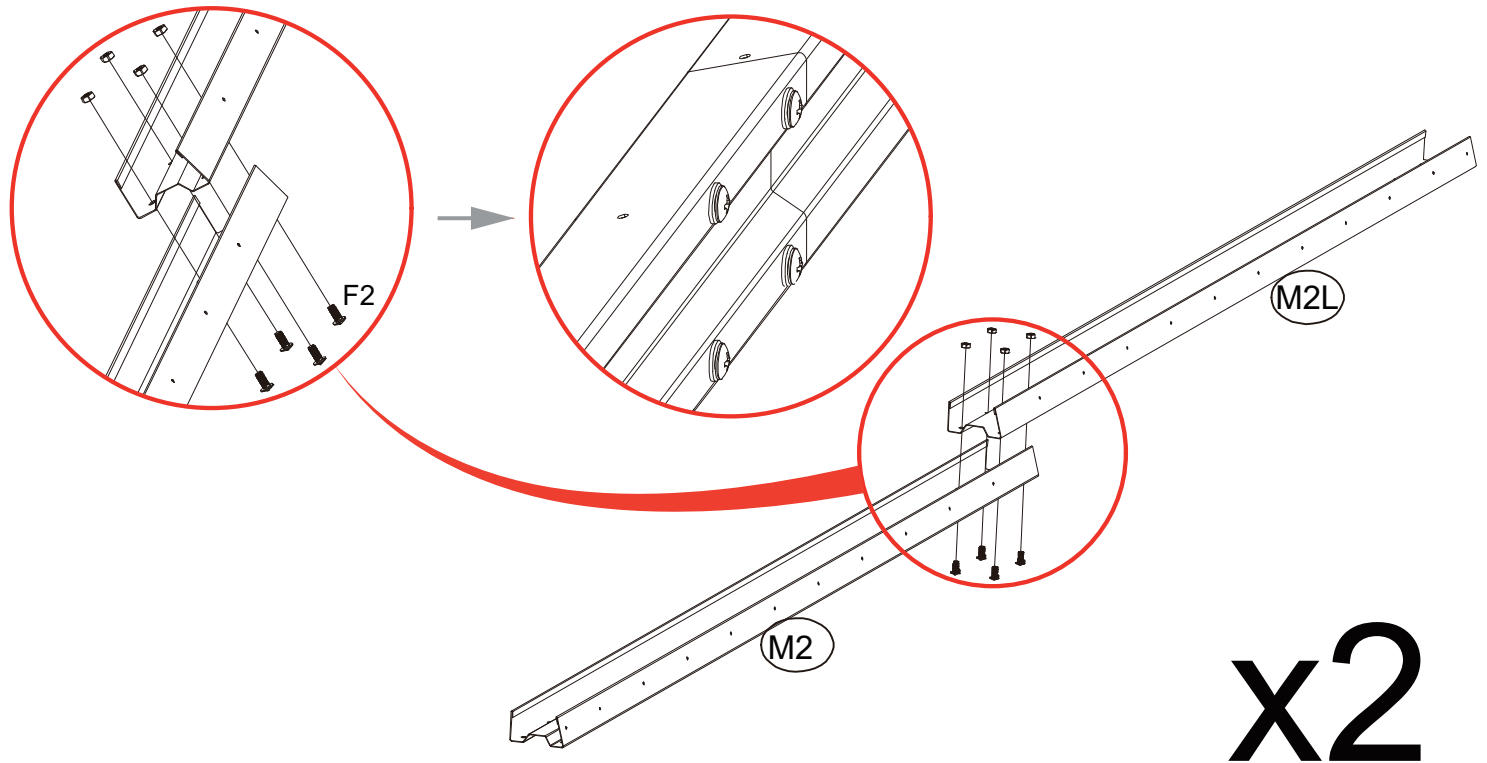



Step 27


F2

8 PC


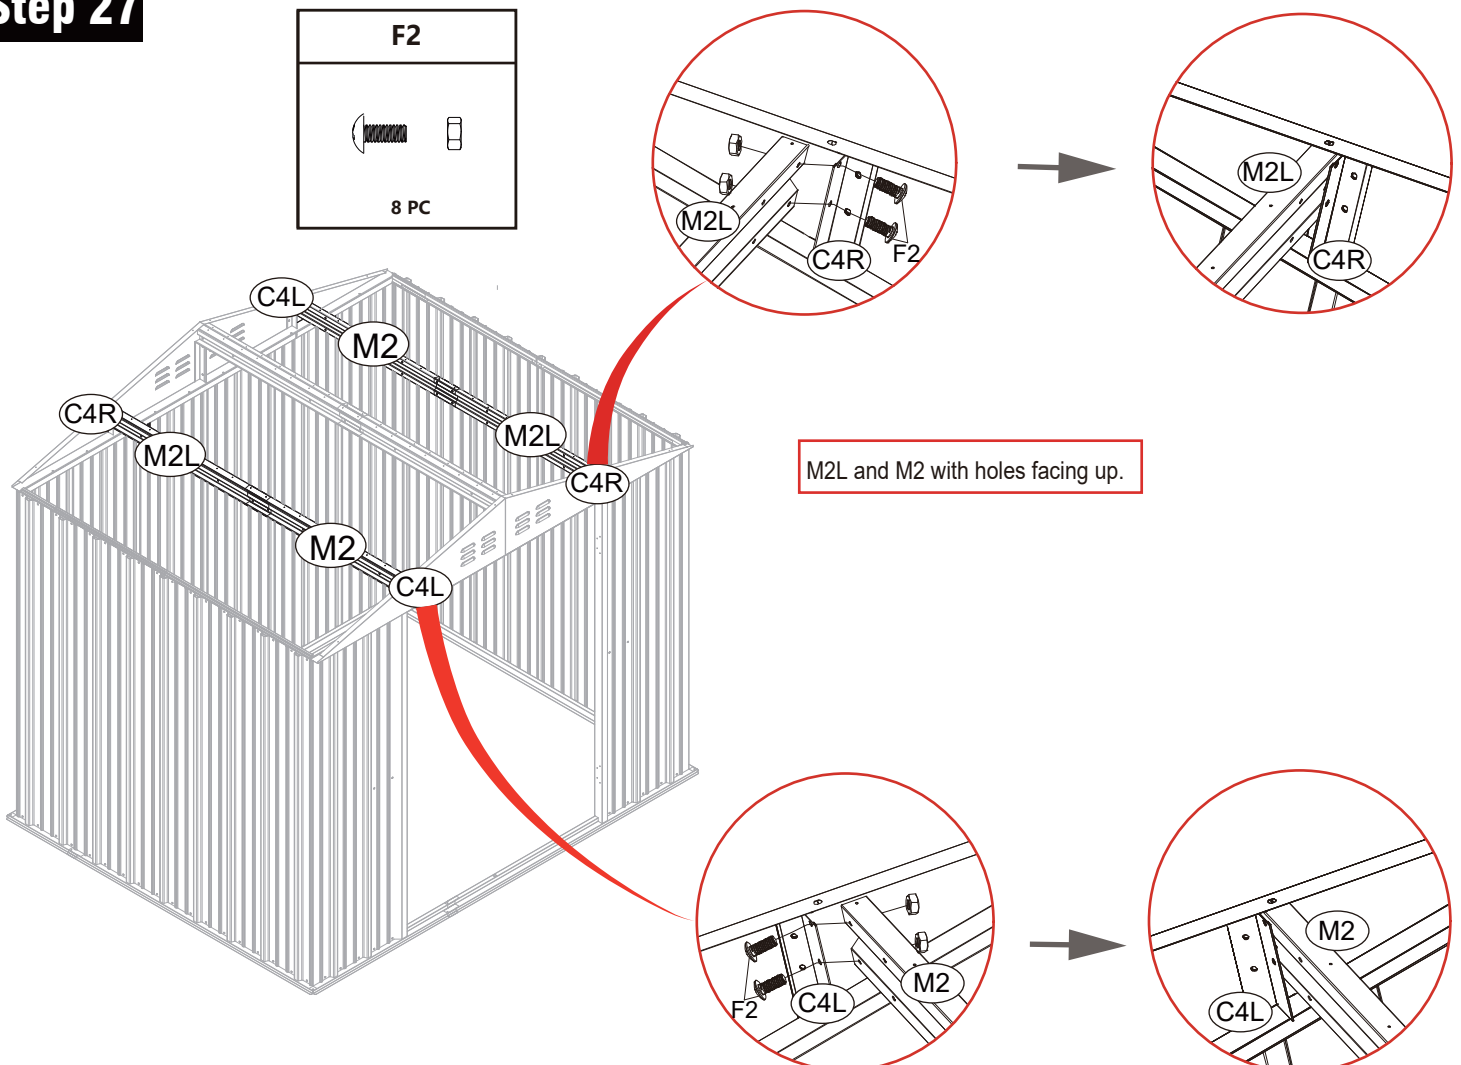



Step 28

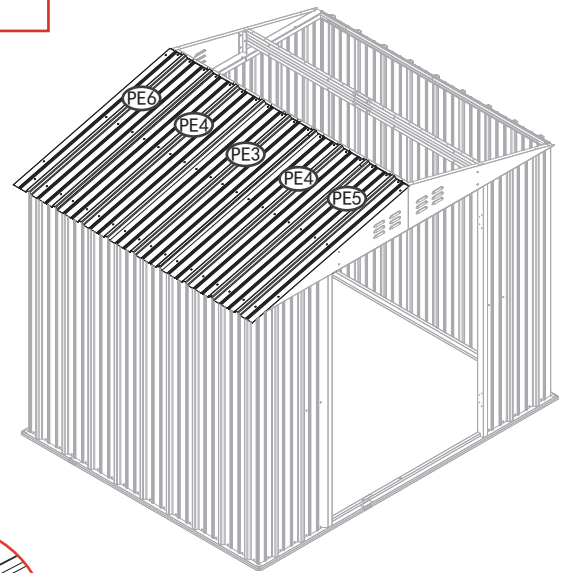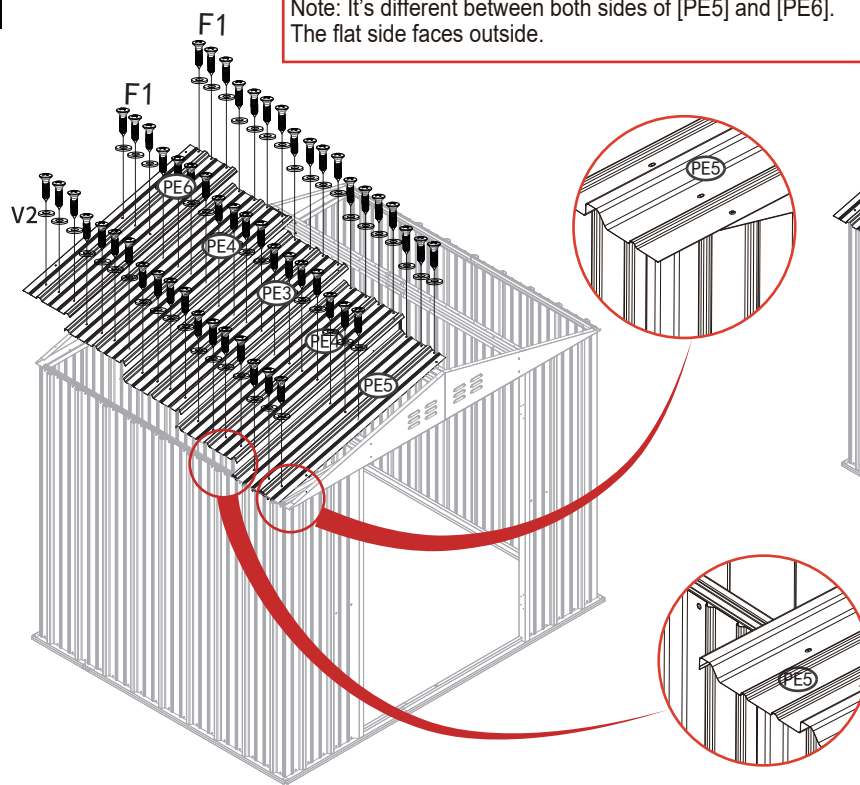


PE3	PE4	PE5	PE6	F1	V2
					
1 PC	2 PC	1 PC	1 PC	54 PC	54 PC



Step 29

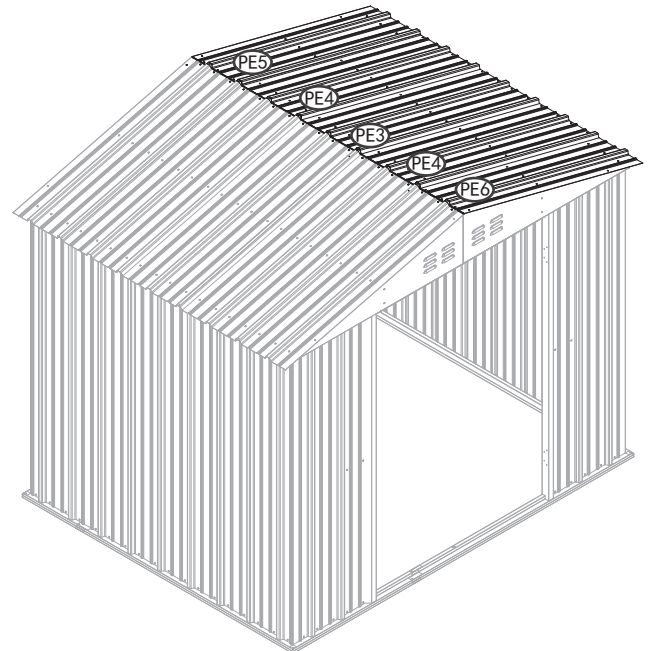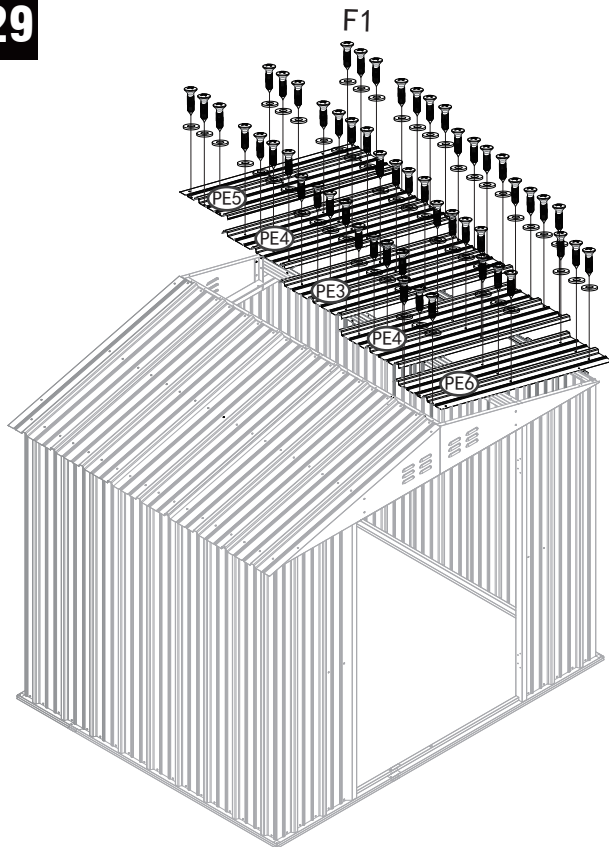


PE3	PE4	PE5	PE6	F1	V2
					
1 PC	2 PC	1 PC	1 PC	54 PC	54 PC


Step 30

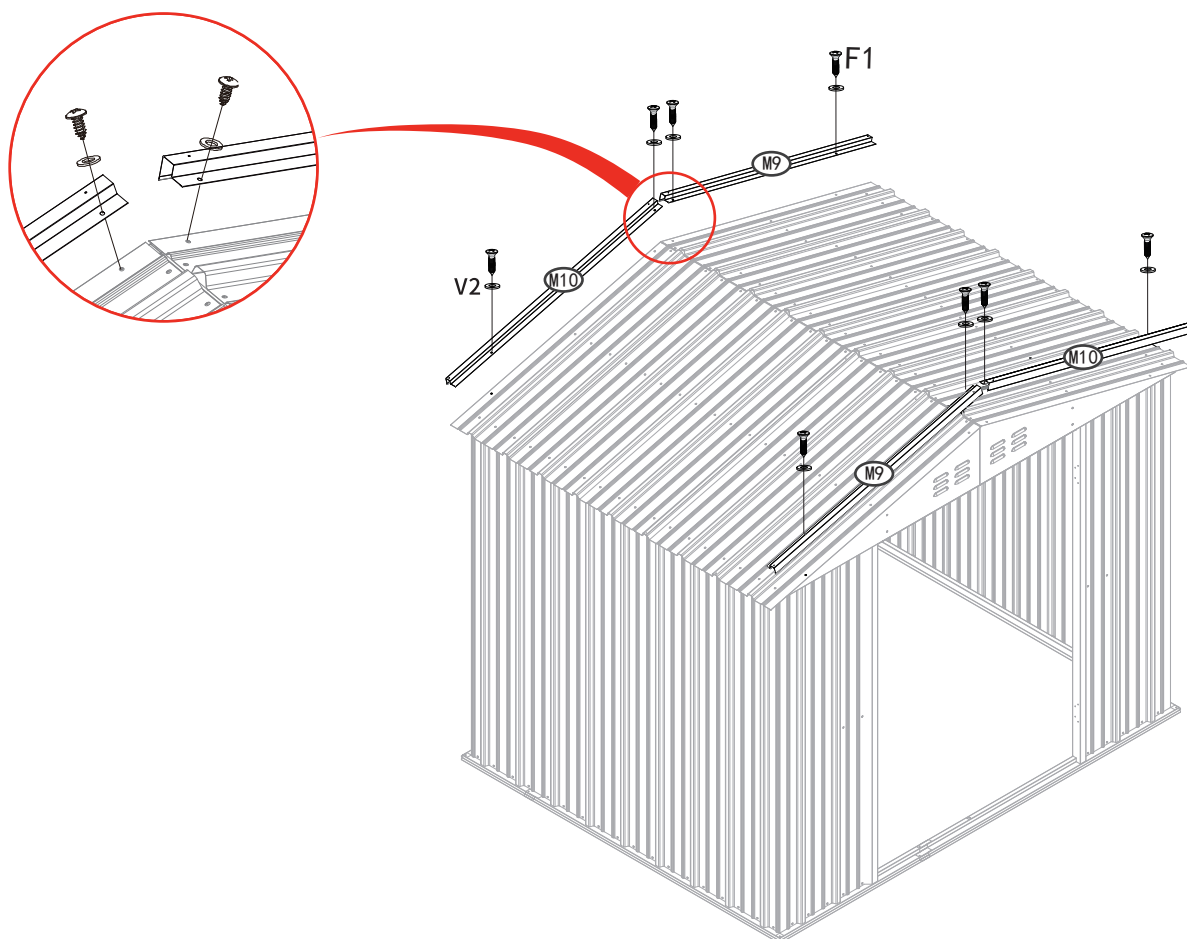

M9
 2 PC
M10
 2 PC
F1
 8 PC
V2
 8 PC



Step 31

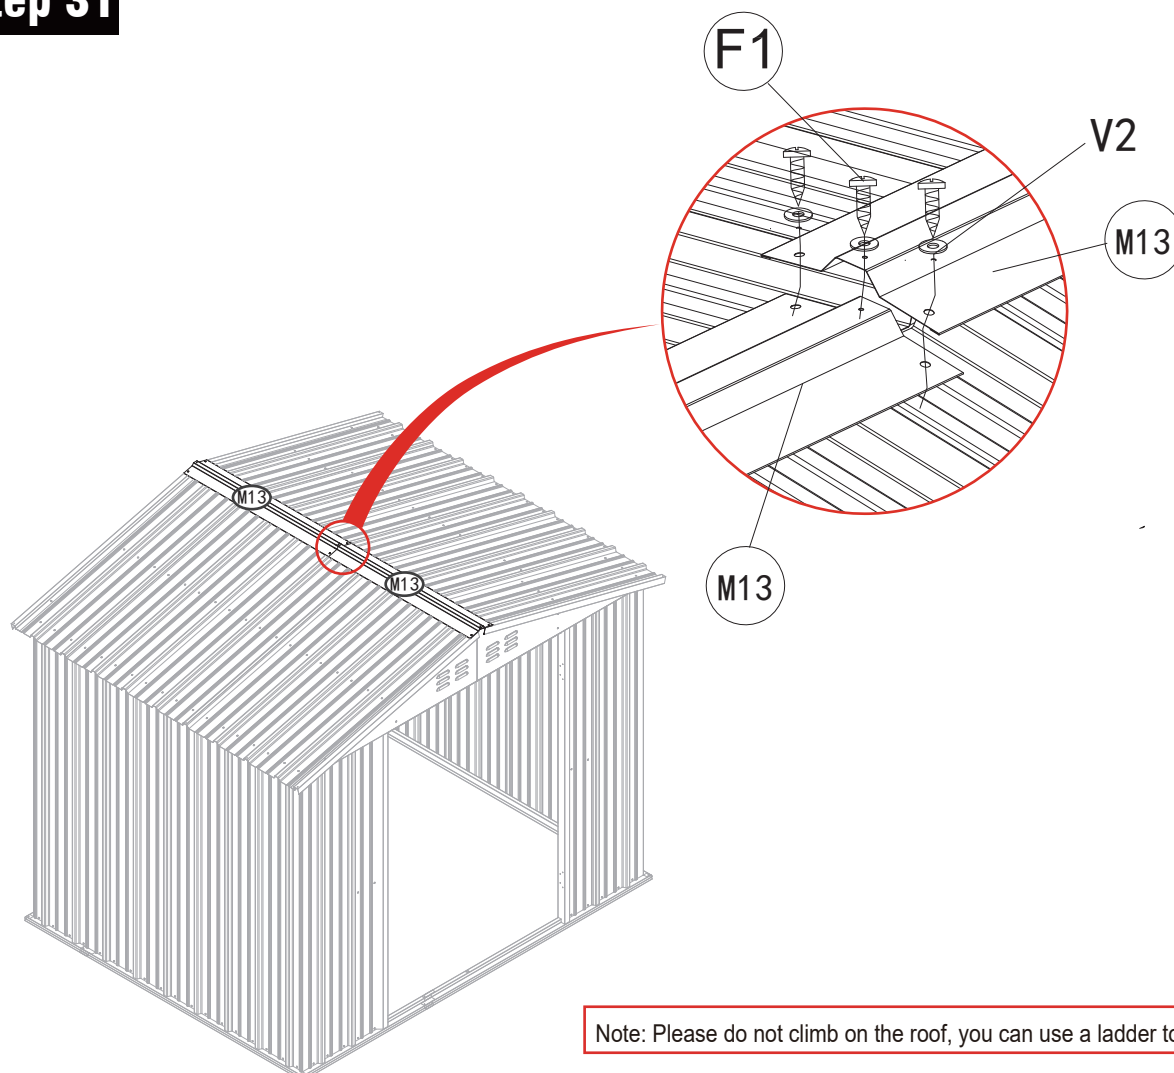


M13
 2 PC
F1
 3 PC
V2
 3 PC

Note: Please do not climb on the roof, you can use a ladder to install.

Step 32

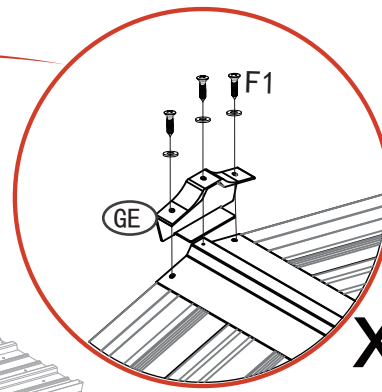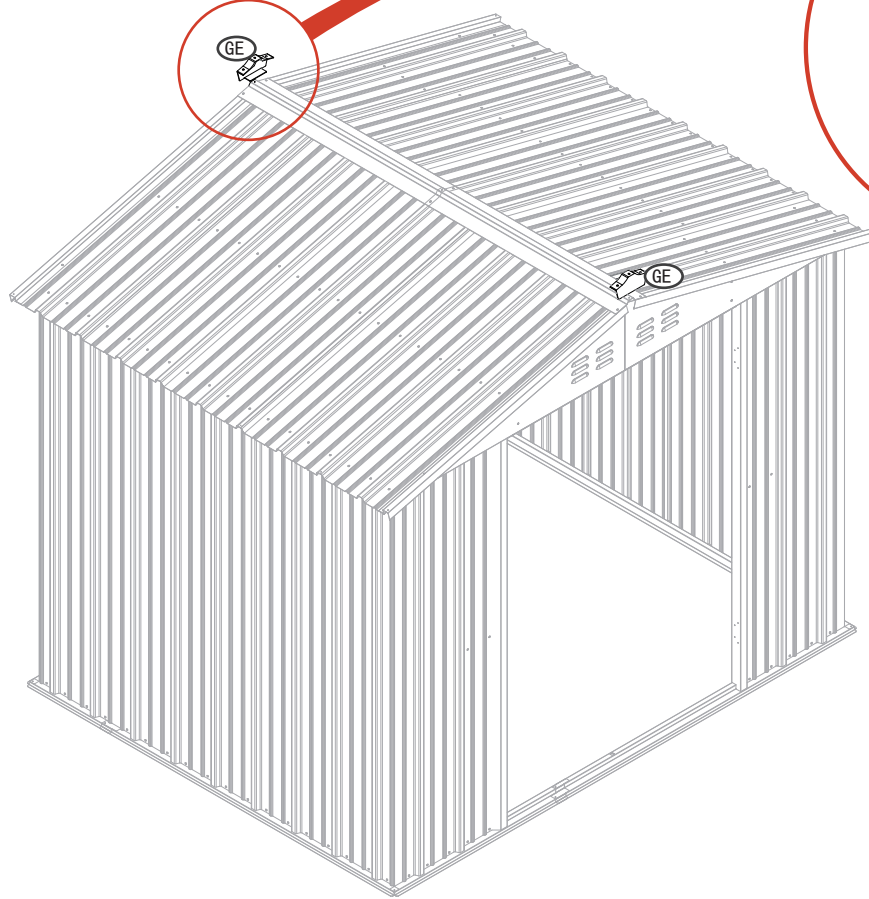



x2

GE

2 PC
F1


6 PC
V2

6 PC

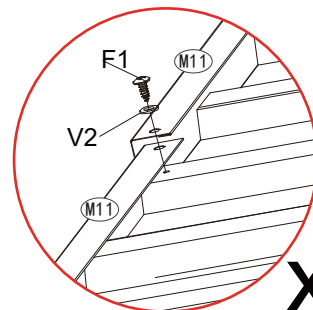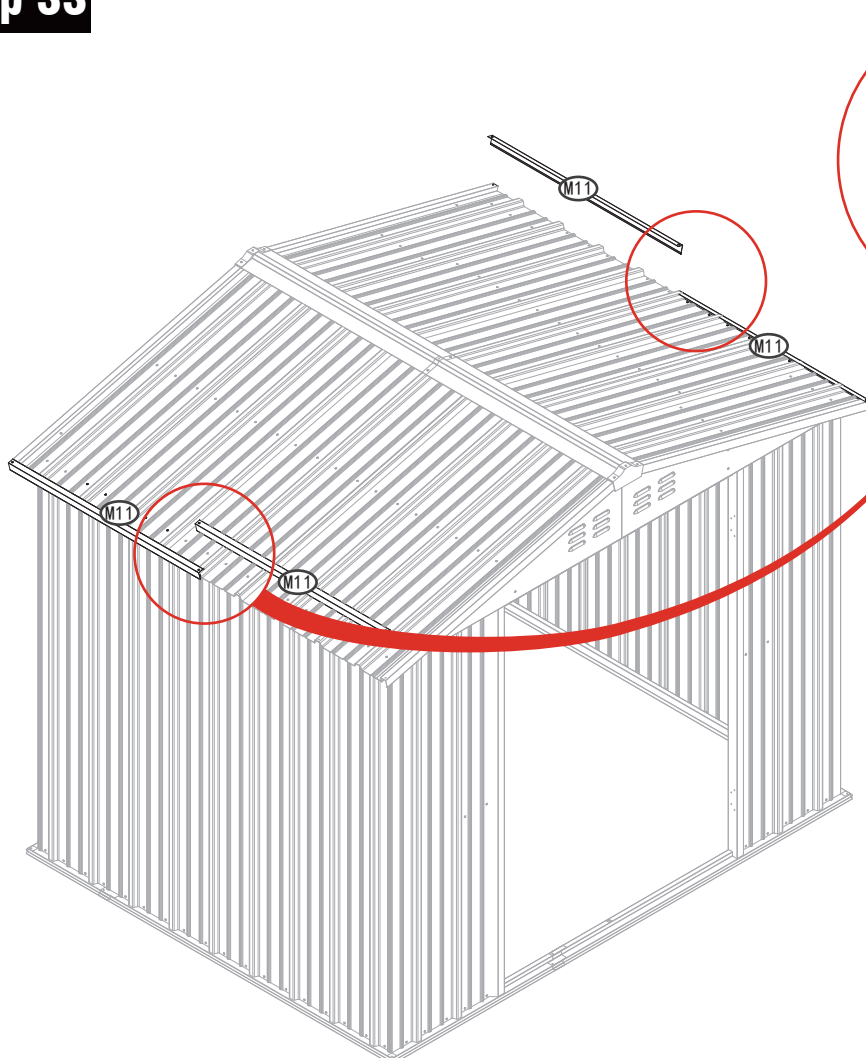Step 33




x2

M11

4 PC
F1

2 PC
V2

2 PC

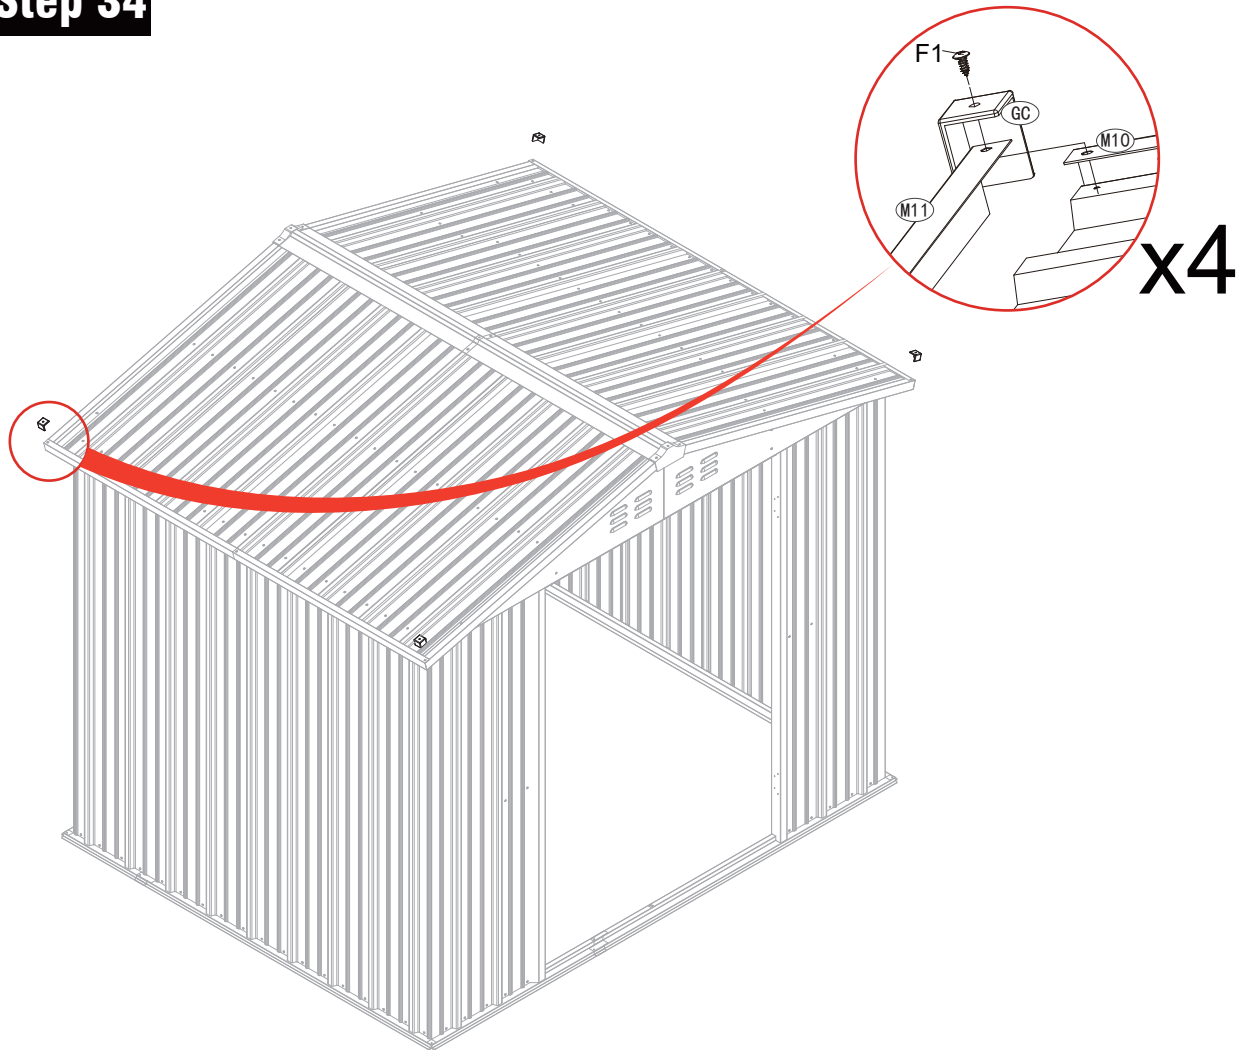Step 34




GC

4 PC
F1


4 PC

Step 35

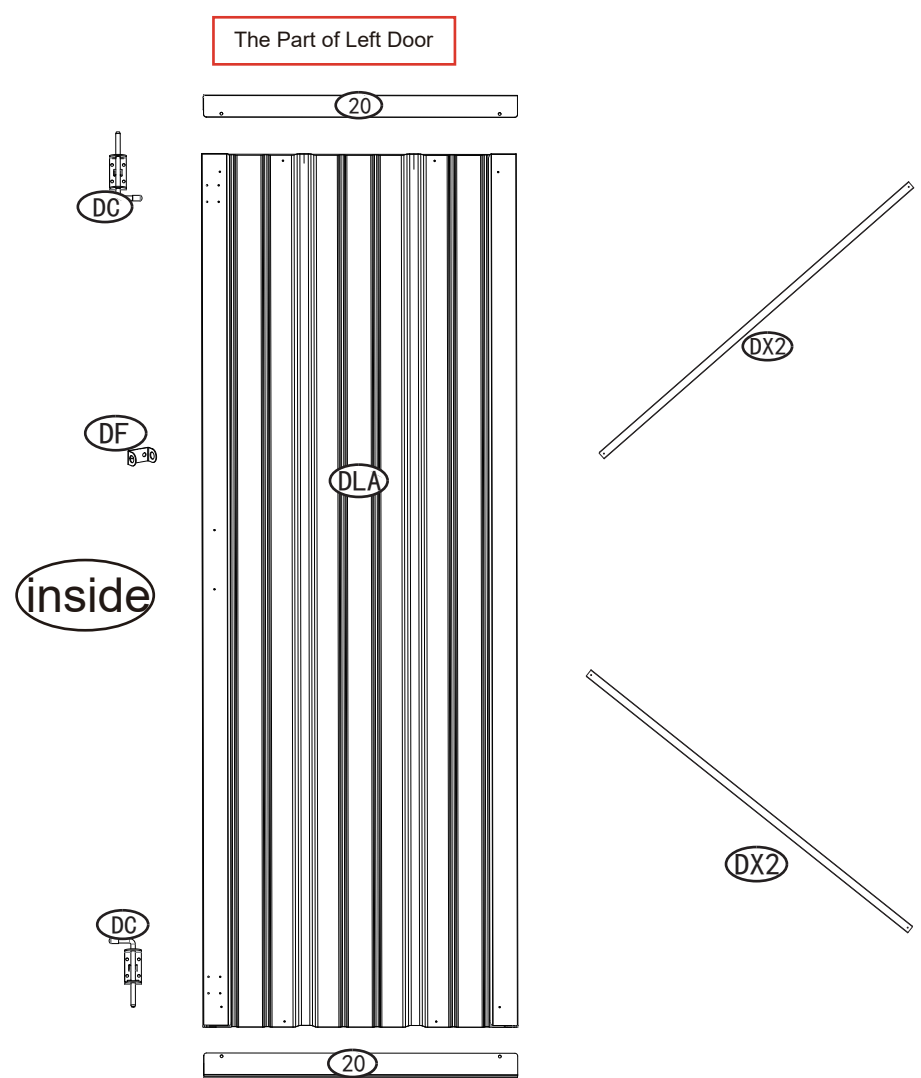


Step 36

The light color is the inside of the door,
facing the [20] side with only 2 screw holes.

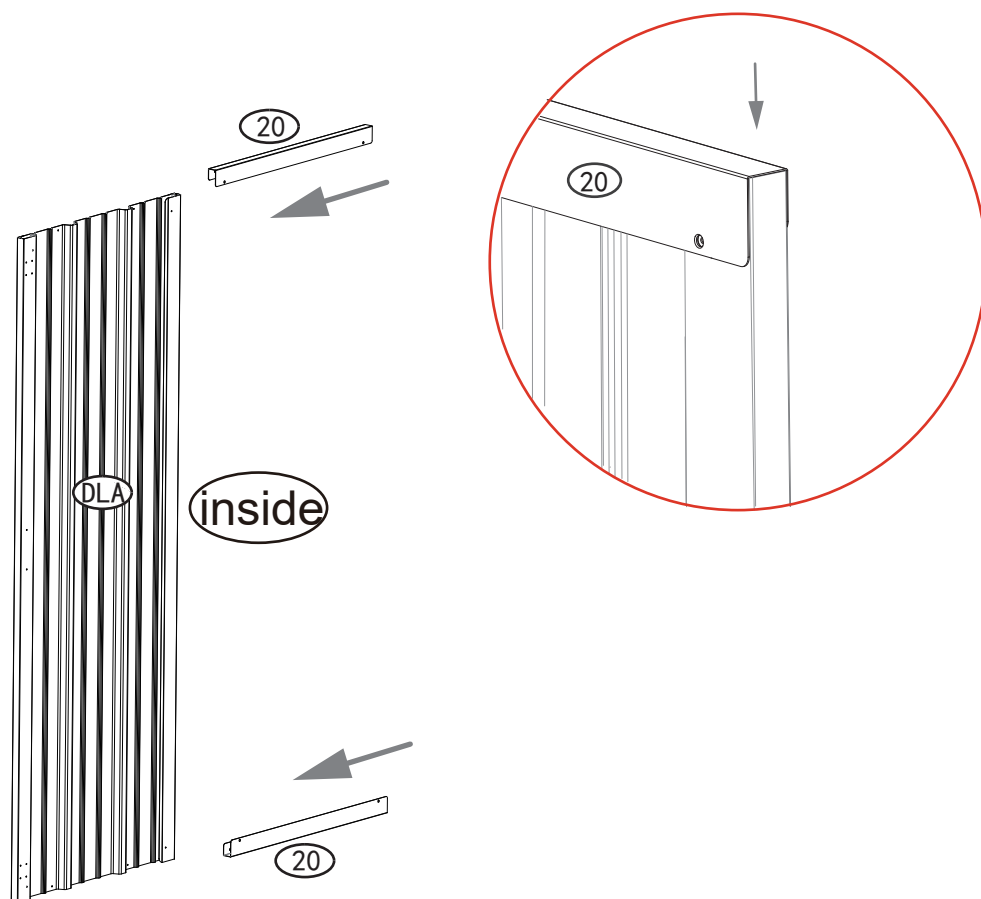

20
2 PC
DLA
1 PC
F1
10 PC



Step 37

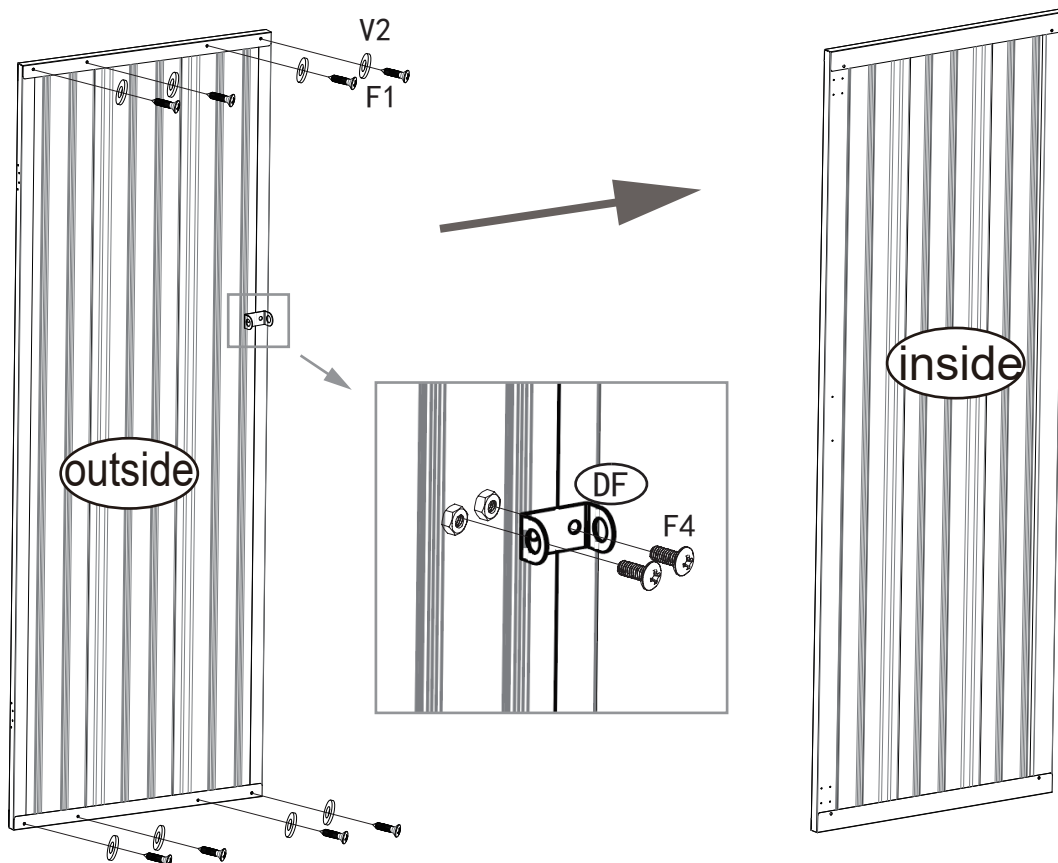

DF
1 PC
F4
2 PC
F1
8 PC
V2
8 PC


Step 38

DX2	DH	F1	F3
			
2 PC	2 PC	6 PC	8 PC

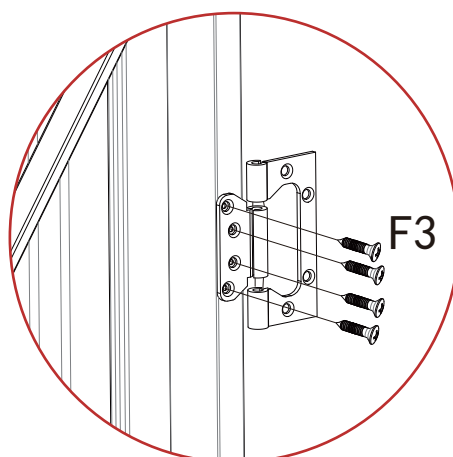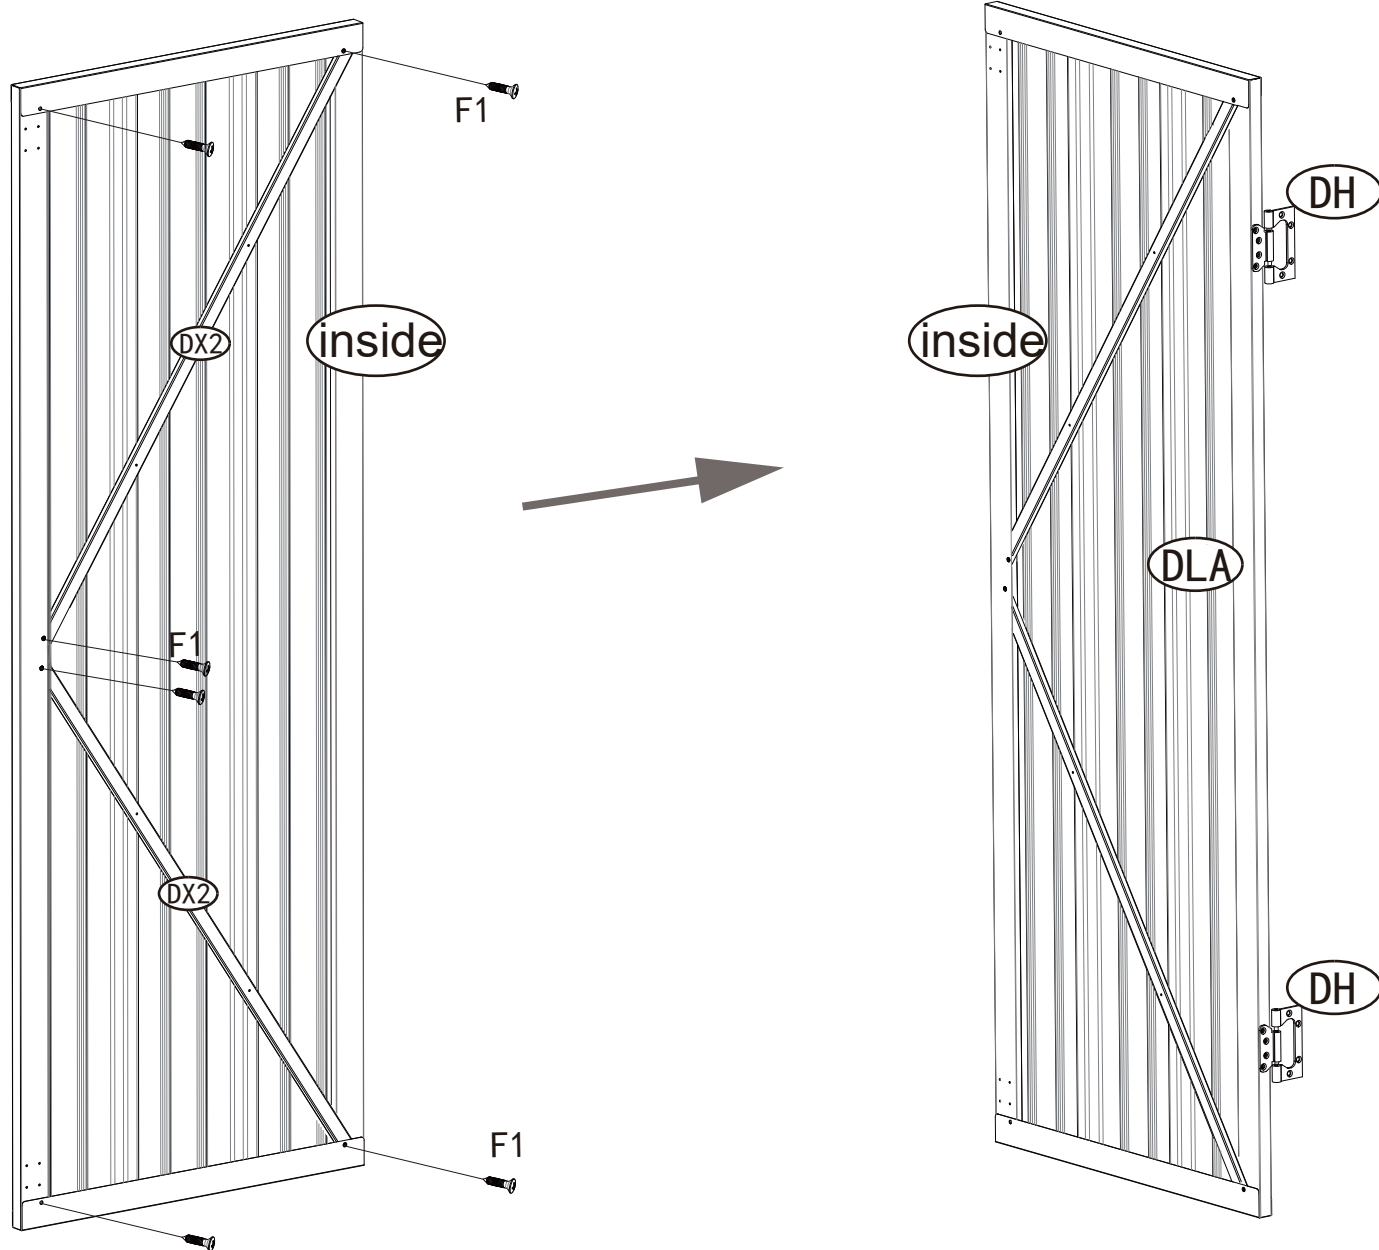

X2

Step 39

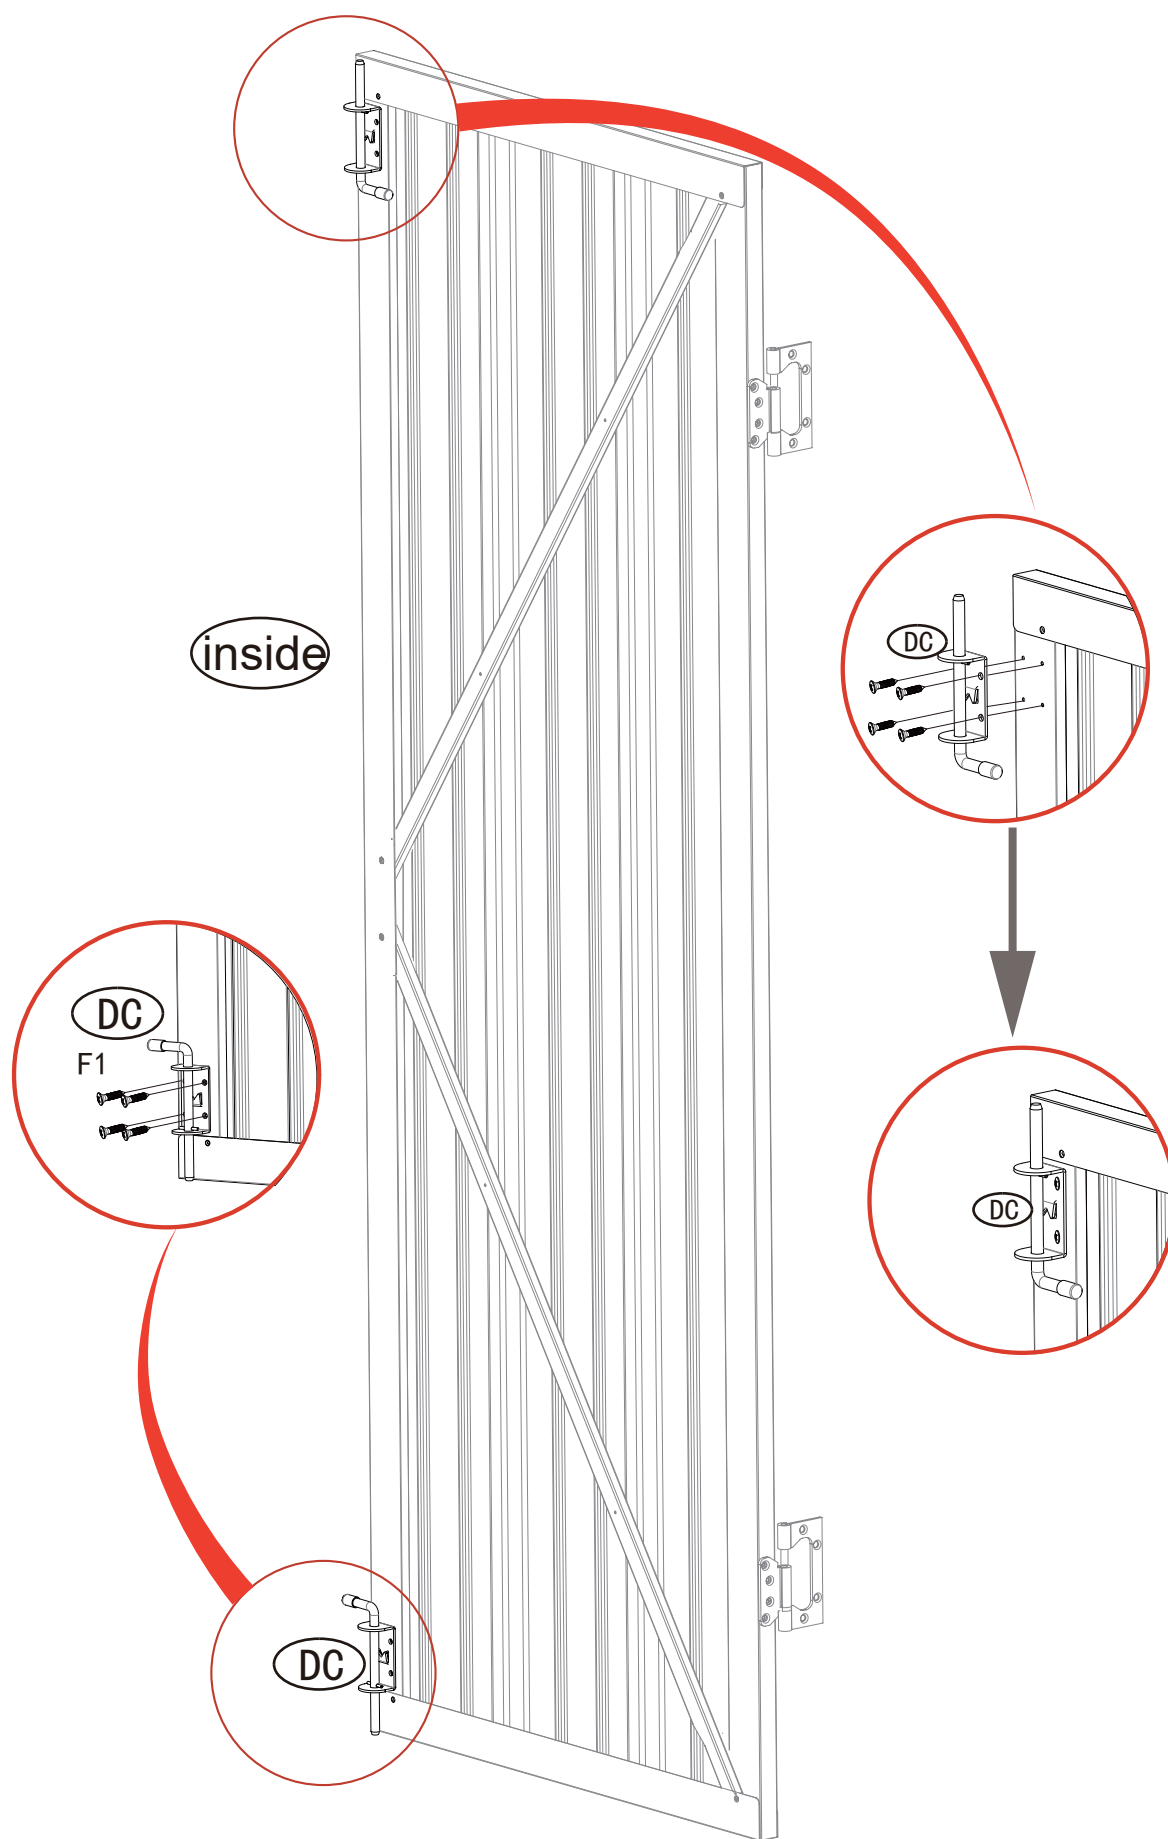

DC




2 PC
F1

8 PC

The Part List of Right Door




inside

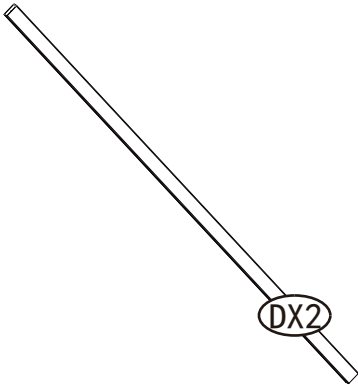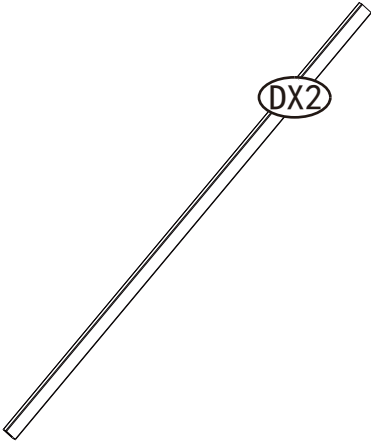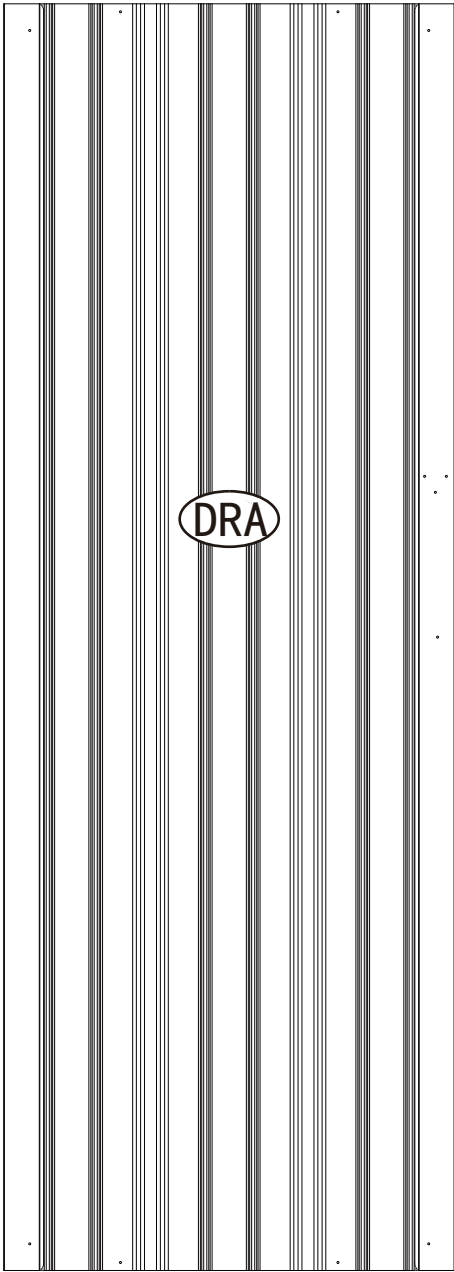


Step 41

The light color is the inside of the door,
facing the [20] side with only 2 screw holes.

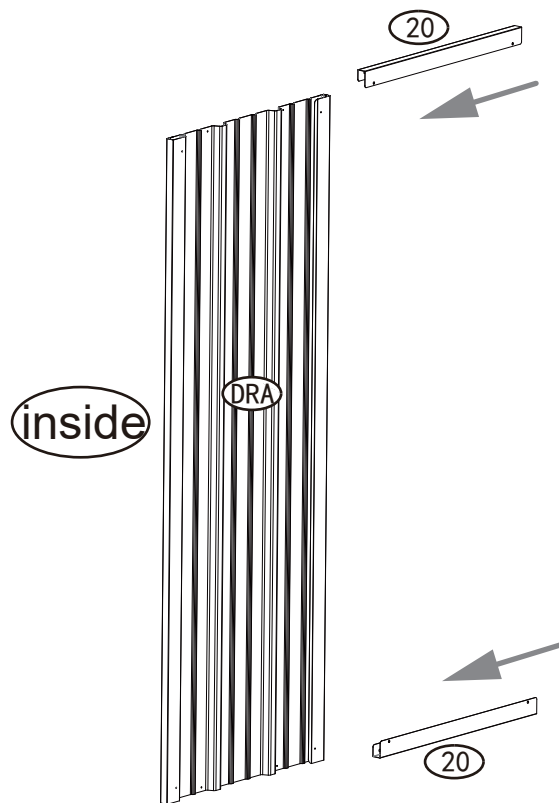

20
2 PC
DRA
1 PC
F1
10 PC


Step 42

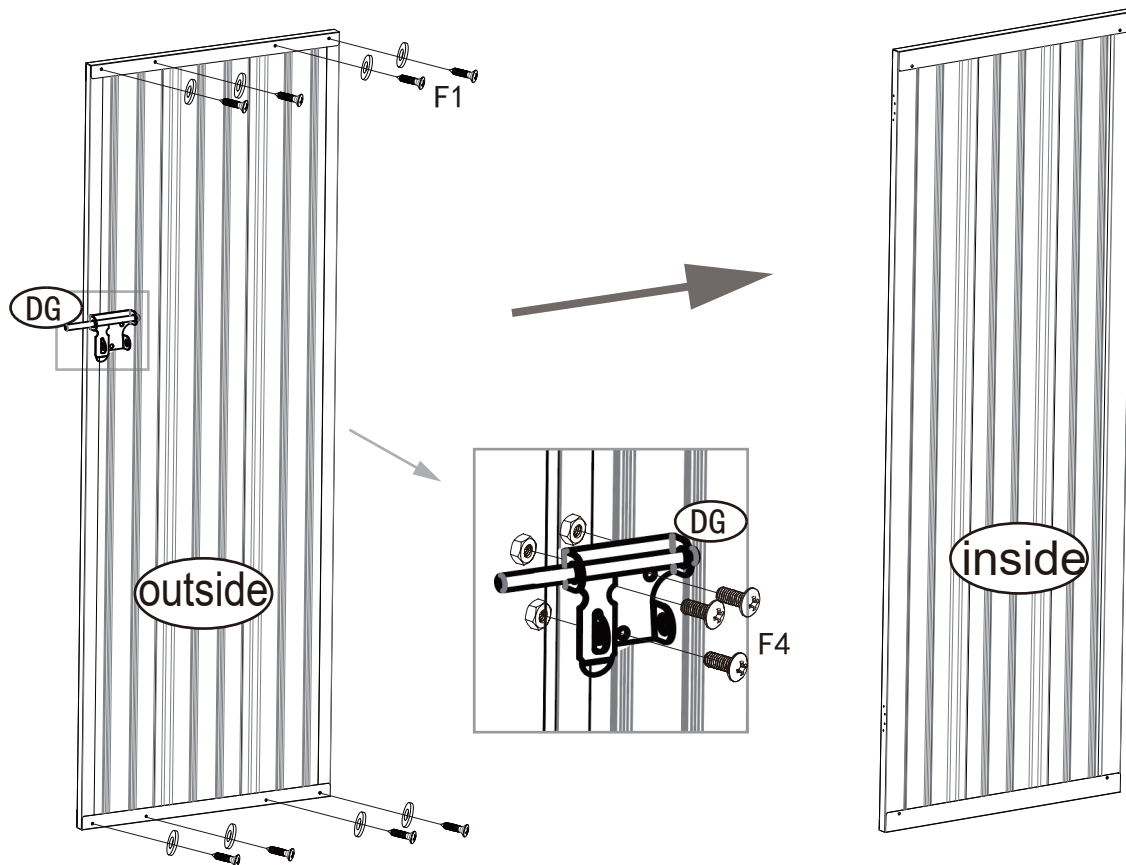

DG
1 PC
F4
3 PC
F1
8 PC
V2
8 PC

Step 43


DX2	DH	F1	F3
			
2 PC	2 PC	6 PC	8 PC

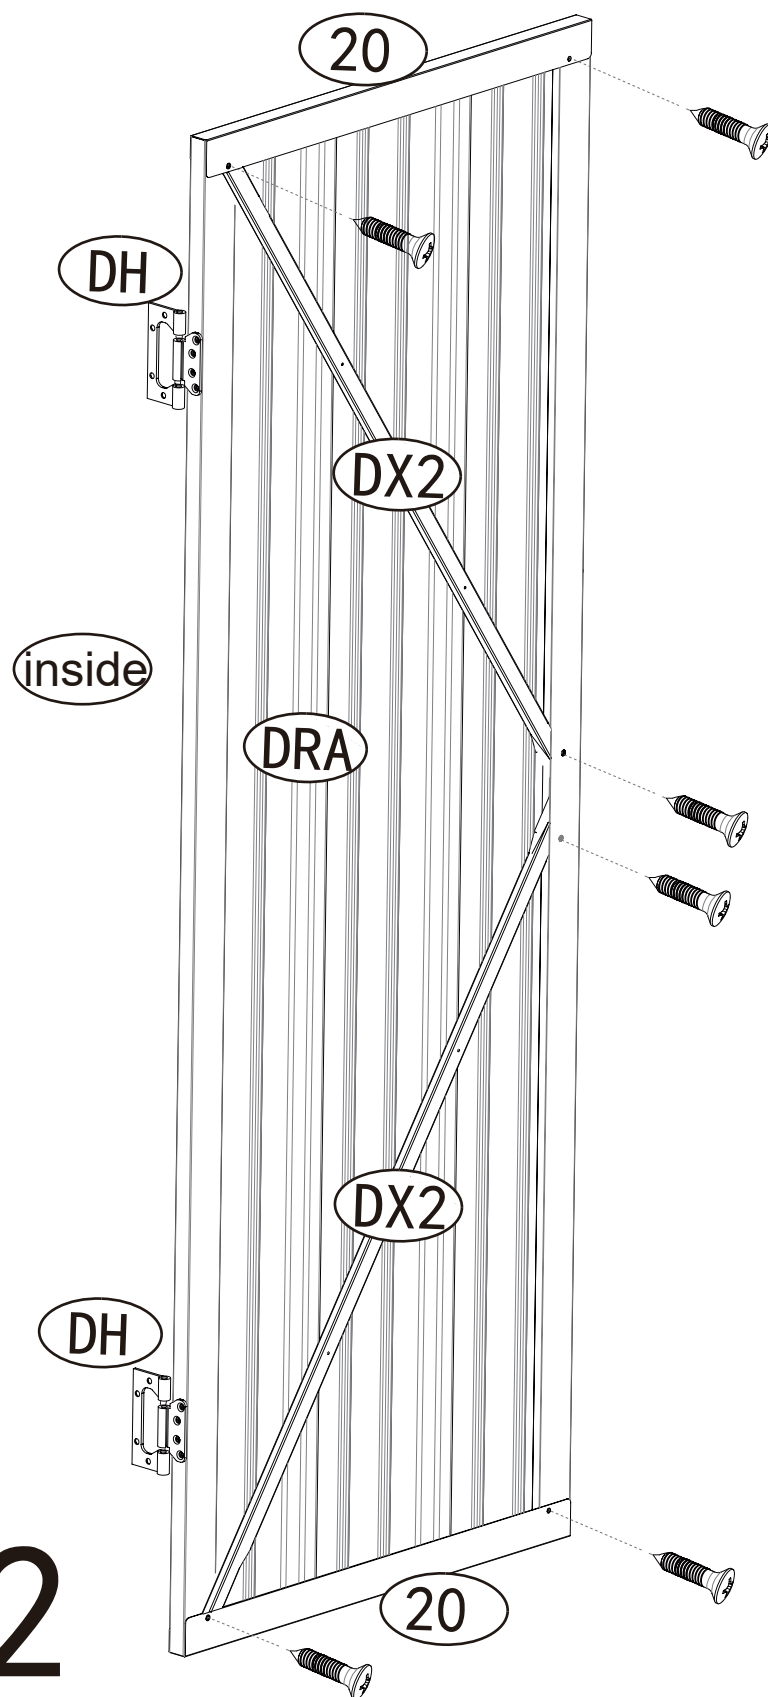



X2

Step 44

DRA	DLA	F3
		
1 PC	1 PC	16 PC

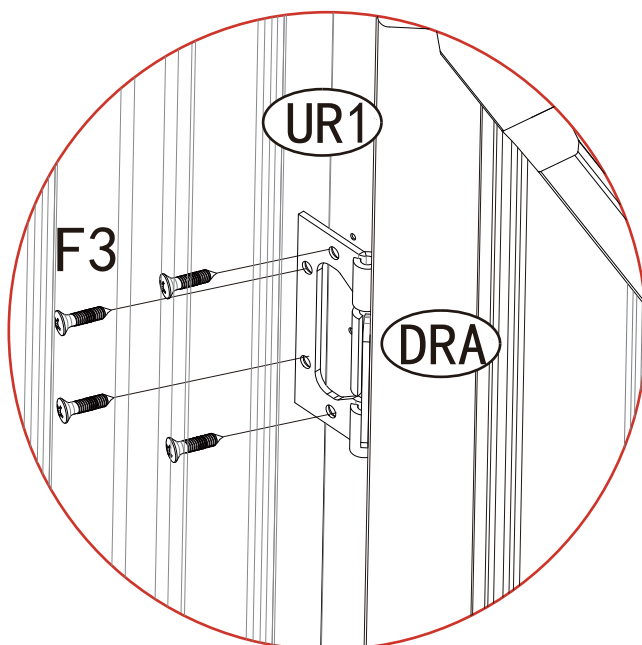

X4

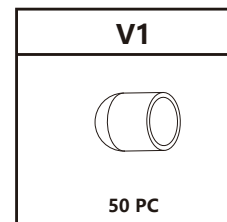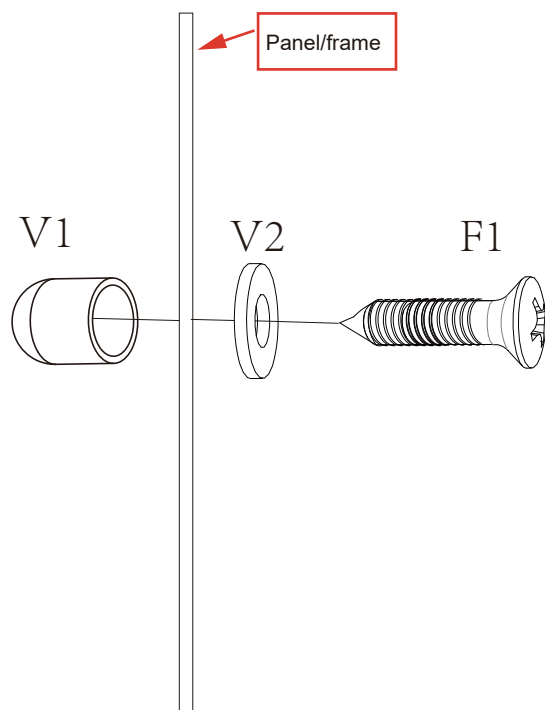

After completing the installation, cover the protruding screw tips with [V1] to prevent injury.

