
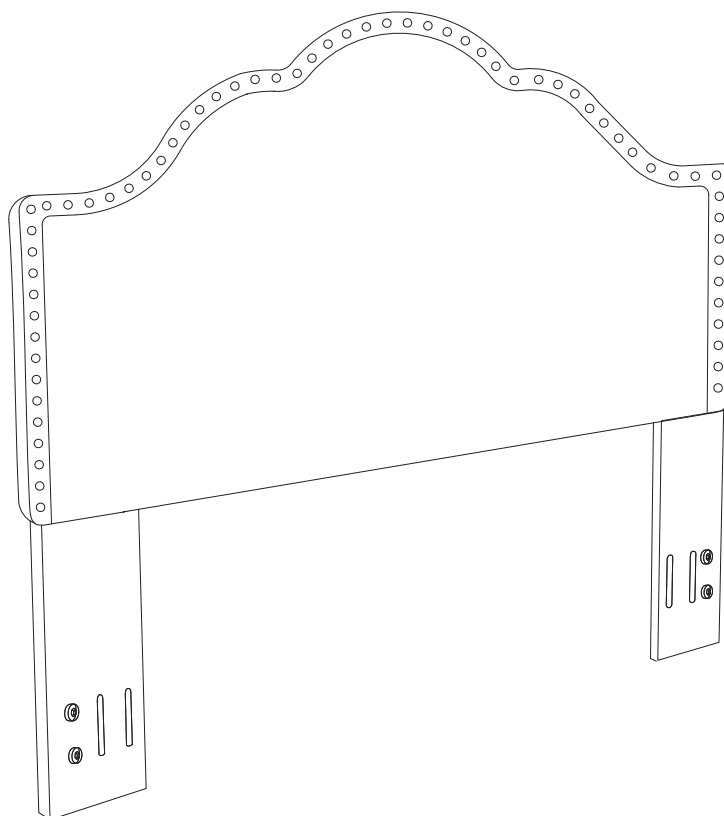
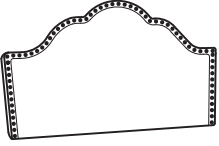


## Upholstered Headboard



# PARTLIST


|                                                                                                                                               |                                                                                                                                               |                                                                                                                                               |
|-----------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|
| <div data-bbox="150 165 188 219" data-label="Text">#A</div>  | <div data-bbox="416 165 454 219" data-label="Text">#B</div>  | <div data-bbox="683 165 721 219" data-label="Text">#C</div>  |
| <div data-bbox="172 465 357 488" data-label="Text">Headboard Panel</div> <div data-bbox="242 510 293 533" data-label="Text">1 PC</div>        | <div data-bbox="427 465 639 488" data-label="Text">Left Headboard Post</div> <div data-bbox="507 510 558 533" data-label="Text">1 PC</div>    | <div data-bbox="683 465 895 488" data-label="Text">Right Headboard Post</div> <div data-bbox="772 510 823 533" data-label="Text">1 PC</div>   |

# HARDWARE LIST

|                                                                                                                                                                                                                                                                                     |                                                                                                                                                   |                                                                                                                                                   |                                                                                                                                                     |                                                                                                                                                                                                                       |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <div data-bbox="150 1198 188 1252" data-label="Text">#1</div>  <div data-bbox="172 1435 379 1469" data-label="Text">5/16"x1-3/4"L</div>                                                          | <div data-bbox="416 1198 454 1252" data-label="Text">#2</div>  | <div data-bbox="683 1198 721 1252" data-label="Text">#3</div>  | <div data-bbox="943 1198 981 1252" data-label="Text">#4</div>  | <div data-bbox="1203 1198 1241 1252" data-label="Text">#5</div>  <div data-bbox="1305 1435 1356 1469" data-label="Text">M5</div> |
| <div data-bbox="245 1507 293 1529" data-label="Text">Bolt</div> <div data-bbox="197 1552 357 1574" data-label="Text">15PCS(Extra1)</div>                                                                                                                                            | <div data-bbox="453 1507 612 1529" data-label="Text">Spring Washer</div> <div data-bbox="453 1552 612 1574" data-label="Text">19PCS(Extra1)</div> | <div data-bbox="730 1507 868 1529" data-label="Text">Flat Washer</div> <div data-bbox="730 1552 884 1574" data-label="Text">19PCS(Extra1)</div>   | <div data-bbox="1043 1507 1091 1529" data-label="Text">Nut</div> <div data-bbox="995 1552 1139 1574" data-label="Text">5PCS(Extra1)</div>           | <div data-bbox="1251 1507 1394 1529" data-label="Text">Allen Wrench</div> <div data-bbox="1305 1552 1353 1574" data-label="Text">1 PC</div>                                                                           |
| <div data-bbox="150 1606 188 1659" data-label="Text">#6</div>  <div data-bbox="229 1910 309 1933" data-label="Text">Wrench</div> <div data-bbox="245 1955 293 1977" data-label="Text">1 PC</div> |                                                                                                                                                   |                                                                                                                                                   |                                                                                                                                                     |                                                                                                                                                                                                                       |

Step 1. Lay headboard panel (part A) down on a soft surface, such as carpet, as shown below. Attach left headboard post (part B) and right headboard post (part C) to headboard panel (part A) using bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #5).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

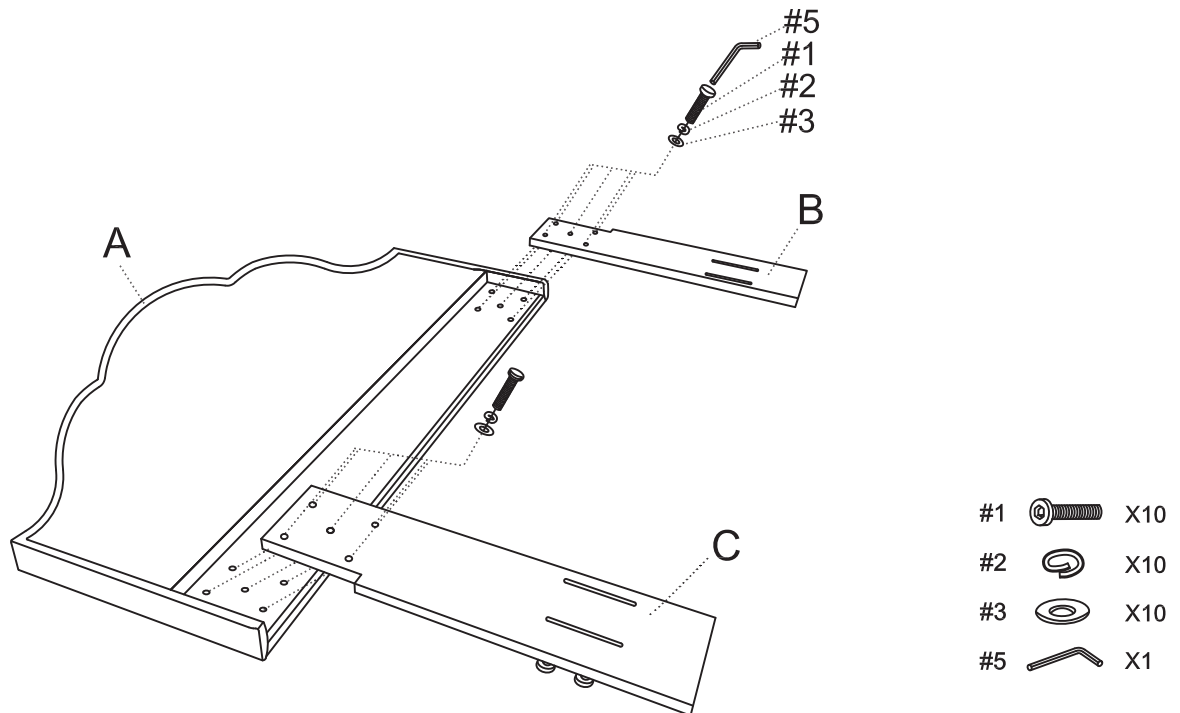

Step 2. Screw out the bolts on the headboard posts using allen wrench (part #5). Attach bed frame (\*Not Included) to left headboard post (part B) and right headboard post (part C) using bolts (part #1), spring washers (part #2), flat washers (part #3), nuts (part #4), allen wrench (part #5) and wrench (part #6).

