

USER GUIDE

SHOE RACK

Natural / Stylish / Unique



HARDWARE



! CABINET ASSEMBLY



① Position Side Panel (u) and Front Panel (t) as picture shown, secure with Medium Screw (y).



② Position and insert Panel (v) to slot.




③ Insert Back Panel (s) to slot as picture shown, secure with Medium screw (y).

! HINGE ASSEMBLY



① Position Door (d)(e)(f)(g)(h) and Hinge as picture shown.

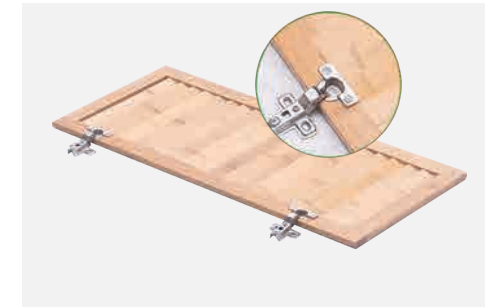

② Secure with Small Screw (z).

© 2020-2021 by Pundarika LLC - MoNiBloom.com

! ATTENTION

- ① Please always read and follow the assembly, maintenance and operating instruction.
- ② Do not discard any of the packaging until you have checked that you have all the parts and pack of fittings.
- ③ Keep children away during assembly. This item contains small parts which can be swallowed by children.
- ④ Wipe frames with water gently, do not use bleach, acid, or other solvents.
- ⑤ Check all hardwares before assembly. Incorrect parts used may lead to damage.



Scan the QR code to view the assembly video.



FINISHED PRODUCT

ASSEMBLY INSTRUCTIONS



① Position Frames (a)(b)(c) on Top Panel (q), secure with Large Screws (z).



② Secure Panels (j)(m)(r) with Large Screws (x) as picture shown.



③ Position and secure Cabinet Support Frame (w) with Large Screws (x).



④ Position and secure rest of the Panels (j)(m) with Large Screws (x).



⑤ Insert Long Back Panel (l) to slot.



⑥ Insert Short Back Panels (k) to slot.



⑦ Insert Back Slat (o) to slot.

© 2020-2021 by Pundarika LLC - MoNiBloom.com



⑧ Secure Bottom Panels (j)(n) with Large Screws (x). Then reverse the rack.



⑨ Secure Bottom Slat (p) with Medium Screws (y).



⑩ Position Doors (d)(e)(f)(g)(h) with Hinges, secure on rack with Small Screws (z).



⑪ Install rest of the doors.



⑫ Insert the cabinet.