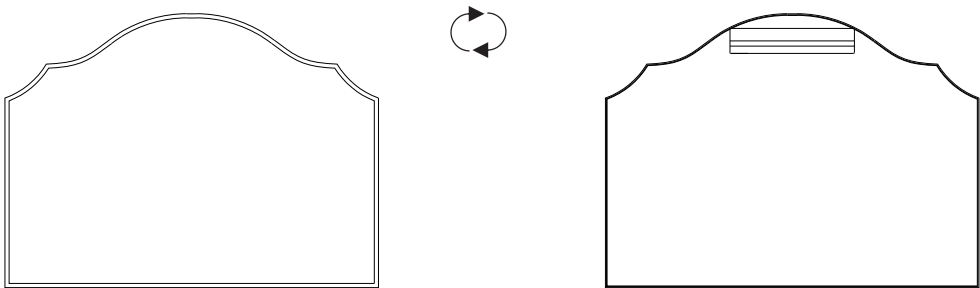



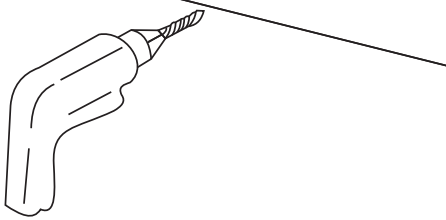
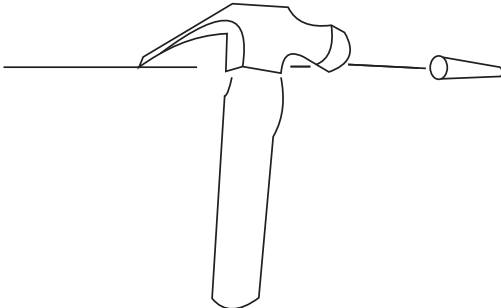
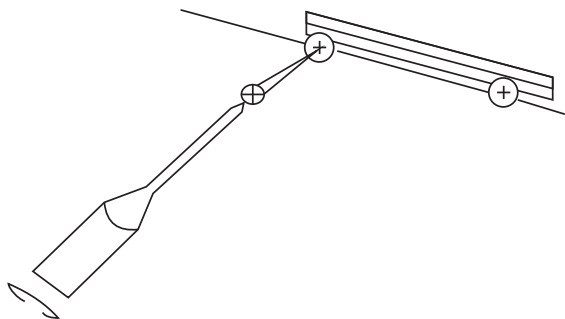
Scalloped Arch Wall Mirror - Installation Instructions



(Tips: Due to the production process, the actual product size has a deviation about +1 inch from the marked size.)

Accessories

	1PCS		2PCS
---	------	---	------

Step 1	Step 2
 Draw a straight line with a ruler to keep the mirror horizontally.	 Drill 2holes or 4 holes according to screws you received.
Step 3	Step 4
 Knock the nail in	 1. Tighten the screw to ensure the wall bracket stay sturdy on the wall. 2. Hang the mirror on the wall brackets.

(any question regarding our item please feel free to contact us)