


# ASSEMBLY INSTRUCTIONS

## TWIN BED

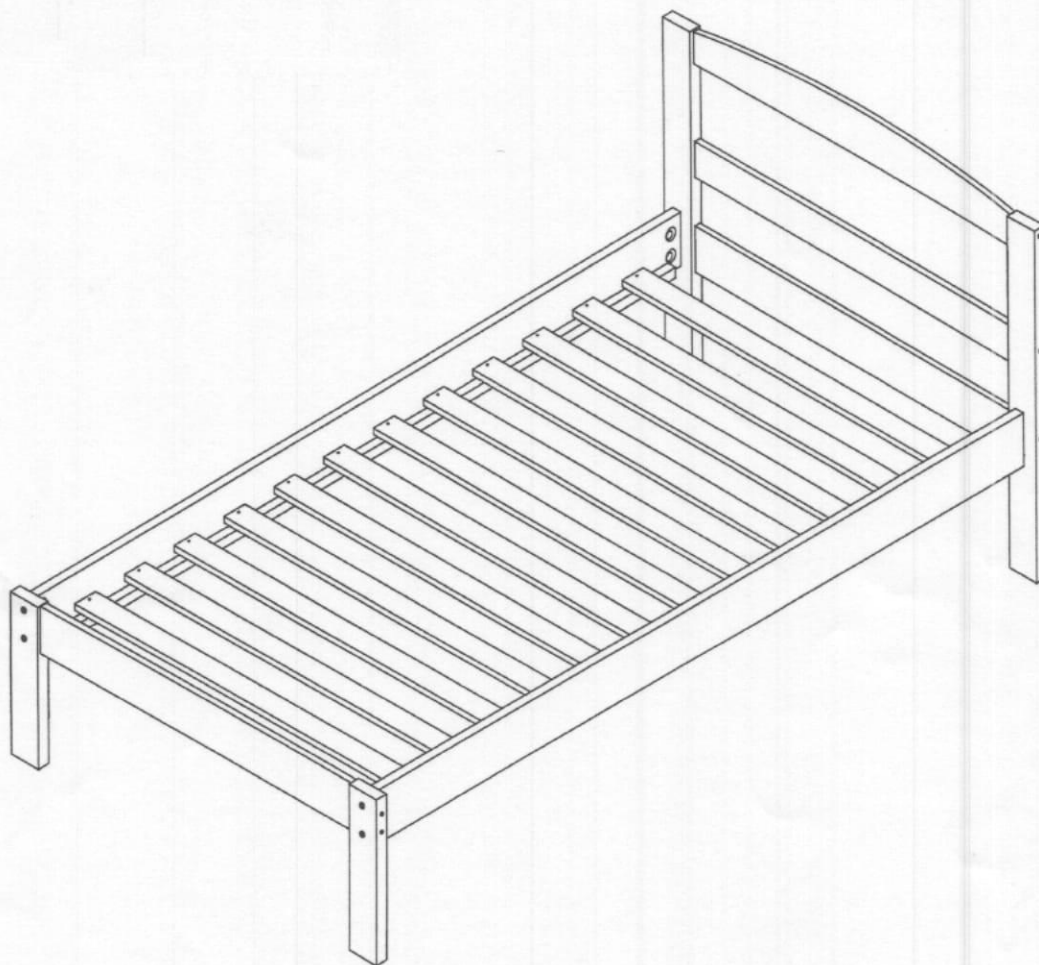

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.


**"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"**




\* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!  
\* Please assemble on a clean soft surface to avoid damage.



### Tools Required




(Not includ)








(Hammer)

**IMPORTANT:**


# Part List: TWIN BED

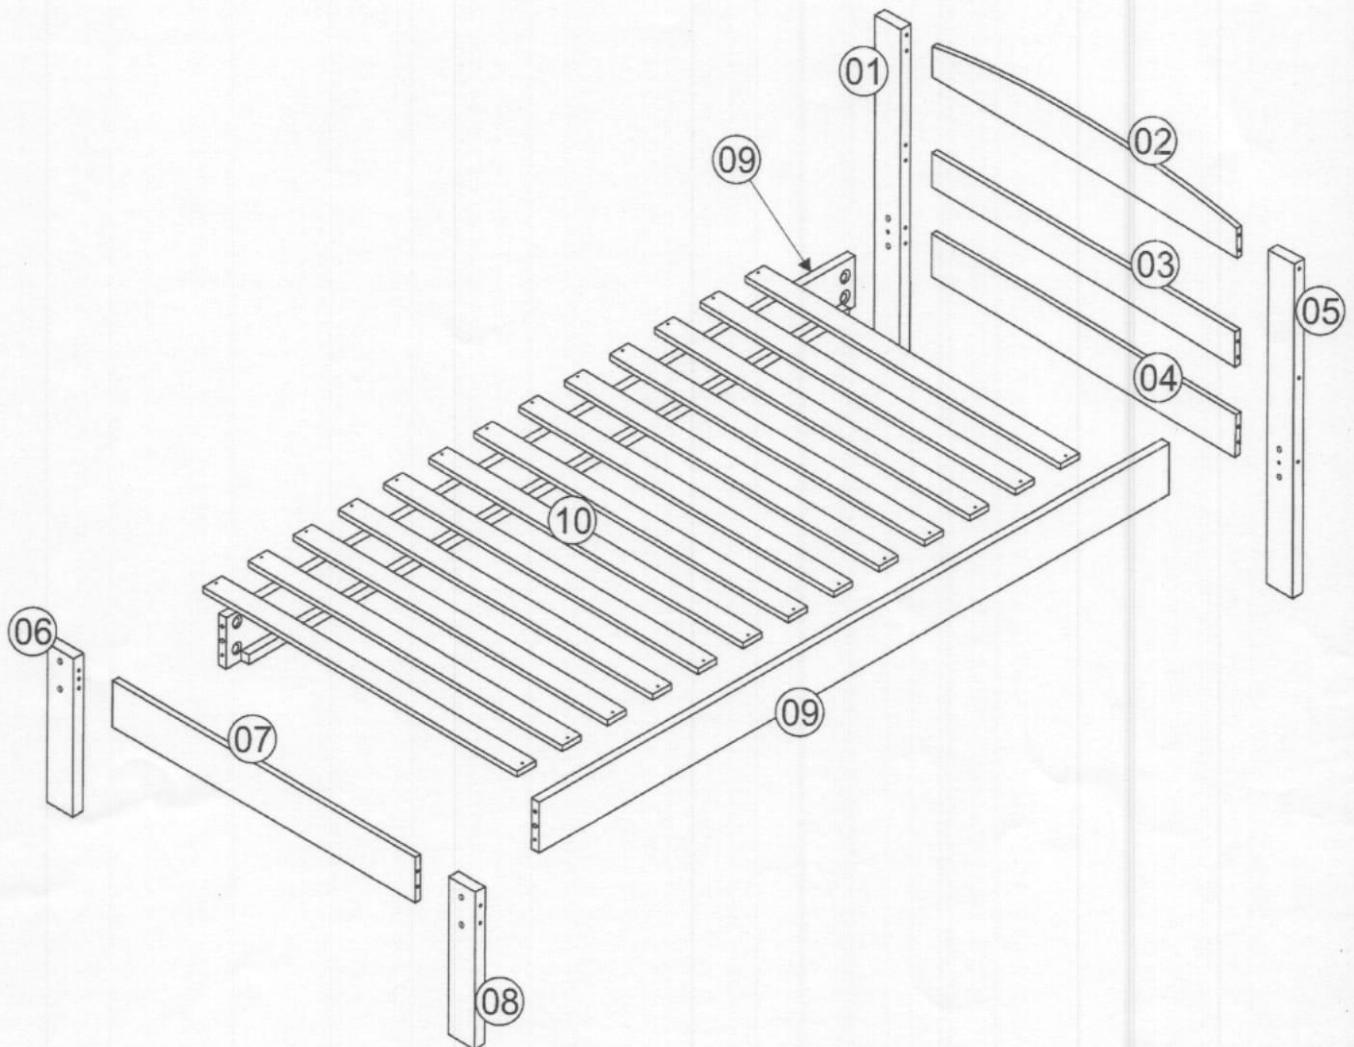


**Identifying the Hardware/part list-** Identify the hardware using the illustrations below.

|                                                                                                                                  |                                                                                                                                   |                                                                                                                                 |
|----------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------|
| <b>A</b>  Qty <b>08</b><br>10 x 70 Wood Dowel | <b>B</b>  Qty <b>04</b><br>10x40 Wood Dowel    | <b>C</b>  Qty <b>10</b><br>7,0 x 100 Screw |
| <b>D</b>  Qty <b>08</b><br>1/4 x 100 Screw    | <b>E</b>  Qty <b>08</b><br>1/4" Half Moon      | <b>F</b>  Qty <b>24</b><br>3,5x30 Screw    |
| <b>G</b>  Qty <b>01</b><br>SPACE SLATS        | <b>H</b>  Qty <b>01</b><br>4mm Hex Screwdriver | <b>I</b>  Qty <b>01</b><br>GLUE            |


# 01

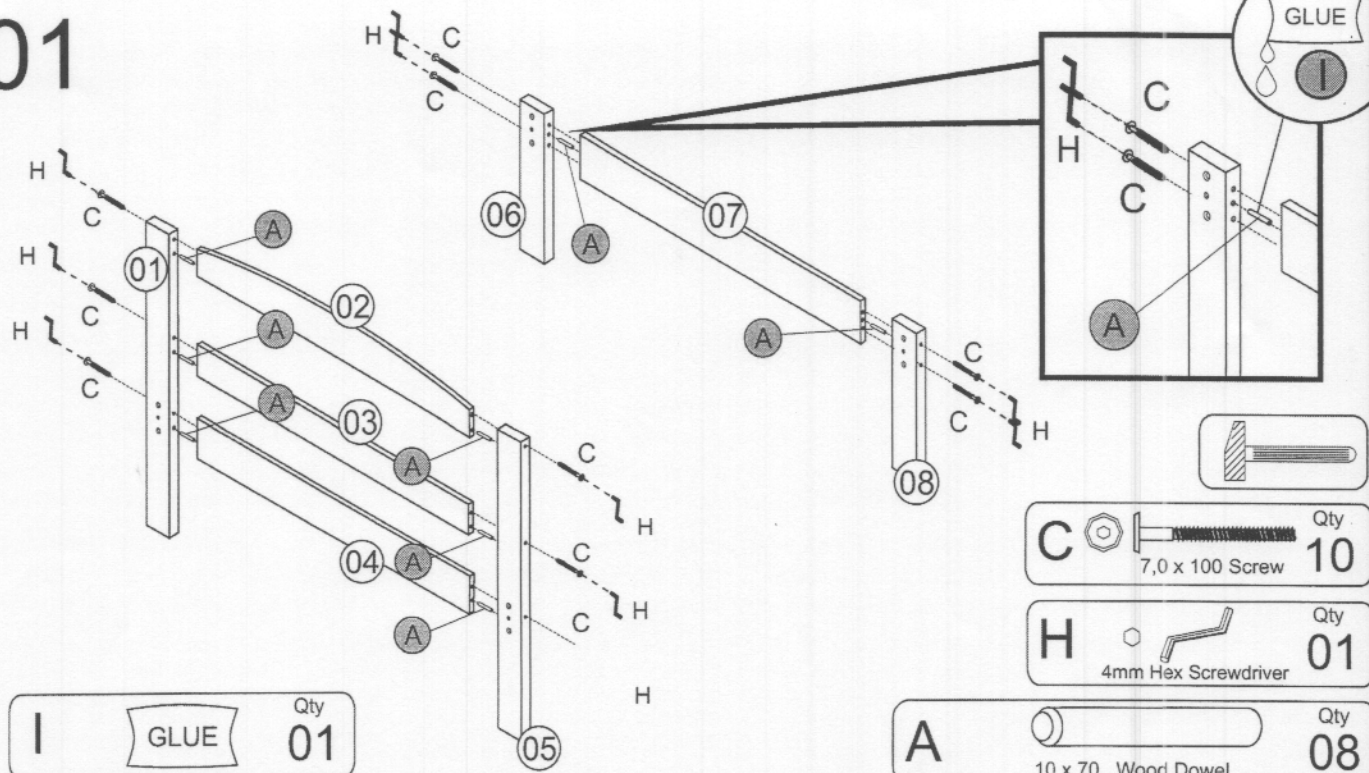

# 02


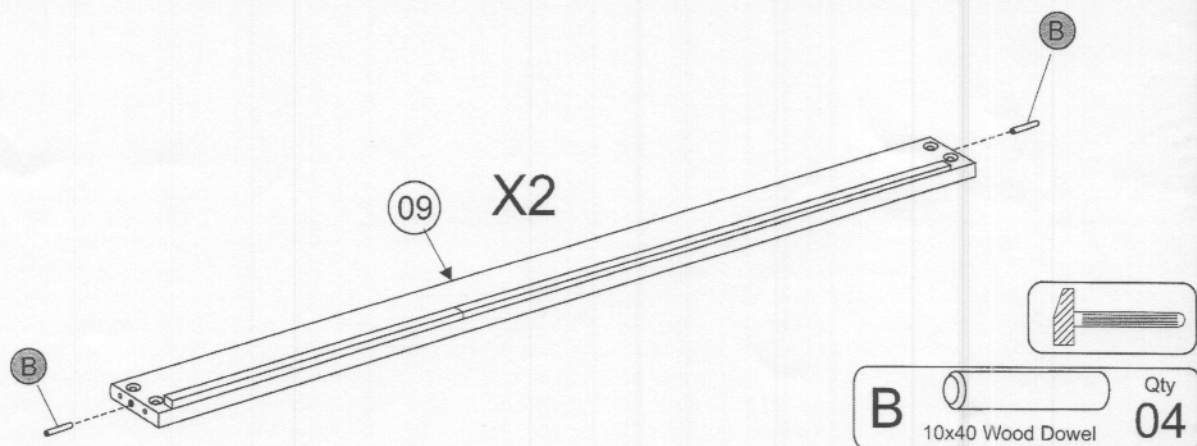


# 03

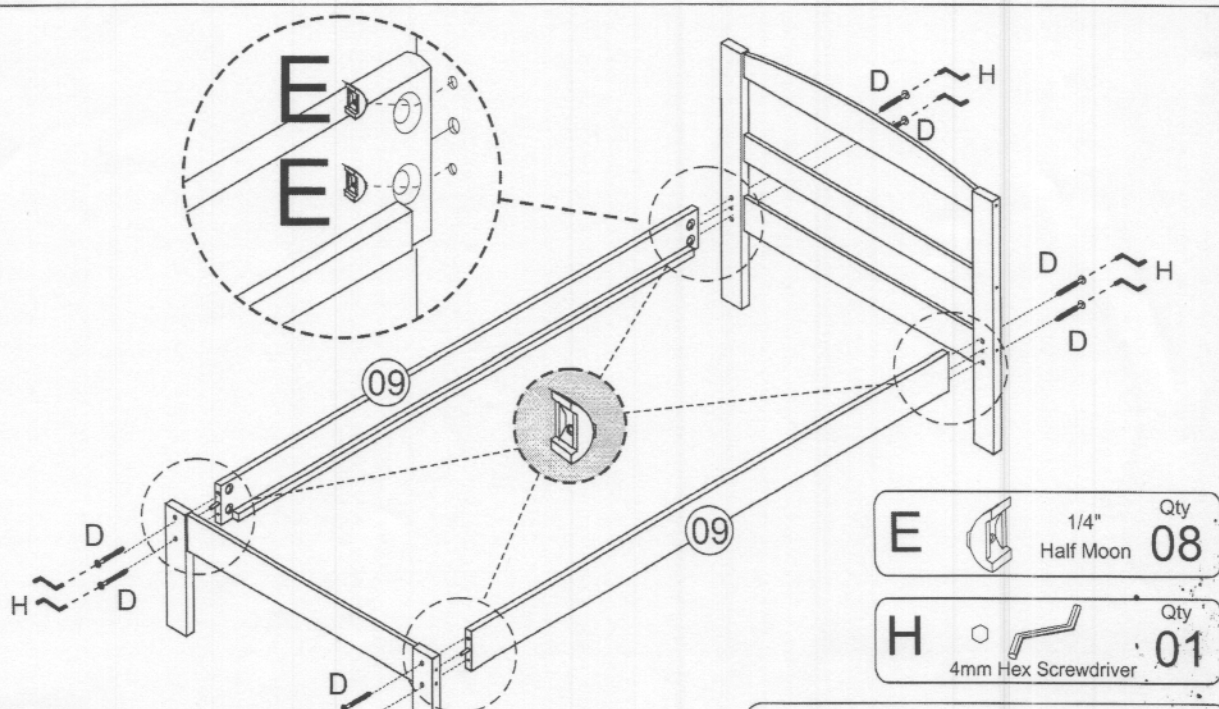



# 04

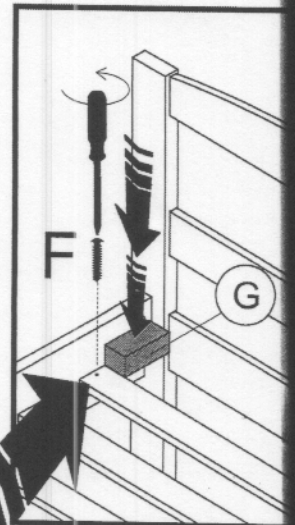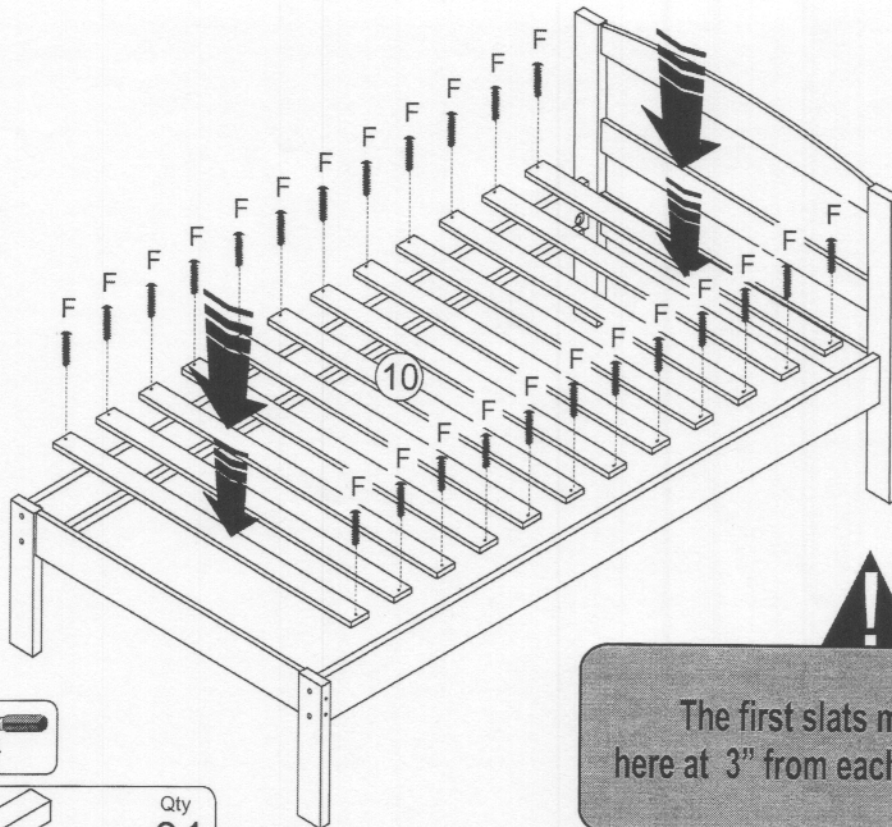

The first slats must be fixed here at 3" from each headboard end.

