

# ROUND UPHOLSTERY BACKLESS VANITY STOOL

Cream Fabric

Grey Fabric

Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required.


## HARDWARE LIST

A (4) Wood Screws M4 x 32mm

## PARTS LIST

B (1) Stool

C (4) Legs


PART	QTY	HARDWARE
A	4	

## STEP 1


Begin assembly by turning the Stool (B) upside down on a clean smooth surface. Unzipped to remove the Legs & Hardware.

## STEP 2

Attach each Legs (C) to the pre-marked outline on Stool (B) using 1 Wood Screw (A), tighten all screws using a Phillip head screwdriver (not provided). The assembly is now complete.

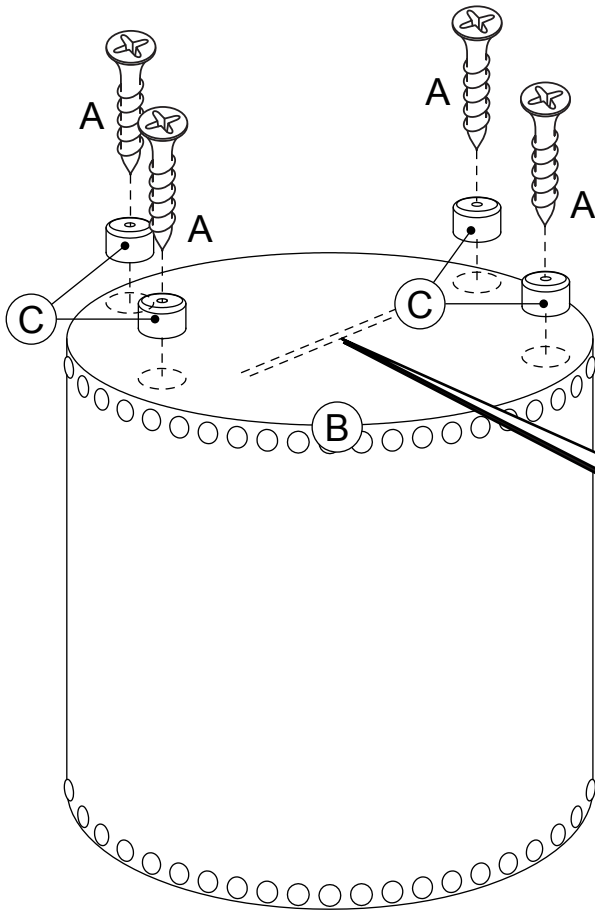

LEGS & HARDWARE INSIDE

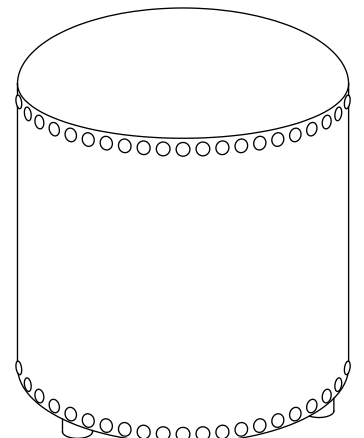

**CARE & MAINTENANCE:** The touch of a soft cloth is all the maintenance the finish will ever need. Please do not use harsh or abrasive cleaners for polishing, as they may cause damage to the finish. Periodic checks are recommended to make sure that all hardware is securely tightened.