


Assembly Instructions

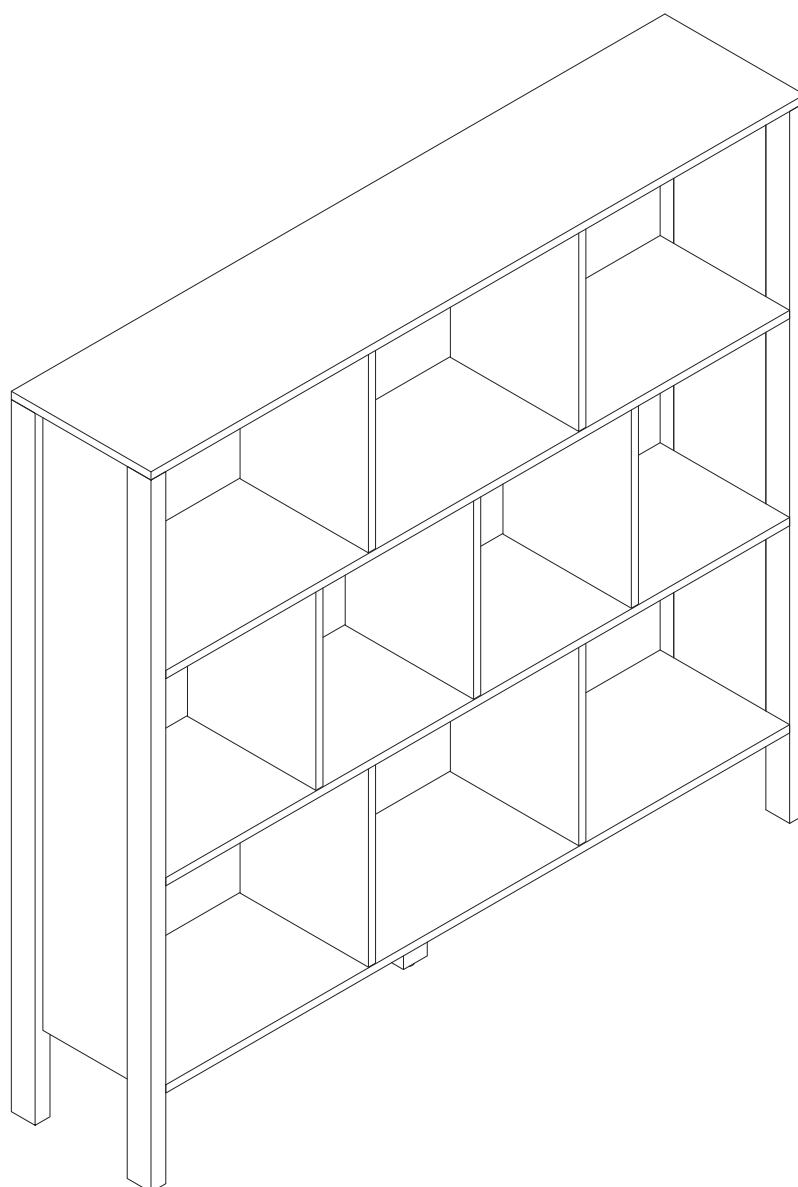

warning notice



- Open your item in the area you plan to keep it for less heavy lifting.



- Identify, sort, and count the parts before attempting assembly.



- Lay all parts on smooth flat surface.



- Make sure to always face the point on the top of the Cam Lock towards the outer edge.



- Do NOT use harsh chemicals or abrasive cleaners on this item.



- Never push, pull, or drag your furniture.



Teamwork

Failure to use 2 people for assembly could result in unit damage or personal injury.

Before You Start


Read through each step carefully and follow the proper order

Separate and count all your parts and hardware

Give yourself enough room for the assembly process


Have the following tools: Phillips Head Screwdriver and Hammer

Caution: If using a power drill or power screwdriver for screwing please be aware to slow down and stop when screw is tight. Failure to do so may result in stripping the screw.

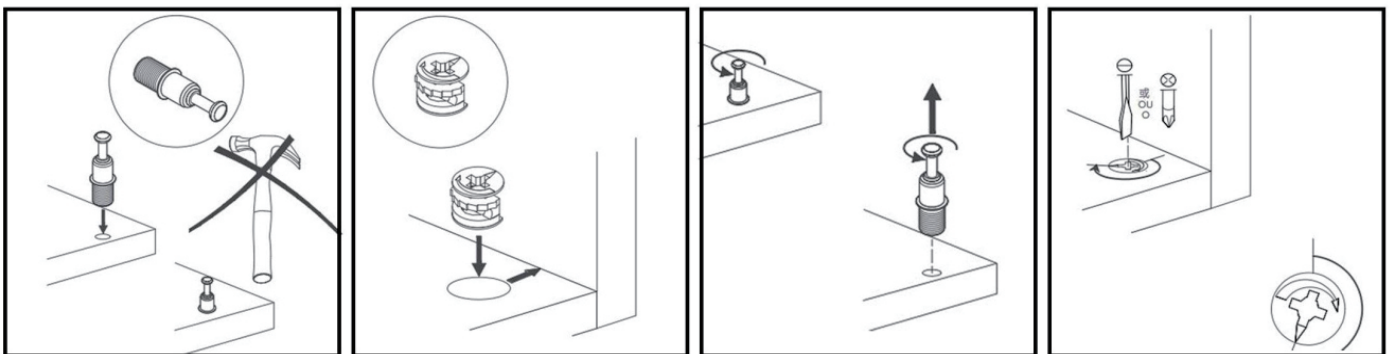


If the door panel is not sitting at a right position or angle, follow the steps below to improve.










- (1) Loosen the hinge, adjust the door panel position (up and down) then fasten the screws to secure the hinge (Step 1), or,
- (2) Loosen the middle screw of the hinge and adjust the door panel in and out, to desired position, then fasten the screws to secure the hinge (Step 2), or
- (3) Adjust the nut at the centre of the hinge to fine tune the tilting angle of the door panel (left or right) to make the door panel to be vertical.

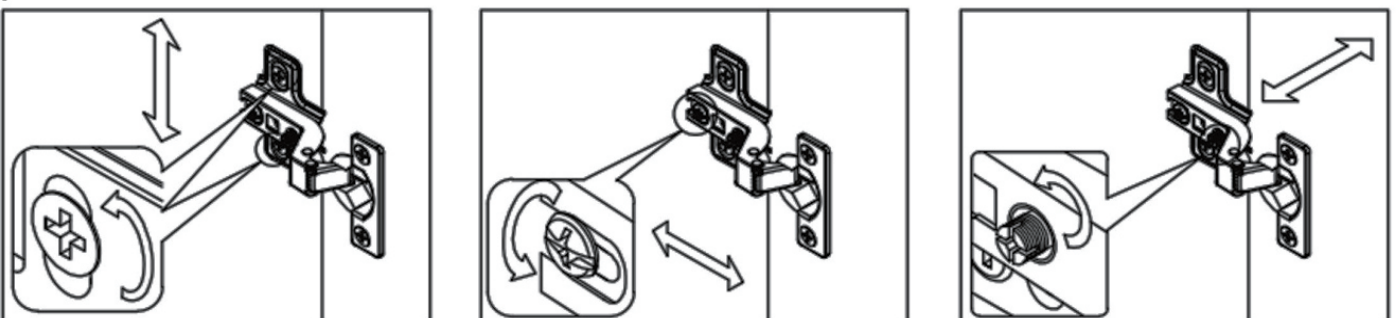




Components

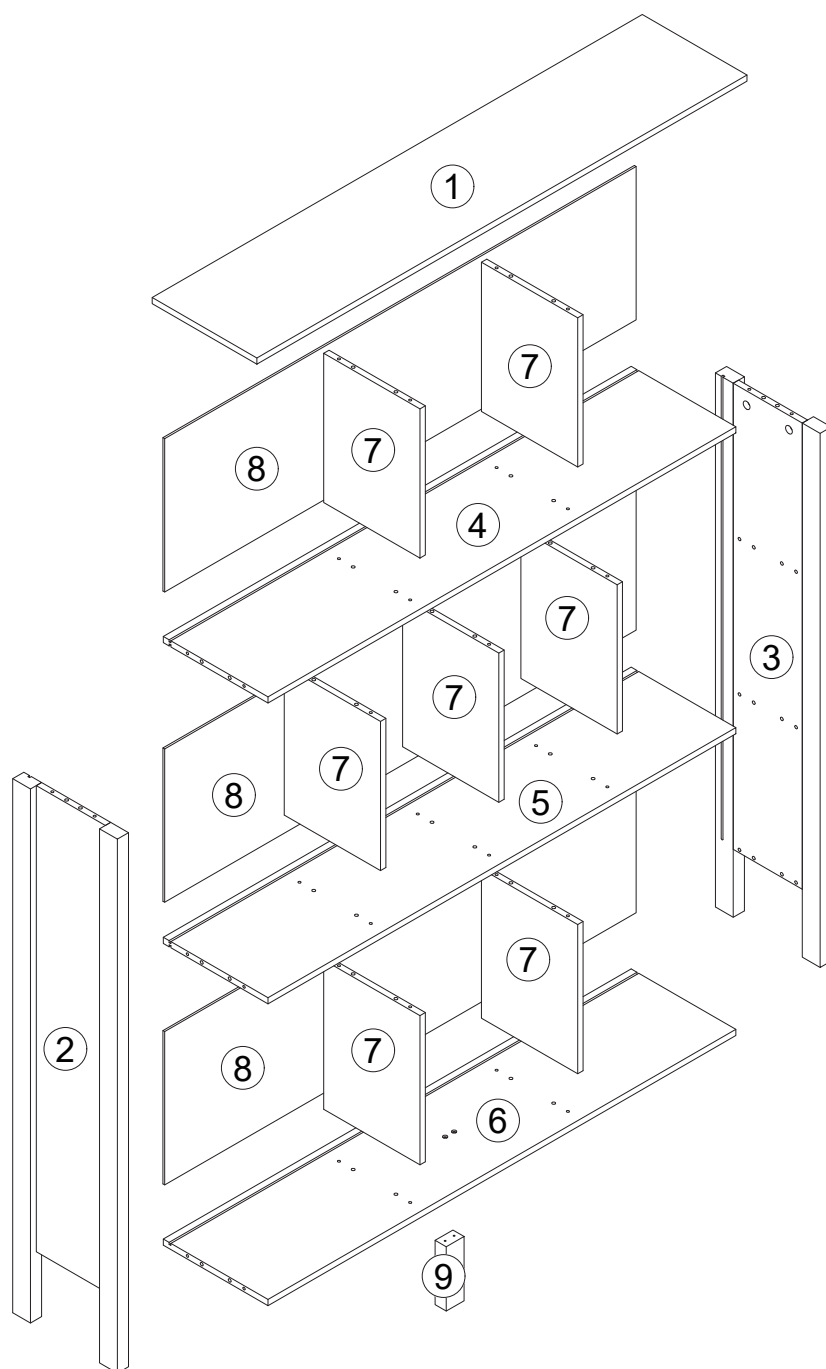

Components

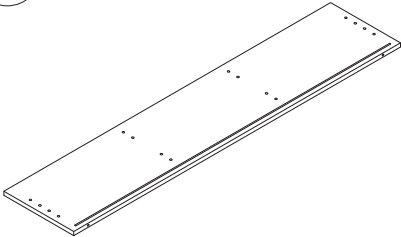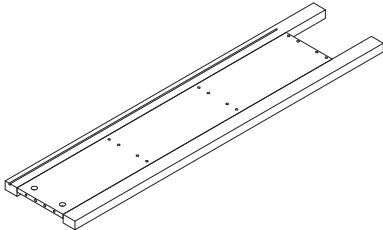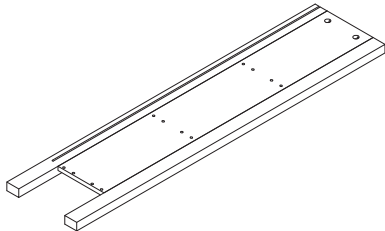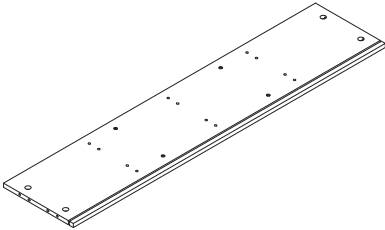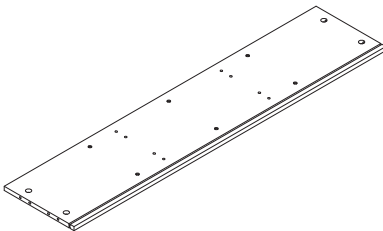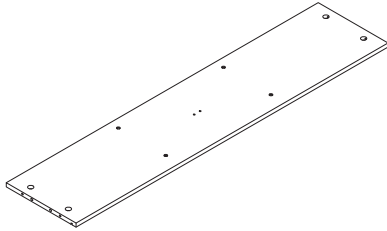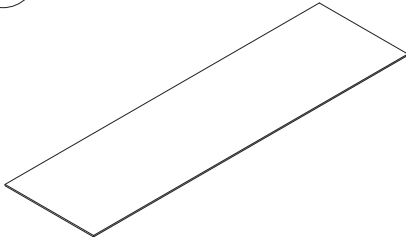
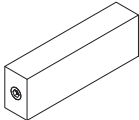
① 1PC  236x1100x12cm	② 1PC  235x1038x25cm	③ 1PC  235x1038x25cm
④ 1PC  234x1049x12cm	⑤ 1PC  234x1049x12cm	⑥ 1PC  234x1049x12cm
⑦ 7PC  216x290x12cm	⑧ 3PC  297x1057x2.5cm	⑨ 1PC  40x124x25cm

Components

A M6*35  30PCS +2(spare)	B M15*10  30PCS +2(spare)	C Ø6*30  44PCS +2(spare)	D M4*35  16PCS +2(spare)
E  1PCS	F  F-2  F-1 12PCS	G  G-1  G-2  G-3  G-4 2PCS	H  4PCS
I  20PCS +2(spare)			

Assembly Instructions

STEP 1

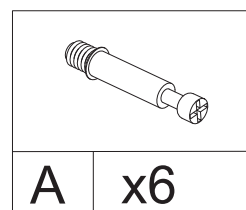
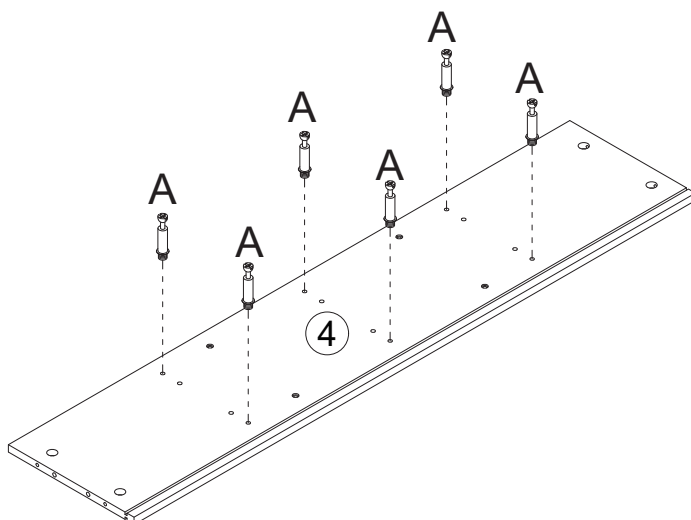


A x6


STEP 2



without edge banding

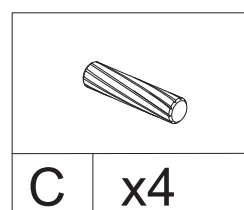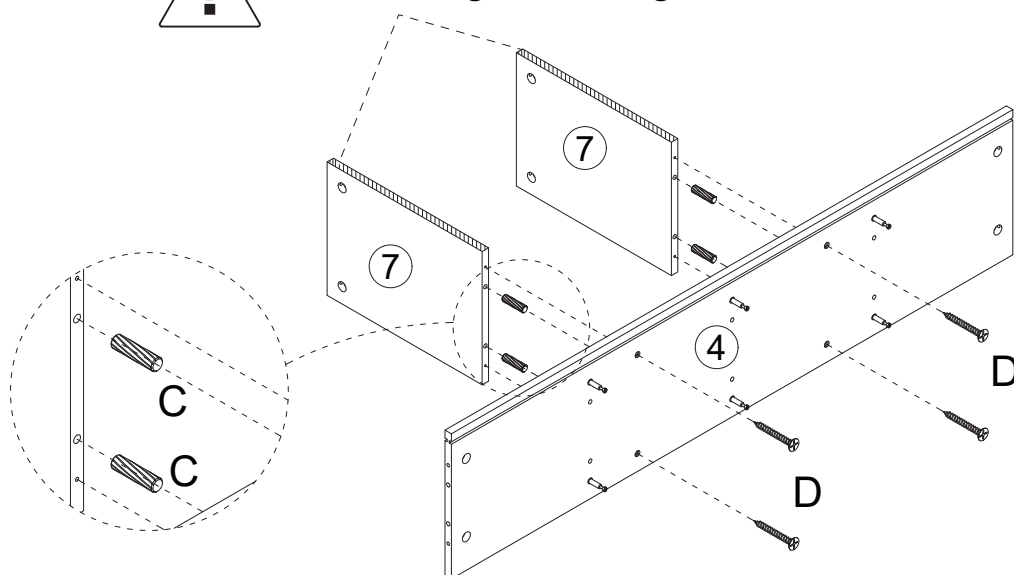

C x4

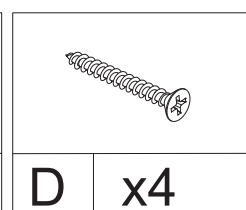



D x4

Assembly Instructions

STEP 3




without edge banding

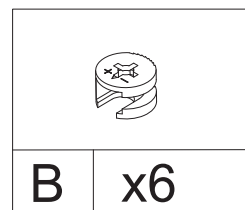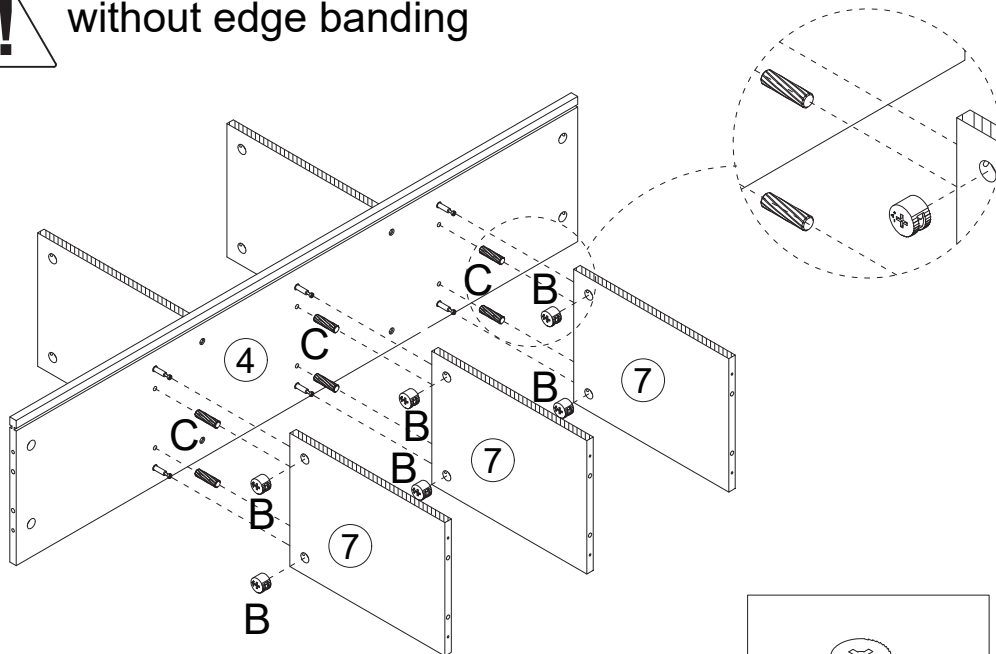

B



x6

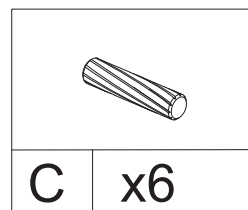

C

x6

STEP 4

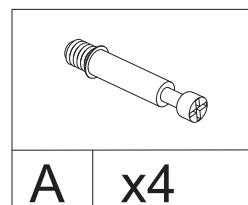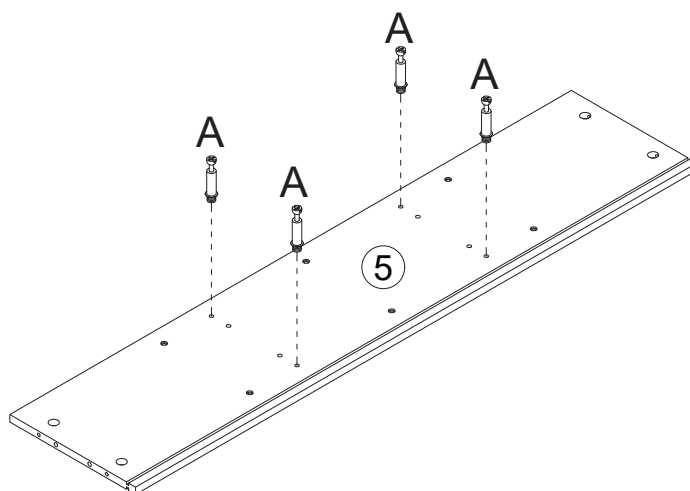


A


x4

Assembly Instructions

STEP 5




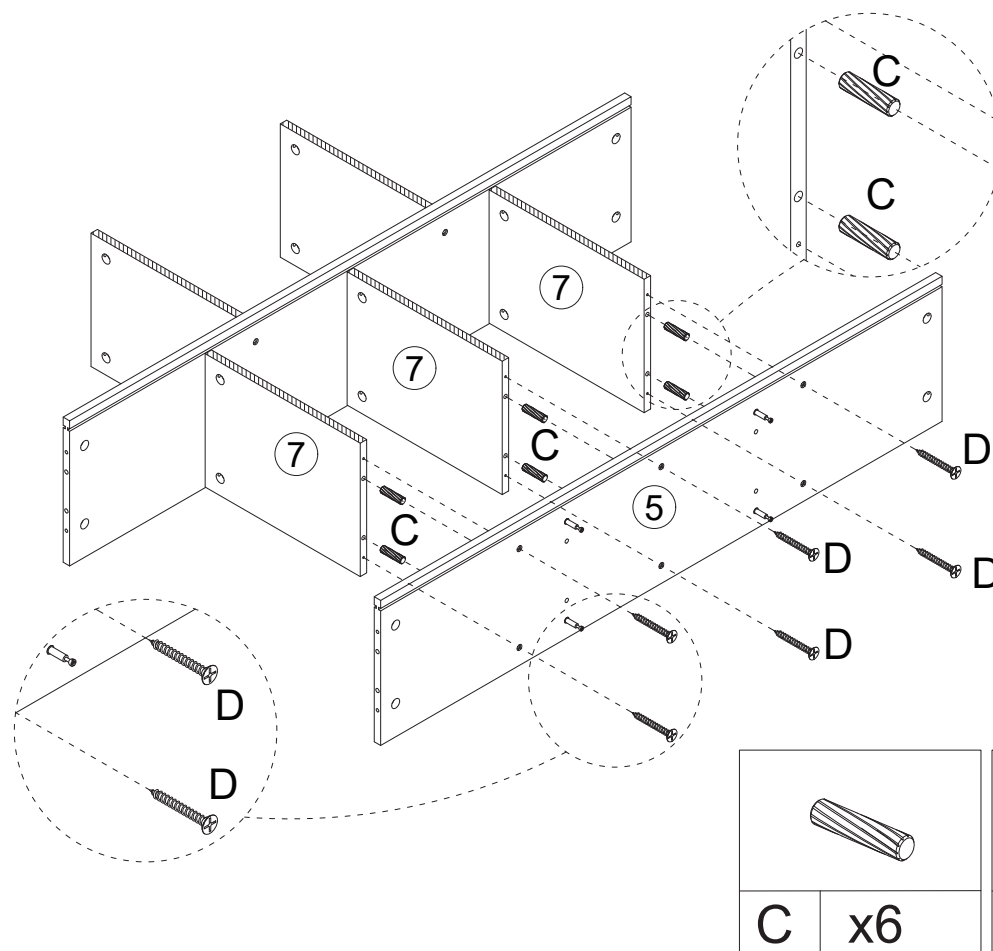


STEP 6

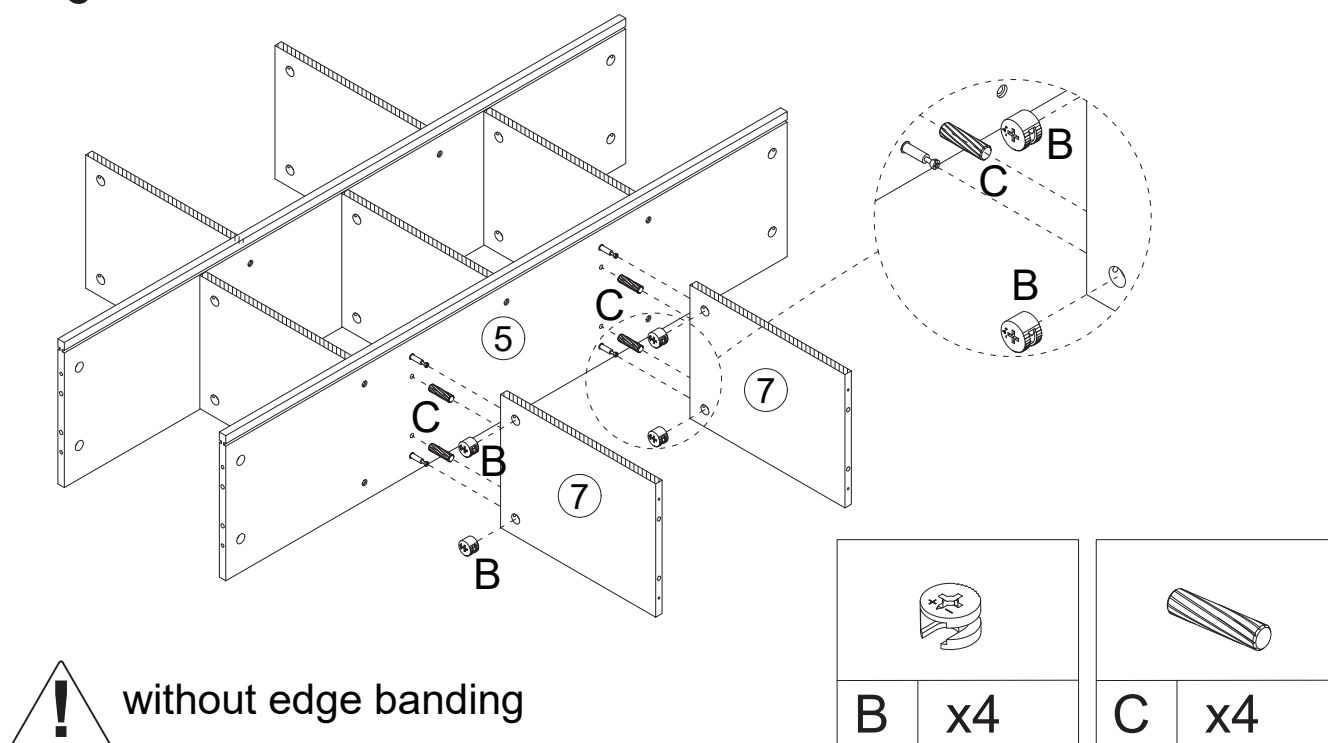





Assembly Instructions

STEP 7

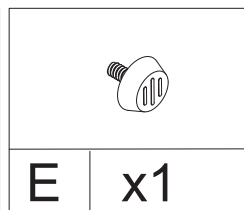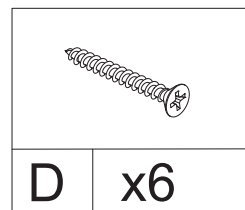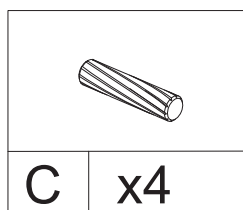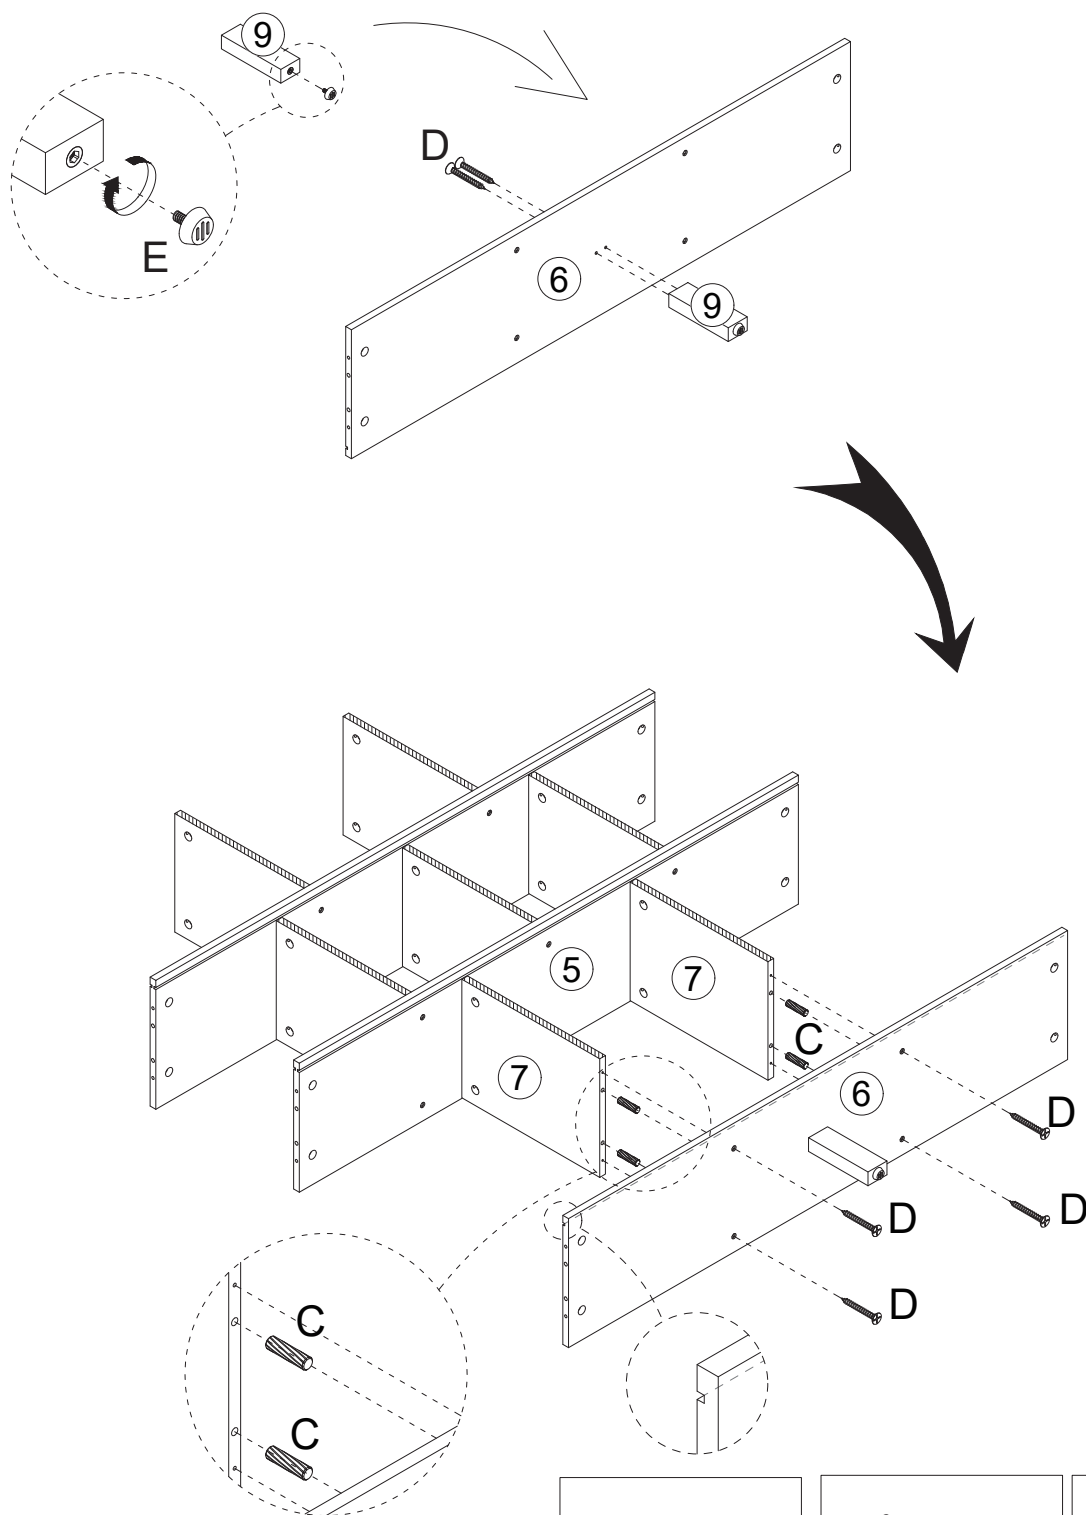


Assembly Instructions

STEP 8

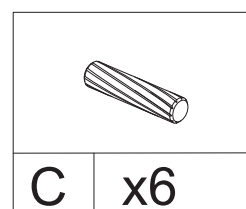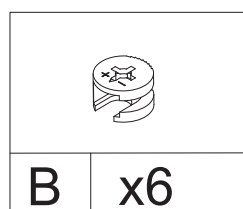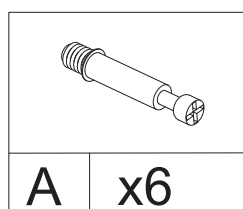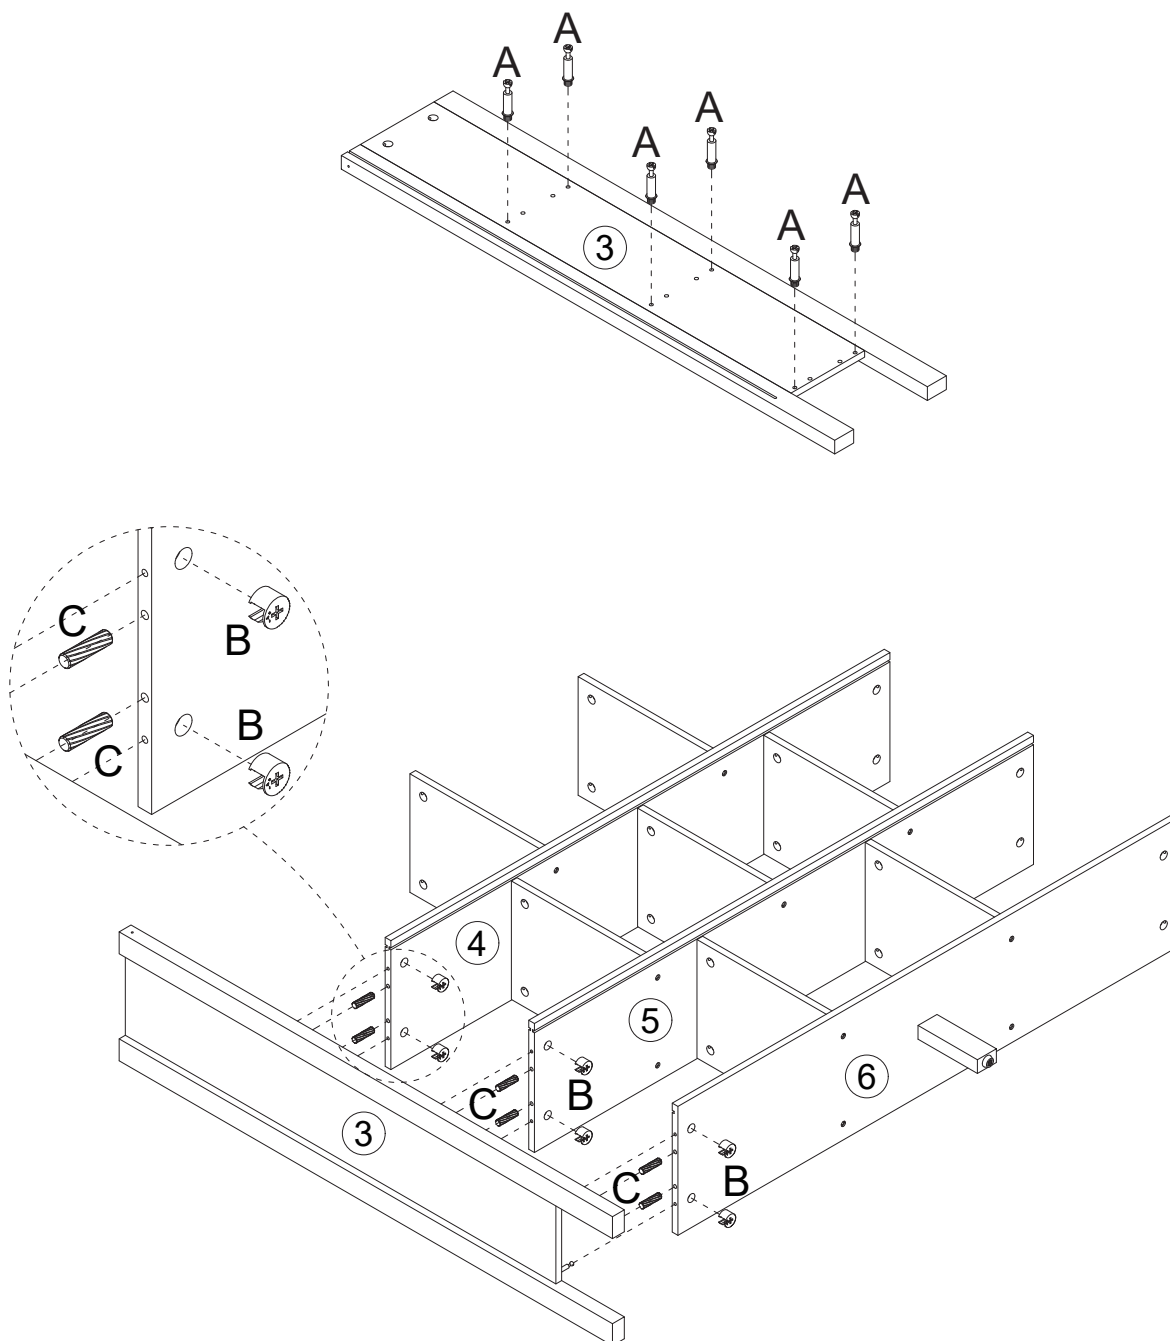






Assembly Instructions

STEP 9

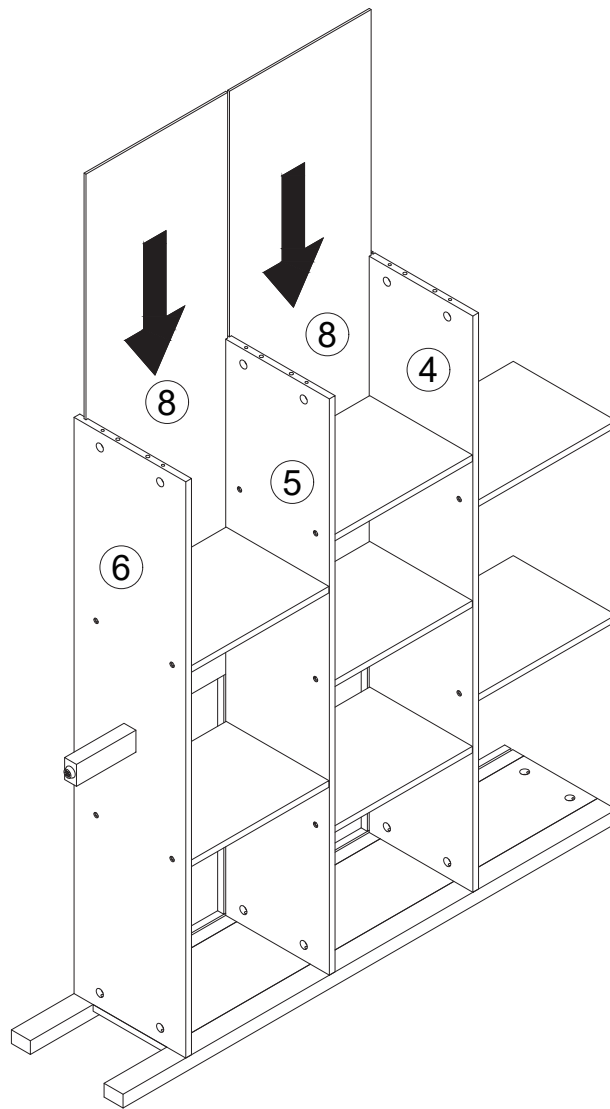


Assembly Instructions

STEP 10

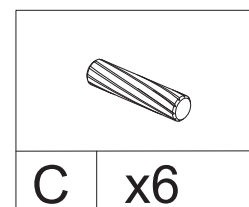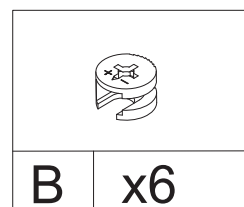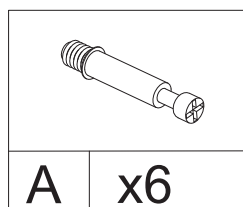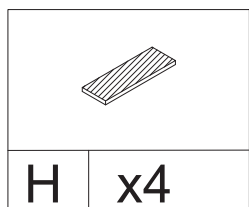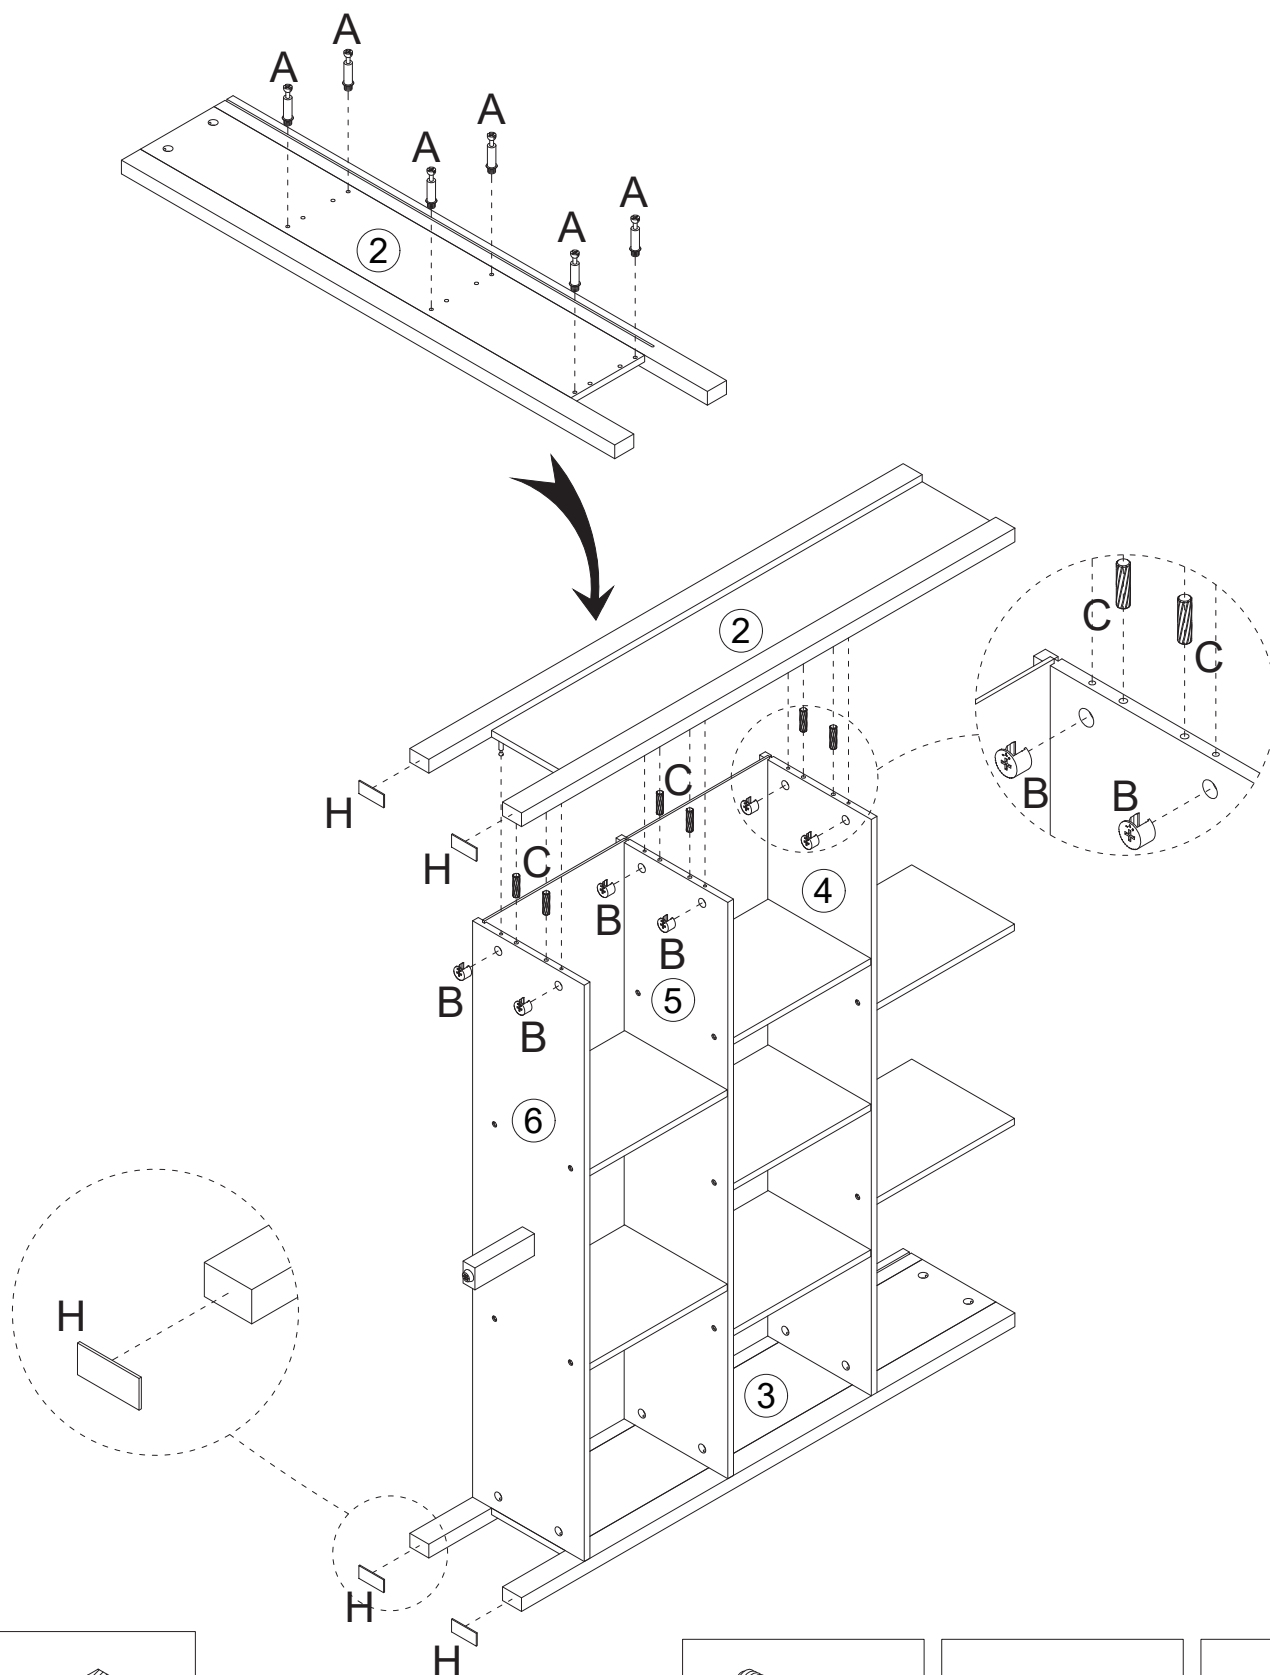





Assembly Instructions

STEP 11

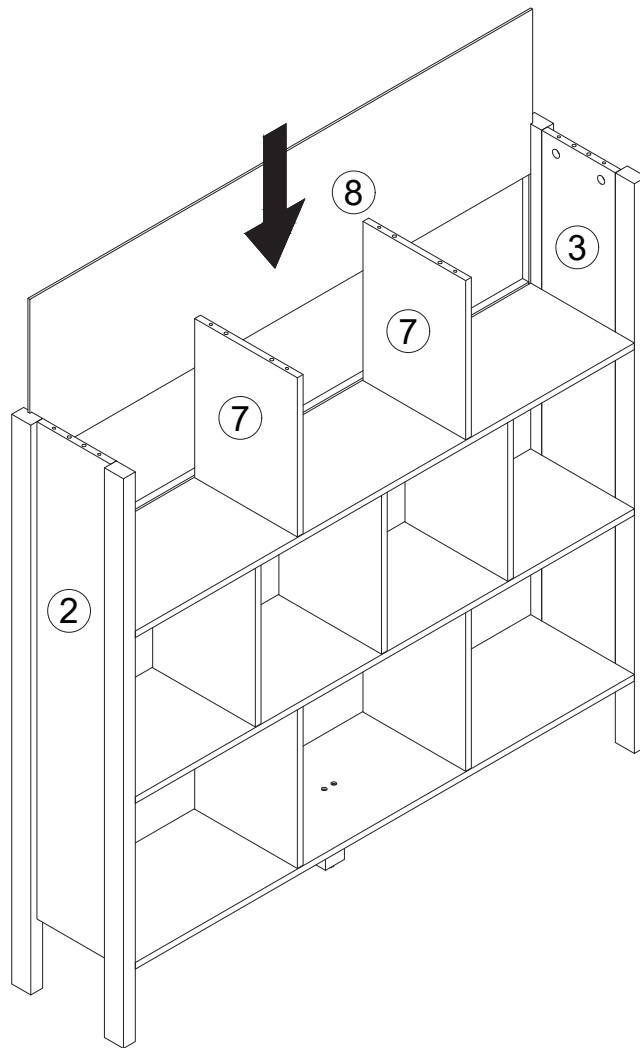


Assembly Instructions


STEP 12

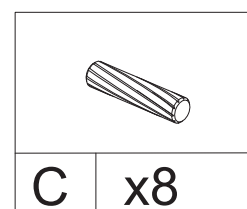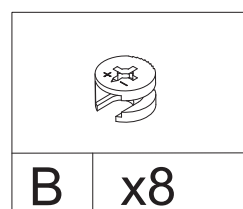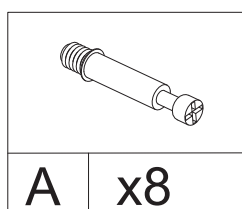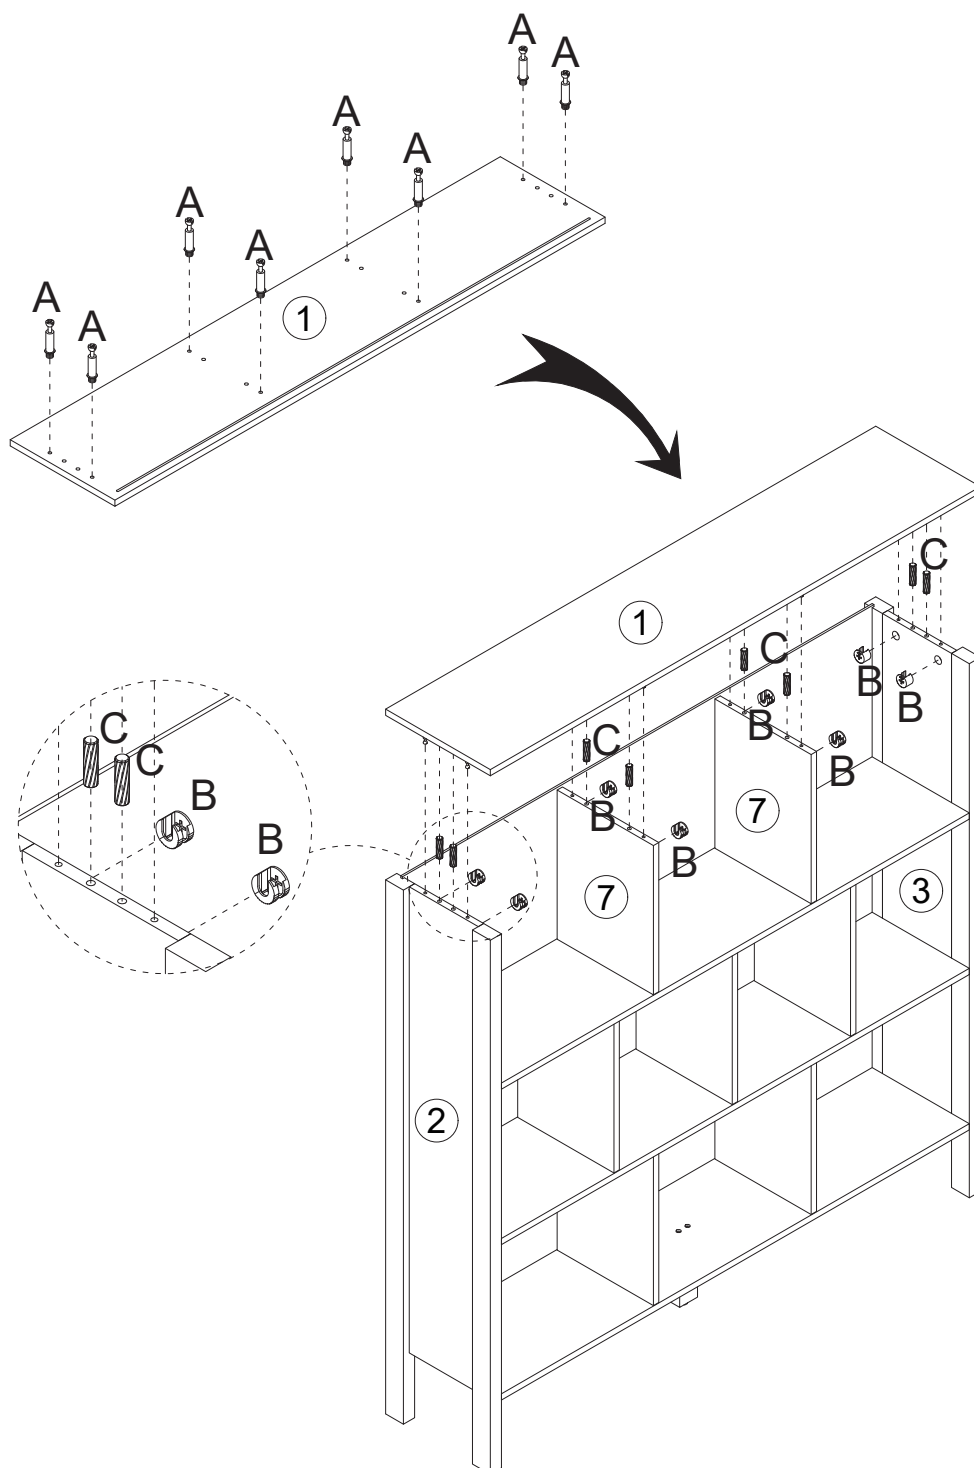

Assembly Instructions

STEP 13

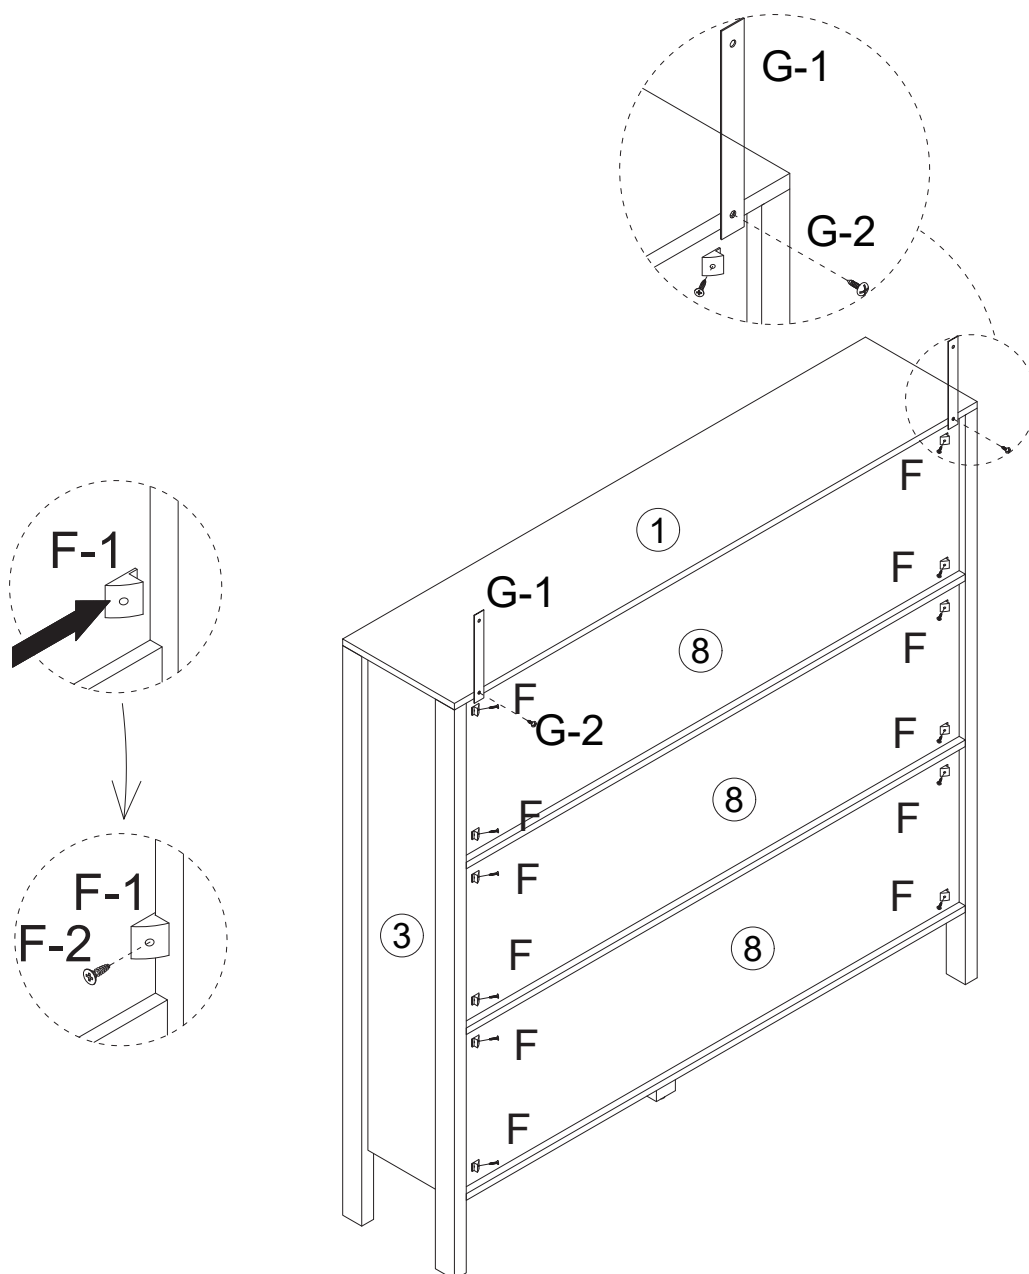

 	
G-1	G-2
G	x2

 	
F-1	F-2
F	x12

Assembly Instructions

STEP 14

