


# 12' × 16' Metal Patio Gazebo

## ASSEMBLY MANUAL

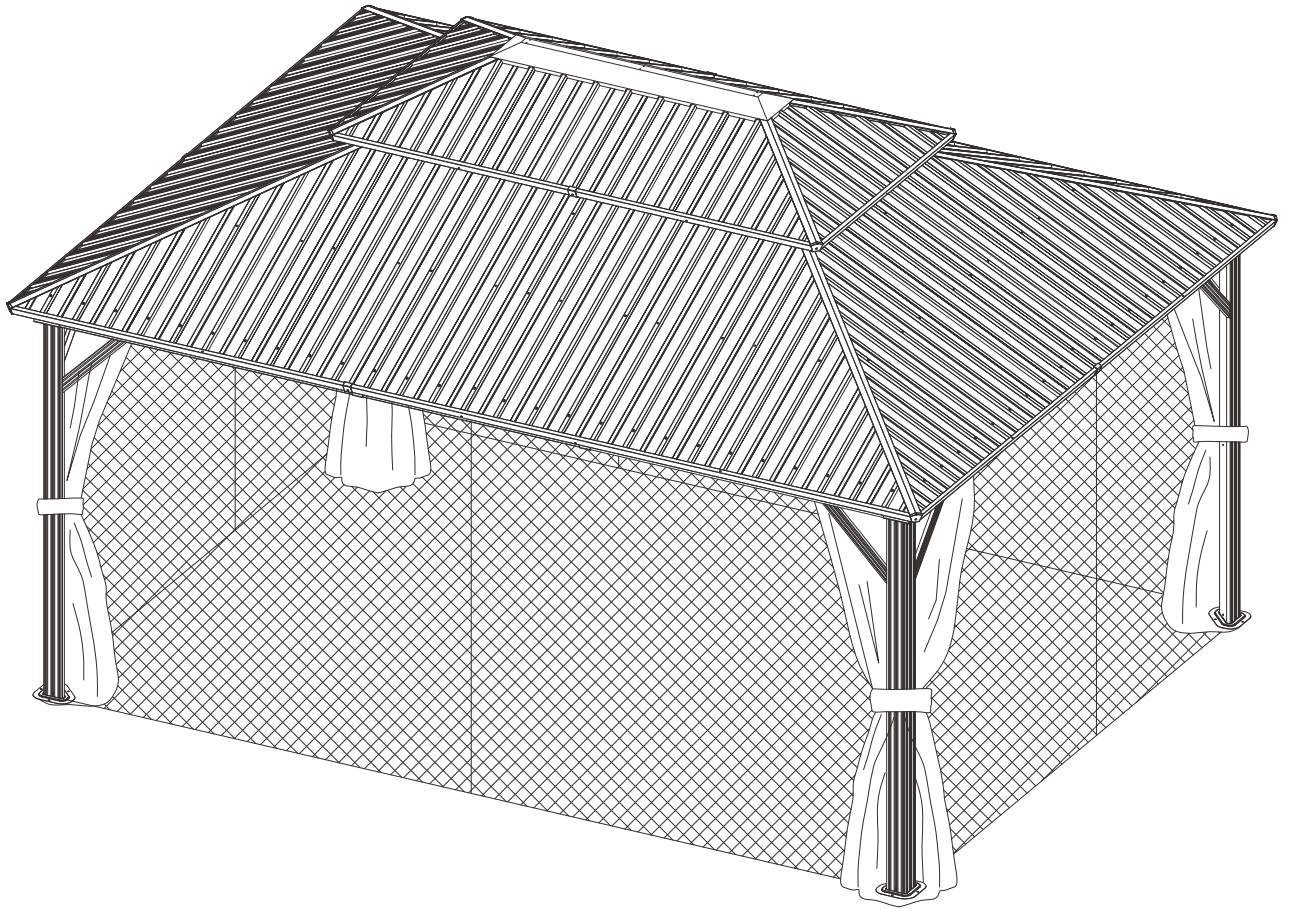

MODEL#: LGMF1598

Missing part? Damaged? Contact us via email at  
[service@domioutdoorliving.com](mailto:service@domioutdoorliving.com)

[www.domioutdoorliving.com](http://www.domioutdoorliving.com)

## Pre-assembly



1. Two or more people are required for assembly.



2. You will need one or more stepladders.



3. Wearing protective gloves is recommended.



4. You may need a safety hat.



5. Please use a Phillips screw driver.



6. For ease of construction, you may need a drill.



7. You may need a safety goggle.



8. Do not fully tighten screws prior to complete assembly.


## Warning & Attention

-Try to assemble this product on the flat ground, otherwise it is difficult to carry out;

-It would be much easier to assemble the product with three or more people;

-After assembly, please check whether all screws are tightened, to prevent parts from falling apart.

▲ Use bolts to secure the frame to the ground to against the strong wind.

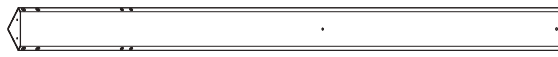

A 4x Pole



C 2x Beam



C1 2x Beam



D 2x Beam



D1 2x Beam



D2 2x Beam Connector




E 4x Corner Roof Bar




E1 4x Corner Roof Bar Connector




E2 8x Roof Bar

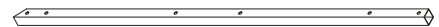


F 4x Solidfying Bar

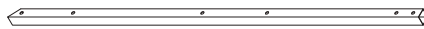


G 4x Solidfying Bar

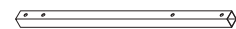

G1 4x Solidfying Bar

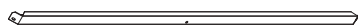

H 2x Finishing Bar

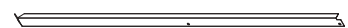


H1 2x Finishing Bar



H2 2x Finishing Bar



J 2x Finishing Bar

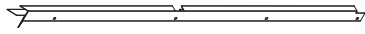

J1 2x Finishing Bar



J2 2x Finishing Bar



K 2x Finishing Bar




K1 2x Finishing Bar




K2 2x Finishing Bar




K3 2x Finishing Bar

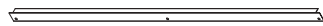


K4 2x Finishing Bar

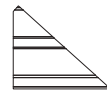


L1 2x Roof Panel

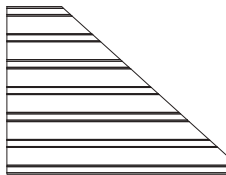


L2 2x Roof Panel

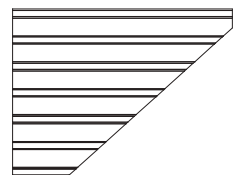


L3 2x Roof Panel

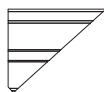


L4 2x Roof Panel

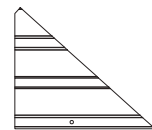


M1 2x Roof Panel

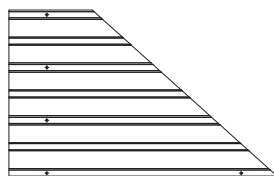


M2 2x Roof Panel

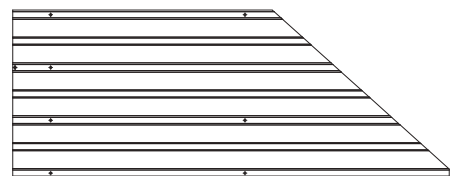


M3 2x Roof Panel

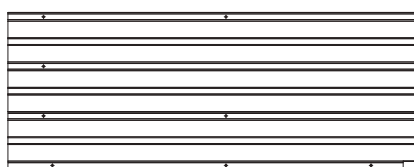


M4 2x Roof Panel

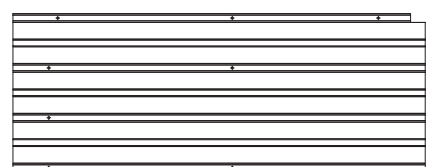

M5 2x Roof Panel

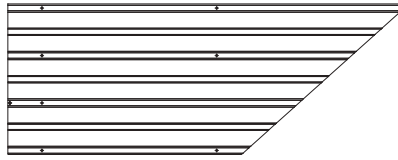


M6 2x Roof Panel

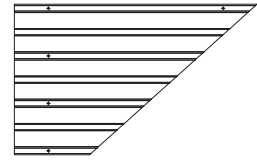


M7 2x Roof Panel



M8 2x Roof Panel

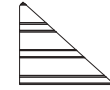


N1 2x Roof Panel

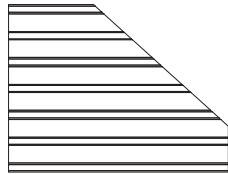


N2 2x Roof Panel




N3 4x Roof Panel

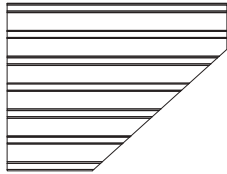


N4 2x Roof Panel

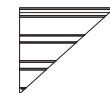


N5 2x Roof Panel

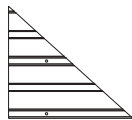


P1 2x Roof Panel

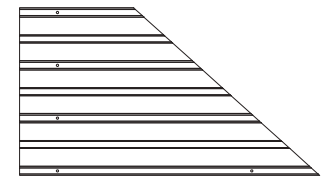

P2 2x Roof Panel

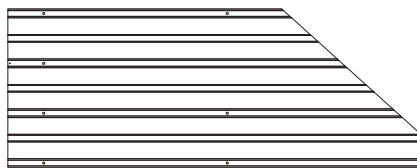


P3 2x Roof Panel

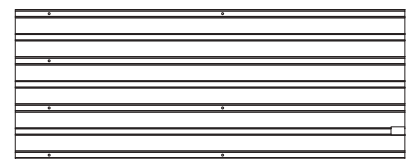


P4 2x Roof Panel




P5 2x Roof Panel

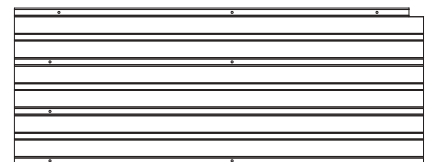


P6 2x Roof Panel

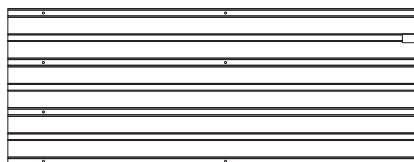


P7 2x Roof Panel

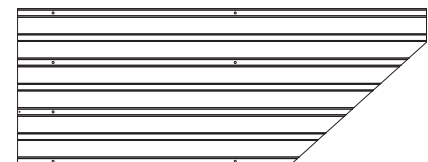


P8 2x Roof Panel

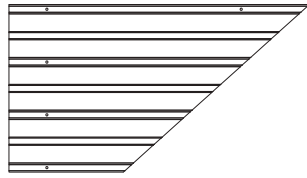


**P9** 2x Roof Panel

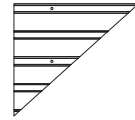


**P10** 2x Roof Panel

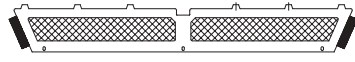


**Q** 2x Net Frame

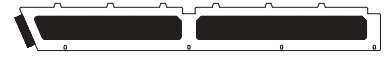

**Q1** 2x Net Frame

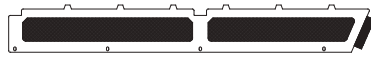

**Q2** 2x Net Frame

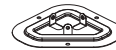


**B** 4x Base




**B1** 8x Joint Cover




**B2** 8x Joint Cover

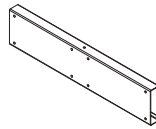


**C2** 6x Union Bar

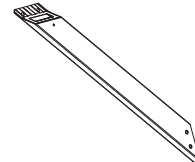


**R** 4x Corner Solidifying Bar

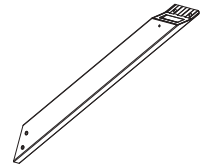


**R1** 4x Corner Solidifying Bar

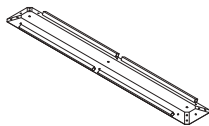


**S** 1x Inside Roof Connector

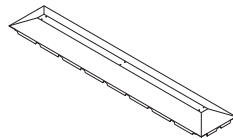


**S1** 1x Outside Roof Connector

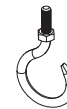


**T** 3x J-Hook

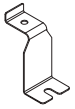

**T1** 4x Bracket

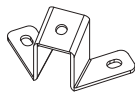


**U** 4x Bracket

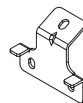

**U1** 8x Bracket




**U2** 4x Bracket

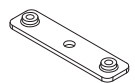

**U3** 8x Joint Cover




**V** 128x Hook

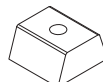

**W** 140x Spacer



**X** 6x Bracket

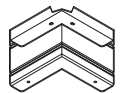

**X1** 4x Corner Cover




**X2** 10x Finishing End



**X3** 12x Finishing End



**Y** 4x Solid Sidewall

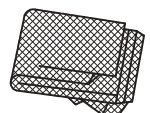

**Y1** 4x Mosquito Sidewall




**Z** 76x Plastic Bracket



**Z1** 4x Plastic Bracket



**Z2** 4x Plastic Bracket

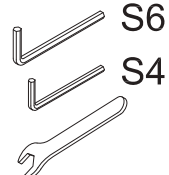

**1** 1x




**ST6.3x15**

**2** 12x



**ST5x16**

**3** 24x

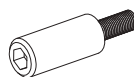

**M6x15**

**4** 32x



**M6**

**5** 144x



**M5x12**

**6** 16x




**M6x10**

**7** 28x



**M6x16**

**8** 242x

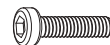


**M6x25**

**9** 8x




**M6x28**

**10** 88x

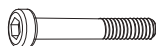


**M6x45**

**11** 4x

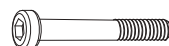








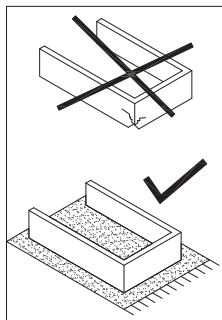**M6x50**



**12** 40x




**5**


<b>A</b> 4x

<b>B</b> 4x
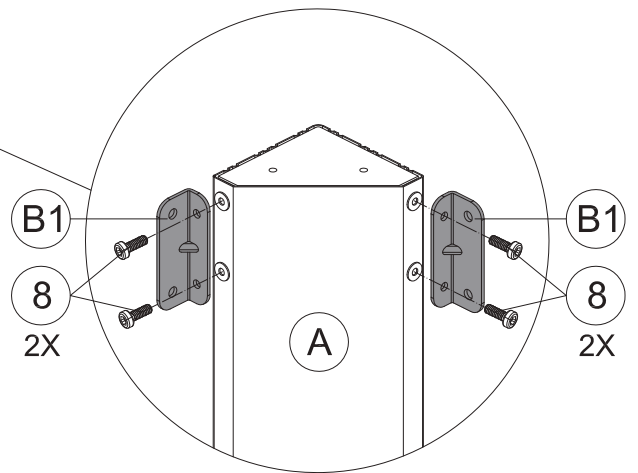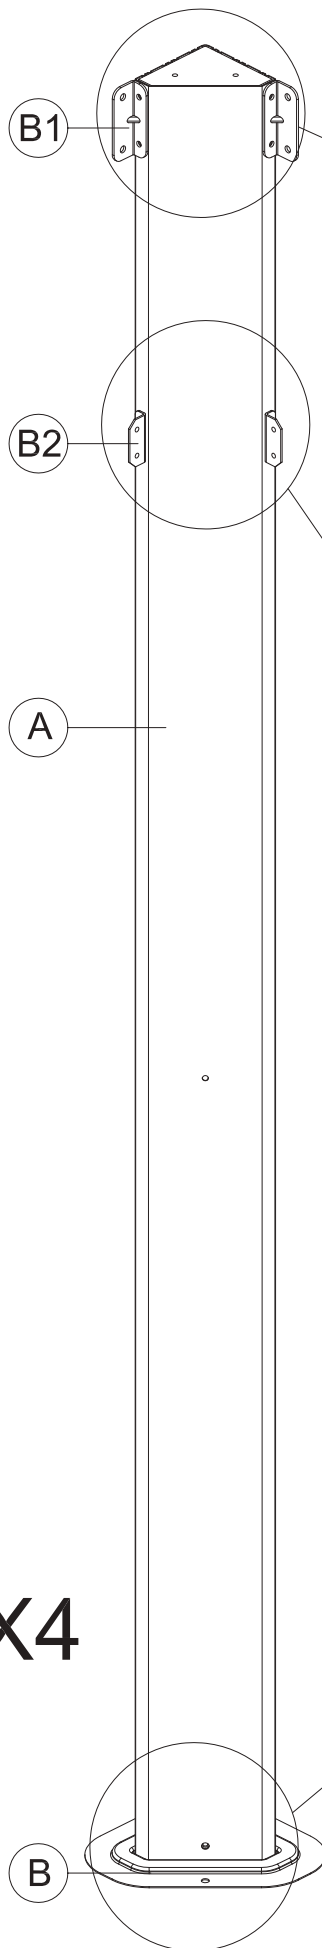
<b>B1</b> 8x

<b>B2</b> 8x
 S4
<b>1</b> 1x

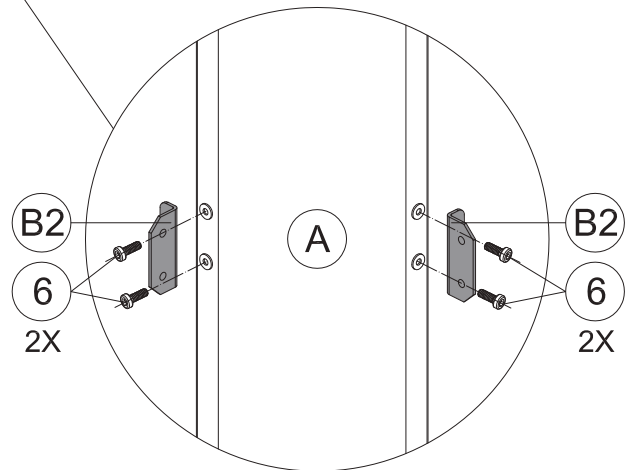M5x12
<b>6</b> 16x

M6x16
<b>8</b> 28x
<b>6</b>


**X4**



(1) Attach 2 Part #B1 to Part #A with 4 Bolts #8.









(2) Attach 2 Part #B2 to Part #A with 4 Bolts #6.

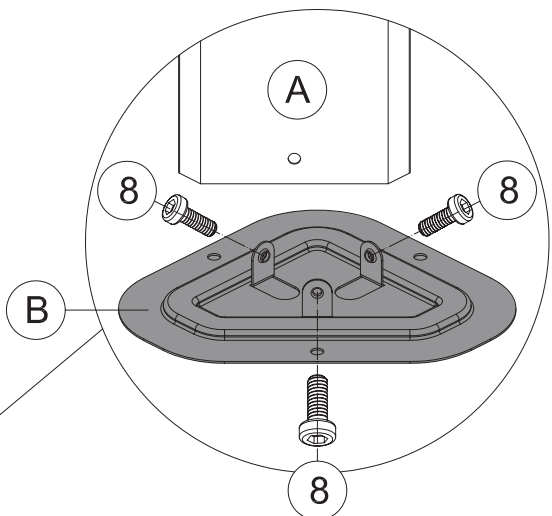


(3) Attach Part #B to Part #A with 3 Bolts #8.


(4) Repeat the above procedures to assemble the other 3 Part #A.

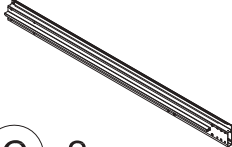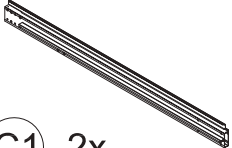


	<b>C</b> 2x
	<b>C1</b> 2x
	<b>C2</b> 2x
	<b>X</b> 2x
	<b>1</b> 1x
	<b>8</b> 20x
<p>M6x16</p>	
<p><b>7</b></p>	

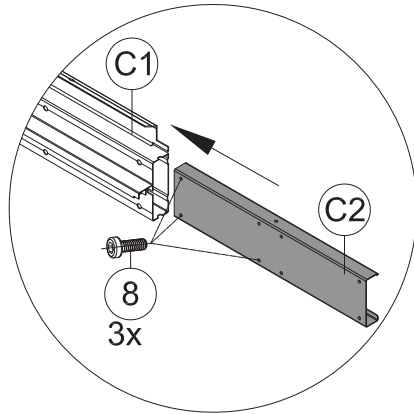


(1) Insert Part #C2 into Part #C1 and secure with 3 Bolts #8.

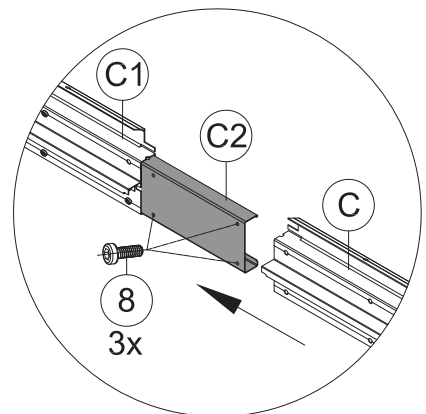


(2) Insert the other side of Part #C2 into Part #C and secure with 3 Bolts #8.

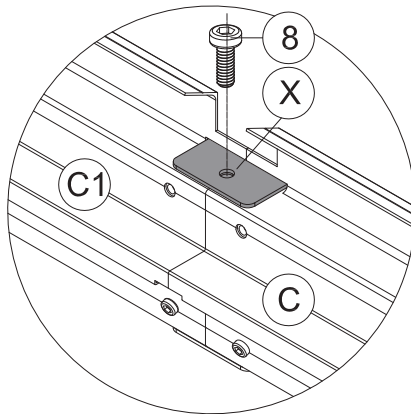

(4) Insert Part #X into the beam.

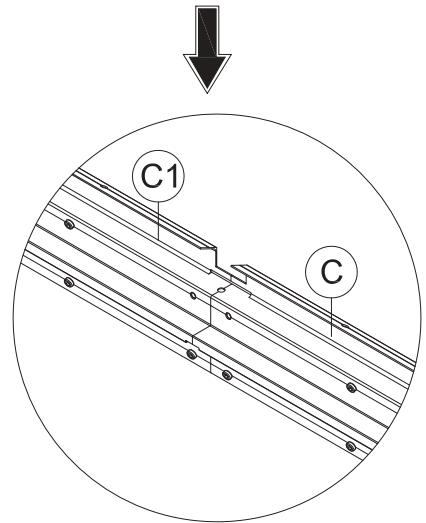

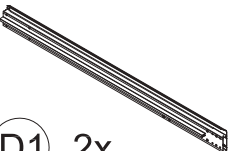
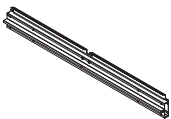



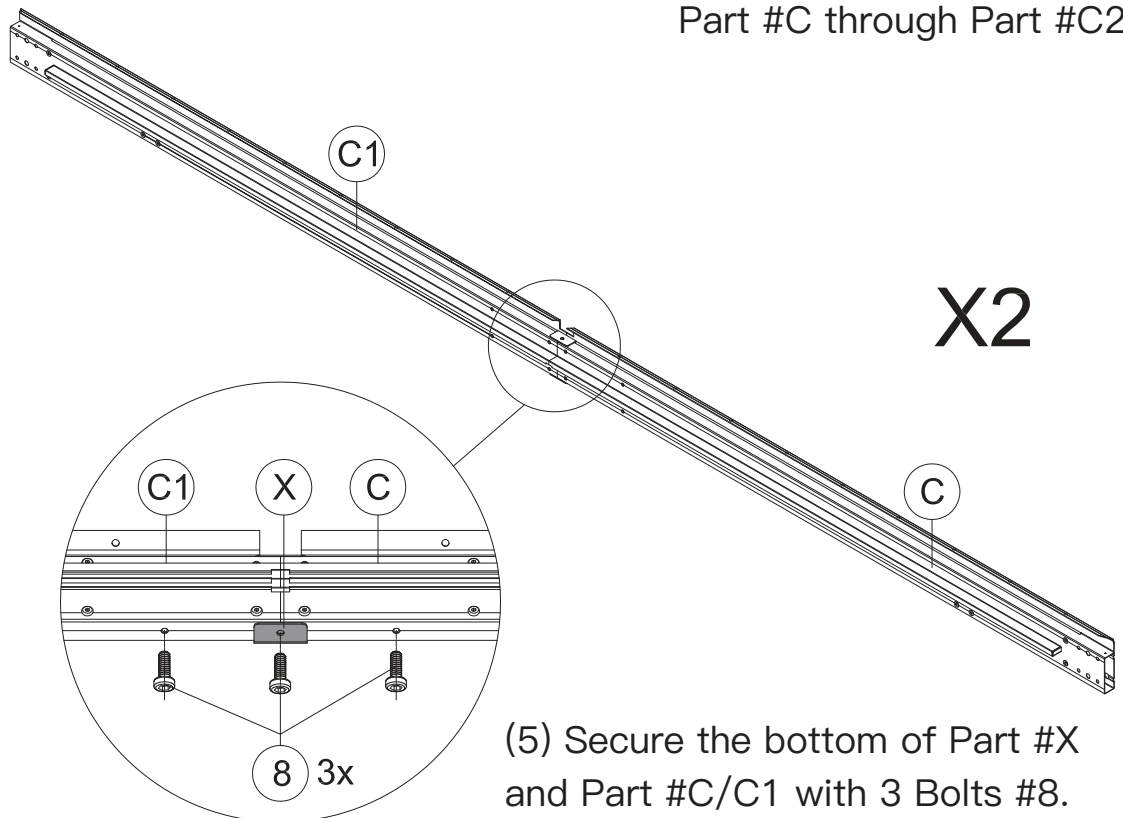


(3) Connect Part #C1 and Part #C through Part #C2.




(5) Secure the bottom of Part #X and Part #C/C1 with 3 Bolts #8.

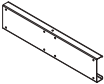
(6) Repeat the above procedures to assemble the other Part #C and Part #C1.


C2 4x

D 2x

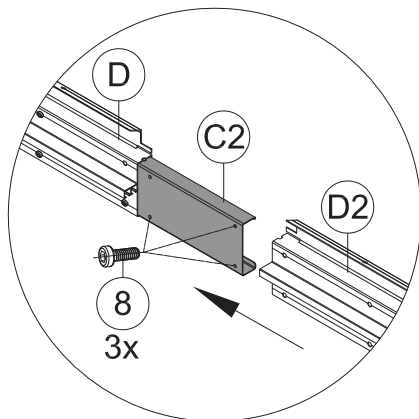D1 2x

D2 2x

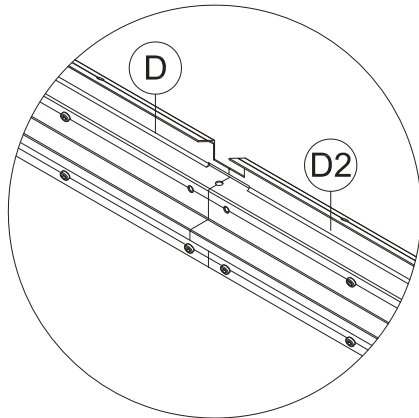X 4x

S4

1 1x

M6x16
8 40x
8


(2) Insert the other side of Part #C2 into Part #D2 and secure with 3 Bolts #8.




(3) Connect Part #D and Part #D2 through Part #C2.





(1) Insert Part #C2 into Part #D, and secure with 3 Bolts #8.

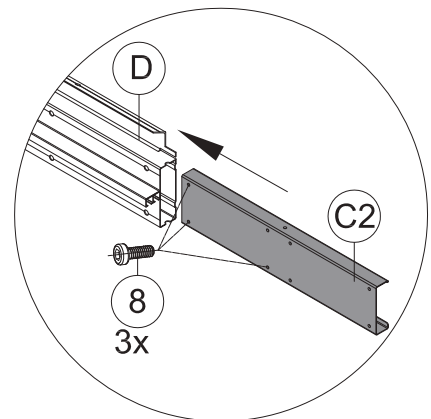

(4) Insert Part #X into the beam and secure with 1 Bolt #8.

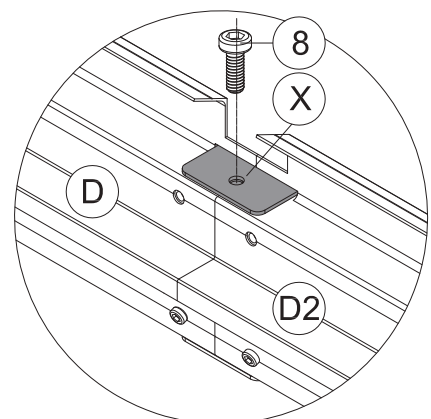

(5) Secure the bottom of Part #X and Part #D/D2 with 3 Bolts #8.

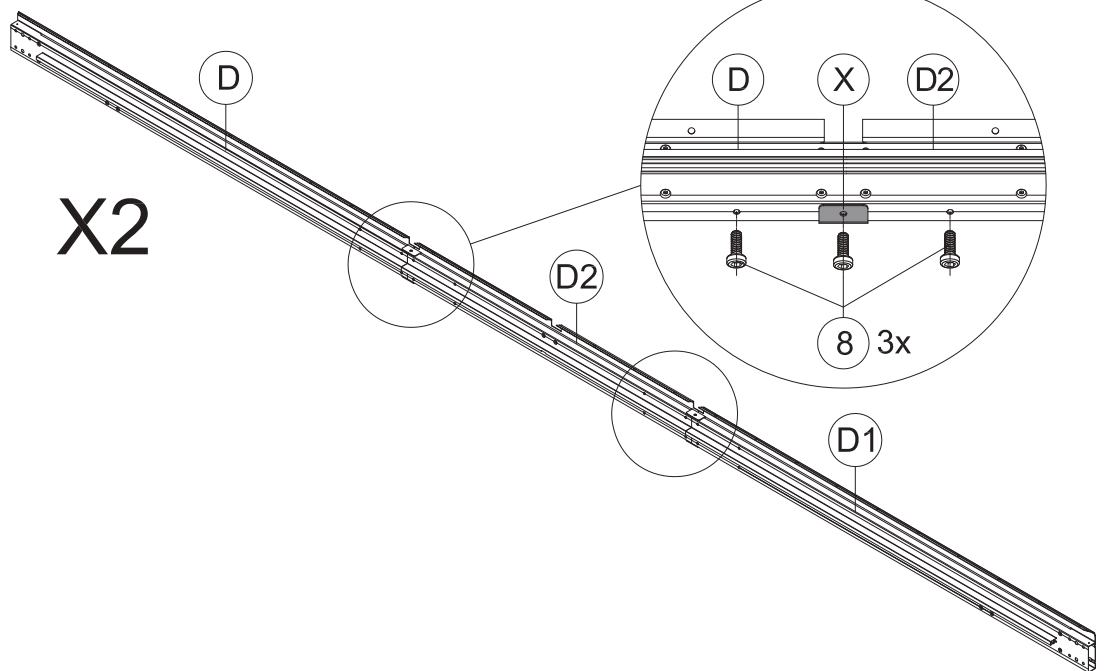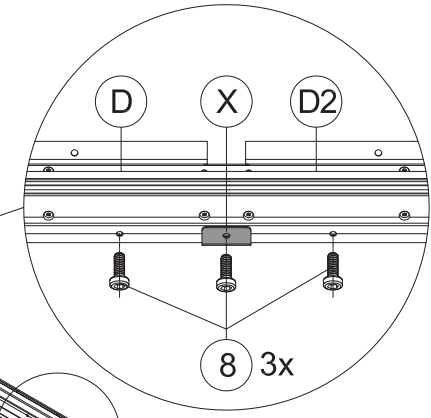

(6) Repeat the above procedures to assemble the other Part #D & #D1 & #D2.




S6

1 1x



M6x15

4 32x

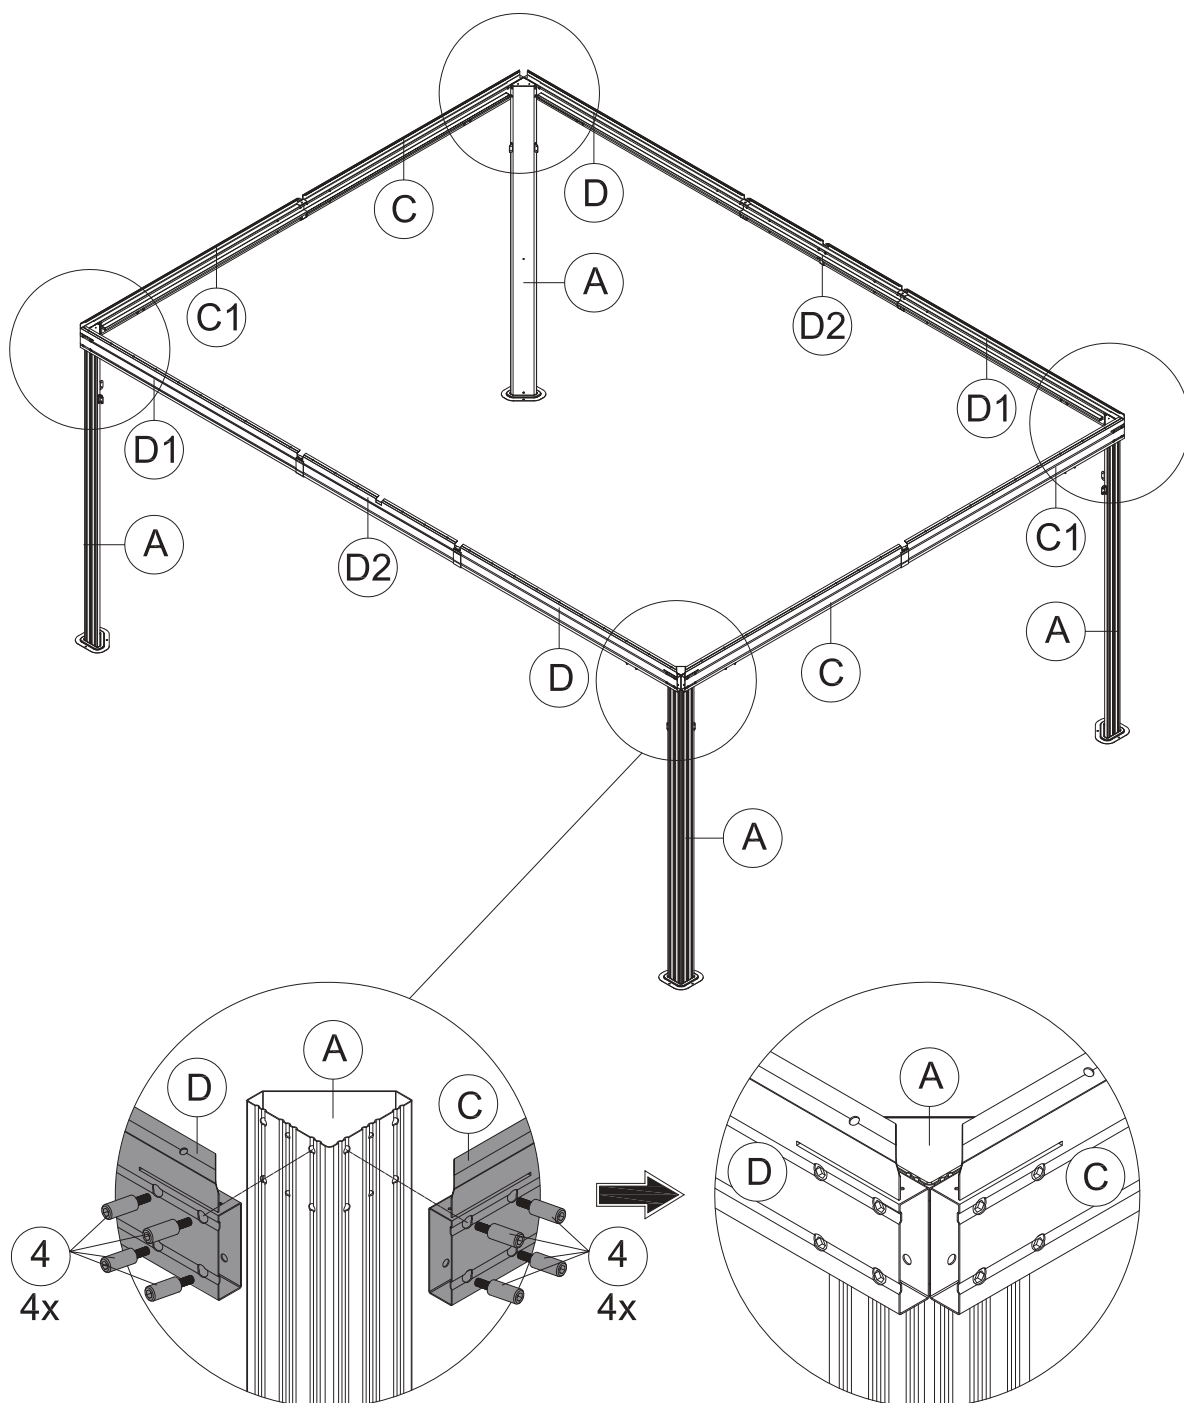


(1) Connect Part #C/C1 and #D/D1 to Part #A with 8 Bolts #4.  
(From Outside)

(2) Repeat the above procedures to assemble the other 3 corners.


▲ Please don't tighten all bolts.

① 1x


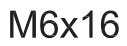

$$8) \quad 16x$$

The technical drawing illustrates the assembly of a square table. The top section shows two circular callouts: the left one is an exploded view of a corner joint, and the right one shows the joint fully assembled. In the exploded view, a screw (labeled '8 4x') is shown being inserted into the joint. The main diagram below shows the complete table structure, which consists of a square frame and four legs. The frame is made of two parallel rails (C and D) connected by corner brackets (A). The legs (A1) are attached to the frame at the corners. The diagram uses various labels to identify the components: A for the corner brackets, B1 for the side rails, C and D for the top and bottom rails, C1 and D1 for the front and back rails, D2 for the side rails, and A1 for the legs. The exploded view shows the assembly of the corner joint, while the main diagram shows the complete table structure.

**⚠ Please don't tighten all bolts.**

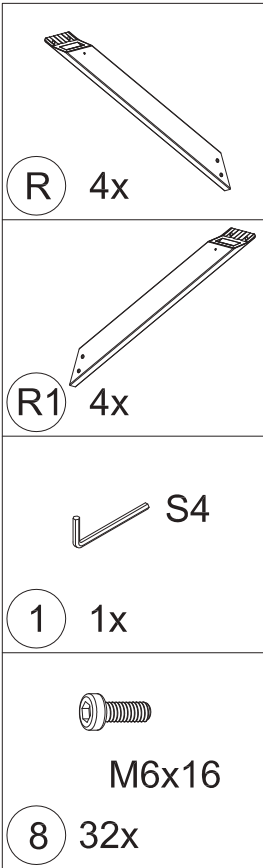


(1) Affix Part #R and Part #R1 to the frame with 8 Bolts #8.

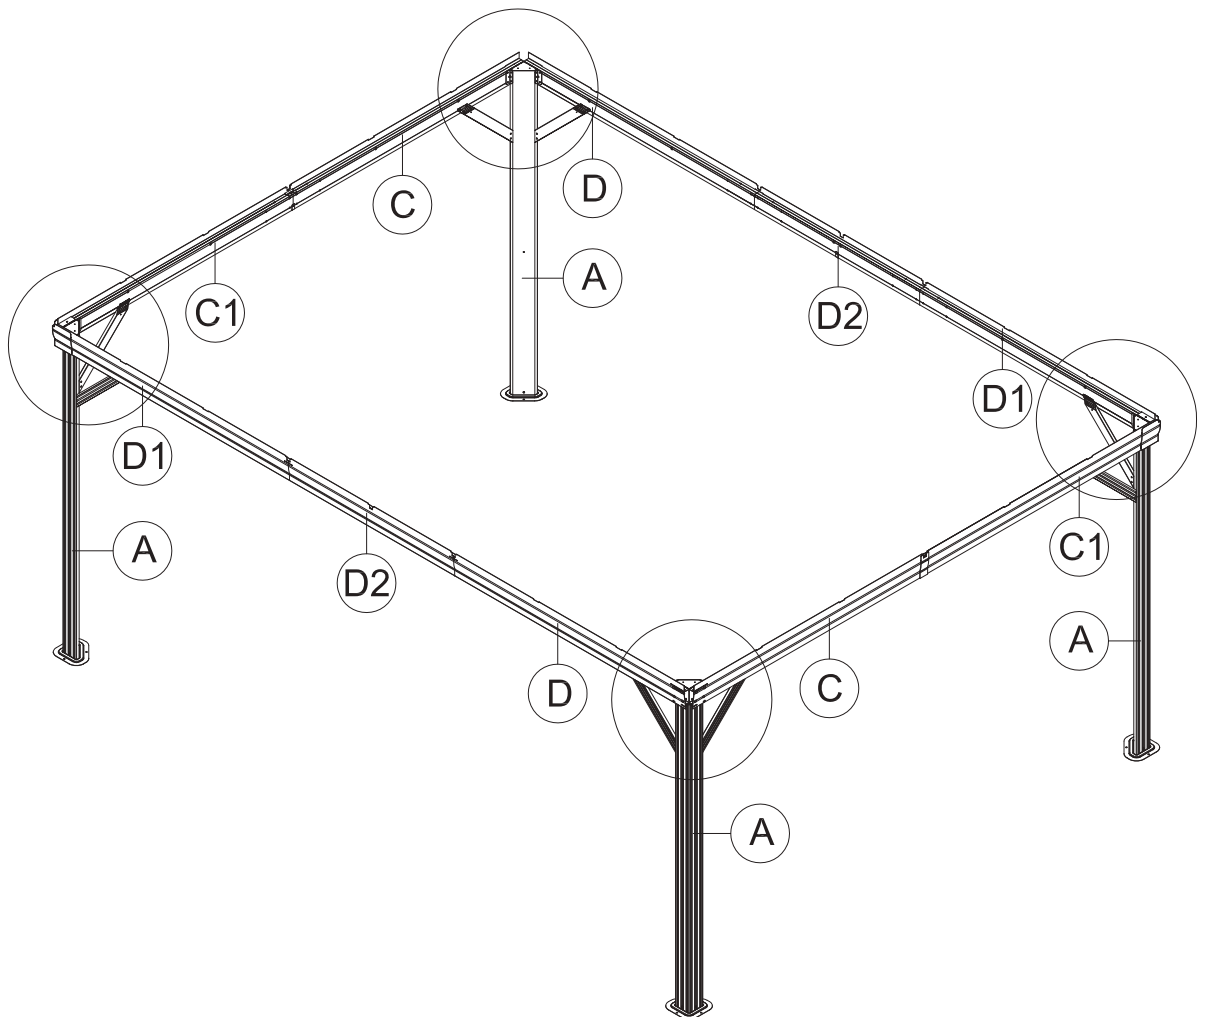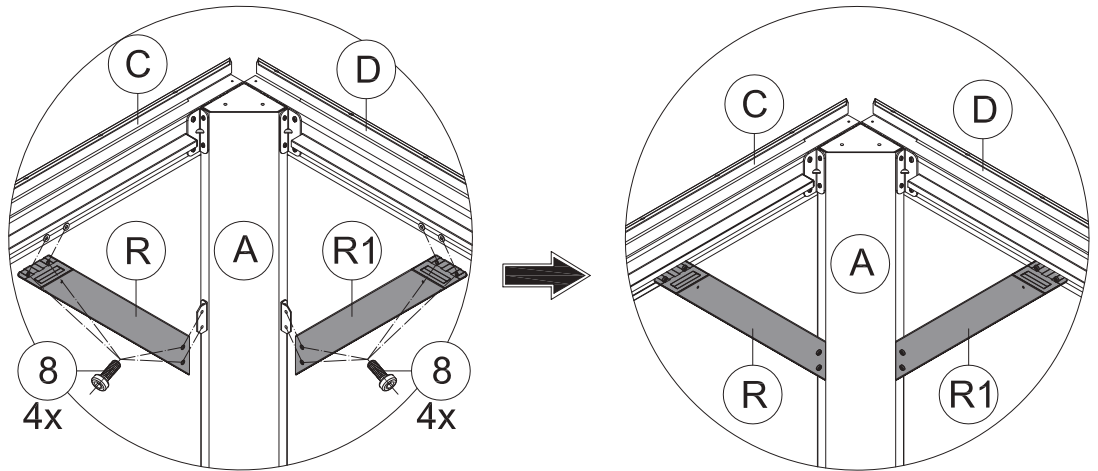

Repeat the above procedures to assemble the other 3 corners.

▲ Please don't tighten all bolts.


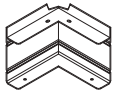


X1 4x



ST5x16



3 16x




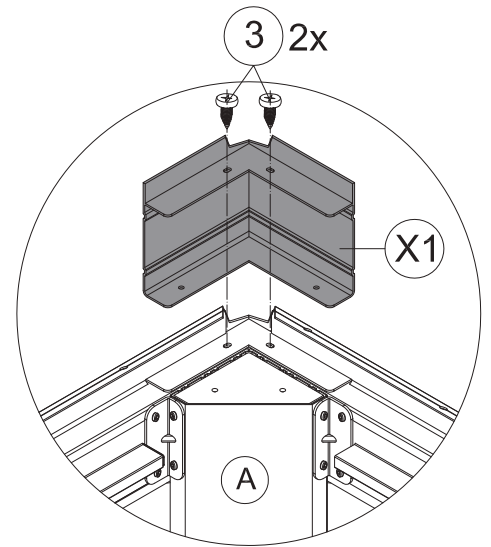
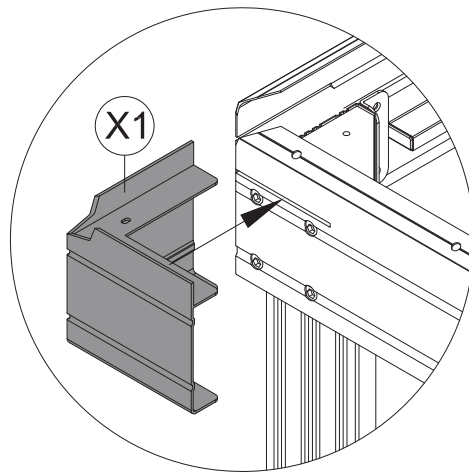


(1) Cover the corner with Part #X1. (2) Secure with 2 Self-tapping Screws #3. (from top to bottom)




(3) Secure with 2 Self-tapping Screws #3. (from bottom to top)

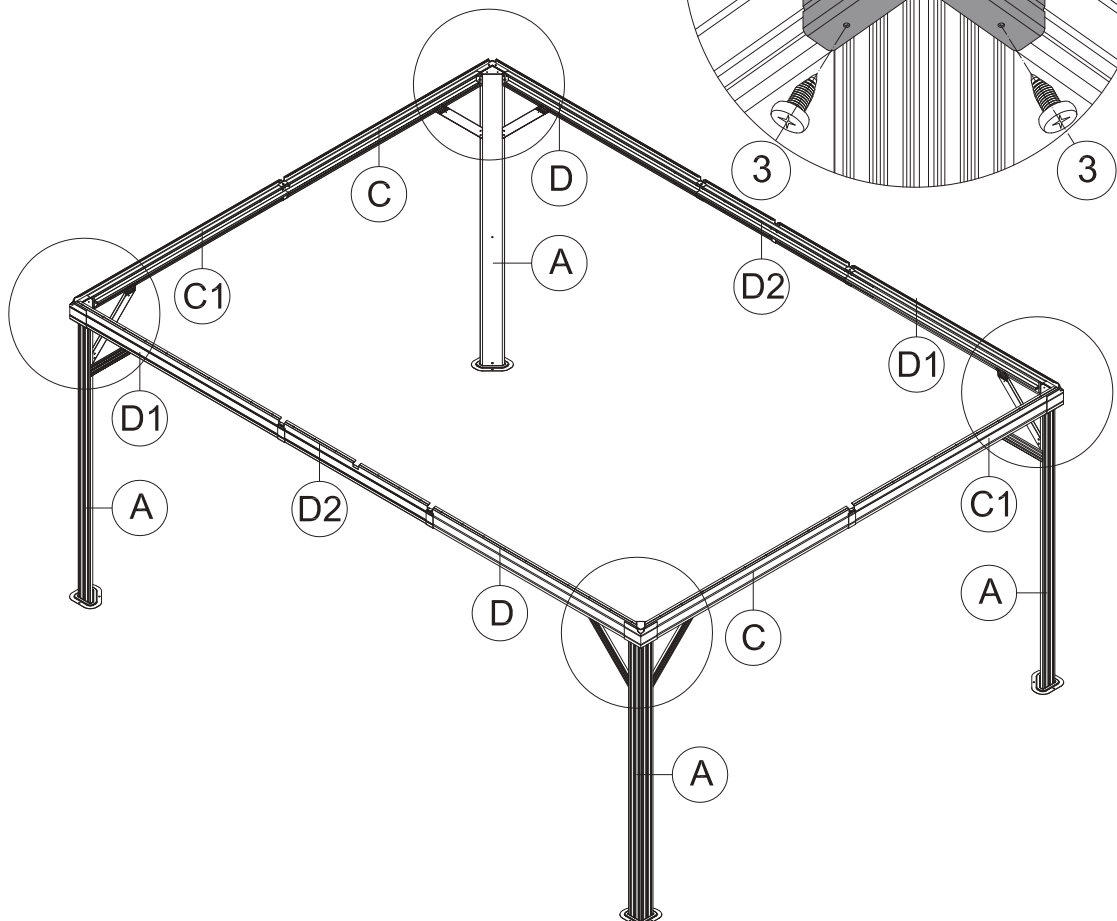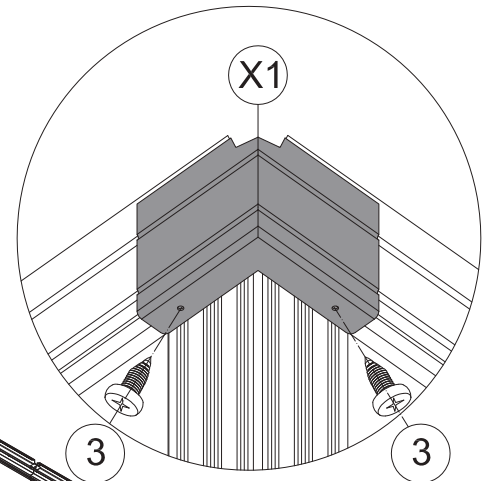


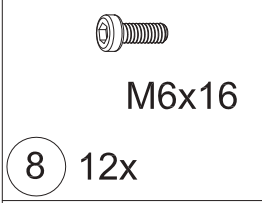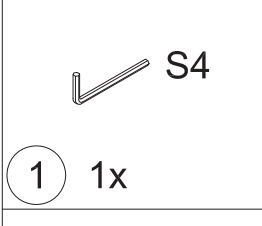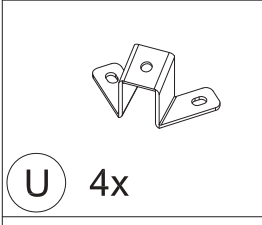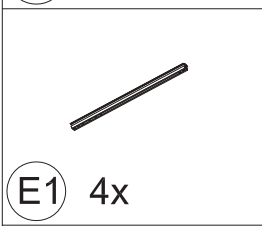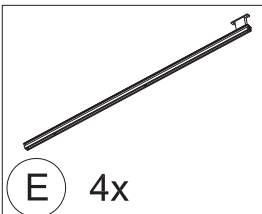

## Assemble the 4 Corner Roof Bars:

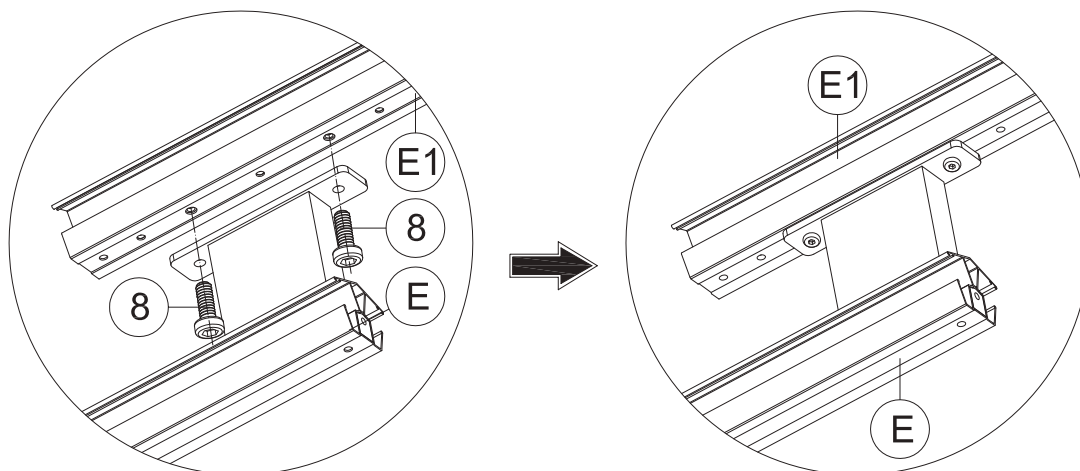


(1) Connect Part #E1 and Part #E with 2 Bolts #8 .

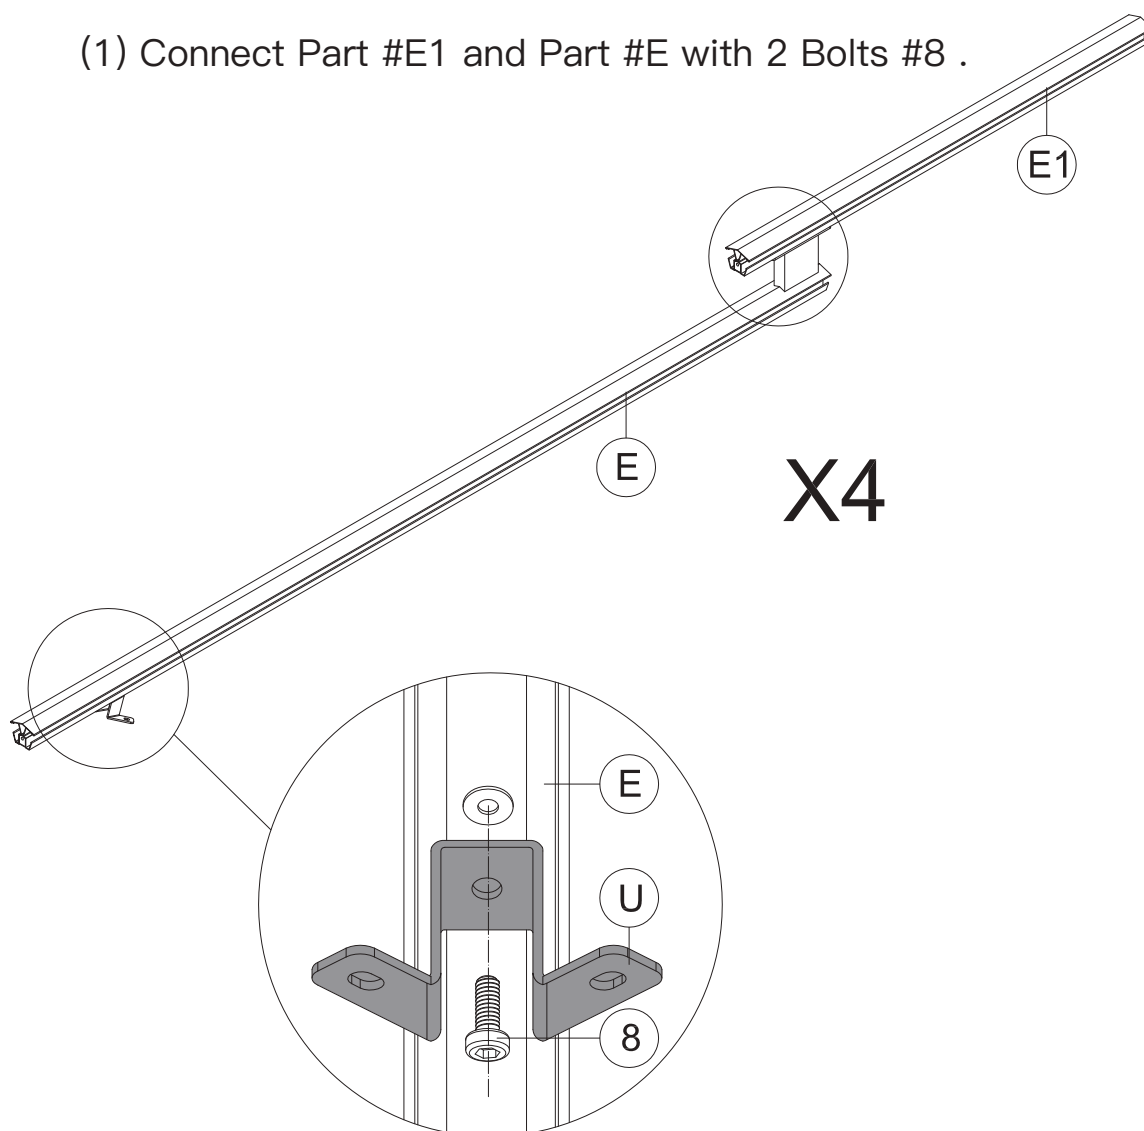

(2) Attach Part #U to Part #E with Bolt #8 .

(3) Repeat the above procedures to assemble the other 3 corner roof bars.



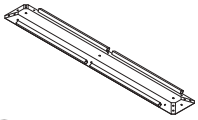

(S) 1x



(1) 1x




M6x16

(8) 16x


Please have a freestanding ladder ready at the center of the gazebo.

(1) Place 4 Part #E1 on the 4 corners of Part #S. Secure with 8 Bolts #8.  
(from bottom to top)

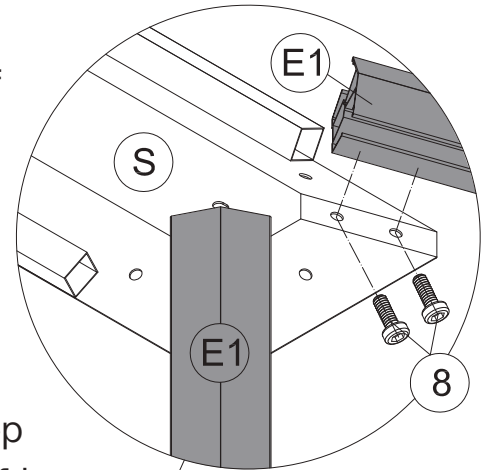

Outside View





**ATTENTION:** You can also finish this step on the ground and then lift 4 corner roof bars and inside roof connector to the top together.  
(Need 2 people and 2 ladders)






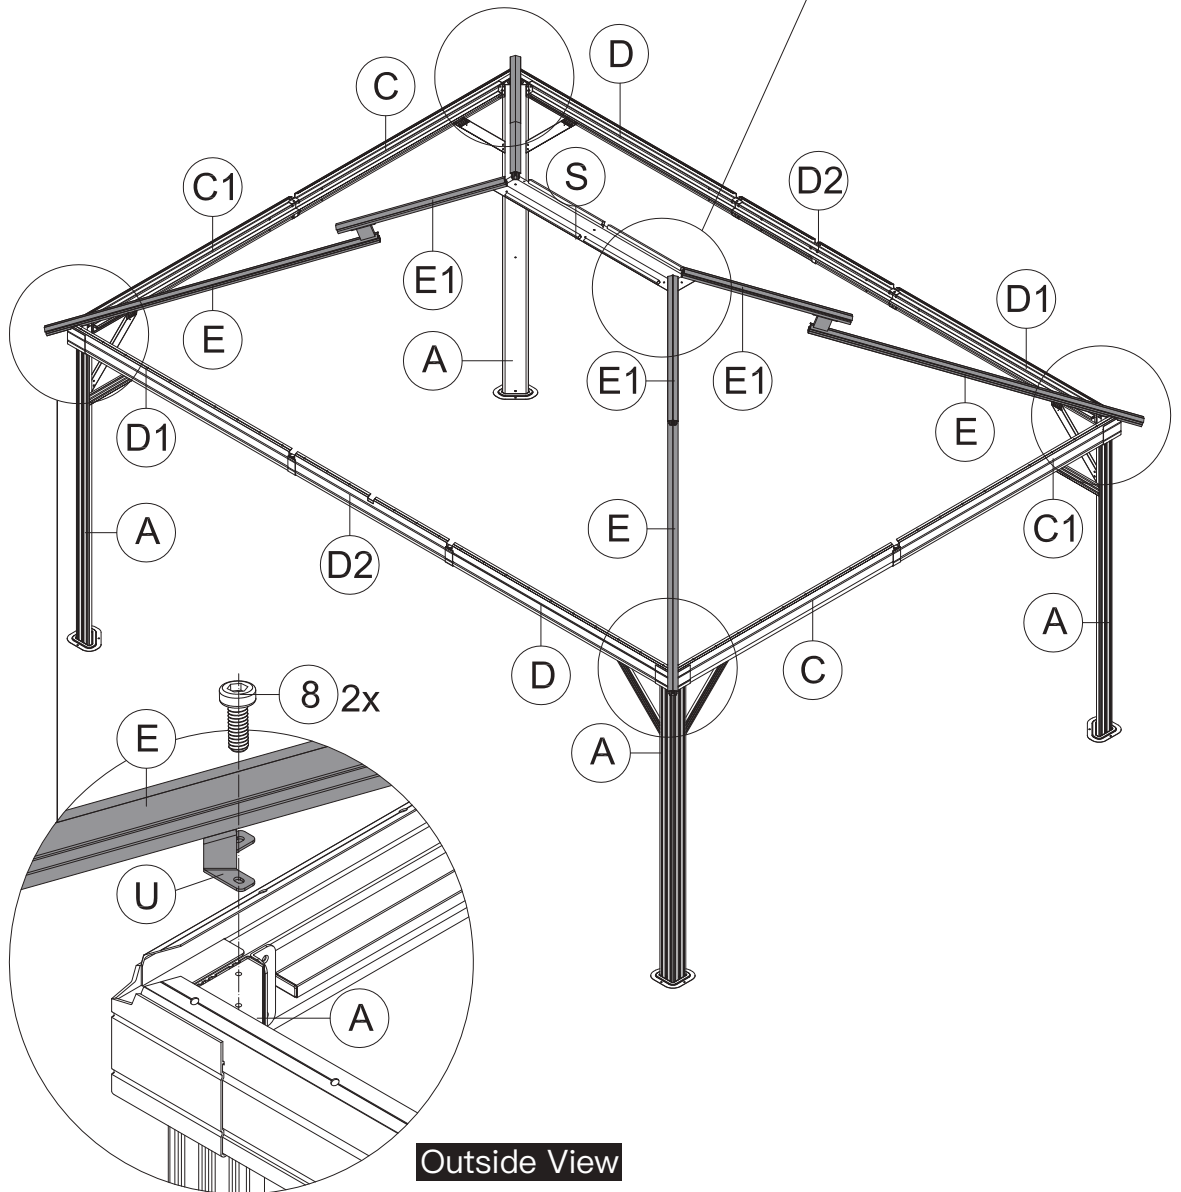


Outside View

(2) Place 4 Part #E on 4 Part #A; Secure with 8 Bolts #8.

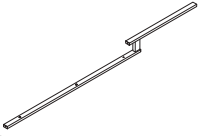



<b>E2</b> 8x
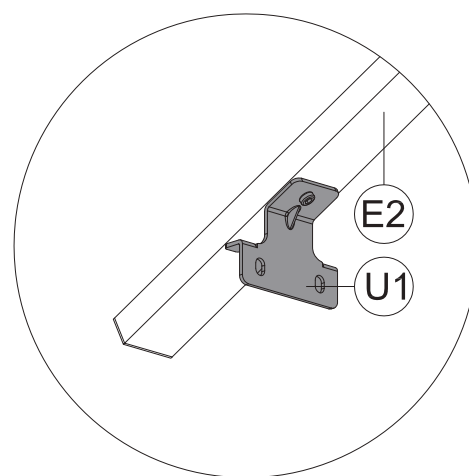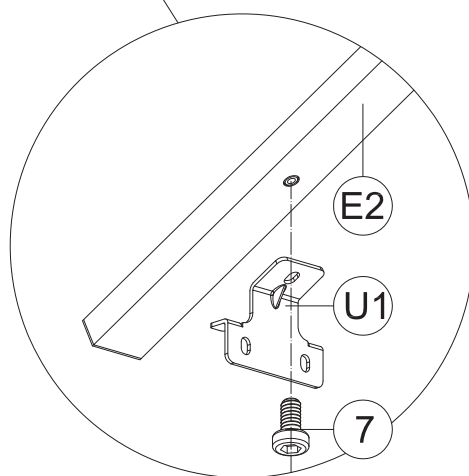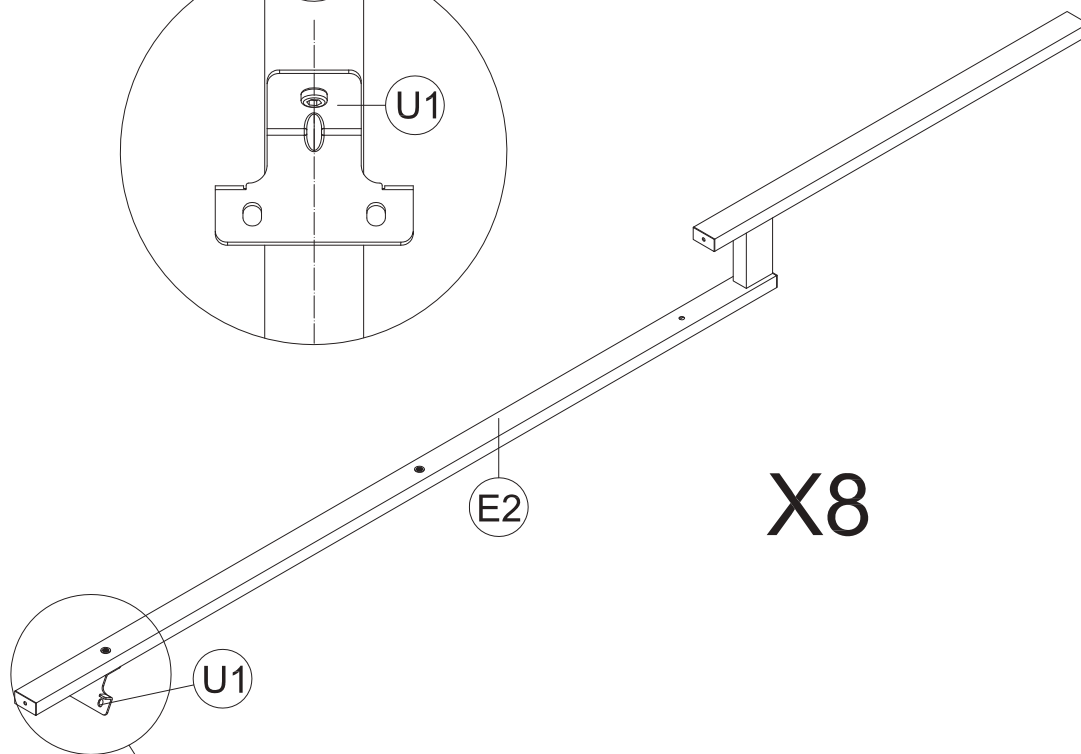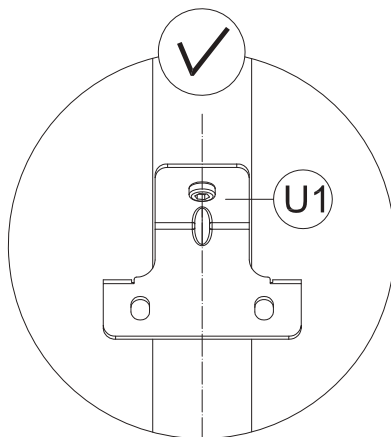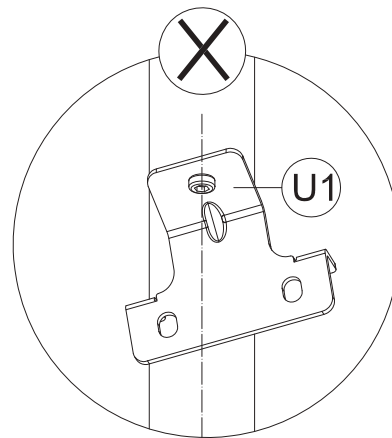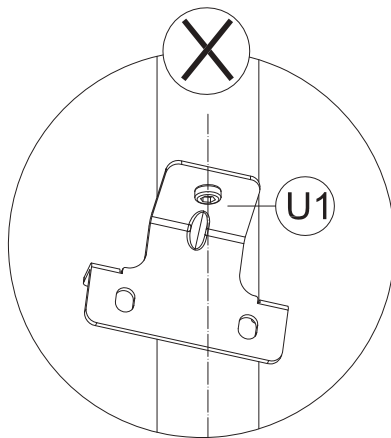
<b>U1</b> 8x

<b>S4</b>
<b>1</b> 1x

<b>M6x10</b>
<b>7</b> 8x

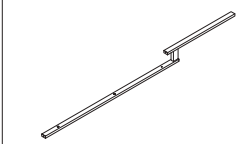

(1) Attach Part #U1 to Part #E2 with Bolt #7 .

(2) Repeat the above procedures to assemble the other 7 roof bars.



E2 2x




1 1x






M6x16

8 6x

(1) Place Part #E2 on part #S. Secure with Bolt #8 (from bottom to top).

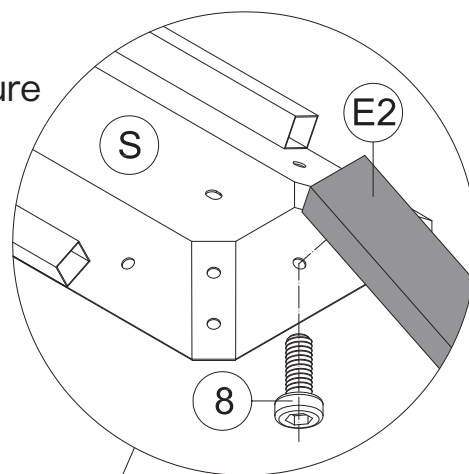


Outside View

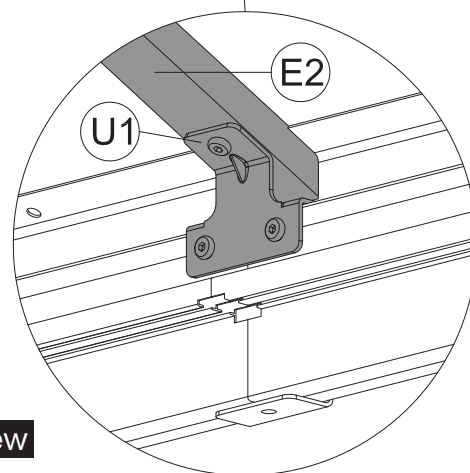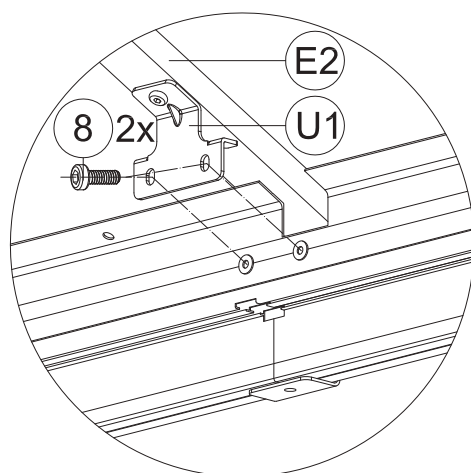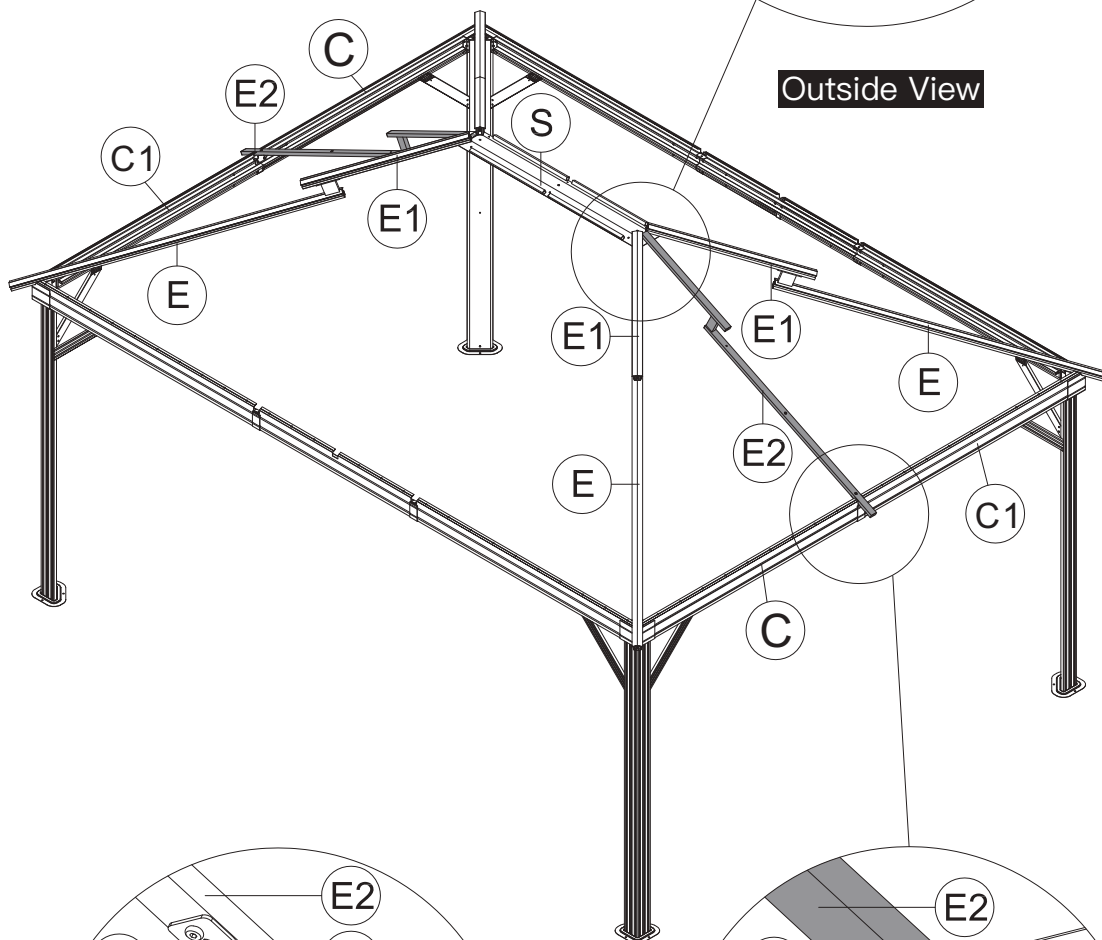

Inside View

(2) Connect Part #E2 and the Assembled Beam (C&C1) with part #U1; Secure with 2 Bolts #8.

(3) Repeat the above procedures to assemble the opposite side.

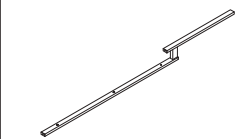

E2 2x



S4


1 1x






M6x16

8 6x

(1) Place Part #E2 on Part #S.  
Secure with Bolt #8 (from bottom to top).

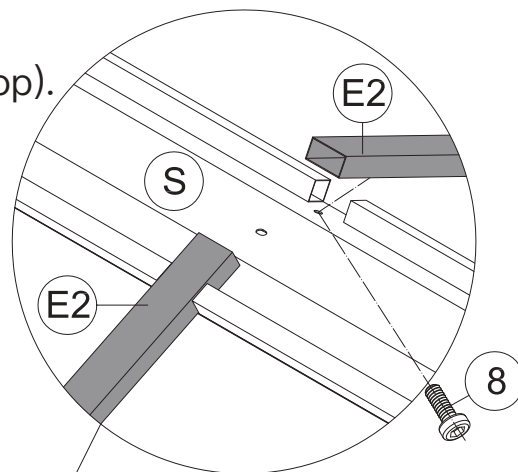



Outside View

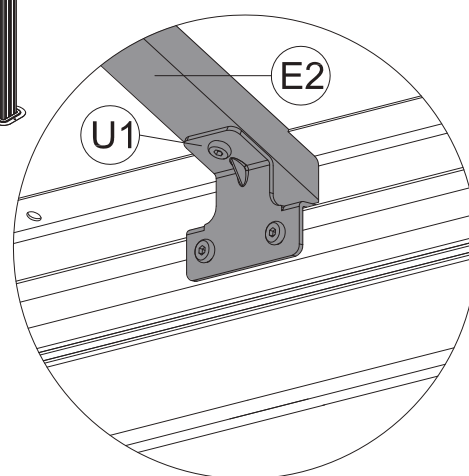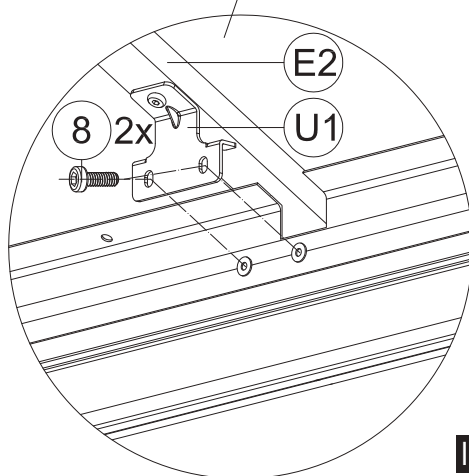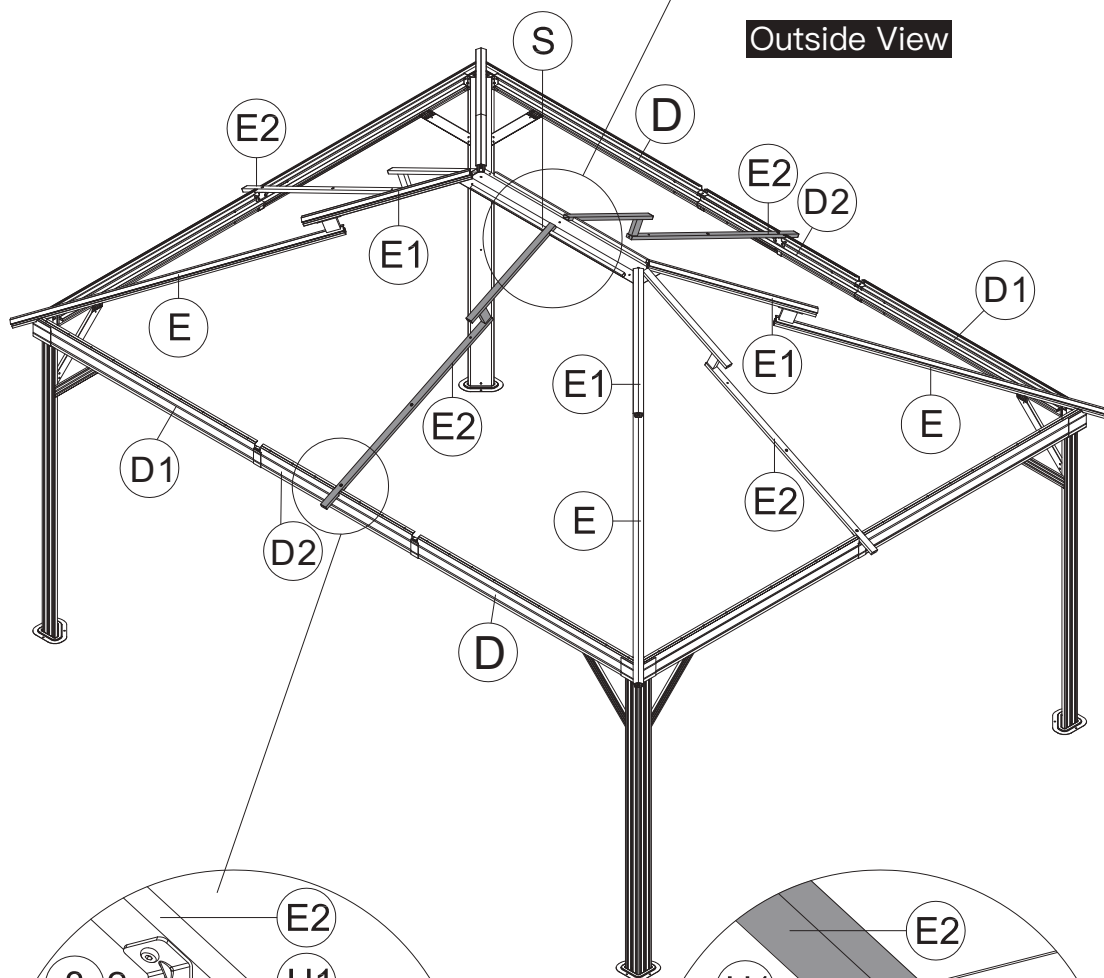


Inside View

(2) Connect Part #E2 and the Assembled Beam (D1&D2&D)  
with part #U1. Secure with 2 Bolts #8.




(3) Repeat the above procedures to assemble the opposite side.

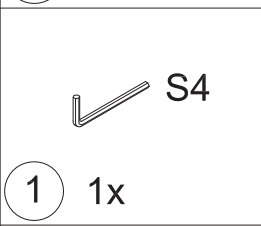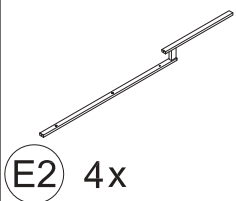

(1) Place 2 Part #E2 on Part #S.  
Secure with 2 Bolts #8 (from bottom to top).

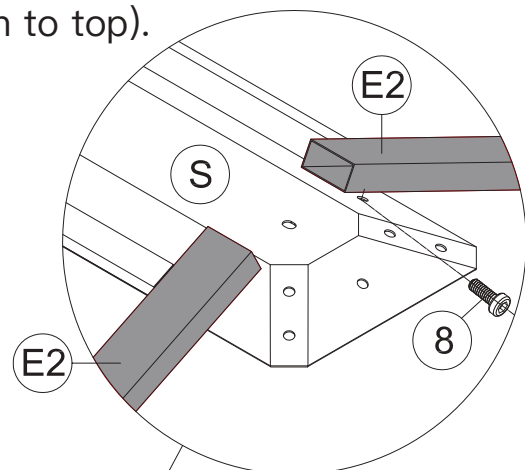


Outside View

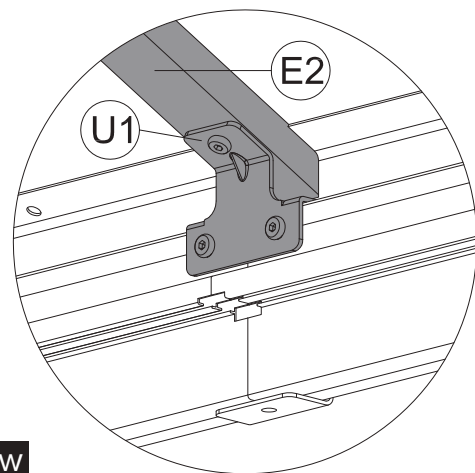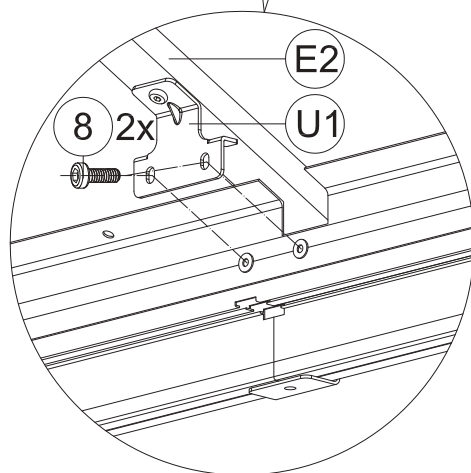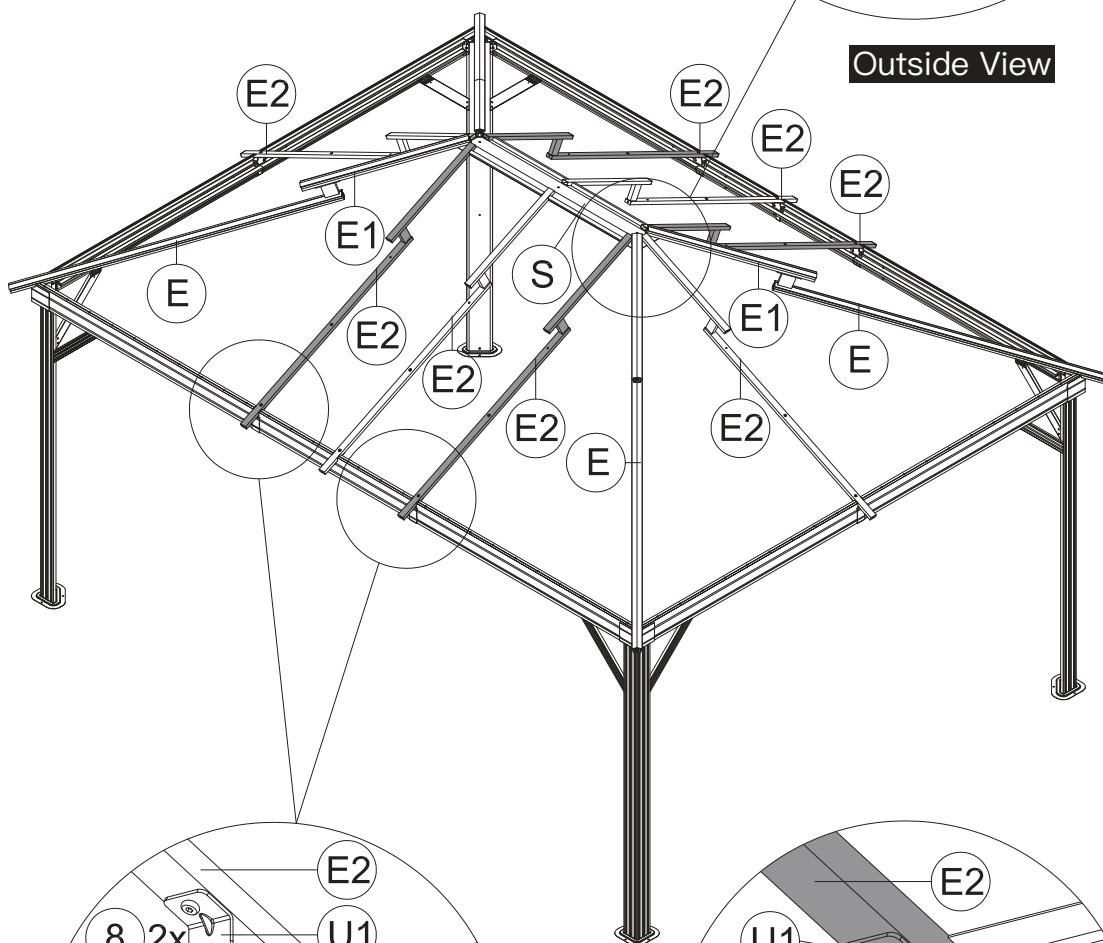


Inside View

(2) connect 2 Part #E2 and the Assembled Beam with 2 part #U1.  
Secure with 4 Bolts #8.

(3) Repeat the above procedures to assemble the opposite side.

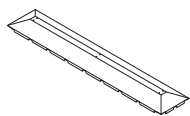


(S1) 1x

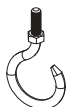


(T) 3x


## Inside View

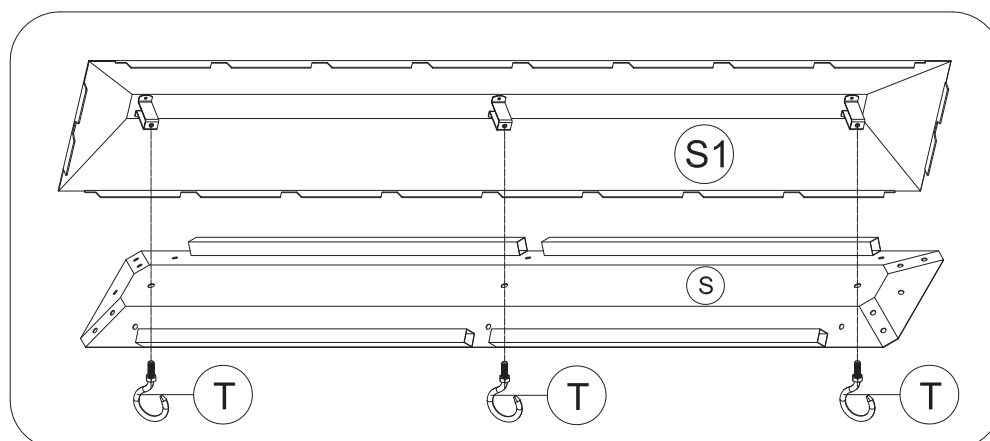


(1) Secure Part #T to Part #S and Part #S1.

**ATTENTION:** The holes of Part #S and Part #S1 need to be aligned, on the same vertical line.

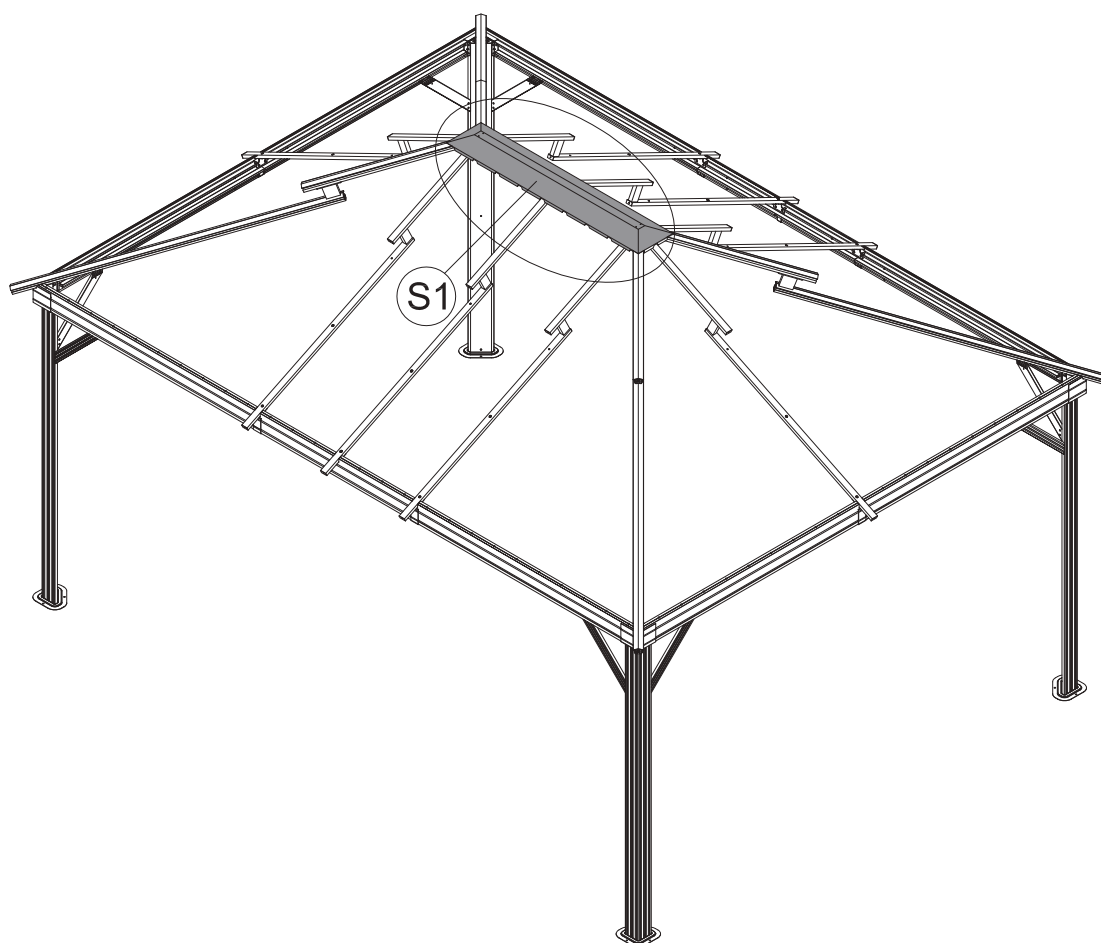

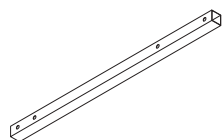

G1 4x

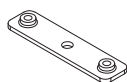

U3 6x



1 1x




M6x10

7 6x




M6x16


8 8x

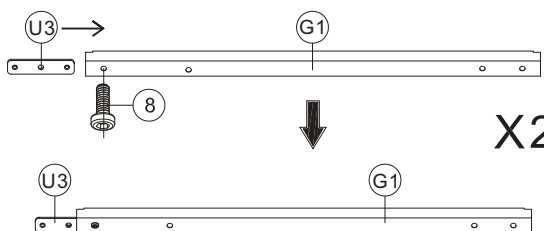

(1) Insert Part #U3 into Part #G1 and secure with Bolt #8.

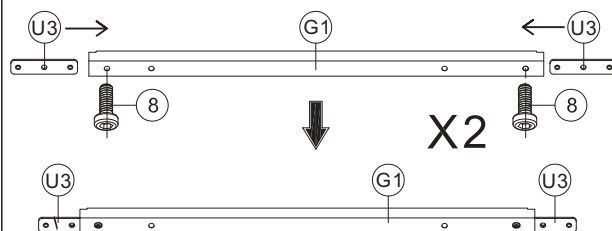

(2) Insert 2 Part #U3 into Part #G1 and secure with 2 Bolts #8.

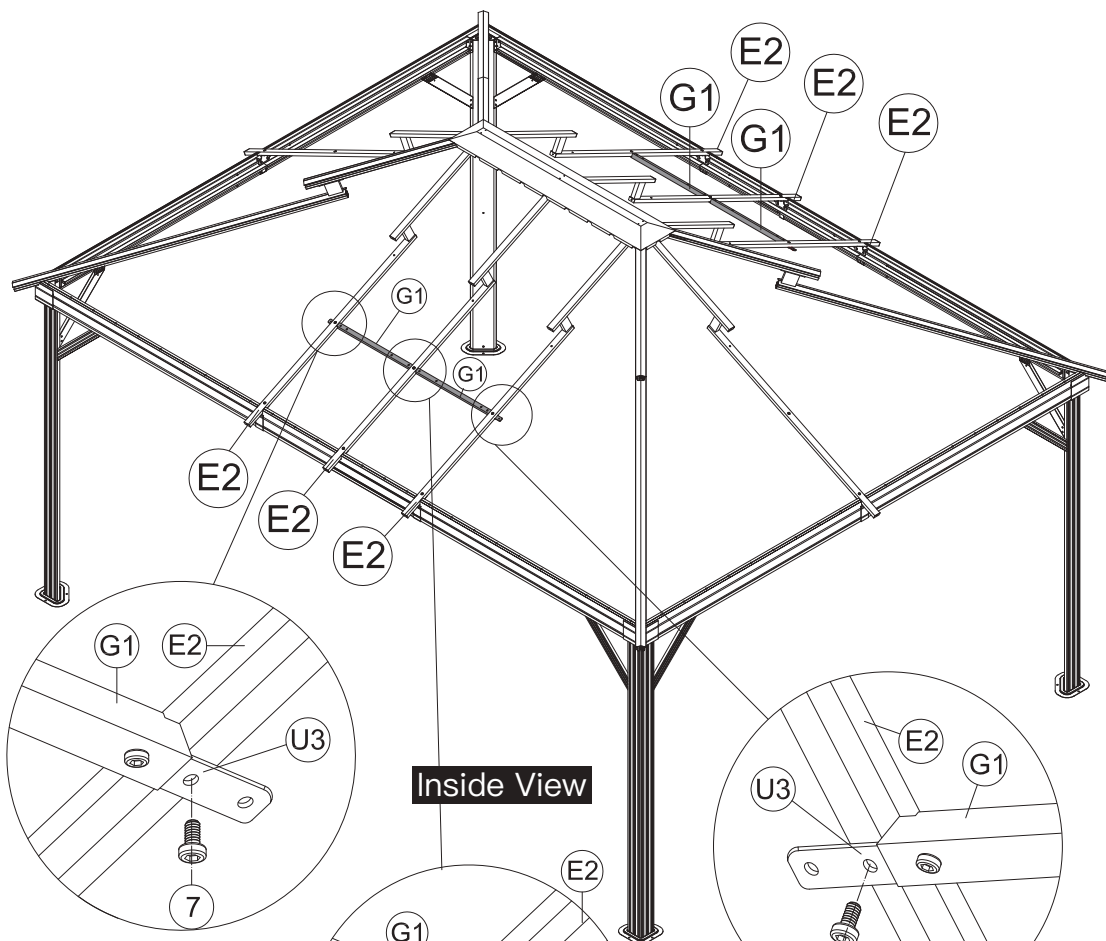


Inside View

(3) Attach Part #G1 and Part #U3 to Part #E2 with Bolt #7.


(3) Attach Part #G1 and Part #U3 to Part #E2 with Bolt #7.

(4) Attach Part #G1 and Part #U3 to Part #E2 with Bolt #7 and Bolt #8.

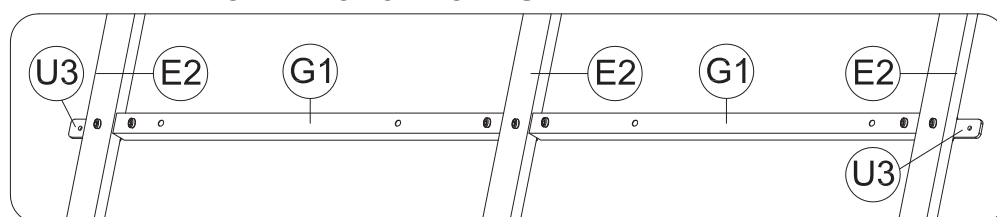

Outside View

(5) Repeat the above procedures to assemble the opposite side.

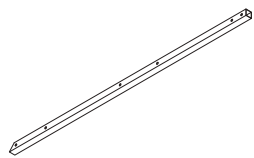

G 4x





1 1x




M6x16

8 4x

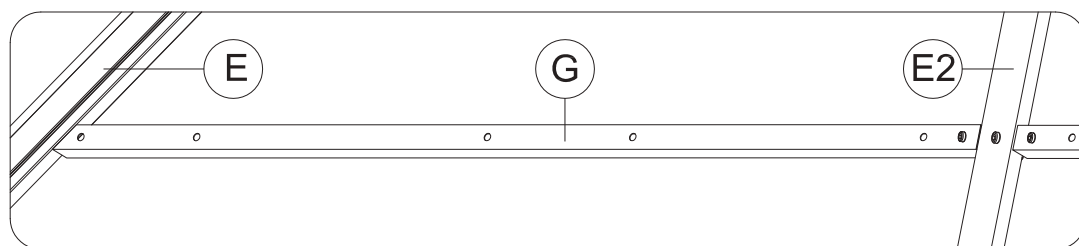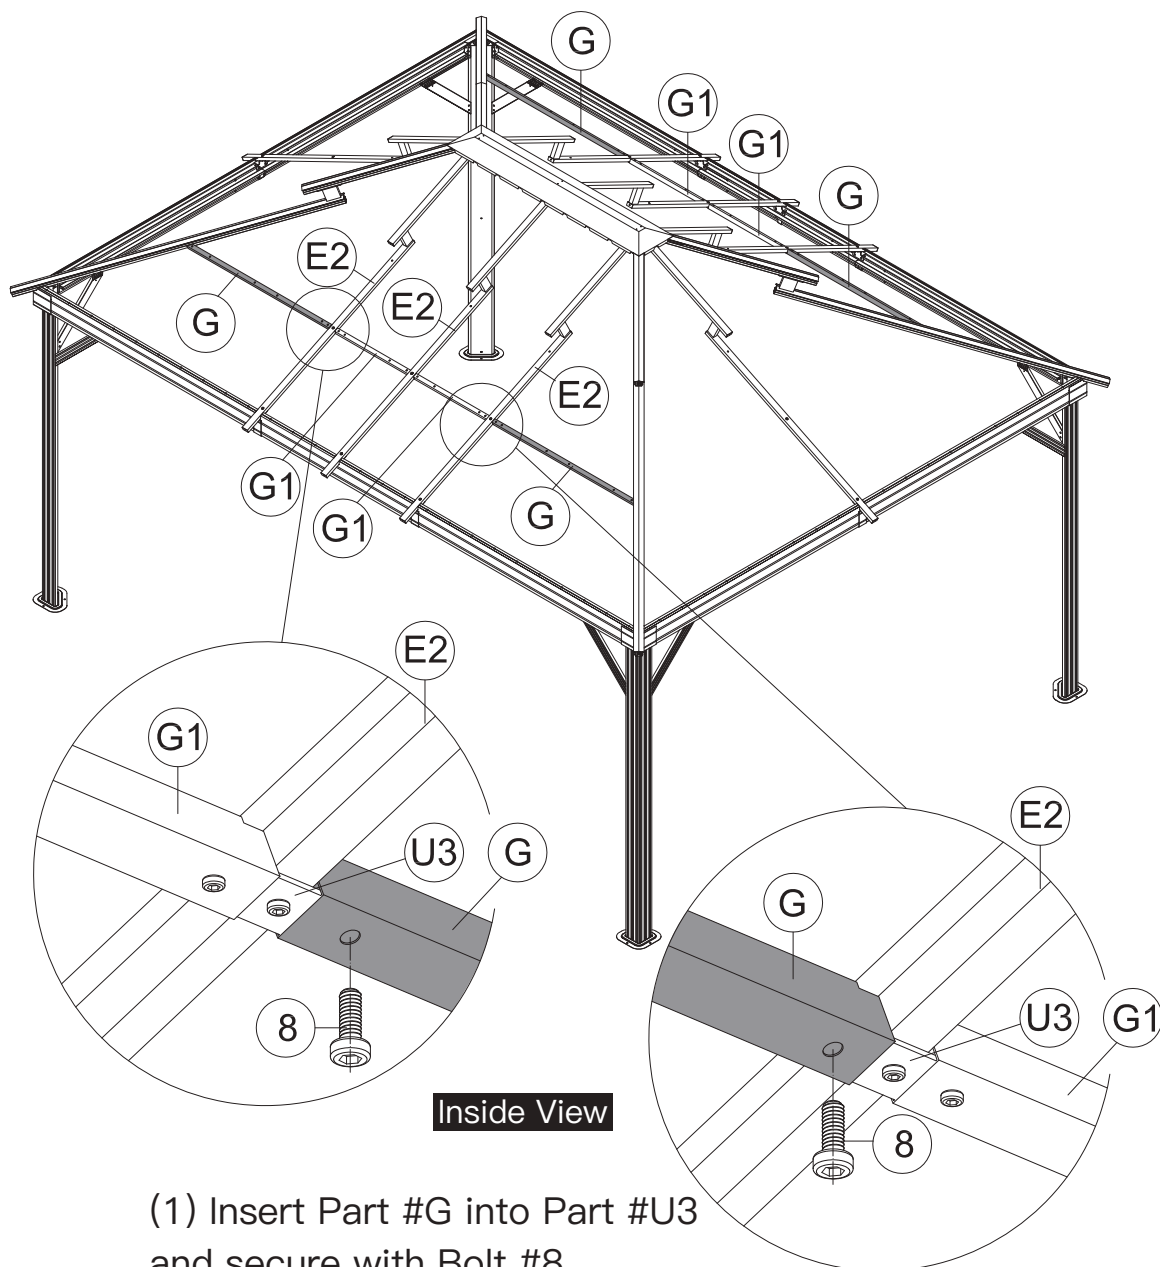


**Outside View**



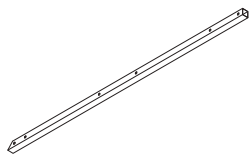

F 4x

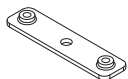

U3 2x



1 1x




M6x10

7 2x




M6x16


8 4x

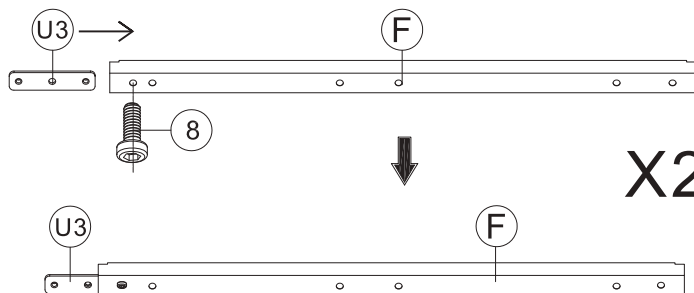

(1) Insert Part #U3 into Part #F and secure with Bolt #8.

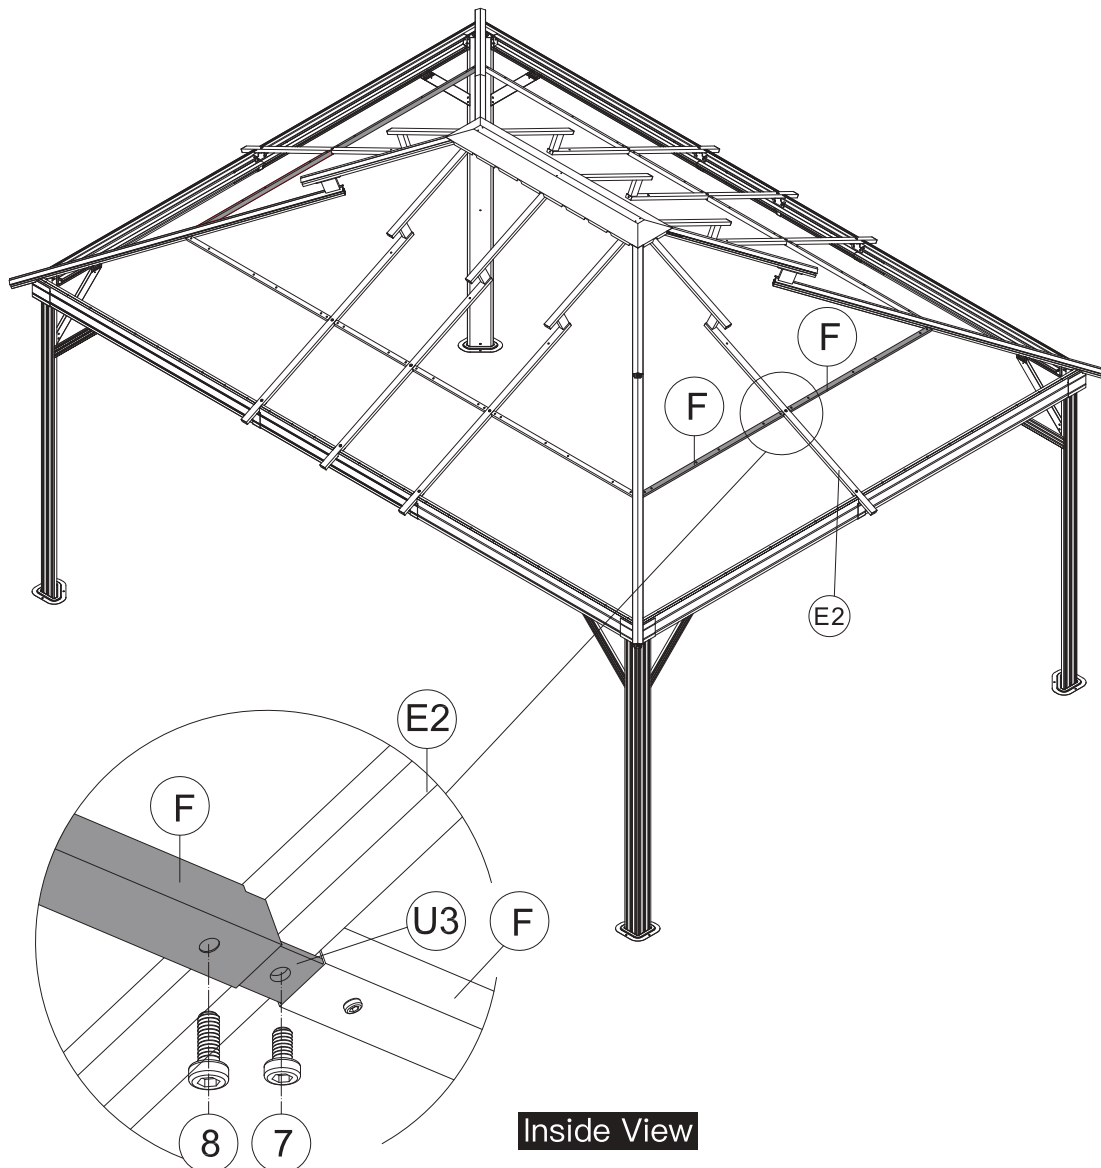

(2) Attach another Part #F to Part #U3 with Bolts #7 and #8.

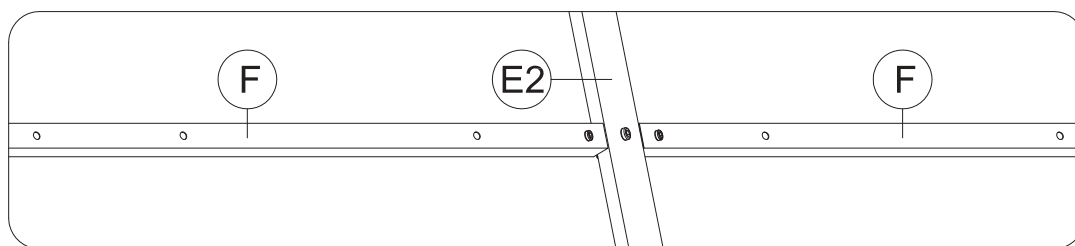

Outside View

(3) Repeat the above procedures to assemble the opposite side.





U2 4x





1 1x




M6x16

8 12x

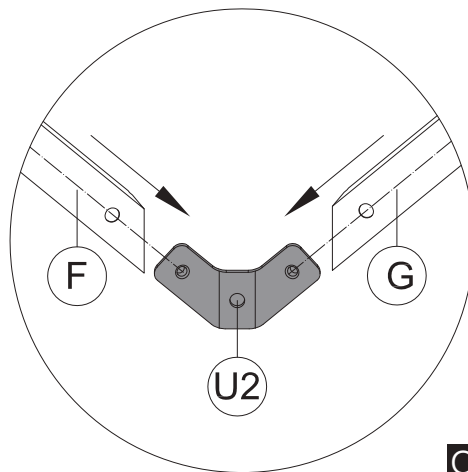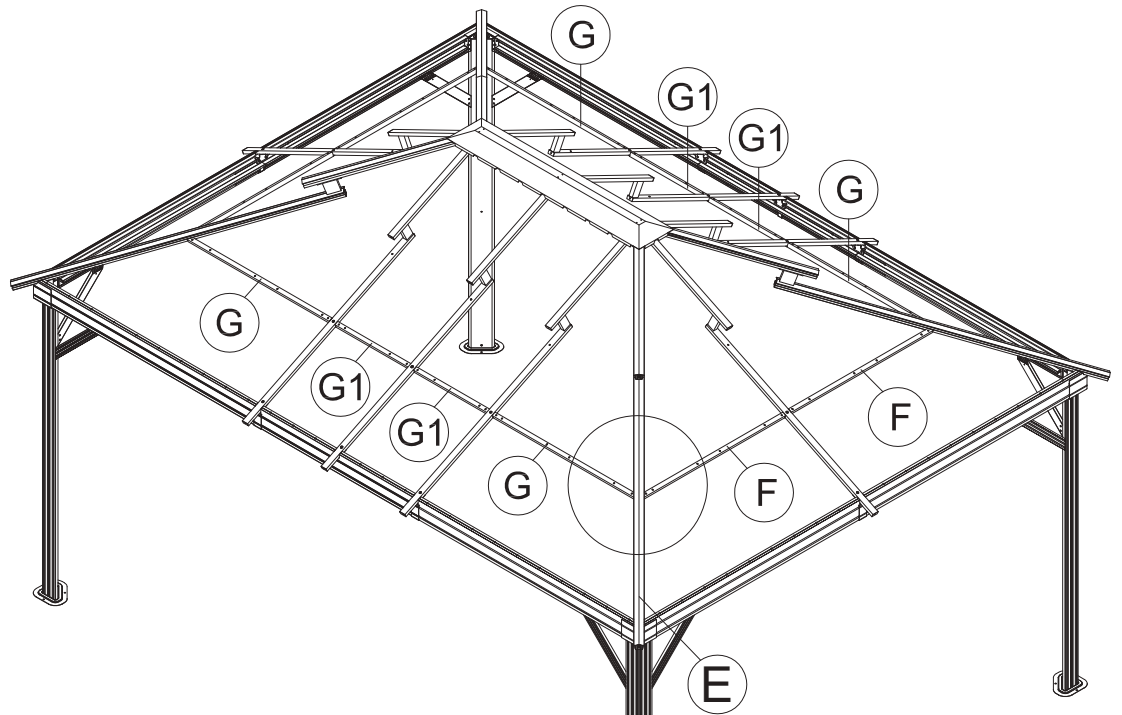

Outside View

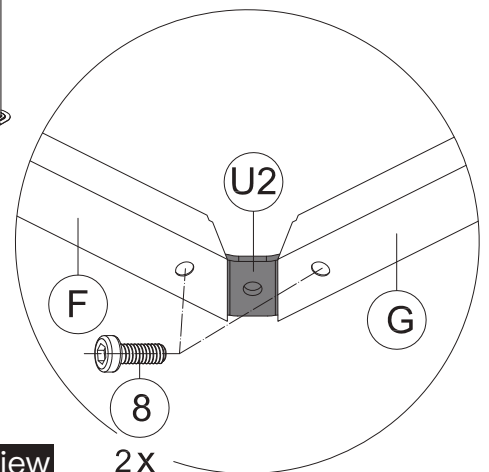


2x




(1) Insert Part #U2 into Part #F and Part #G.

(2) Secure with 2 Bolts #8.


(3) Secure them to Part #E with Bolt #8.

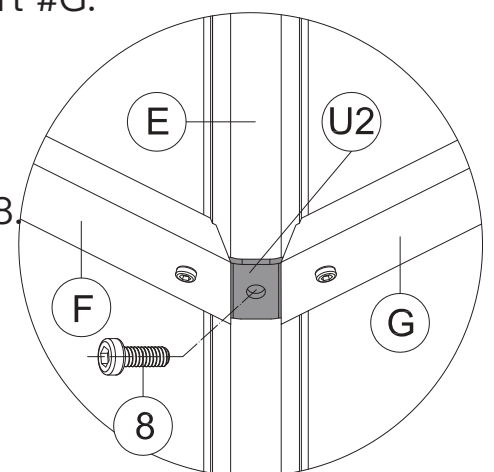


(4) Repeat the above procedures to assemble the other 3 sides.

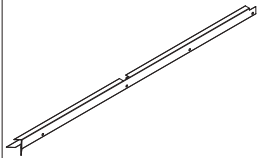


J1 2x

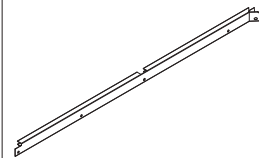


J2 2x

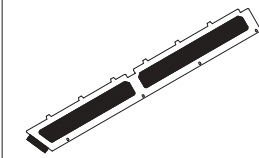

Q1 2x

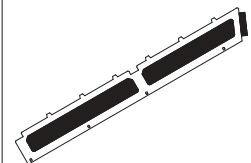

Q2 2x

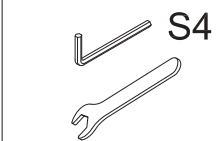

1 1x



M6

5 8x




M6x10



7 8x

24

(1) Connect Part #J1 and Part #Q1 with 2 Bolts #7 and 2 Nuts #5.

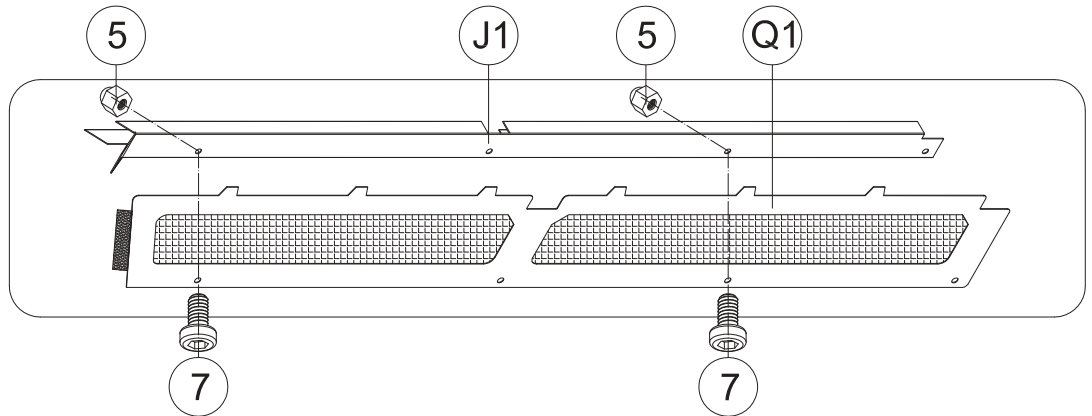

(2) Connect Part #J2 and Part #Q2 with 2 Bolts #7 and 2 Nuts #5.

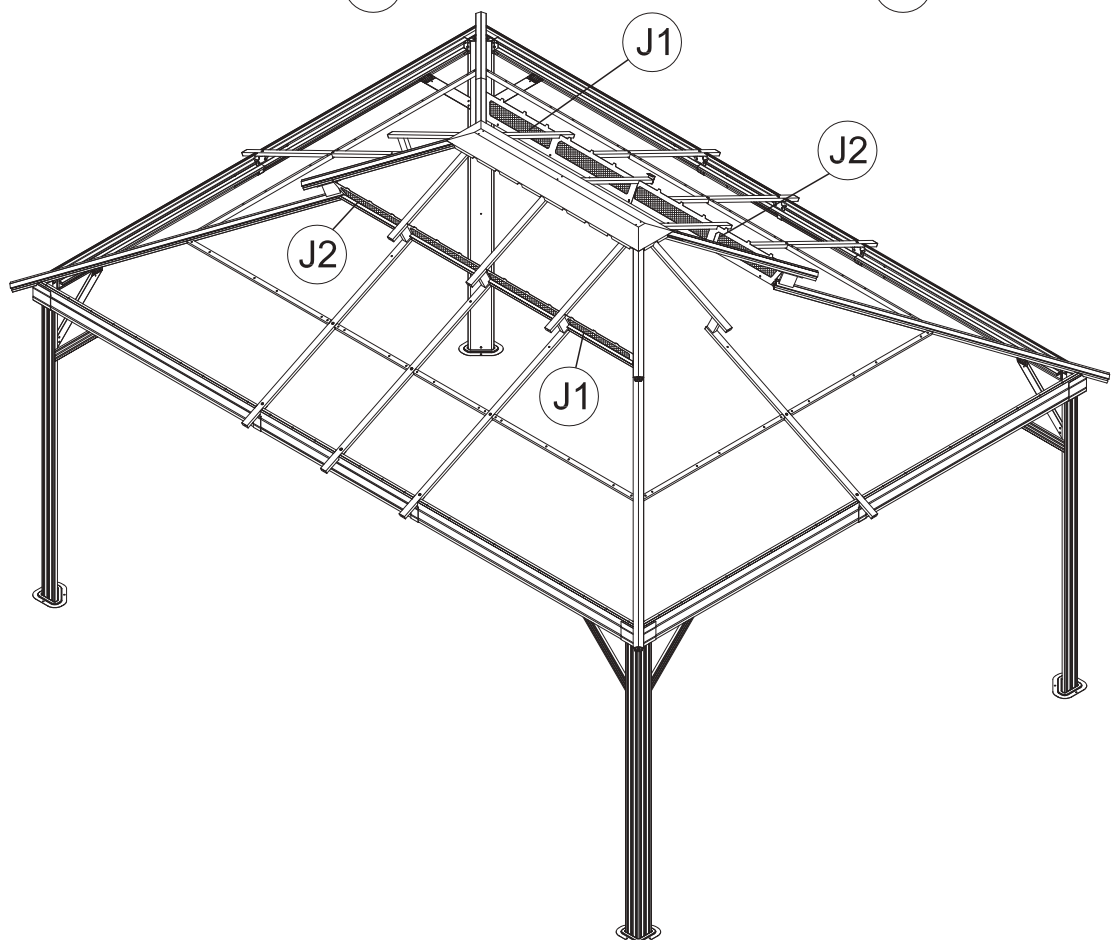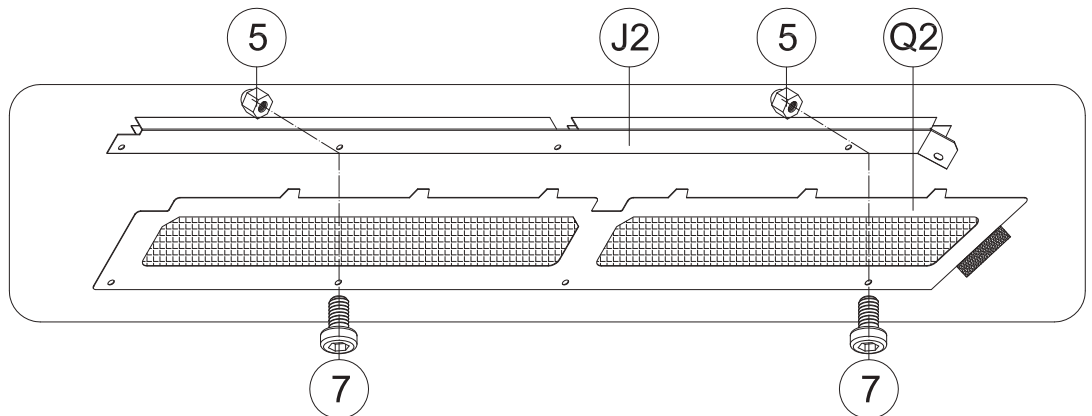



✓ S4

1 1x




M6x16


8 6x

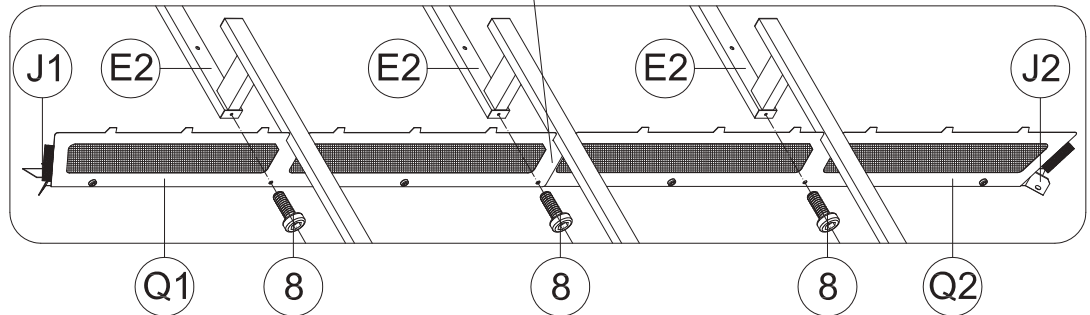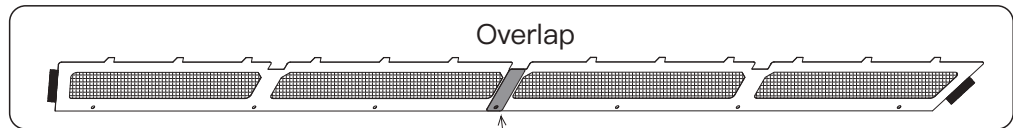


Inside View

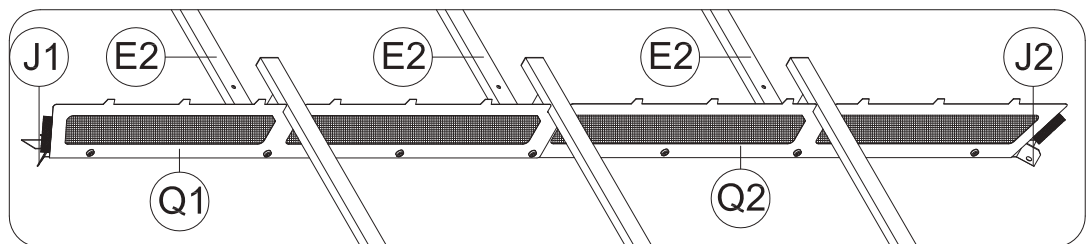


Place the Assembled J1 & Q1 and J2 & Q2 on Part #E2, securing with 3 Bolts #8.

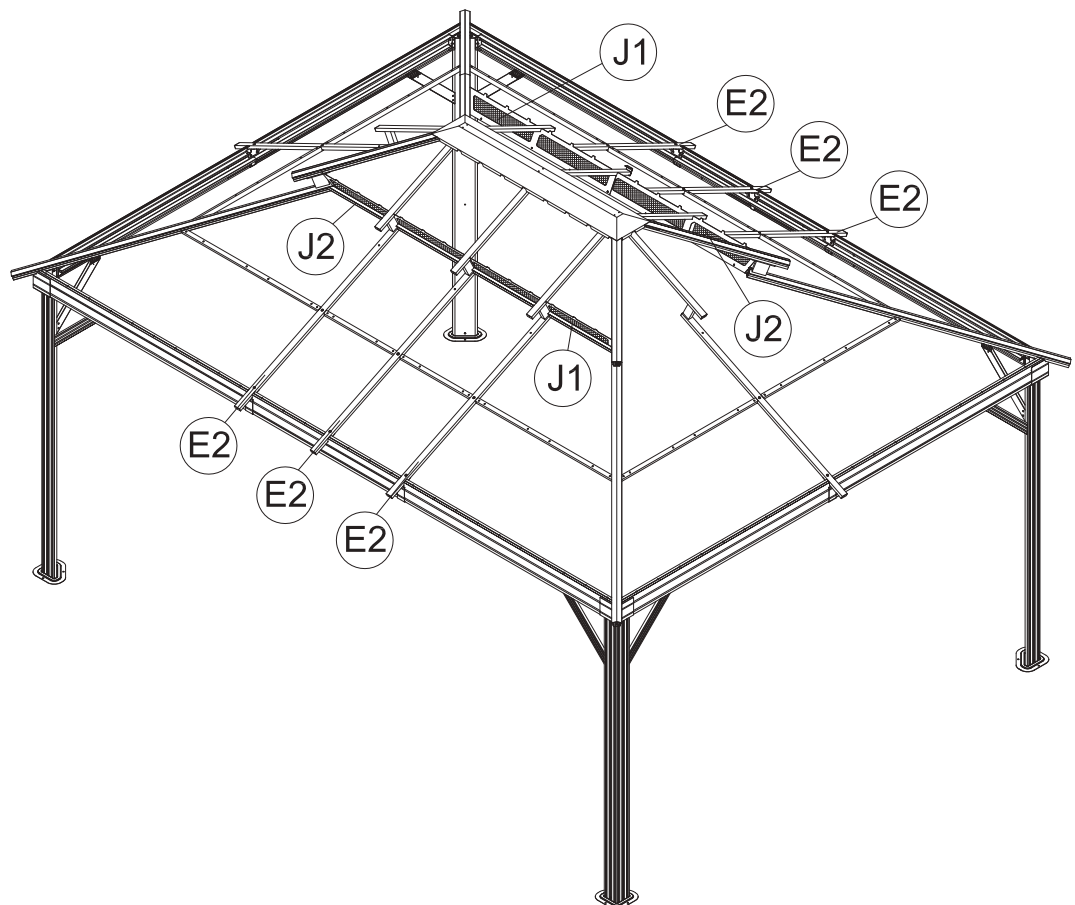

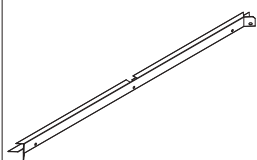

(J) 2x

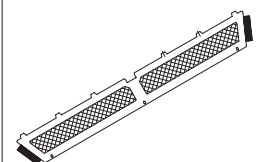

(Q) 2x



(1) 1x



(5) 4x




(7) 4x




(8) 2x


(1) Connect Part #J and Part #Q with 2 Bolts #7 and 2 Nuts #5.

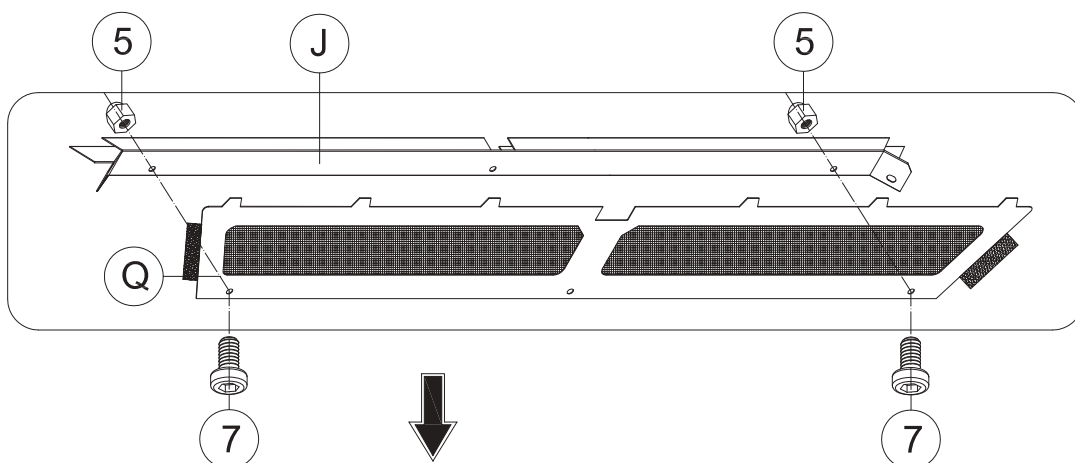

(2) Place the Assembled Part #J & #Q on Part #E2, securing with 1 Bolt #8.

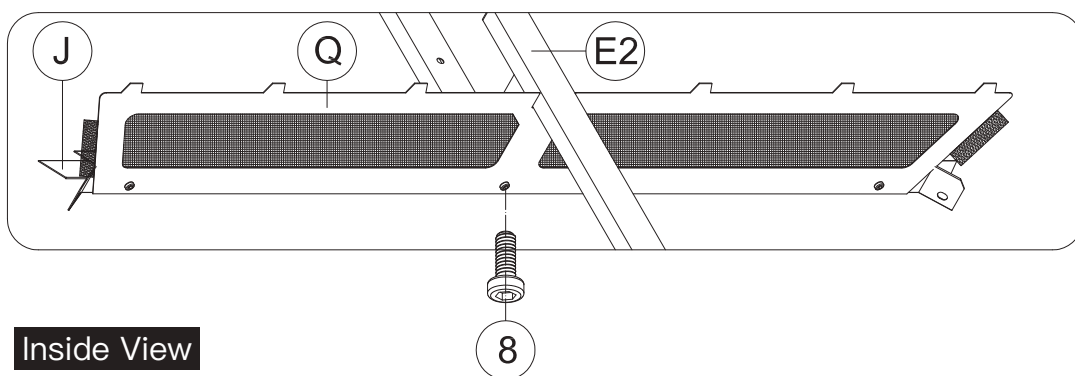

Inside View

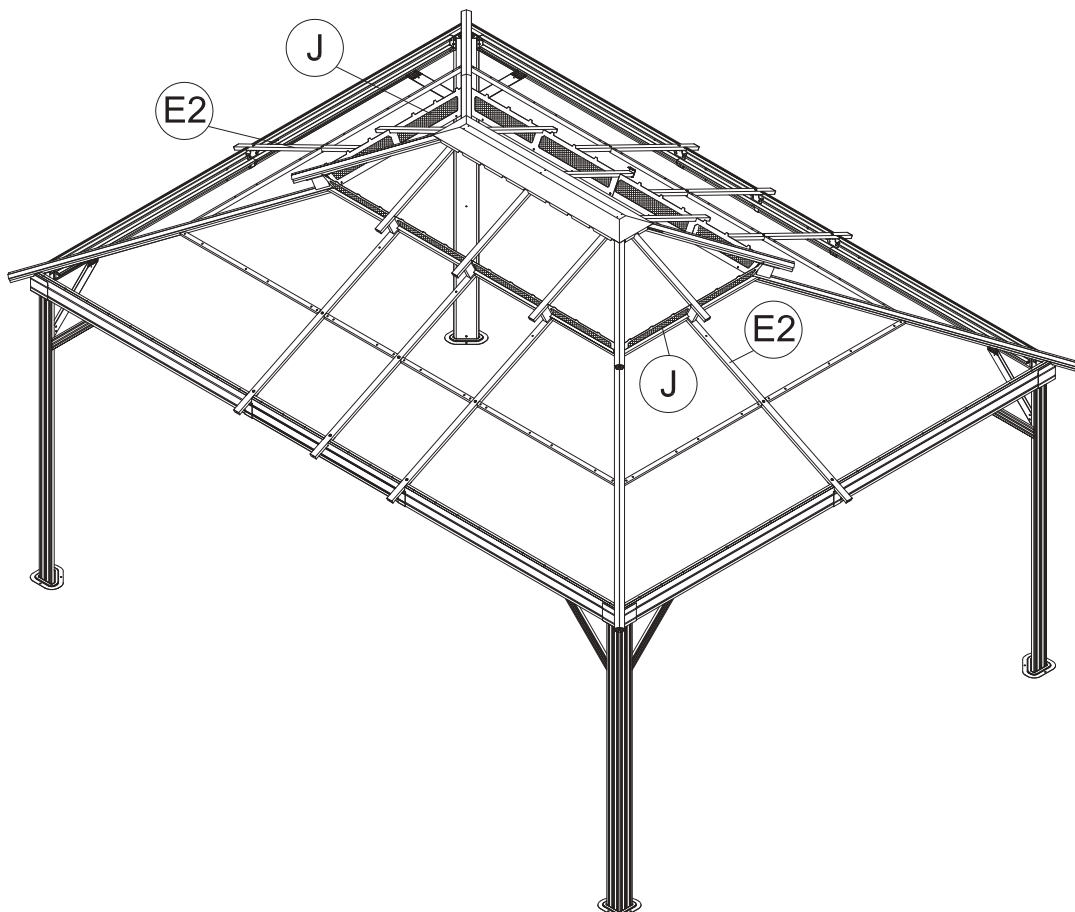

(3) Repeat the above procedures to assemble the opposite side.



X3 4x




1 1x




ST6.3x15

2 4x

(1) Place Part #J and Part #J1 on Part #E; put on Part #X3 and secure with Self-tapping Screw #2.

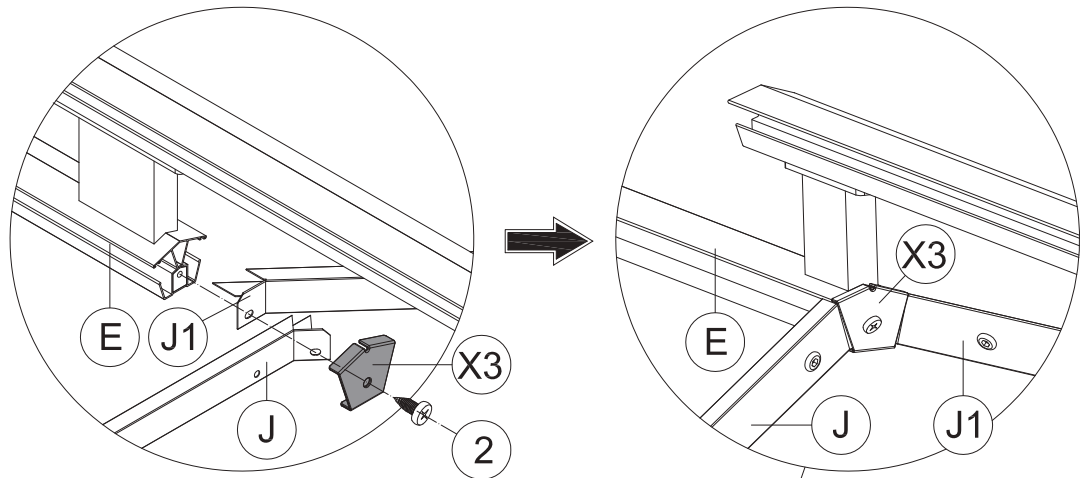

Inside View

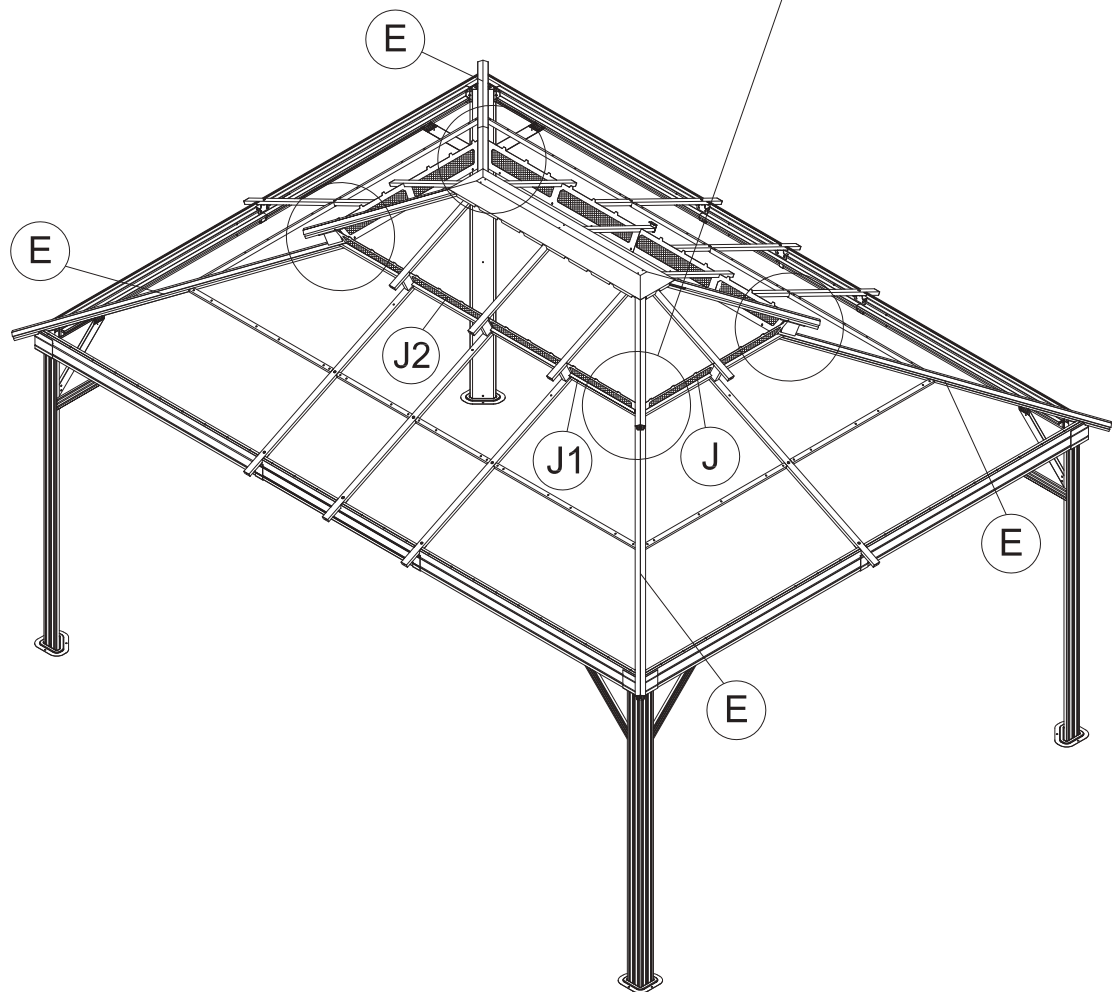


Repeat the above procedures to assemble the other 3 corners.


Cover Part #Z, #Z1 & #Z2 to Roof Panels.




L1 2x

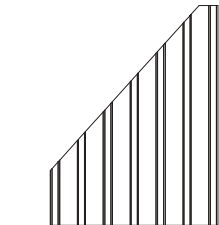

L2 2x

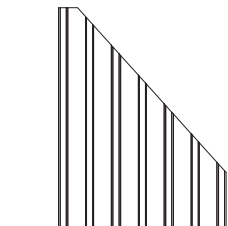

L3 2x

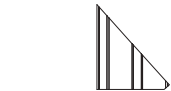

L4 2x



Z 8x






Z1 4x




Z2 4x

28


X2

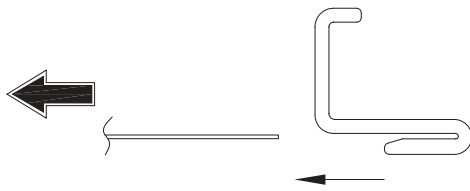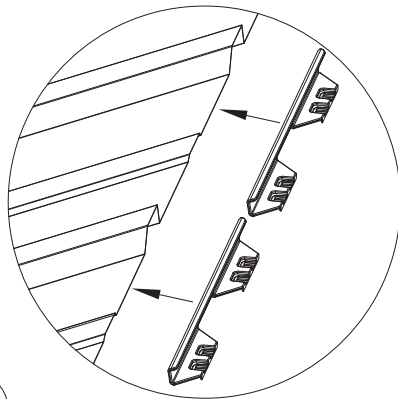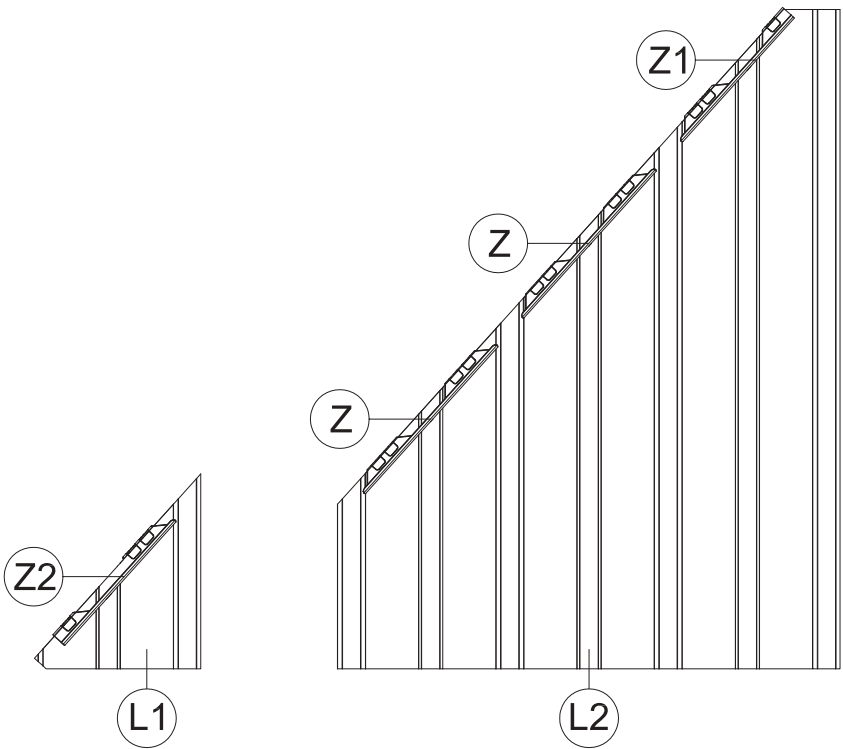


Section View

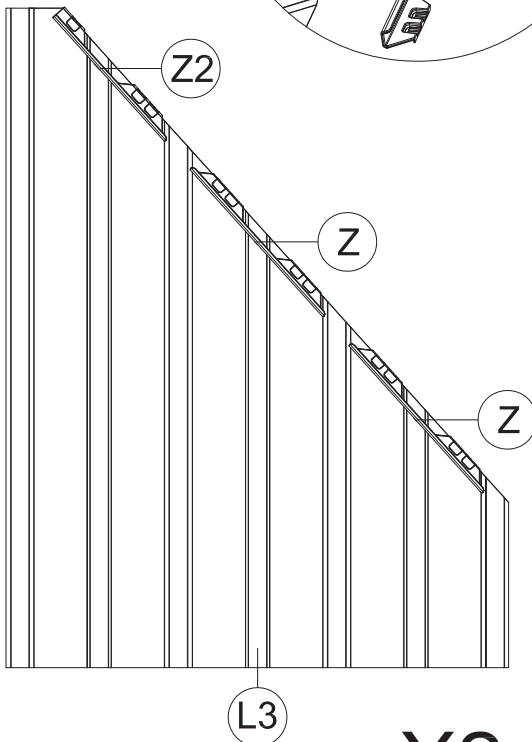


X2

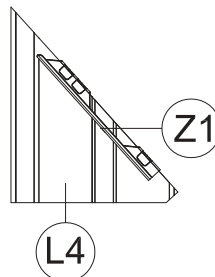


Cover Part #Z to Roof Panels.

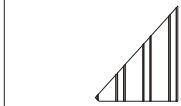


N1 2x

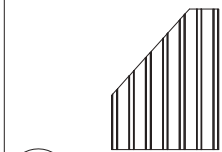

N2 2x

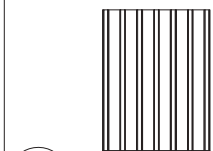

N3 4x

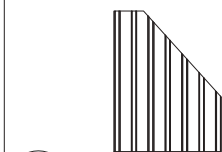





N4 2x



N5 2x




Z 12x

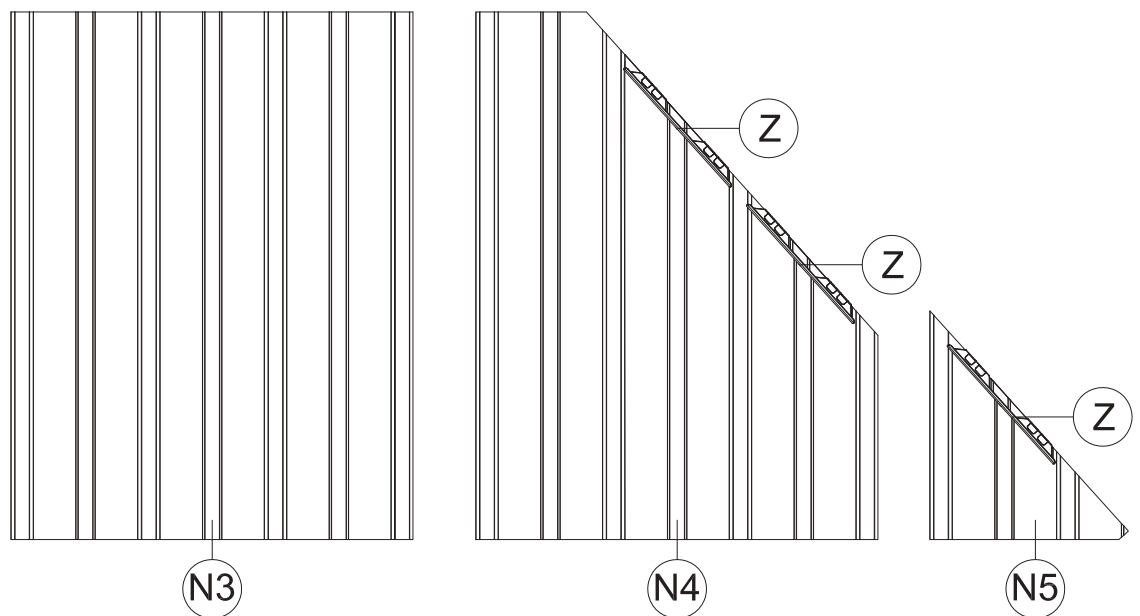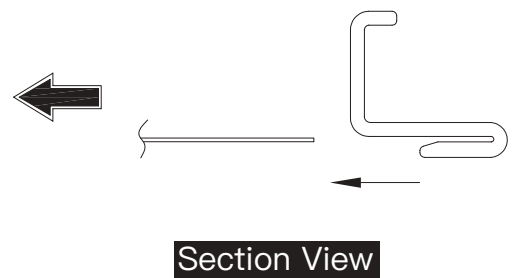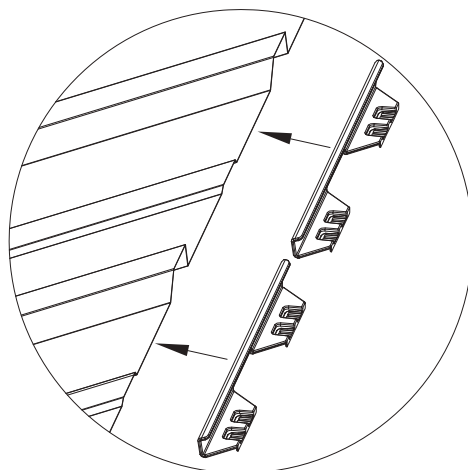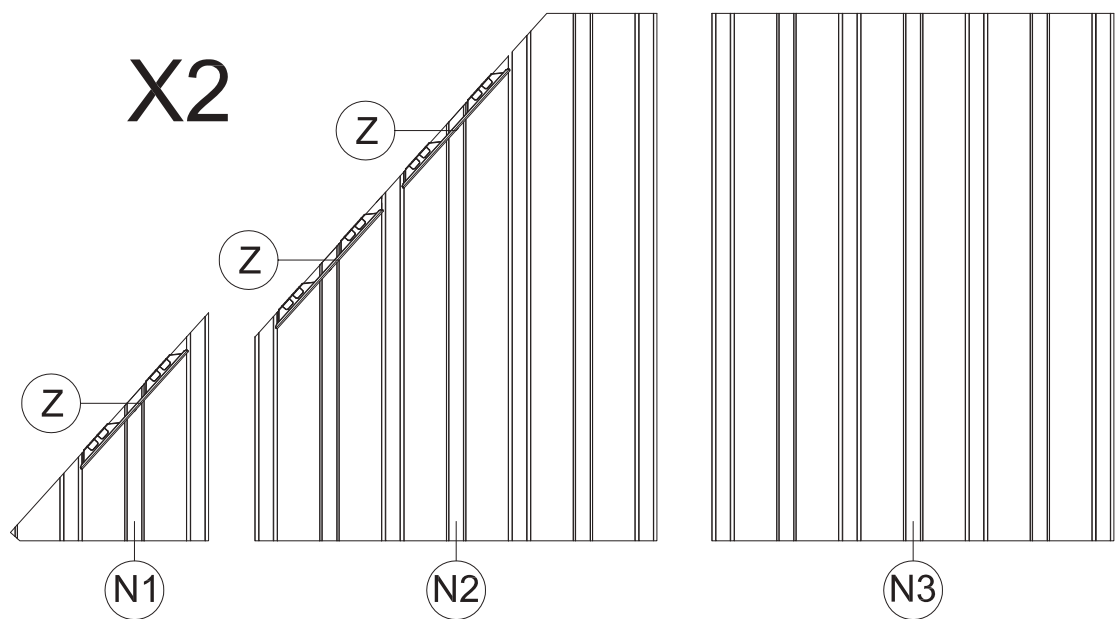




**ATTENTION:** The bigger roof panel need to cover the smaller one.

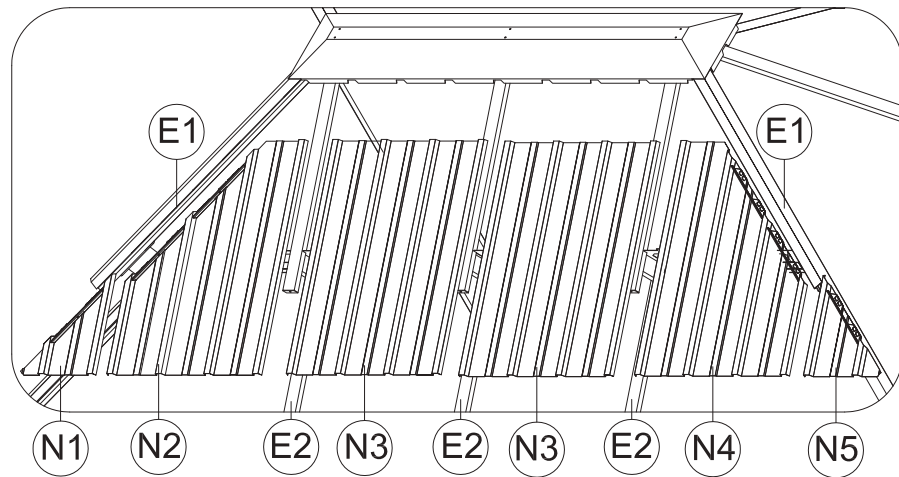


(1) Insert Part #N1, Part #N2 and Part #N3 into the frame.

(2) Insert Part #N5, Part #N4 and Part #N3 into the frame.

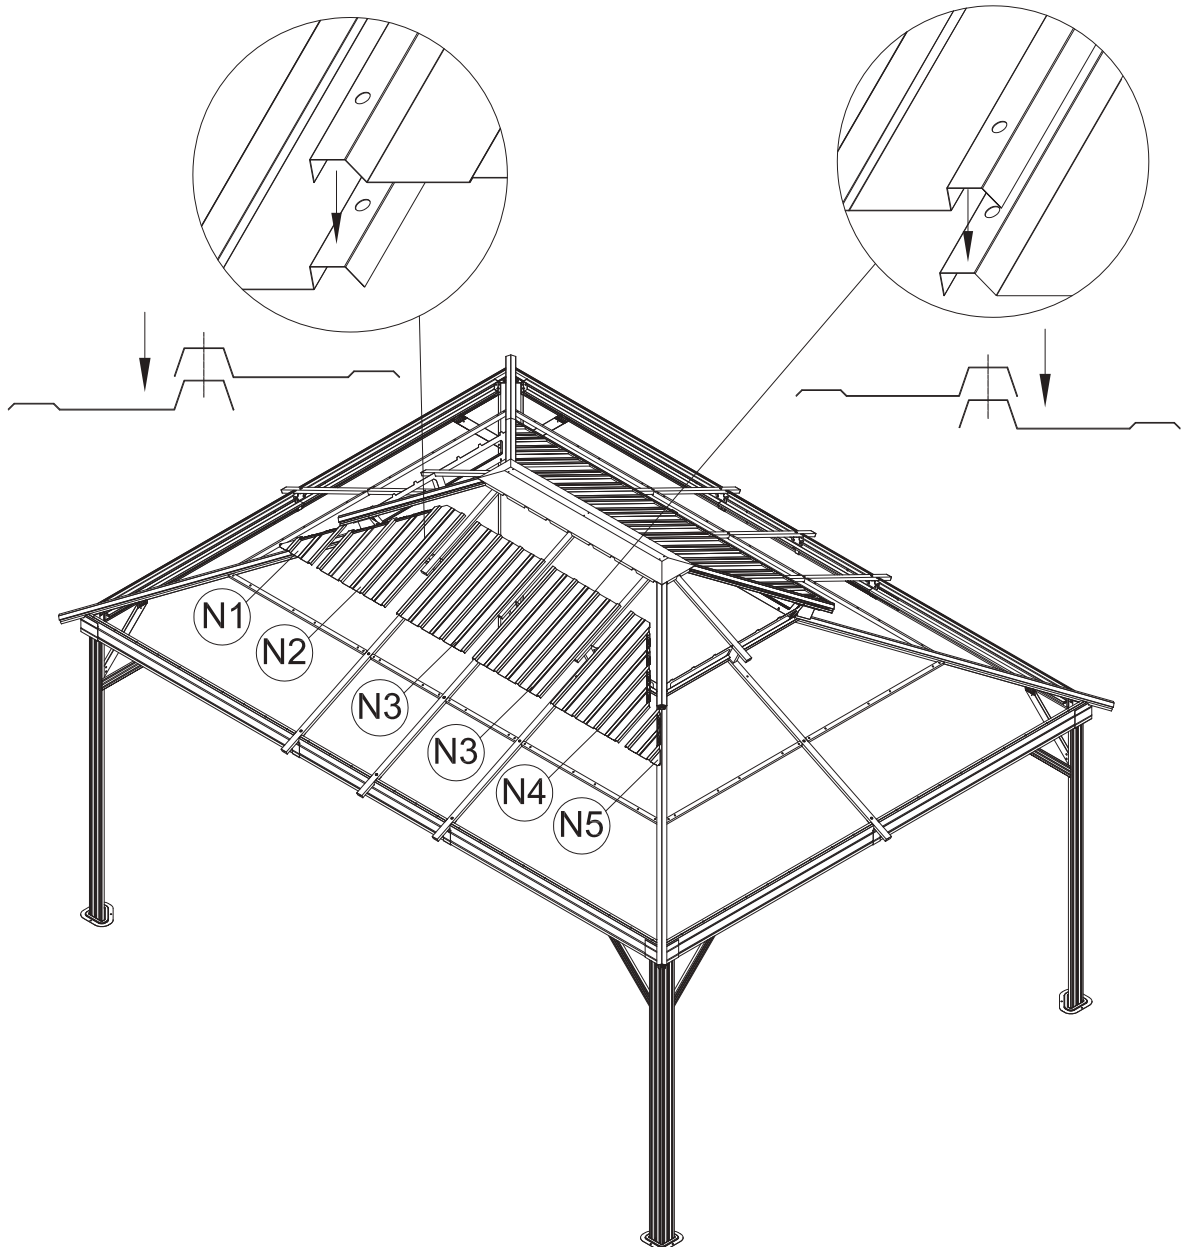


(3) Repeat the above procedures to assemble the opposite side.



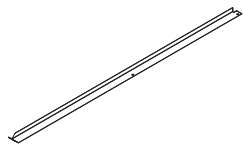

H1 2x

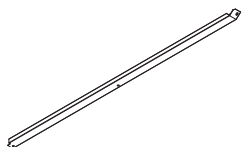

H2 2x



X2 2x




1 1x






M6x16

8 6x

(1) Attach Part #H1 to Part #E2, securing with Bolt #8.

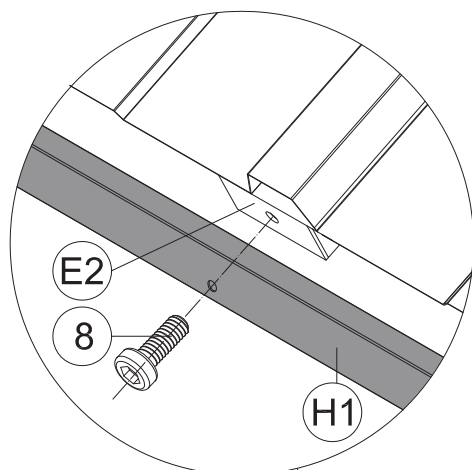


(2) Attach Part #H2 to Part #E2, securing with Bolt #8.

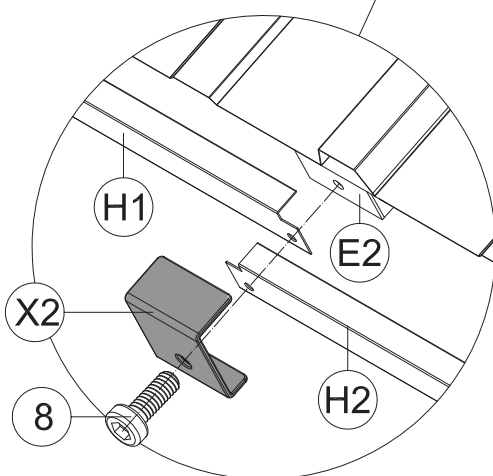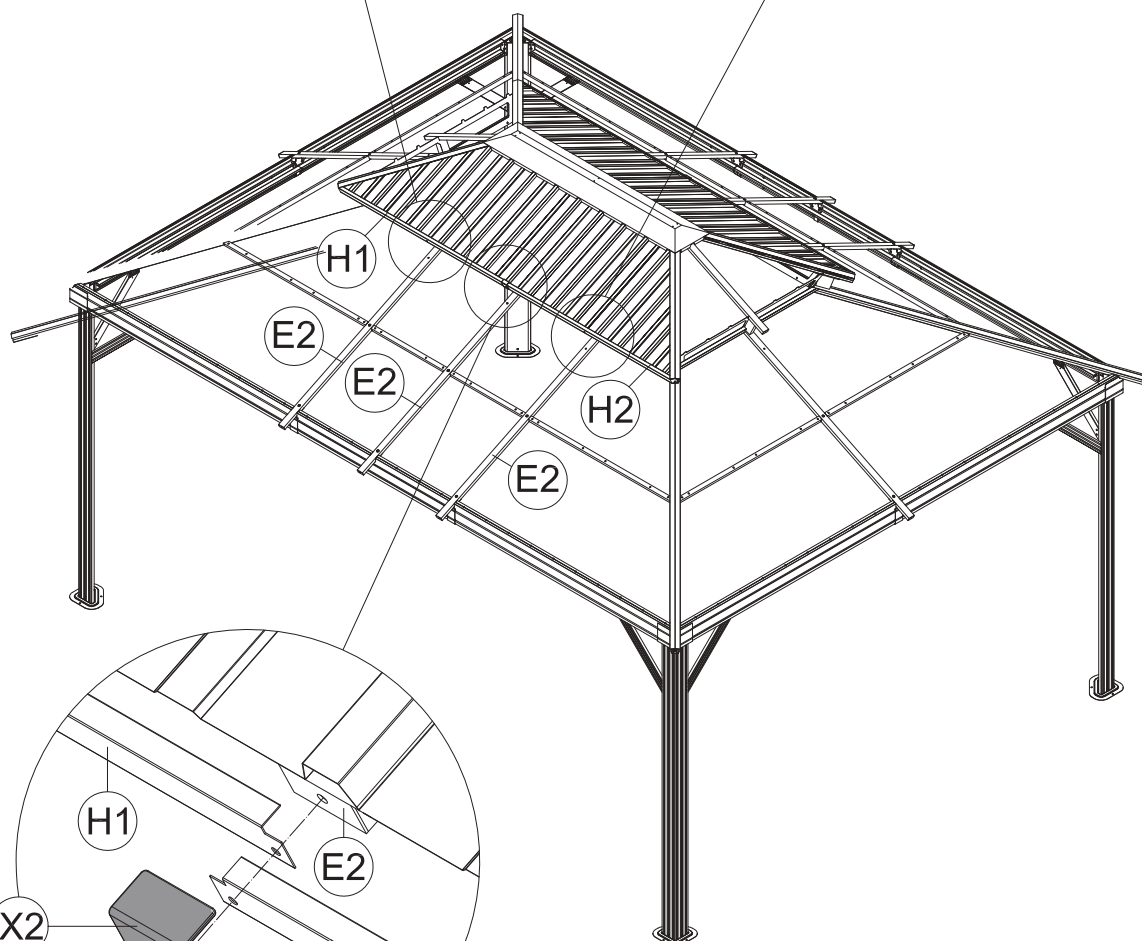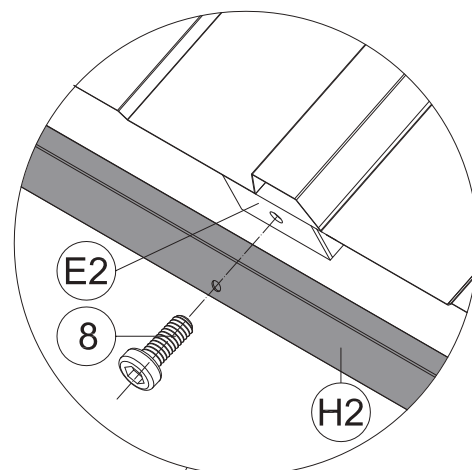

(3) Place Part #H1 and Part #H2 on Part #E2; put on Part #X2 and secure with Bolt #8.

(4) Repeat the above procedures to assemble the opposite side.

**ATTENTION:** The bigger roof panel need to cover the smaller one.

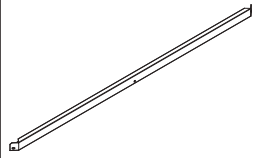

(H) 2x




S4

(1) 1x



M6x16




(8) 2x

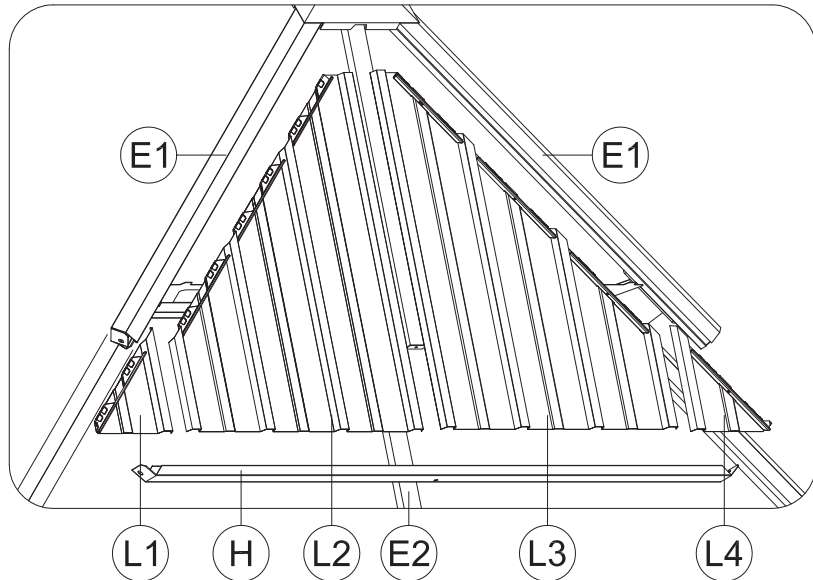

(1) Insert Part #L1 and Part #L2 into the frame.



(2) Insert Part #L4 and Part #L3 into the frame.

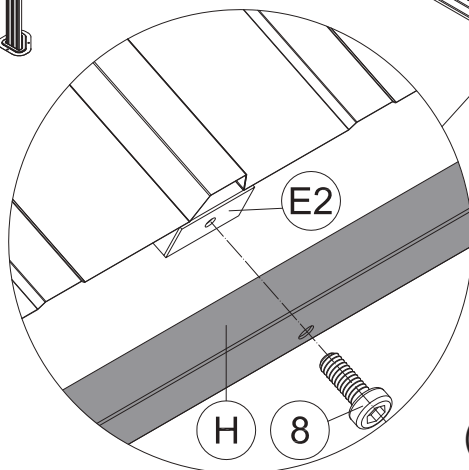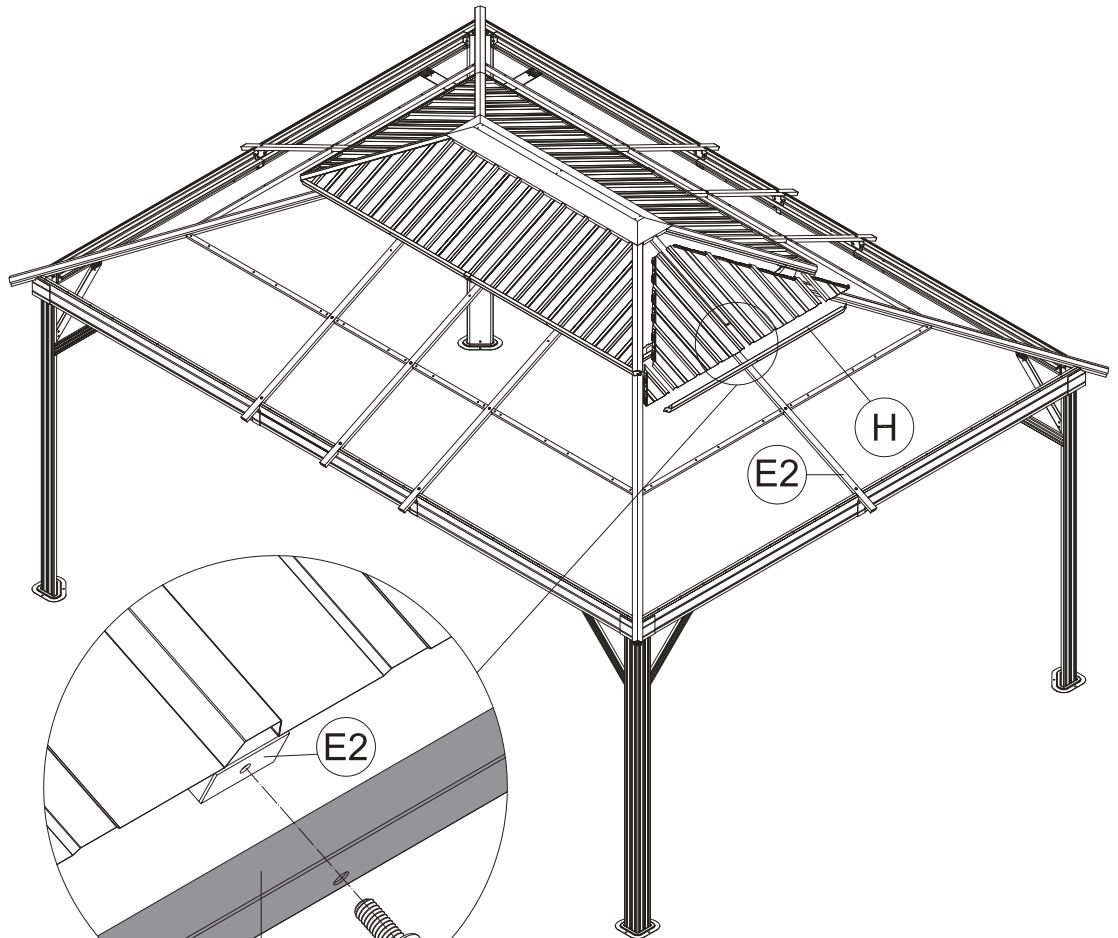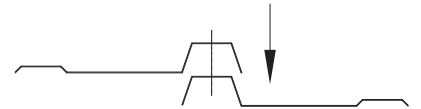

(3) Attach Part #H to Part #E2, securing with Bolt #8.



(X3) 4x




(1) 1x




ST6.3x15

(2) 4x

Place Part #H and Part #H2 on Part #E1;  
put on Part #X3 and secure with Self-tapping Screw #2

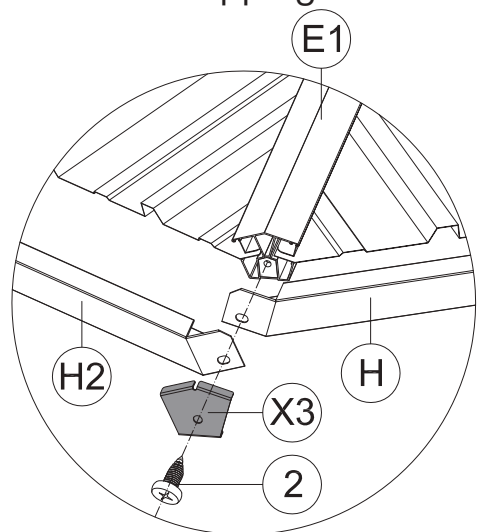

Outside View

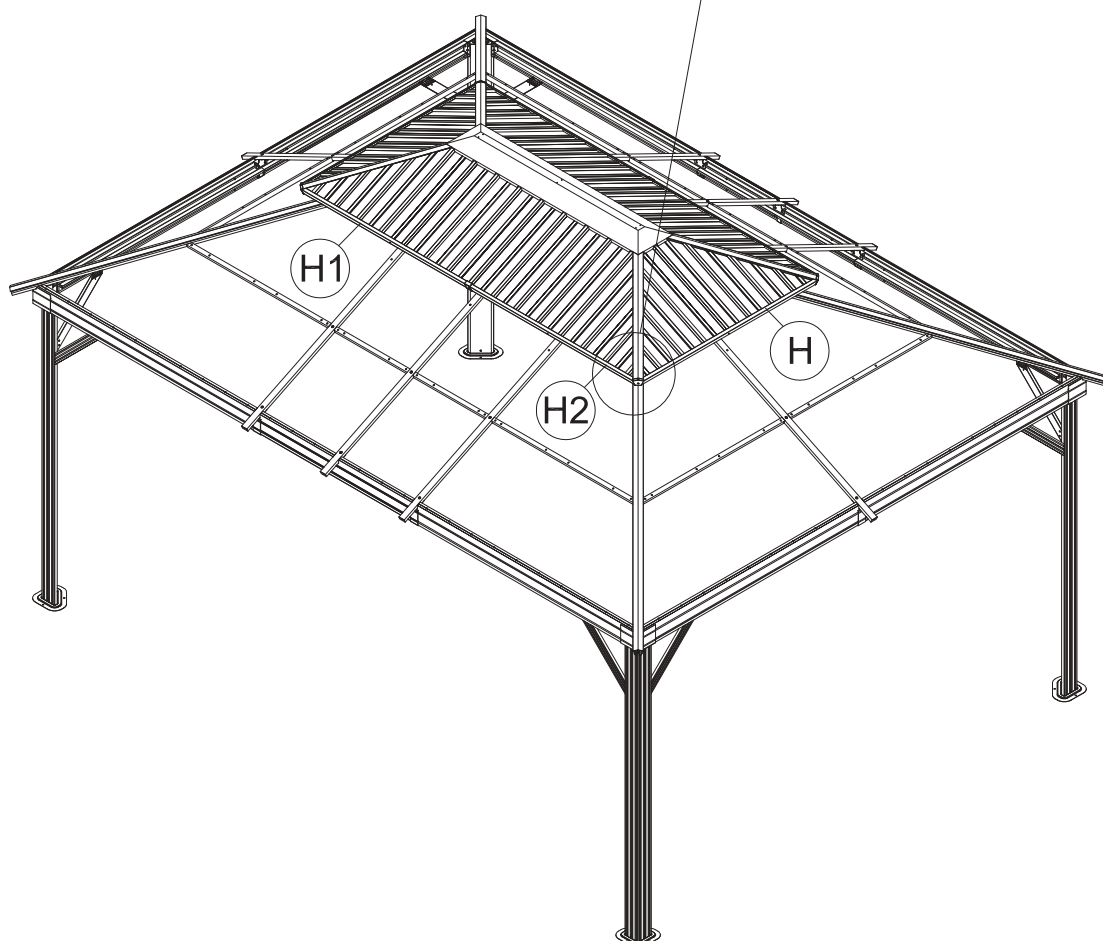


Repeat the above procedures to assemble the other 3 corners.

# Cover Part #Z to Roof Panels




M1 2x

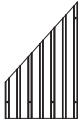


M2 2x



M3 2x

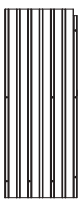


M4 2x

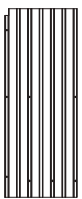

M5 2x



M6 2x

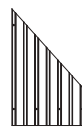

M7 2x





M8 2x





Z 28x




34

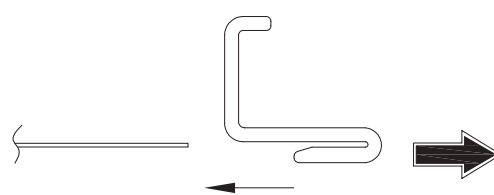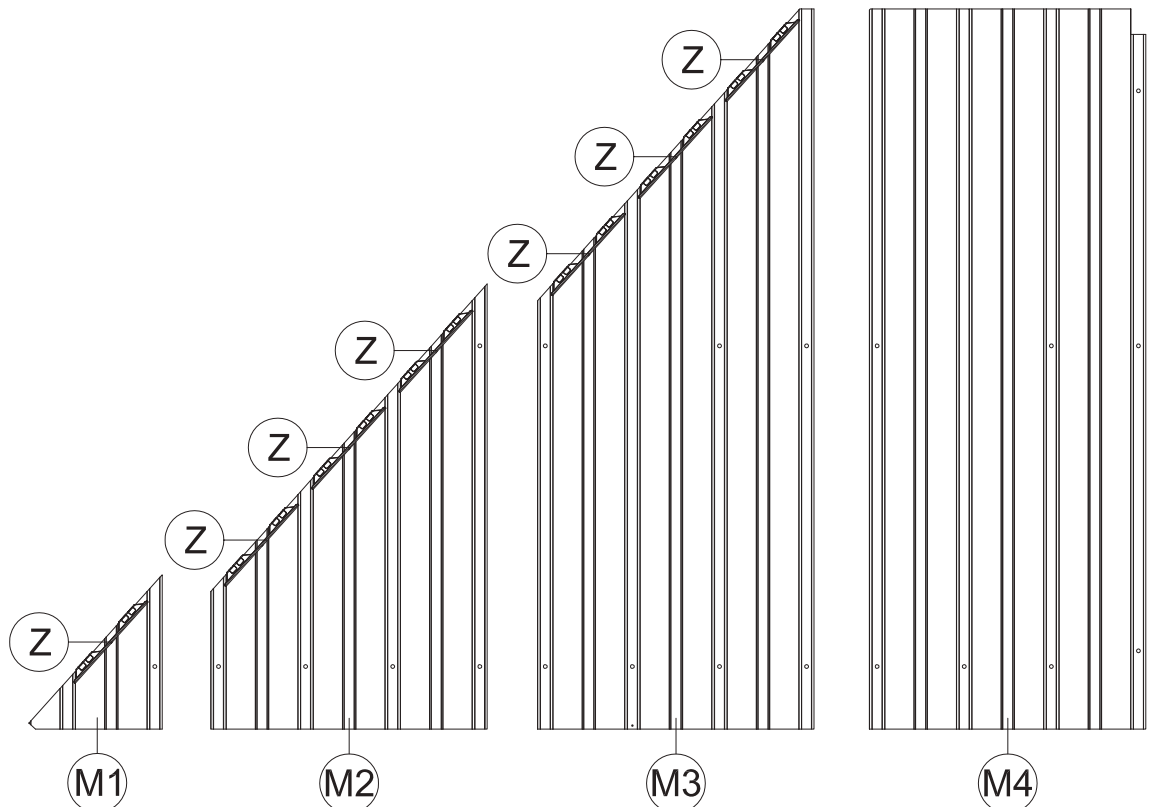


Section View

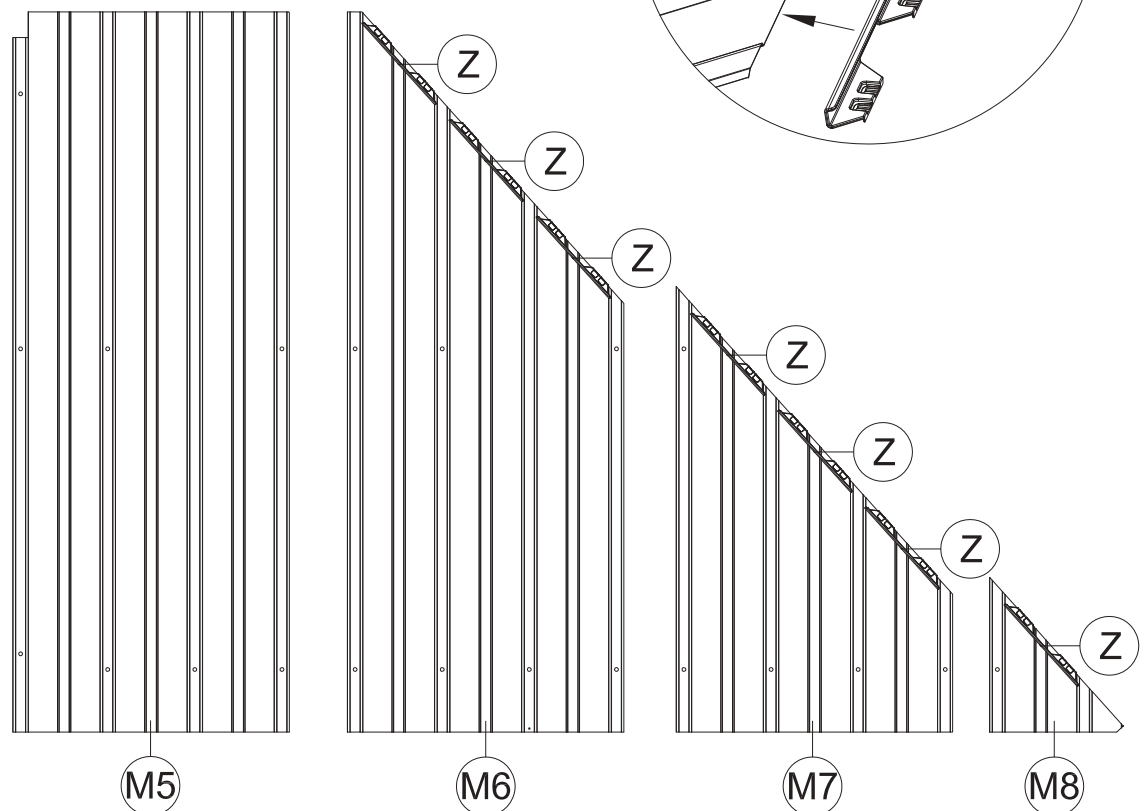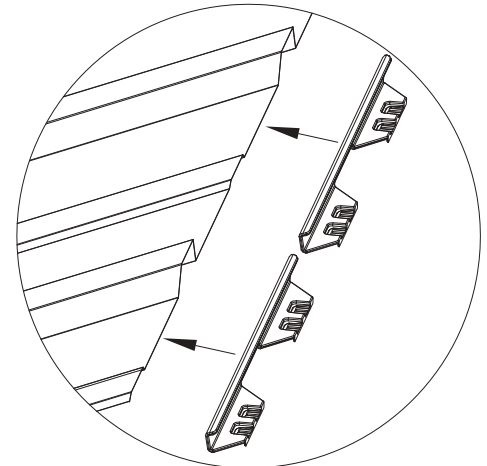


# Cover Part #Z to Roof Panels

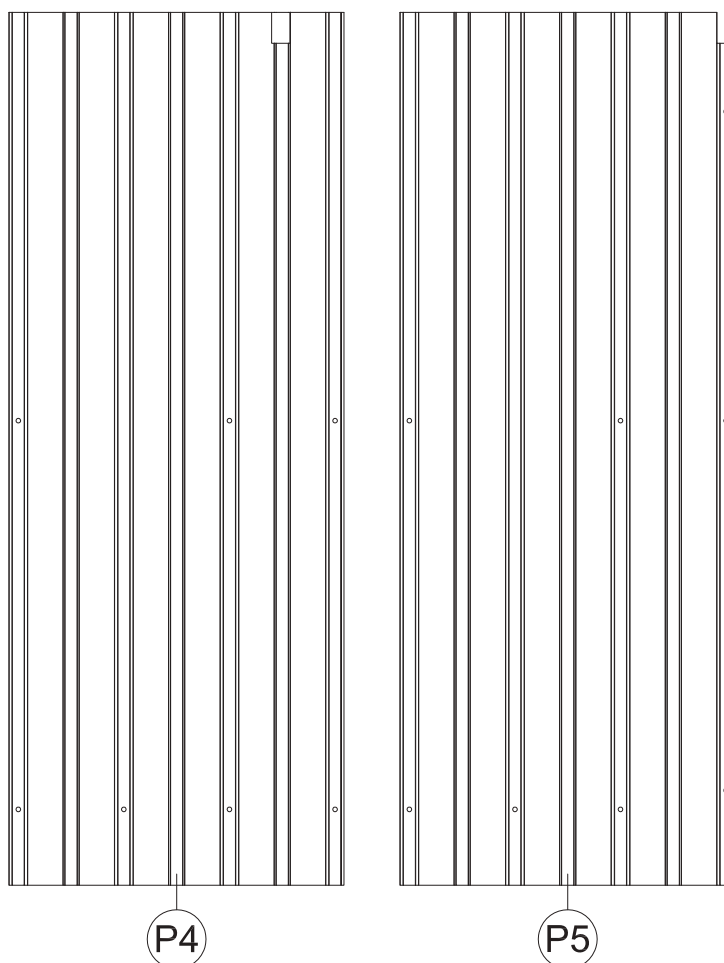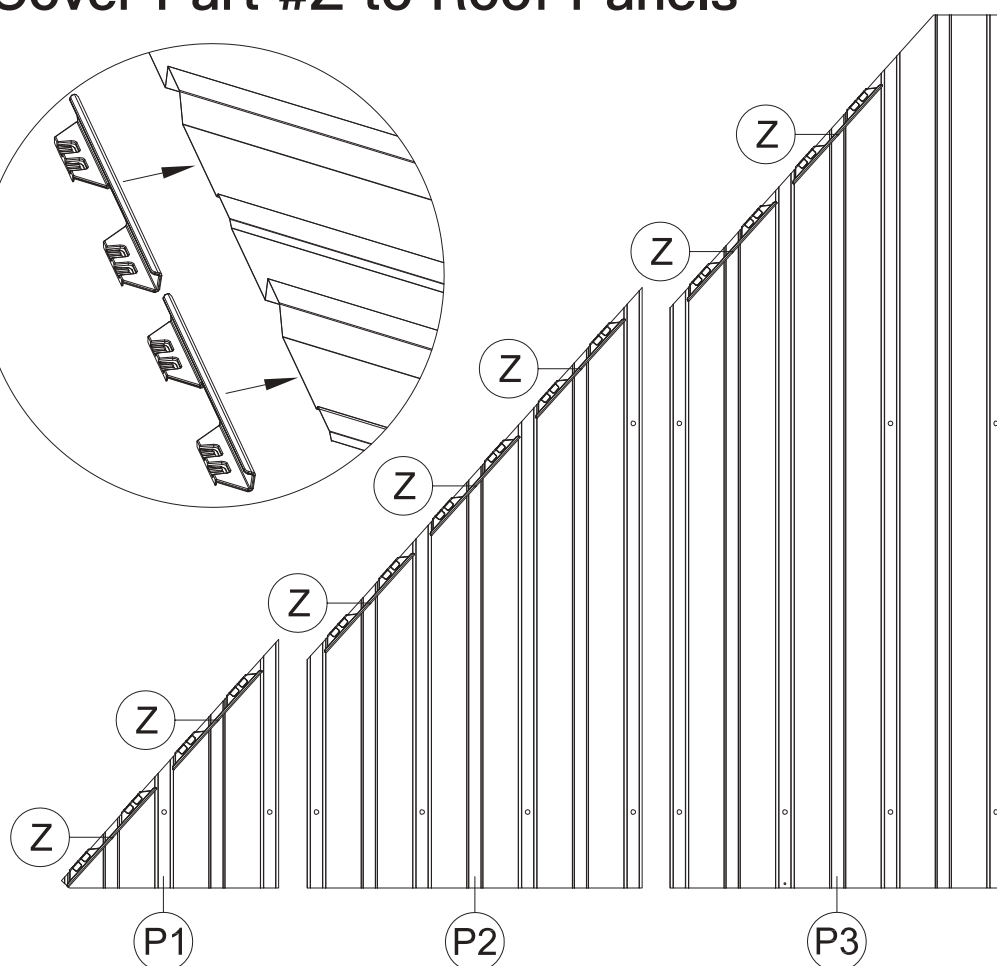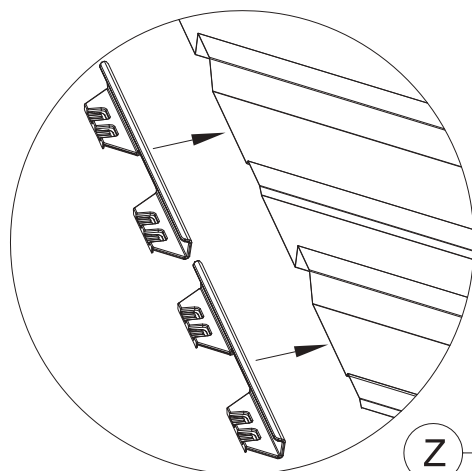


P1 2x

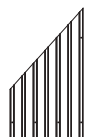


P2 2x

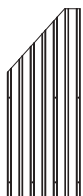

P3 2x

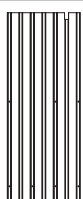

P4 2x

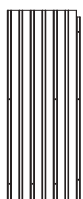


P5 2x




Z 14x

# Cover Part #Z to Roof Panels


P6 2x

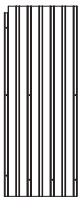


P7 2x

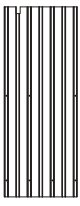

P8 2x

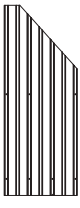


P9 2x

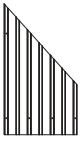

P10 2x




Z 14x

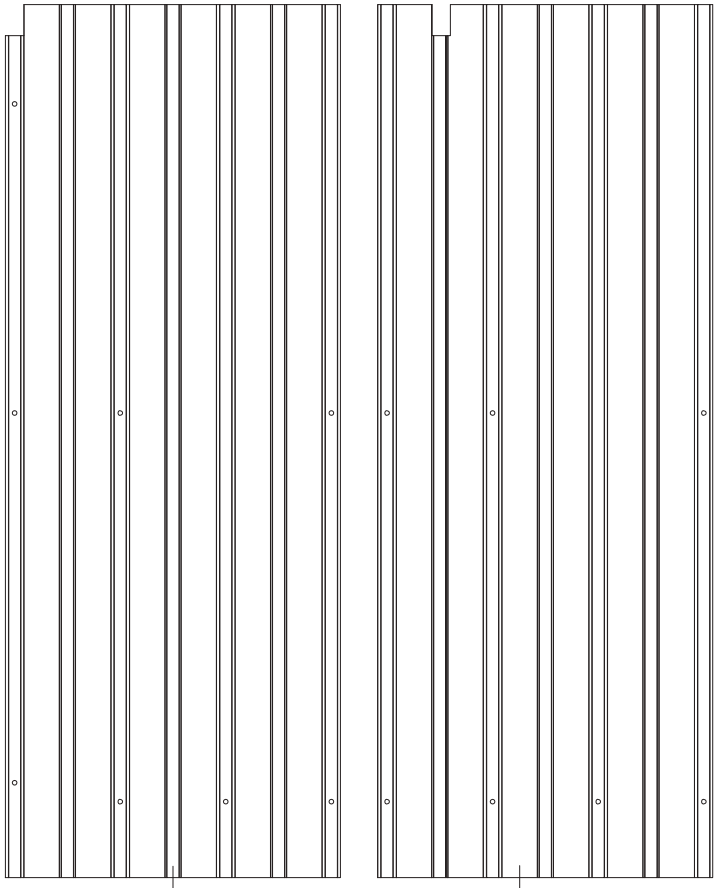

P6

P7

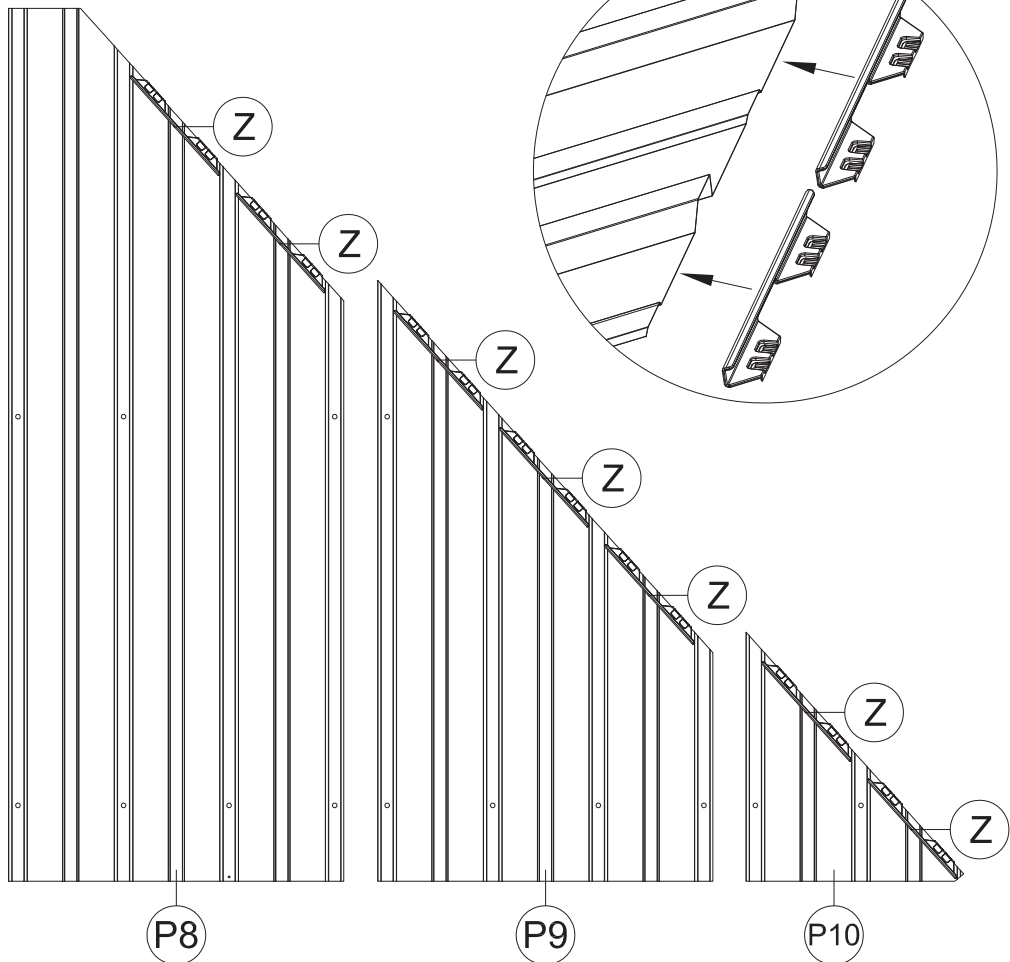

Z

Z

Z

Z

Z


Z

Z





P8

P9



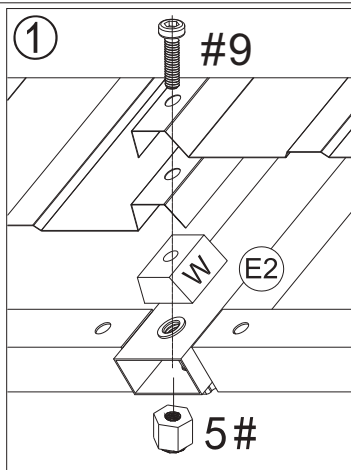

P10

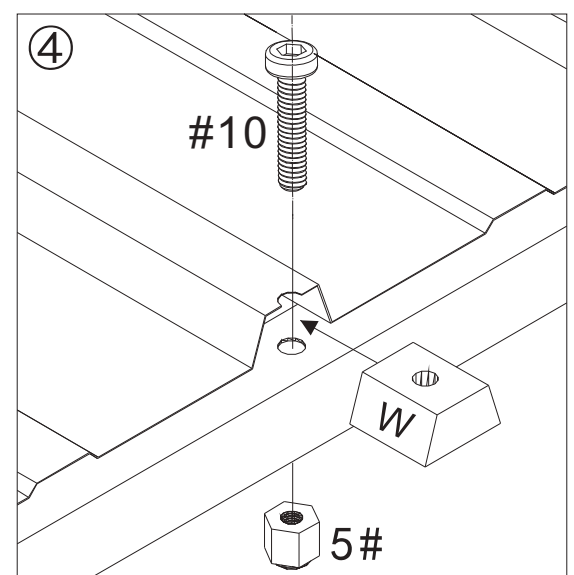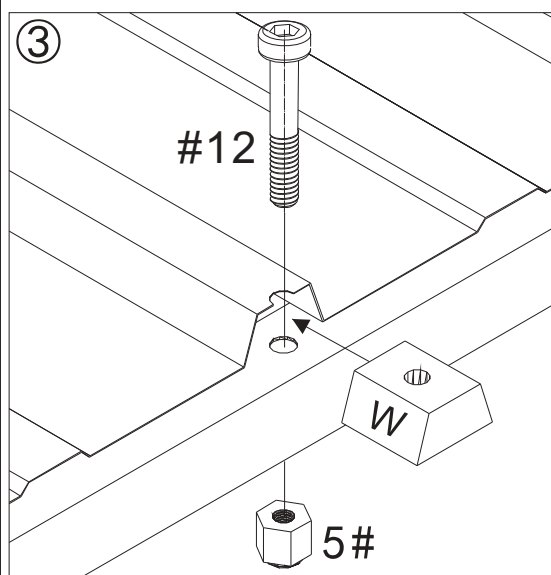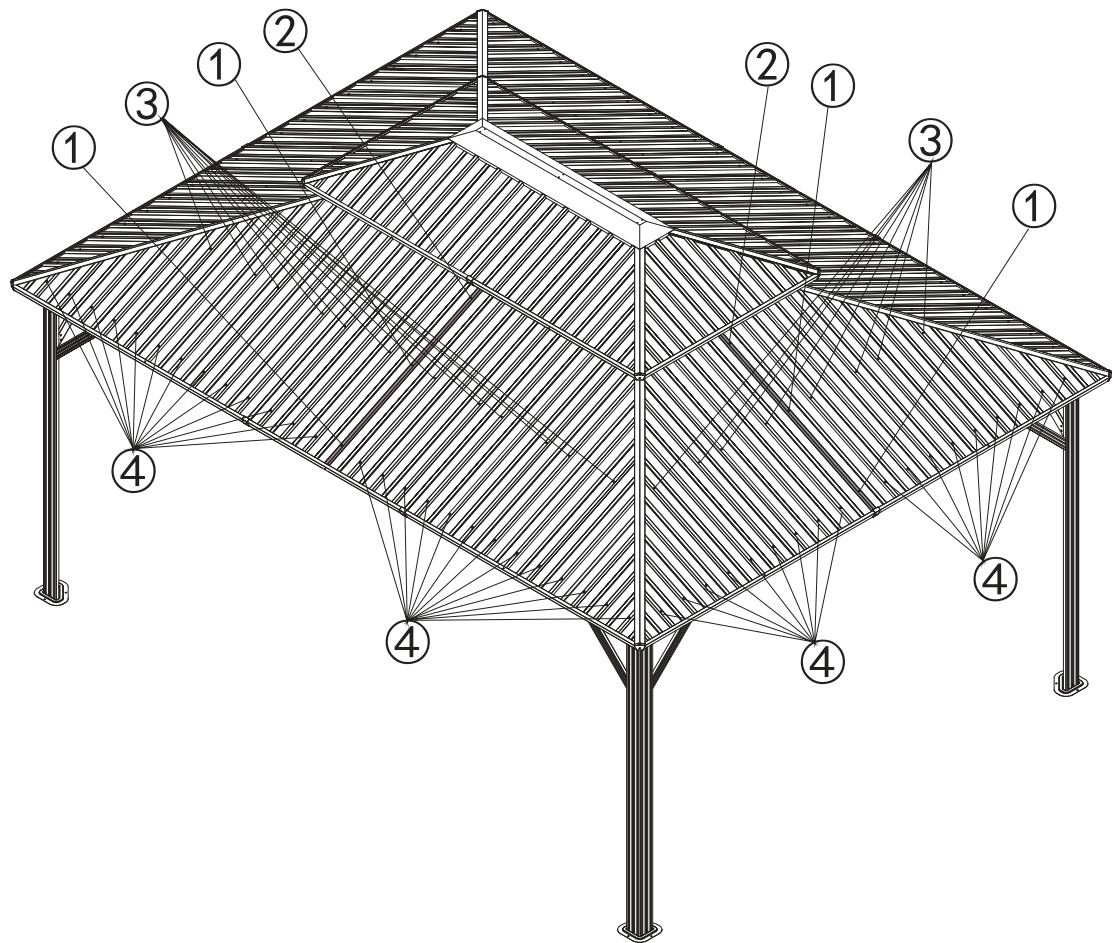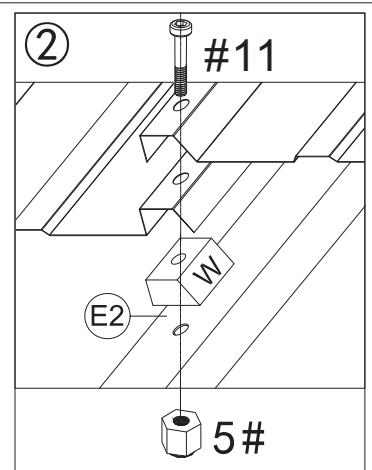



▲ Part #W should be inserted between roof panels and solidifying bar or beams, then secure with bolts and nuts.





- |   |
|---|
|  |
| (W) 16x   |
|  |
| S4  |
|  |
| (1) 1x  |
|  |
| M6  |
| (5) 16x   |
|  |
| M6x28   |
| (10) 16x  |


**ATTENTION:** The bigger roof panel need to cover the smaller one.

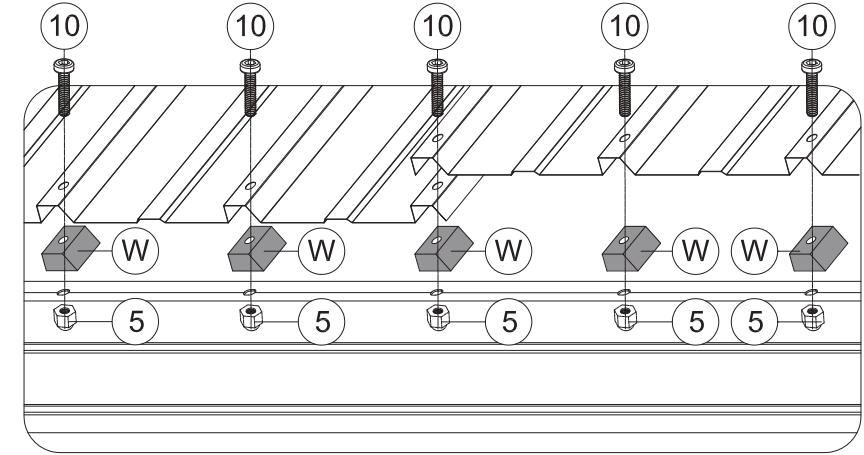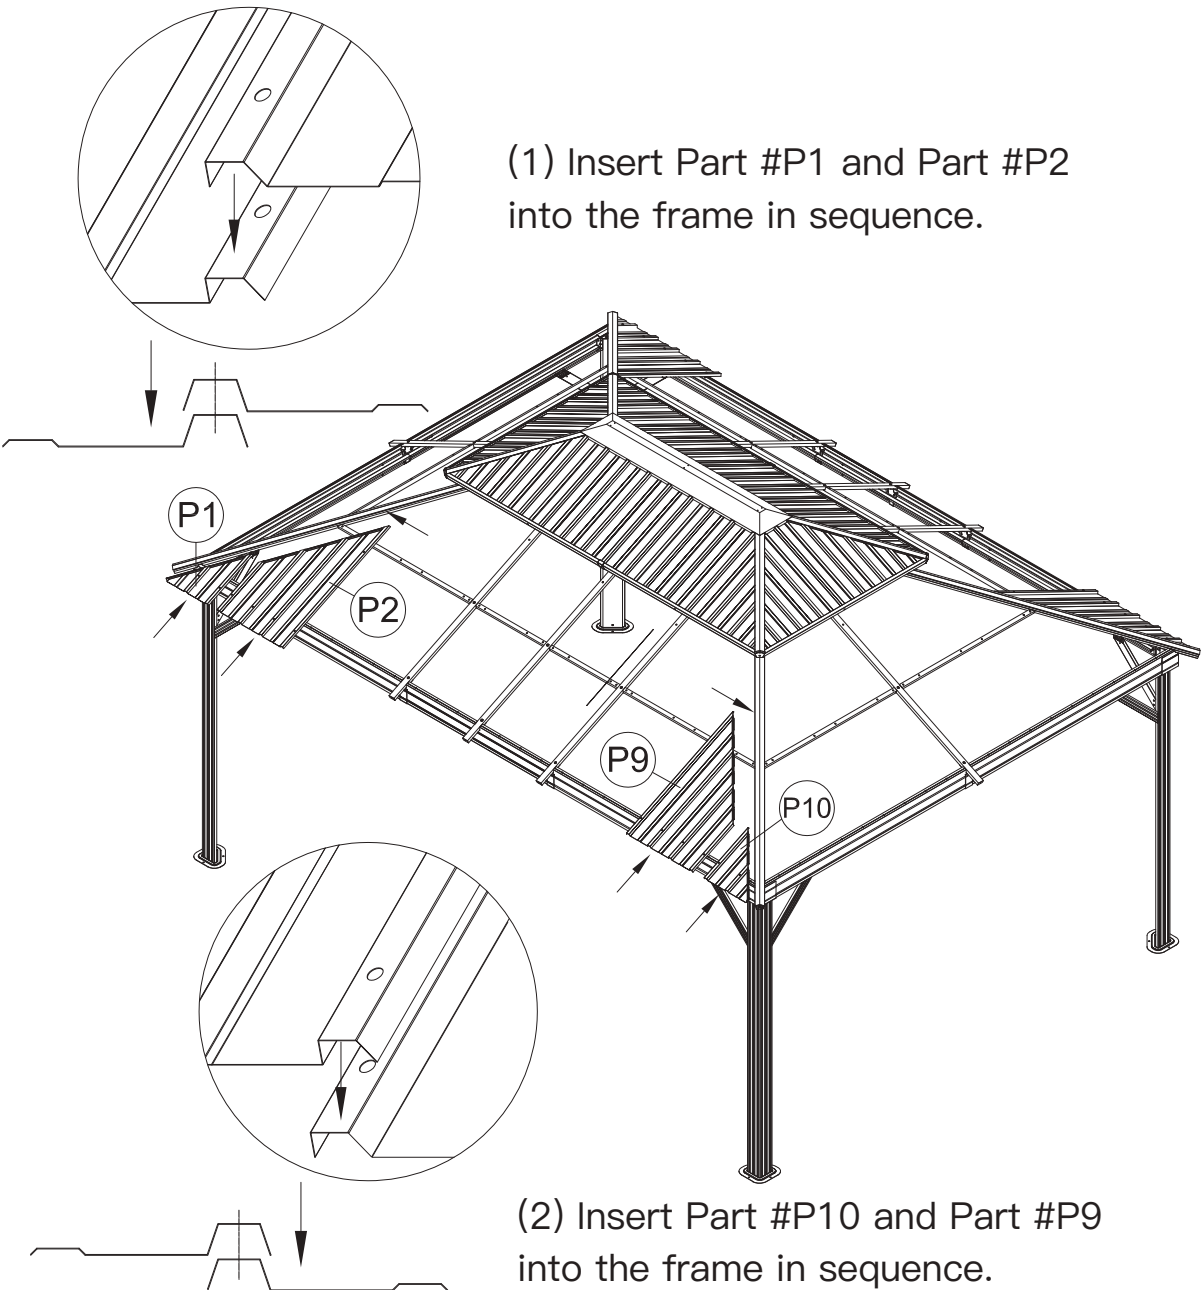

(3) Place 8 Part #W between roof panels and beams.  
Then secure with 8 Bolts #10 and 8 Nuts #5.

(4) Repeat the above procedures to assemble the opposite side.



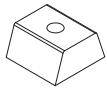

W 20x



1 1x




M6

5 20x



M6x28

10 12x


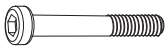


M6x50


12 8x

**ATTENTION:** The bigger roof panel need to cover the smaller one.

(1) Insert Part #P3 into the frame.

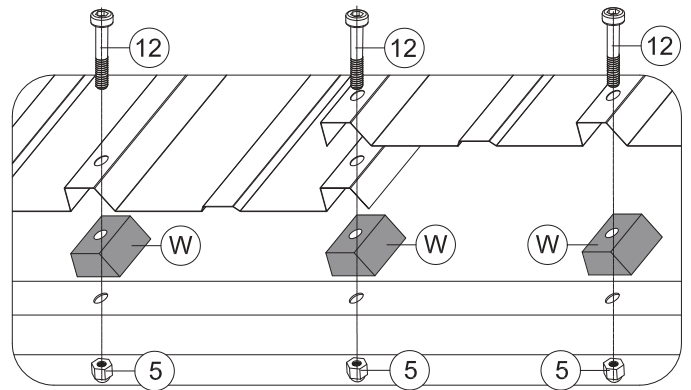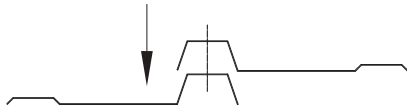


(3) Place 4 Part #W between roof panels and solidifying bars. Then secure with 4 Bolts #12 and 4 Nuts #5.

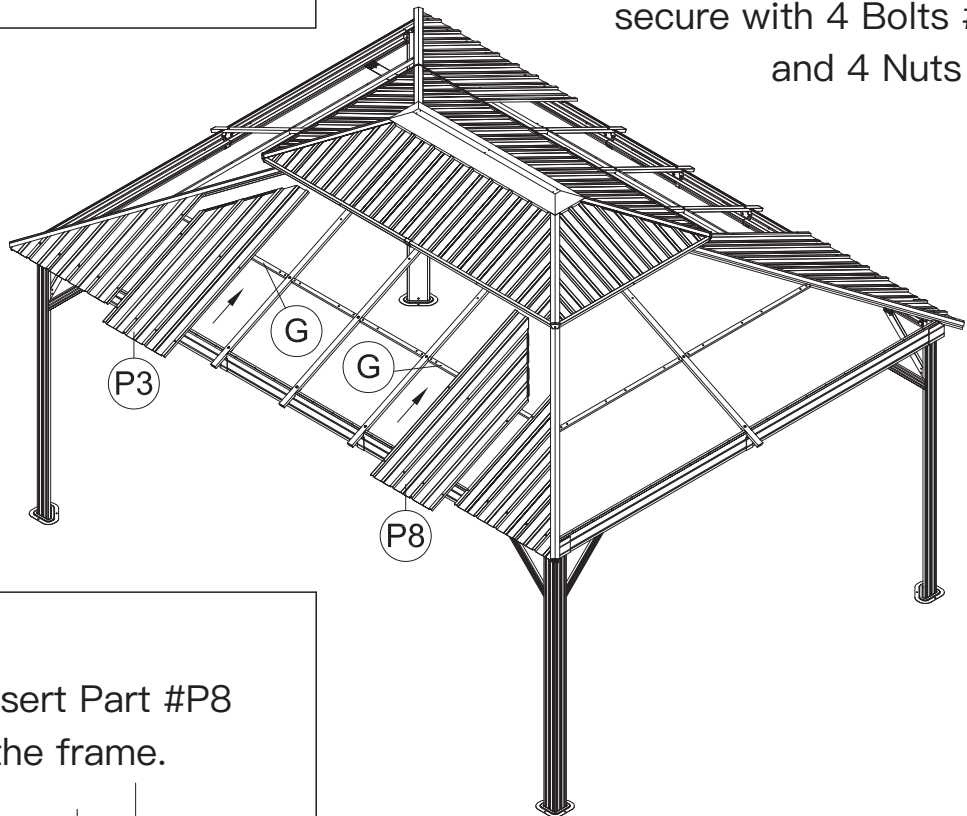










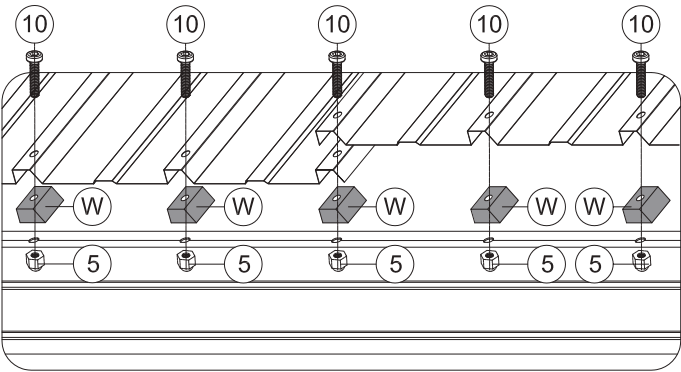
(2) Insert Part #P8 into the frame.

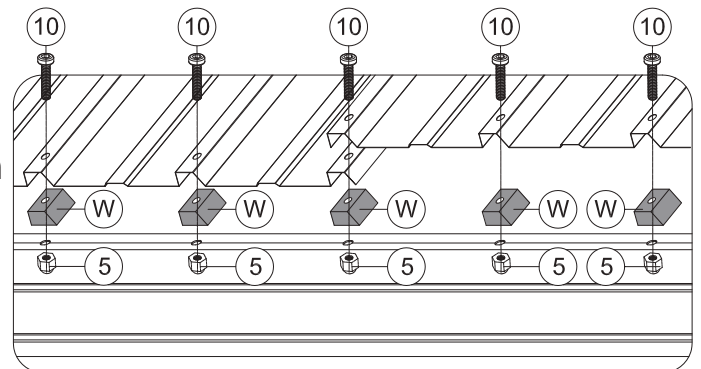


(4) Place 6 Part #W between roof panels and beams. Then secure with 6 Bolts #10 and 6 Nuts #5.

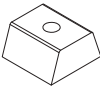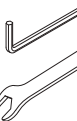


(5) Repeat the above procedures to assemble the opposite side.

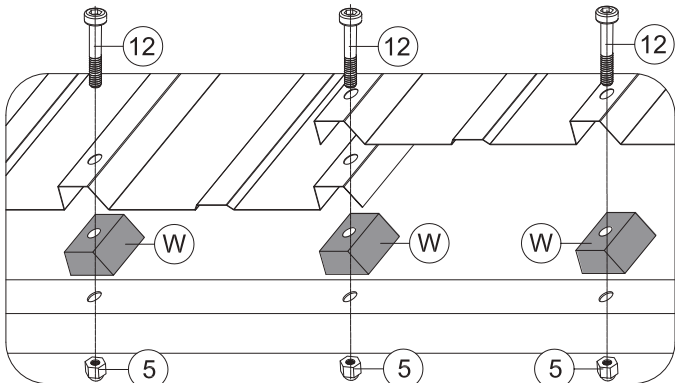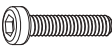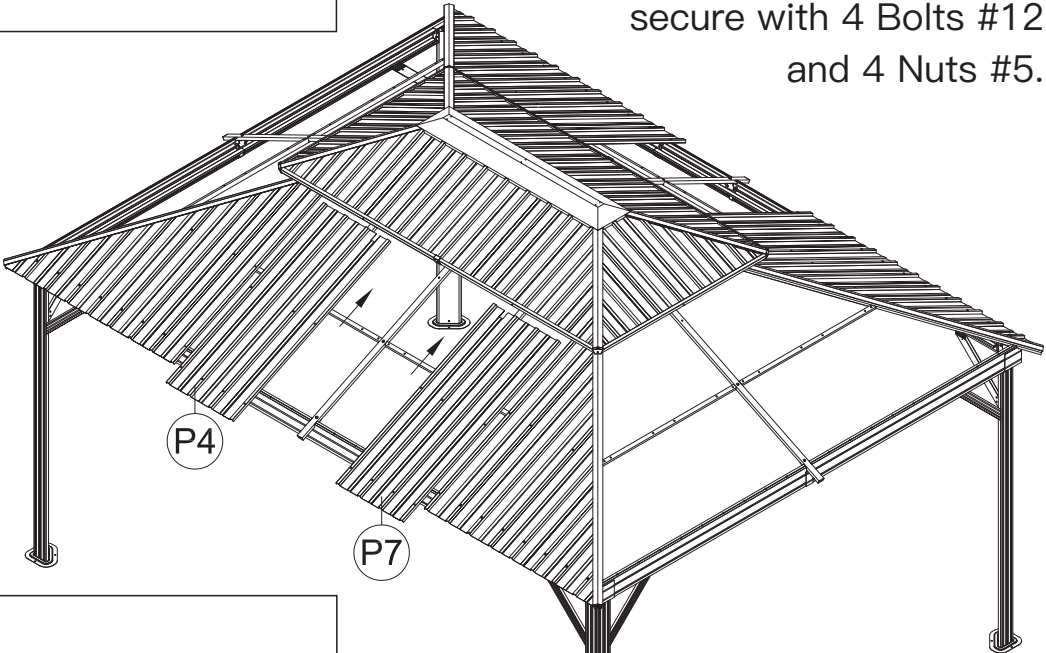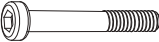 <p>(W) 20x</p>	<p><b>ATTENTION: The bigger roof panel need to cover the smaller one.</b></p>
 <p>(1) 1x</p>	<p>(1) Insert Part #P4 into the frame.</p> 
 <p>(5) 20x</p>	<p>(3) Place 4 Part #W between roof panels and solidifying bars. Then secure with 4 Bolts #12 and 4 Nuts #5.</p> 
 <p>(10) 12x</p>	
 <p>(12) 8x</p>	<p>(2) Insert Part #P7 into the frame.</p> 
<p>40</p>	<p>(4) Place 6 Part #W between roof panels and beams. Then secure with 6 Bolts #10 and 6 Nuts #5.</p>  <p>(5) Repeat the above procedures to assemble the opposite side.</p>

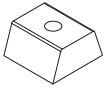

W 24x

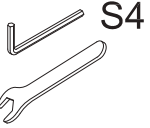


1 1x



M6

5 20x

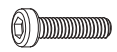


M6x25

9 4x



M6x28

10 12x

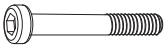


M6x50


12 8x

**ATTENTION:** The bigger roof panel need to cover the smaller one.



(1) Insert Part #P5 into the frame.

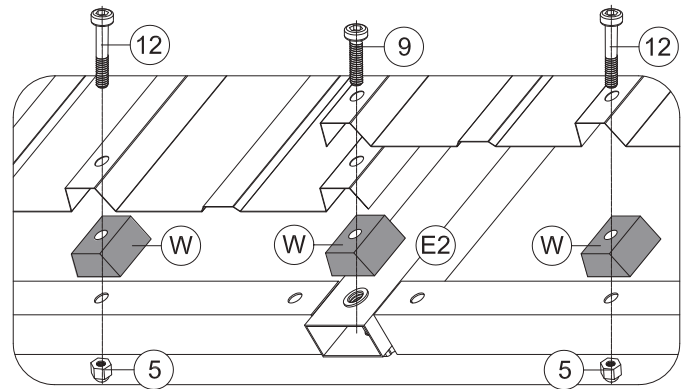

(3) Place 4 Part #W between roof panels and solidifying bars. Then secure with 4 Bolts #12 and 4 Nuts #5; Place 1 Part #W between roof panels and Part #E2. Then secure with 1 Bolt #9 and 1 Nut #5.

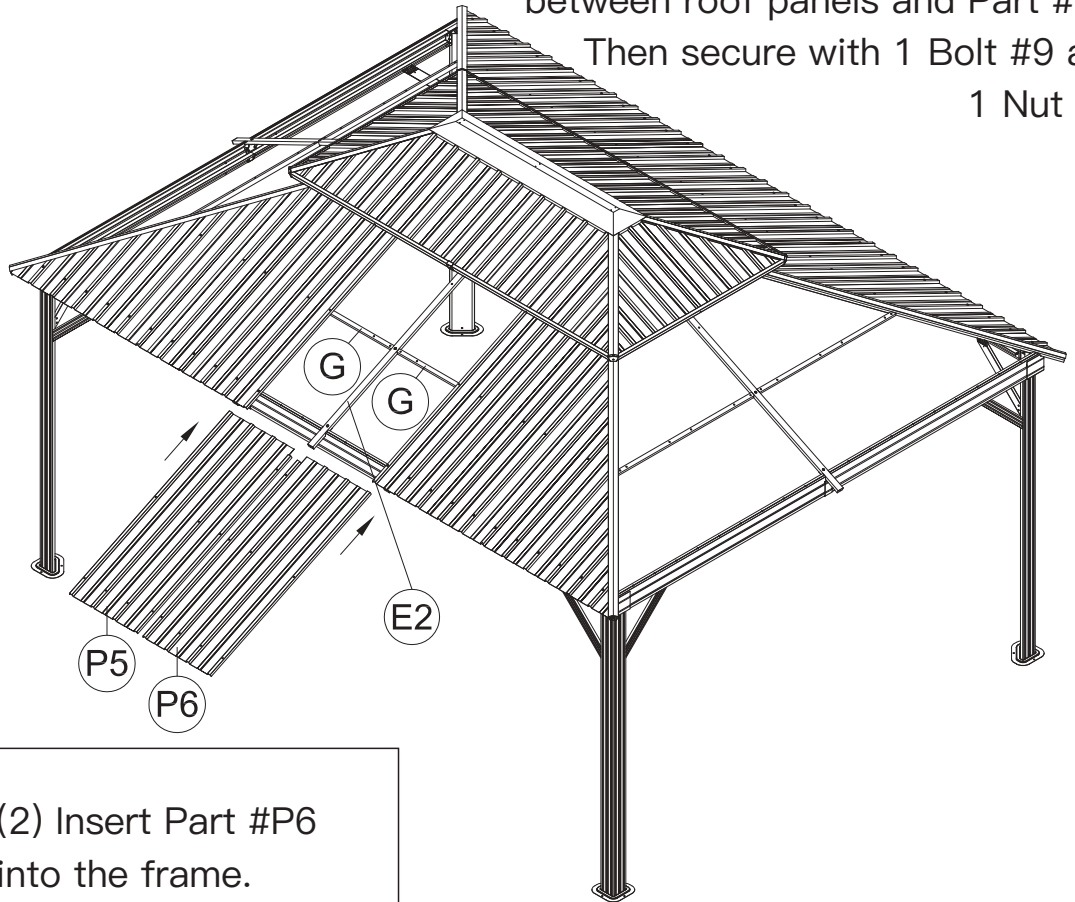


(2) Insert Part #P6 into the frame.

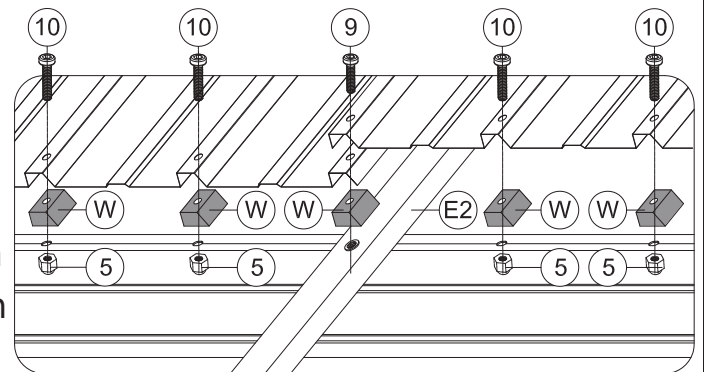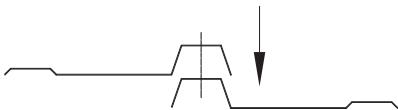


(4) Place 6 Part #W between roof panels and beams. Then secure with 6 Bolts #10 and 6 Nuts #5; Place 1 Part #W between roof panels and Part #E2. Then secure with 1 Bolt #9 and 1 Nut #5.

(5) Repeat the above procedures to assemble the opposite side.

**ATTENTION: The bigger roof panel need to cover the smaller one.**

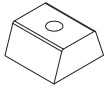

(W) 12x

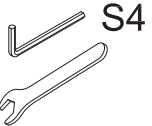


(1) 1x




M6

(5) 12x


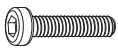


M6x28


(10) 12x

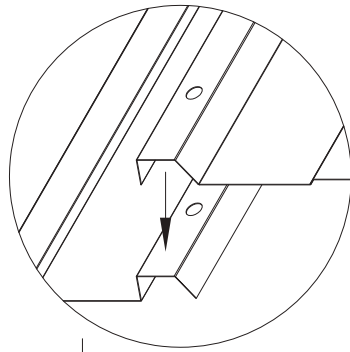

(1) Insert Part #M1 and Part #M2 into the frame in sequence.

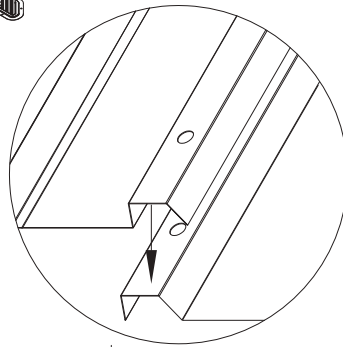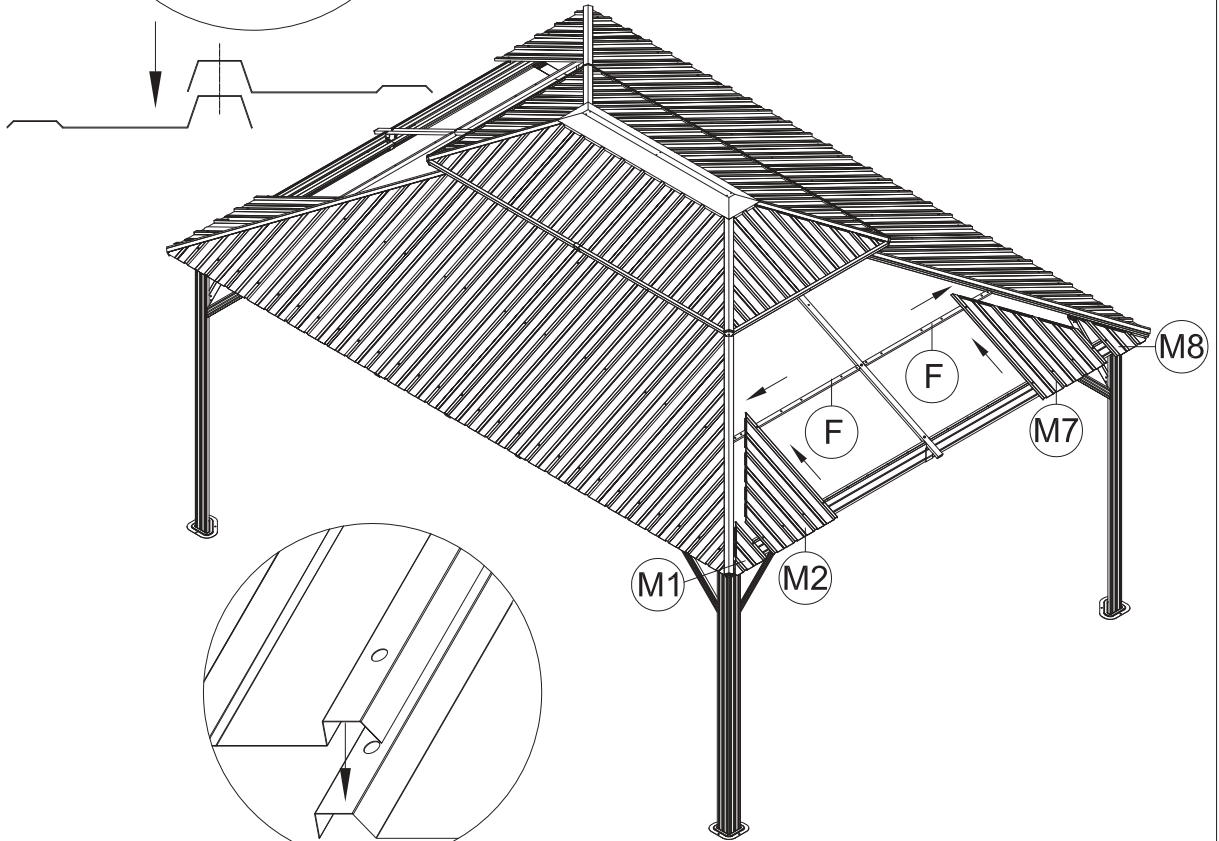


(2) Insert Part #M8 and Part #M7 into the frame in sequence.

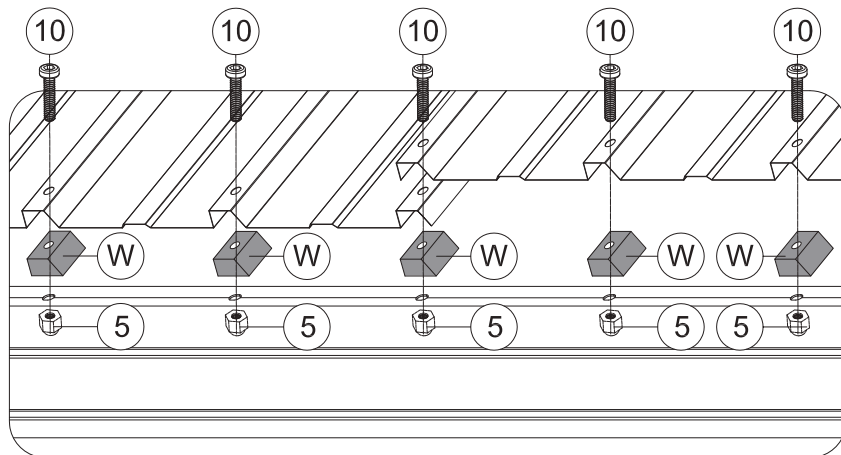


(3) Place 6 Part #W between roof panels and beams.  
Then secure with 6 Bolts #10 and 6 Nuts #5.

(4) Repeat the above procedures to assemble the opposite side.



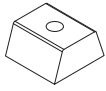

(W) 20x

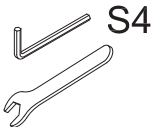

(1) 1x




M6

(5) 20x



M6x28

(10) 12x

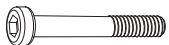


M6x50


(12) 8x

**ATTENTION:** The bigger roof panel need to cover the smaller one.


(1) Insert Part #M3 into the frame.

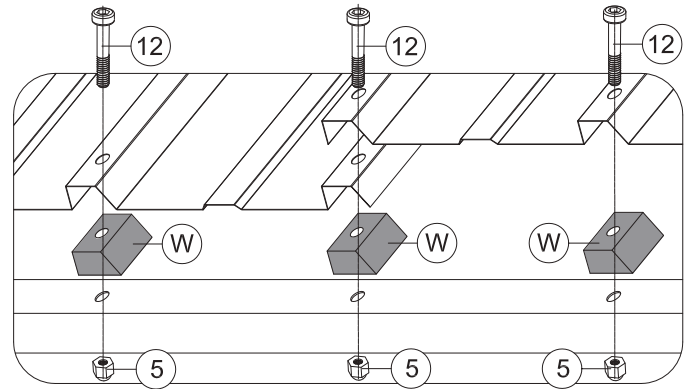


(3) Place 4 Part #W between roof panels and solidifying bars. Then secure with 4 Bolts #12 and 4 Nuts #5.

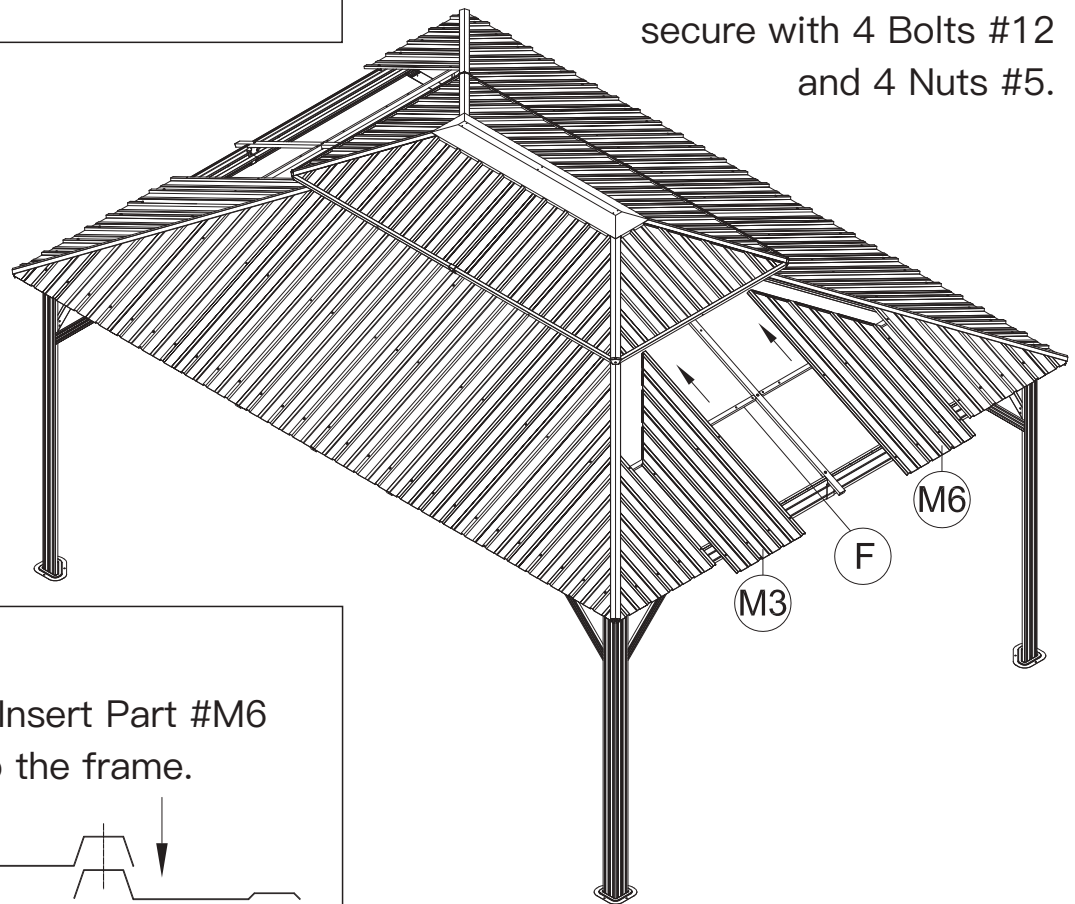

(2) Insert Part #M6 into the frame.

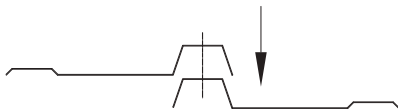

(4) Place 6 Part #W between roof panels and beams. Then secure with 6 Bolts #10 and 6 Nuts #5.

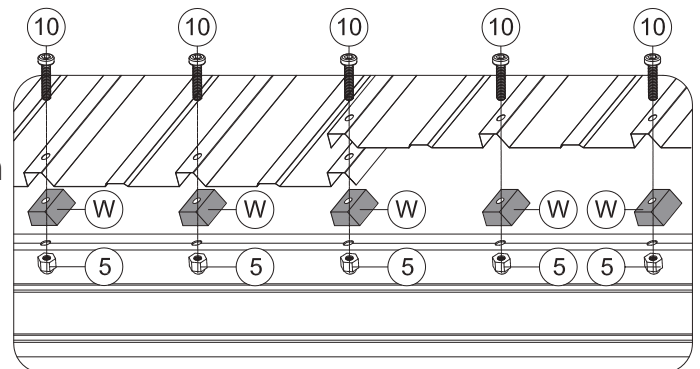


(5) Repeat the above procedures to assemble the opposite side.

**ATTENTION: The bigger roof panel need to cover the smaller one.**



(W) 24x

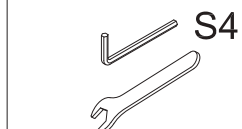

(1) 1x




(5) 20x



(9) 4x




(10) 12x

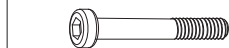


(12) 8x


(1) Insert Part #M4 into the frame.

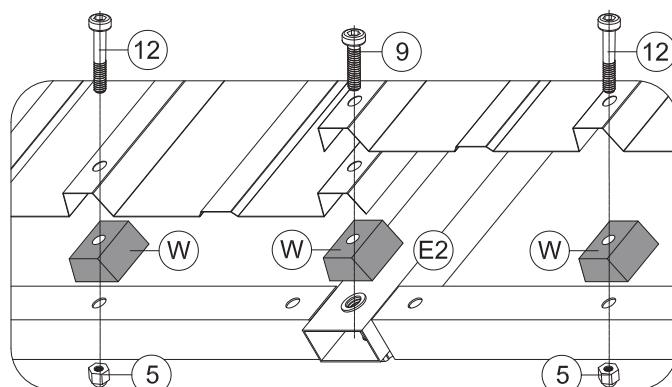

(3) Place 4 Part #W between roof panels and solidifying bars. Then secure with 4 Bolts #12 and 4 Nuts #5; Place 1 Part #W between roof panels and Part #E2. Then secure with 1 Bolt #9 and 1 Nut #5.

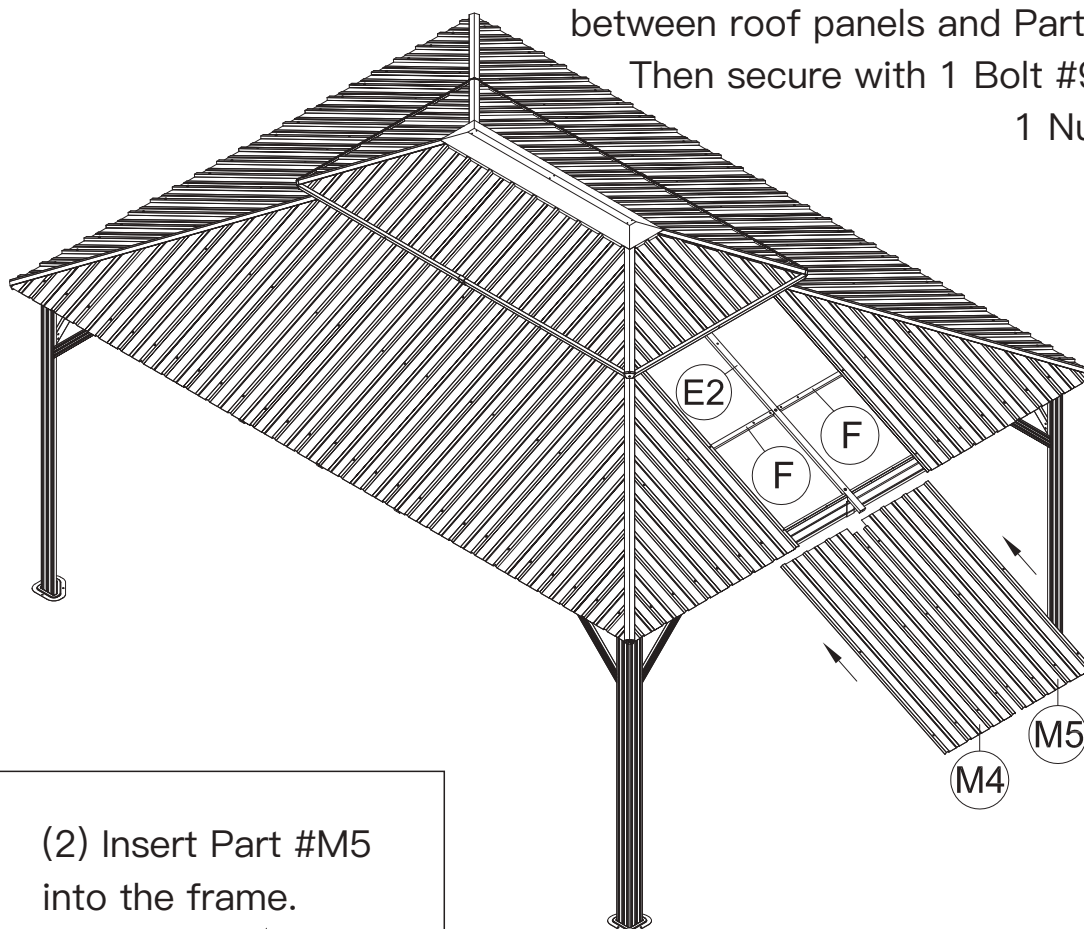


(2) Insert Part #M5 into the frame.

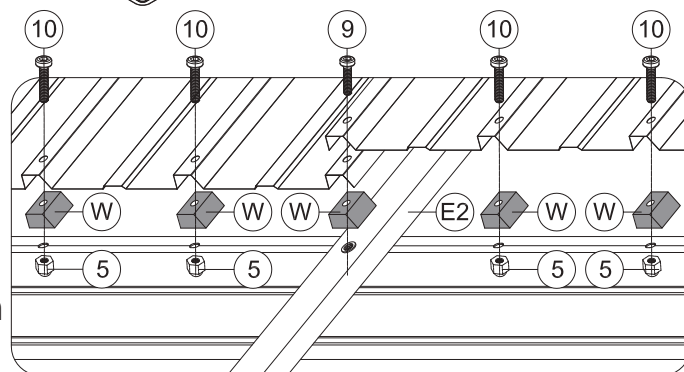


(4) Place 6 Part #W between roof panels and beams. Then secure with 6 Bolts #10 and 6 Nuts #5; Place 1 Part #W between roof panels and Part #E2. Then secure with 1 Bolt #9 and 1 Nut #5.

(5) Repeat the above procedures to assemble the opposite side.

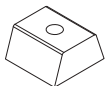

W 4x

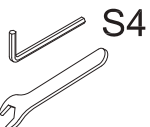

1 1x




M6

5 4x




M6x45

11 4x

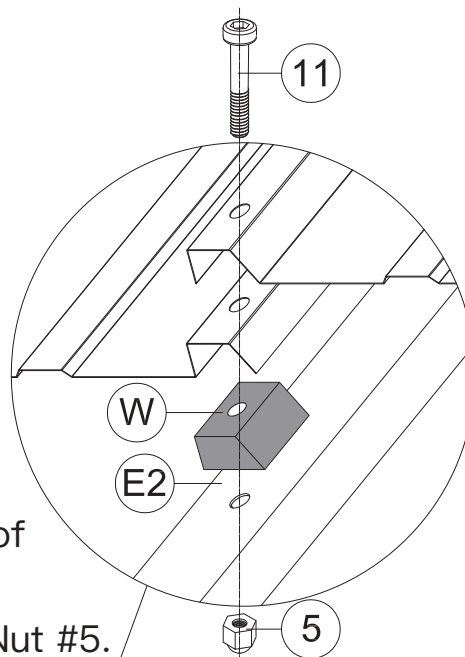


Place Part #W between roof panels and Part #E2. Then secure with Bolt #11 and Nut #5.

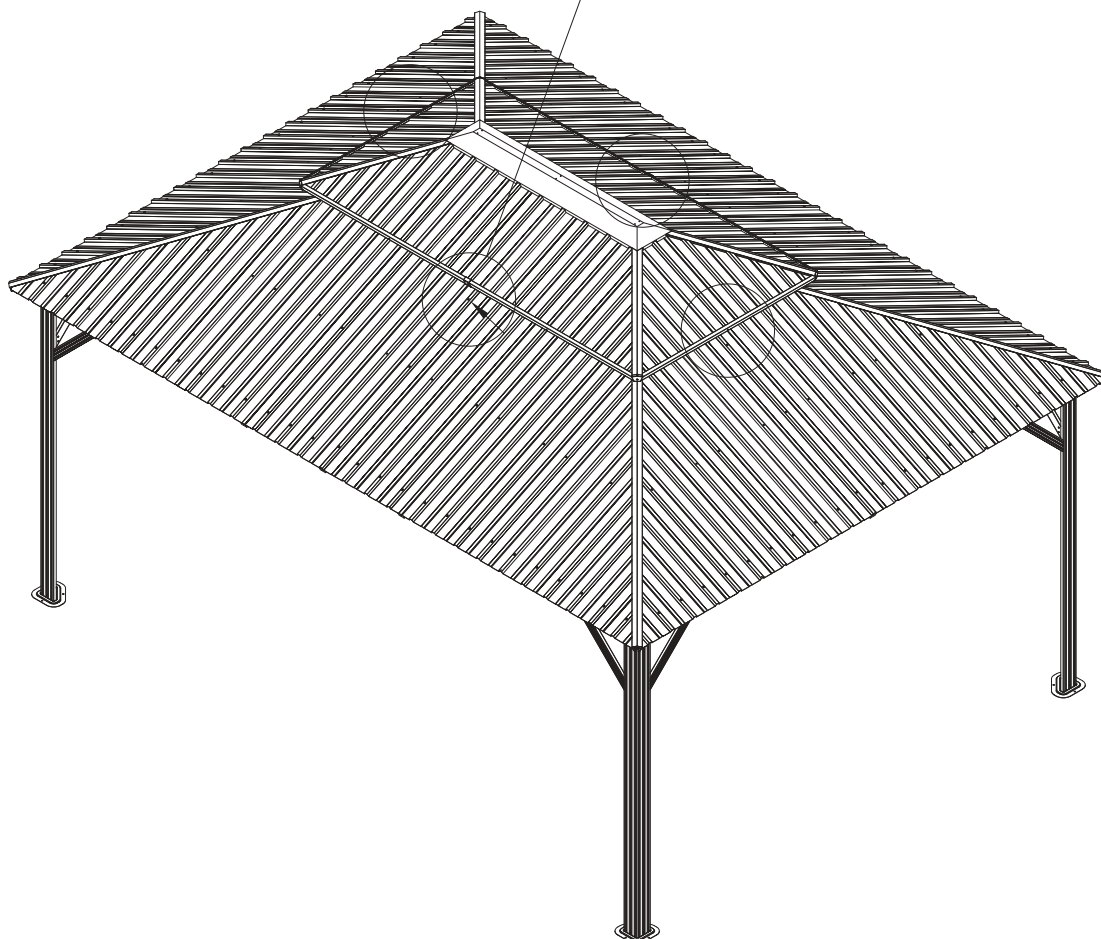


Repeat the above procedures to assemble the other 3 sides.




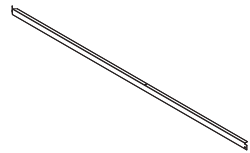


K2 2x

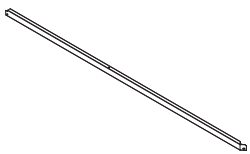


K3 2x

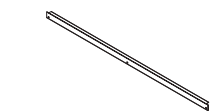

K4 2x

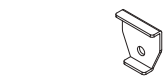

X2 4x

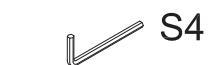


1 1x





M6x16


8 6x

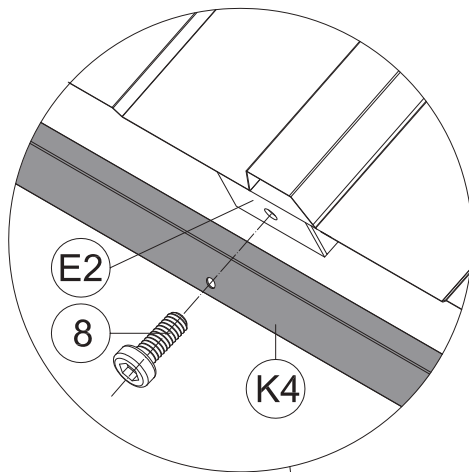

(1) Attach Part #K4 to Part #E2, securing with Bolt #8.

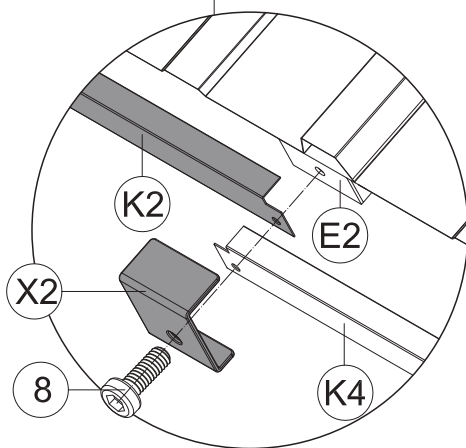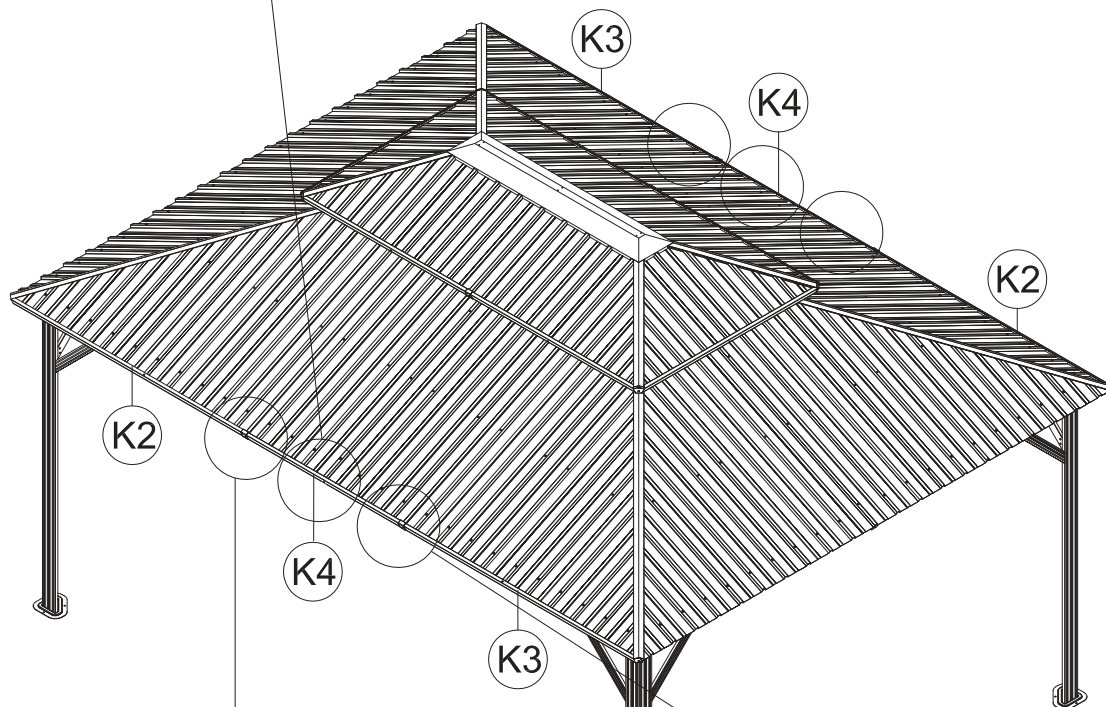


(2) Place Part #K3 on Part #K4 and Part #E2; Put on Part #X2 and secure with Bolt #8.

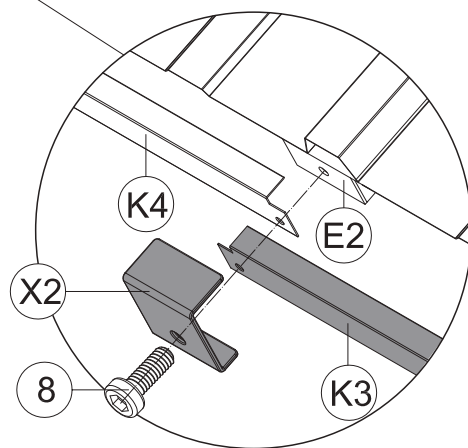


(3) Place Part #K2 on Part #K4 and Part #E2; Put on Part #X2 and secure with Bolt #8.

(4) Repeat the above procedures to assemble the opposite side.

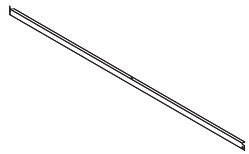

(K) 2x

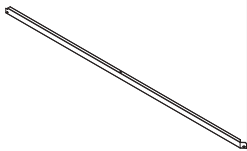

(K1) 2x



(X2) 2x





(1) 1x



M6x16

(8) 2x

Attach Part #K and Part #K1 to the frame; Put on Part #X2 and secure with Bolt #8.

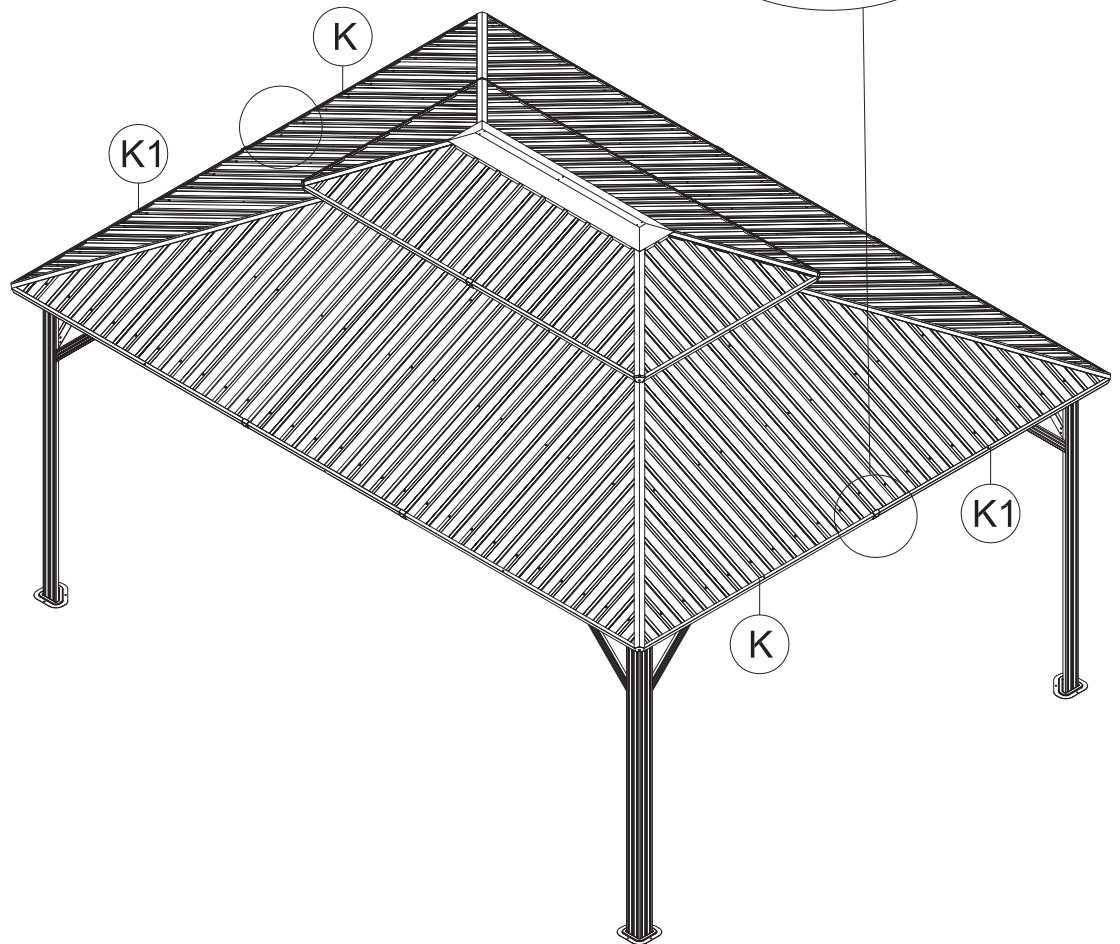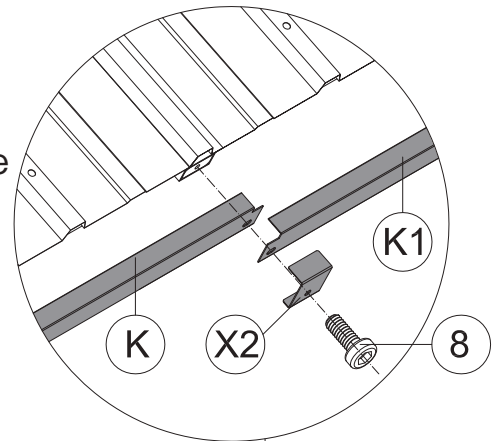

Repeat the above procedures to assemble the opposite side.



X3 4x




1 1x



ST6.3x15

2 4x

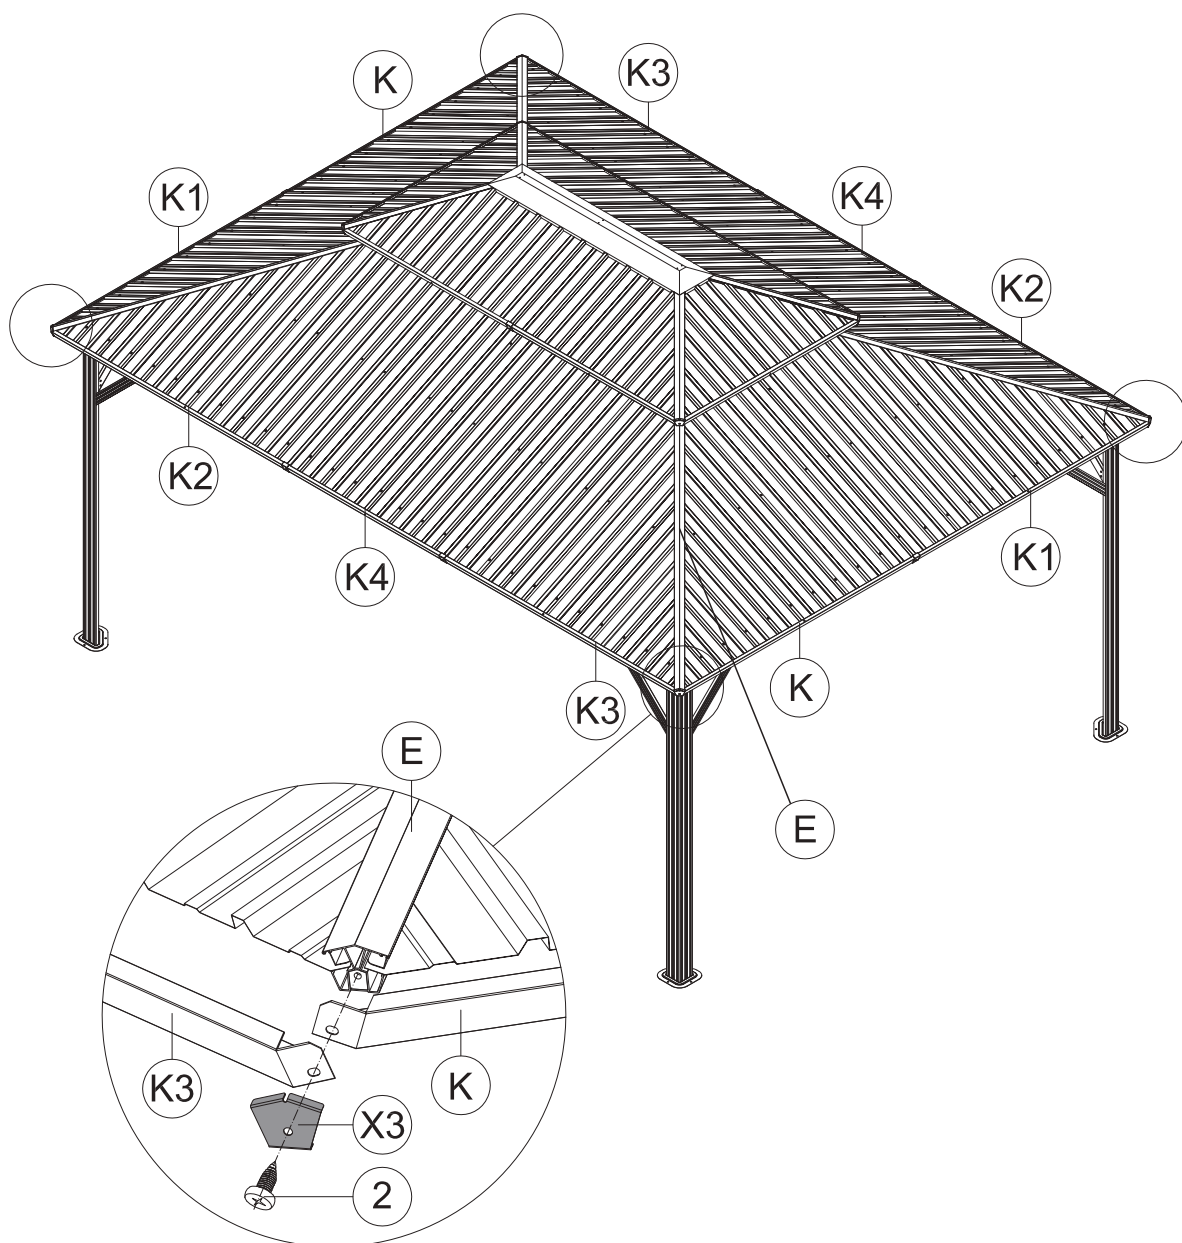


Place Part #K and Part #K3 on Part #E;  
Put on Part #X3 and secure with Self-tapping Screw #2.

Repeat the above procedures to assemble the other 3 corners.



ST5x16

3 8x

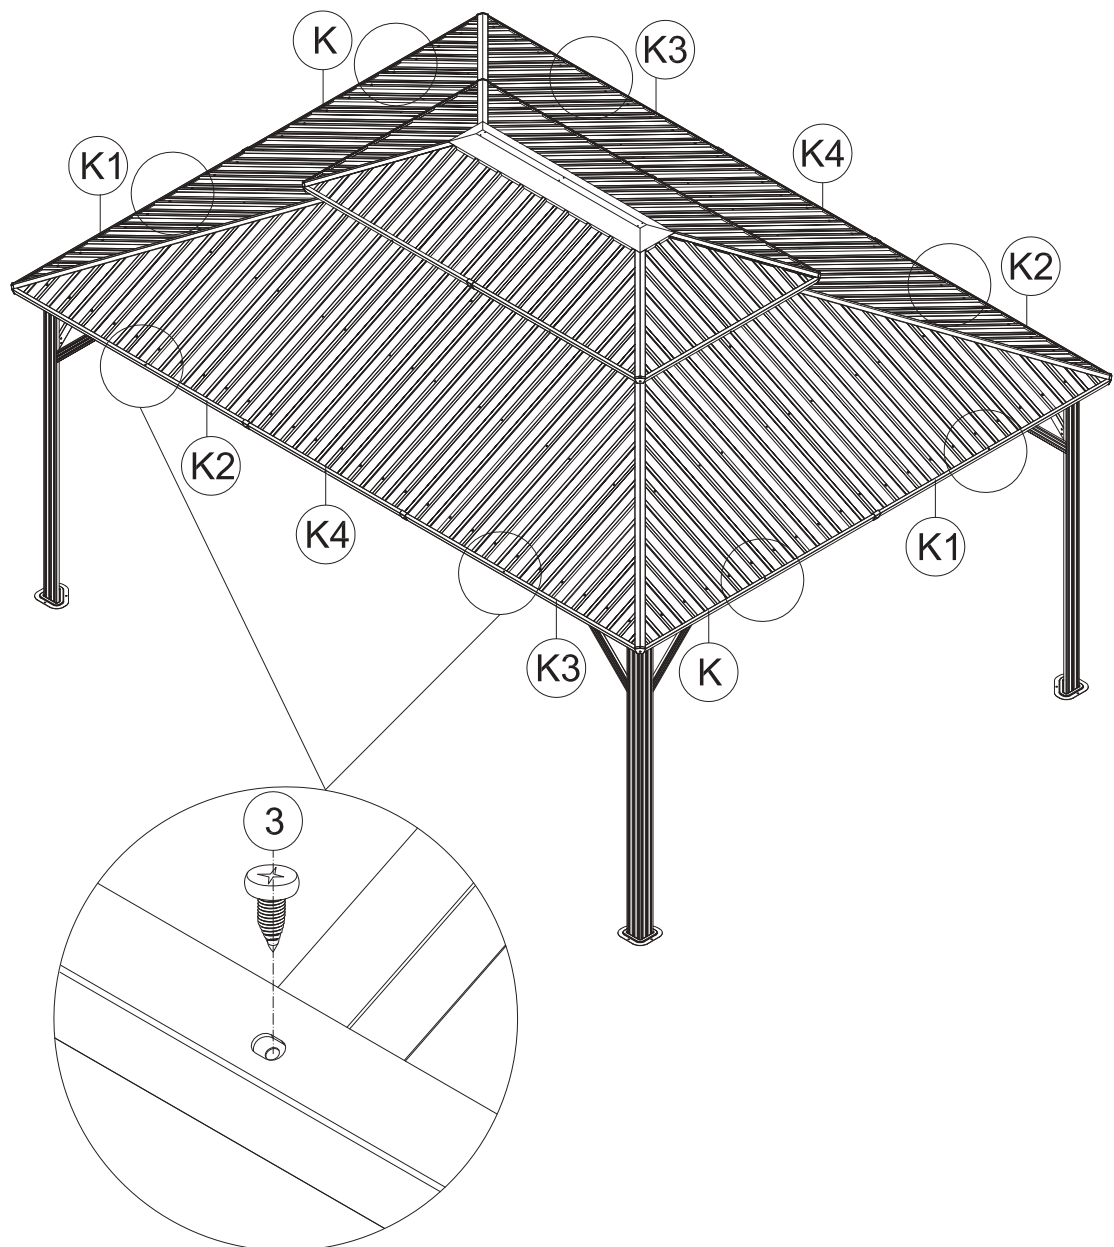

Attach roof panels to finishing bars with 2 Self-tapping Screws #3.



Repeat the above procedures to assemble the other 3 sides.








V 128X


## How to Put the 128 Hooks into the Double-track
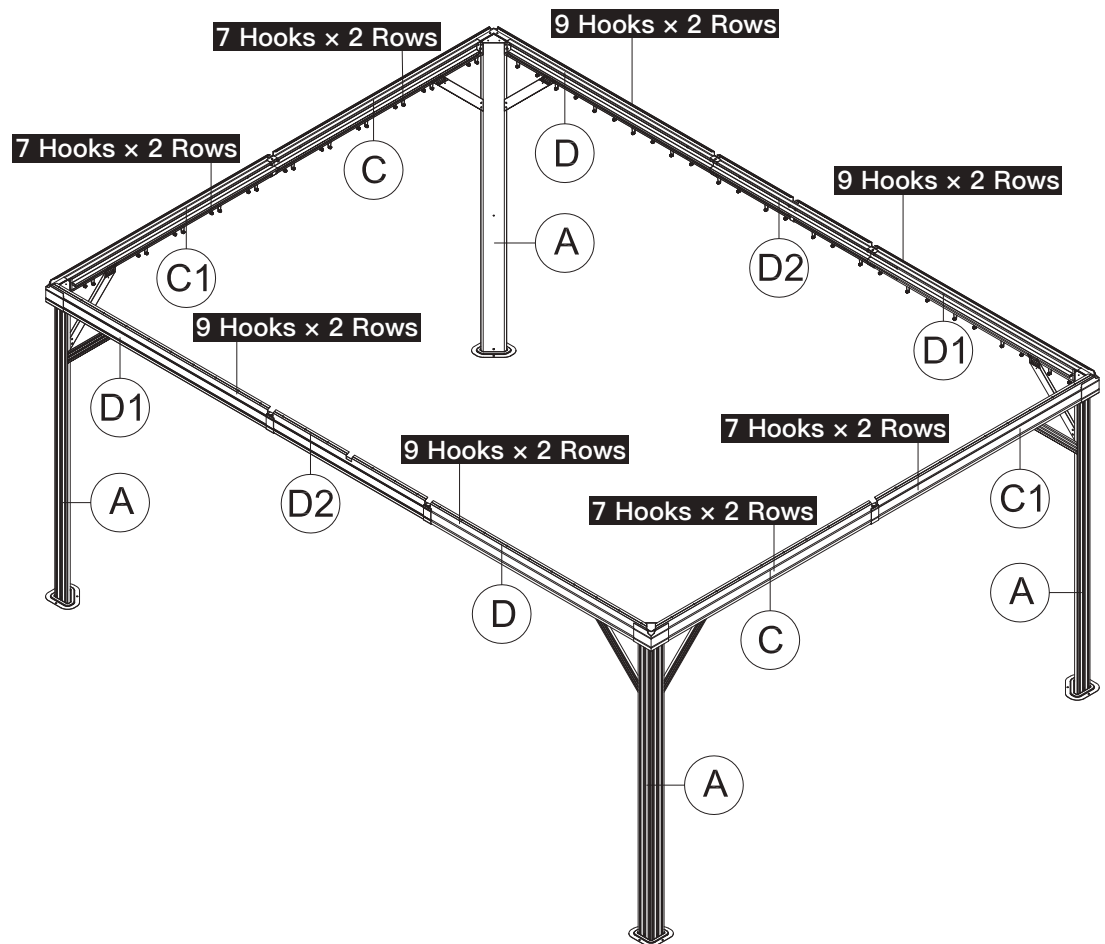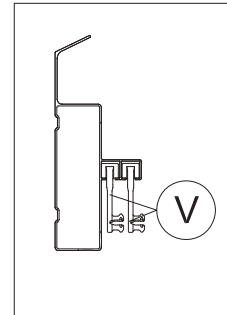
### Double-track


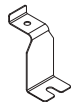


	
T1 2x	
	
V 56x	
	
S4	
	
1 1x	
	
M6x16	
8 2x	
<div data-bbox="312 1767 312 2080"></div>	
51	

(1) Place 7 hooks on each slot of the Sidewall Track(C1&C).

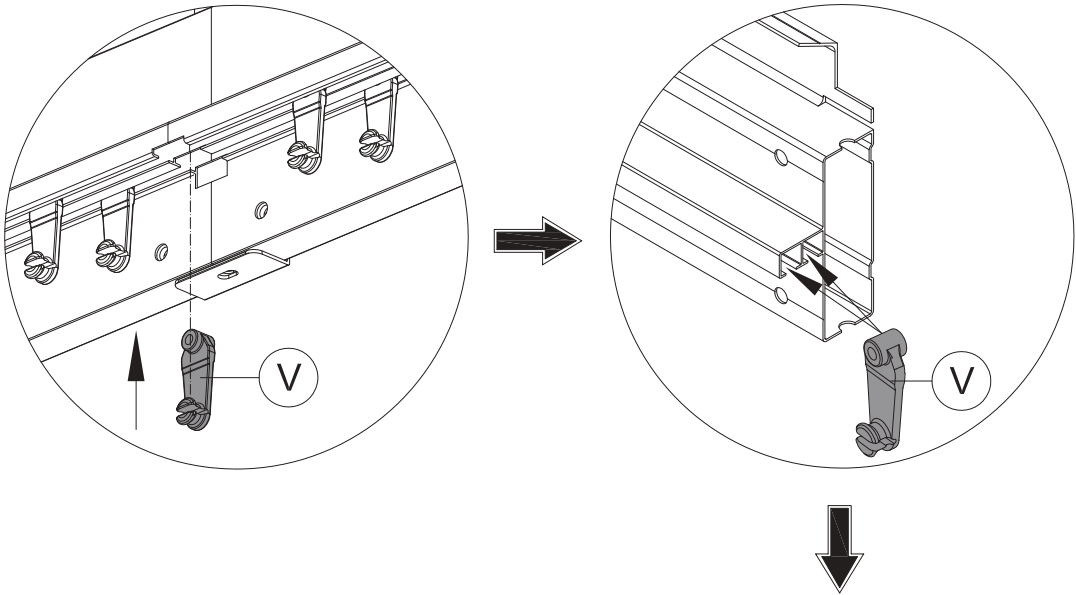


(2) Install Part #T1 at the joint of Part C&C1 with Bolt #8.

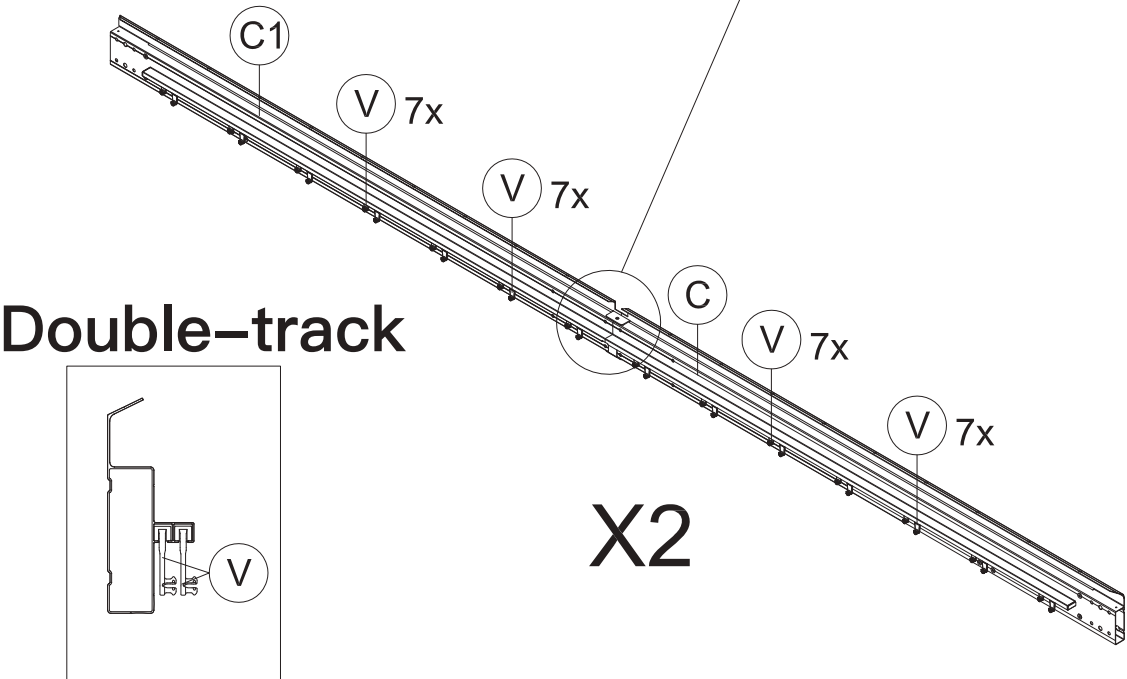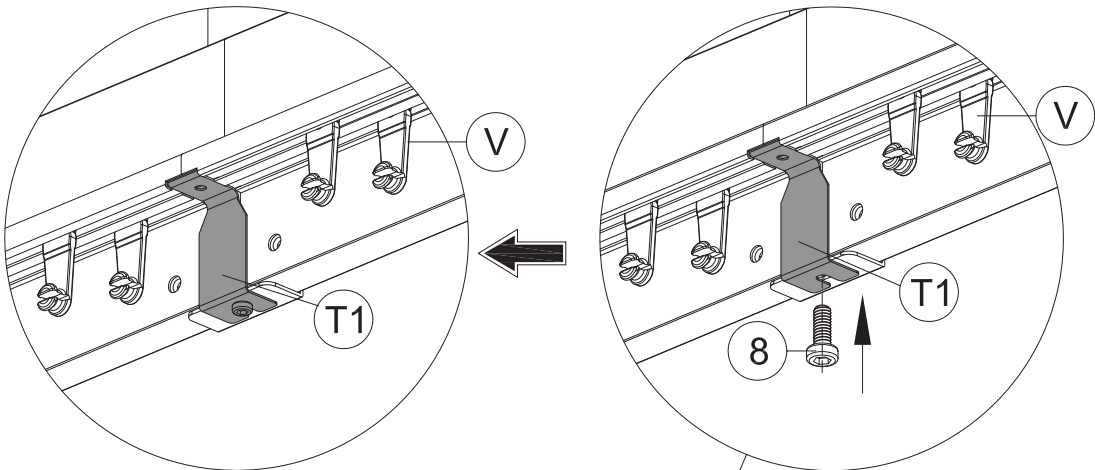

(3) Repeat the above procedures to assemble the opposite side.



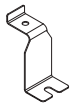

T1 2x



V 72x



S4



1 1x






M6x16

8 2x

(1) Place 9 hooks on each slot of the Sidewall Track(D&D1&D2).

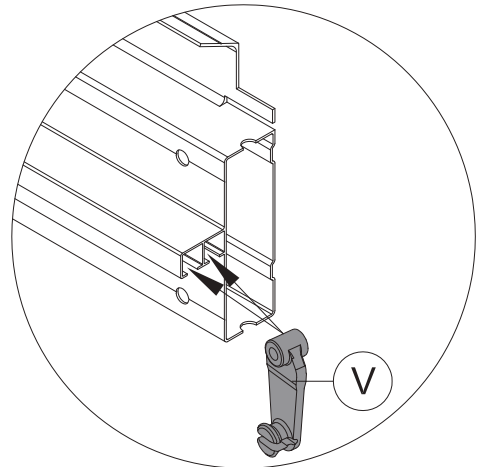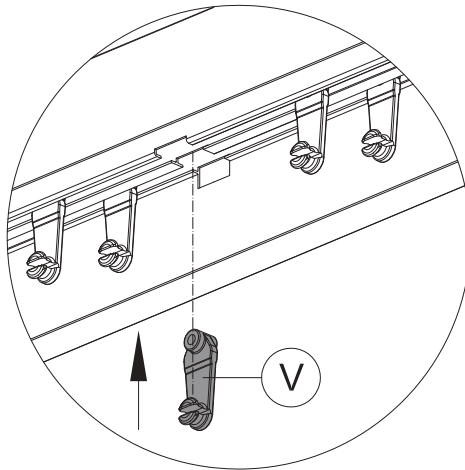

(2) Install Part #T1 at the middle of Part #D2 with Bolt #8 .

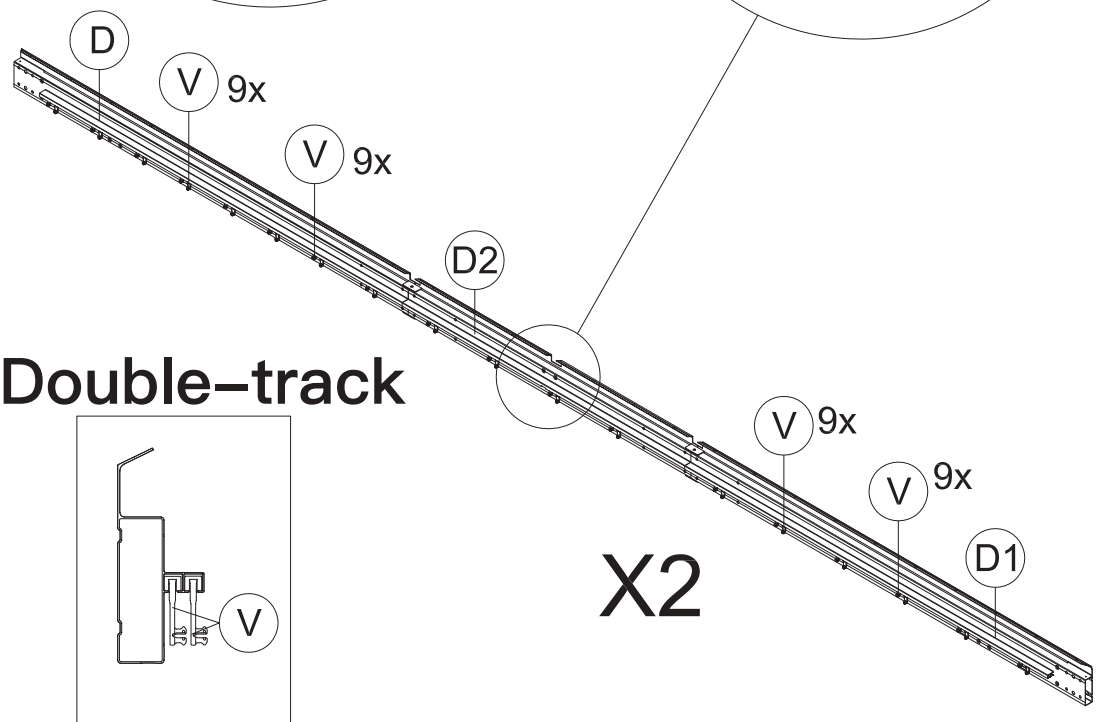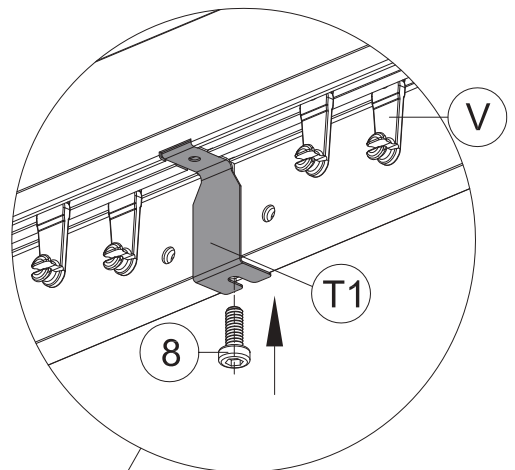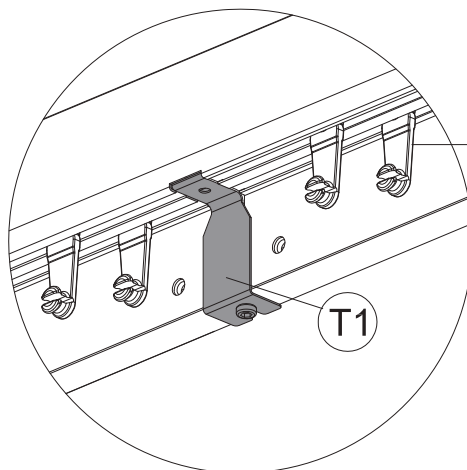


**Double-track**

**X2**


(3) Repeat the above procedures to assemble the opposite side.



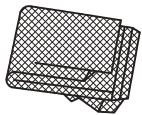


Y1 4x


## Hang up Mosquito Sidewalls to **Inside Track**

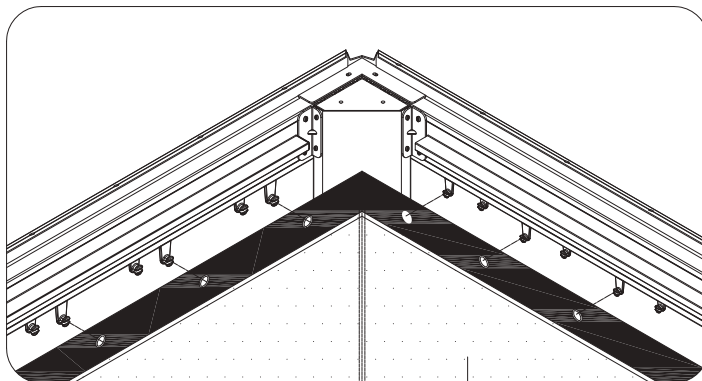


Y1

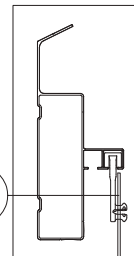

Y1

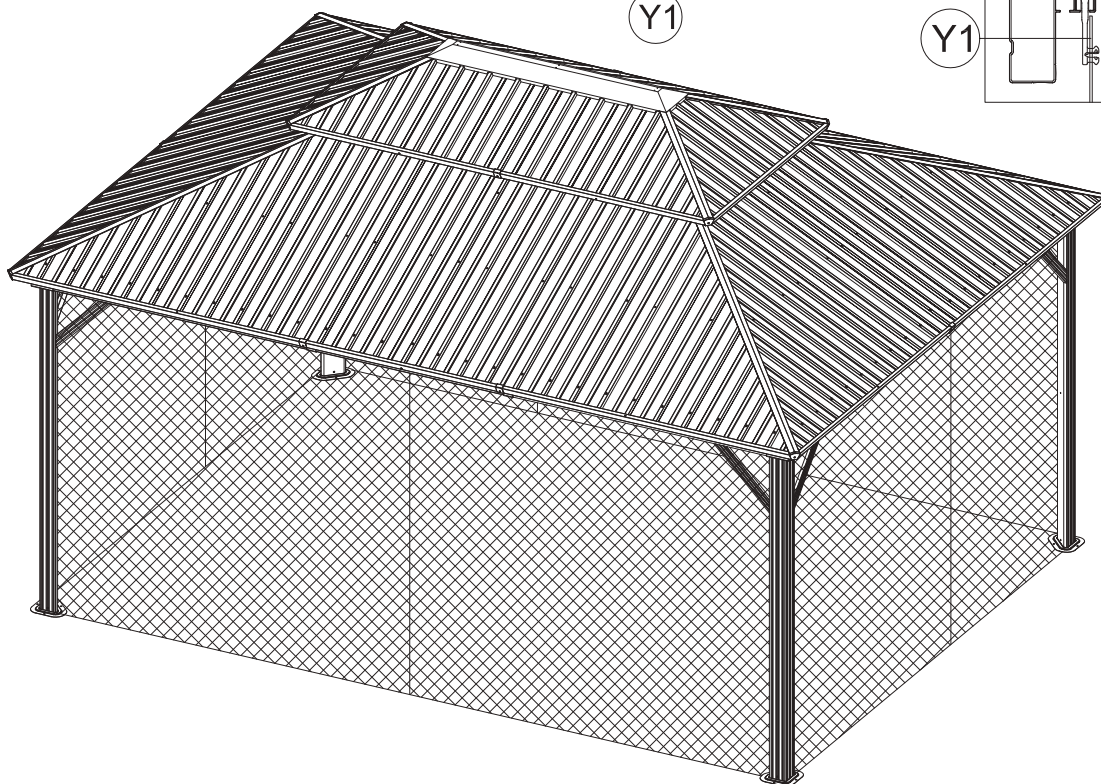


Y1

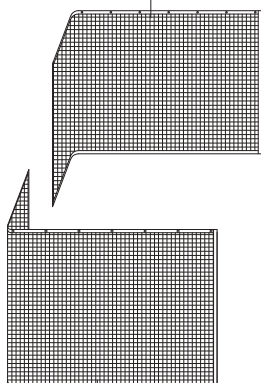


Y1


Y1

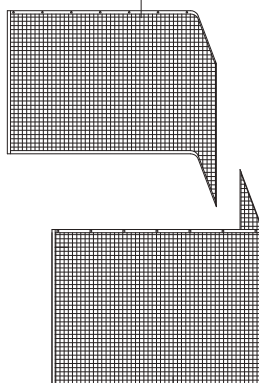

Y1




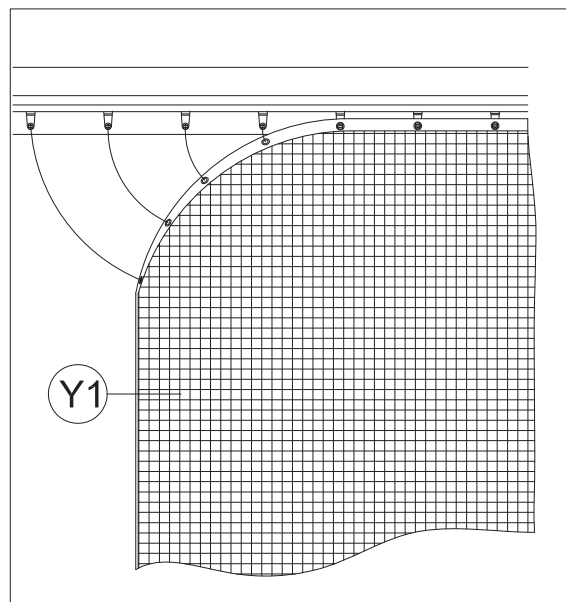


Y1


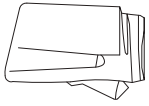


Y 4x

## Hang up Solid Sidewalls to Outside Track

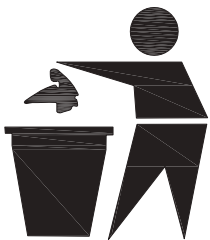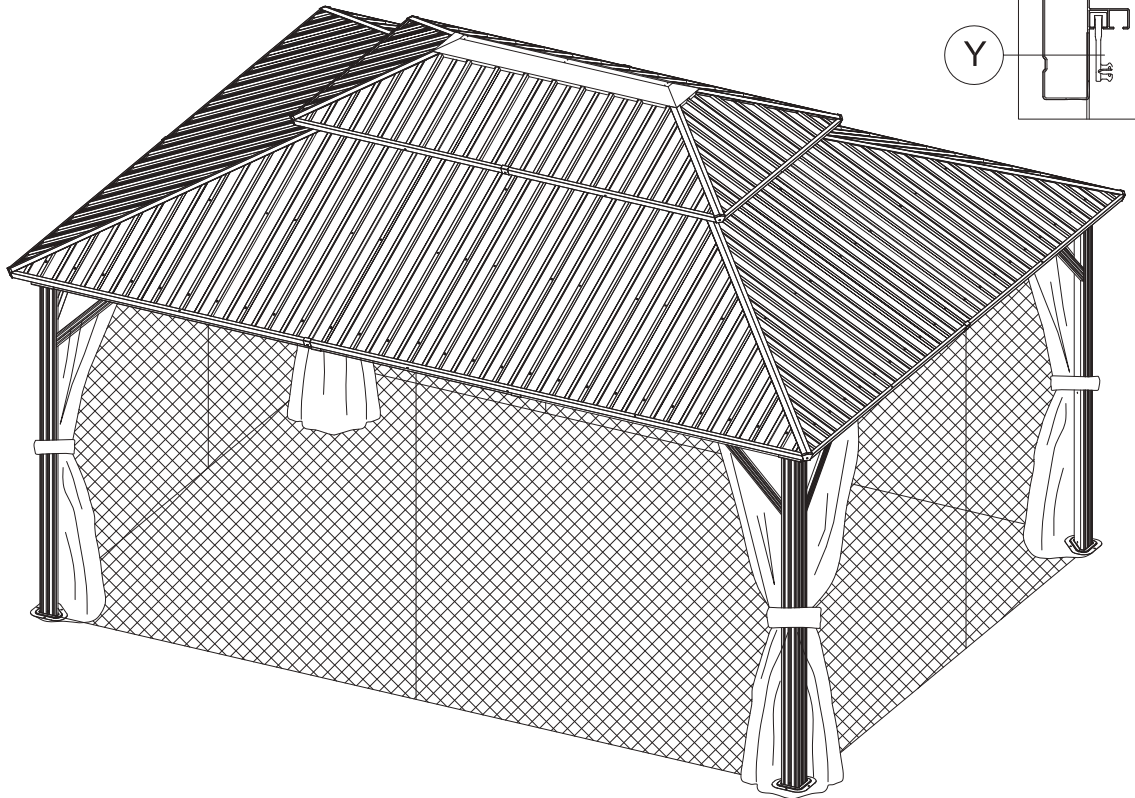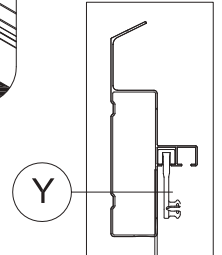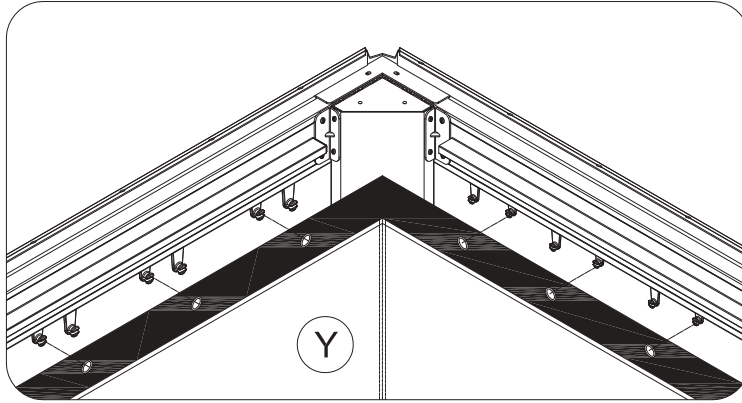

54

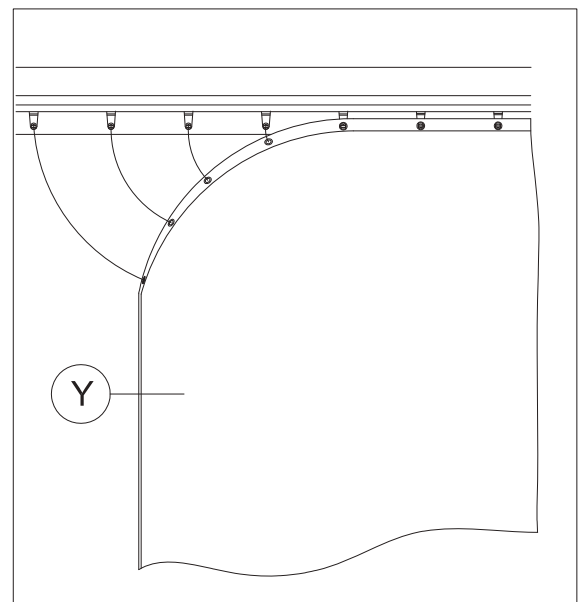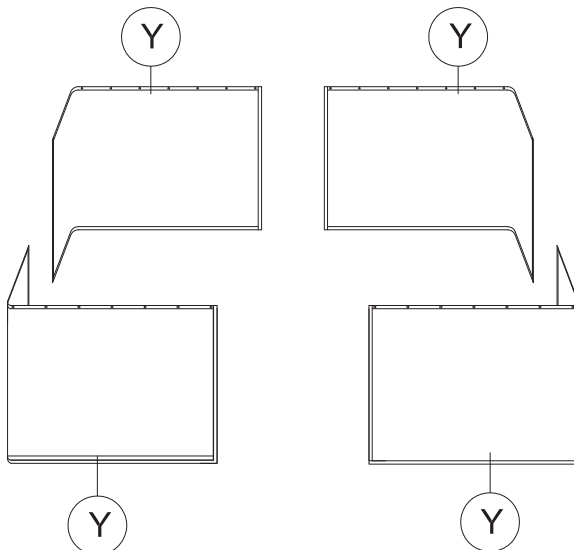

# Thanks for your purchase.

At domi outdoor living, we believe in our products.

That's why we provide a 12-month warranty and

friendly, easy-to-reach after-sales service. So if you

have any questions about our product and assembly-

,please feel free to contact us. We will be here for you.

**Support:**



**After-sales contact email:**

[service@domioutdoorliving.com](mailto:service@domioutdoorliving.com)

Please tell us your order ID when contact.

Attach photos of damaged part for instant reply.