

ASSEMBLY INSTRUCTION

SRN-DB5012T

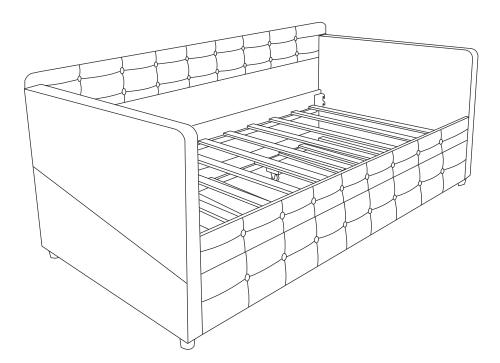

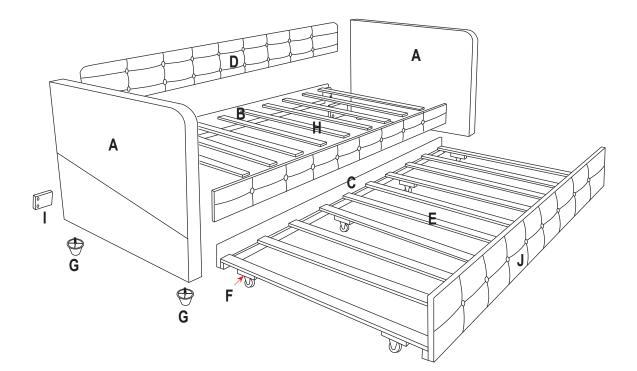

NO	PARTLIST (IN CARTON 1 OF 2)	
A	Headboard	2 pcs

NO	PARTLIST (IN CARTON 2 OF 2)	QTY
В	Side Rail	2 pcs
С	Trundle Long Panel (i)	l pcs
D	Back Support	1 pc
Е	Trundle Bed Slat	10 pcs
G	Bed Leg	4 pcs
Η	Bed Slat	10 pcs
F	Trundle Slat Cube	8 pcs
Ι	Stopper	2 pcs
J	Trundle Long Panel (ii)	1 pc

NO	HARDWARE LIST (IN CARTON 2 O	F2) QTY
1	JCBB M8 x 20 mm	8 pcs
2	JCBC M6 x 35 mm	4 pcs
3	JCBC M6 x 45 mm	4 pcs
4	CSK M4 x 16mm	32 pcs
5	CSK M4 x 30mm	40 pcs
6	CSK M4 x 35mm	16 pcs
7	Wheel	8 pcs
8	Allen Key M4	1 pc
9	Allen Key M5	l pc
10	Flat Washer M6	8 pcs

Remarks: Extra hardware provided

Read this instruction carefully. Remove all wrapping material, staples and straps from the carton. See hardware and furniture part list for guidance. Be sure you have all wooden furniture parts on a clean and flat surface, such as carpet or rug, to prevent from being scratched.

CAUTION :

- 1. Do not Full Tighten the nut or screw until all ready to assemble.
- 2. Do not Over Tighten the nut or screw to avoid causing damages to the thread.
- 3. Keep all hardware part out reach of children.



