

Installation & Assembly

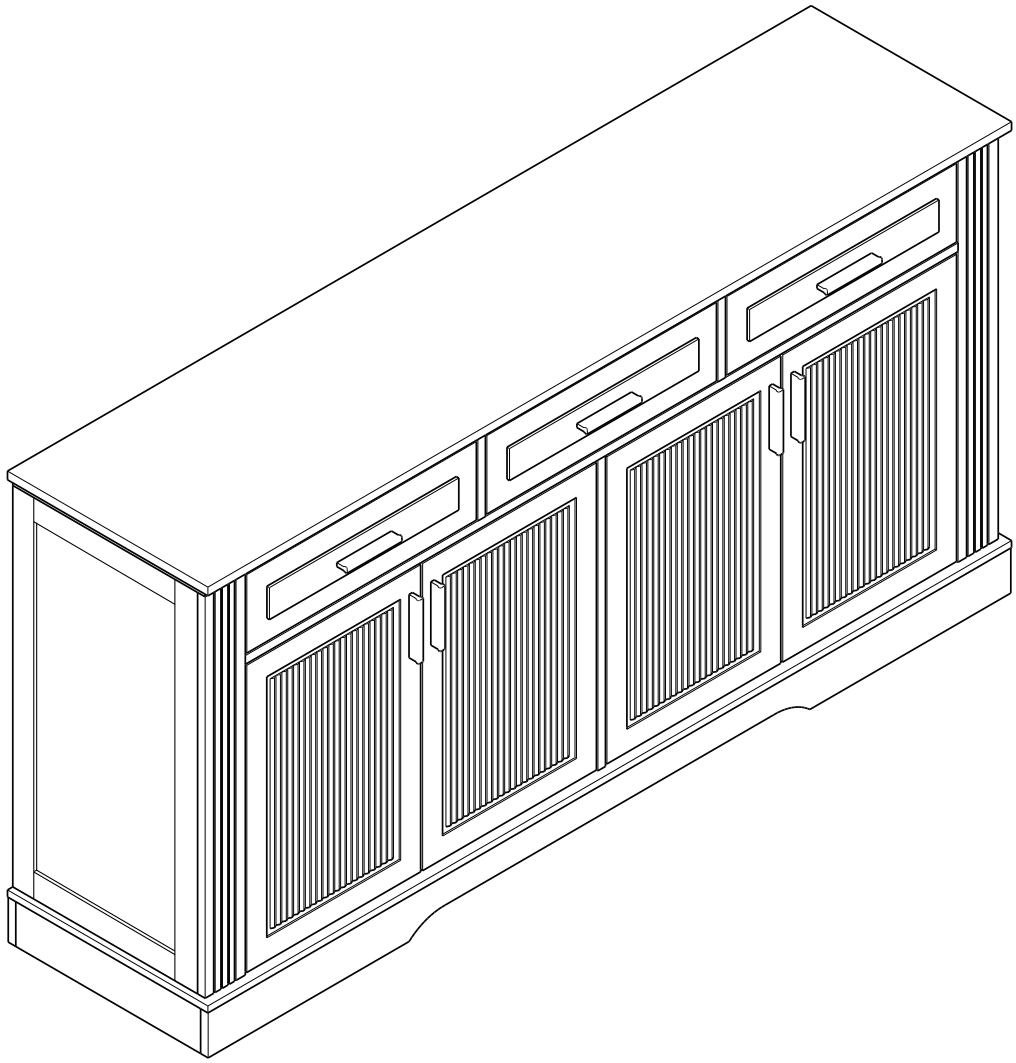

As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully.

Before You Start

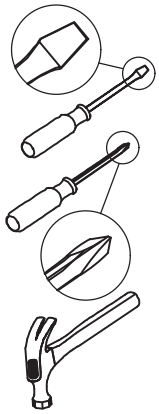

- Read through each step carefully and follow the proper order
- Separate and count all your parts and hardware
- Give yourself enough room for the assembly process
- Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. （Assembly speed can be increased by using electric screwdriver）

Helpful Hints

PEOPLE NEEDED FOR ASSEMBLY: **1-2**

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.

- Identify, sort and count the parts before attempting assembly.

- Make sure to always face the point on the top of the Cam Lock towards the outer edge.


- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.

-Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.

- Never push, pull, or drag your furniture.


Board Identification

Not actual size

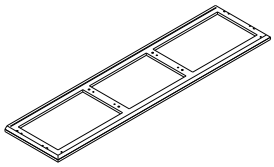


①

Qty:1

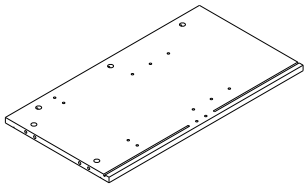


②

Qty:1

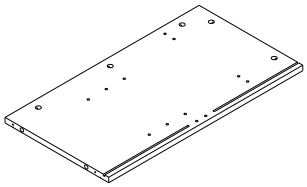


③

Qty:1

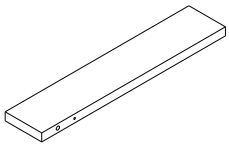


④

Qty:1

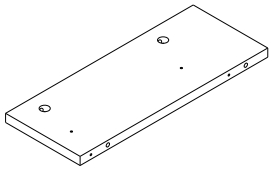


⑤

Qty:2

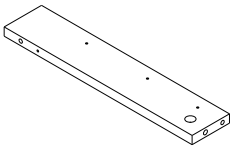


⑥

Qty:1

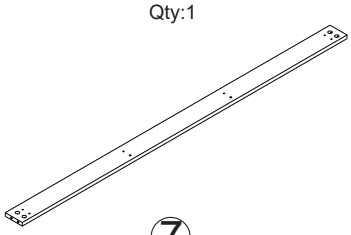


⑦

Qty:1

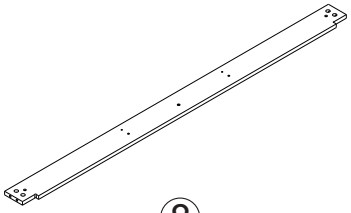


⑧

Qty:1

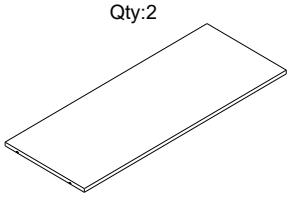


⑨

Qty:2

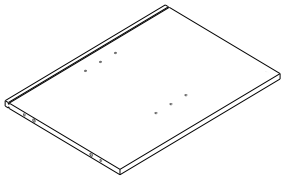


⑩

Qty:1

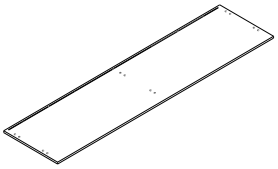


⑪

Qty:1

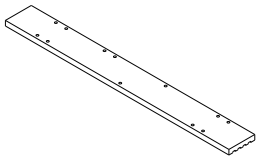


⑫

Qty:1

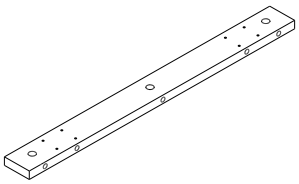


⑬

Qty:2

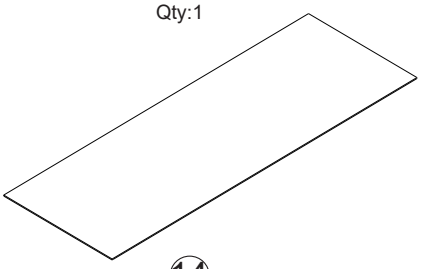


⑭

Qty:1

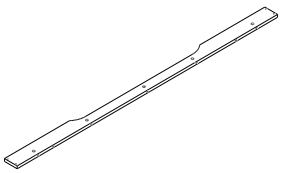


⑮

Qty:1

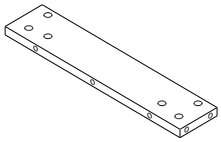


⑯

Qty:2




⑰

Qty:2




⑱

Qty:2

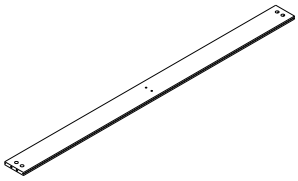

⑲

Qty:1

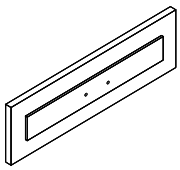


⑳

Qty:3


Board Identification

Not actual size

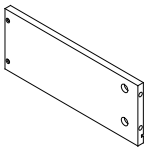


21

Qty:3

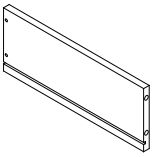


22

Qty:3

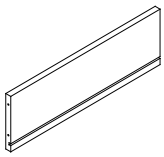


23

Qty:3




24

Qty:3

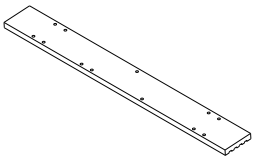


25

Qty:1

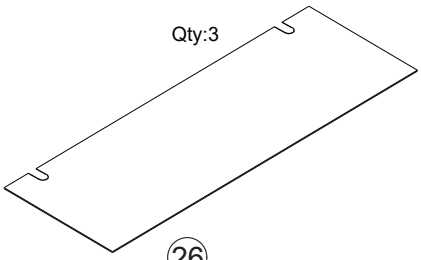

26


Qty:1

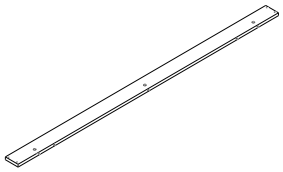


27

Qty:1

Board Identification

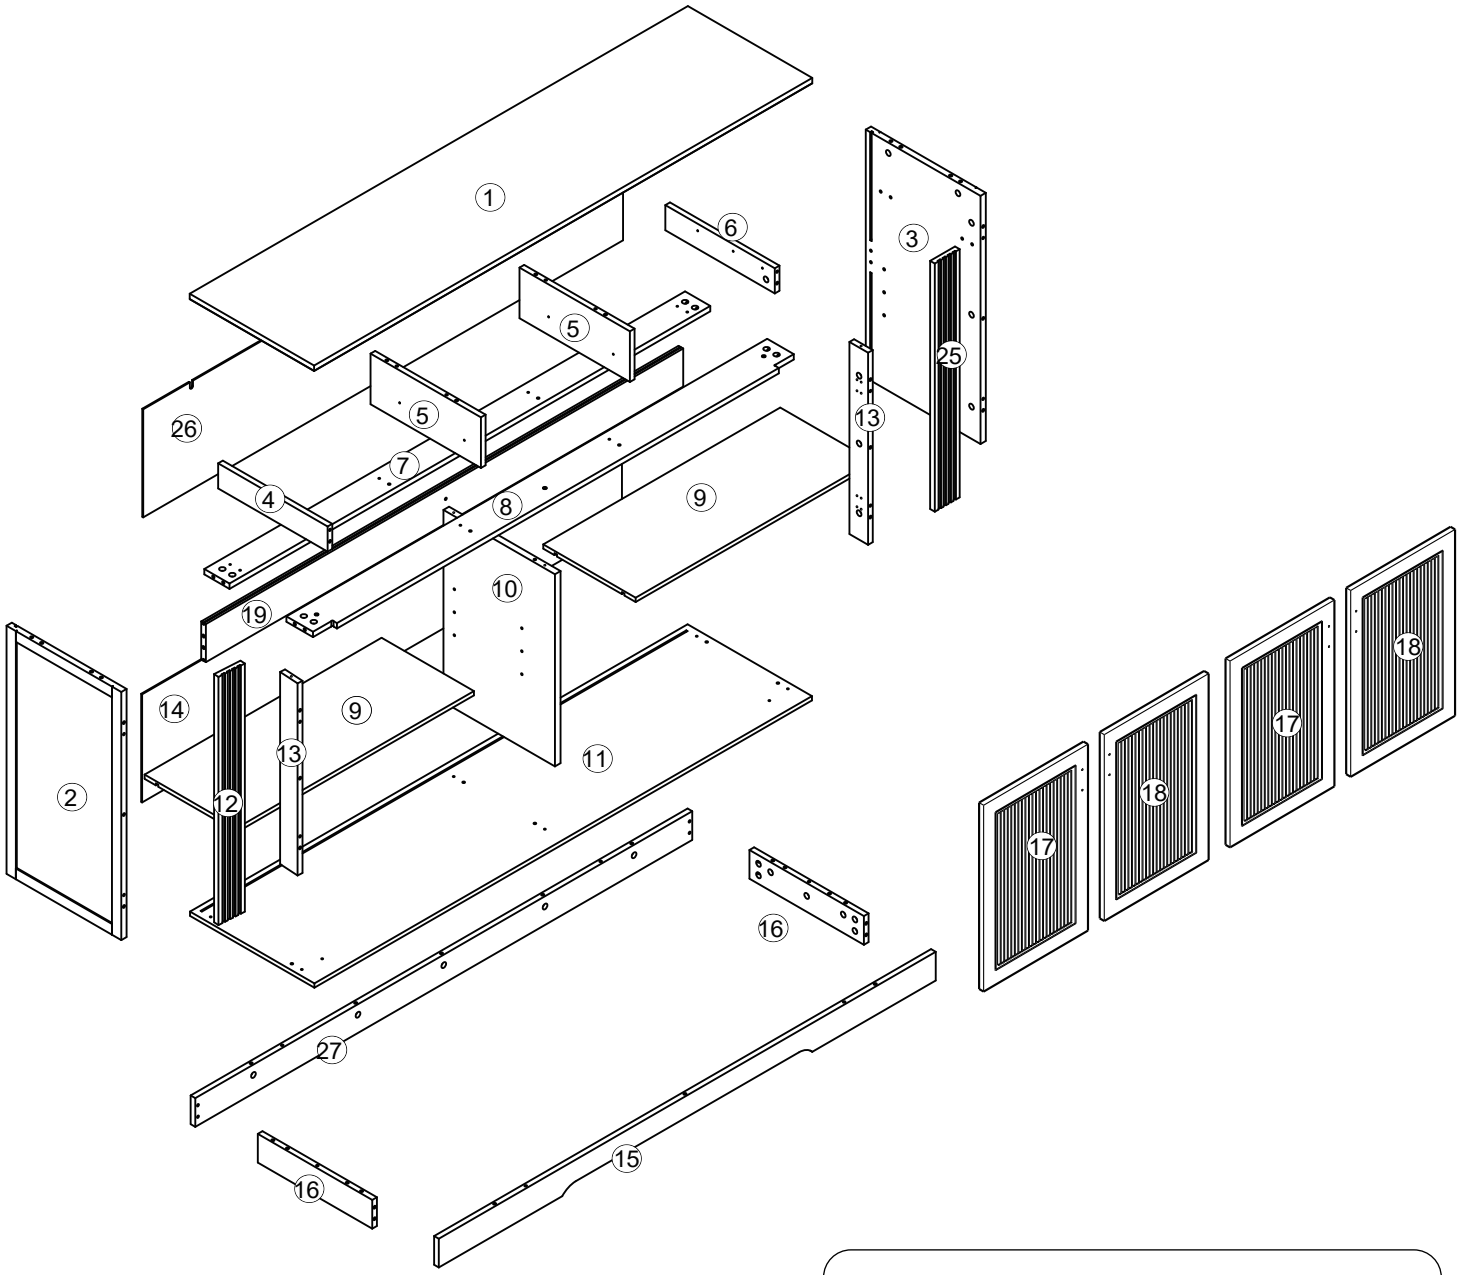

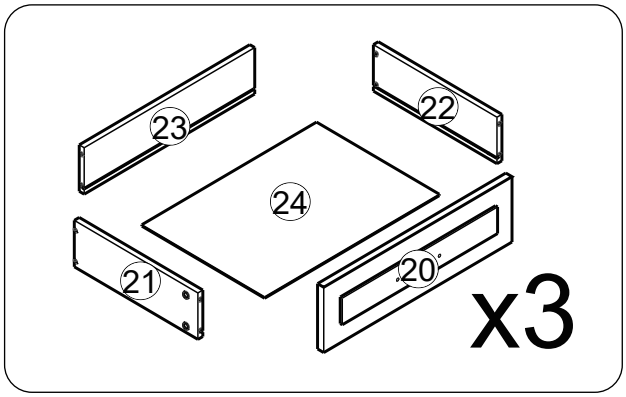


Part List



A	x68



B	x68




Ø6x30mm

C	x38



Ø3.5x10mm

D	x36




Ø4x35mm

E	x34



Ø3.5x12mm

F	x48




G	x8



Ø4x18mm

H	x8



I	x7



J	x2



Ø3x16mm


K	x8



L	x2



M	x8



O	x4



Ø4x22mm

Q	x6




CL	x6


DL	x6

Cam Lock Fastening System


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

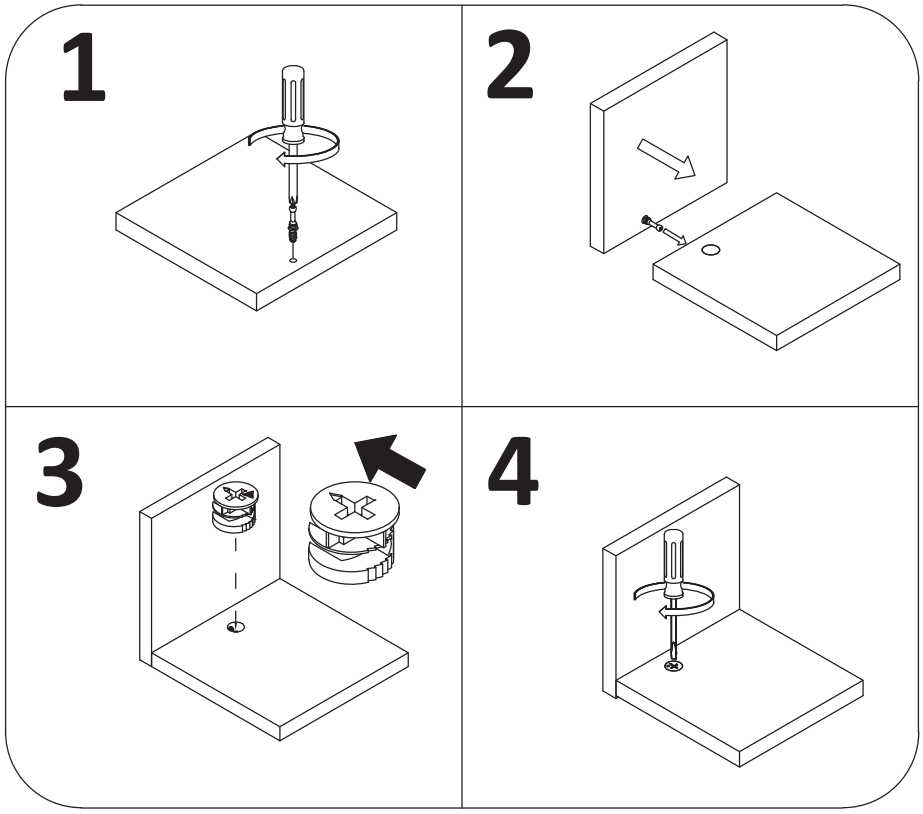



STEP 1

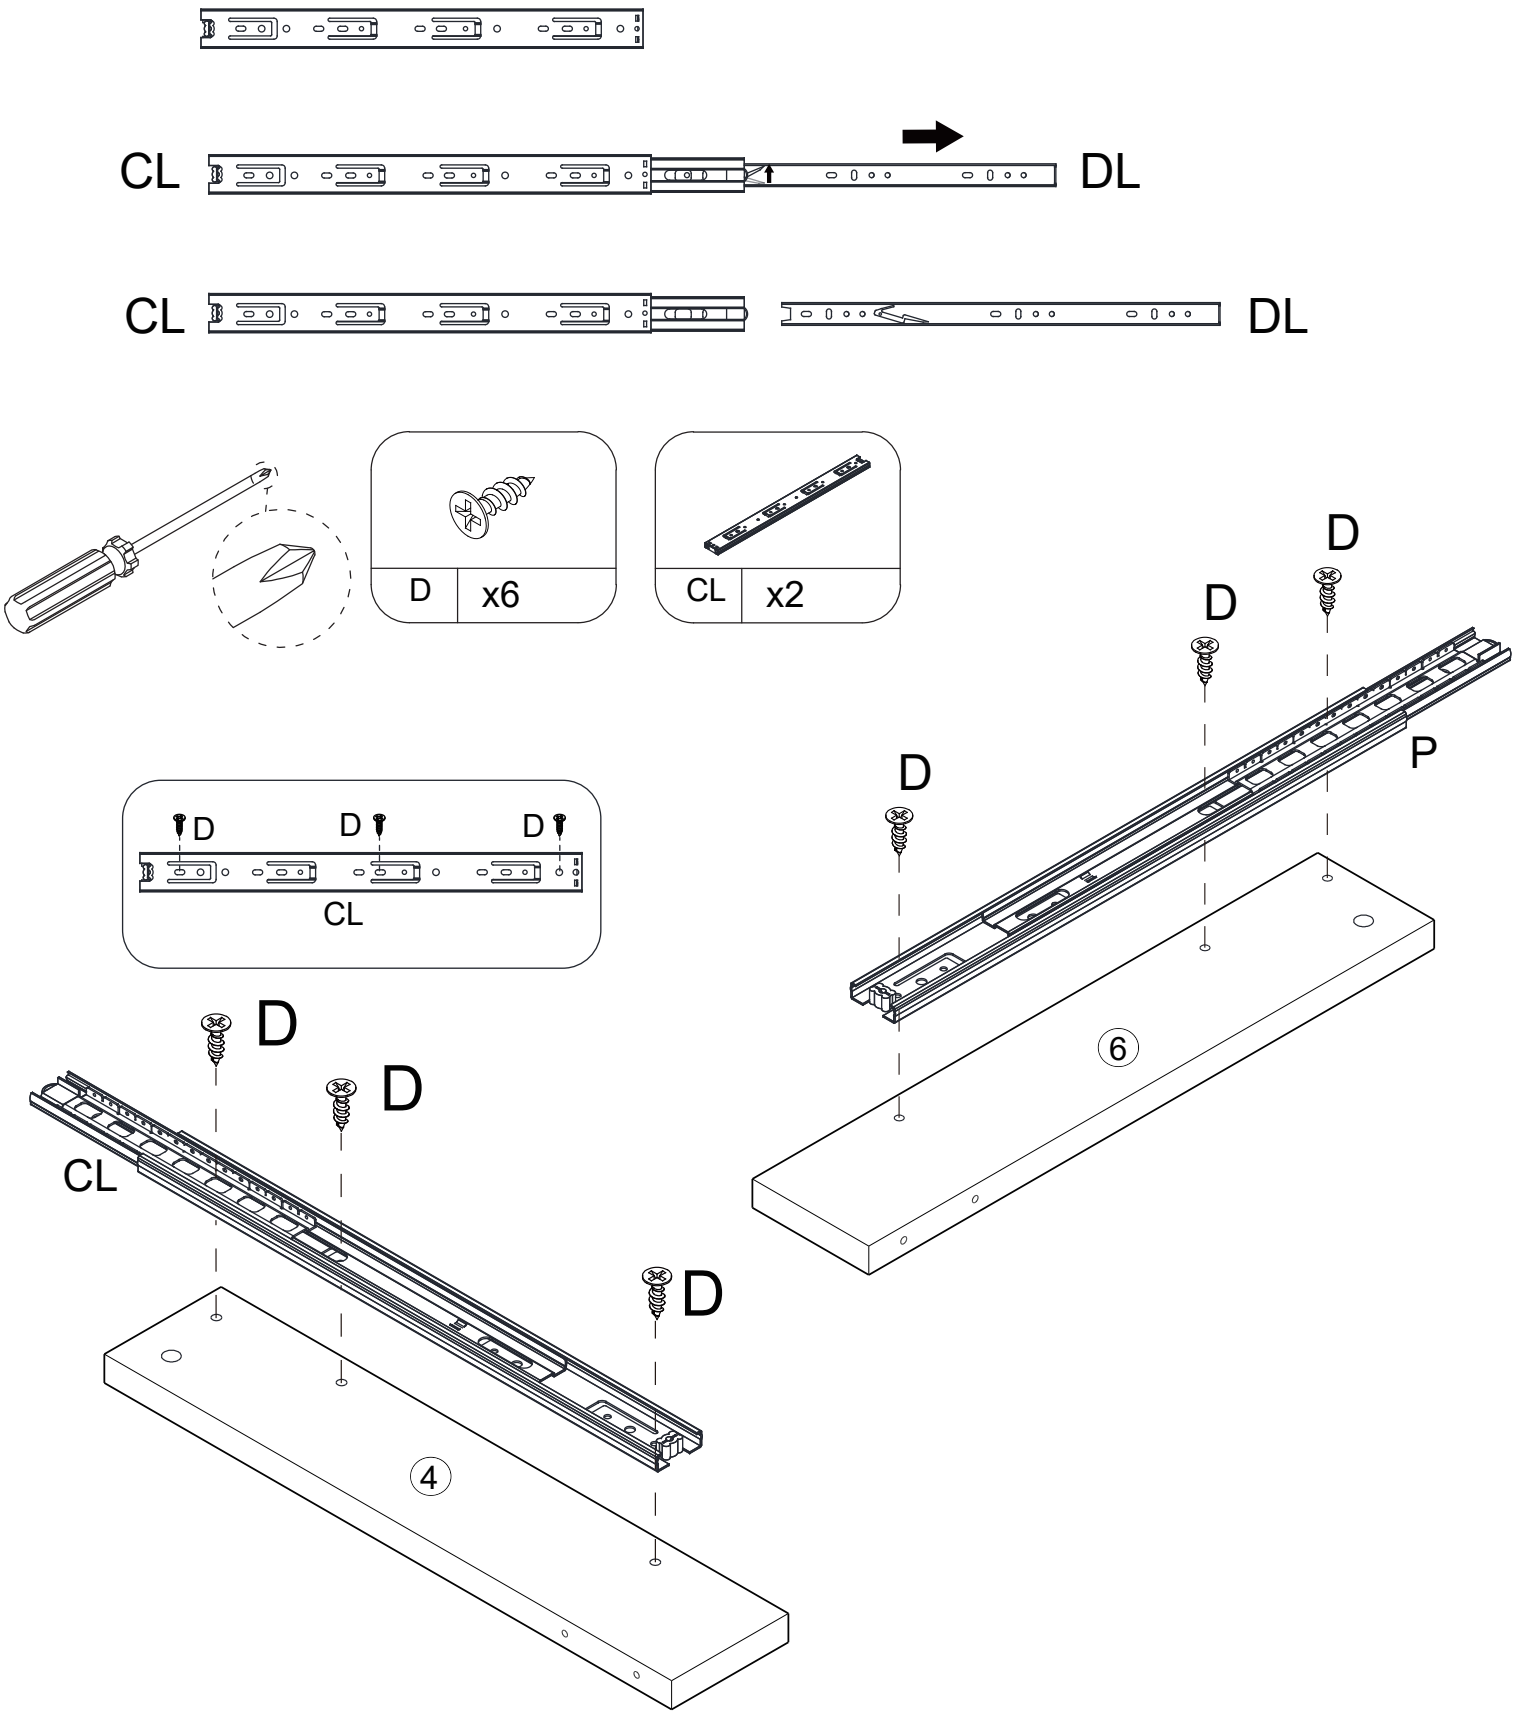


STEP 2

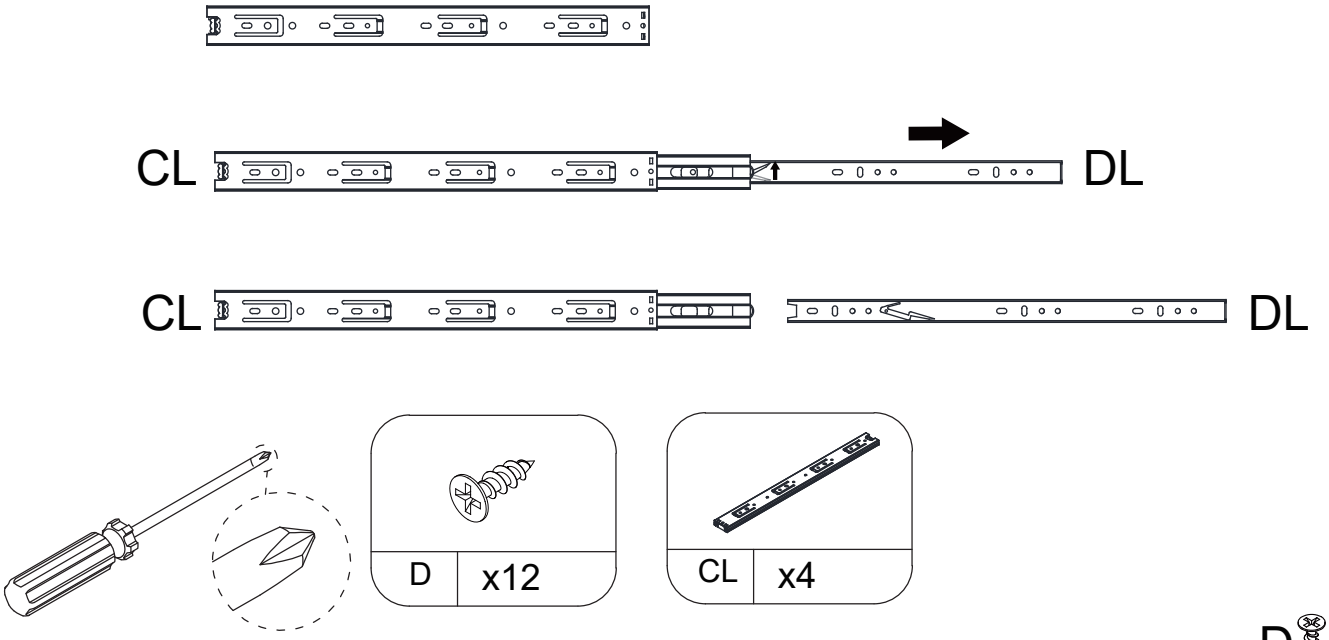


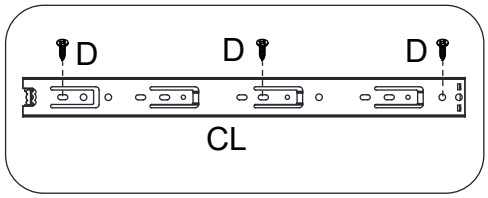


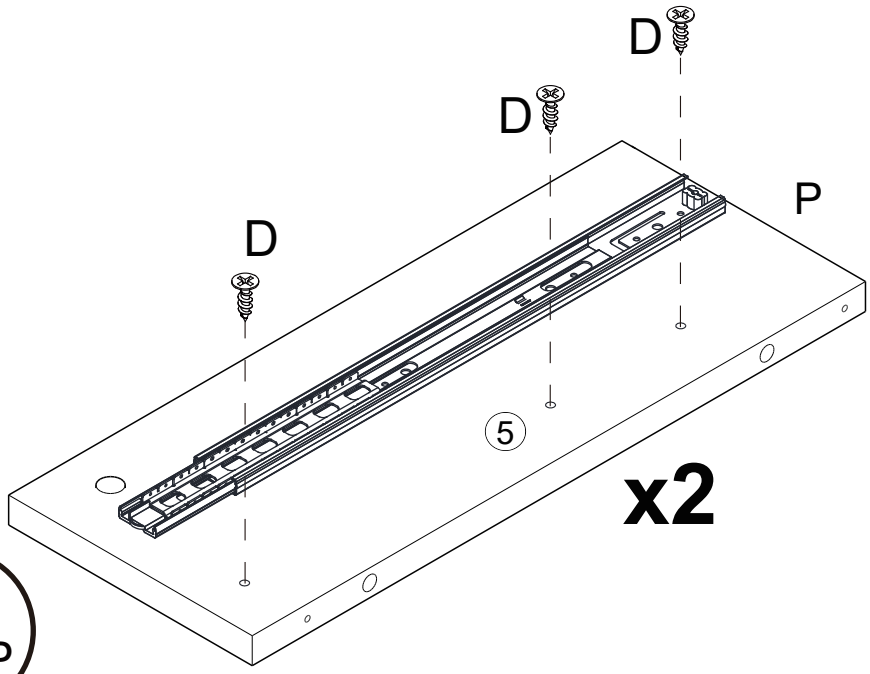


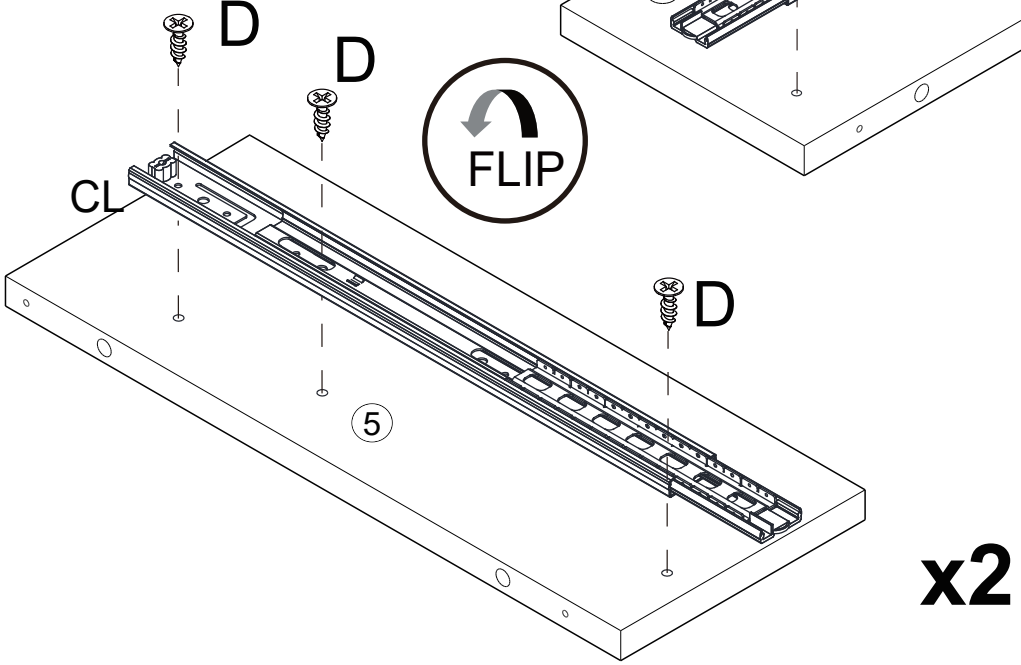


STEP 3

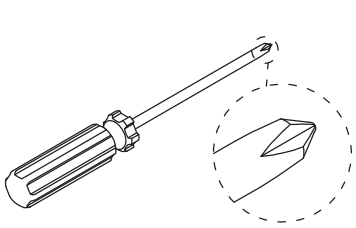


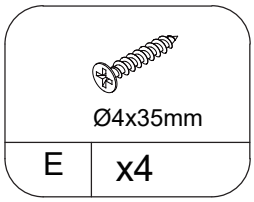

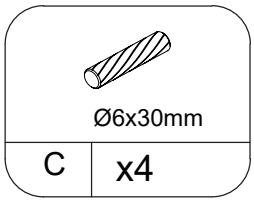

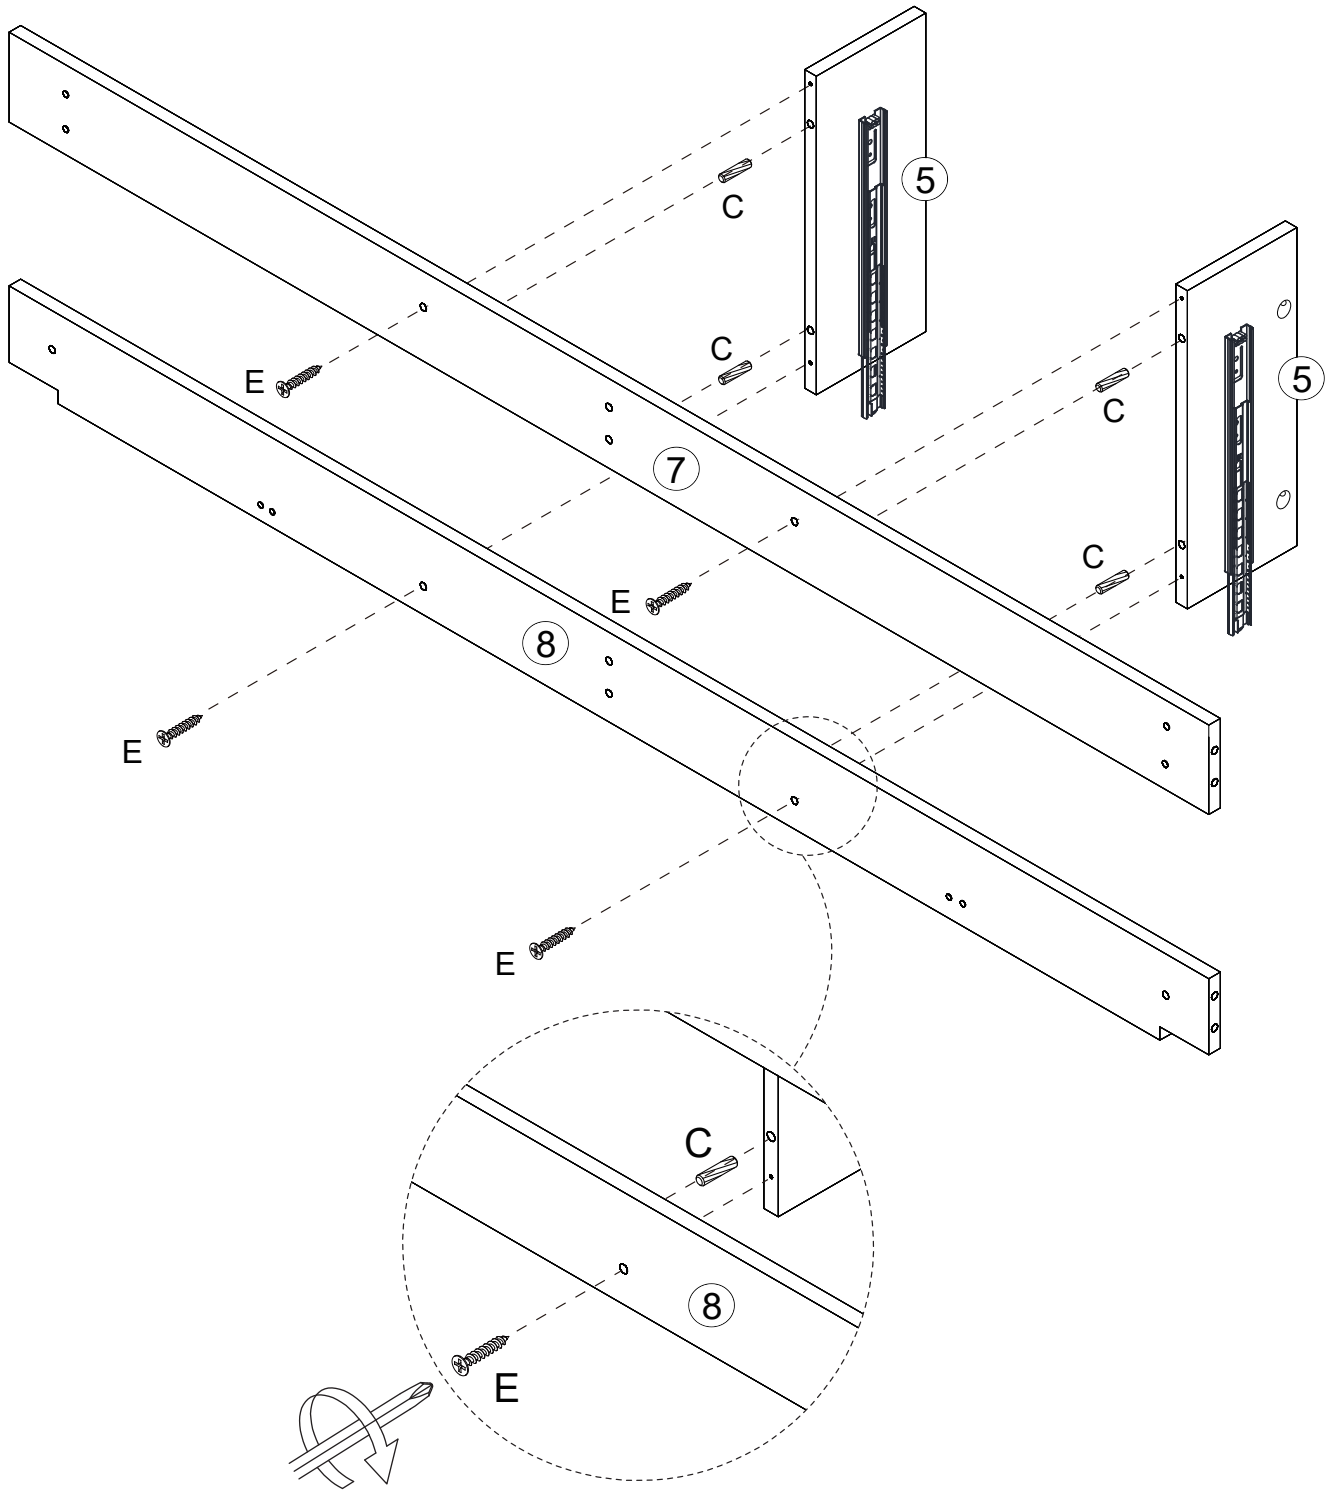


STEP 4

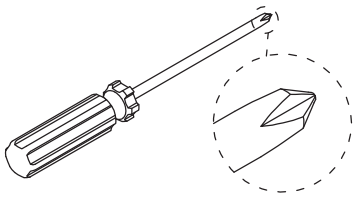


Ø4x35mm	
E	x2


Ø6x30mm	
C	x2


J	x2

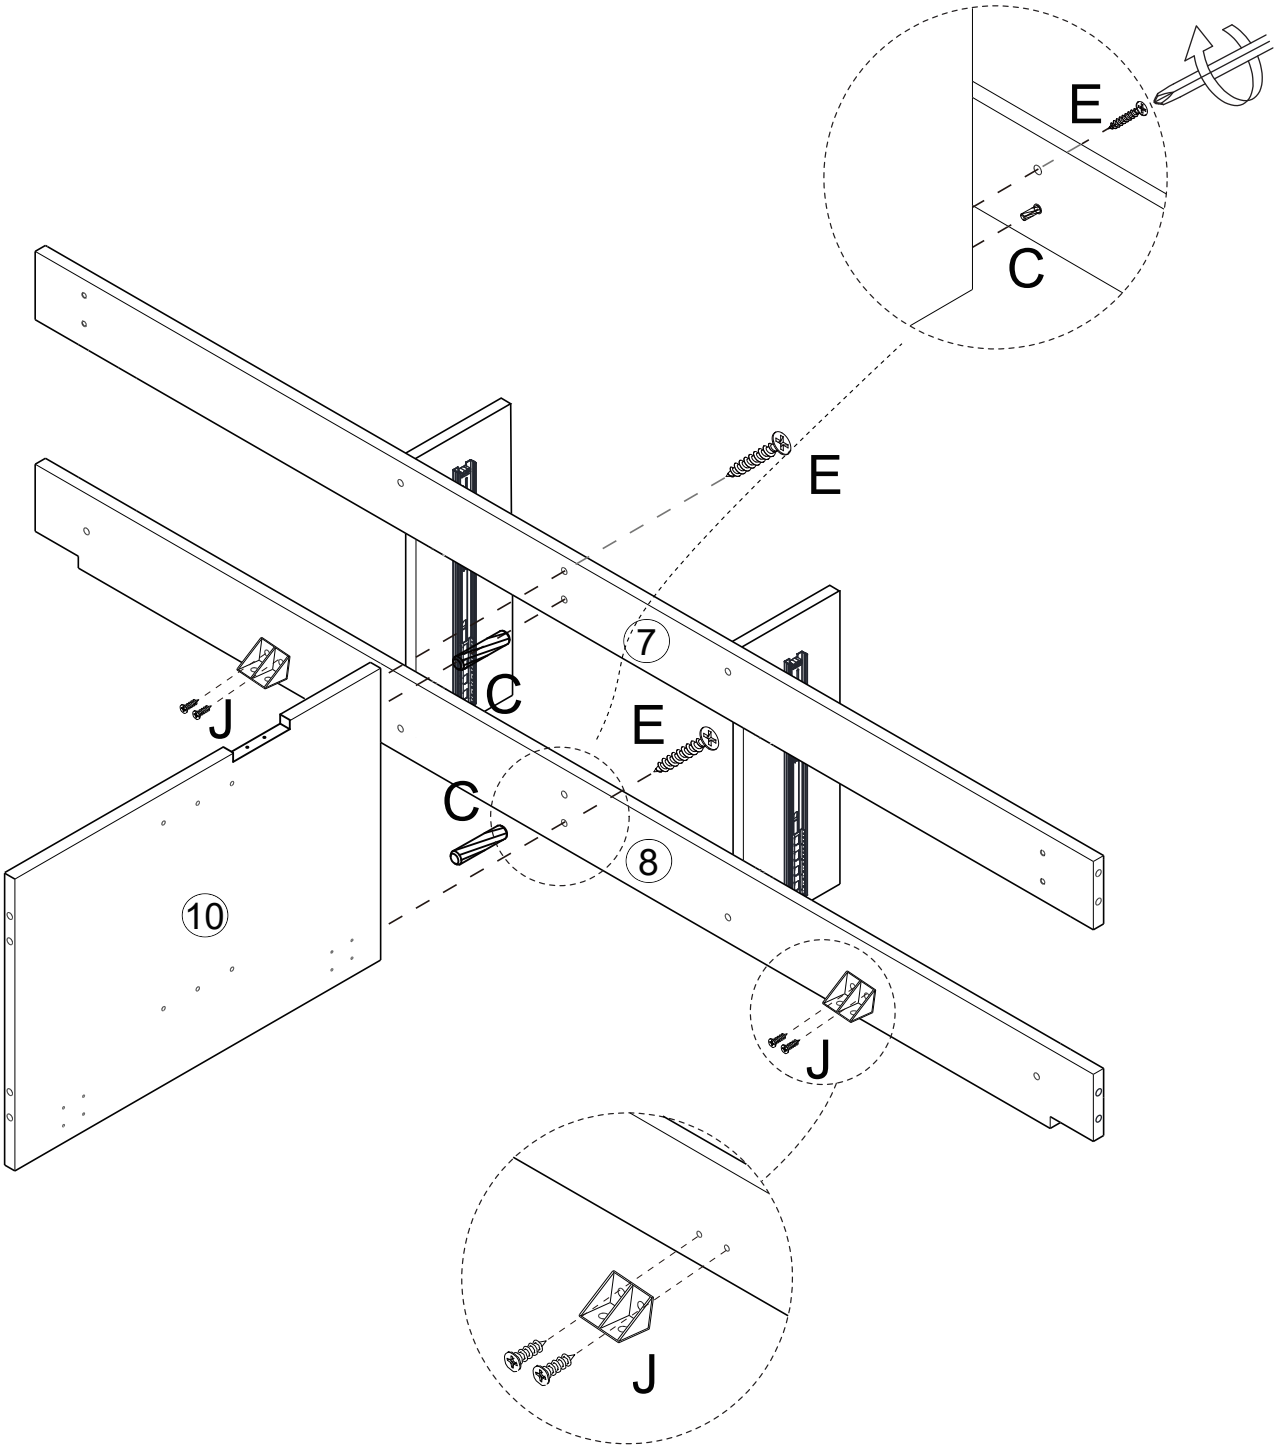


STEP 5

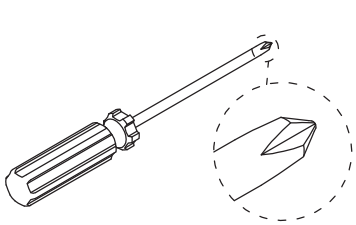


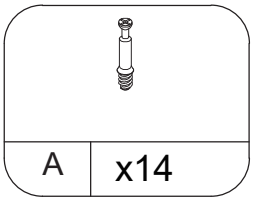

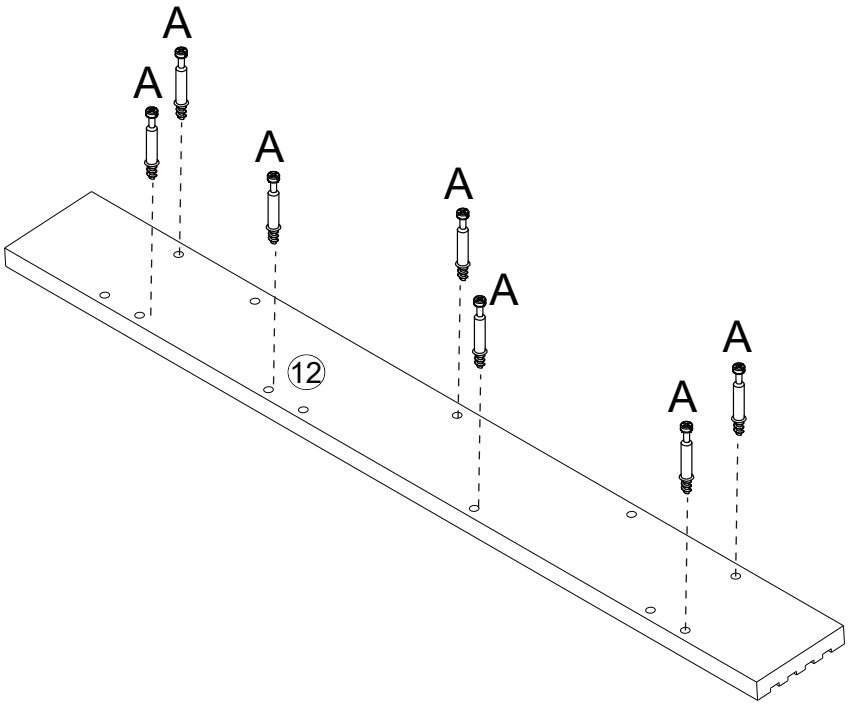


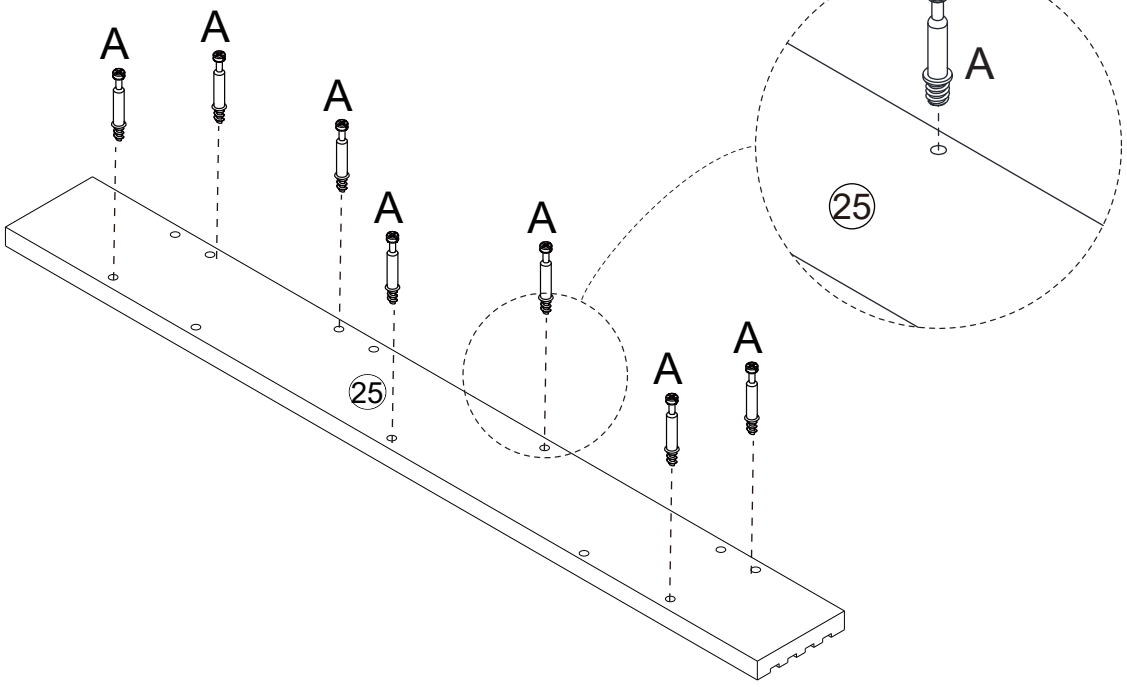



STEP 6

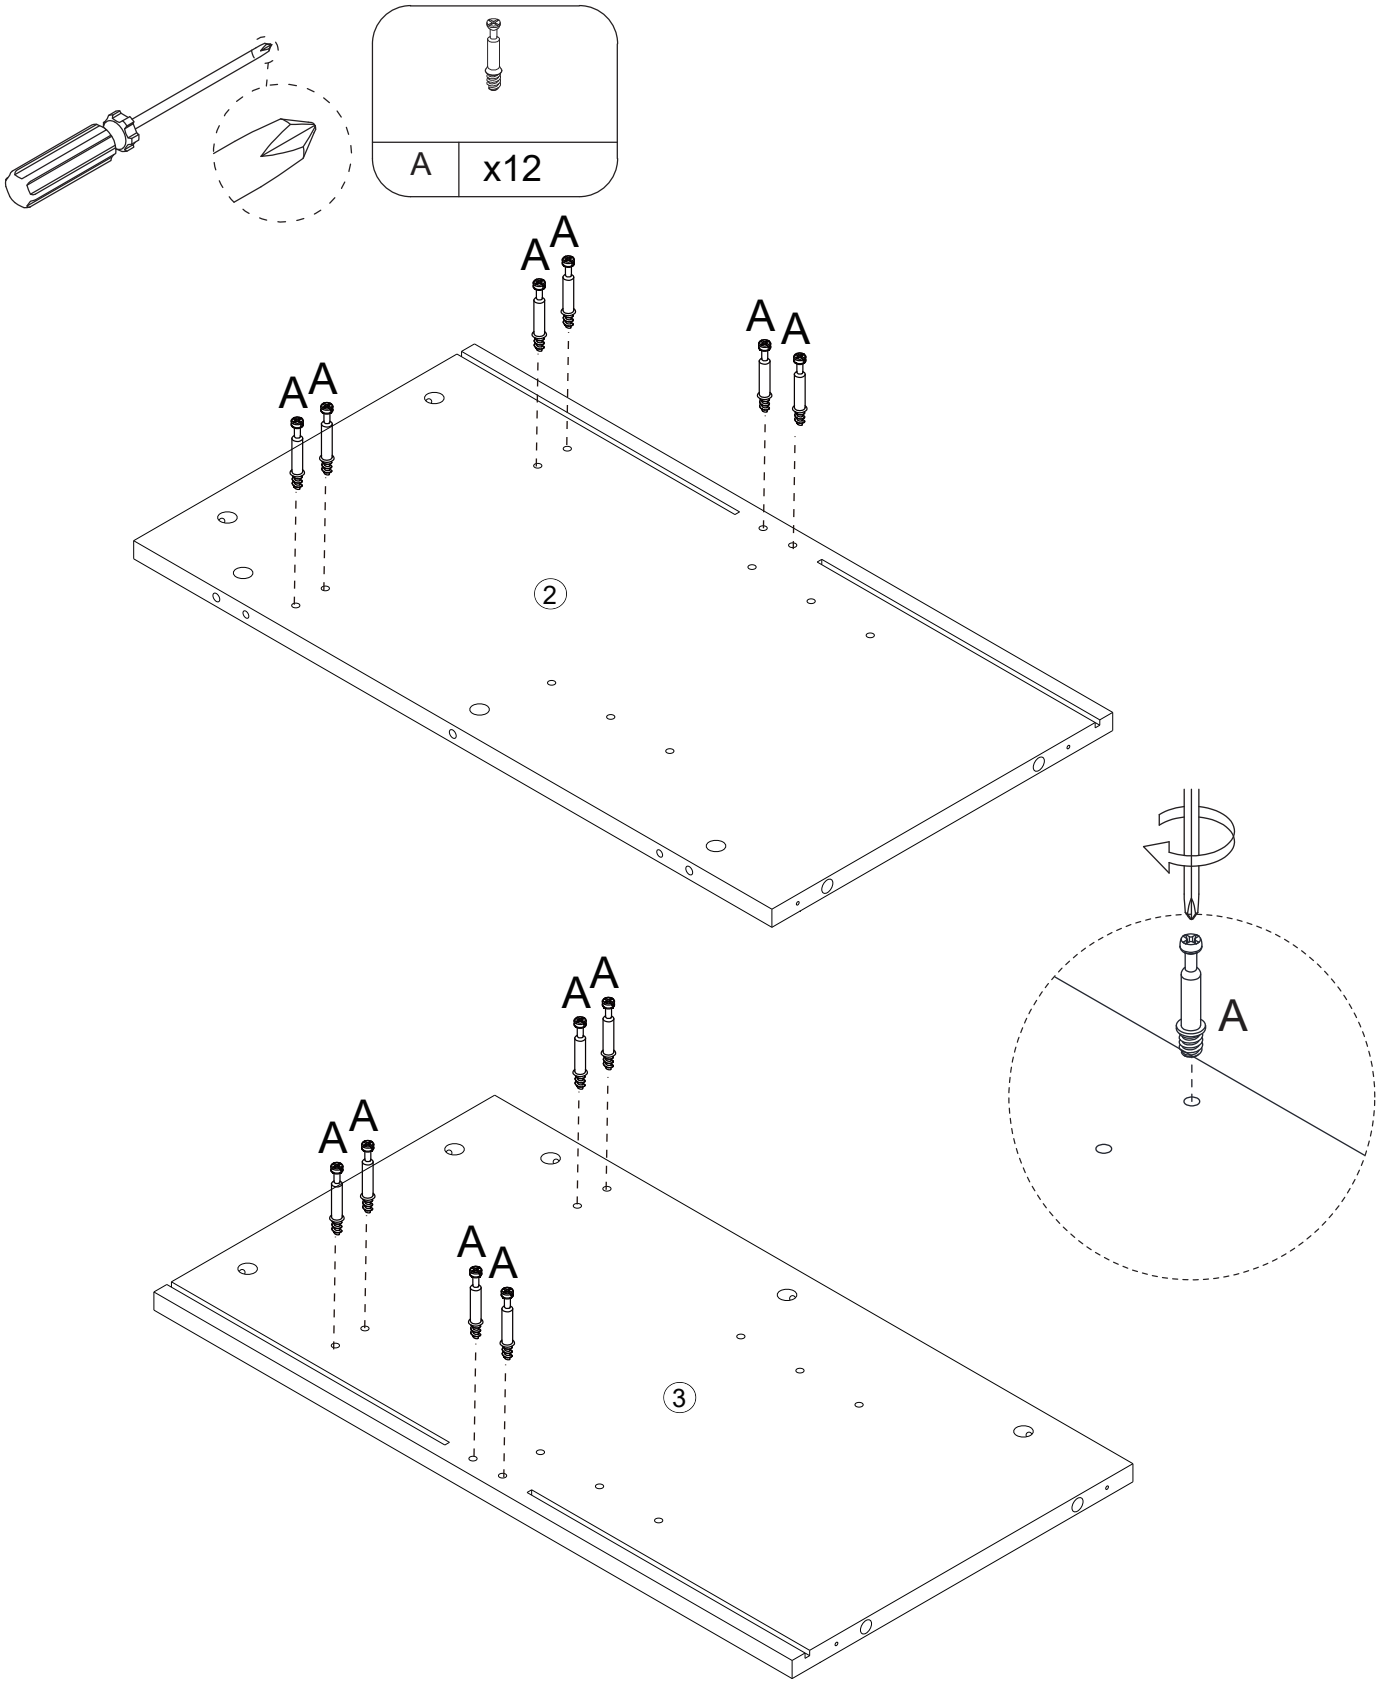


STEP 7

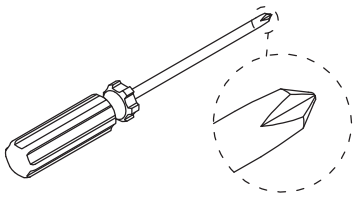

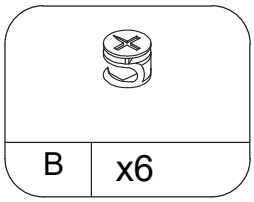


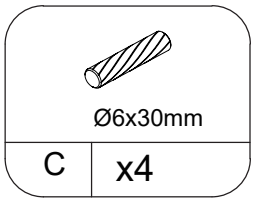

⑤

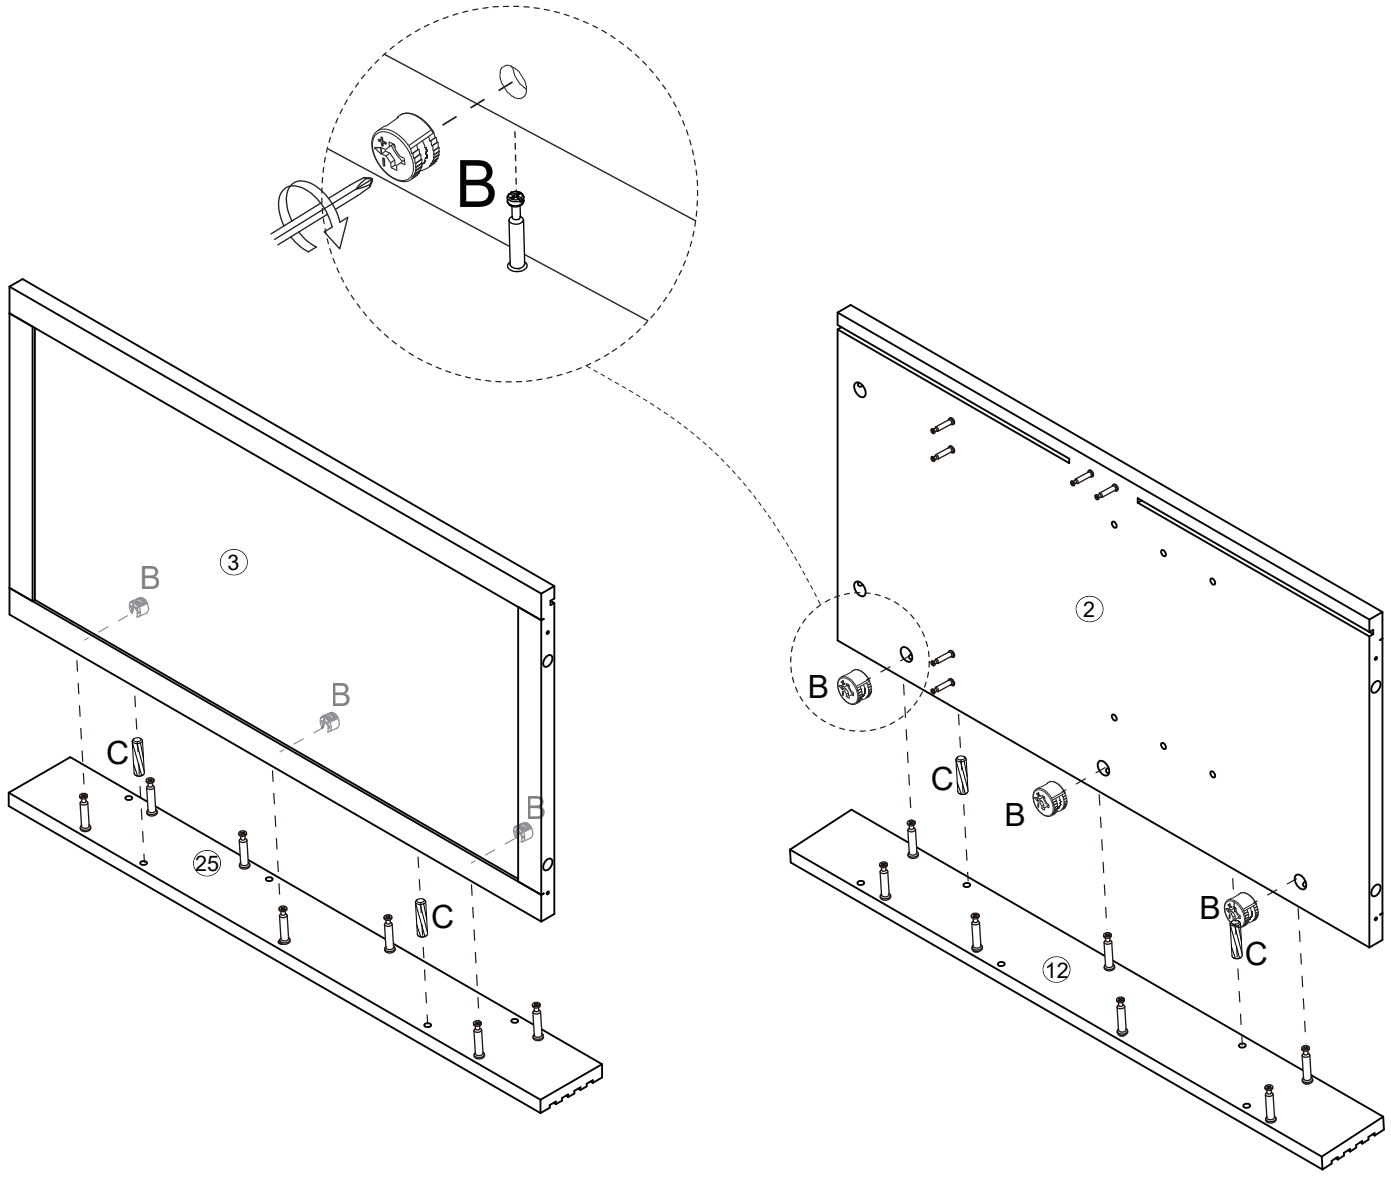



STEP 8

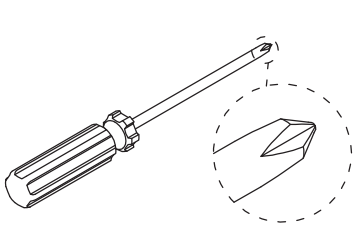


	
B	x6


 Ø6x30mm	
C	x4

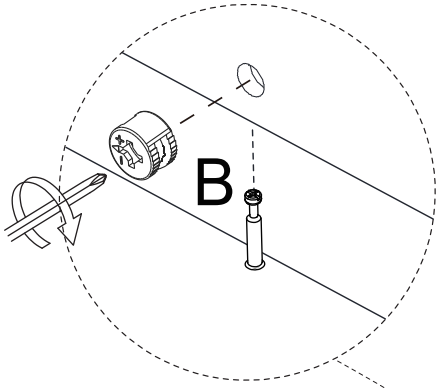


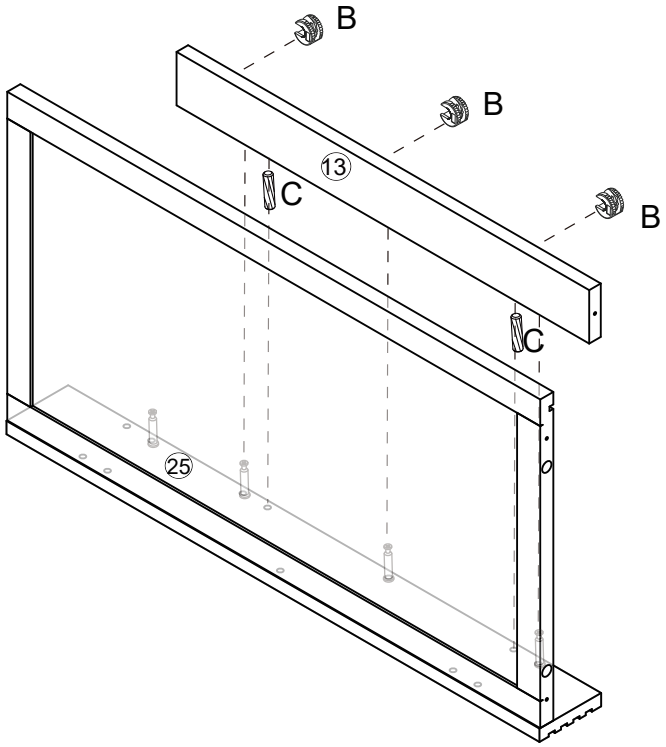

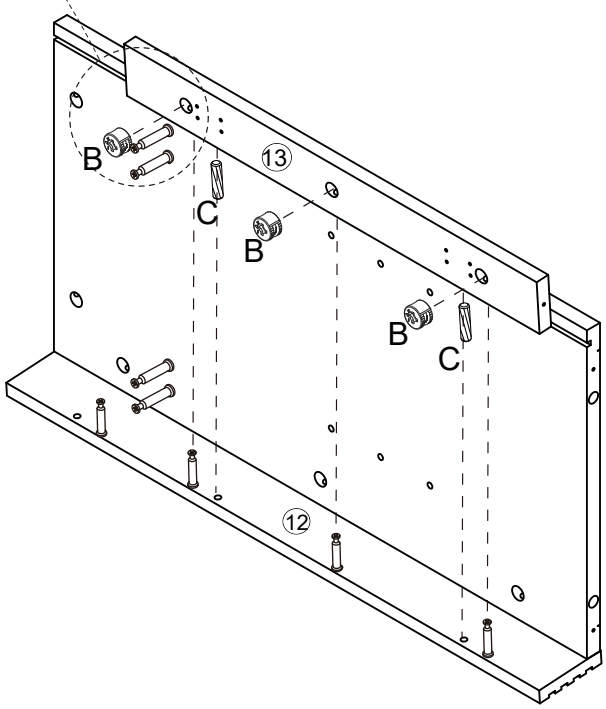



STEP 9

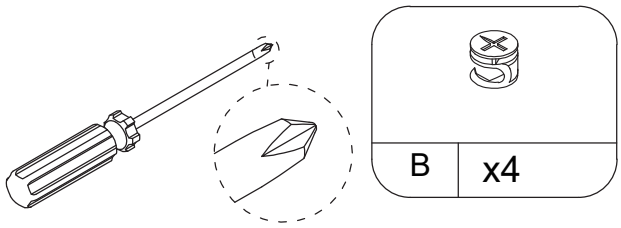

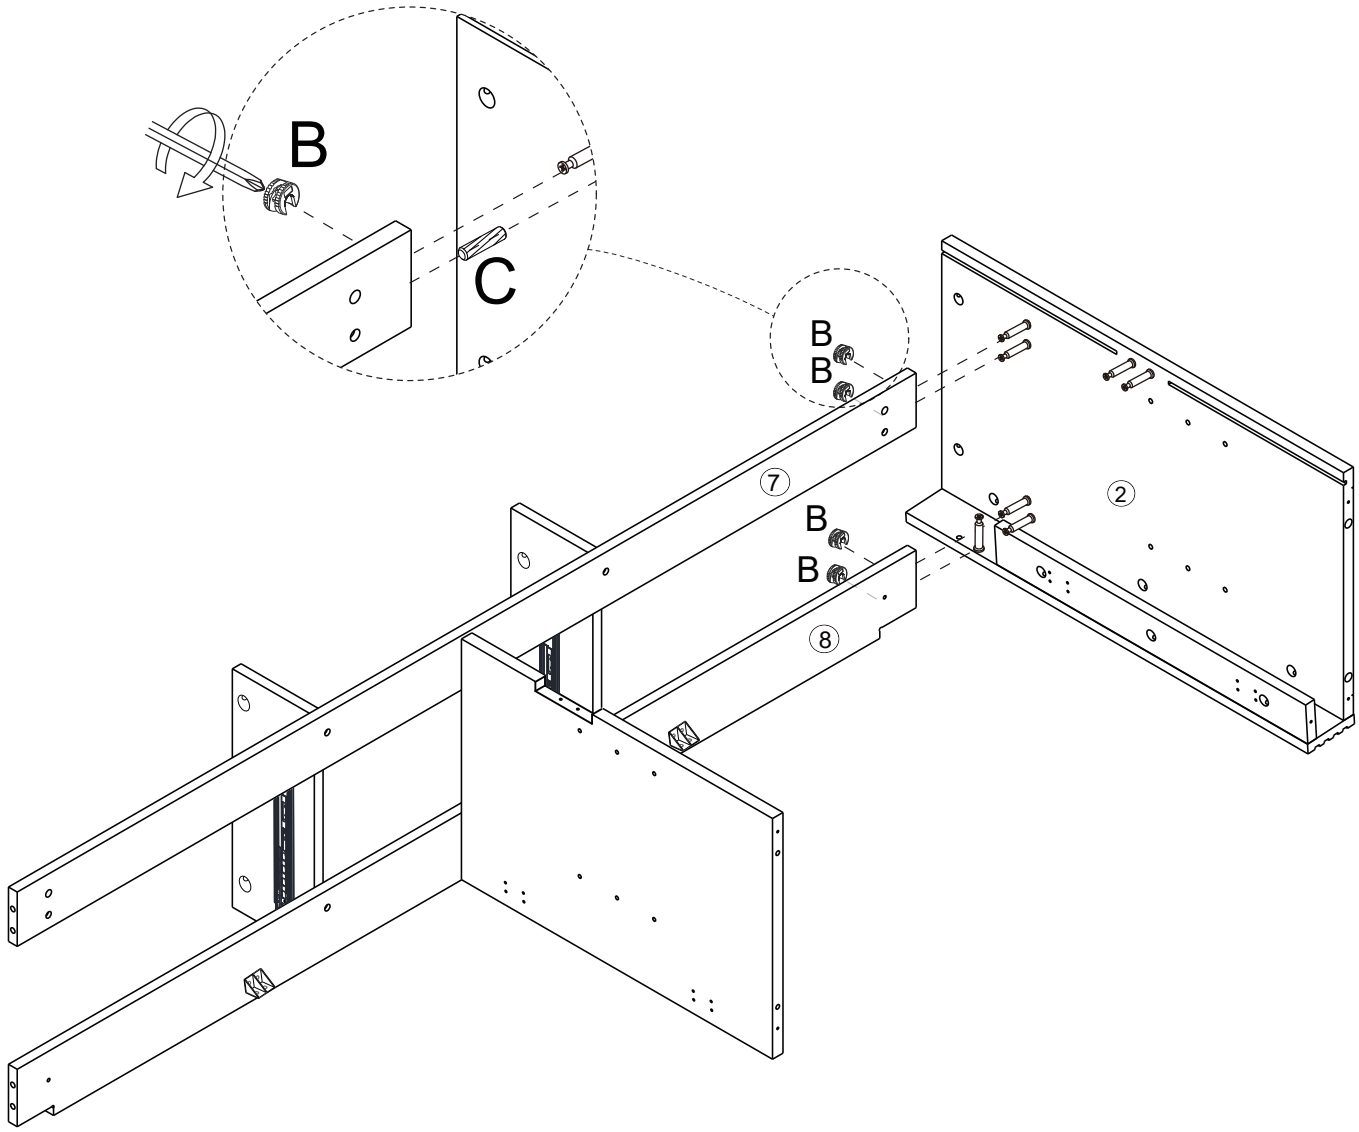



STEP 10

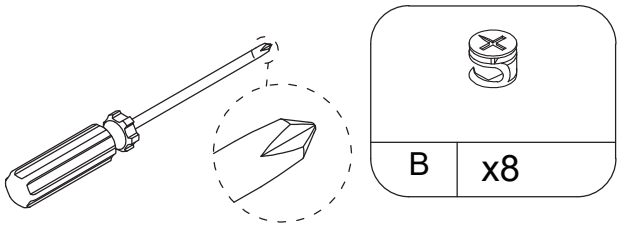


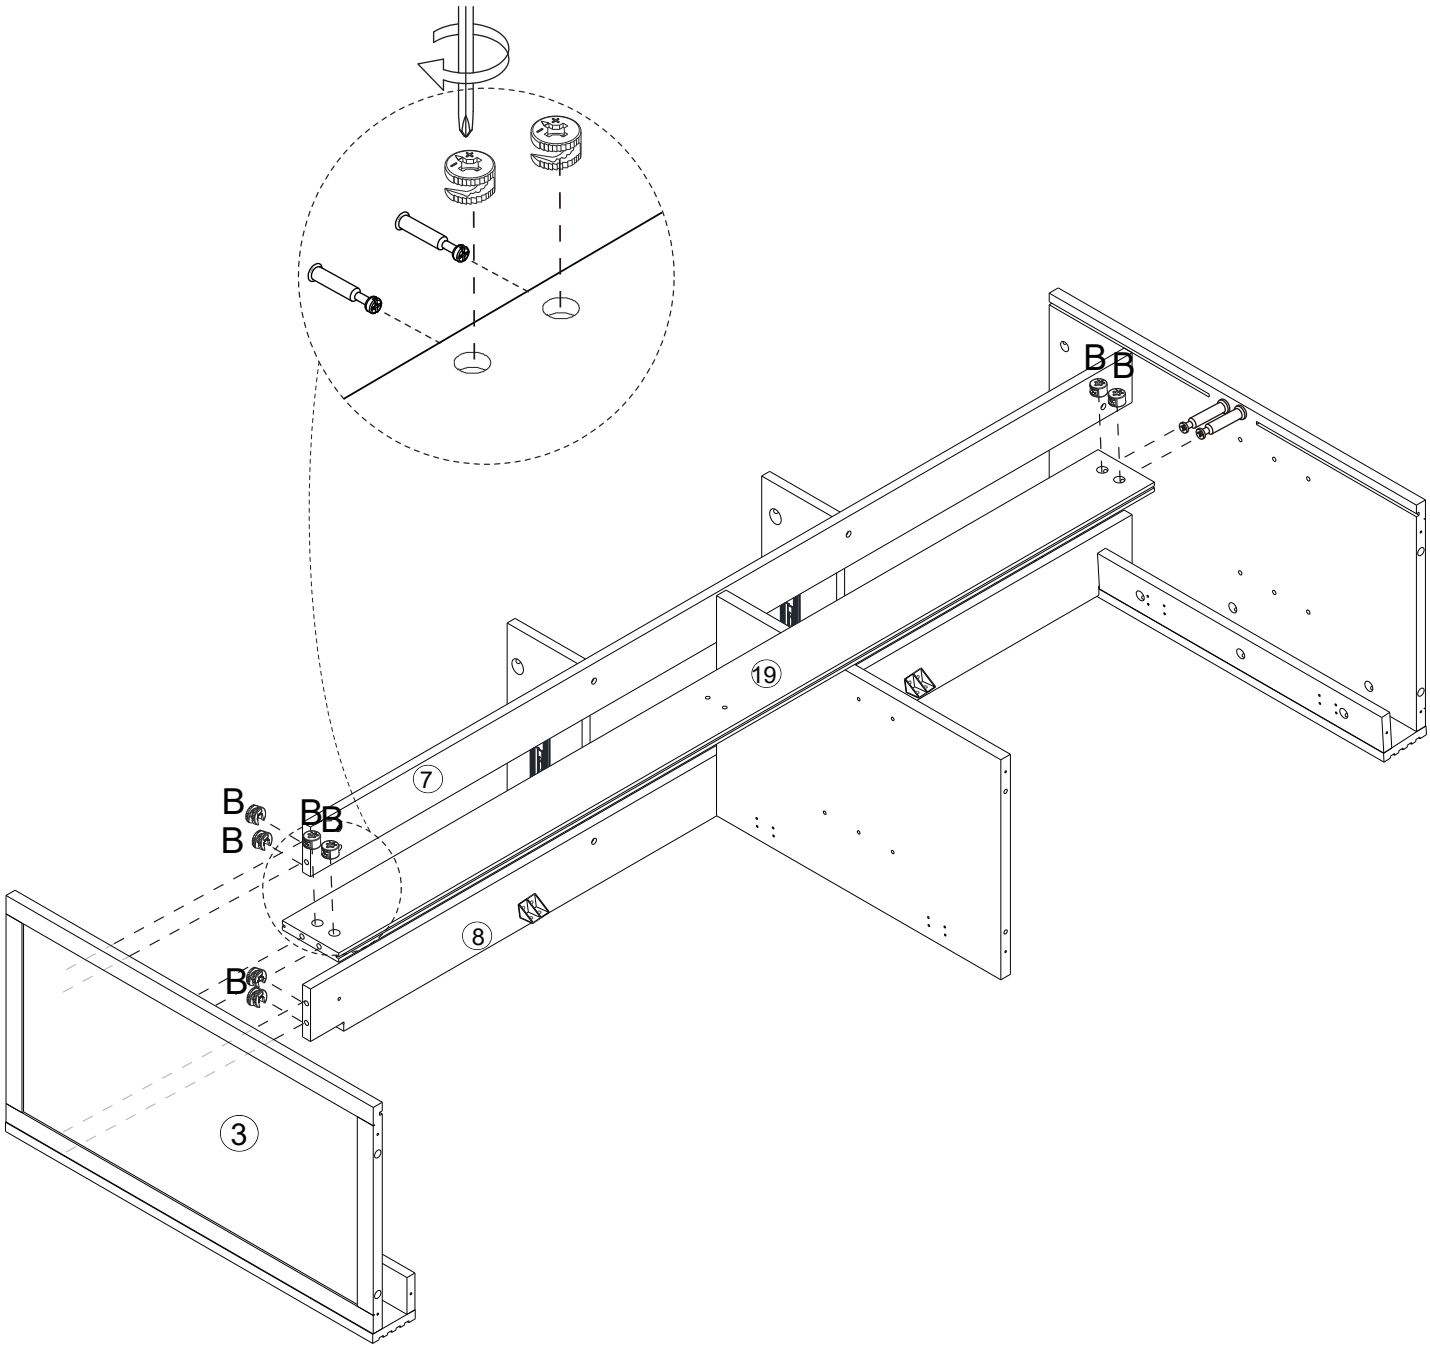


STEP 11

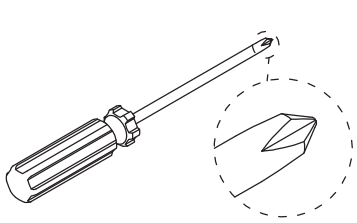


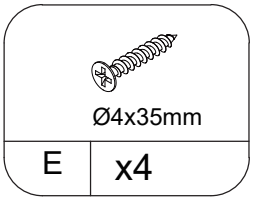

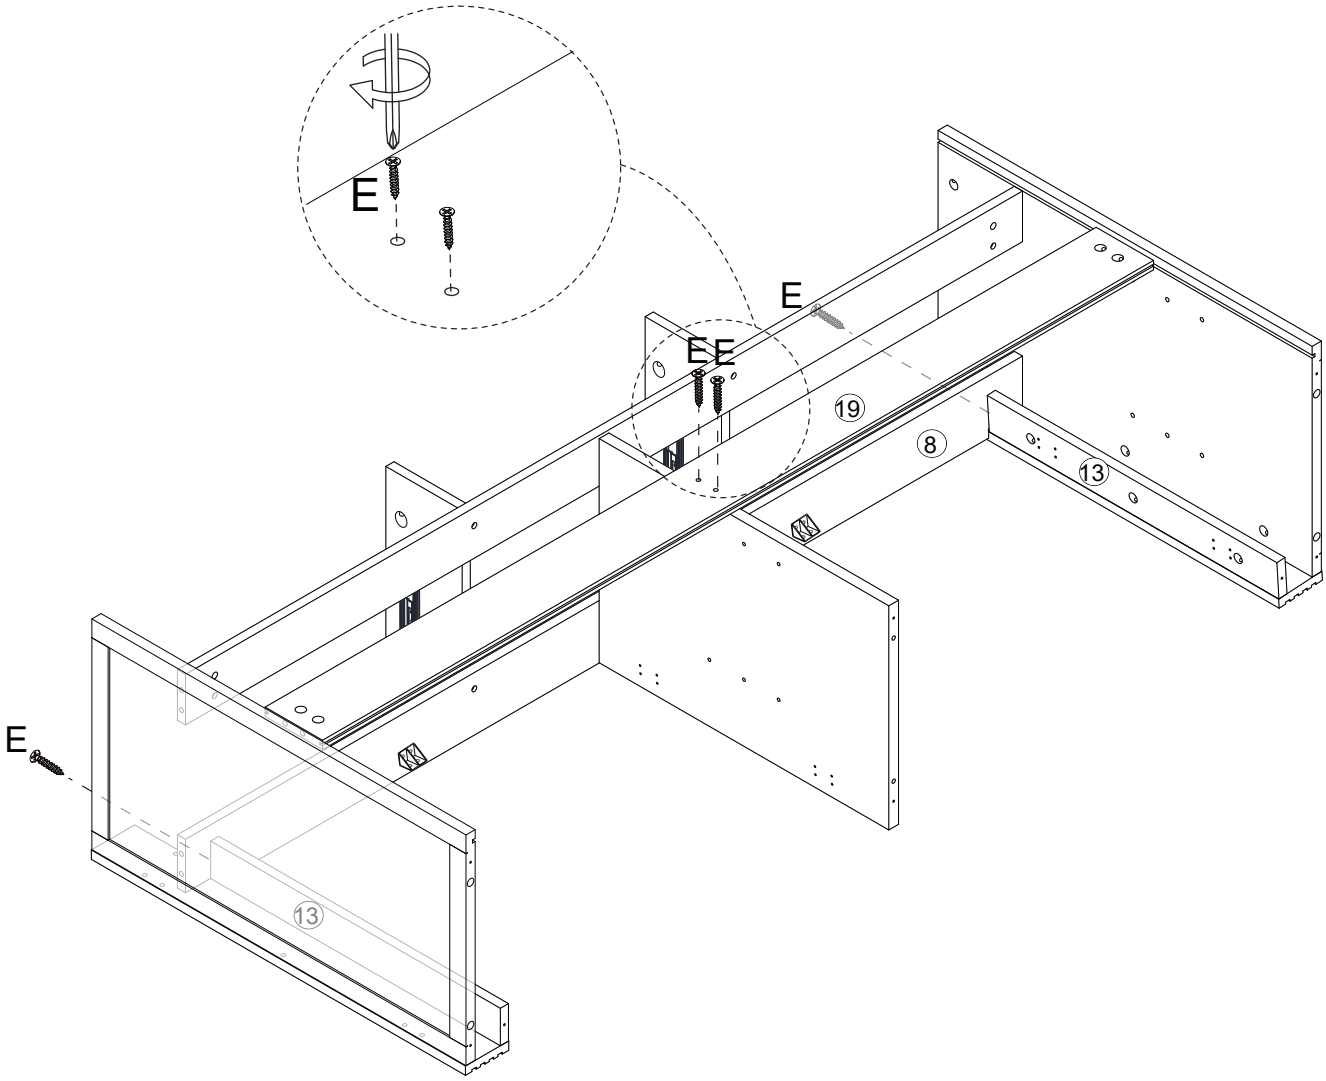


STEP 12

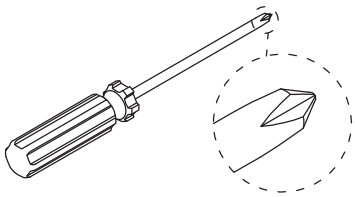


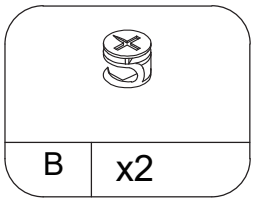


B	x2

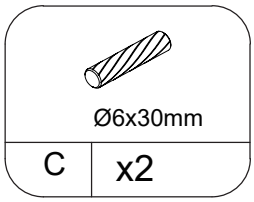



C	x2

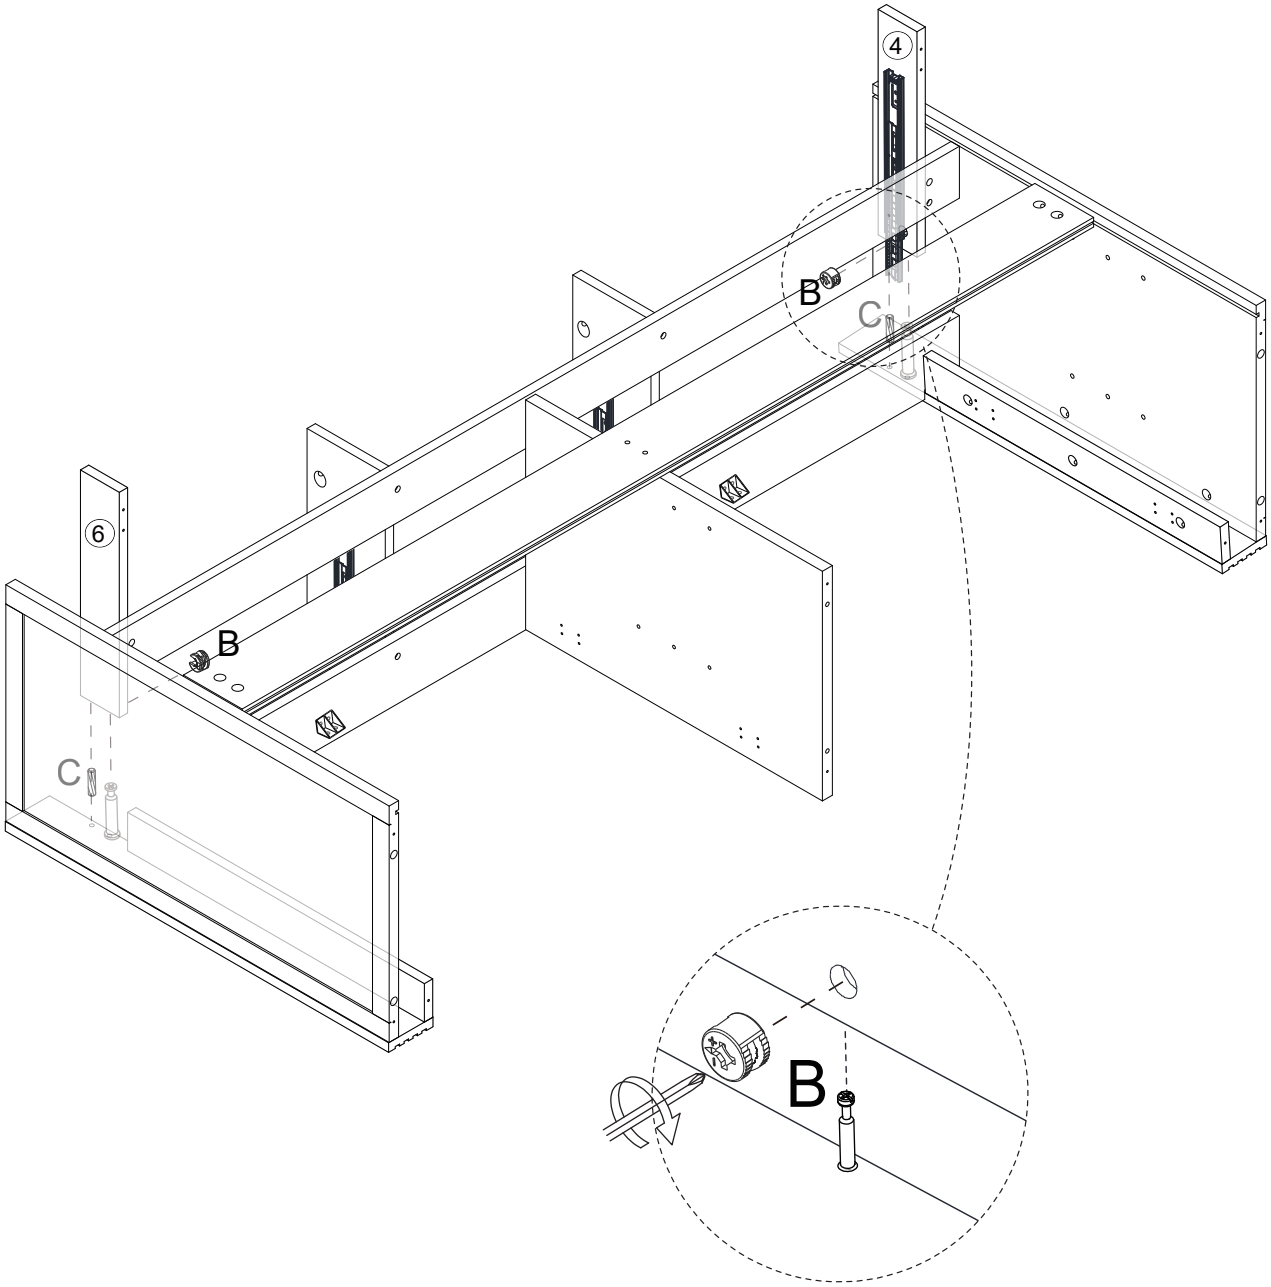


STEP 13

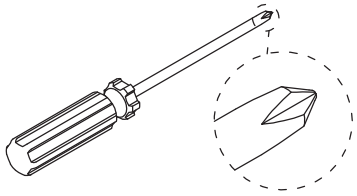

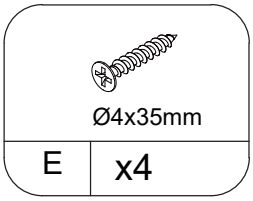


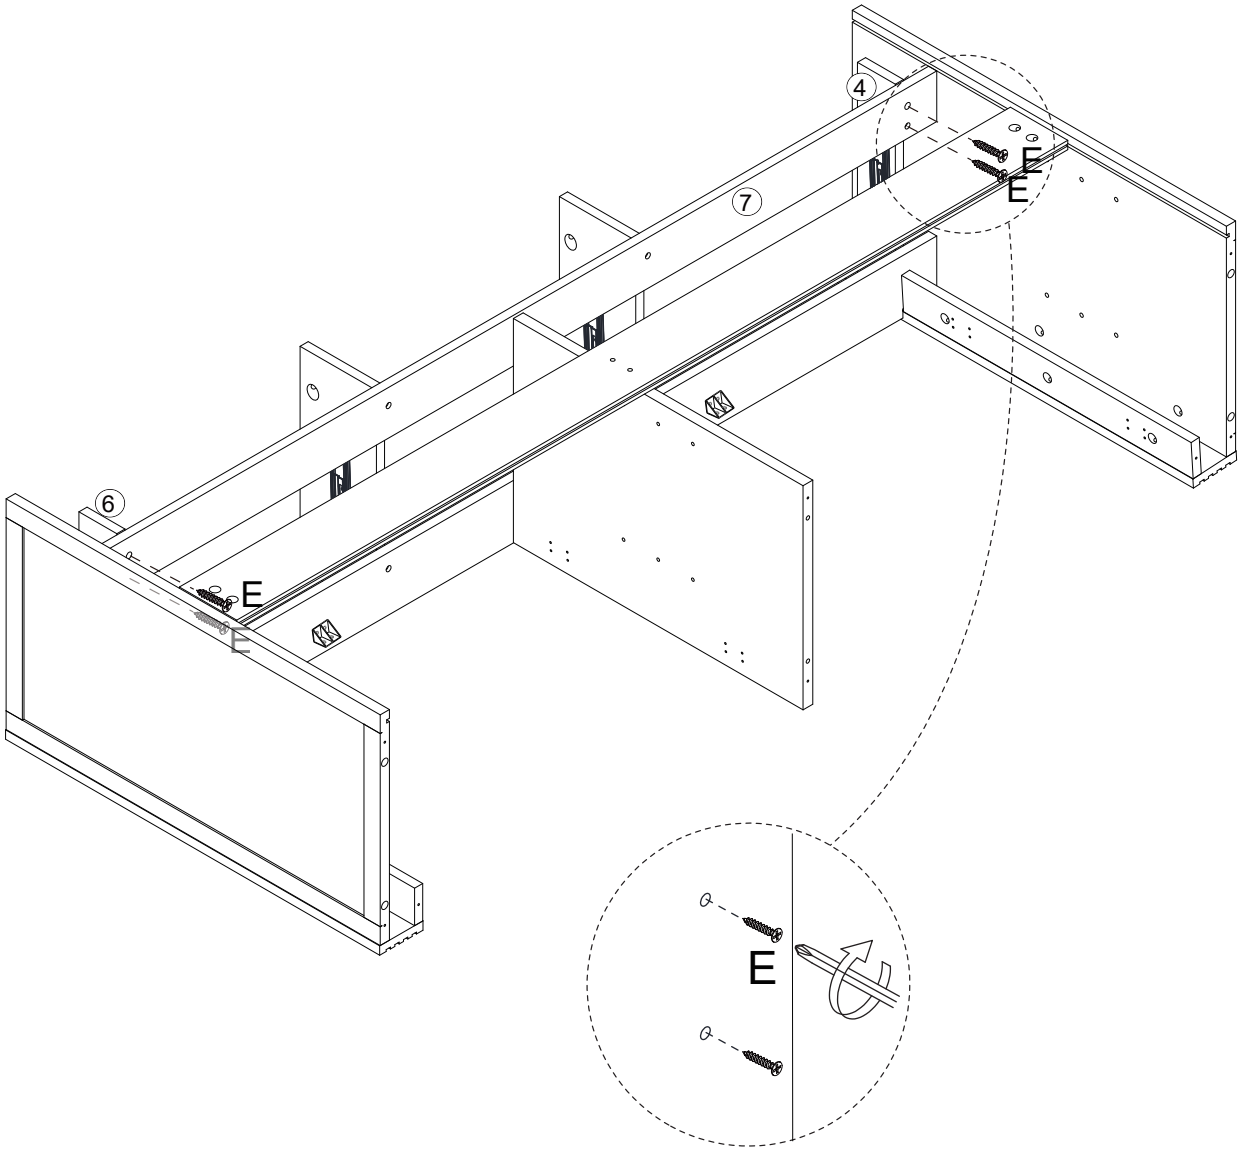



STEP 14

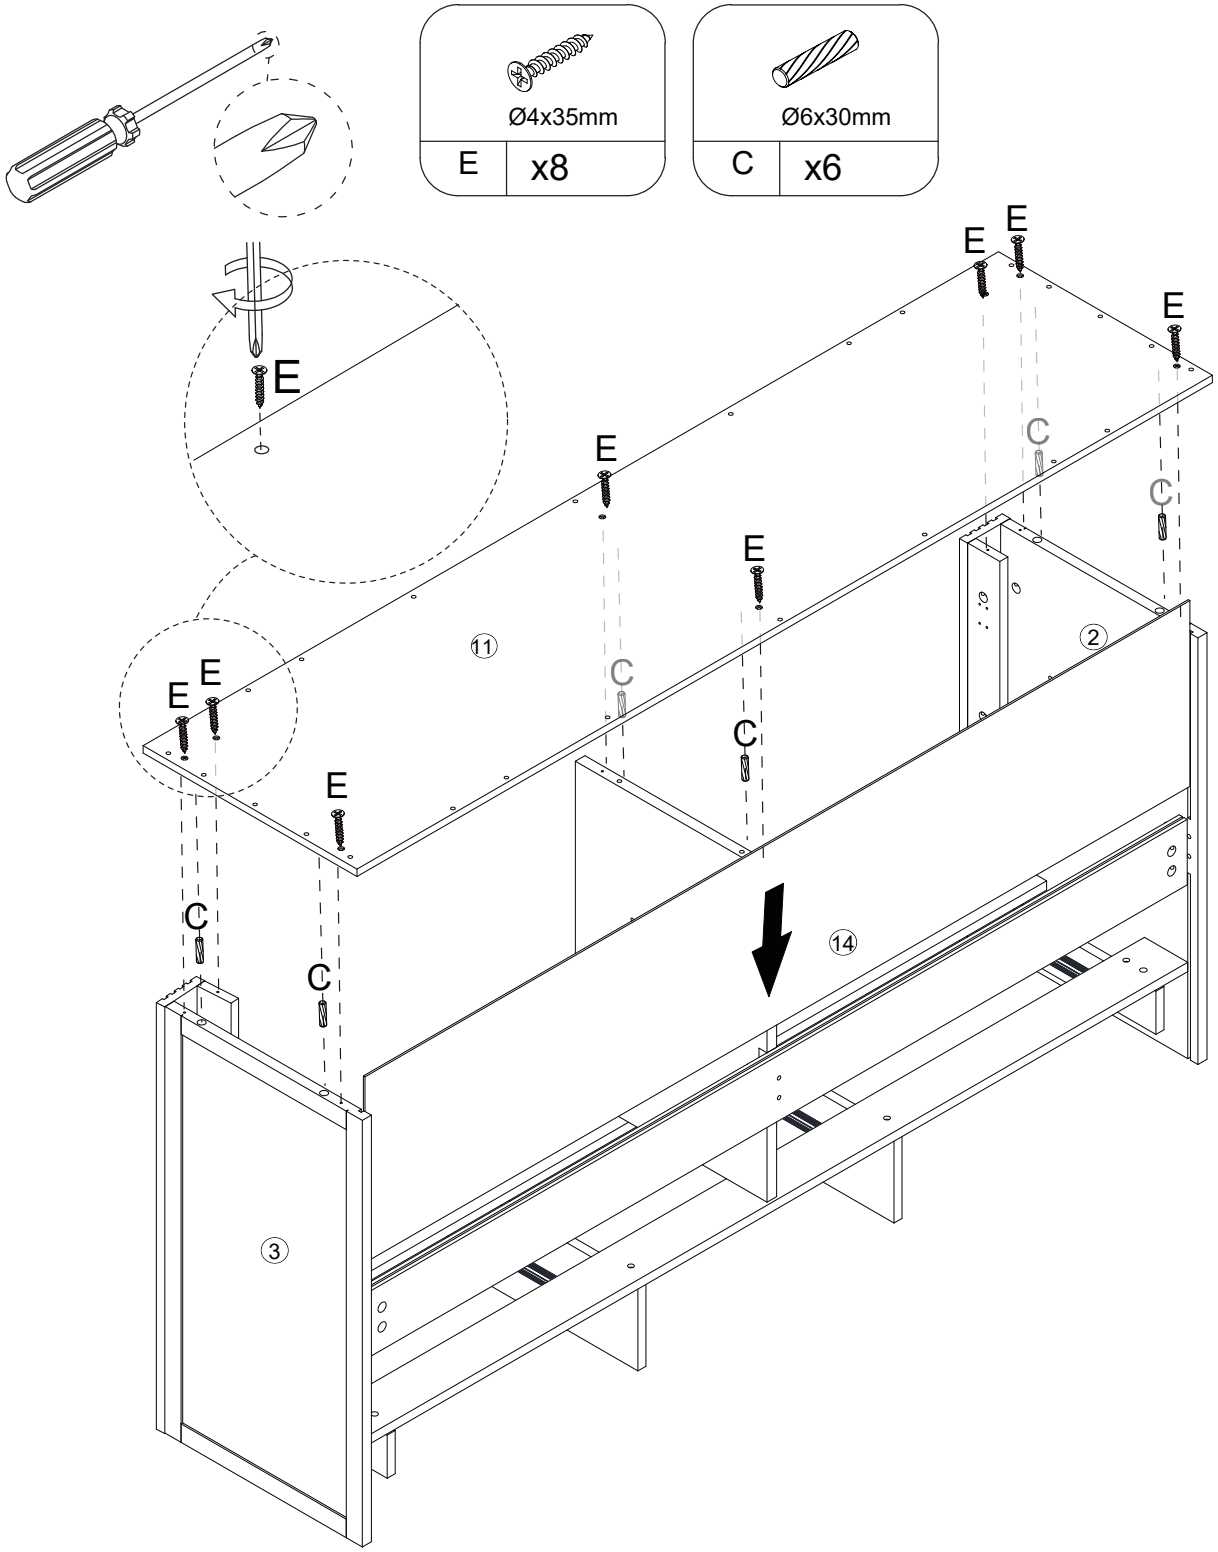


STEP 15

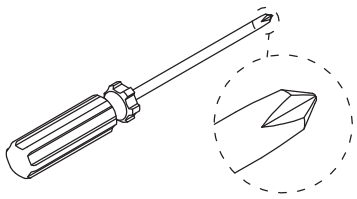

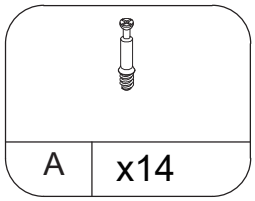


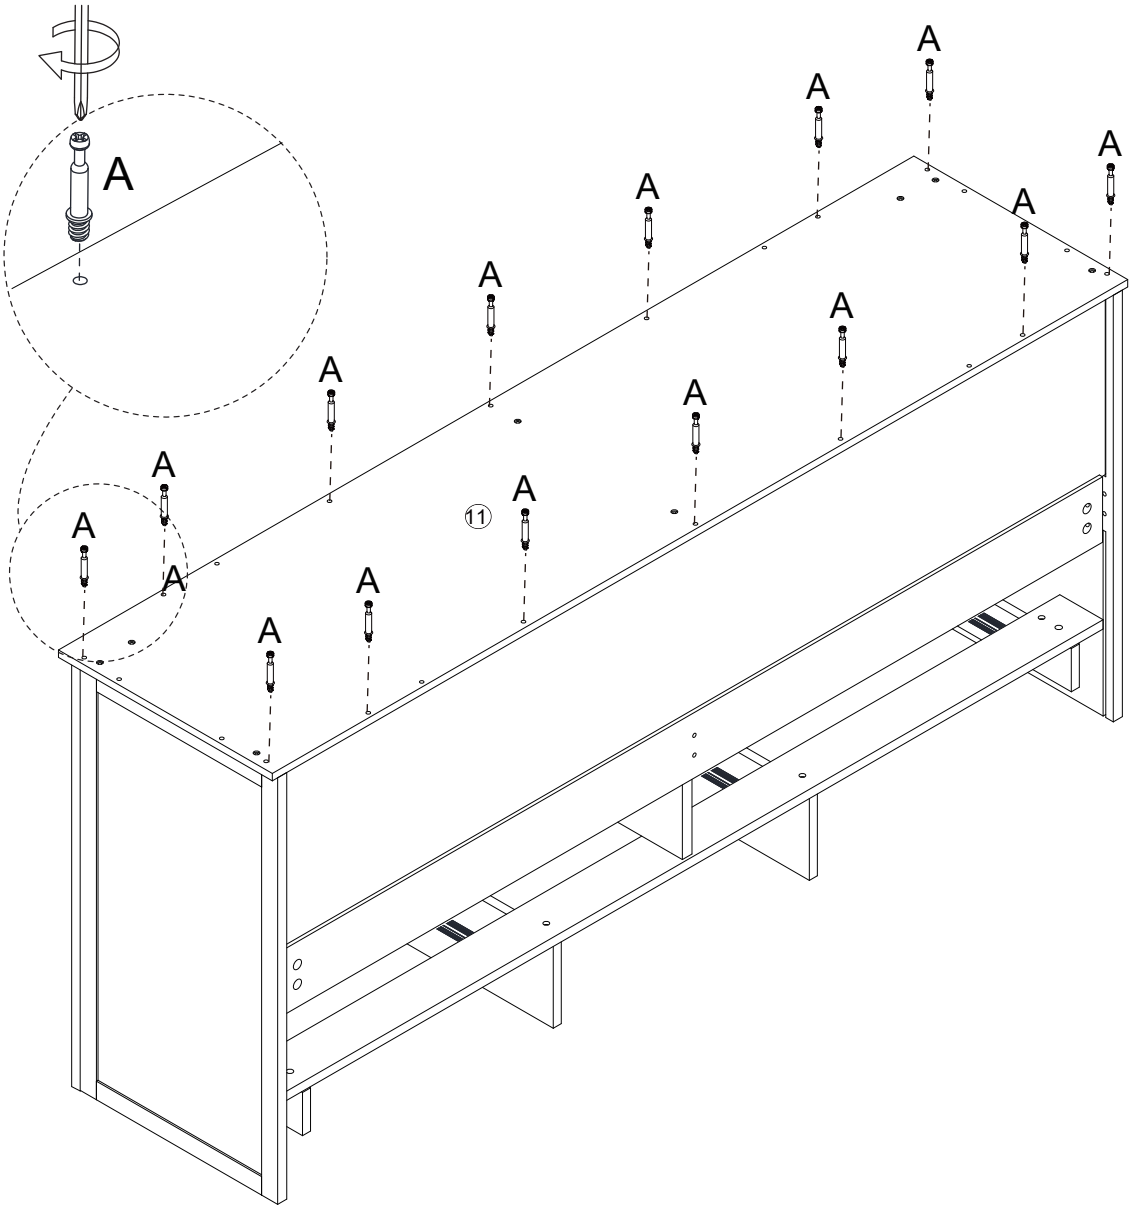



STEP 16

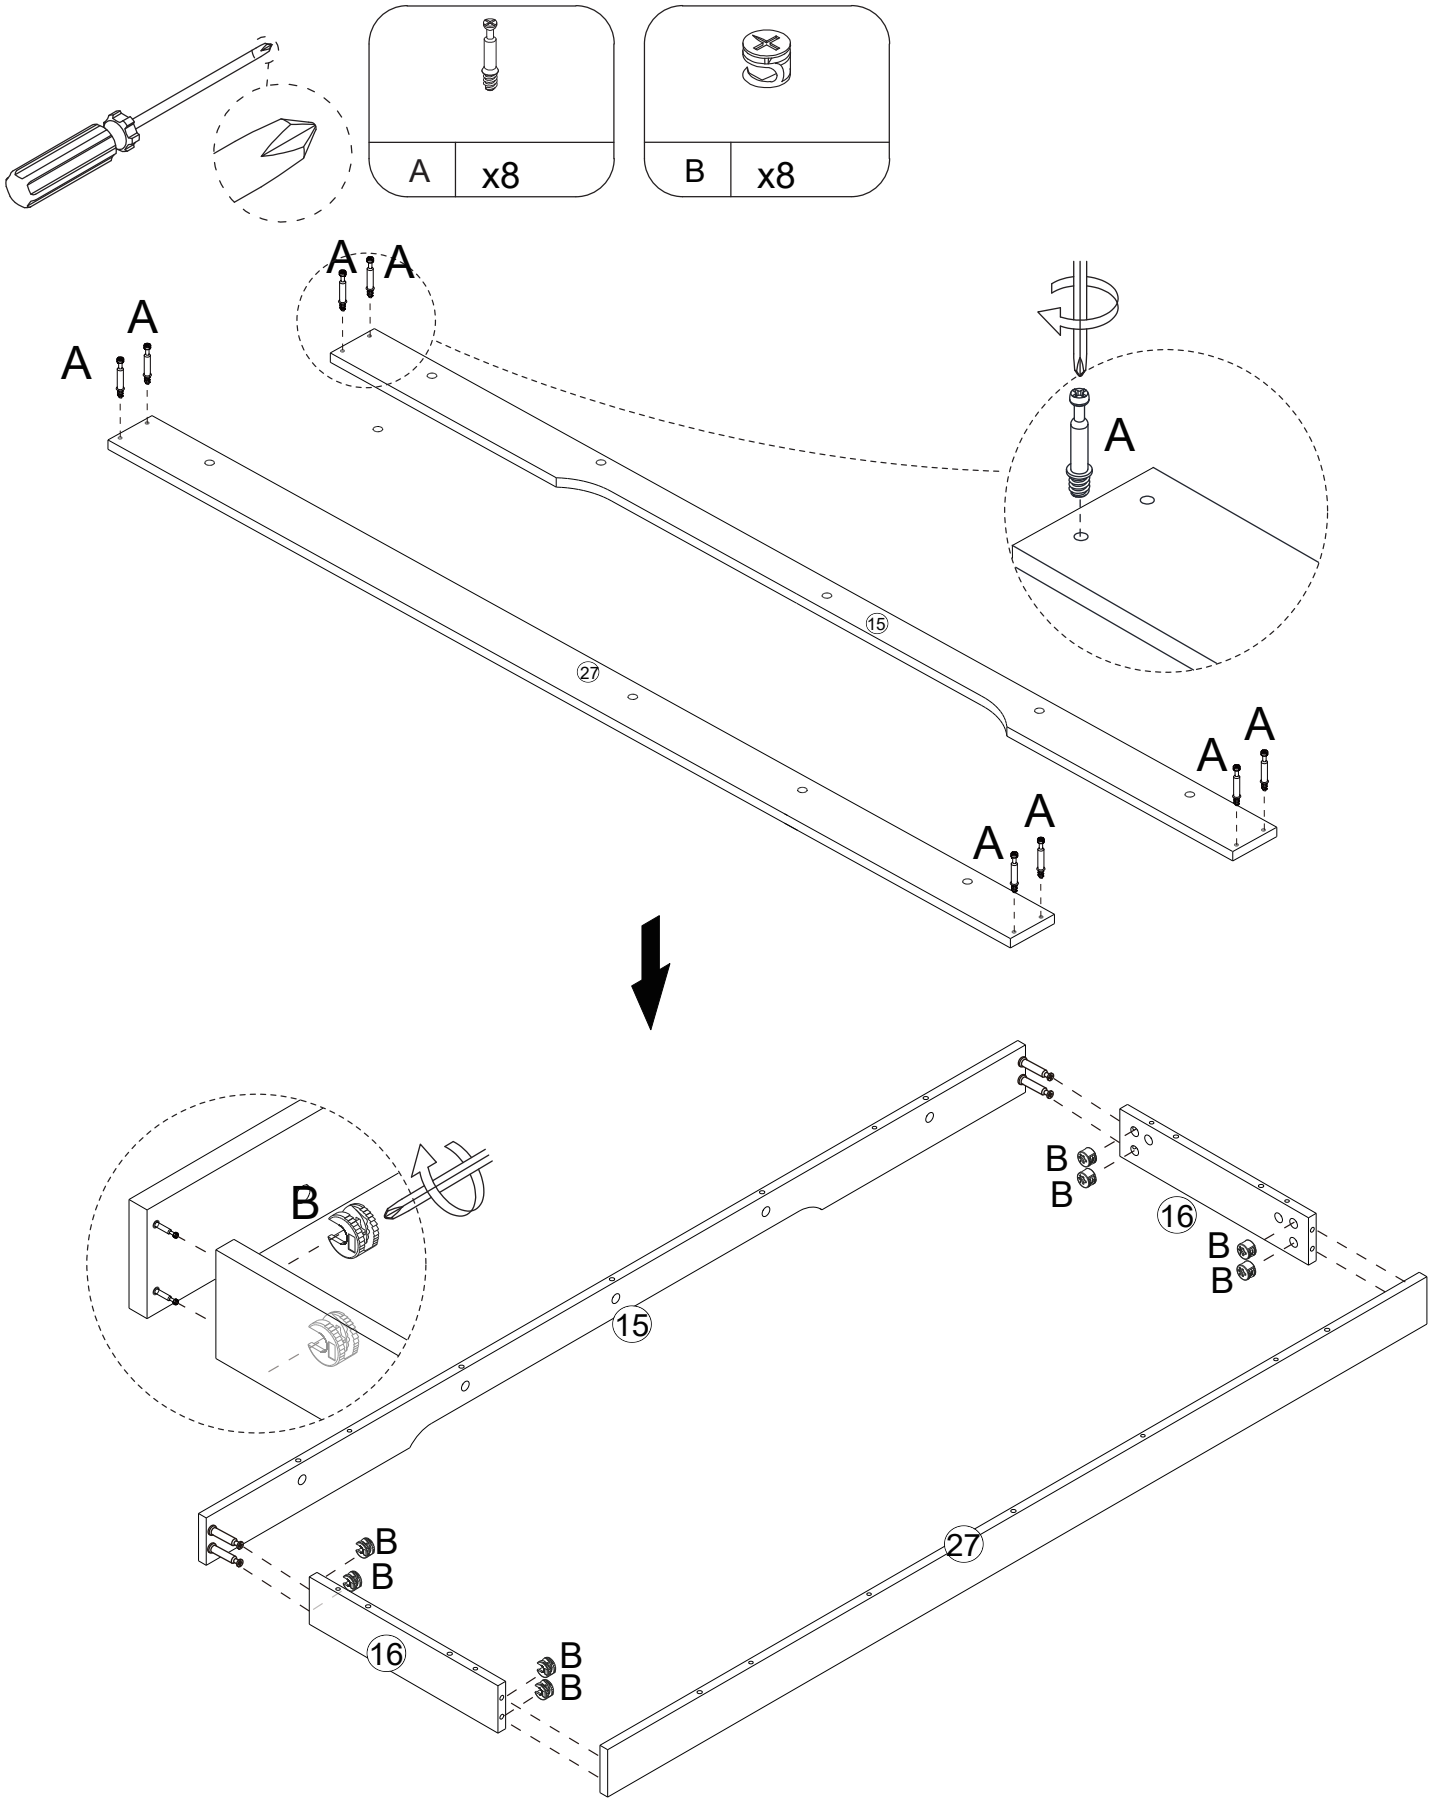



STEP 17

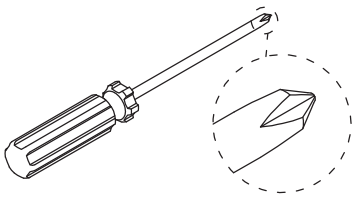

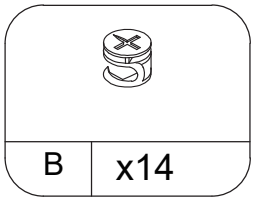


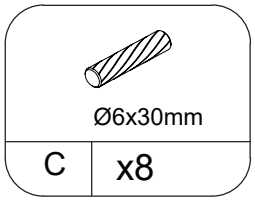


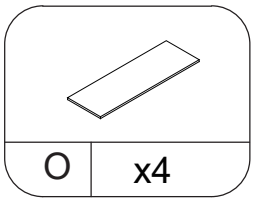

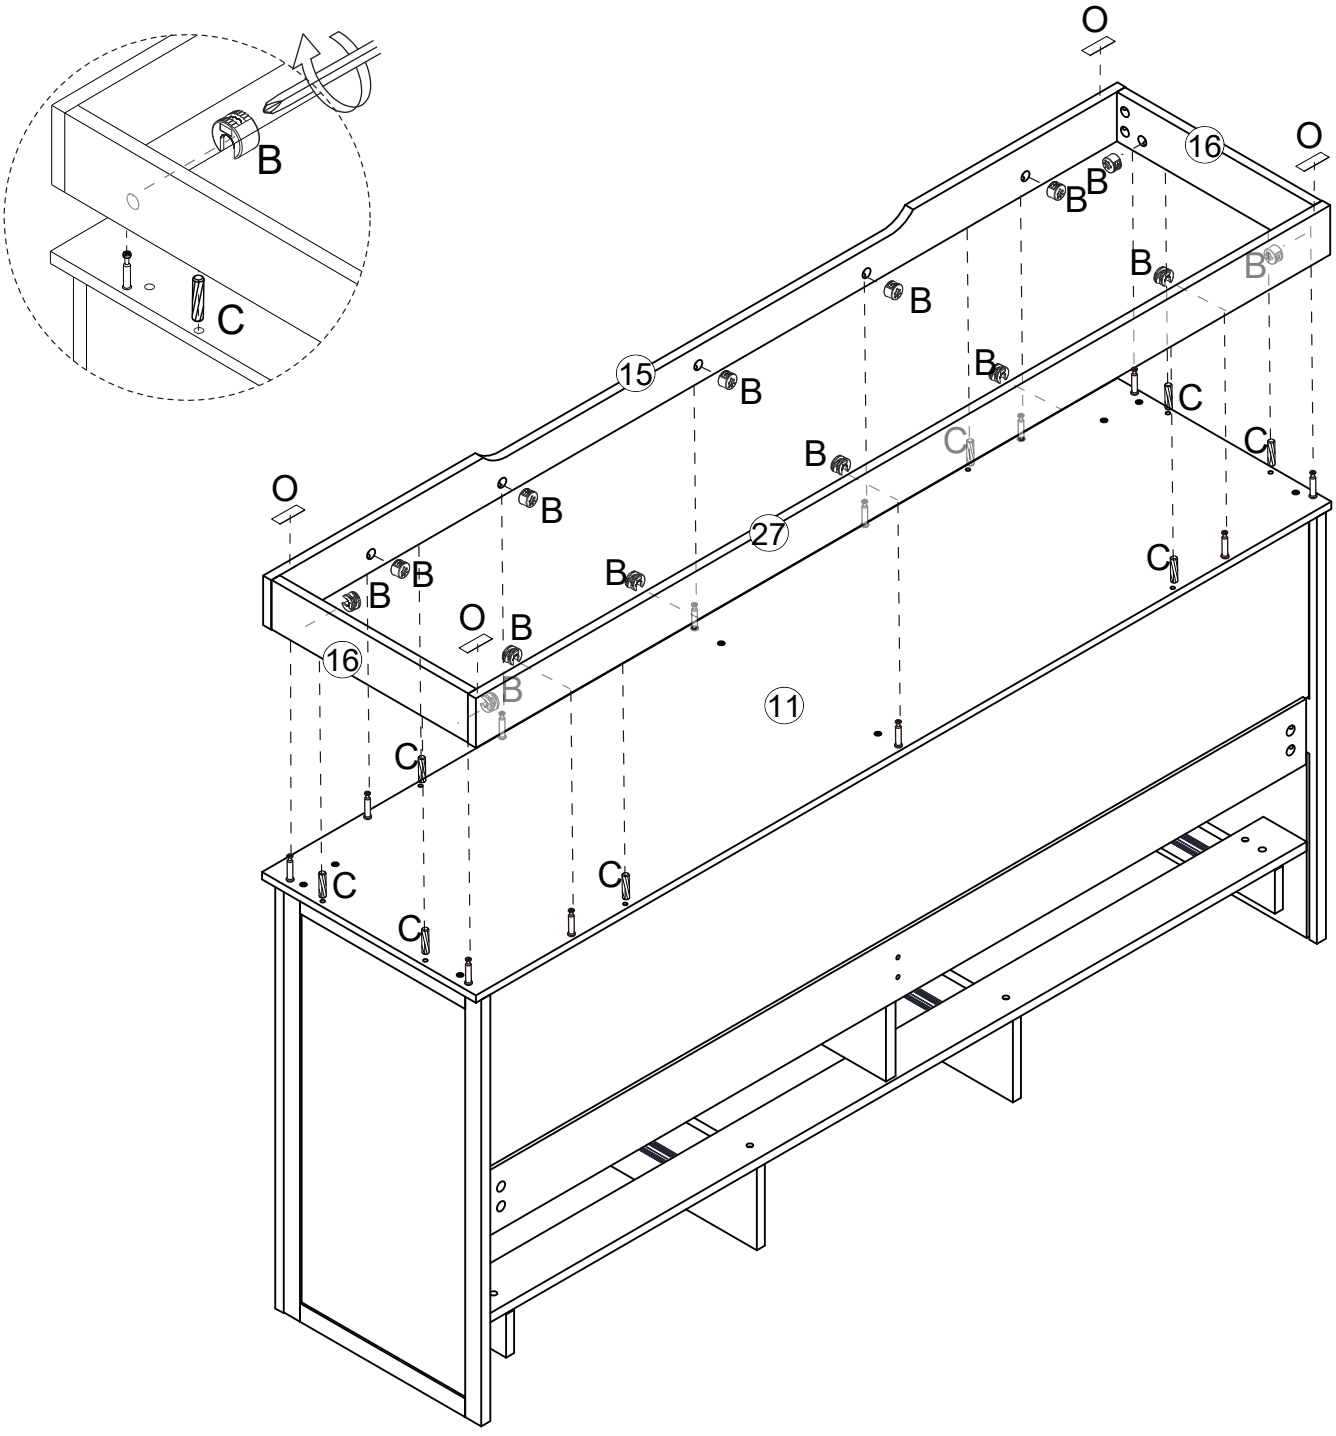



STEP 18

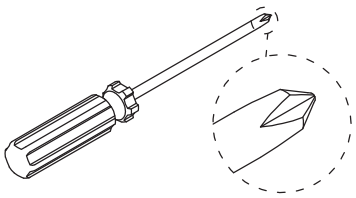

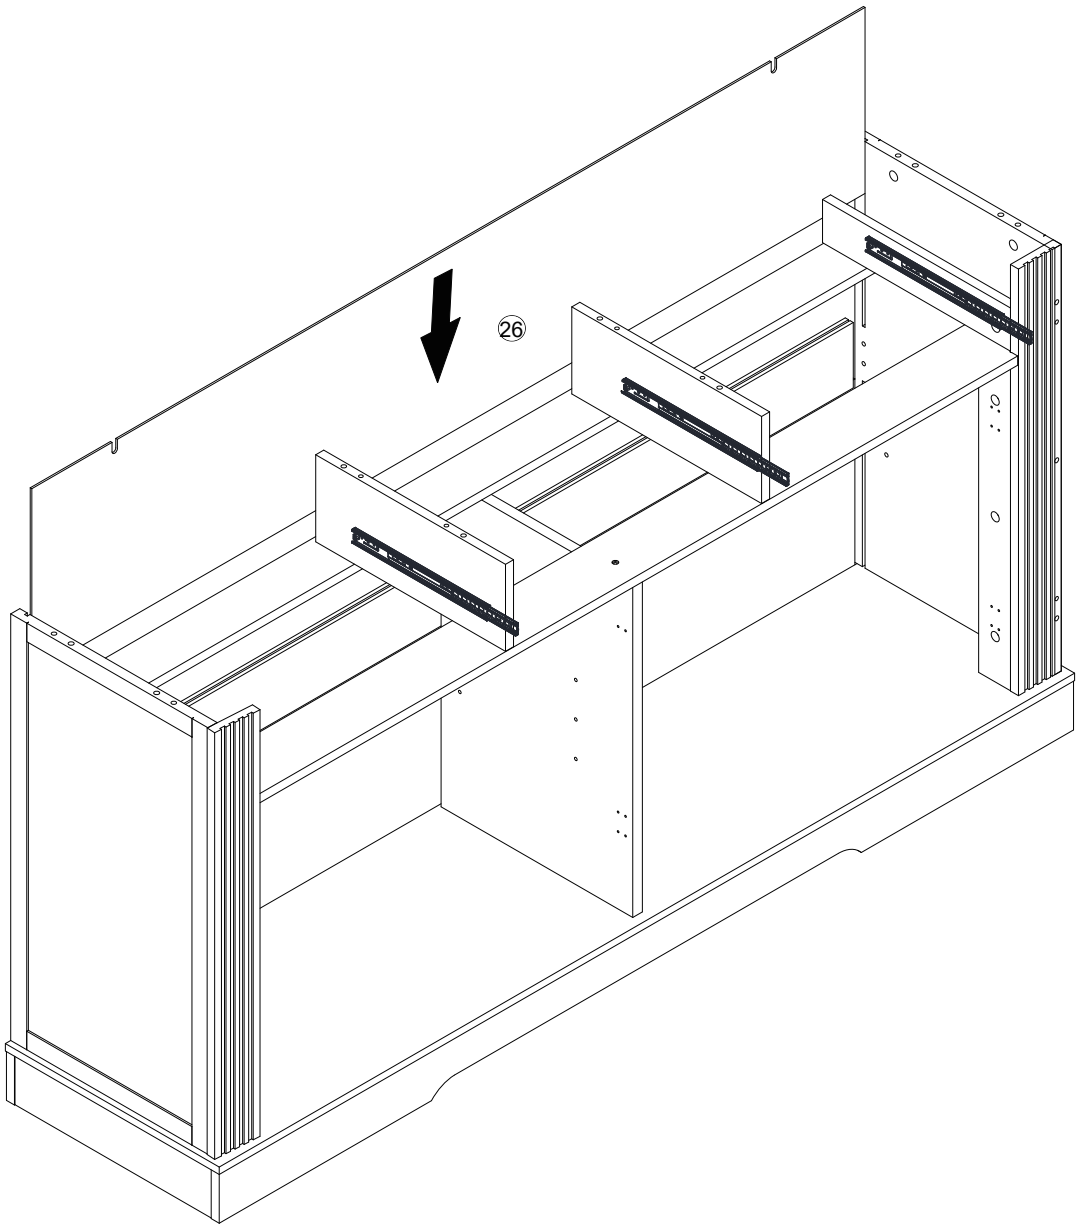



STEP 19

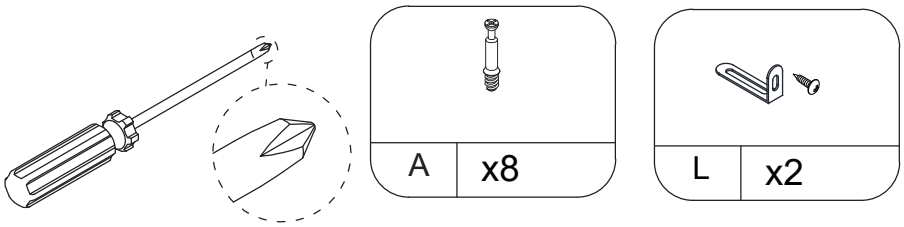


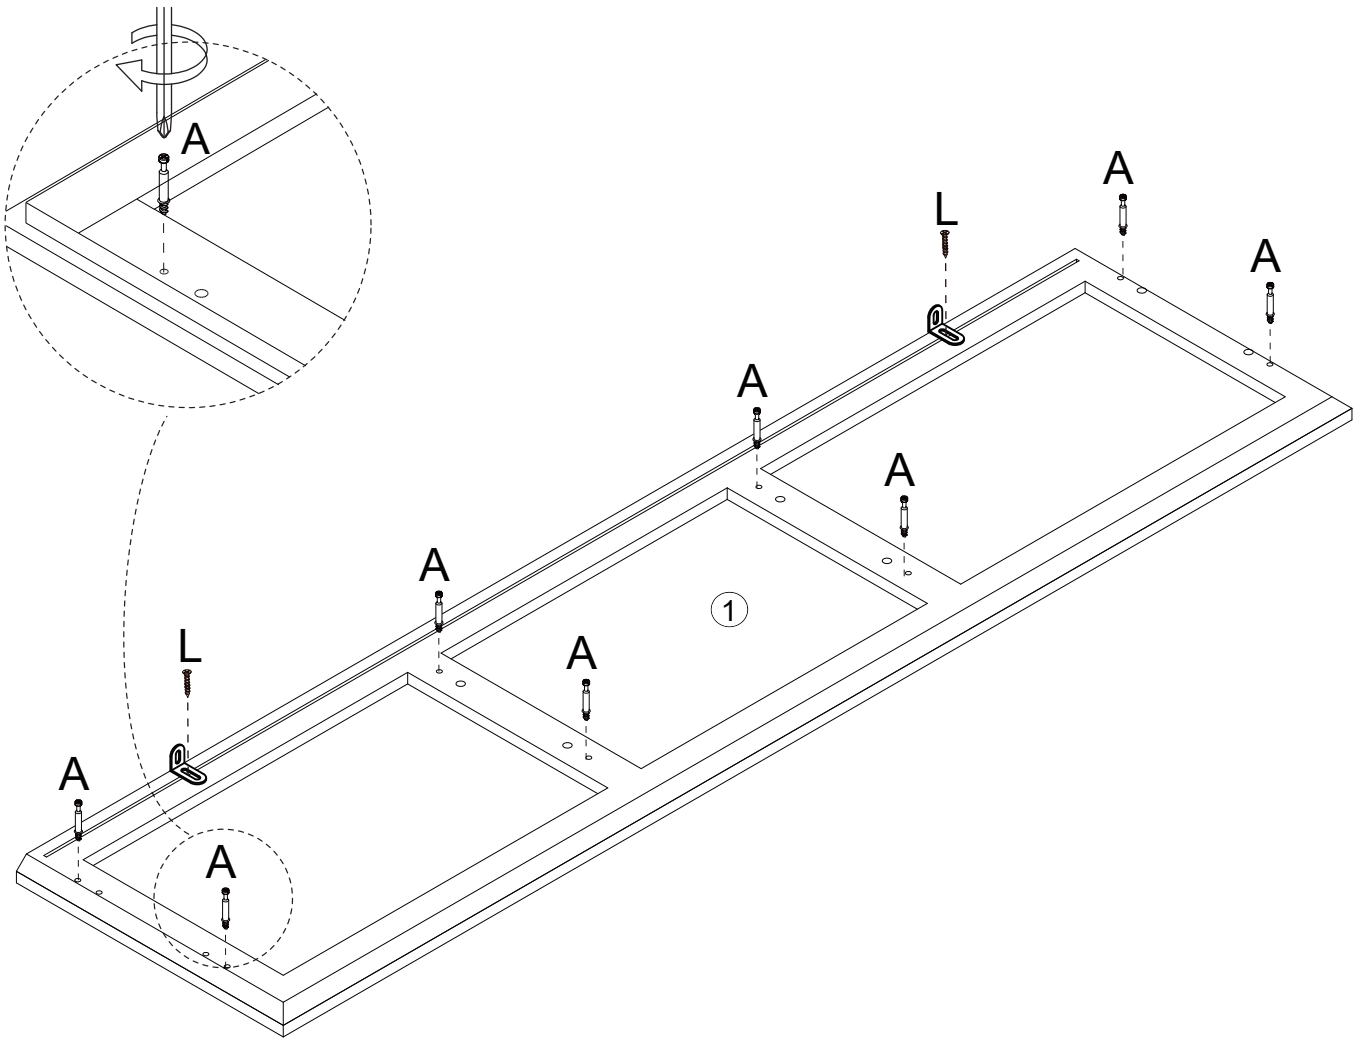


STEP 20

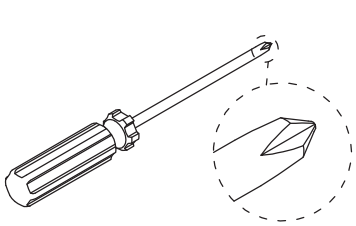


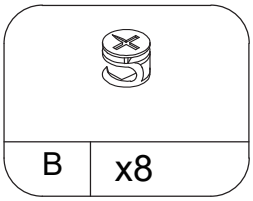


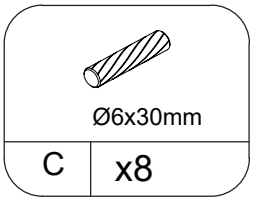

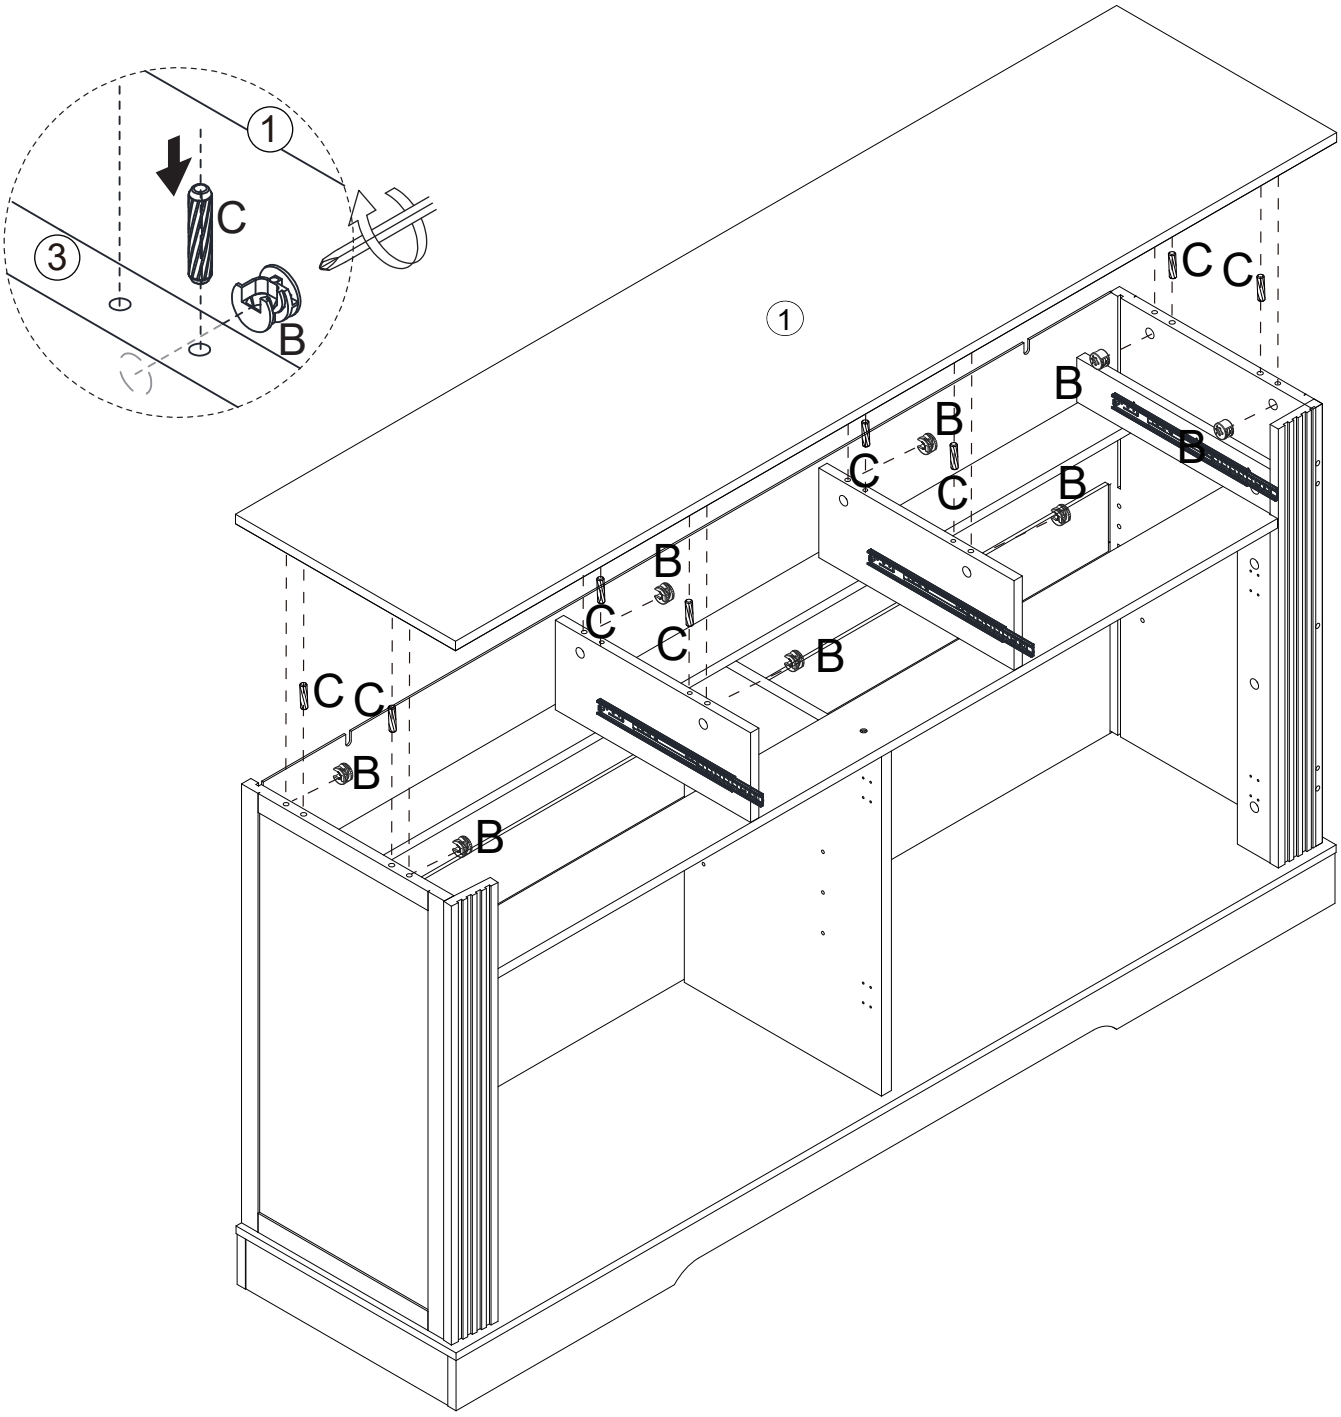


STEP 21

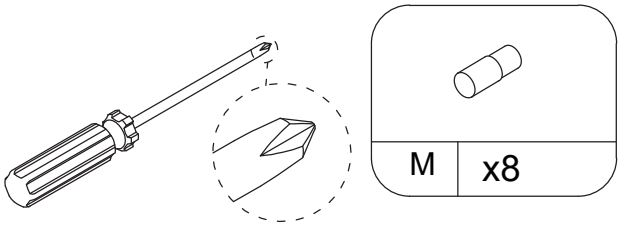

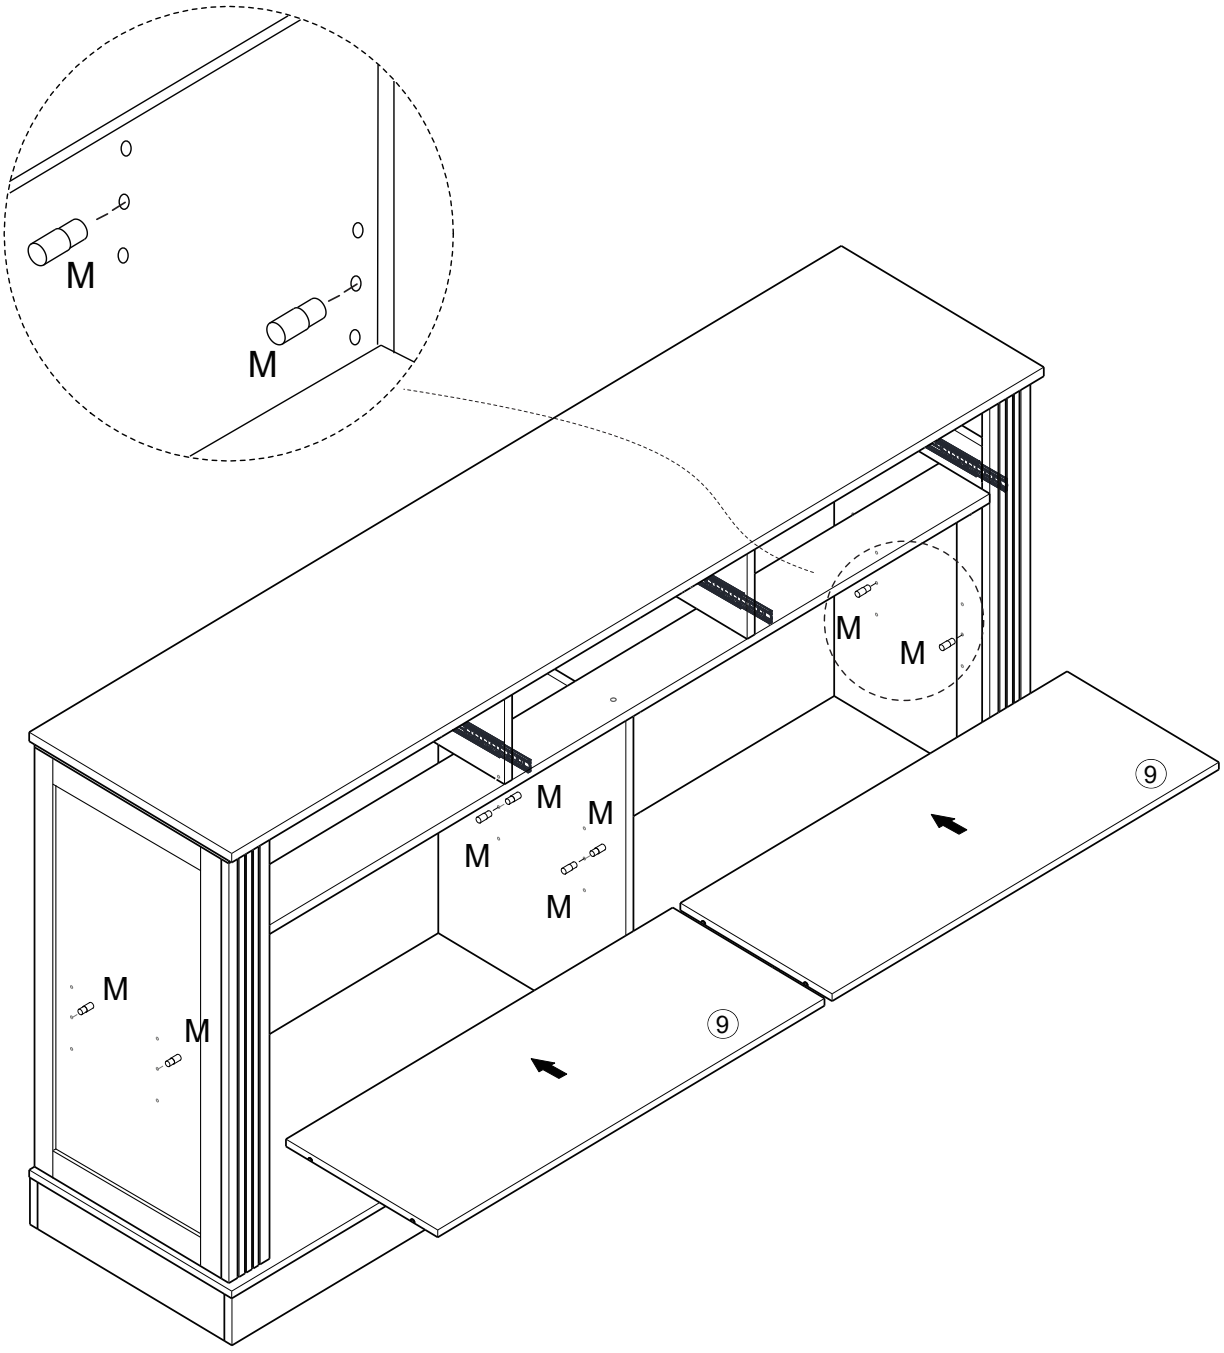

STEP 22

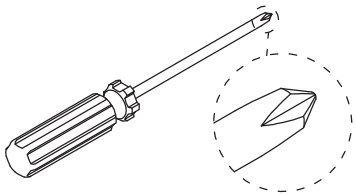

G	x8


F	x16


Ø3.5x12mm


I	x4


H	x8

Ø4x18mm

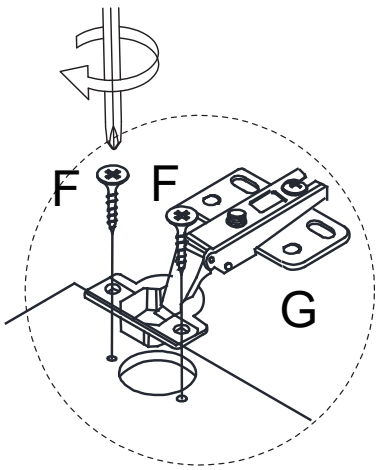


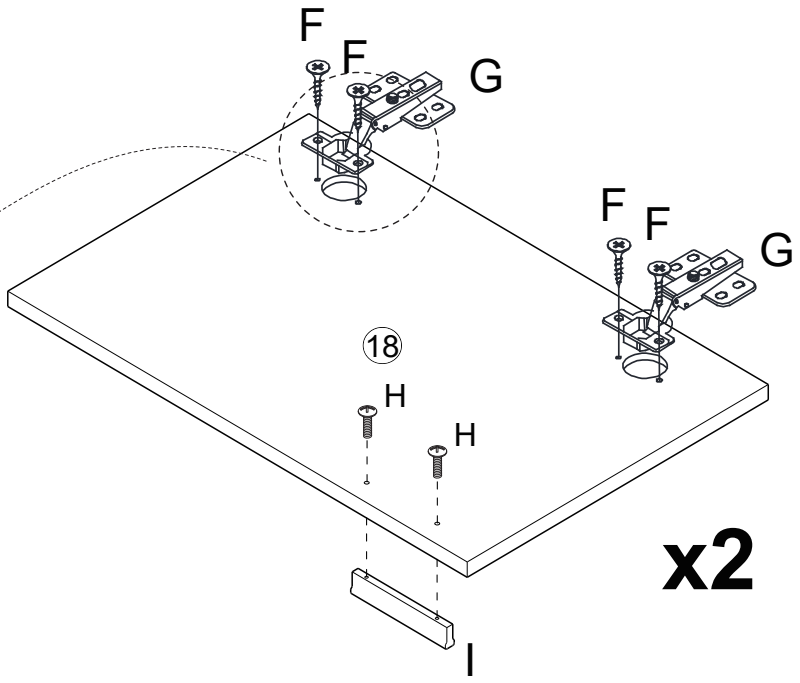


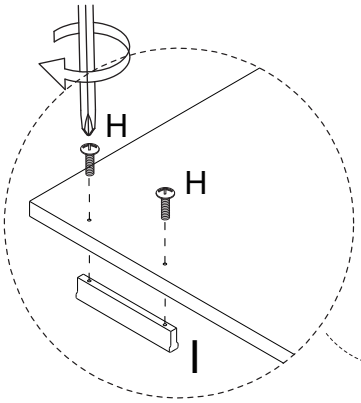


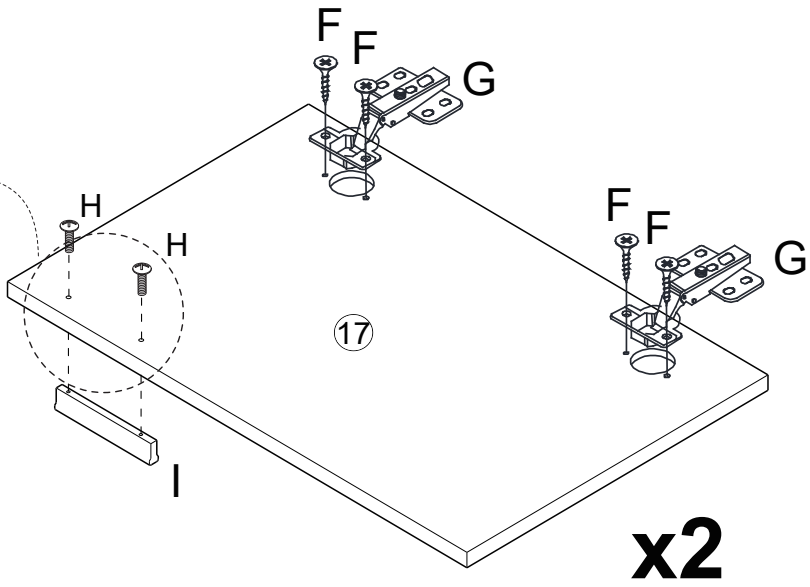



STEP 23

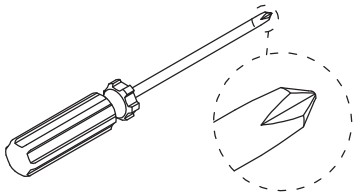

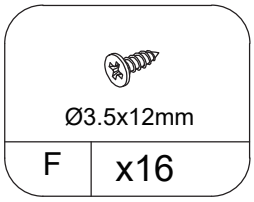


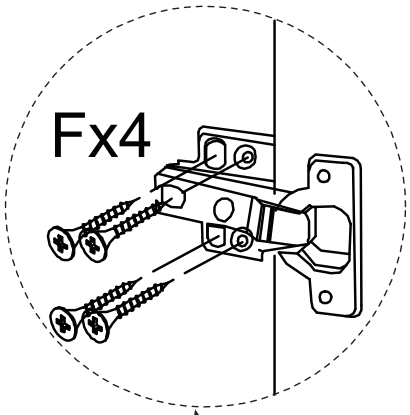


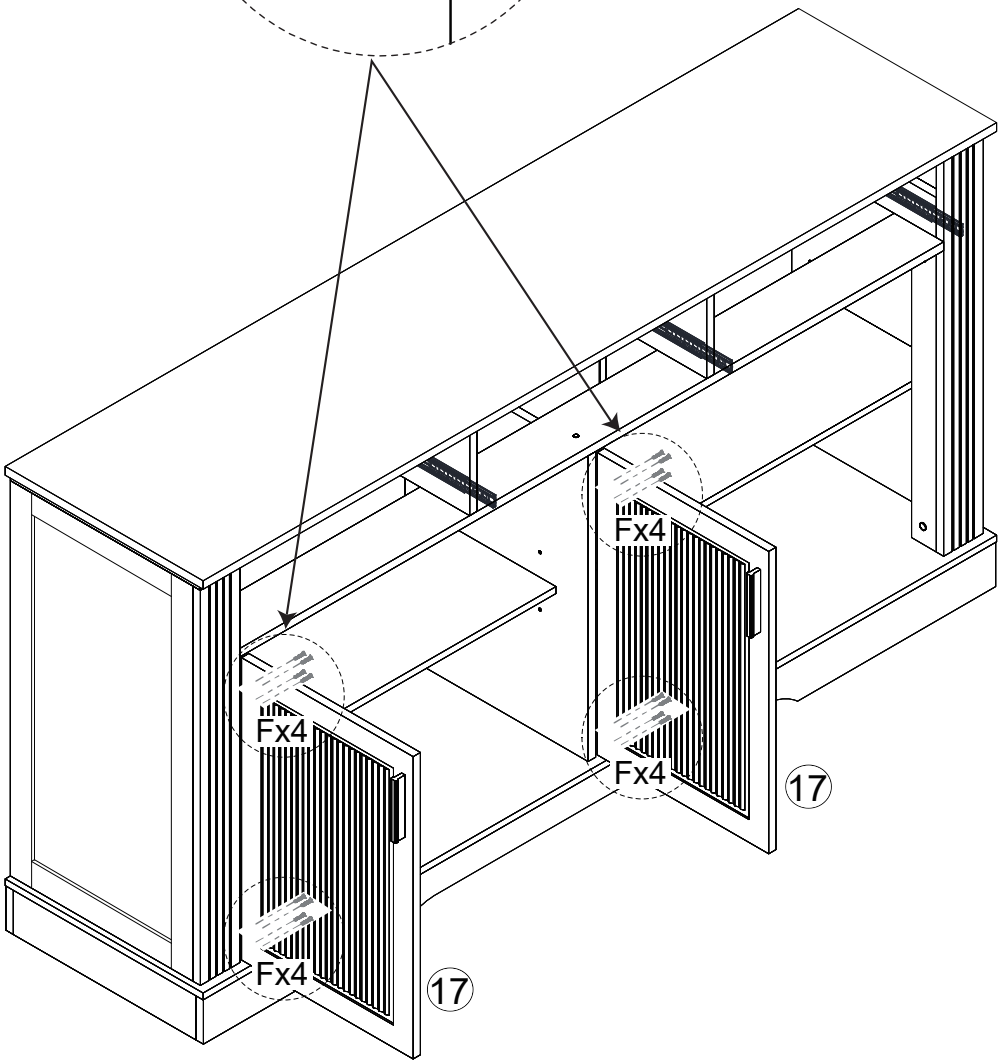


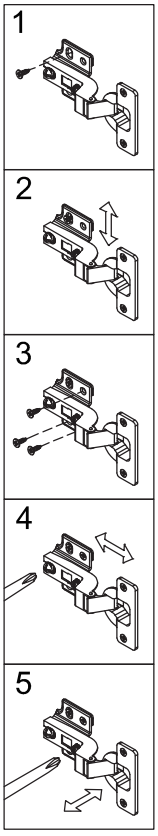



STEP 24

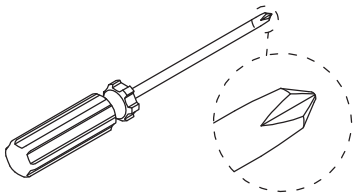

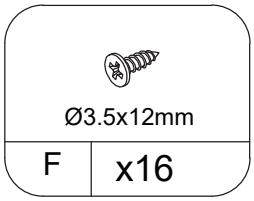


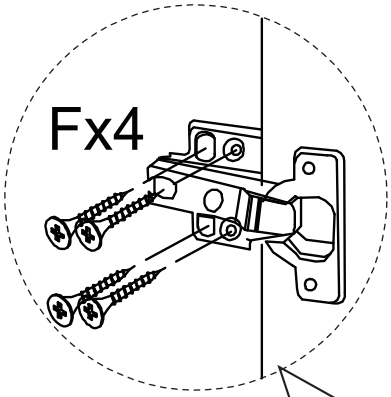


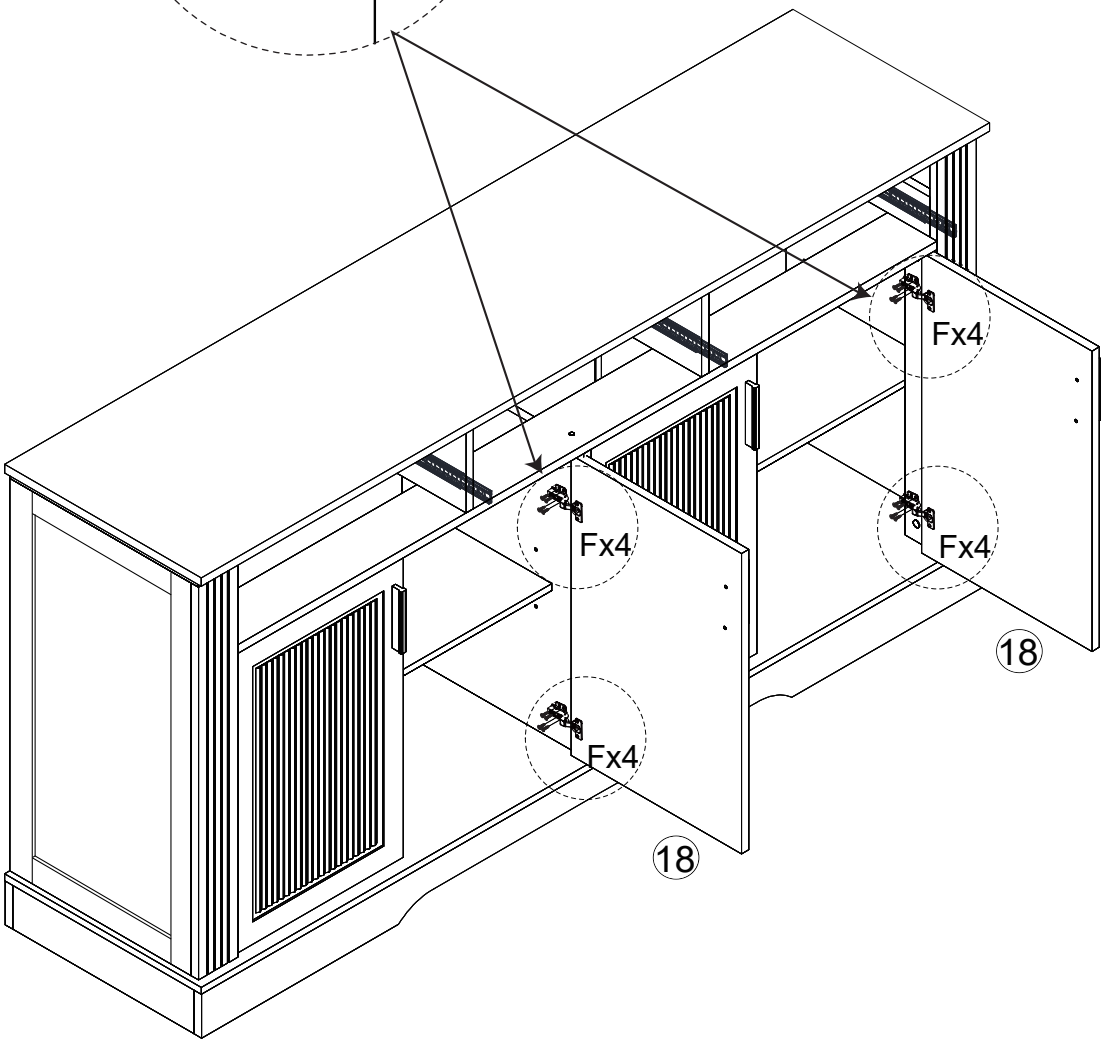

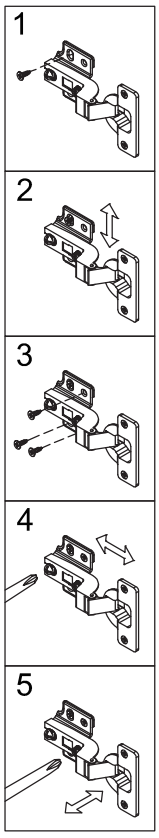


STEP 25

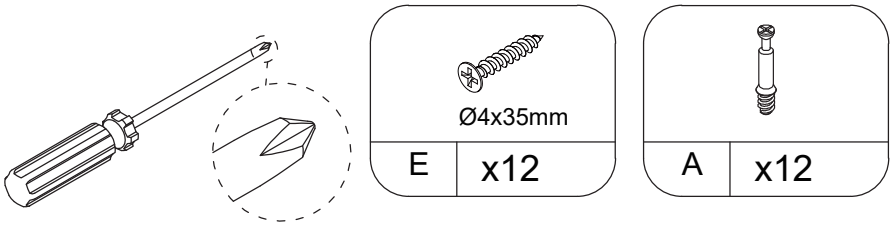

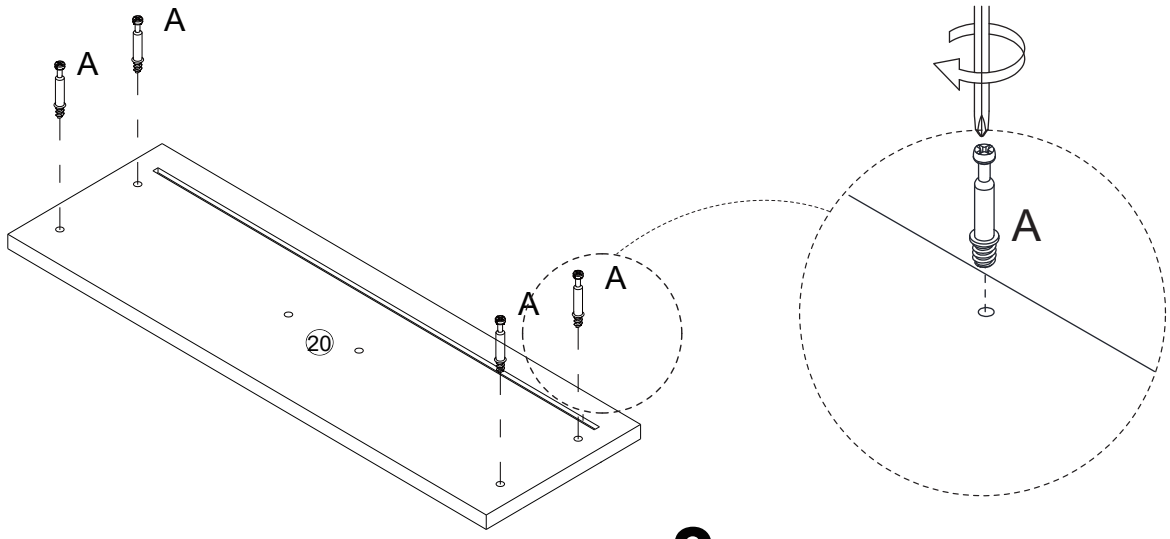



x3

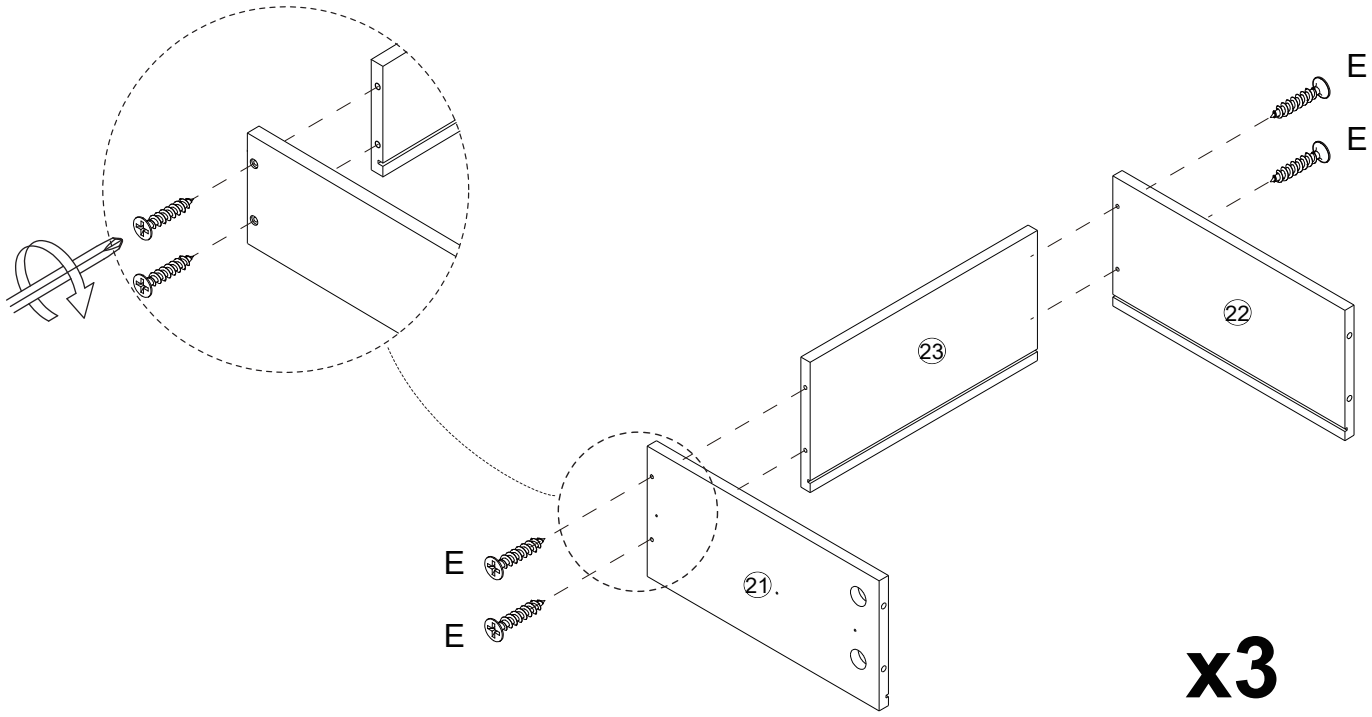


x3

STEP 26

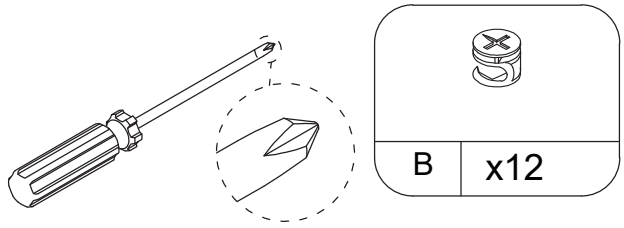

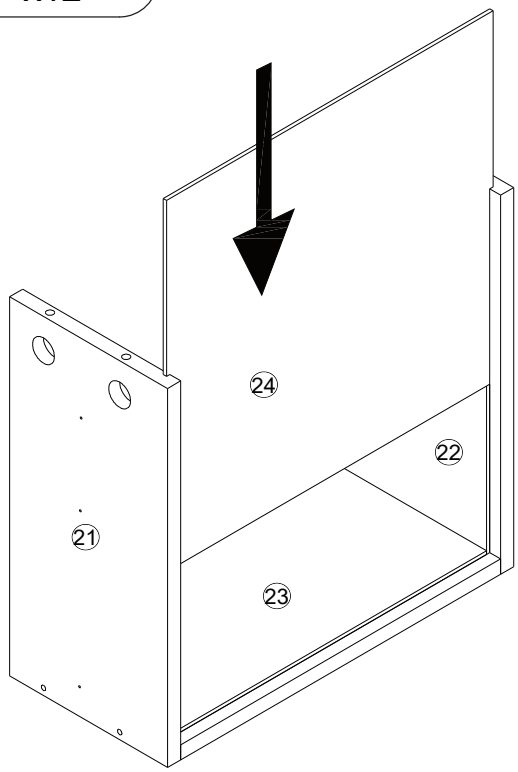



x3

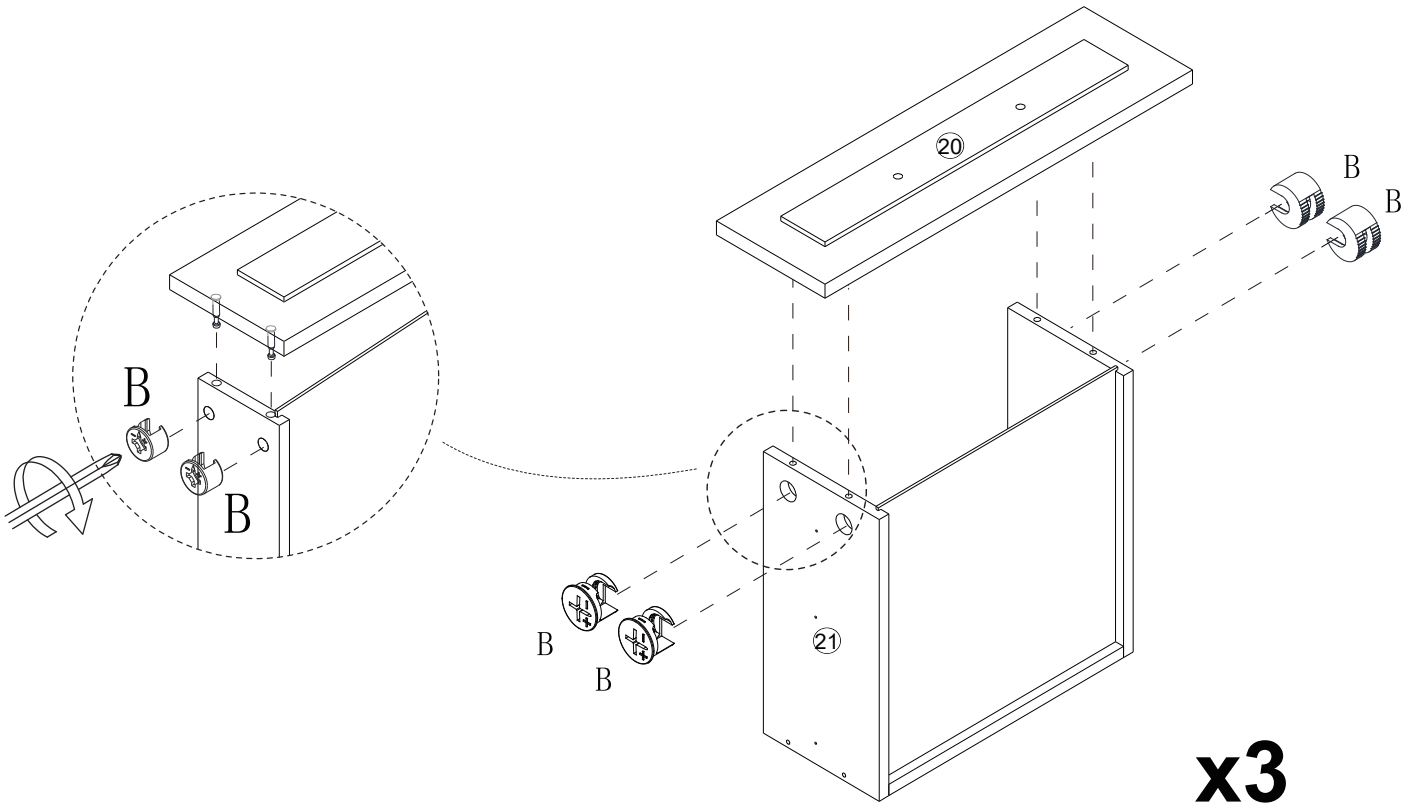



x3

STEP 27

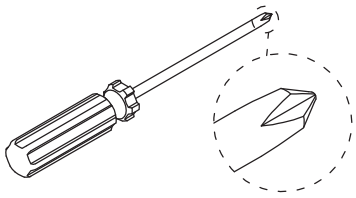

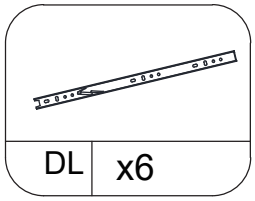


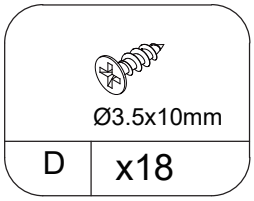

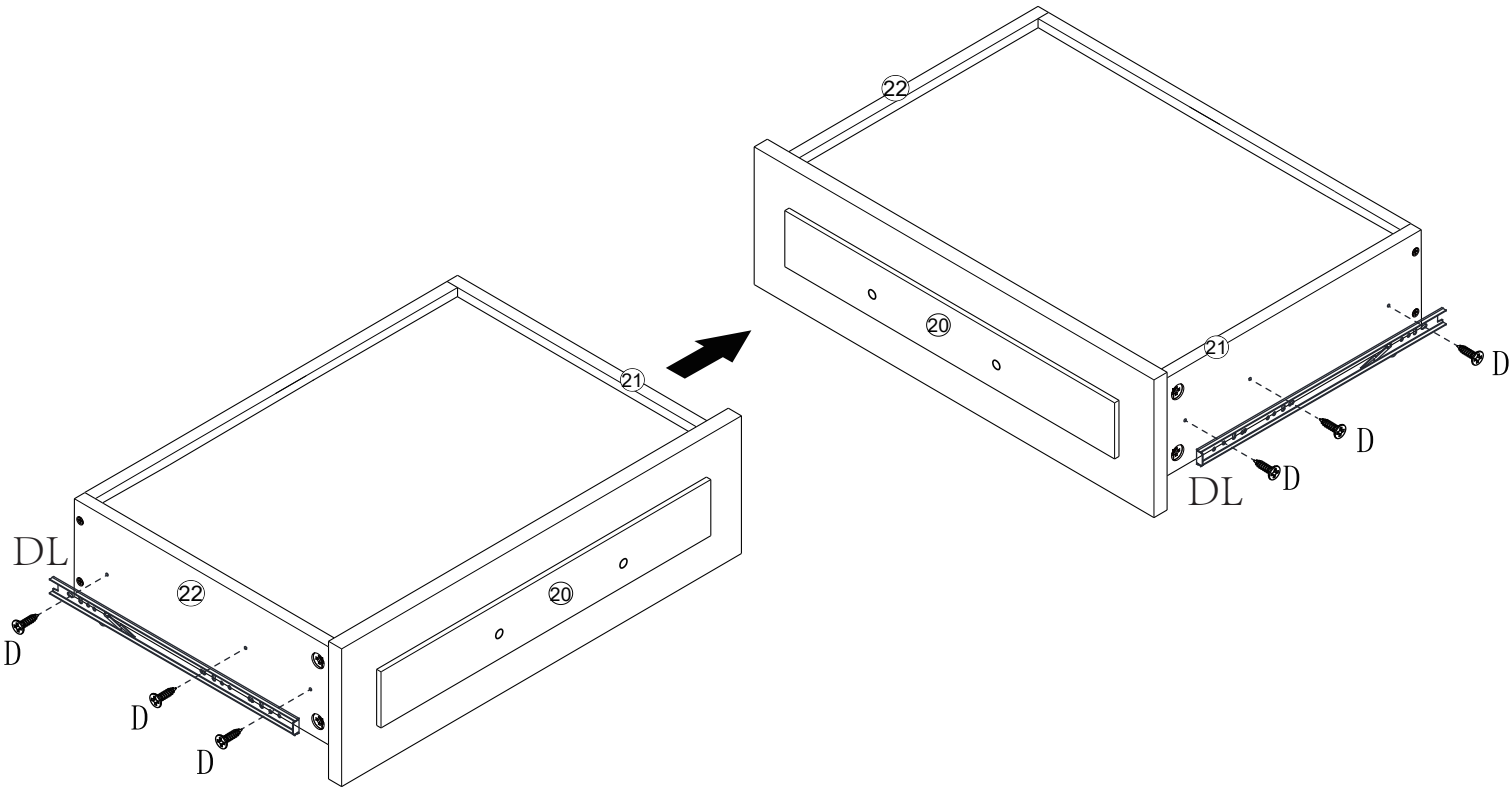



x3


REMARK:

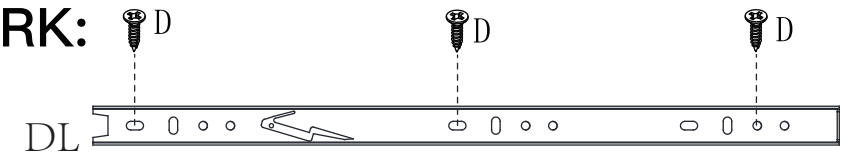


STEP 28

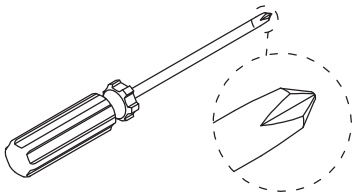

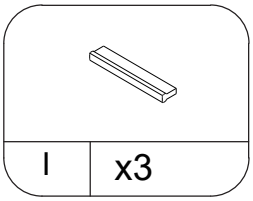


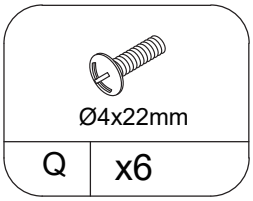

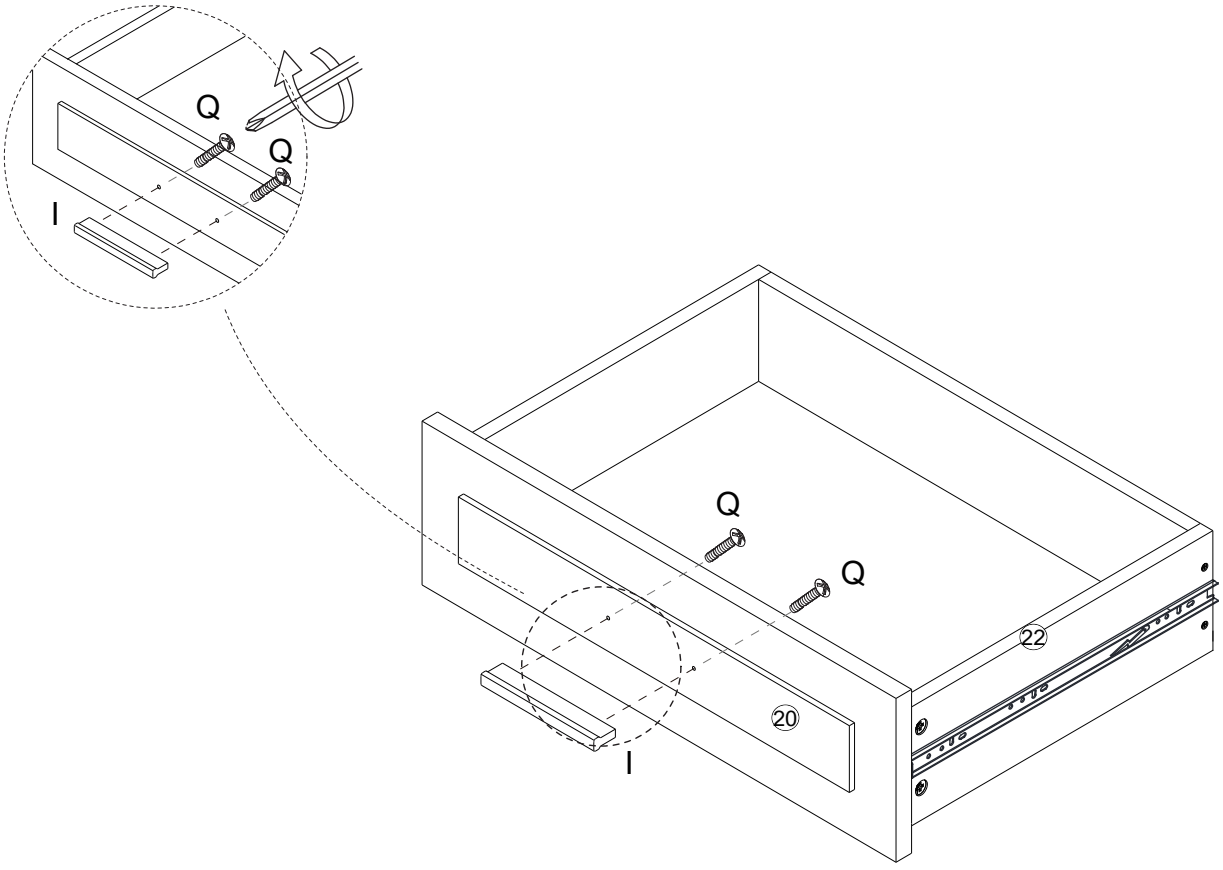



x3


STEP 29

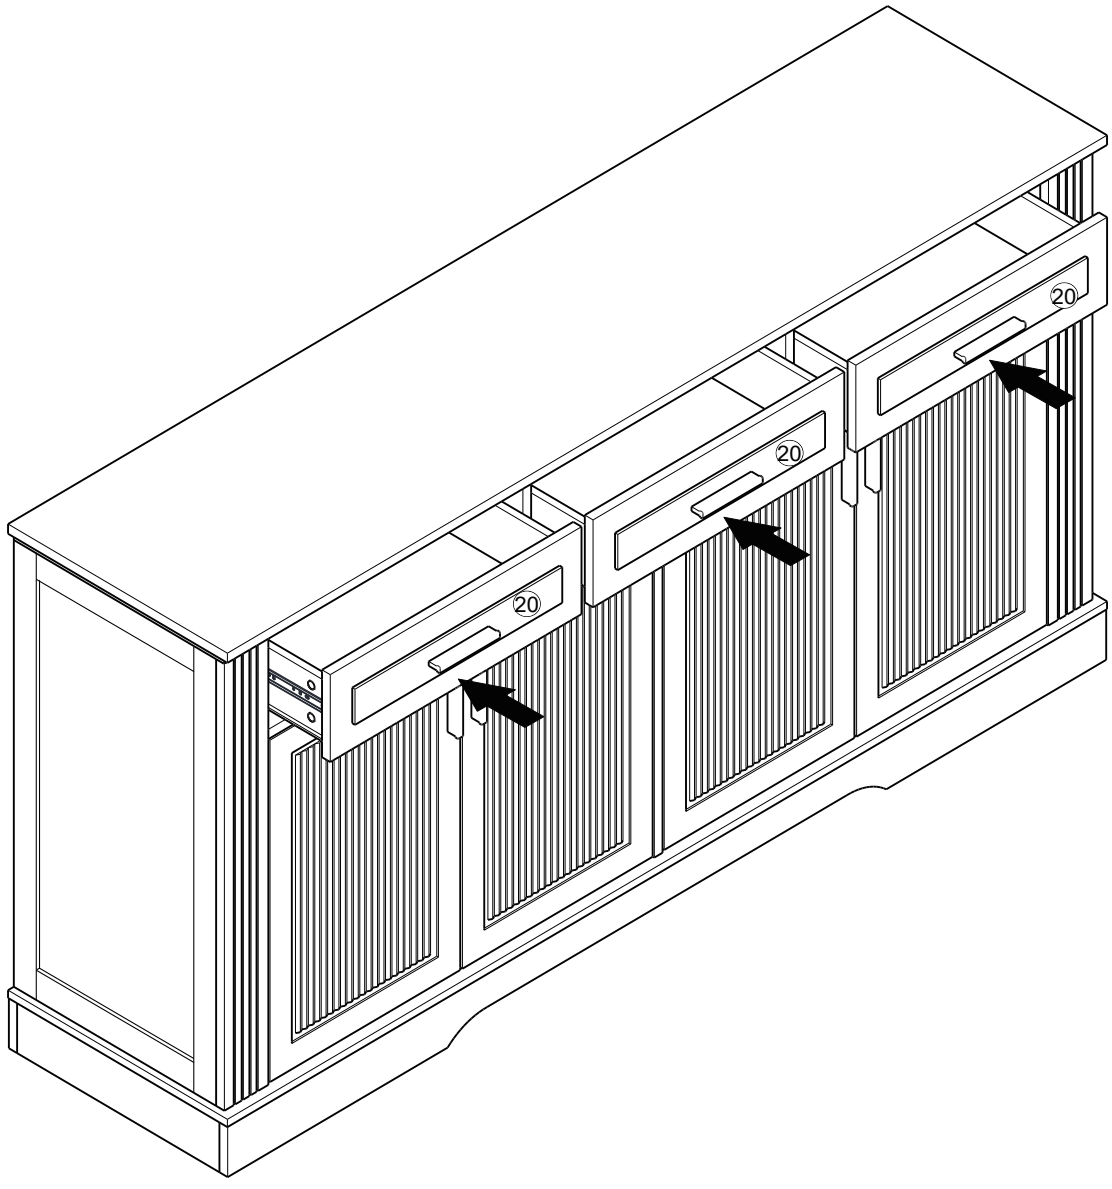



STEP 30

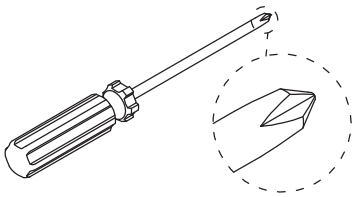

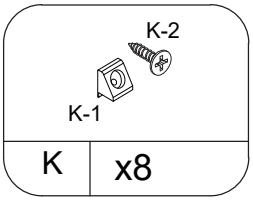


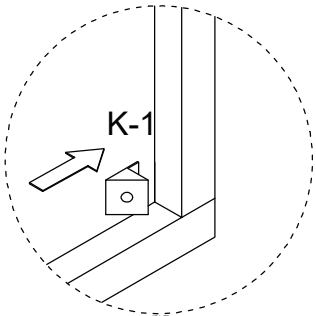


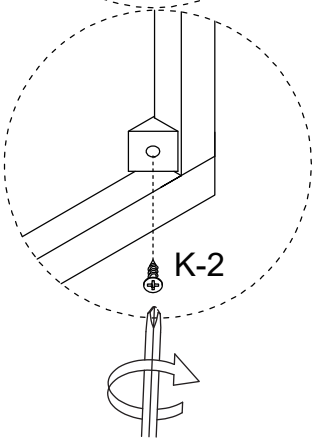


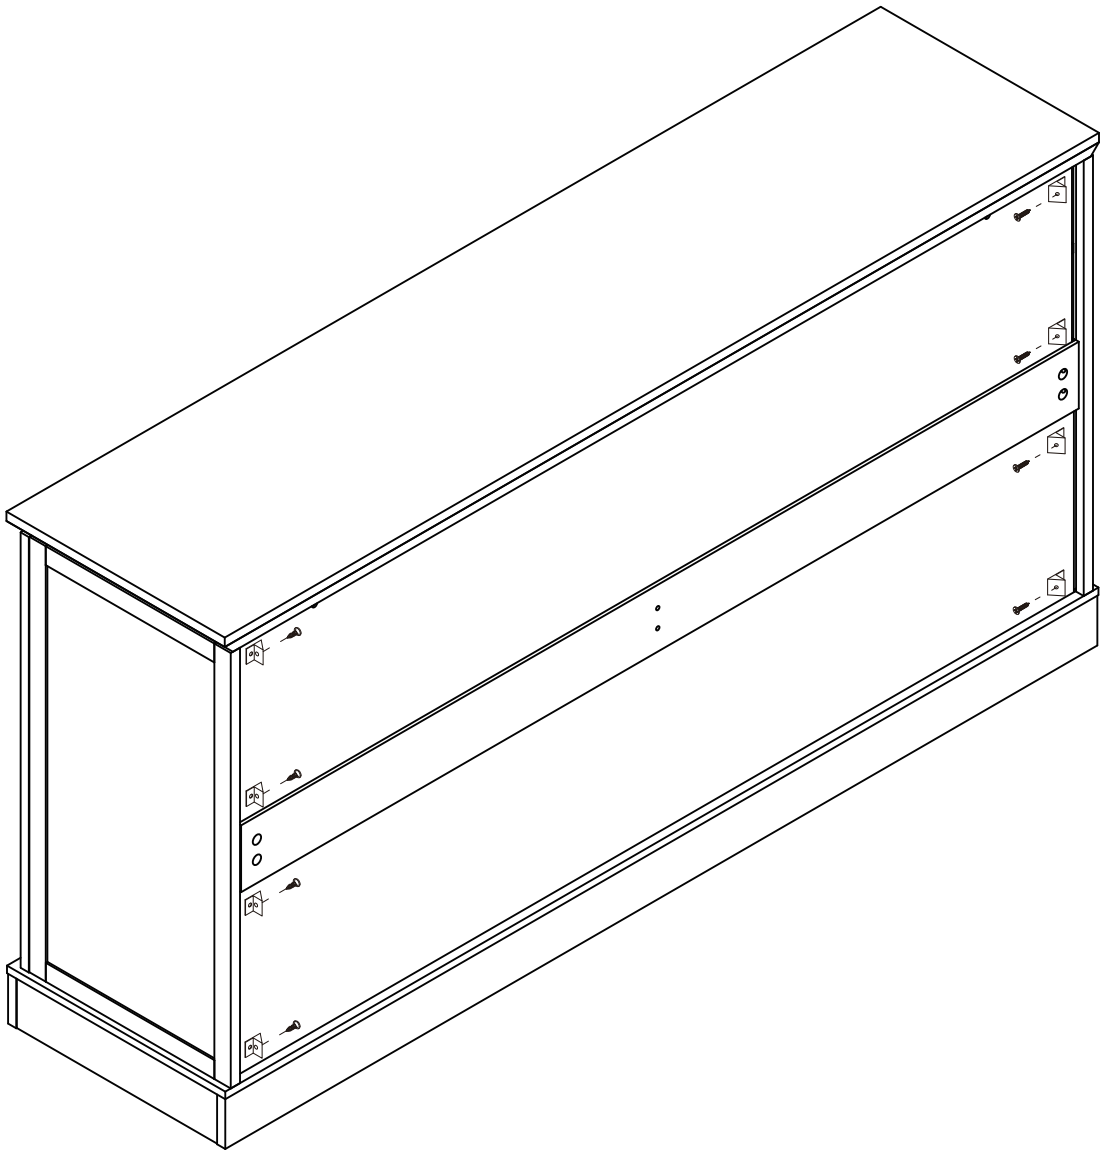


STEP 31

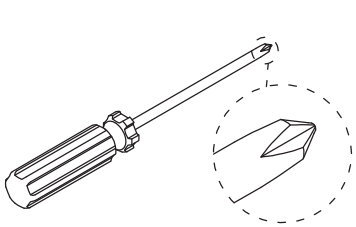

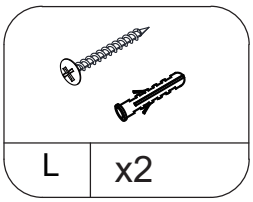

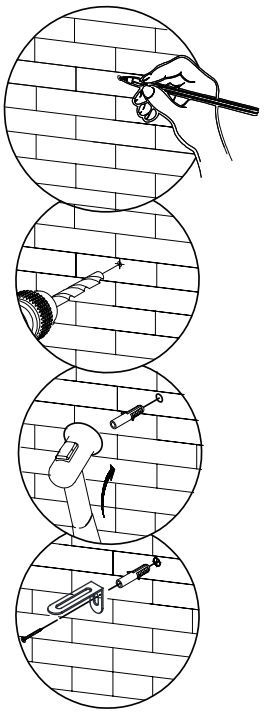

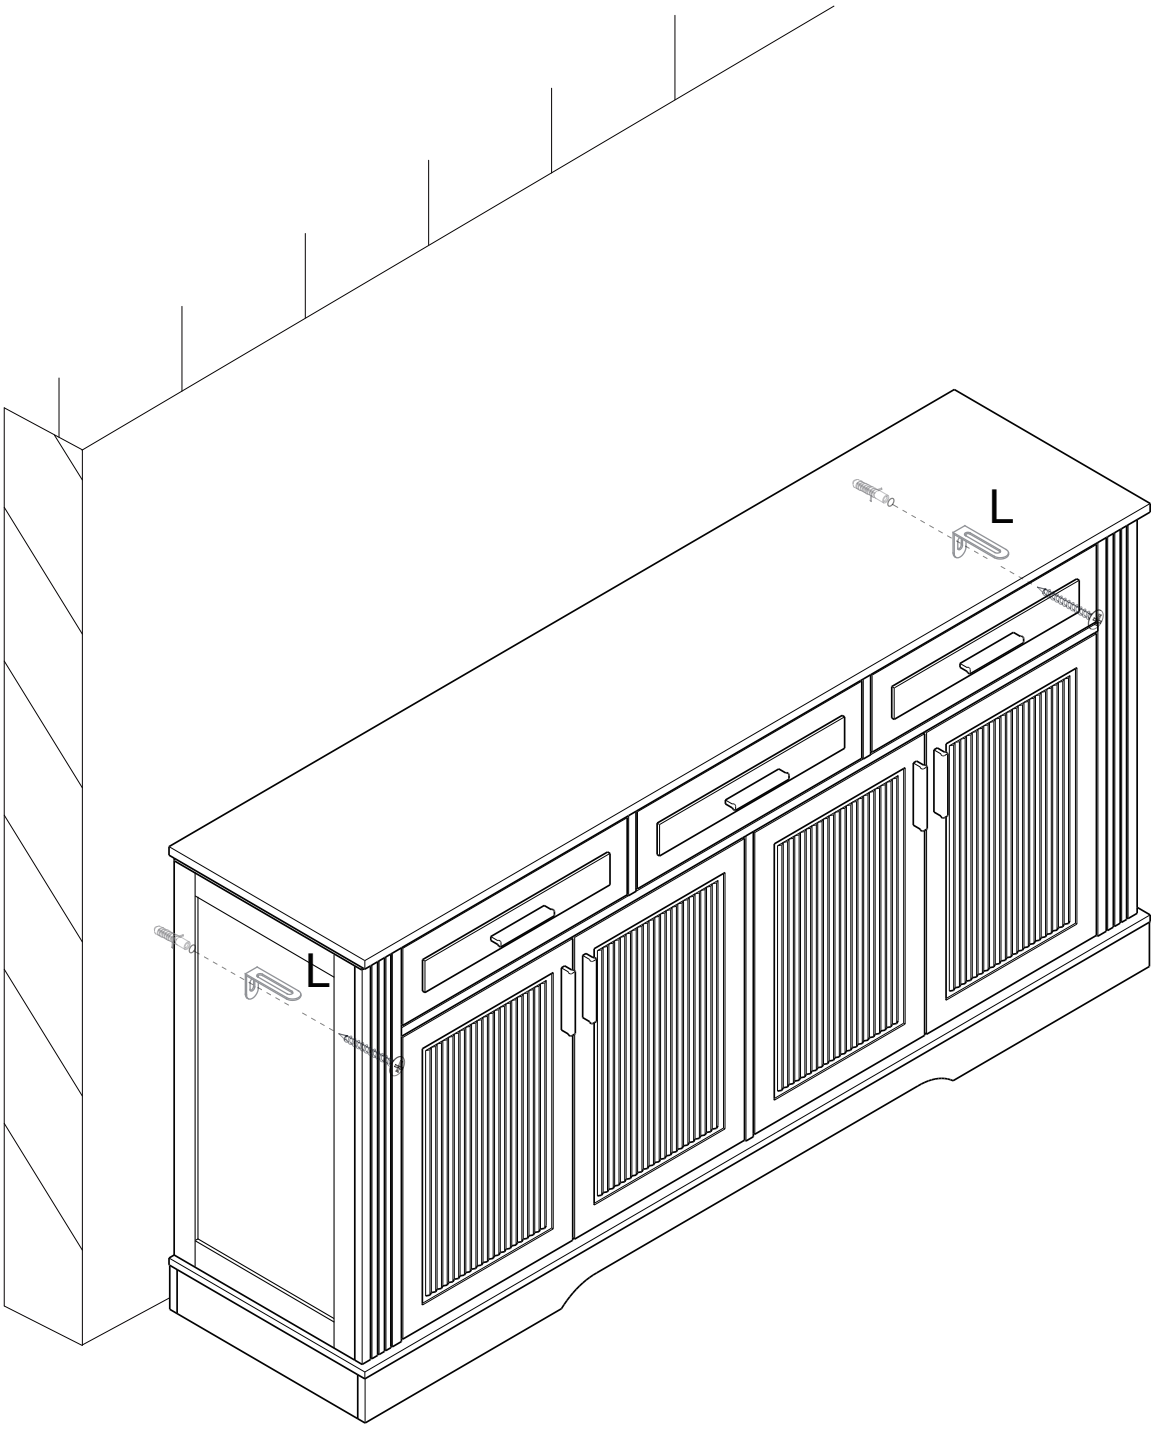

STEP 32

