Assembly Instructions

Caution : You must read this before you proceed

Care & Maintenance



- Not for commercial use. For residential use only.



- Furniture may scratch floors. We recommend using furniture pads to protect your floors.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture under direct sunlight.



- Do not place furniture near heating or cooling vents.



- Do not write on furniture without a padded barrier to protect the surface.



- Do not place furniture outside . For indoor use only.



- Stains may be removed with mild soap solution and damp cloth.



- Children should not climb or jump on the furniture.

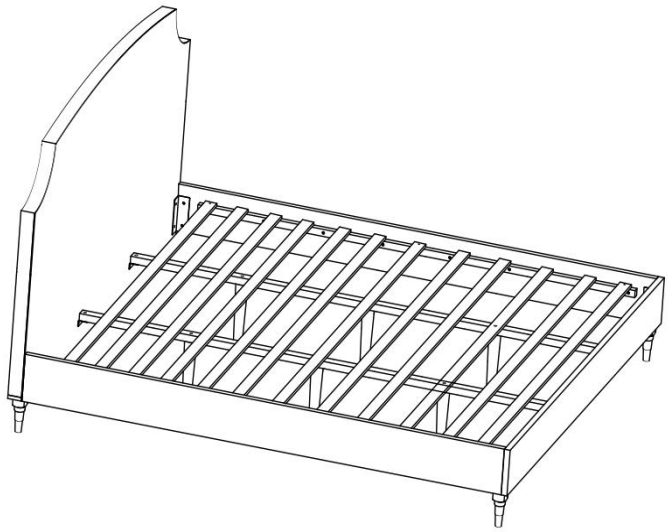


- Dust and pick-up spills using a clean, non-colored, lint-free cloth.

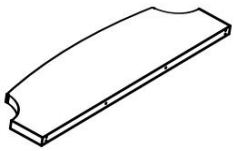
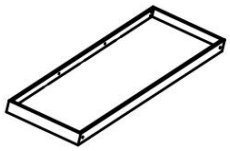
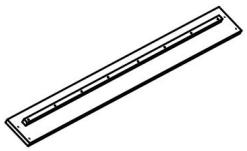
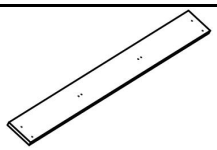
Please look in carton for hardware packs and legs.
Sets often ship in multiple boxes and may arrive a day or two apart.

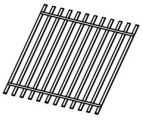
Upholstered Bed

N757P540480





Parts List N757P540480

Label	Picture	Description	QTY
A		Headboard A	1
B		Headboard B	1
C		Side rail	2
D		Footboard	1
E		Leg	4
F		L-Iron F	2
G		L-Iron G	2

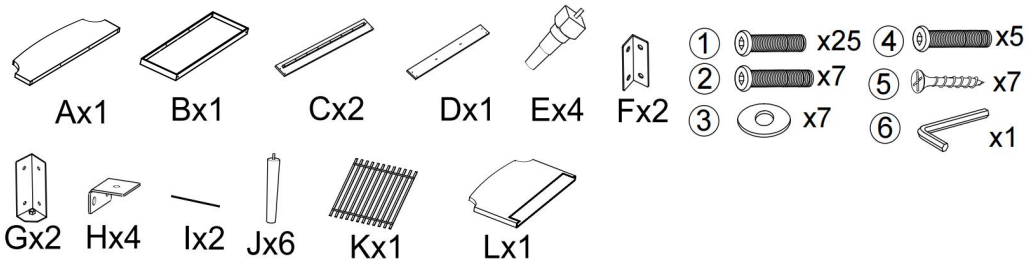
H		Iron Bracket	4
I		Center Rail	2
J		Middle support leg	6
K		Bed Slat	1
L		Fabric Cover	1

Hardware N757P540480

Label	Picture	Description	QTY
①		Bolt Ø1/4"×1"	25
②		Bolt Ø5/16"×1-1/2"	7
③		Flat Washer Ø5/16"×19mm×1.5	7
④		Bolt Ø1/4"×1-1/2"	5
⑤		Screw #8×1"	7
⑥		Allen Wrench 4.0×21×57	1
⑦		Screwdriver (Not provided)	1

Assembly Preparation

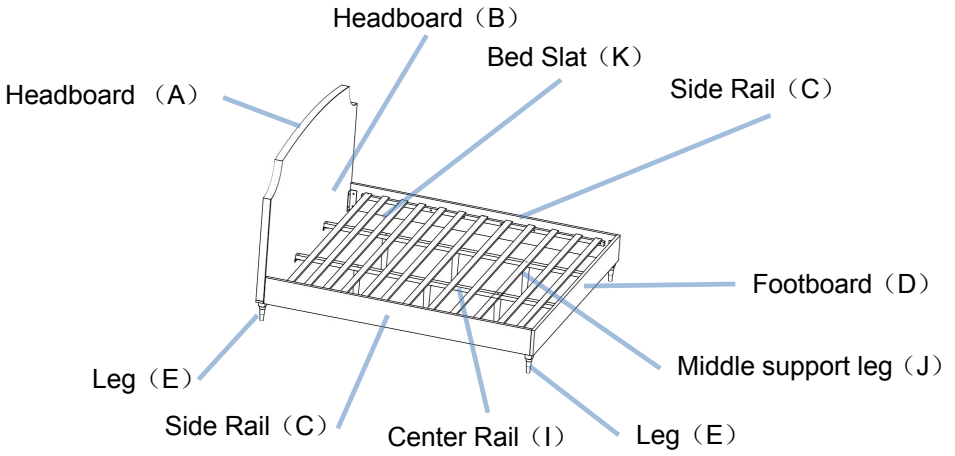
Before Beginning Assembly :



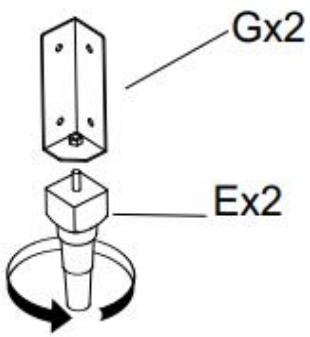
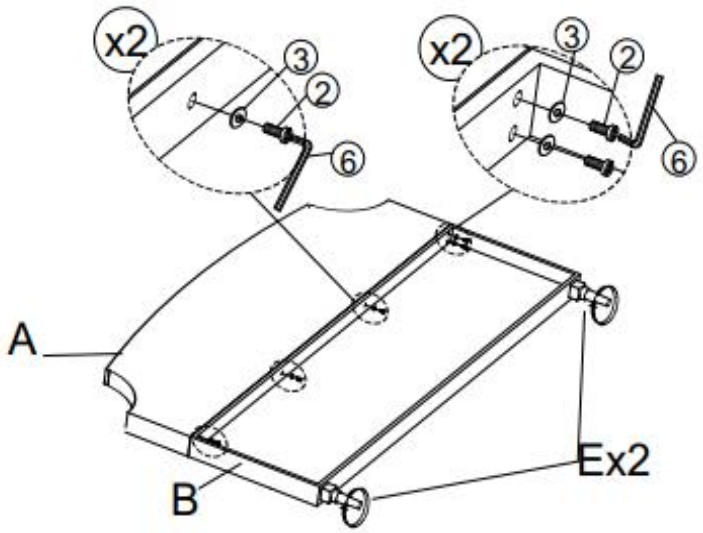
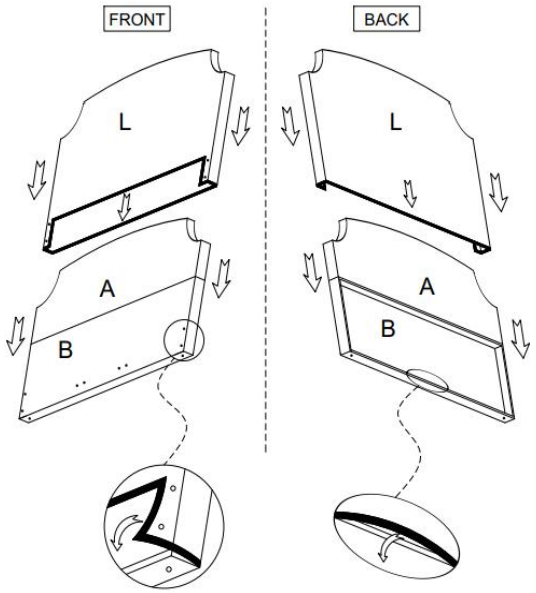
- Read instructions, cover to cover-
- Have 2 adults on hand for assembly-
- Do not assemble on flooring or carpet-
- Assemble on a clean non-marring surface (packing foam)-
- Save all packaging until finished-

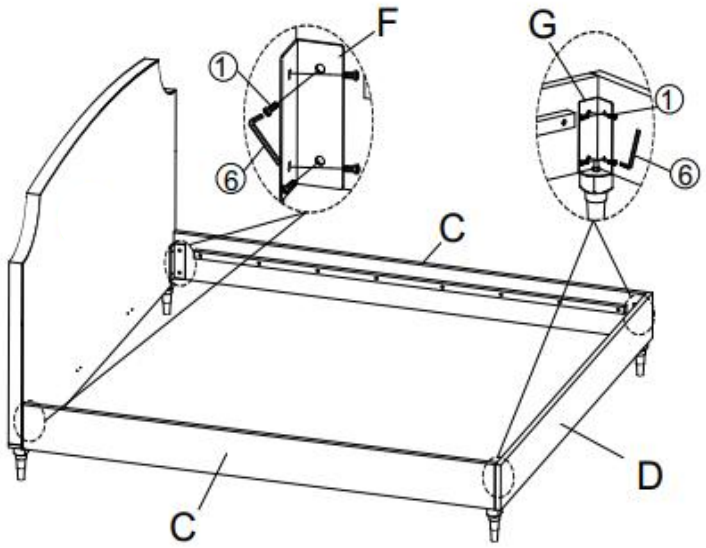
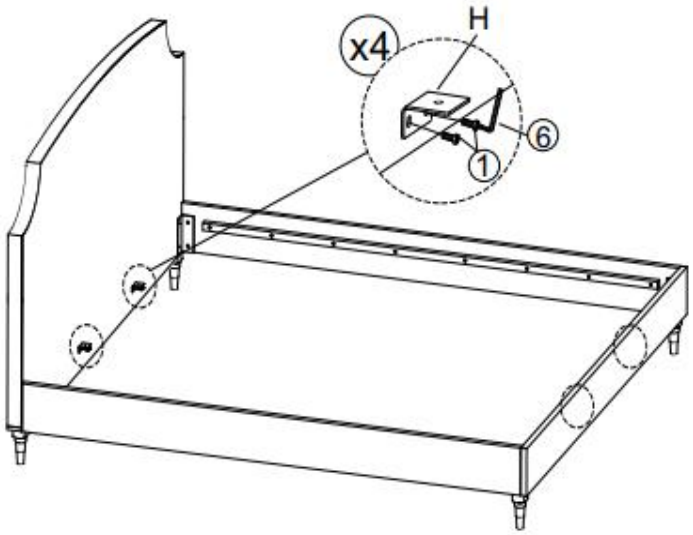
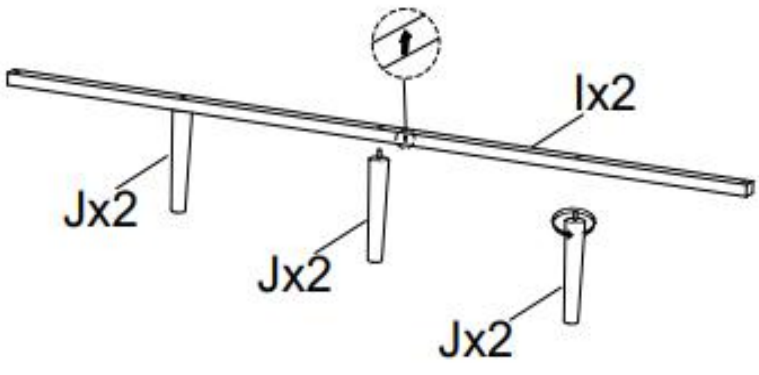
Assembly Steps

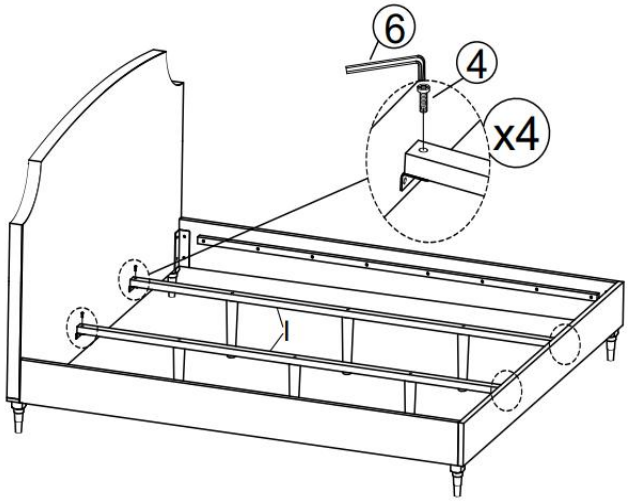
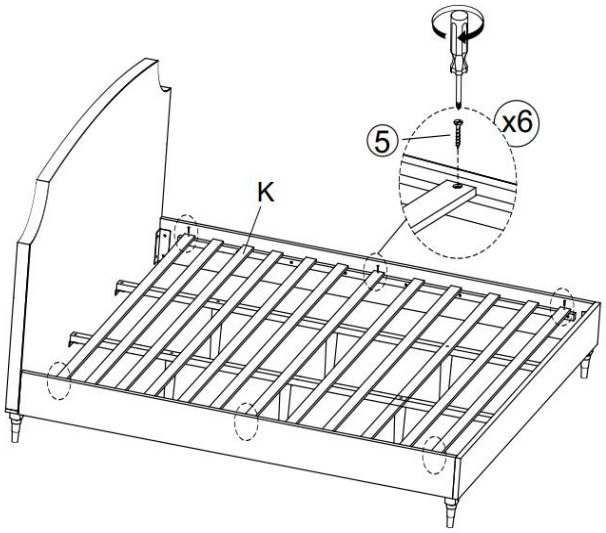
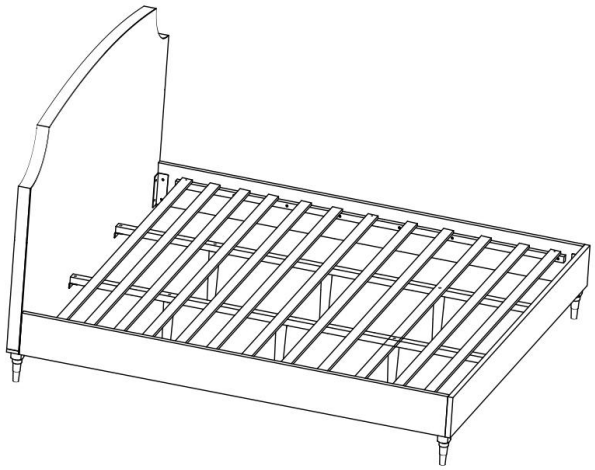
Overview



This Upholstered Bed has multiple parts and may require up to some 30 minutes to assemble. To give you an overview of the Upholstered Bed parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

Step 1	
Attach Leg（E）to L-Iron（G）,as pictured above.	
Step 2	
1.Attach Leg（E）to Headboard（B）,as pictured above. 2.Attach Headboard（A）to Headboard（B）by using Bolt（②）, Flat Washer（③） and Allen Wrench（⑥）, as pictured above.	
Step 3	
Insert Fabric Cover (L) into Headboard(A/B), and align the holes on Fabric cover with the holes on Headboard(A/B), move the fabric on the Nylon fastener for fixing, as pictured above.	

Step4	
Attach L-Iron（F/G）to Side rail（C）,Headboard（B）and Footboard（D）by using Bolt（①）and Allen Wrench（⑥）, as pictured above.	
Step 5	
Attach Iron Bracket（H）to Headboard（B）and Footboard（D）by using Bolt（①）and Allen Wrench（⑥）, as pictured above.	
Step 6	
Install Middle support legs (J) on Center Rail (I) , as pictured above.	

Step 7	
Attach Center Rail (I) to Iron Bracket (H) by using Bolt (④) and Allen Wrench (⑥), as pictured above.	
Step 8	
Attach Bed Slat（K）to Side rail（C） by using Screw（⑤）, as pictured above.	
Step 9	
This Upholstered Bed is ready for use. This Upholstered Bed can only be used on a flat, level surface.	