


DOOR RUBBING ON INNER TOP FRAME

TURN THE SCREW ANTI-CLOCKWISE 1/4 OF A TURN TO
PUSH THE HINGE OUT FROM THE CABINET

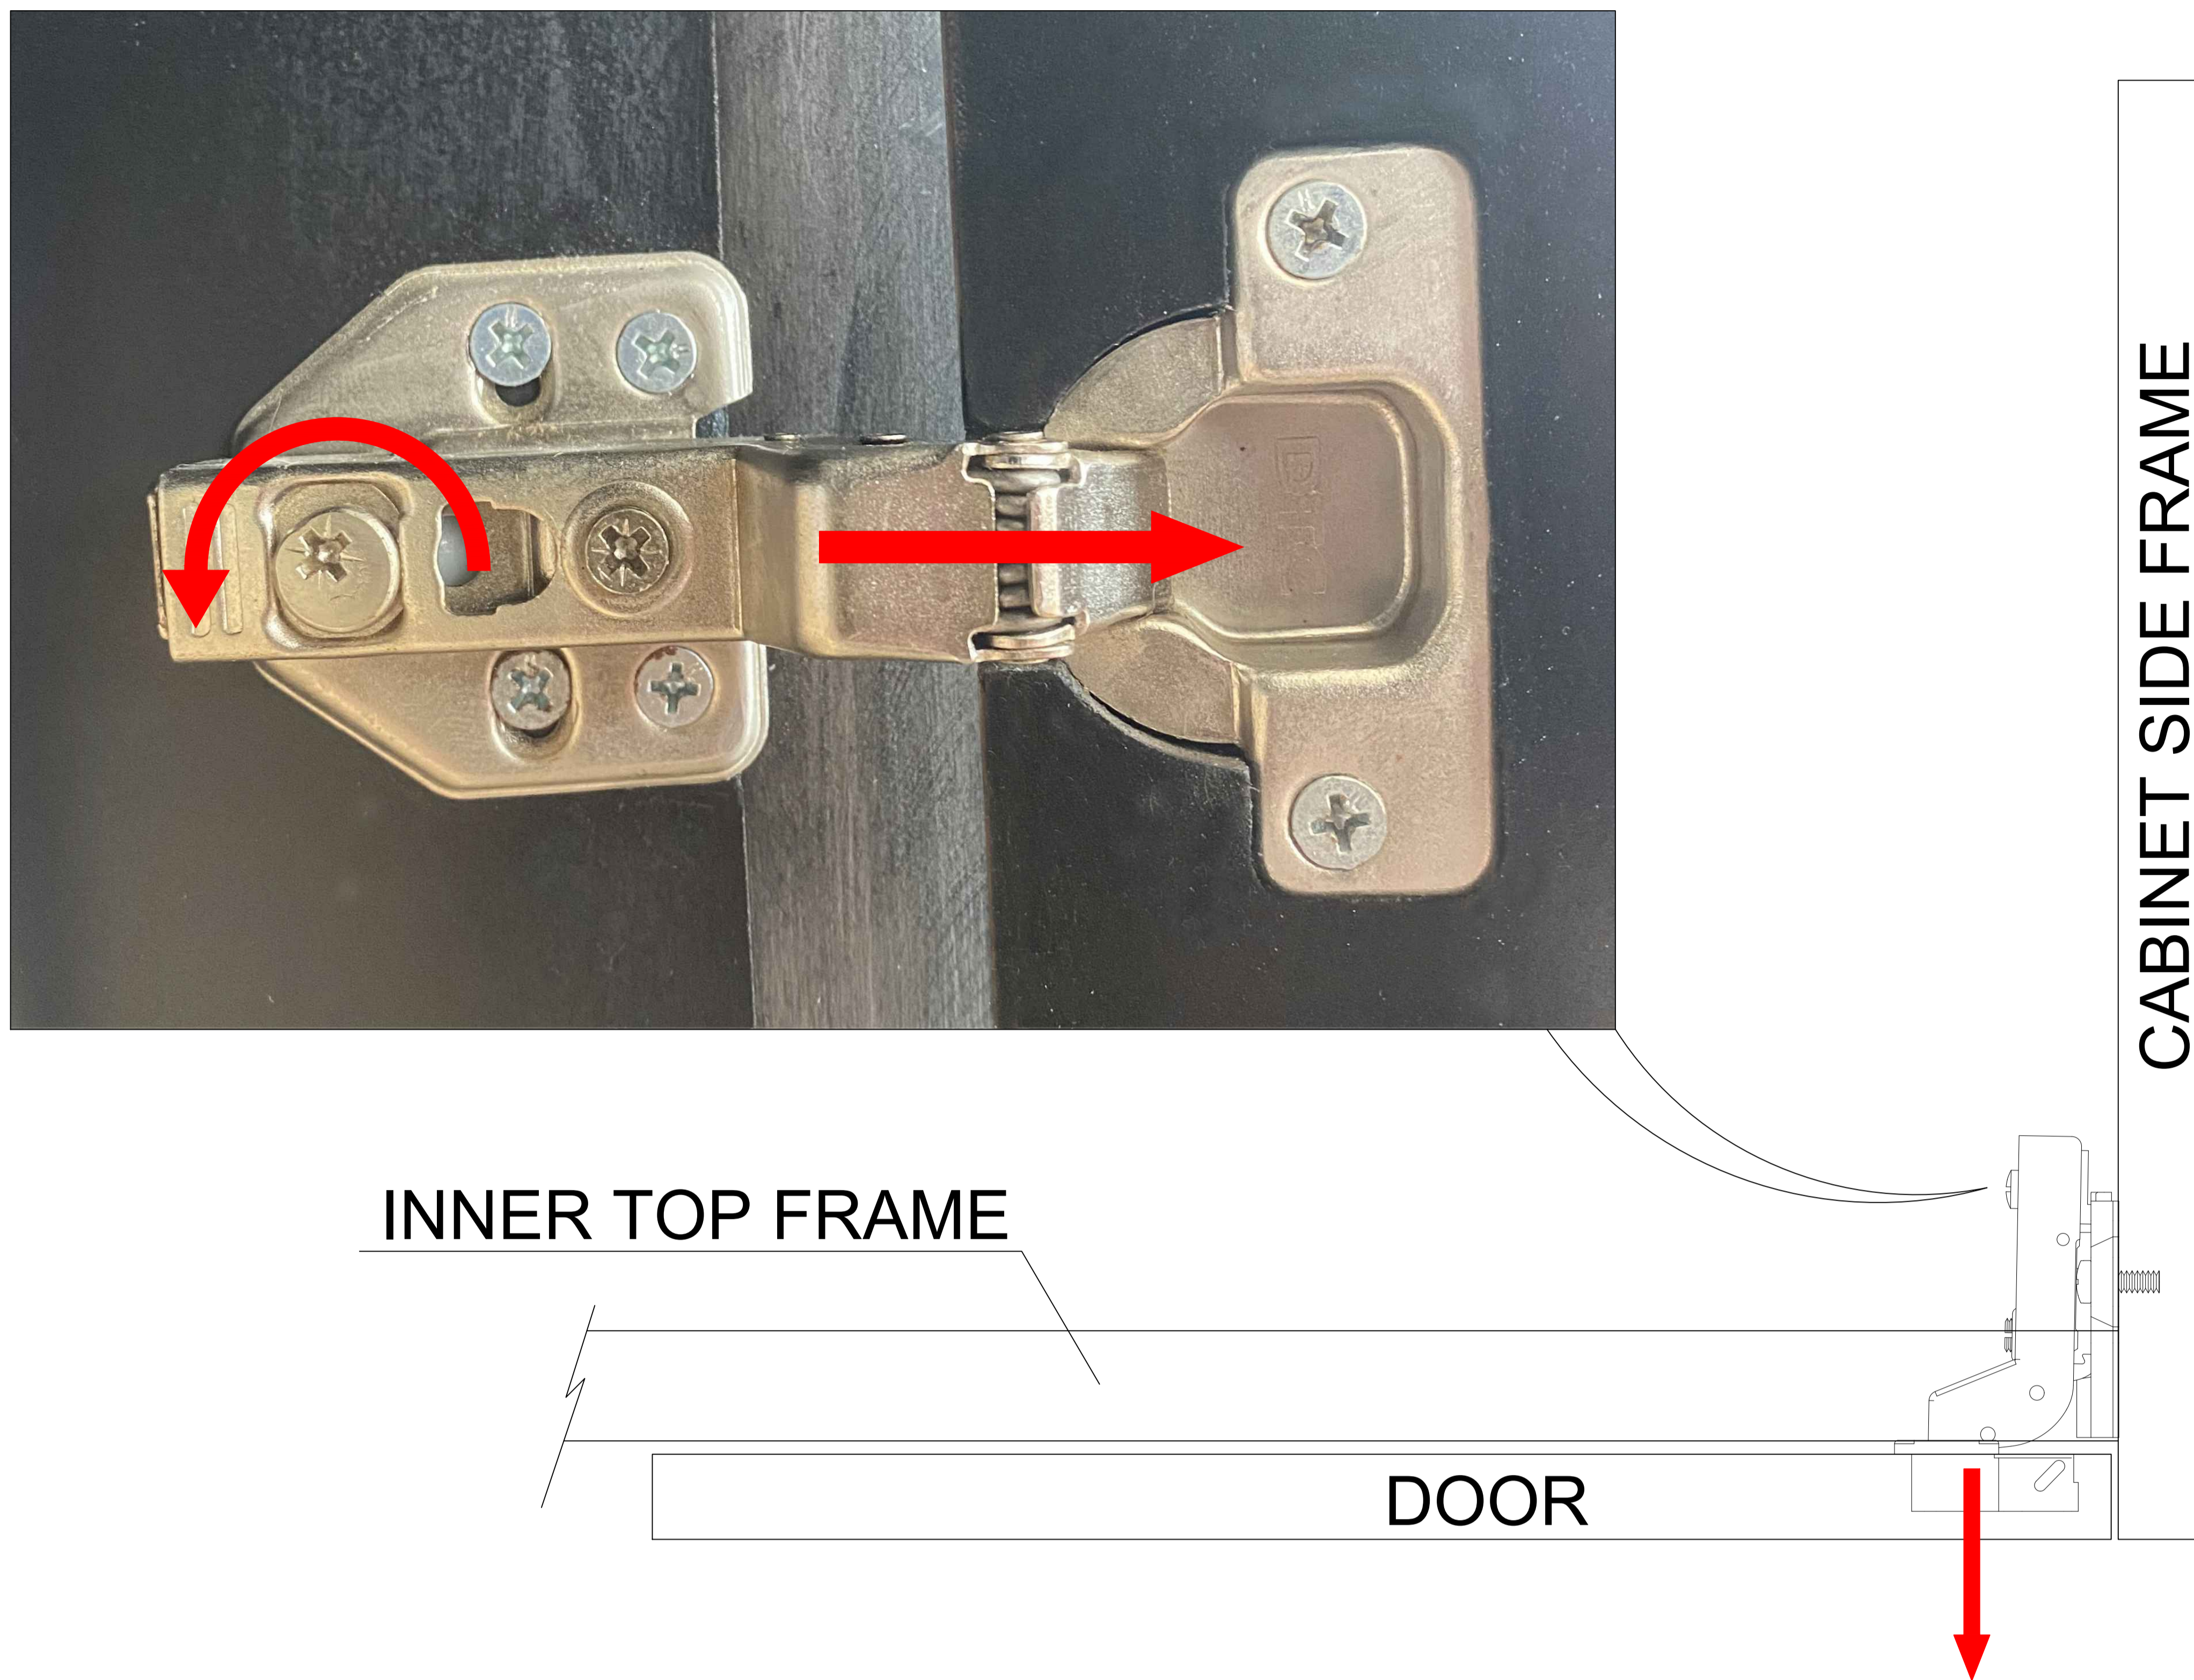

DOOR RUBBING ON INTERNAL SIDE FRAME

TURN THE SCREW CLOCKWISE 1/4 OF A TURN TO
PUSH THE HINGE OUT FROM THE SIDE CABINET FRAME

