




DJ504811

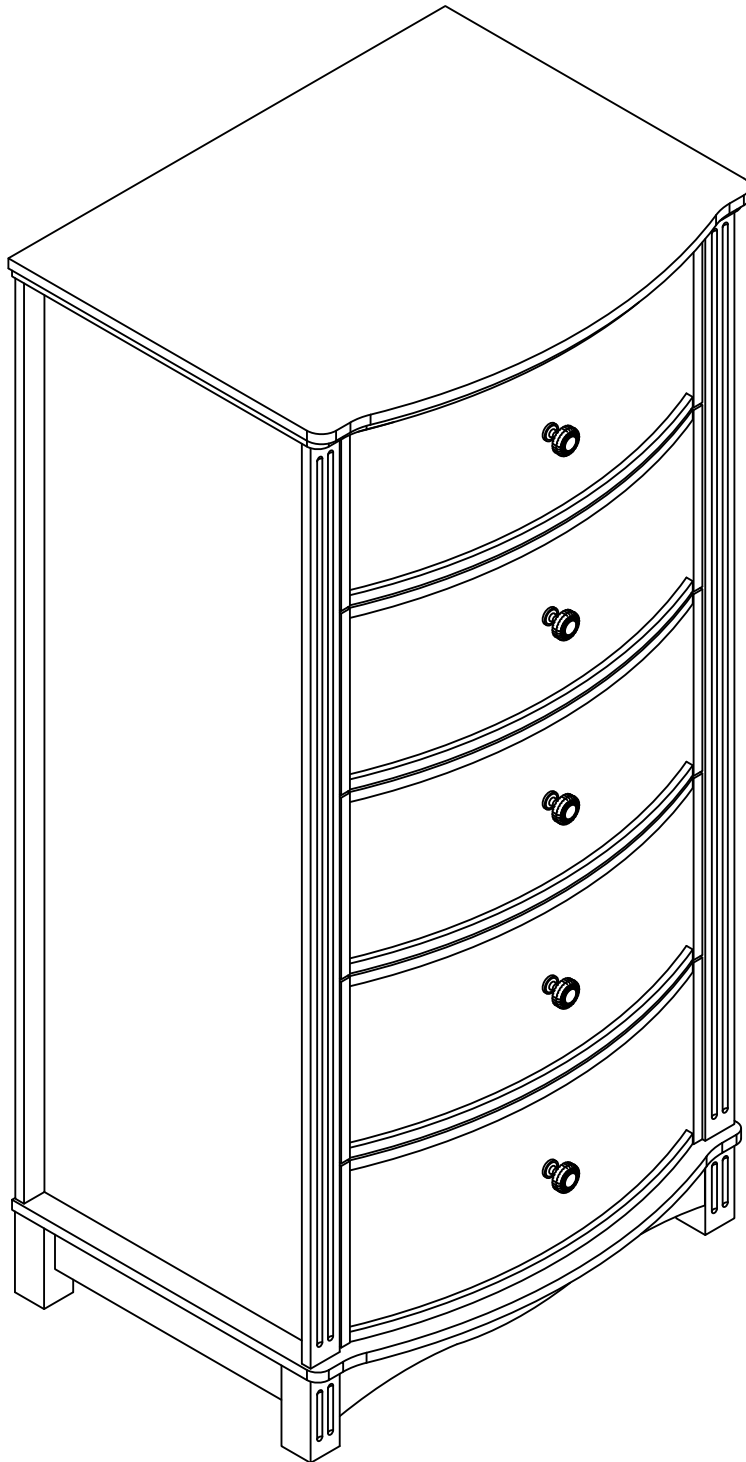

version: 1.0


ASSEMBLY INSTRUCTIONS

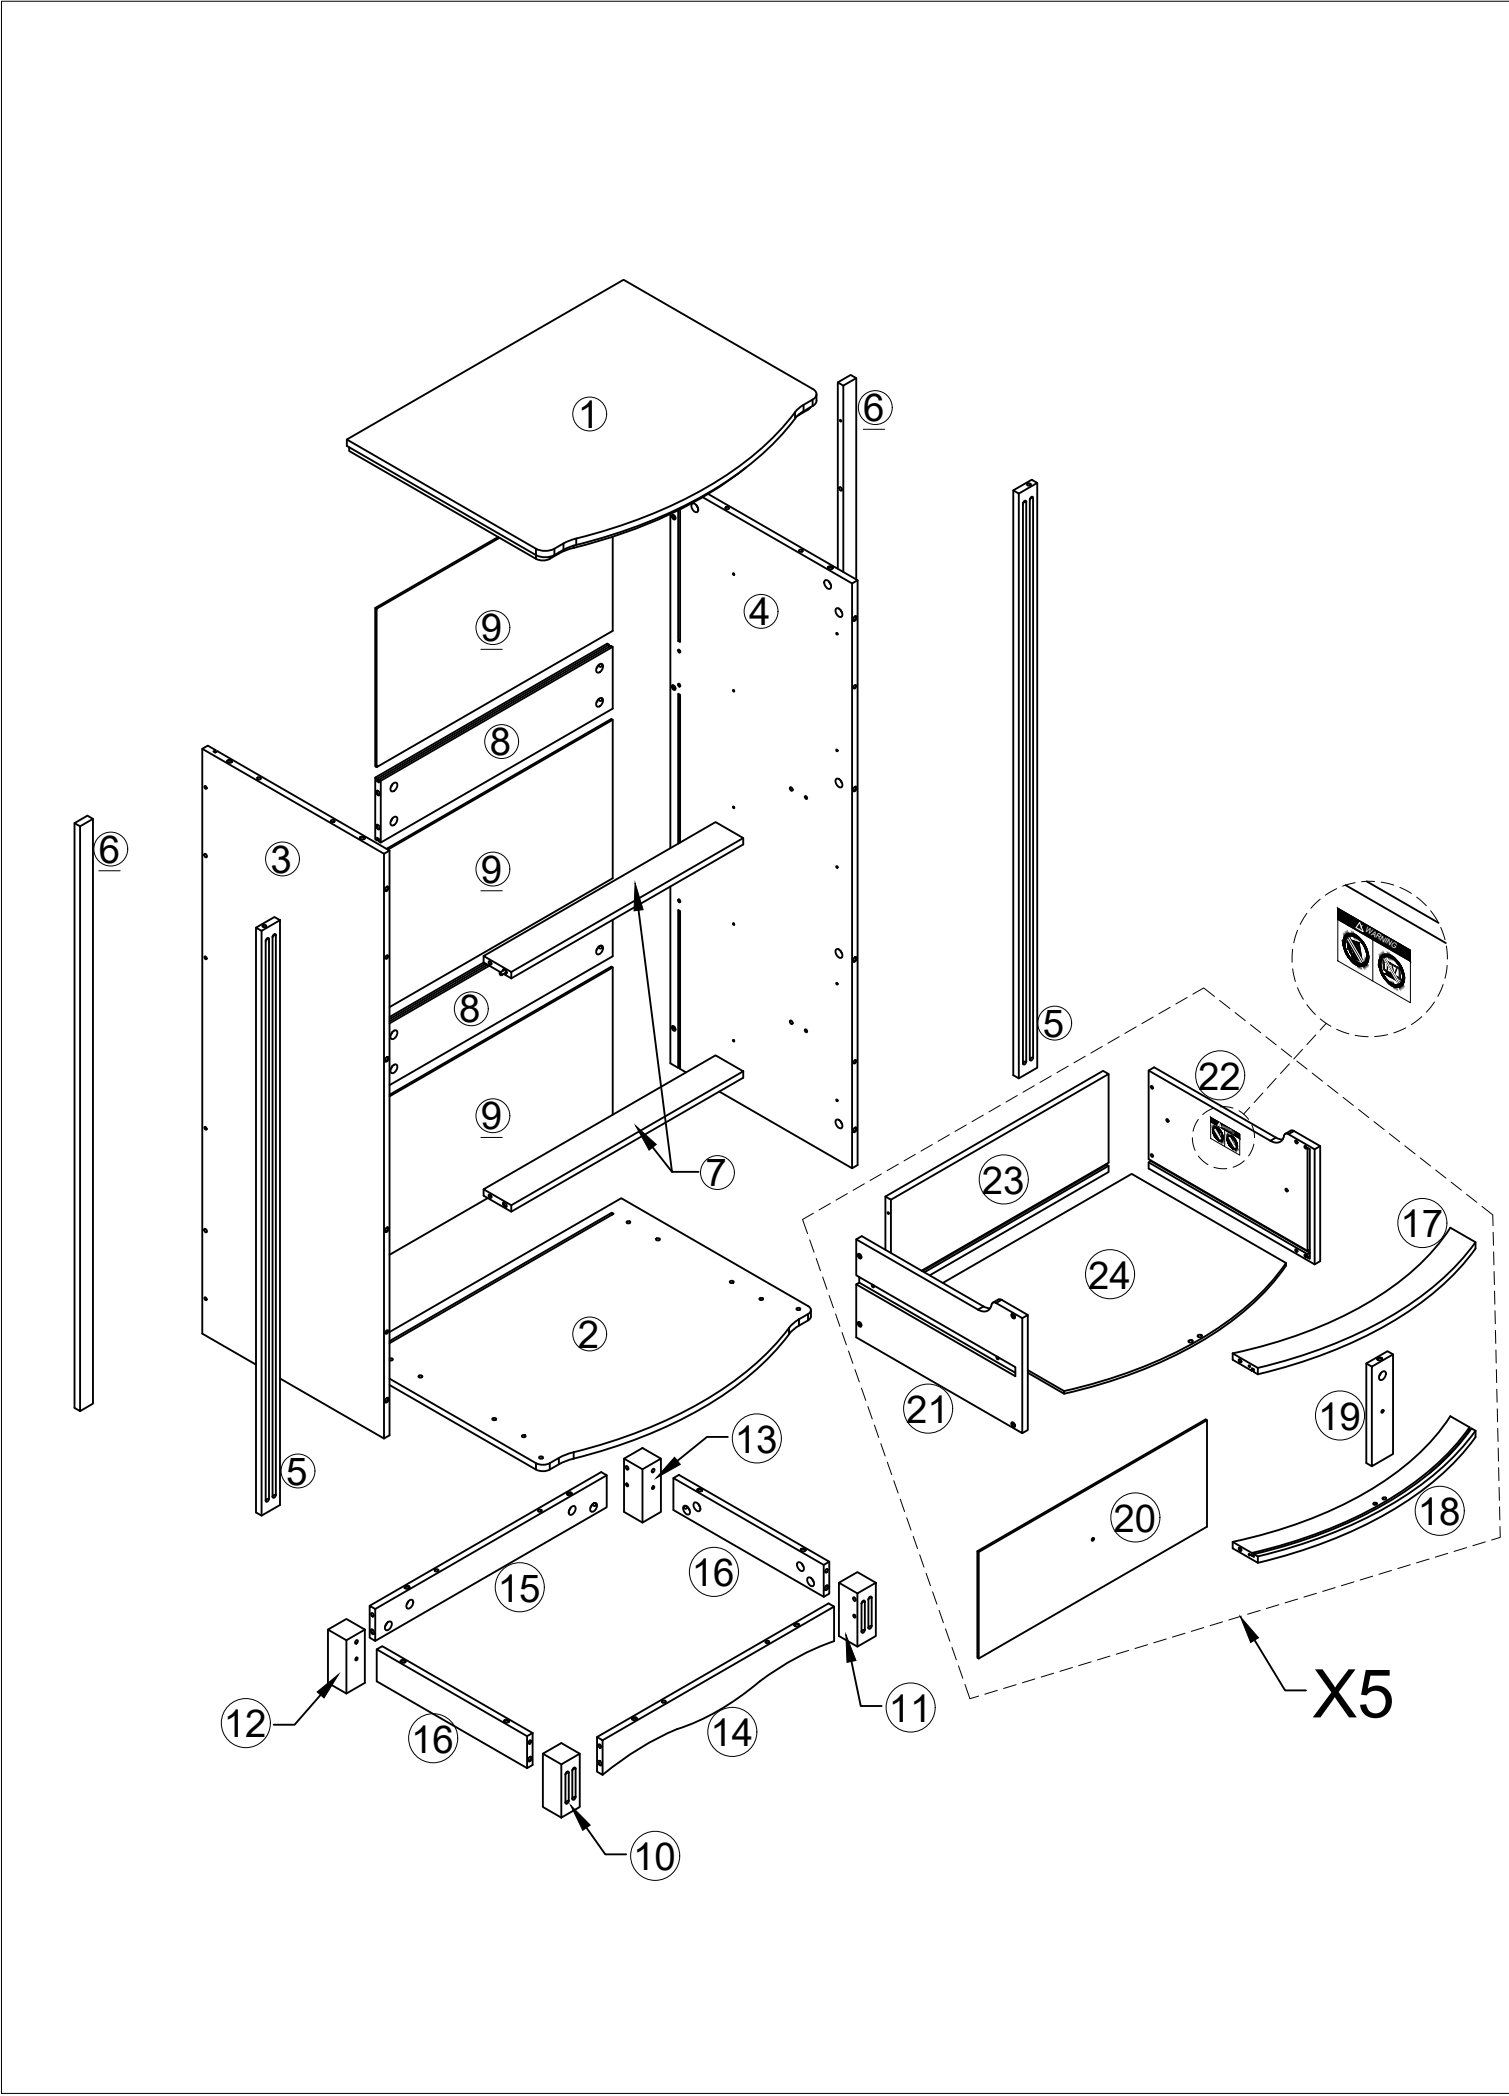









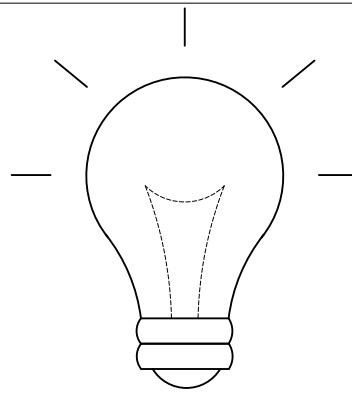


friendly reminder






















To avoid errors and confusion during the installation of accessories, use the type and quantity of hardware accessories according to the installation procedure described in the instructions. First, unroll the accessories bag and lay out the hardware accessories, cut holes in the side, and take out the hardware accessories

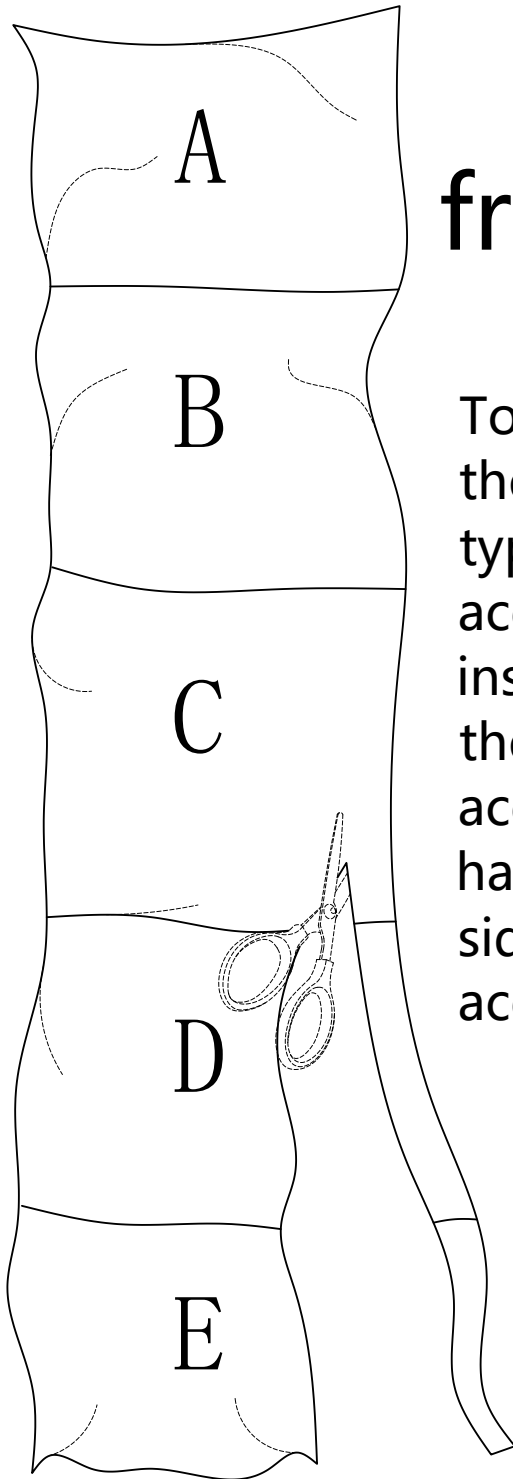


ASSEMBLY INSTRUCTIONS

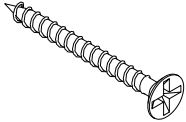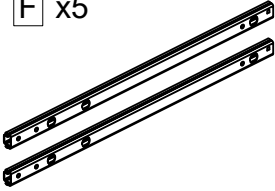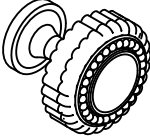A x56+5  Ø6x30mm	B x45+4  Ø6x35mm	C x45+4  Ø15x10mm	D x14+1  Ø5x38mm	E x48+4  Ø4x35mm
F x5 	G x2 	H x5 	I x20+3  Ø3x12mm	J x5+1  M4x16mm
K x20+2  M4x8mm	L x12+2  Ø20mm	M x12+1  Ø3.0x16mm	N x1  3mm	

ASSEMBLY INSTRUCTIONS

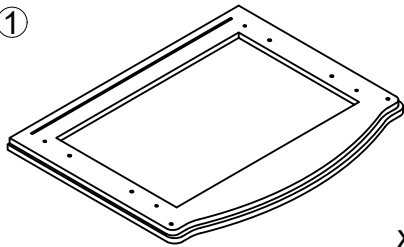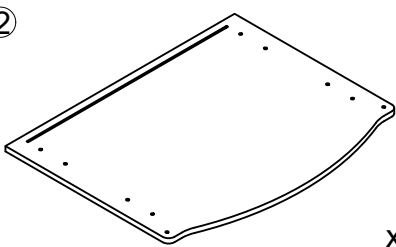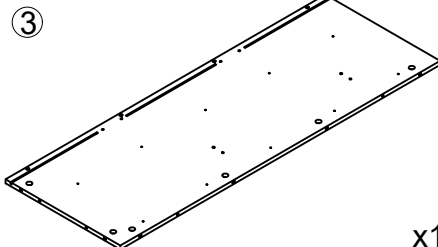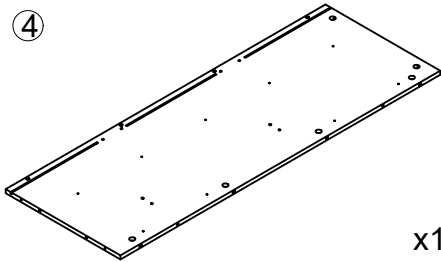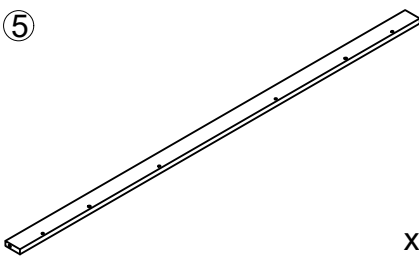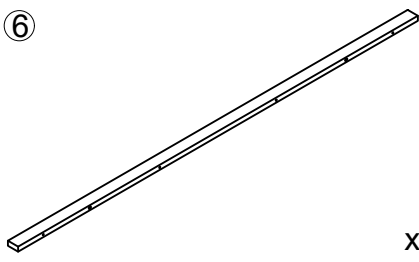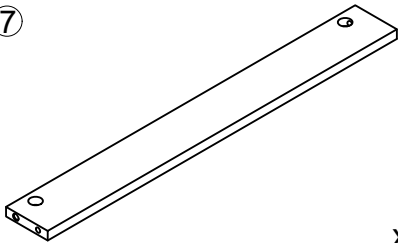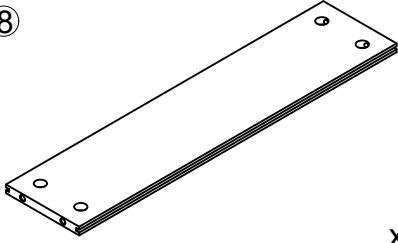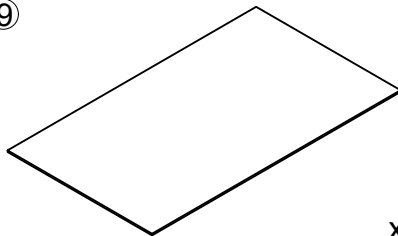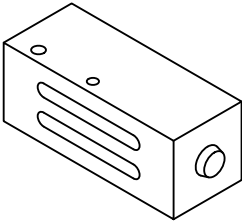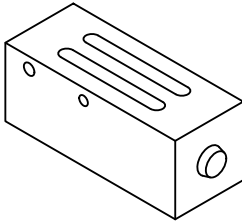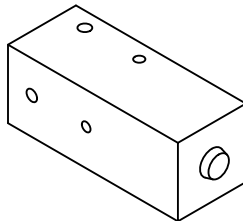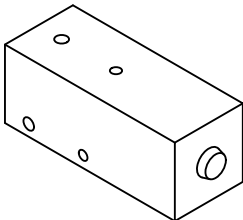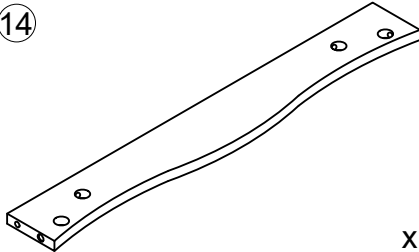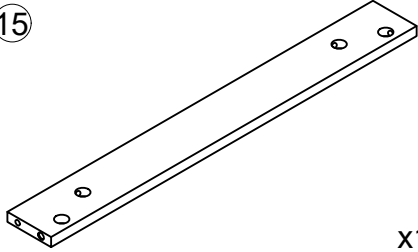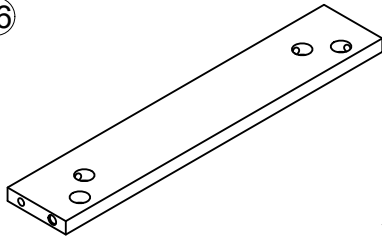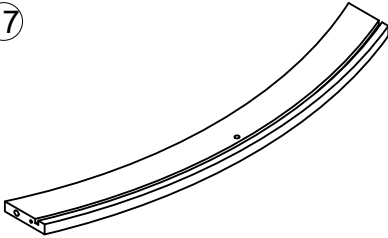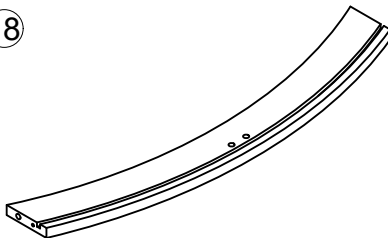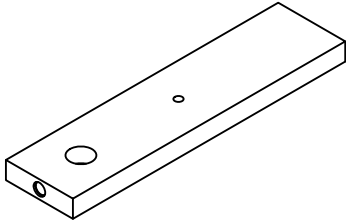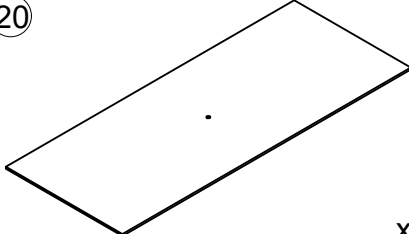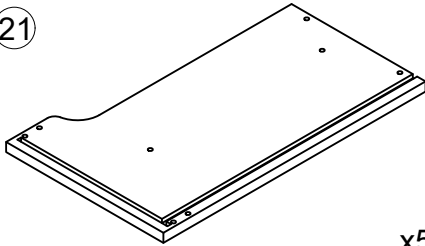①  x1	②  x1	③  x1
④  x1	⑤  x2	⑥  x2
⑦  x2	⑧  x2	⑨  x3
⑩  x1	⑪  x1	⑫  x1
⑬  x1	⑭  x1	⑮  x1
⑯  x2	⑰  x5	⑱  x5
⑲  x5	⑳  x5	㉑  x5


ASSEMBLY INSTRUCTIONS

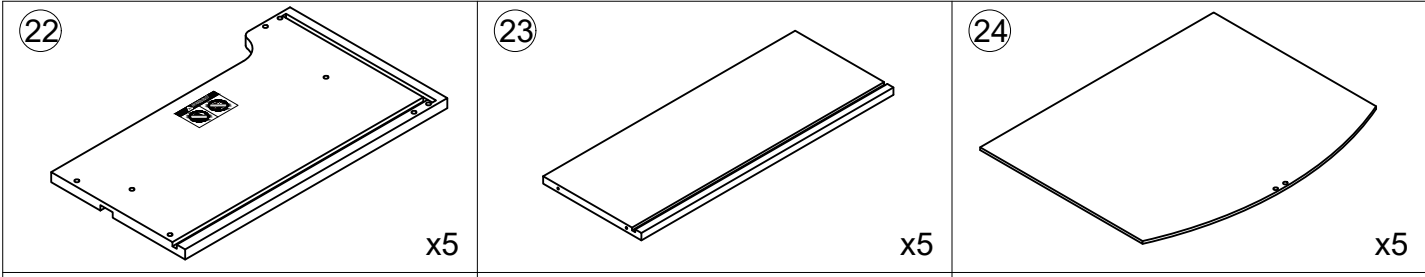


INSTALLATION INSTRUCTION


STEP 1


X2

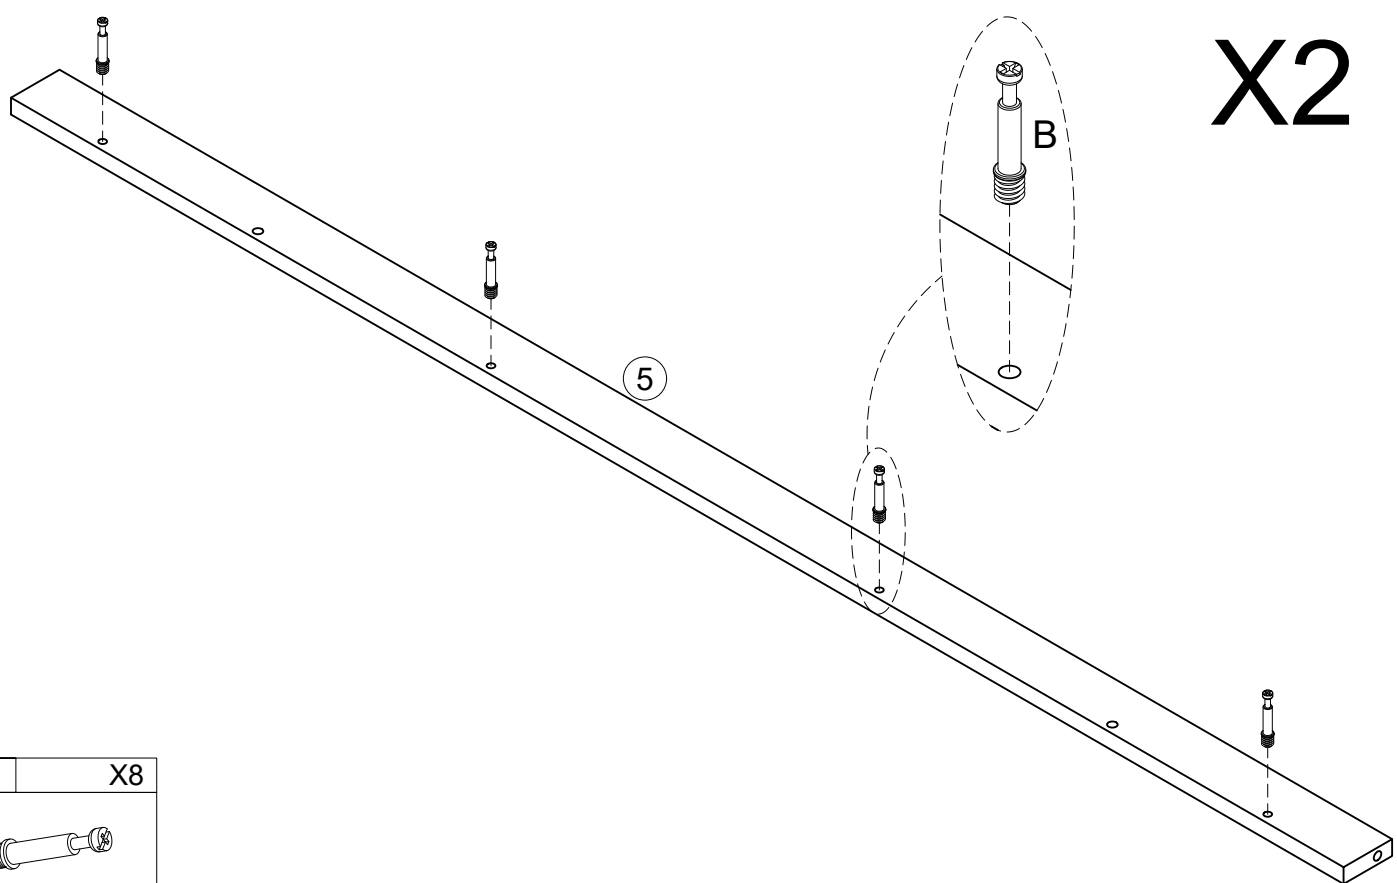

B	X8
	
Ø6x35mm	


STEP 2

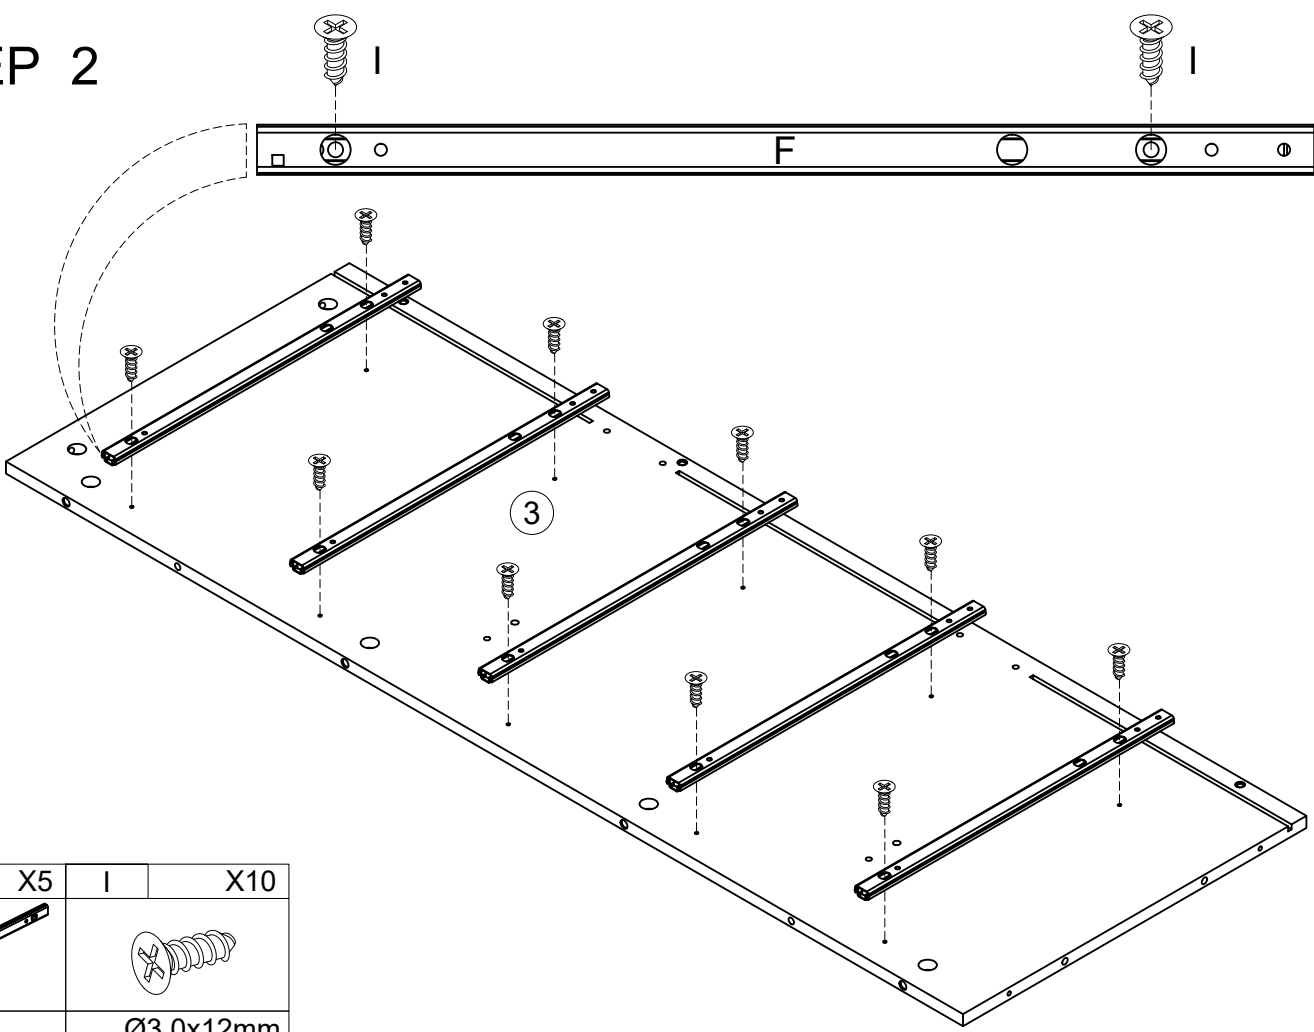


F	X5	I	X10
			
		Ø3.0x12mm	


INSTALLATION INSTRUCTION

STEP 3

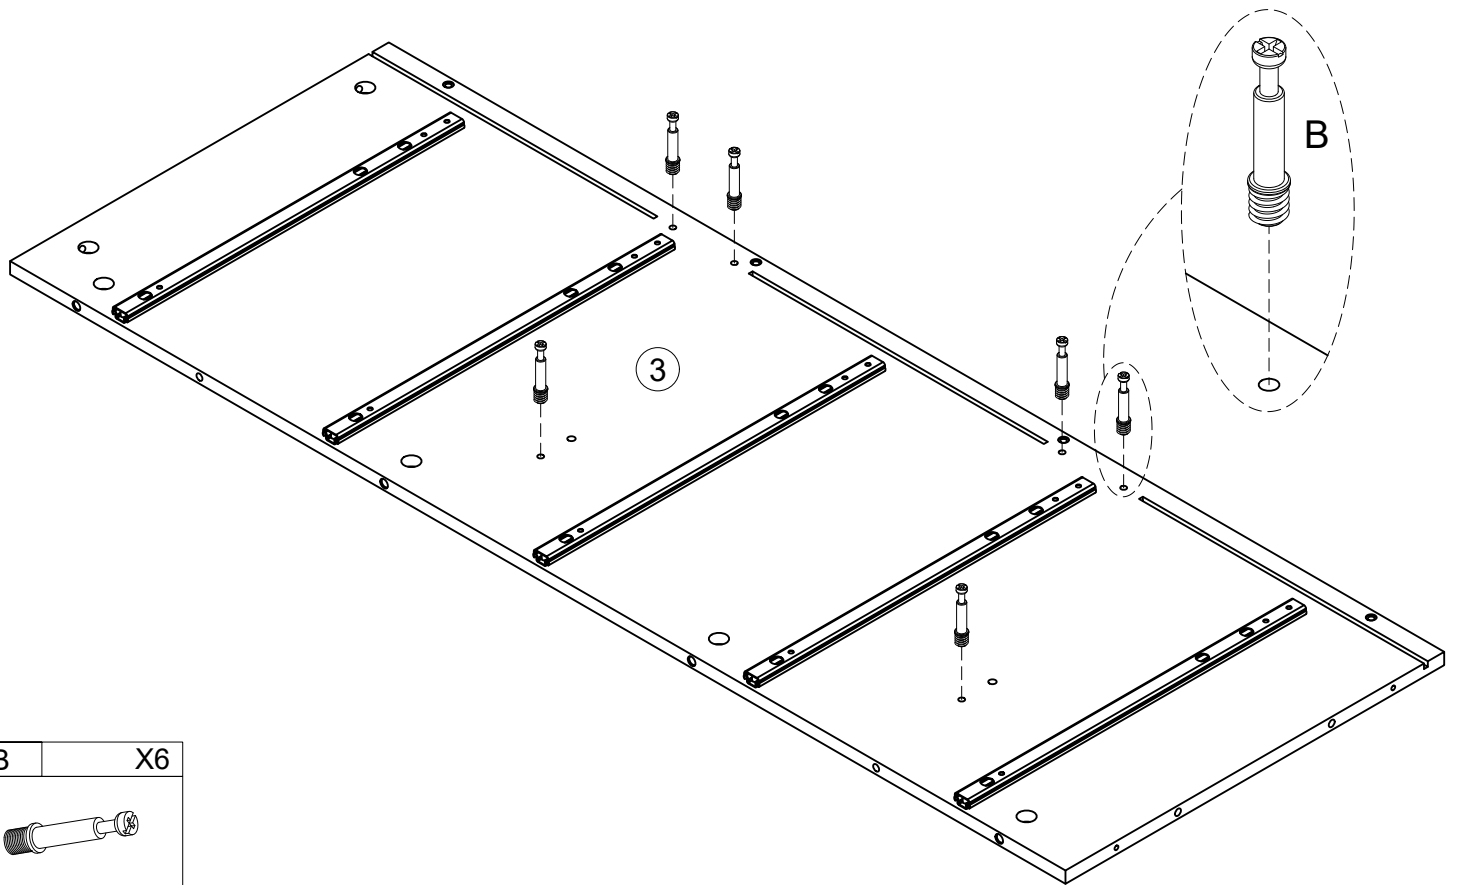

B	X6
	
Ø6x35mm	



STEP 4

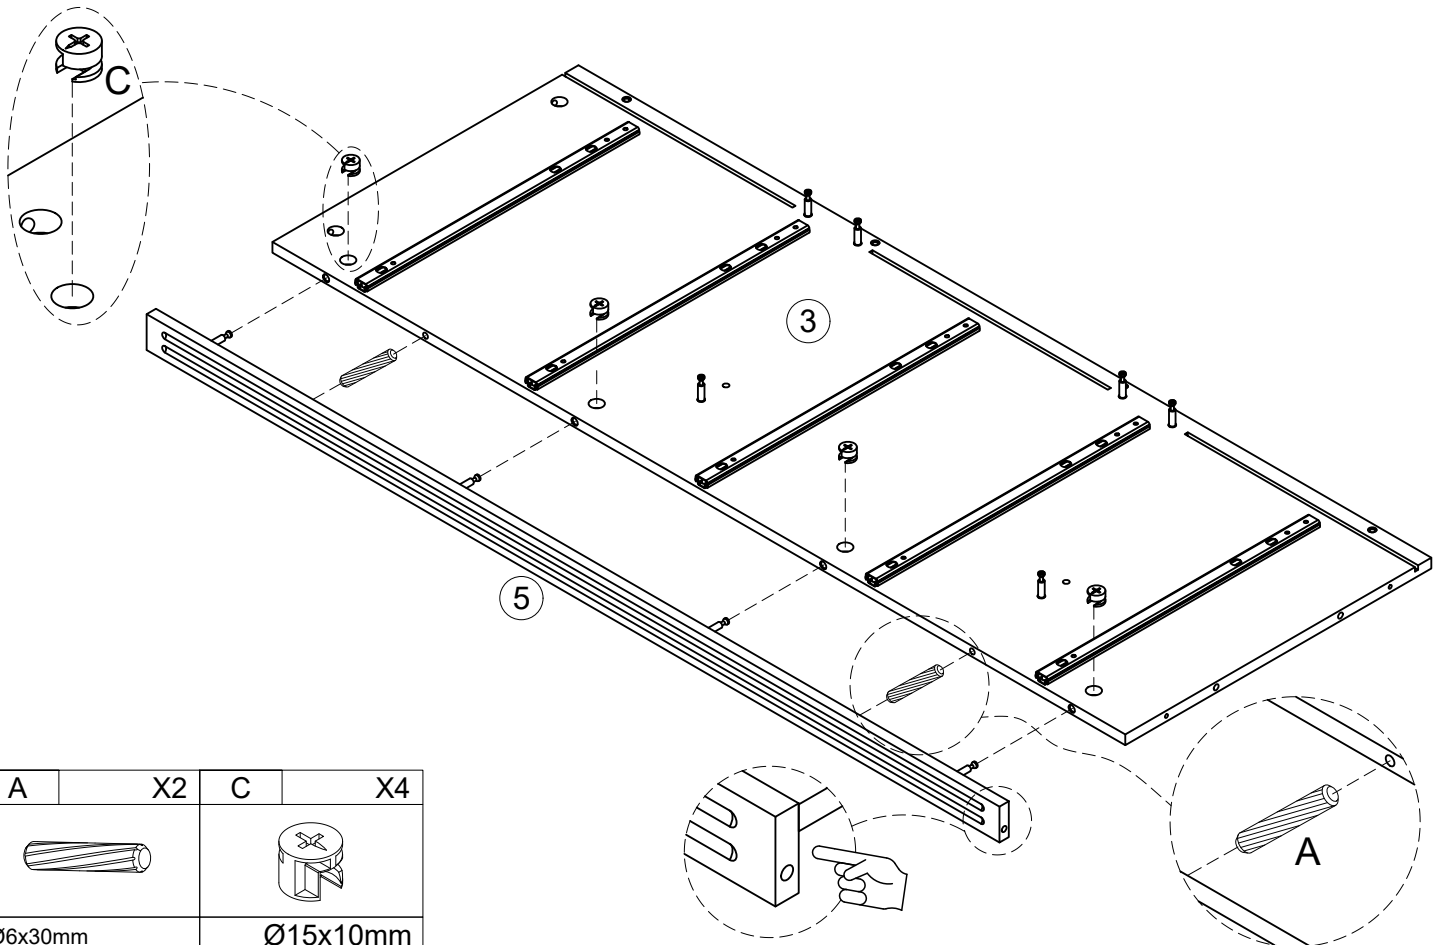


A	X2	C	X4
			
Ø6x30mm		Ø15x10mm	


INSTALLATION INSTRUCTION


STEP 5

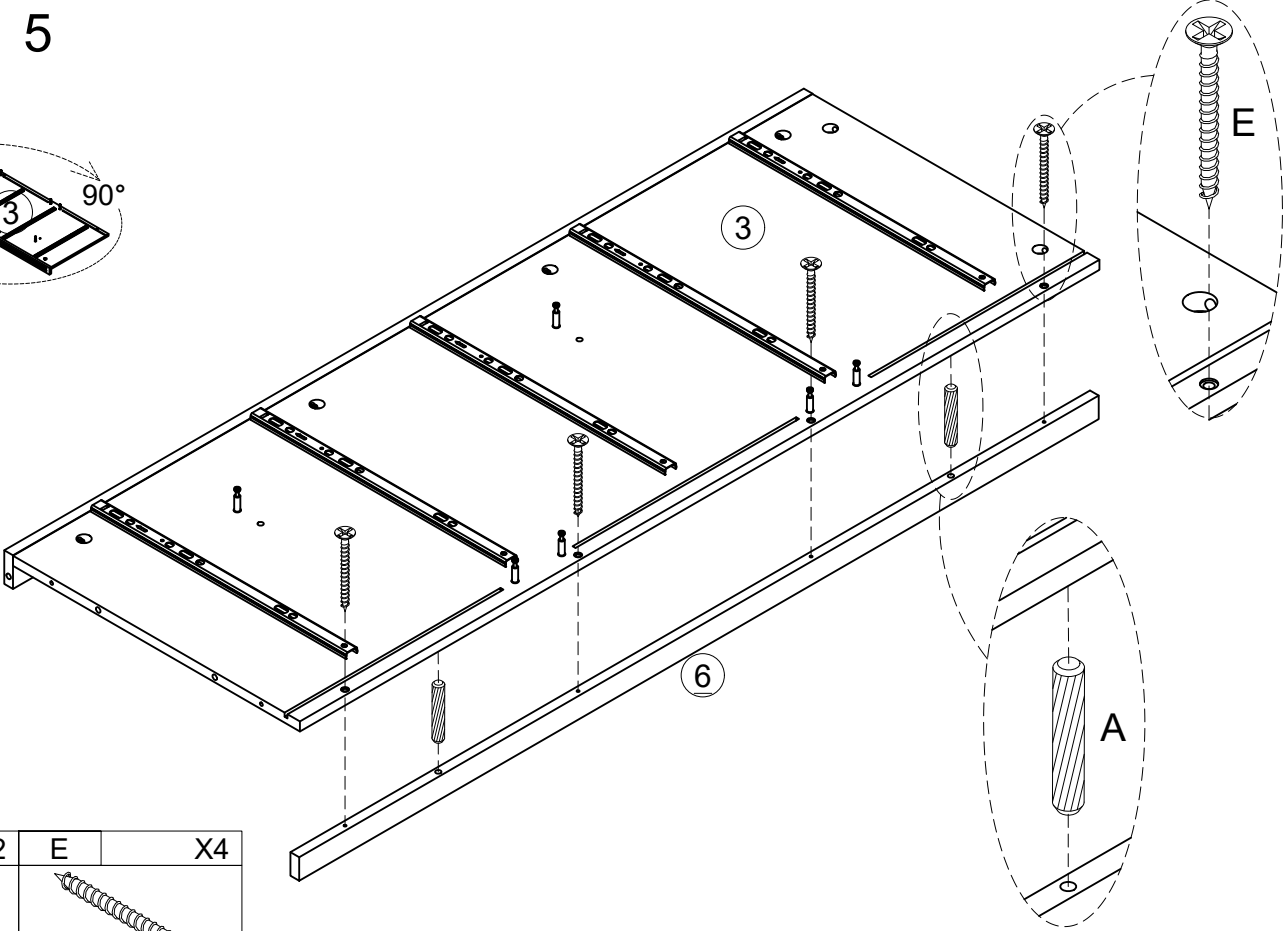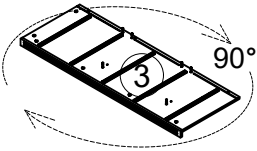

A	X2	E	X4
			
Ø6x30mm		Ø4x35mm	


STEP 6

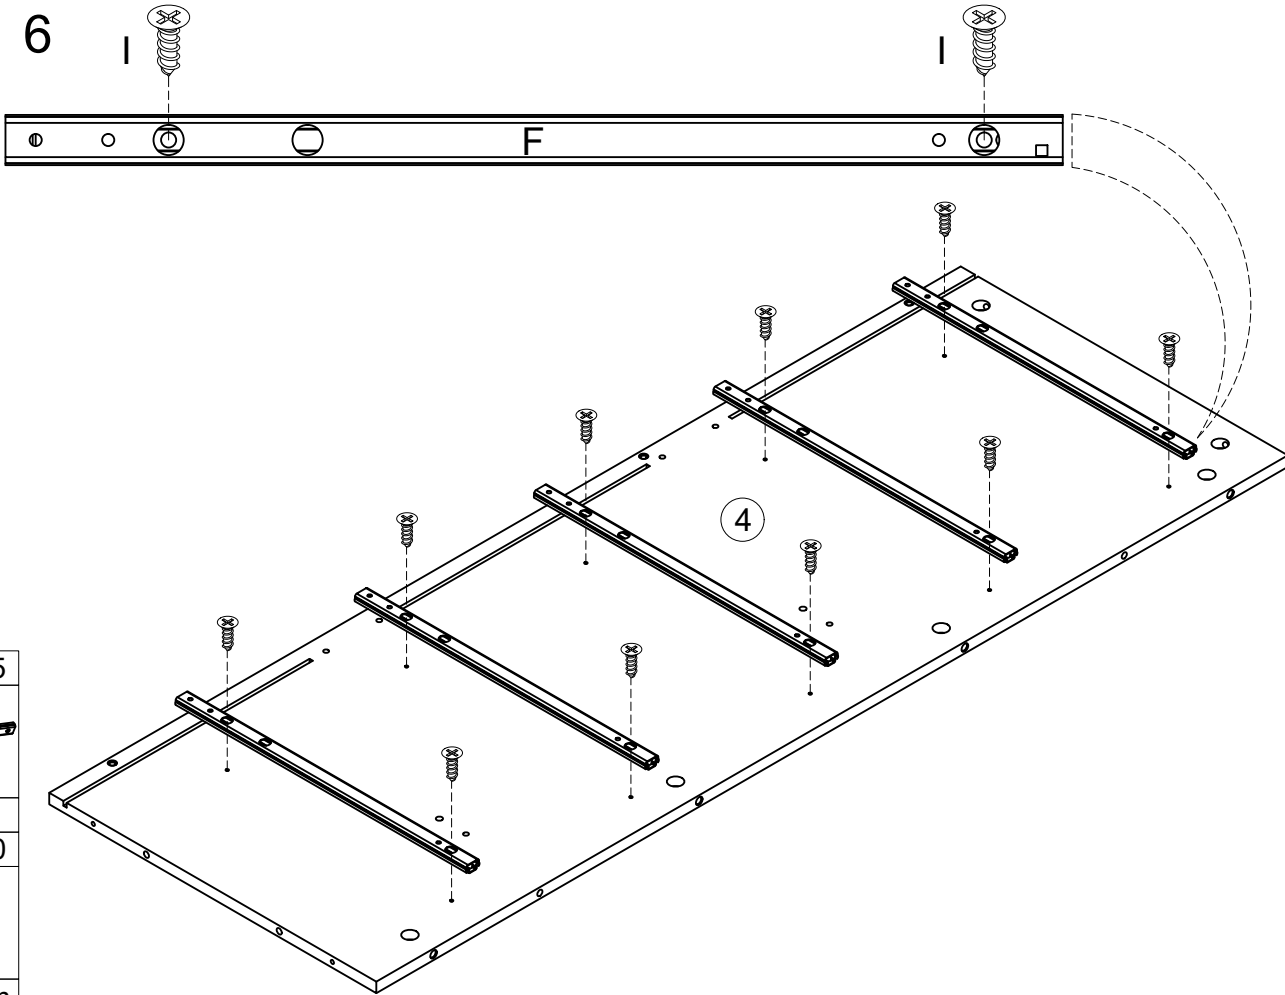


F	X5
	
I	X10
	
Ø3.0x12mm	

INSTALLATION INSTRUCTION

STEP 7

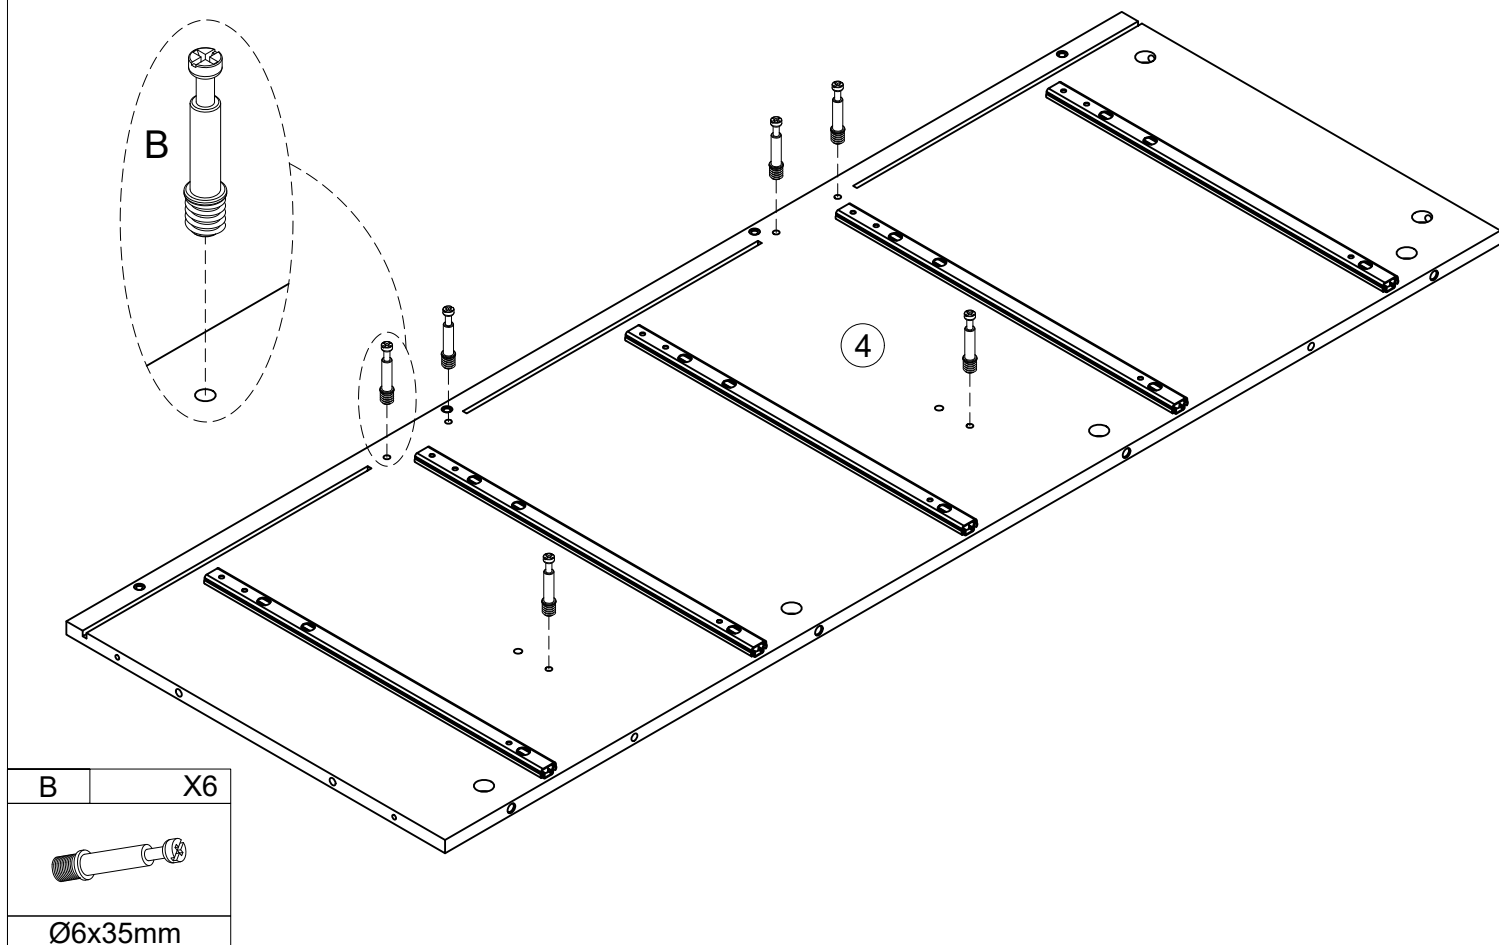



STEP 8

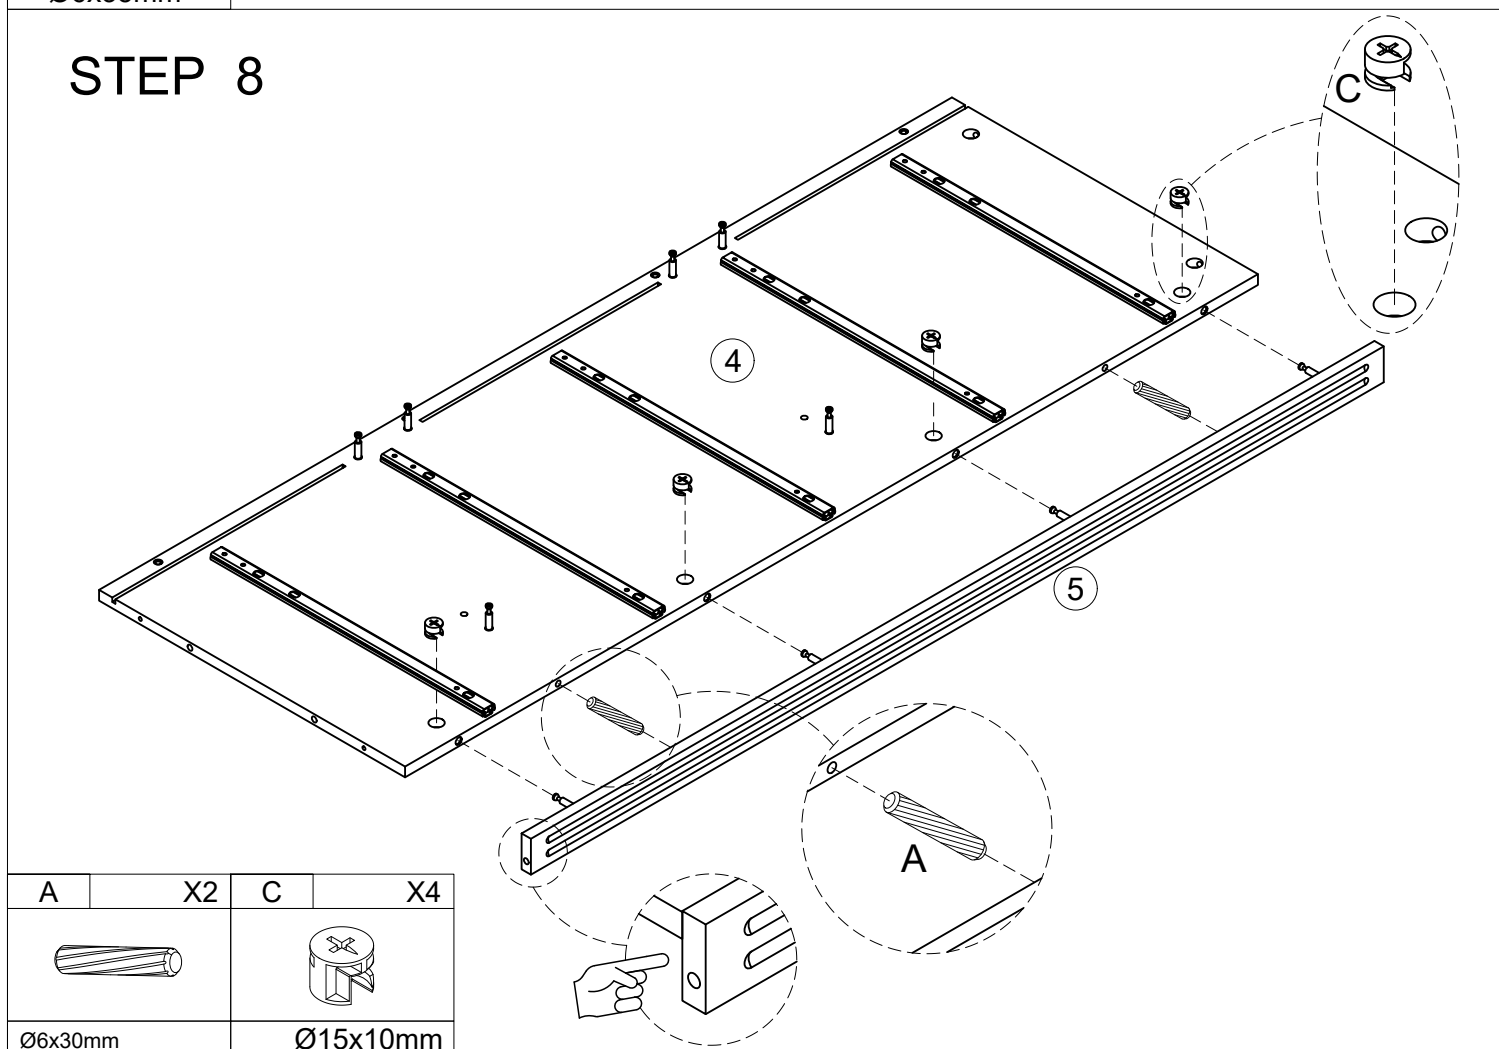



INSTALLATION INSTRUCTION

STEP 9

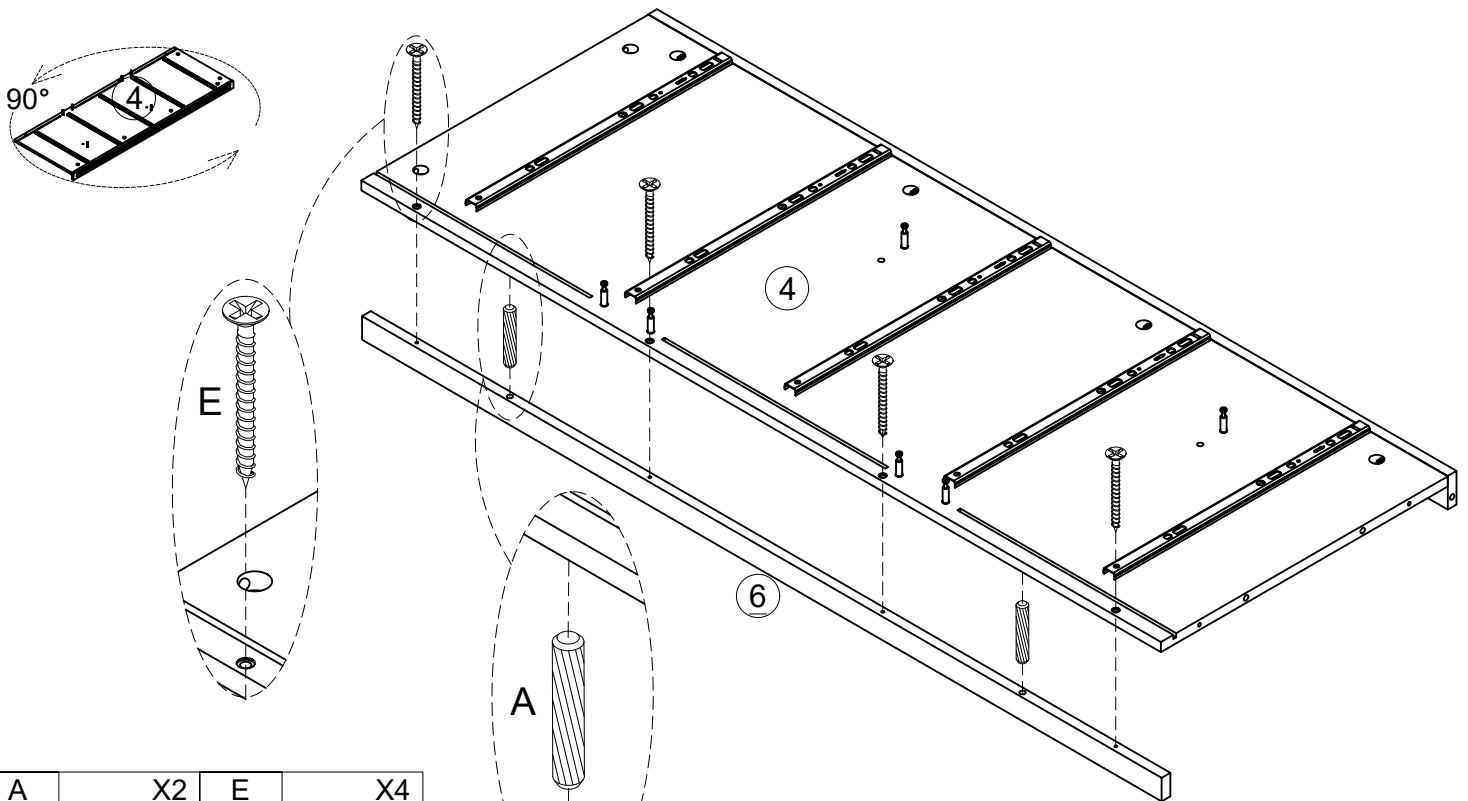

A	X2	E	X4
			
Ø6x30mm		Ø4x35mm	



STEP 10

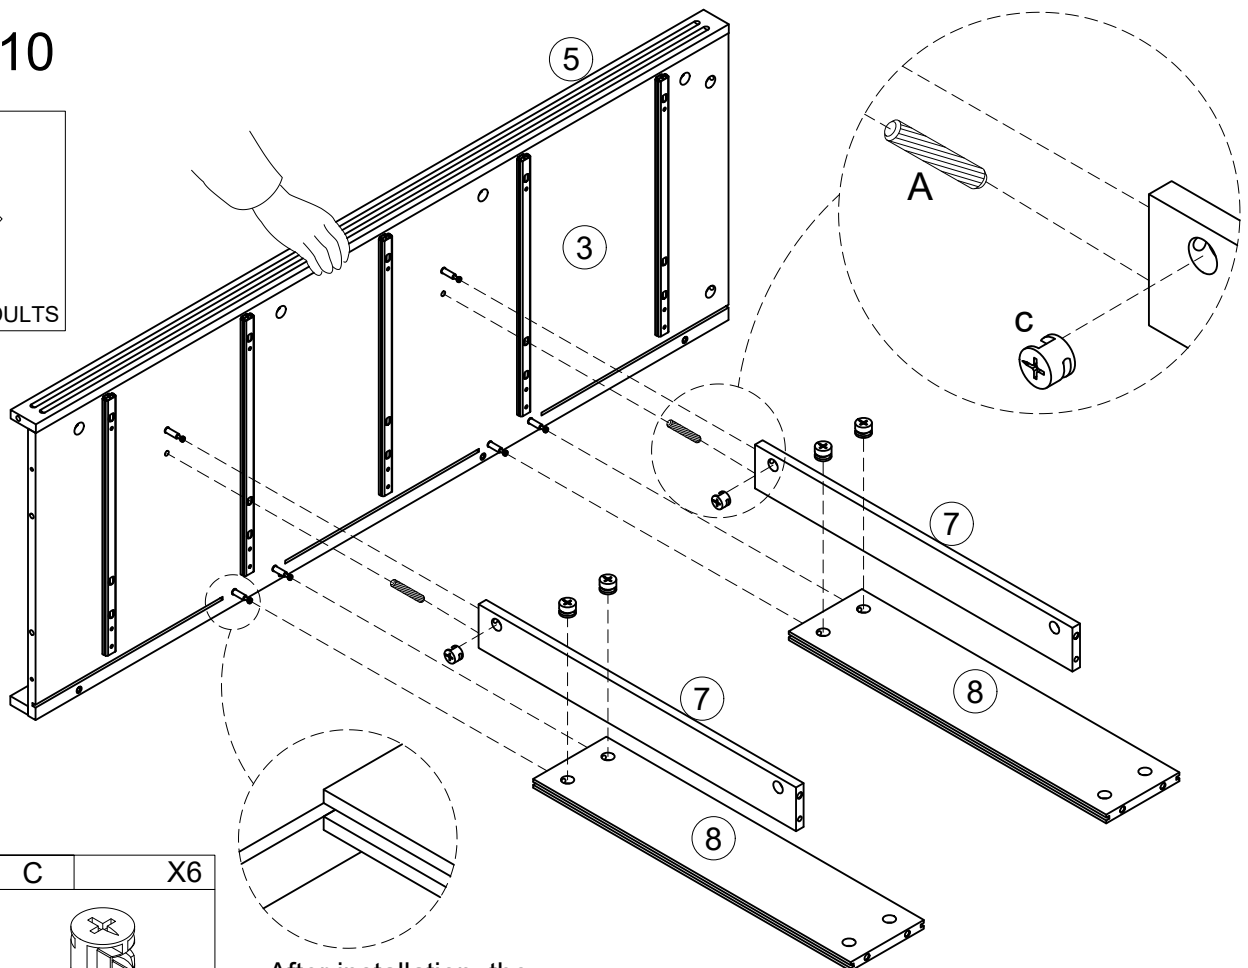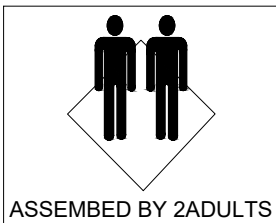

A	X2	C	X6
			
Ø6x30mm		Ø15x10mm	



After installation, the final effect picture

STEP 11

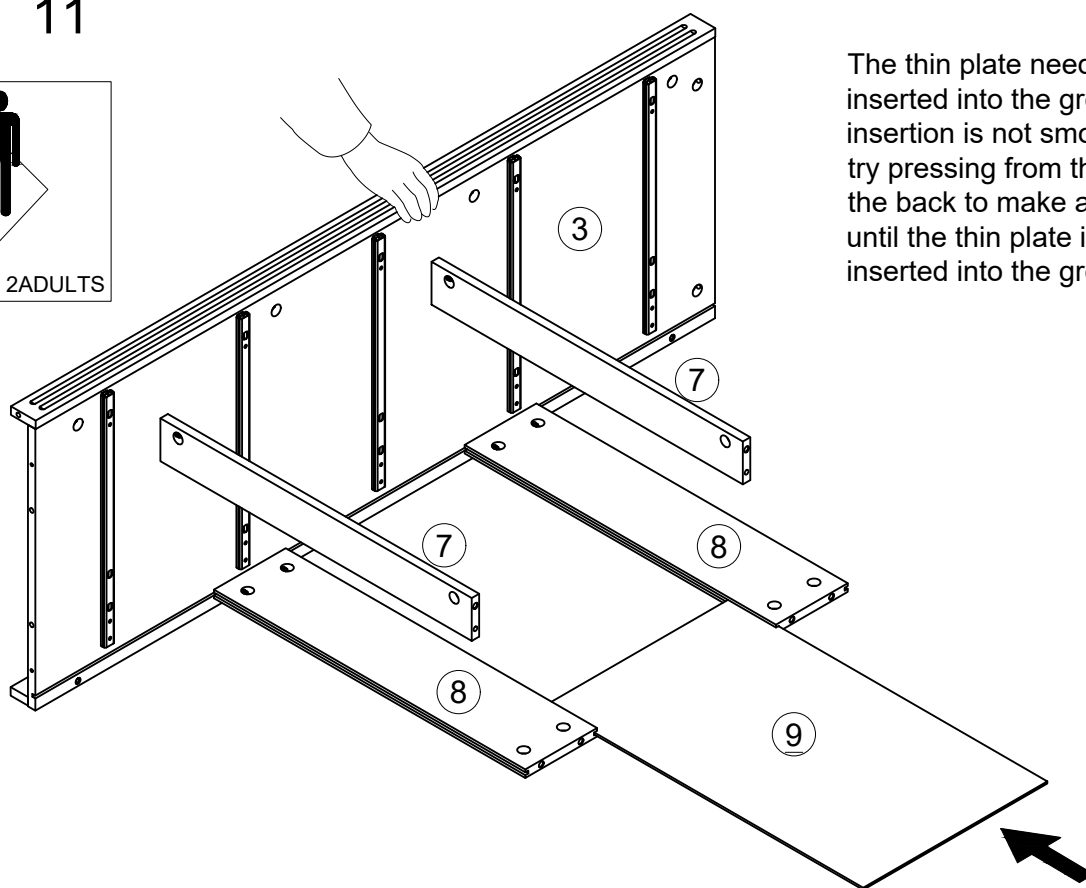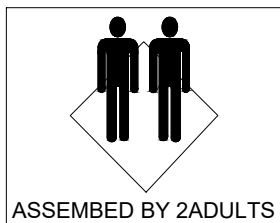

The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.

STEP 12

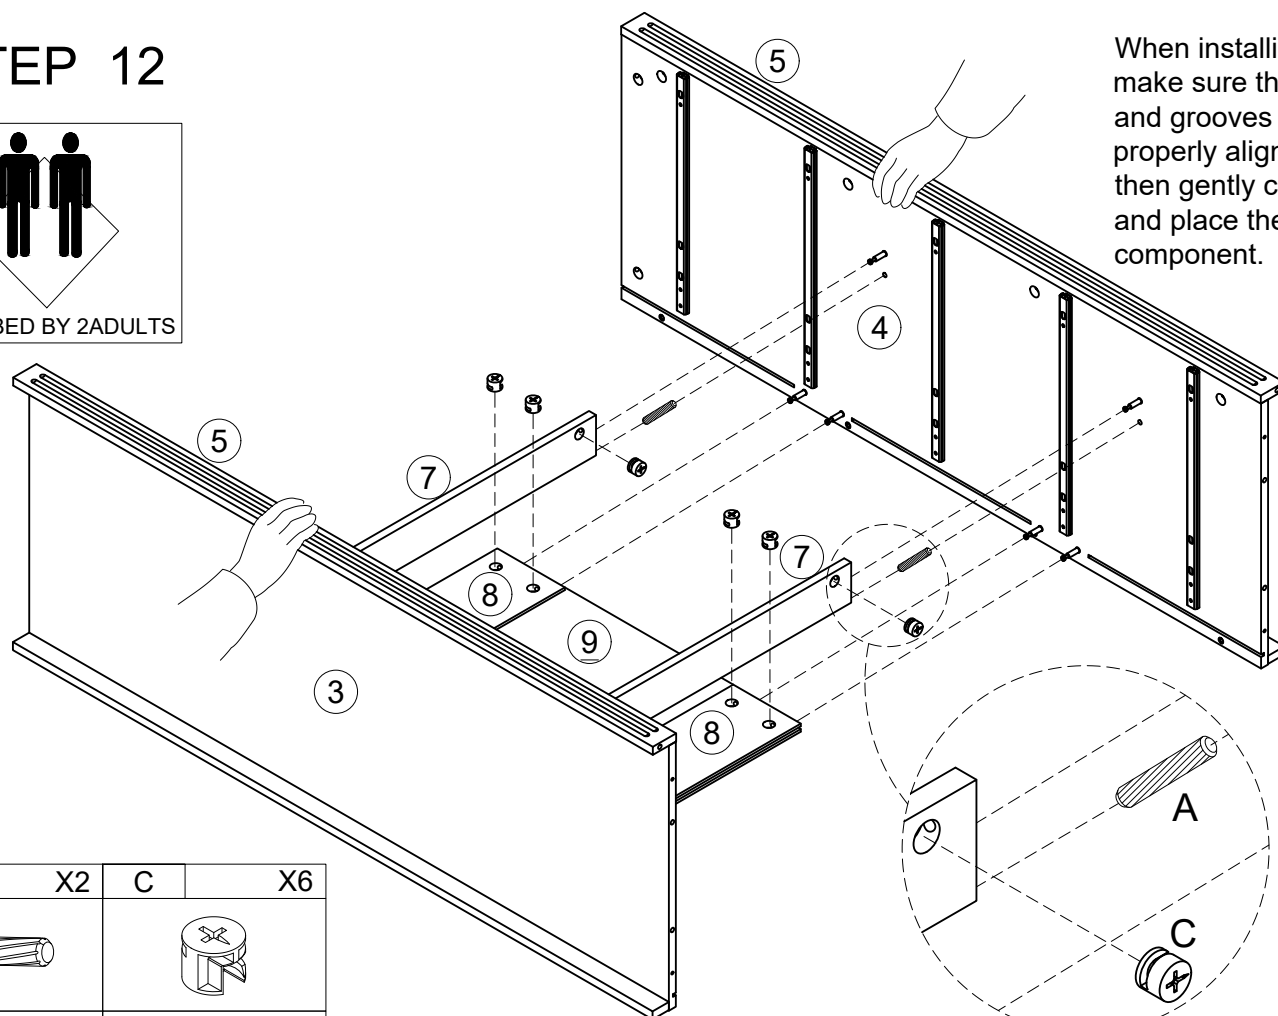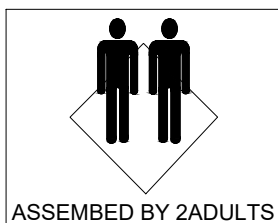


When installing, make sure the holes and grooves are properly aligned and then gently close and place the component.


A	X2	C	X6
			
Ø6x30mm		Ø15x10mm	


INSTALLATION INSTRUCTION

STEP 13

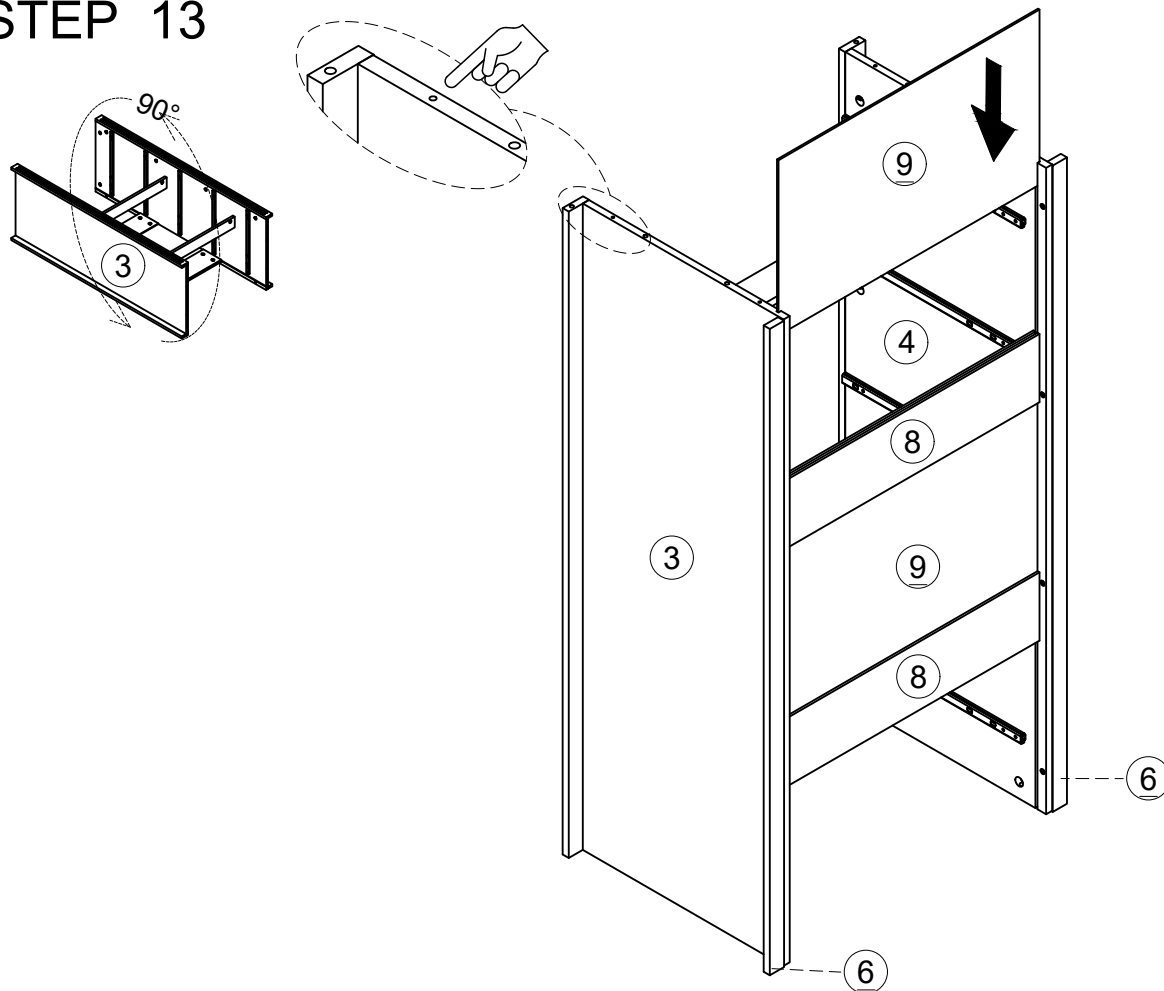


STEP 14

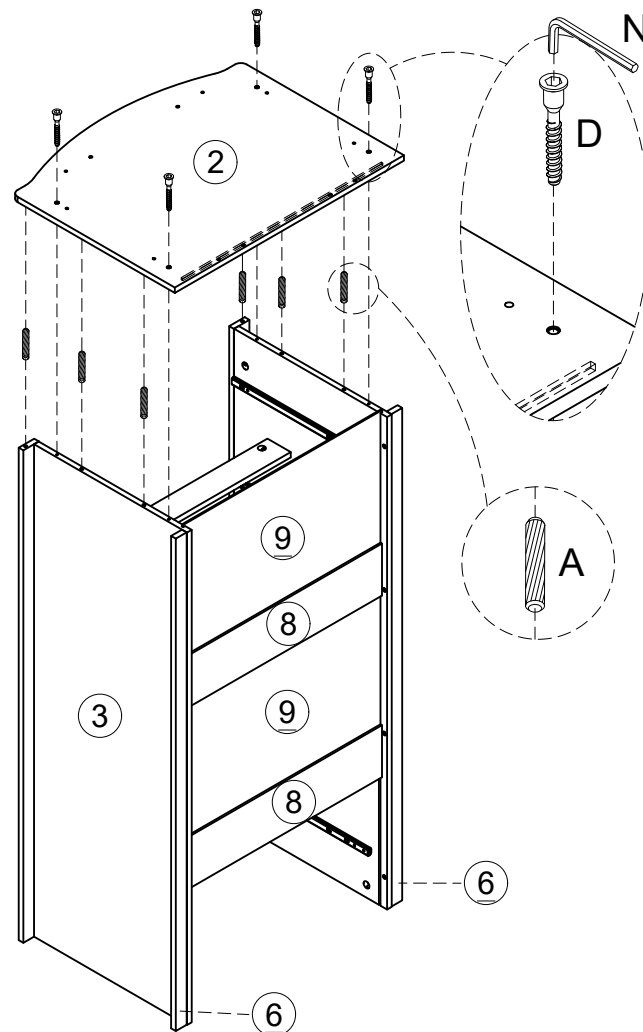


A	X6		
			
Ø6x30mm			
D	X4	N	X1
			
Ø5x38mm			
			
			3mm


INSTALLATION INSTRUCTION


STEP 15

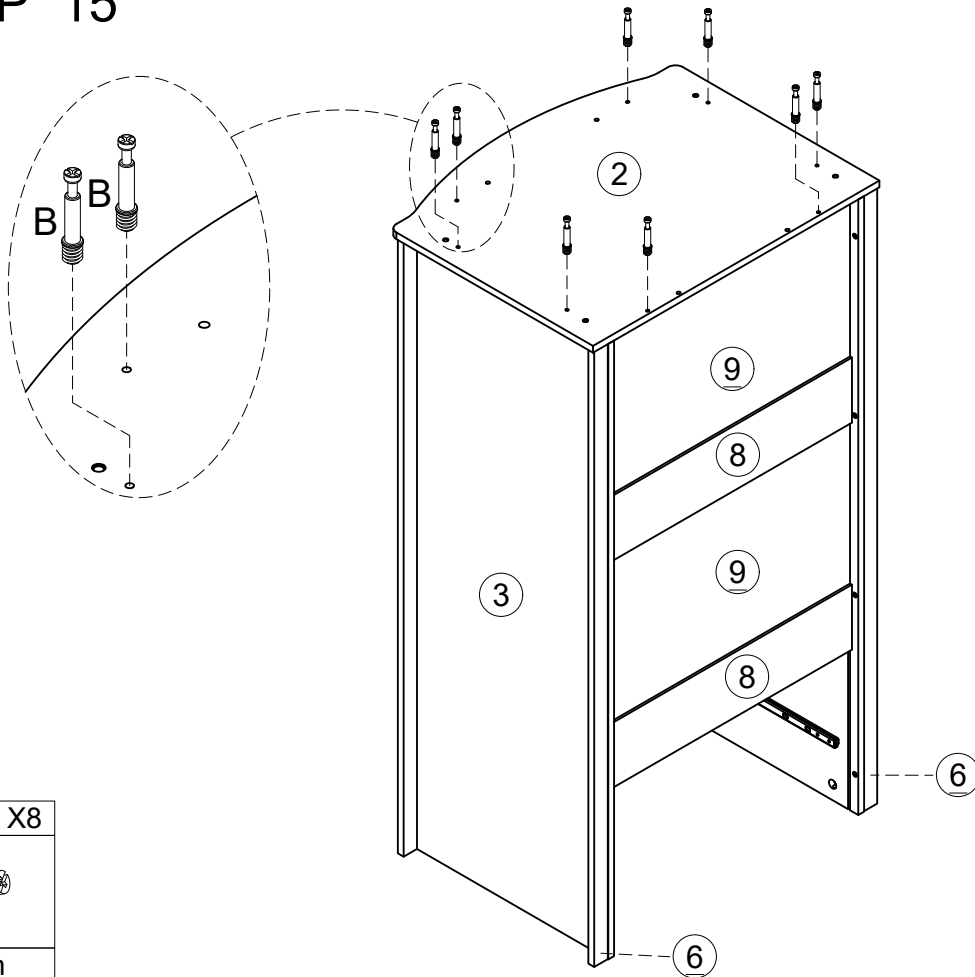

B	X8
	
Ø6x35mm	


STEP 16

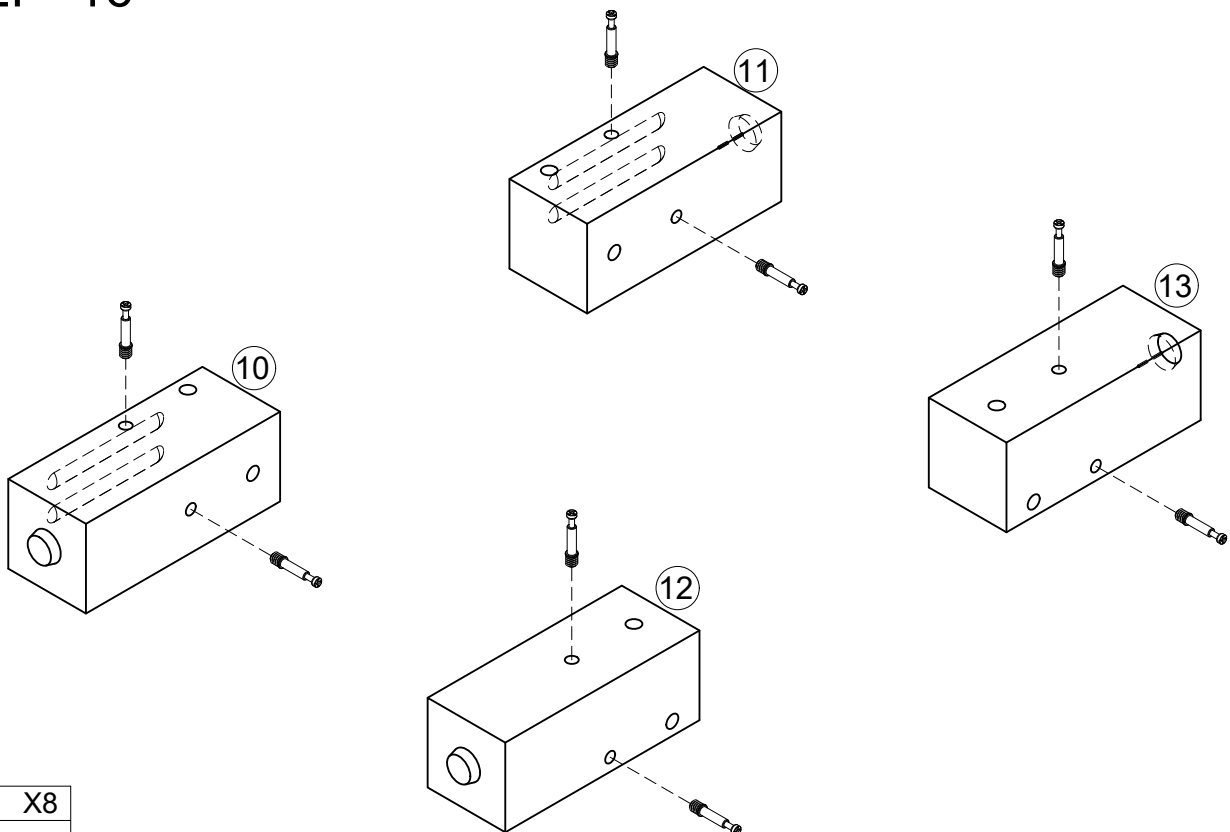

B	X8
	
Ø6x35mm	


INSTALLATION INSTRUCTION

STEP 17

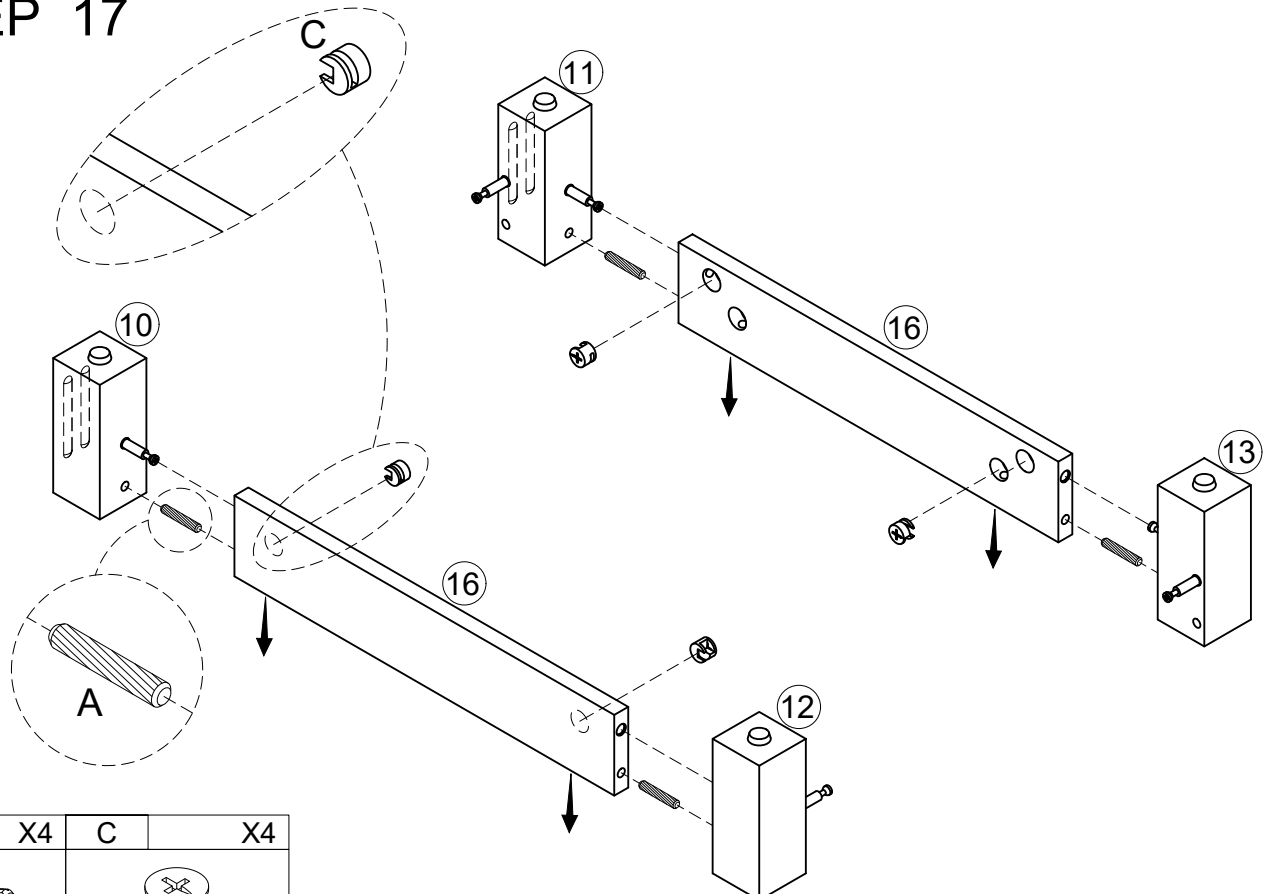

A	X4	C	X4
			
Ø6x30mm		Ø15x10mm	


STEP 18

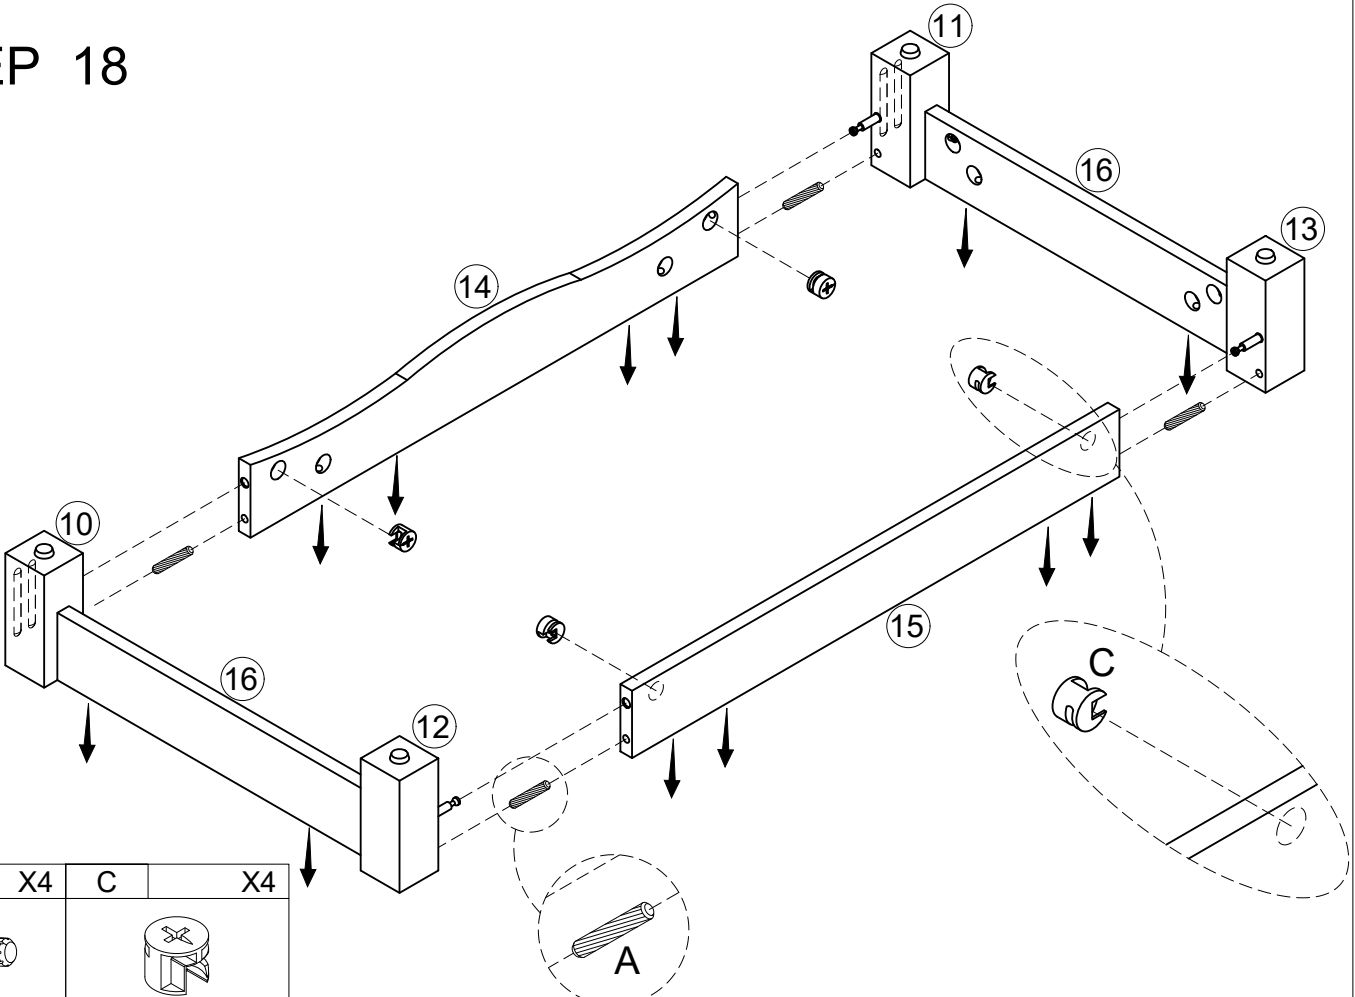

A	X4	C	X4
			
Ø6x30mm		Ø15x10mm	

INSTALLATION INSTRUCTION



STEP 19

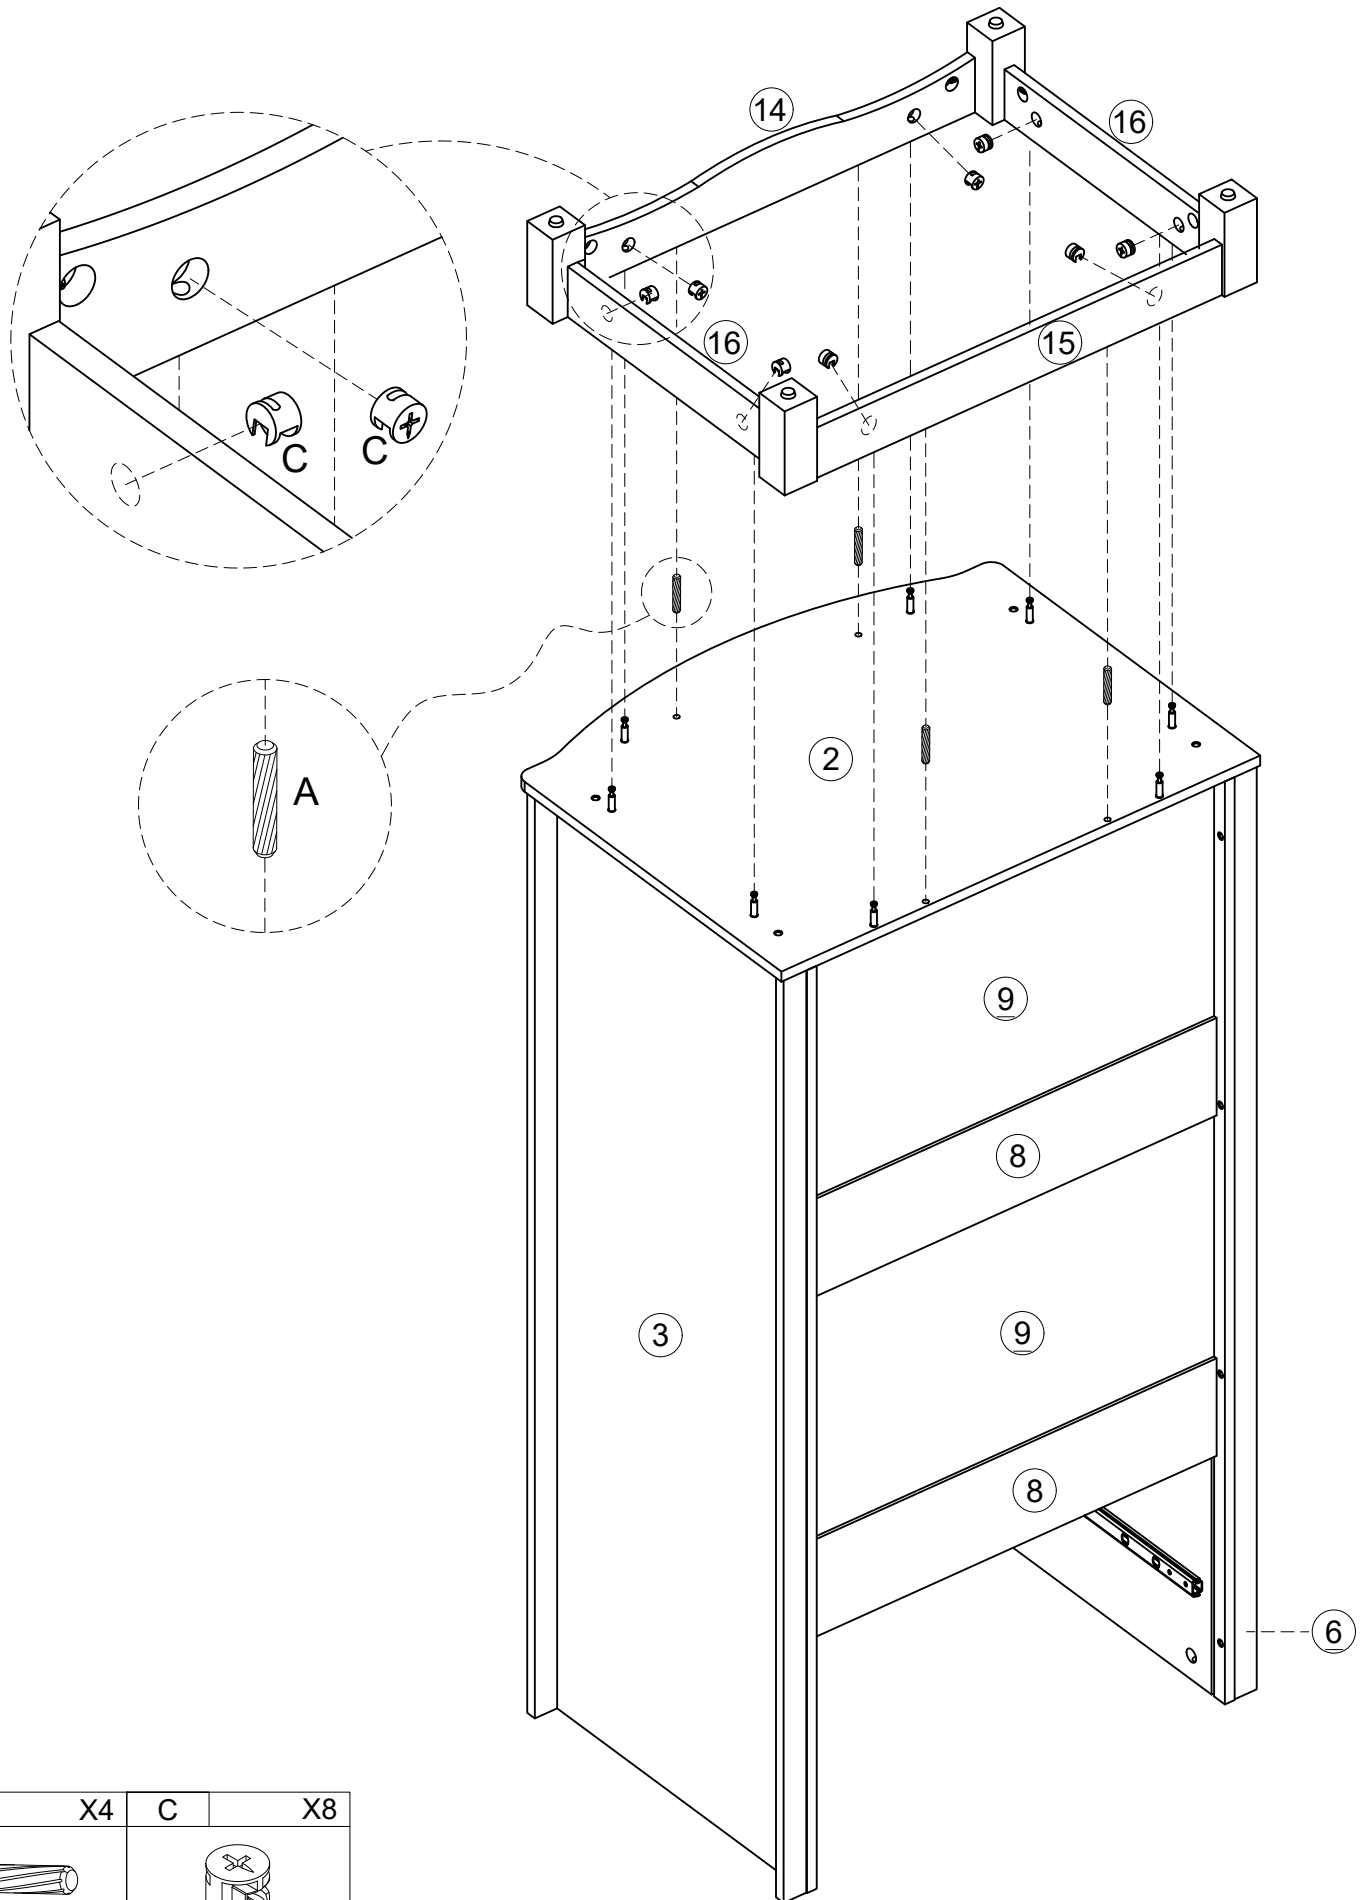


A	X4	C	X8
			
Ø6x30mm		Ø15x10mm	


INSTALLATION INSTRUCTION

STEP 20

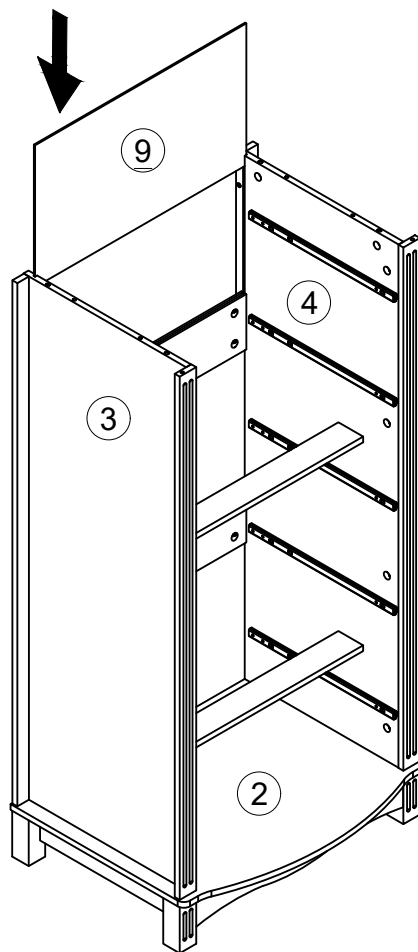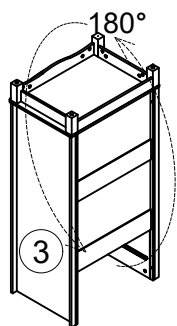


STEP 21

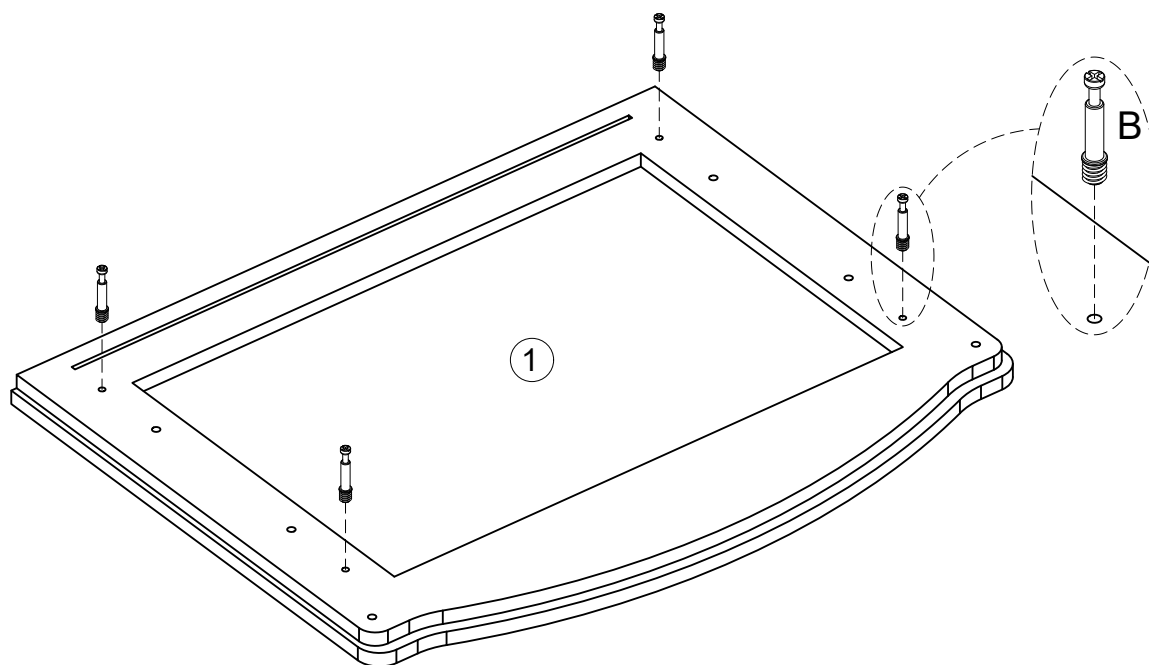

B	X4
	
Ø6x35mm	



INSTALLATION INSTRUCTION

STEP 22

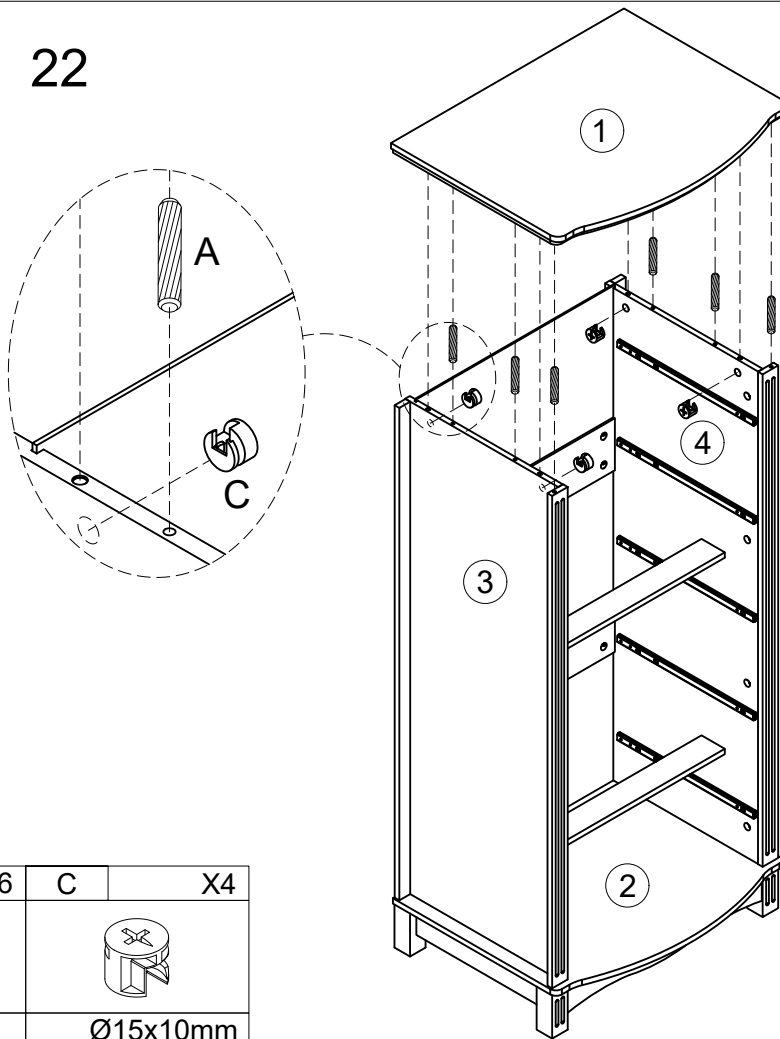

A	X6	C	X4
			
Ø6x30mm		Ø15x10mm	

STEP 23


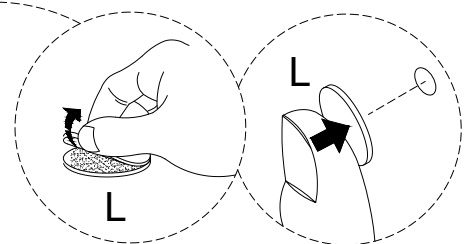
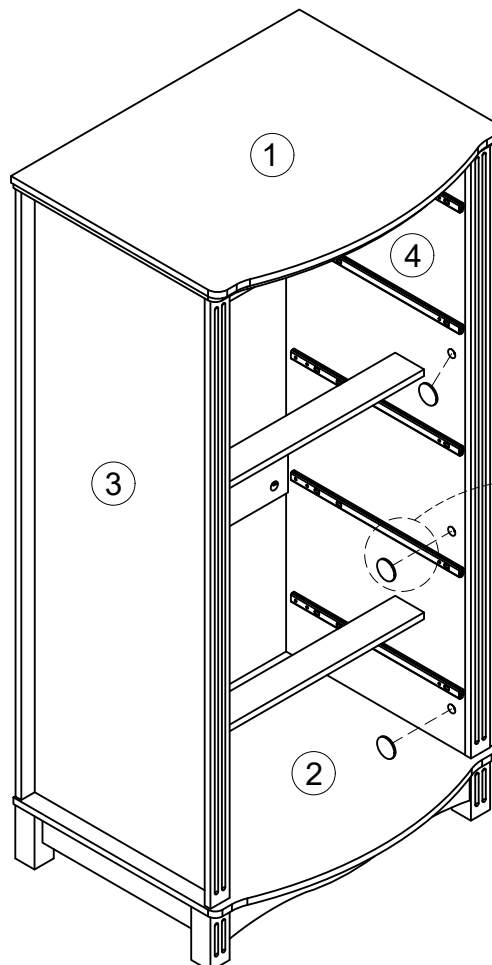


Cover the visible hole with a cap

L	X12
	



INSTALLATION INSTRUCTION

STEP 24

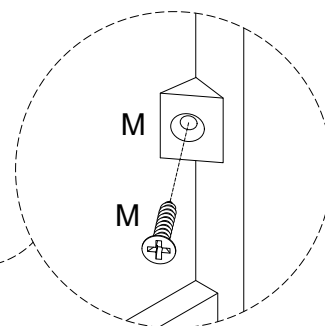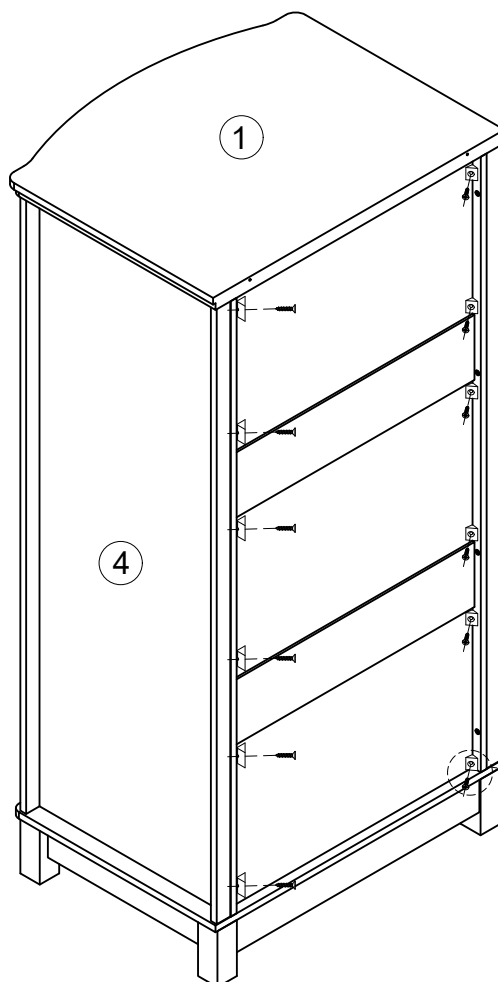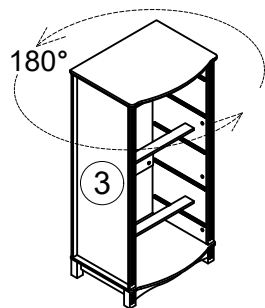

M	X12
	


STEP 25

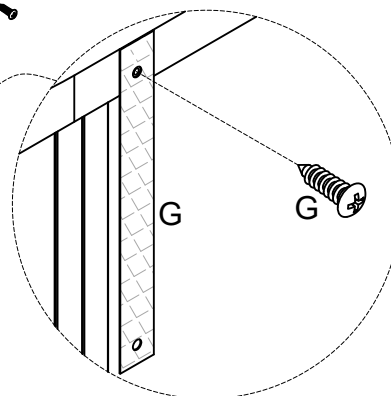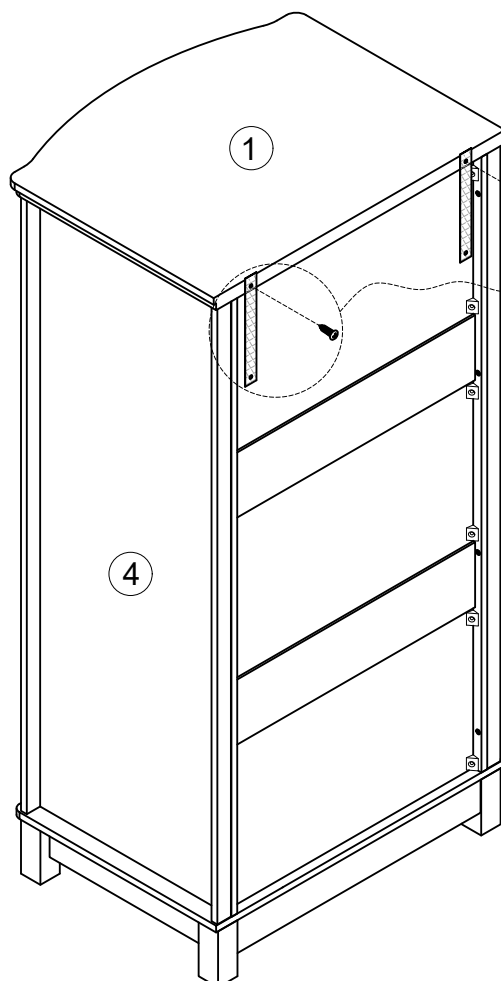


G	X2
	

INSTALLATION INSTRUCTION

STEP 26

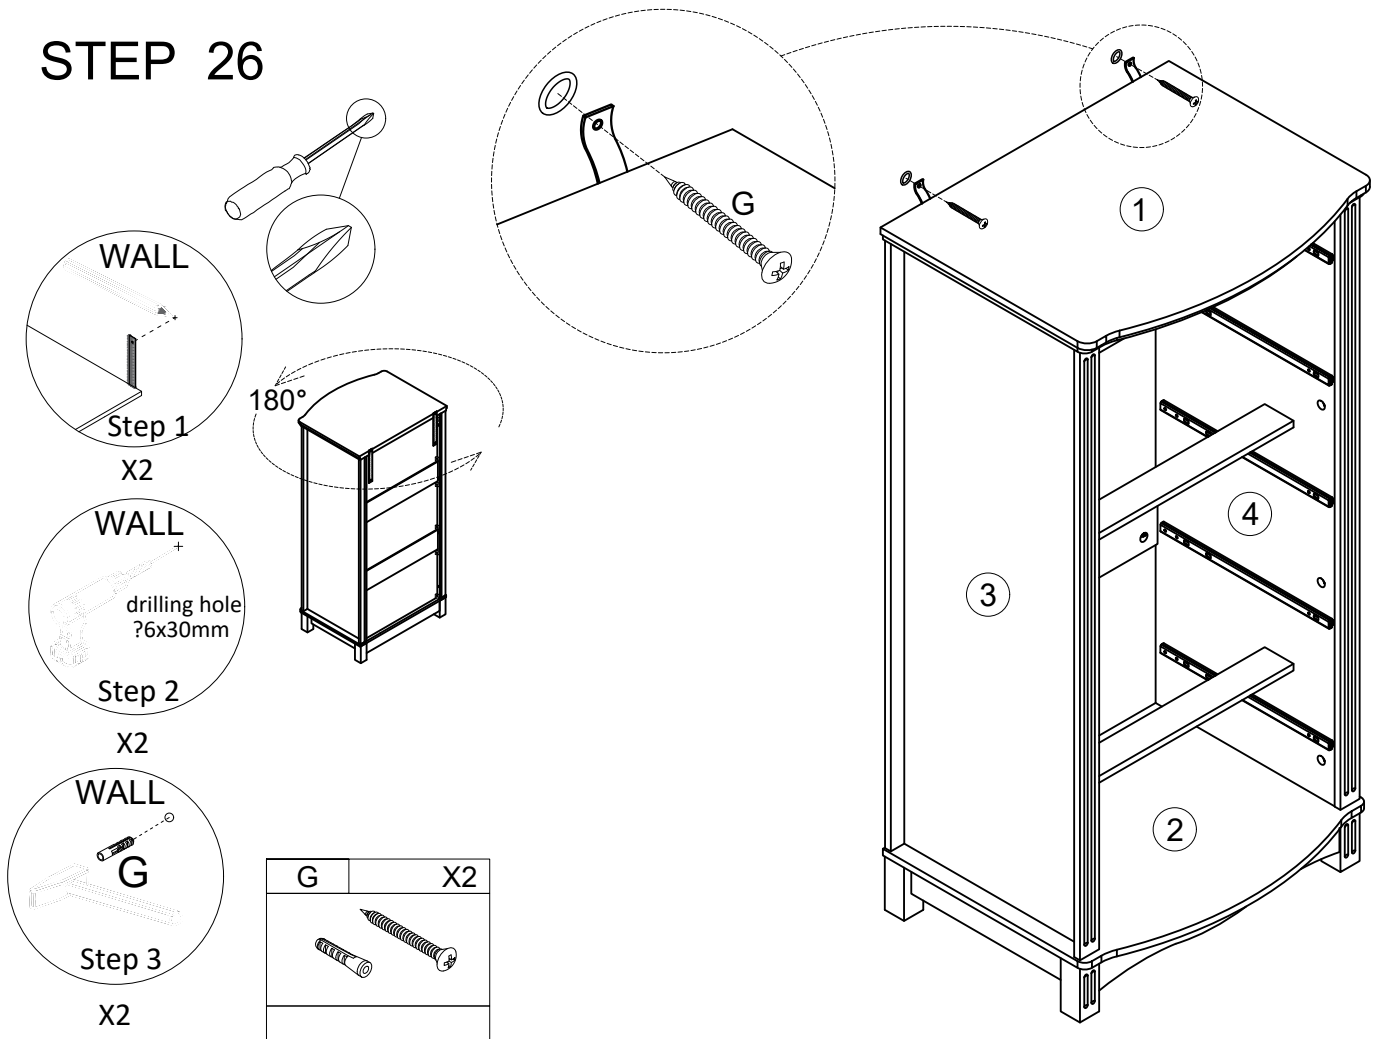

STEP 27

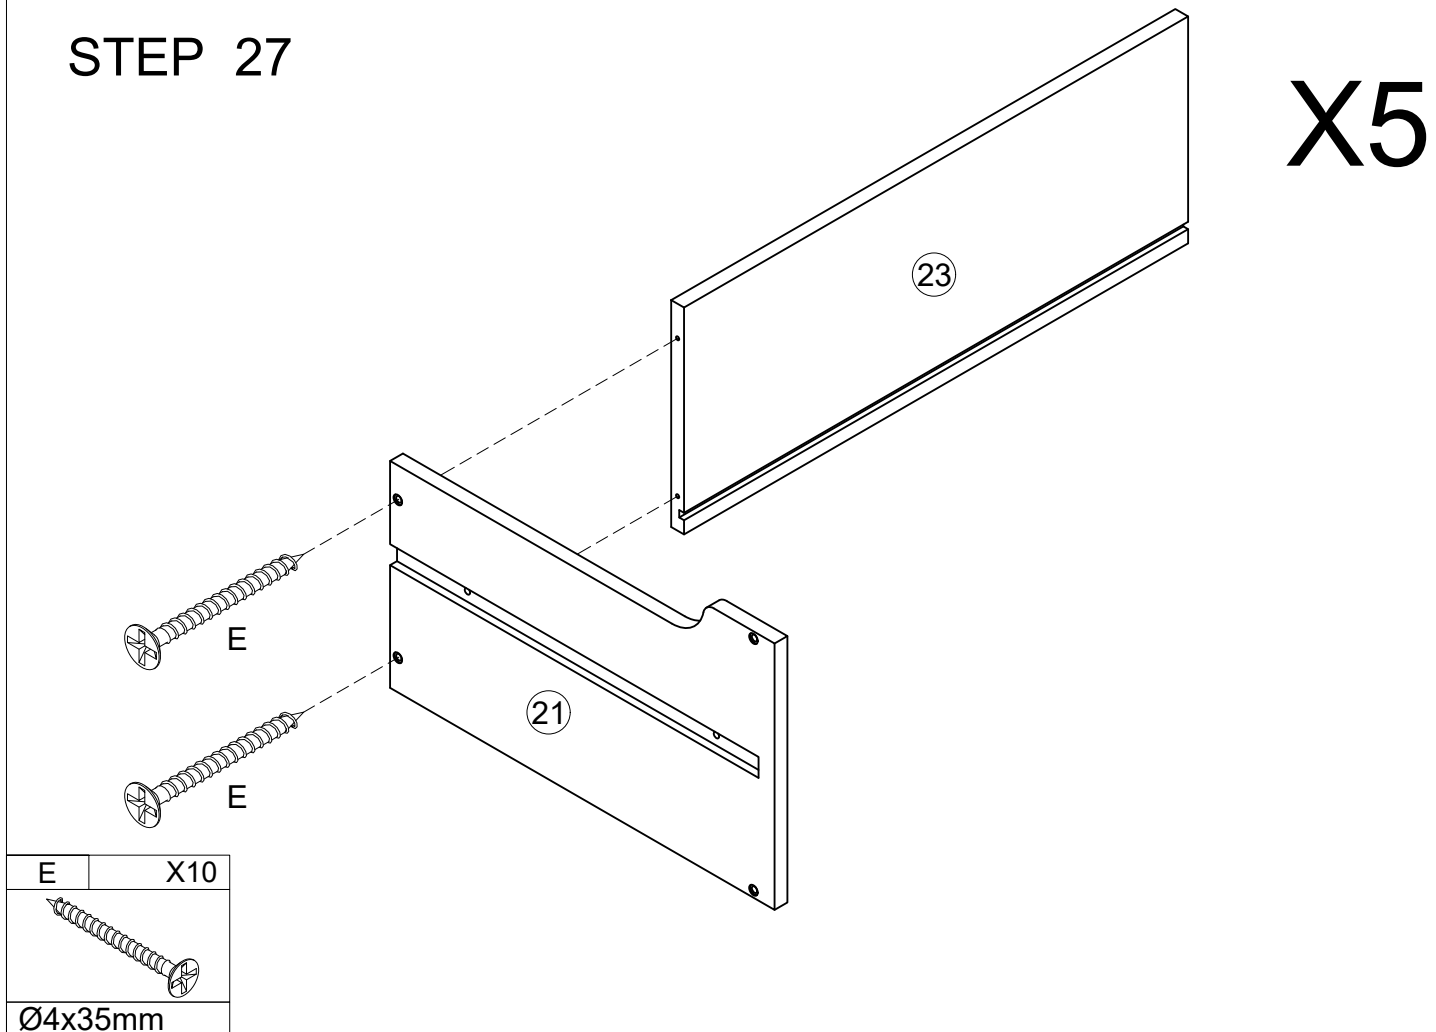


INSTALLATION INSTRUCTION


STEP 28

X5

X5

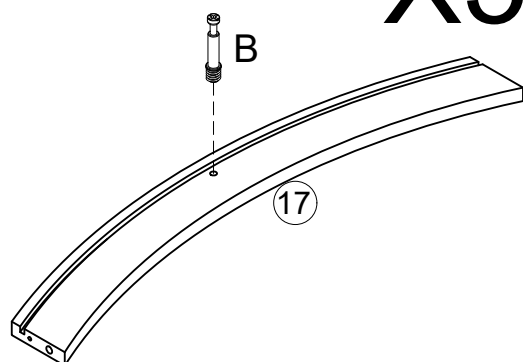

Installation here should be carried out gently; violent installation is prohibited.

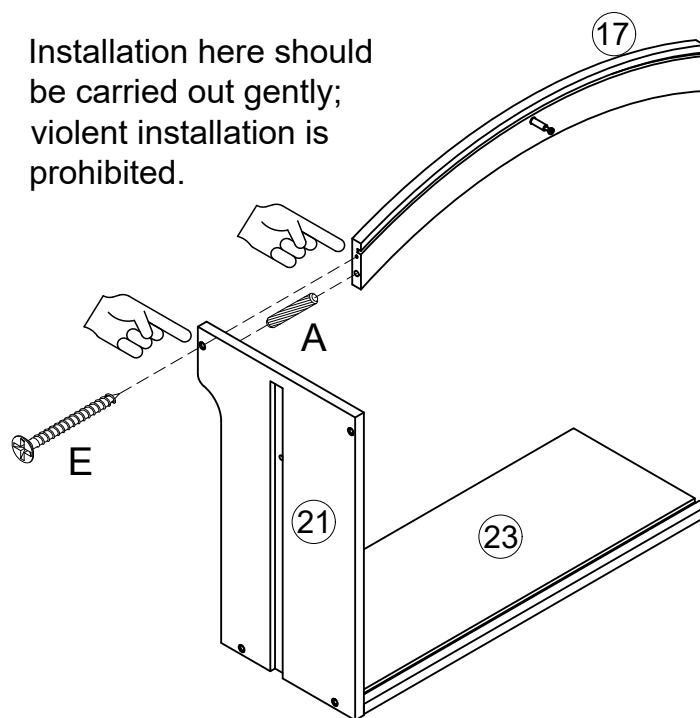


A	X5	B	X5	E	X5
Ø6x30mm		Ø6x35mm		Ø4x35mm	

STEP 29

Installation here should be carried out gently; violent installation is prohibited.

X5

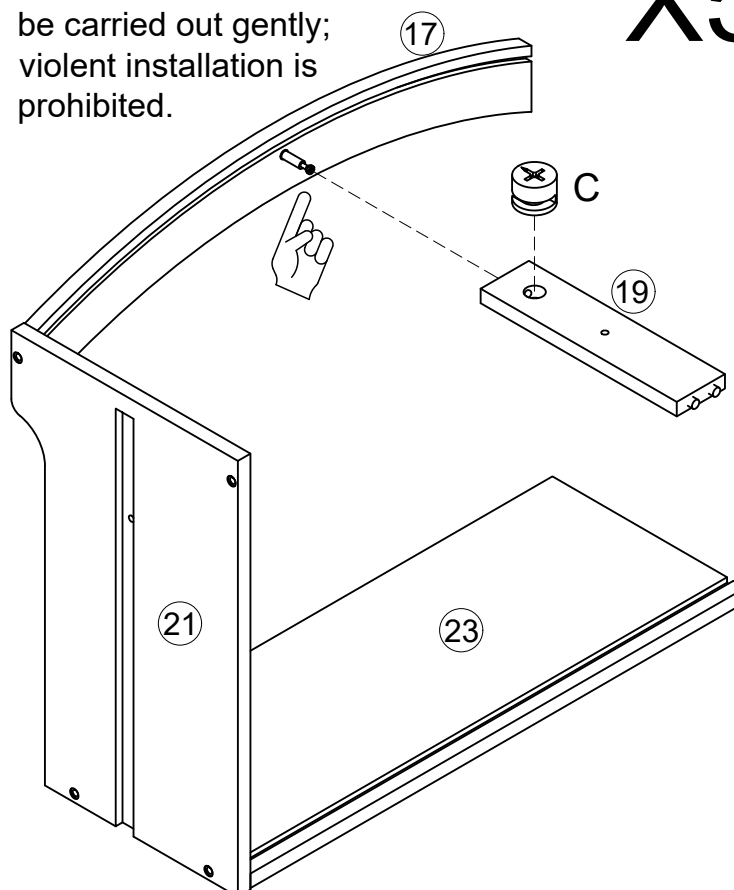


C	X5
Ø15x10mm	

INSTALLATION INSTRUCTION


STEP 30

X5

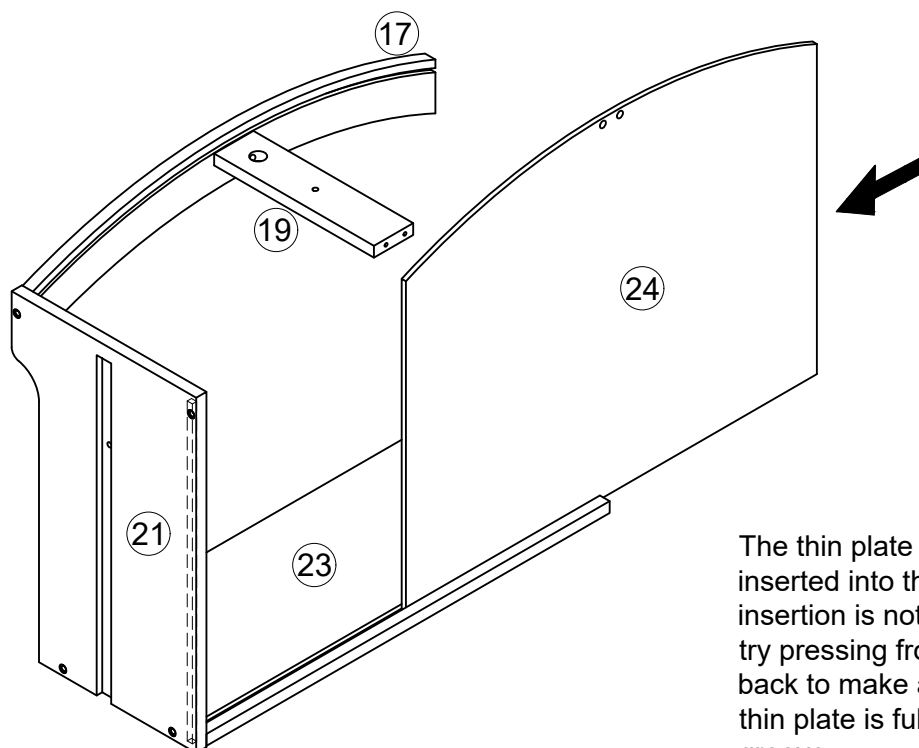


The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.

STEP 31

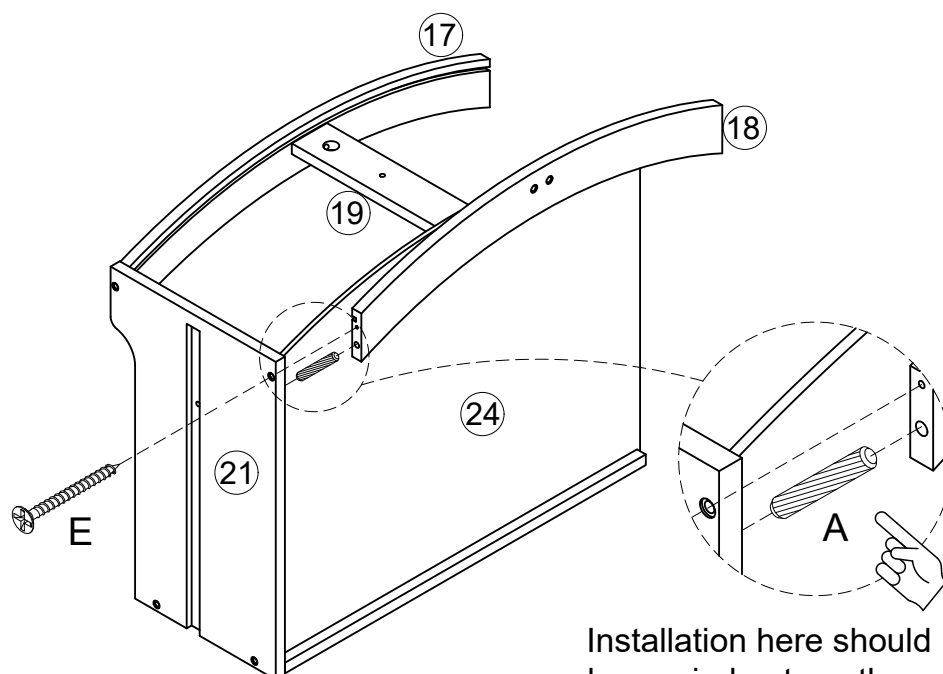


Installation here should be carried out gently; violent installation is prohibited.



A	X5	E	X5
			
Ø6x30mm		Ø4x35mm	

INSTALLATION INSTRUCTION


STEP 32

X5

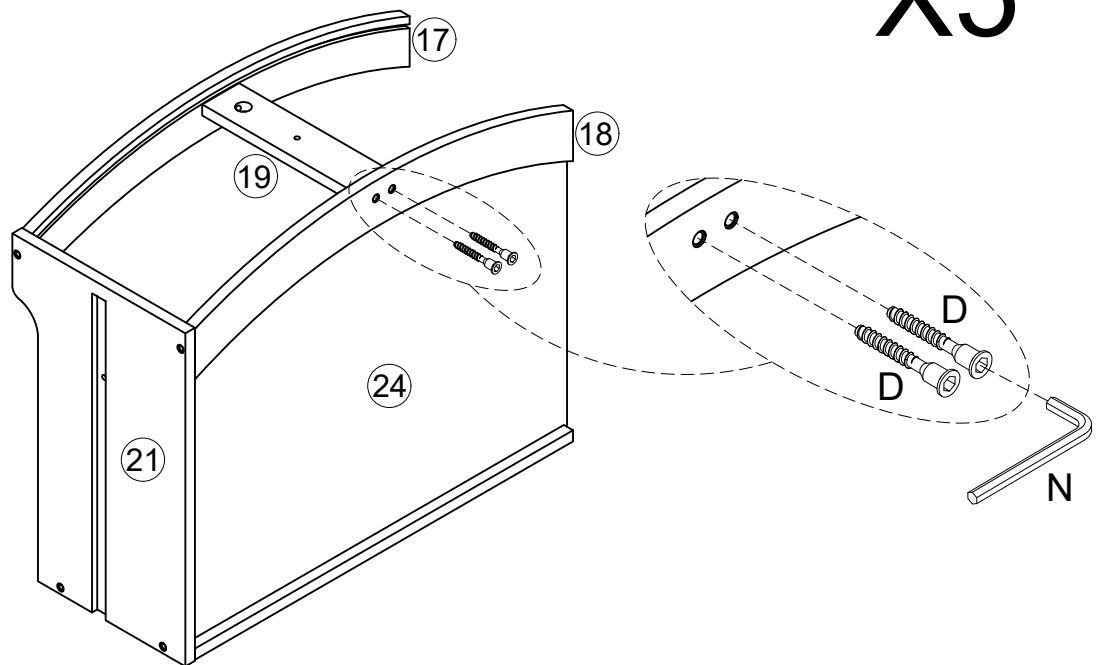

D	X10	N	X1
			
Ø5x38mm		3mm	

STEP 33

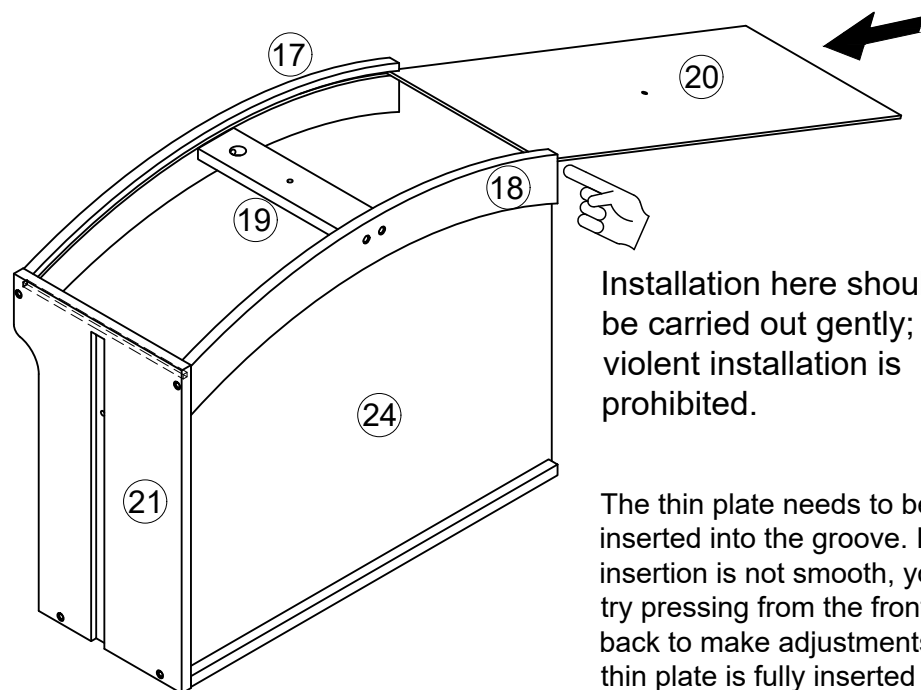


Installation here should be carried out gently; violent installation is prohibited.

The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.

INSTALLATION INSTRUCTION


STEP 34

X5

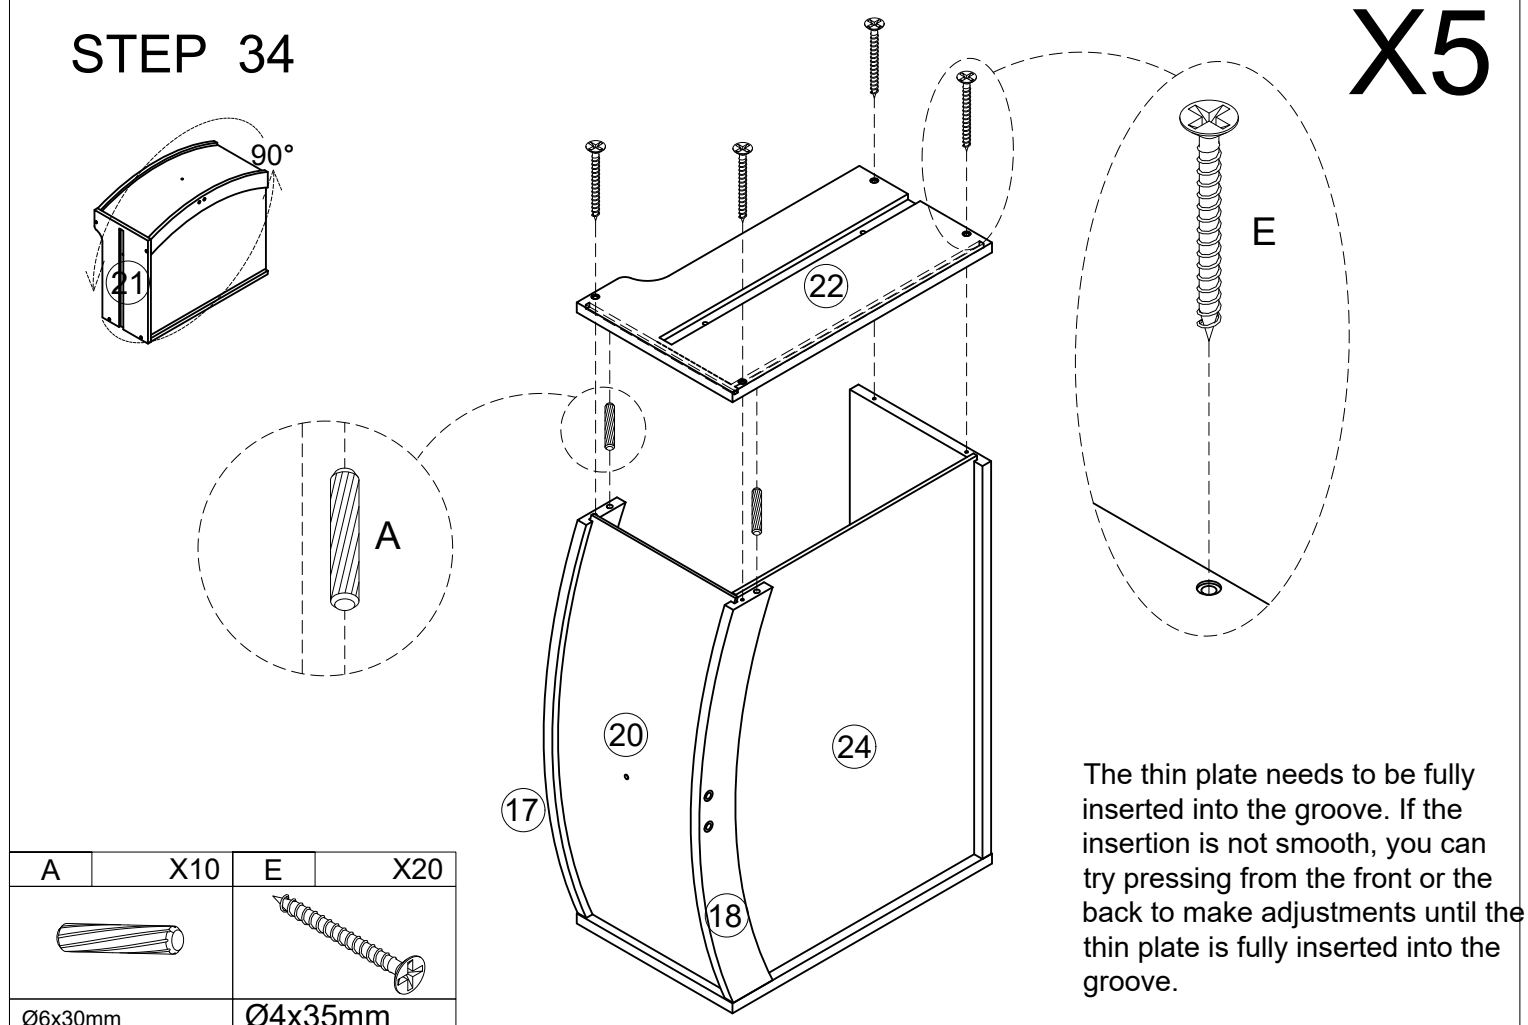



STEP 35

X5

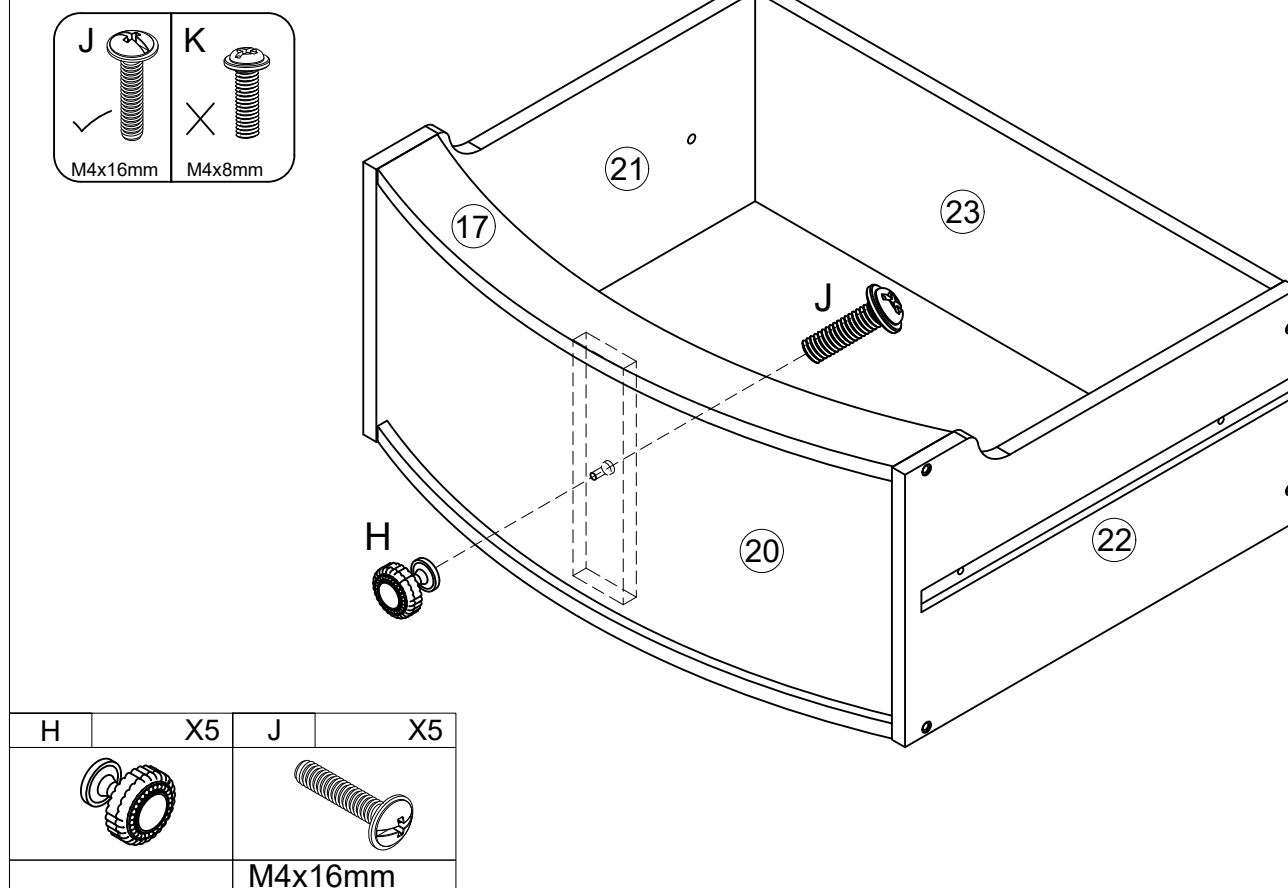


INSTALLATION INSTRUCTION

STEP 36

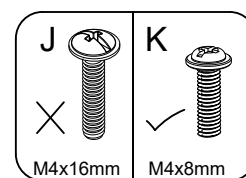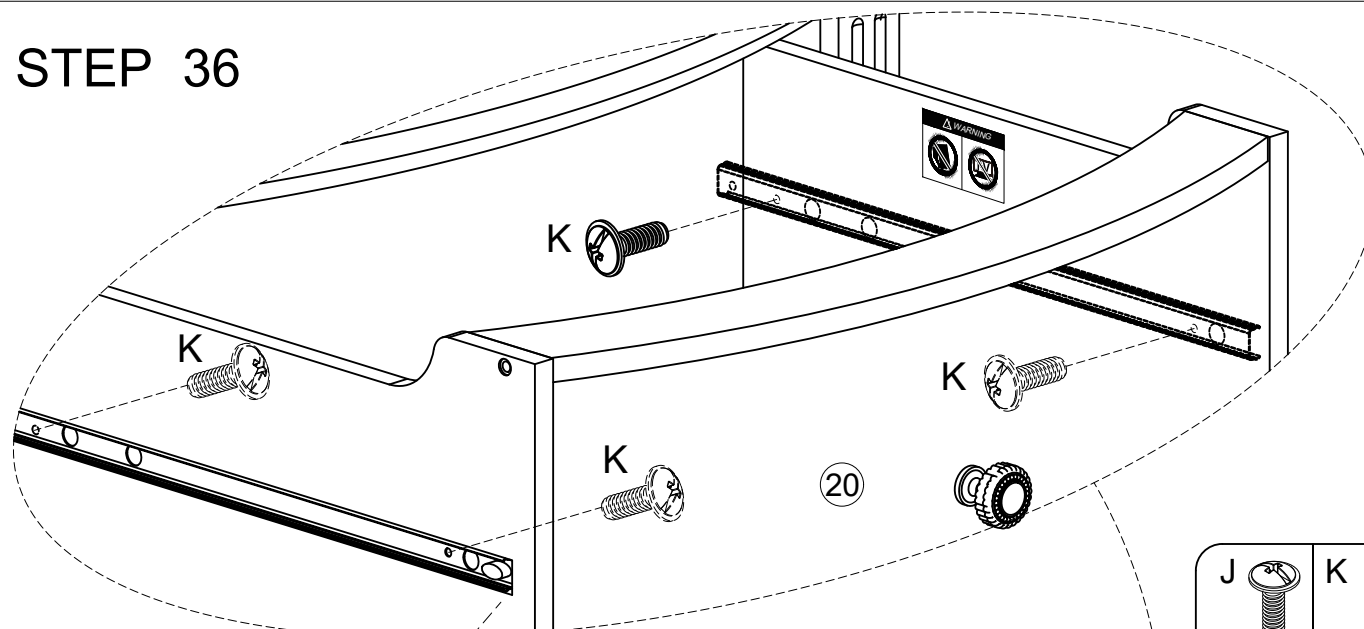

First, pull the slide rail to the front end of the drawer side groove. Align the slide rail with the hole on the drawer side panel, and then fix the slide rail in place using screws from inside the drawer.

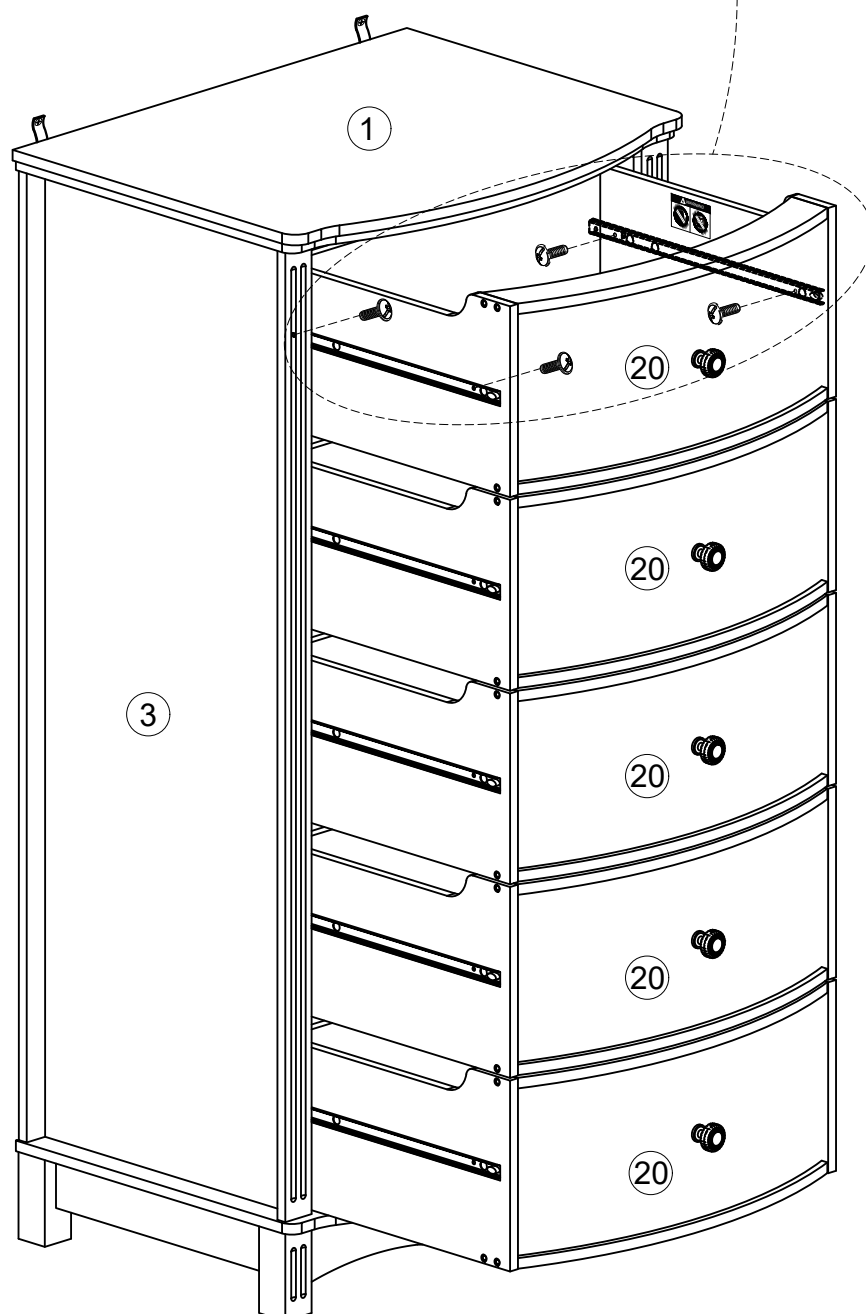

K	X20
	
M4x8mm	

INSTALLATION INSTRUCTION

STEP 37

