
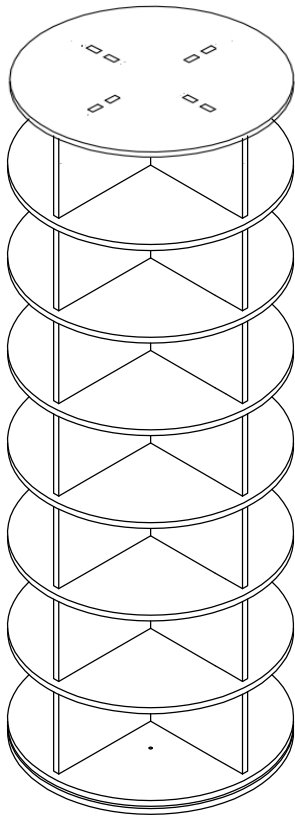
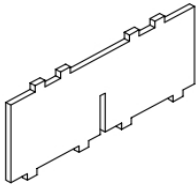
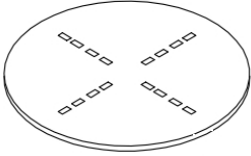
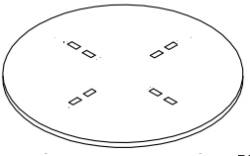




Assembly Instructions

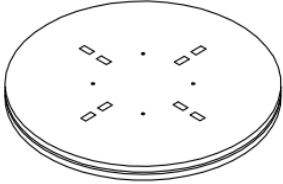




Be sure to align with the hole position during installation and do not install it forcefully.

		
X14	x6	X1
		
X1		


1.

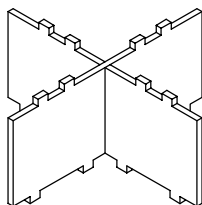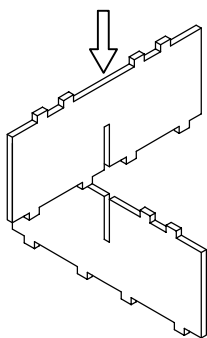


2.

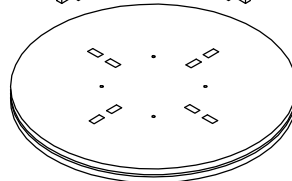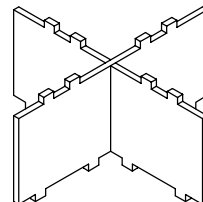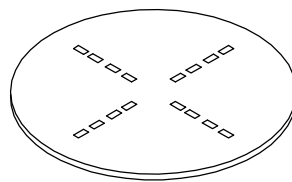


3.

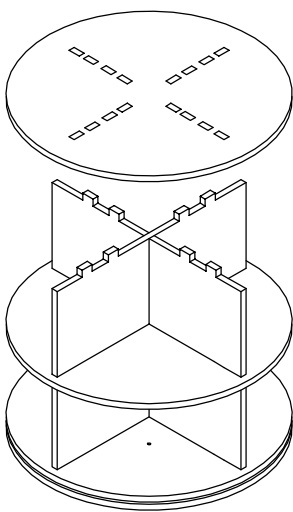


4.

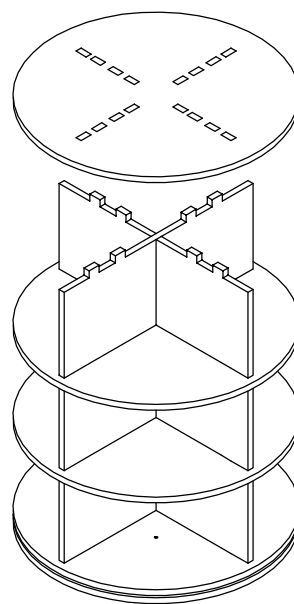


5.

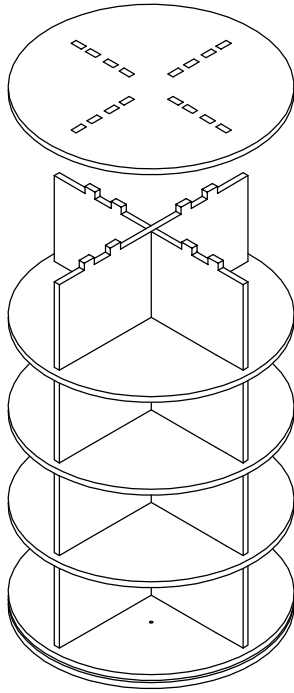

6.

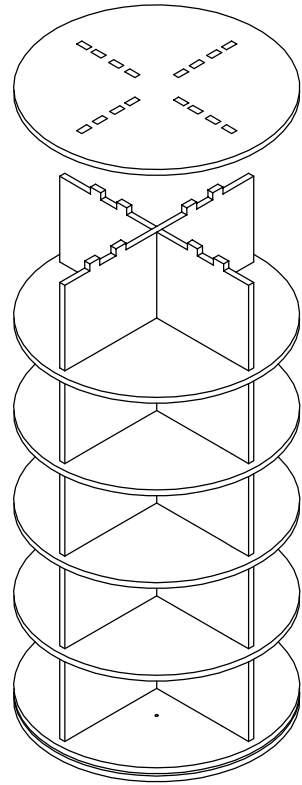

7.

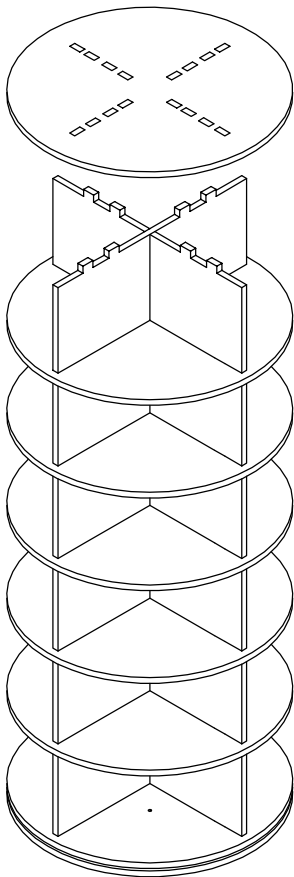

8.

