


STANDARD BED FULL

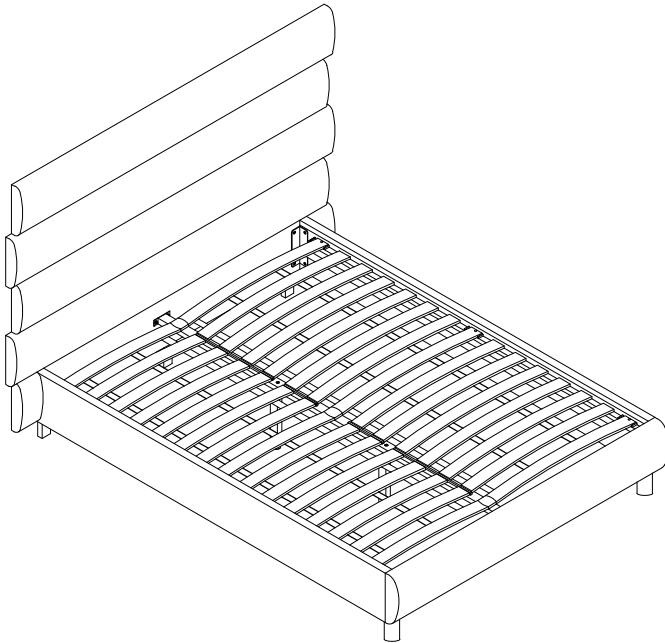


Please TEAR OFF this shrink film from side!
DO NOT USE CUTTER!


ITEM NUMBER:M108

IMPORTANT NOTE


1. FOR THE PROTECTION OF YOUR FURNITURE, PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE TO PREVENT ANY DAMAGE.
2. DO NOT USE POWER TOOLS TO ASSEMBLE THE BED.
3. PLEASE PERIODICALLY CHECK ALL FITTINGS AND RE-TIGHTEN AS NECESSARY.
4. DO NOT USE THE BED UNLESS ALL BOLTS AND SCREWS ARE FIRMLY SECURED.
5. NEED PARTS OR ASSISTANCE? EMAIL US AT felixcai2021@hotmail.com
6. YOU CAN ASSEMBLE IT WITH OUR PACKAGING TOOLS OR WITH A.

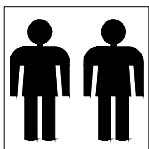


Minimum two
person assembly

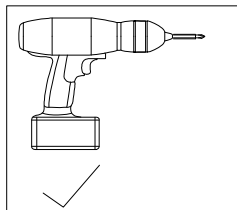


PART LIST

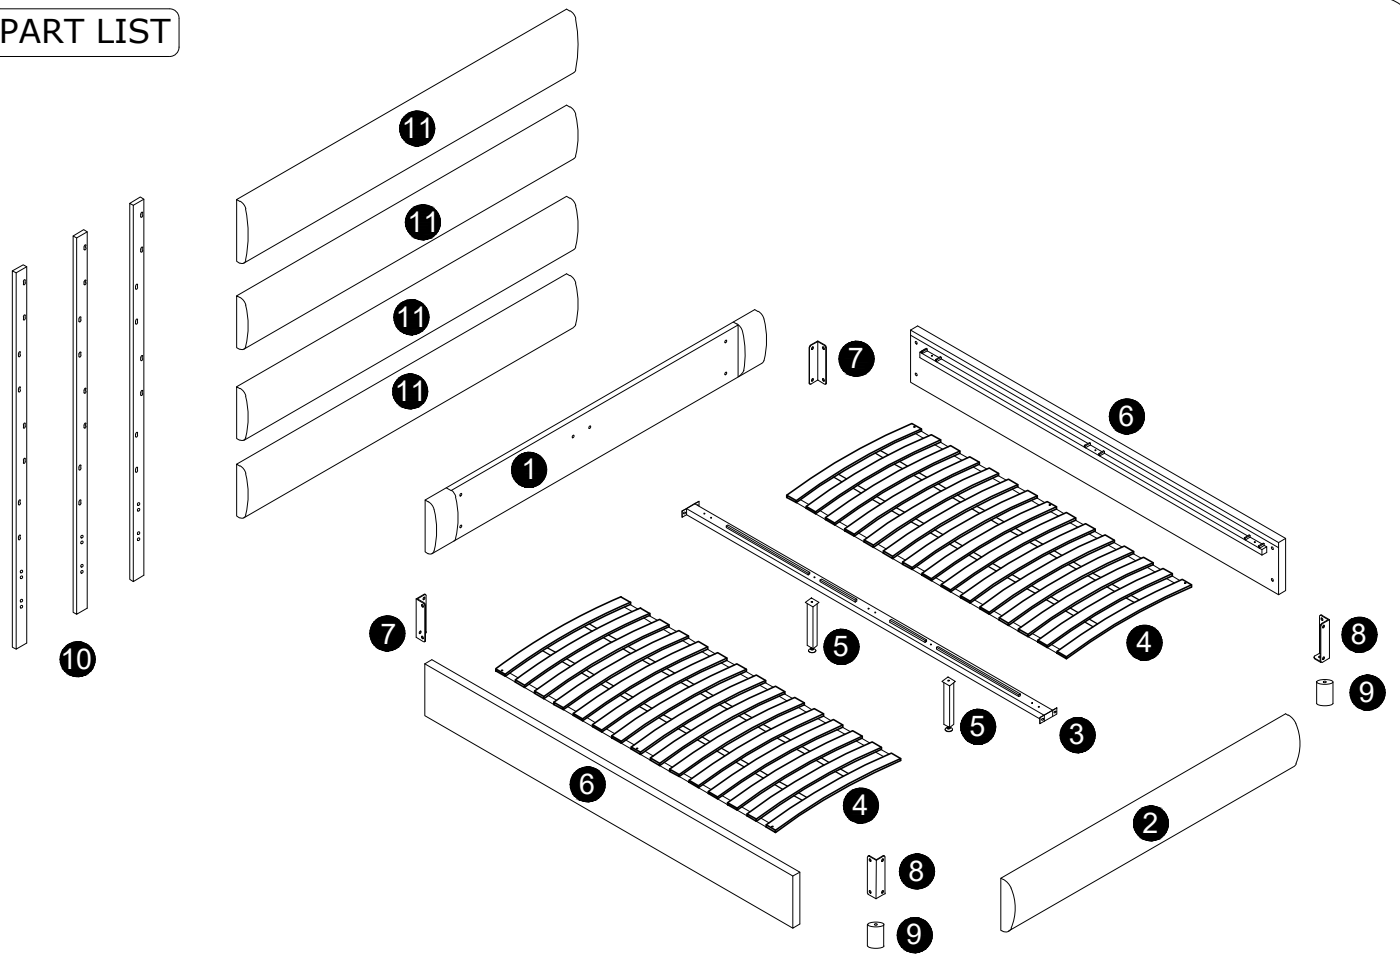


1 x 1pc

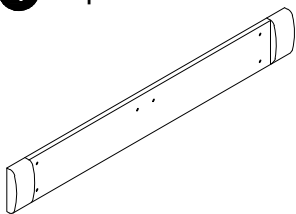


2 x 1pc

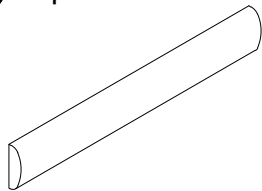

3 x 1pc

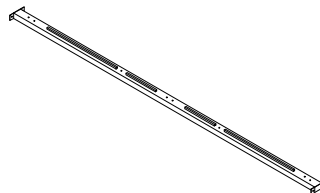


4 x 2pcs

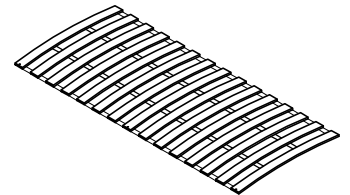


5 x 2pcs



6 x 2pcs

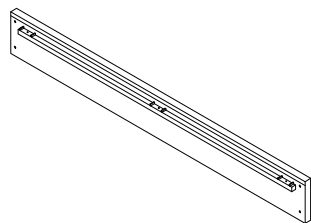

7 x 2pcs




8 x 2pcs




9 x 2pcs



10 x 3pcs

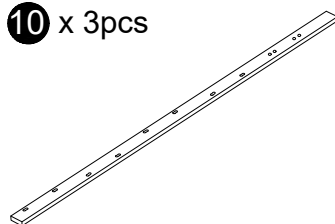

11 x 4pcs

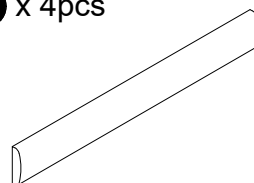

HARDWARE LIST



H1 M5 x 1pc



H2 M8x25mm x 18pcs



H3 M8x50mm x 4pcs




H4 M8x40mm x 32pcs



H5 M8 x 24pcs



H6 M8x17mm x 54pcs




H7 x 3pcs




H8 x 6pcs


1

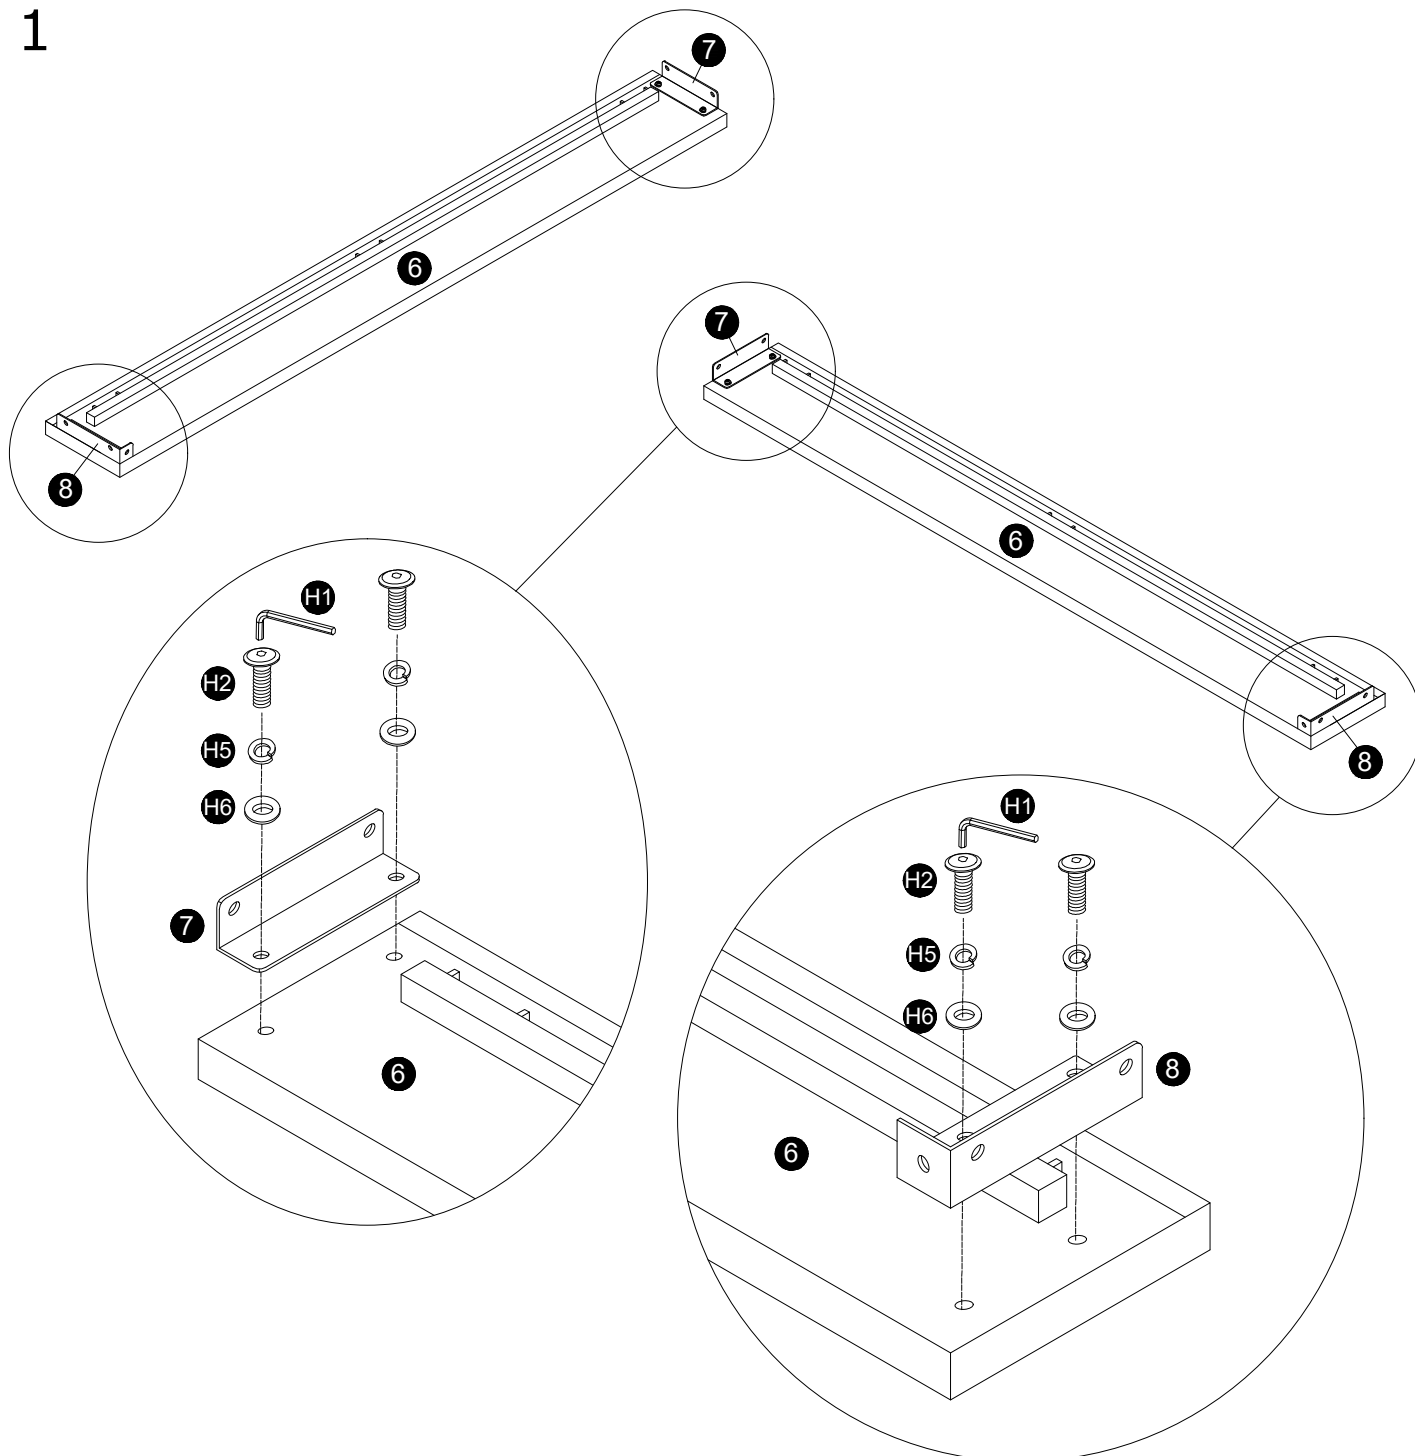


2

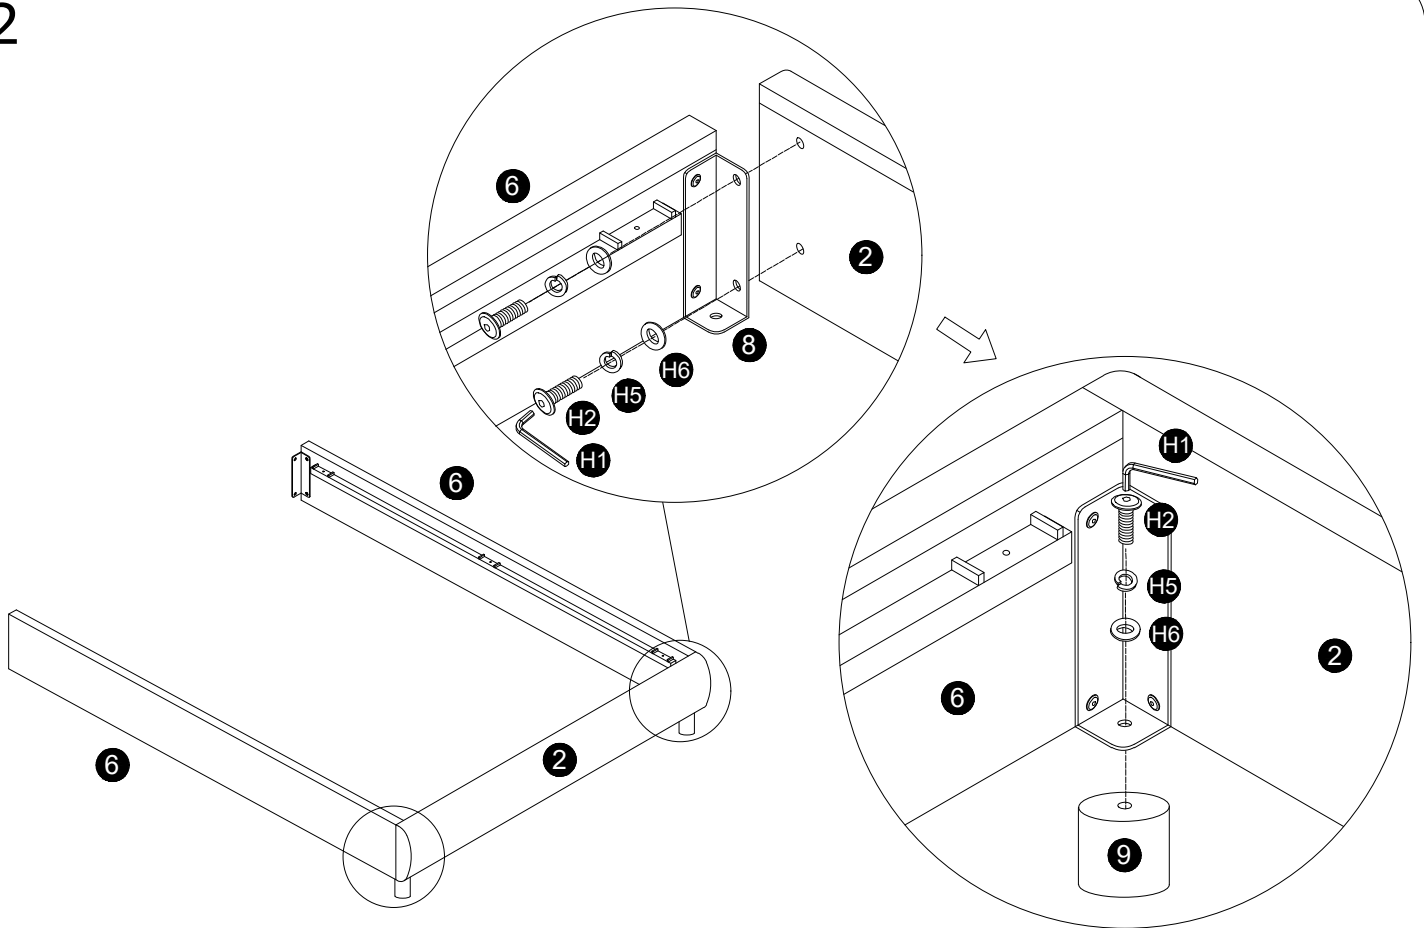


3

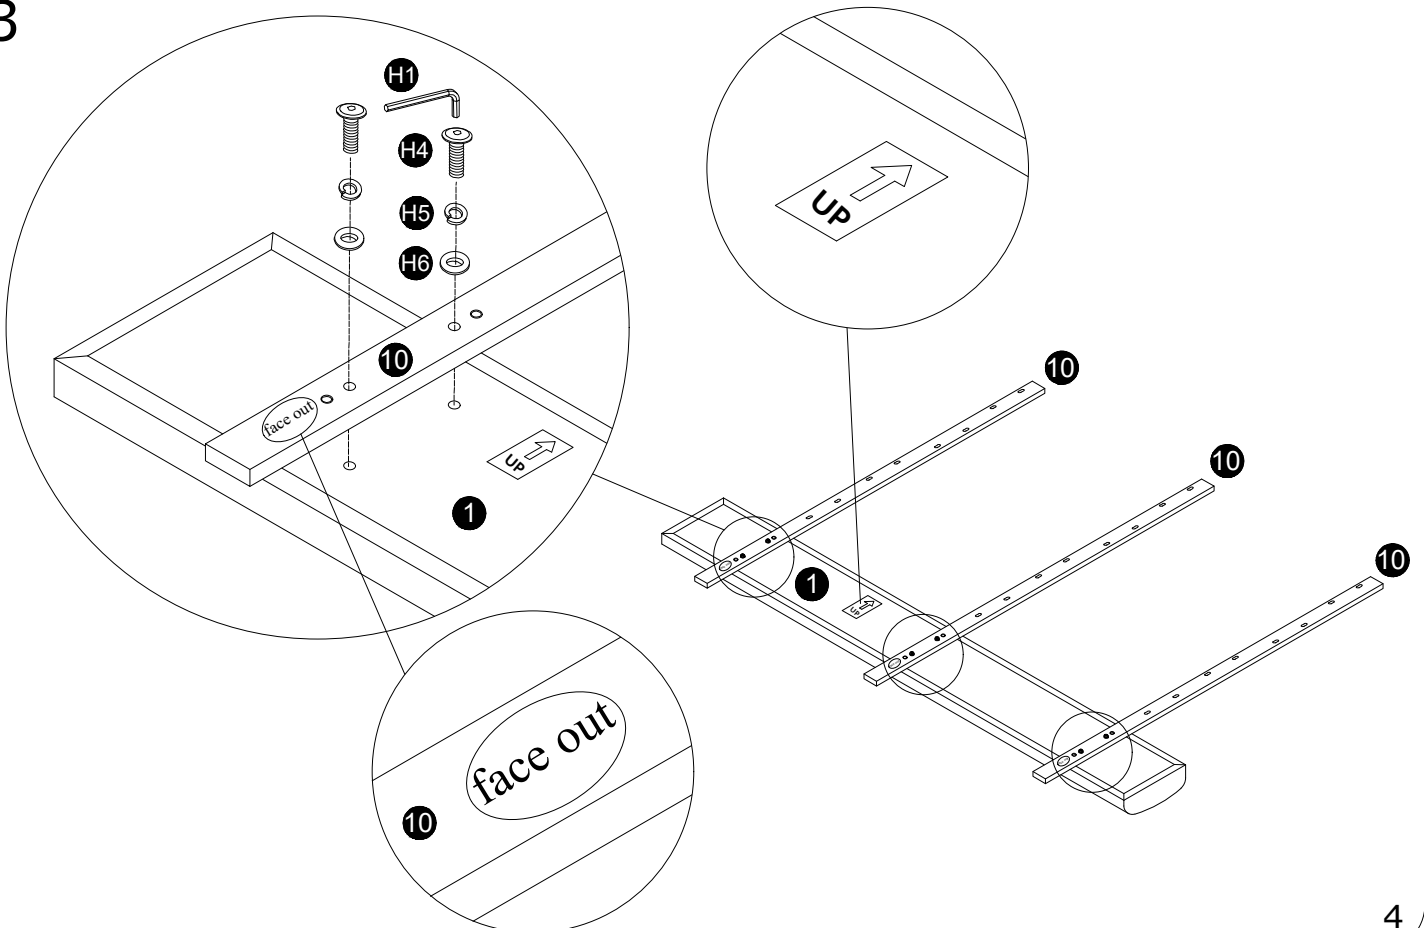


4

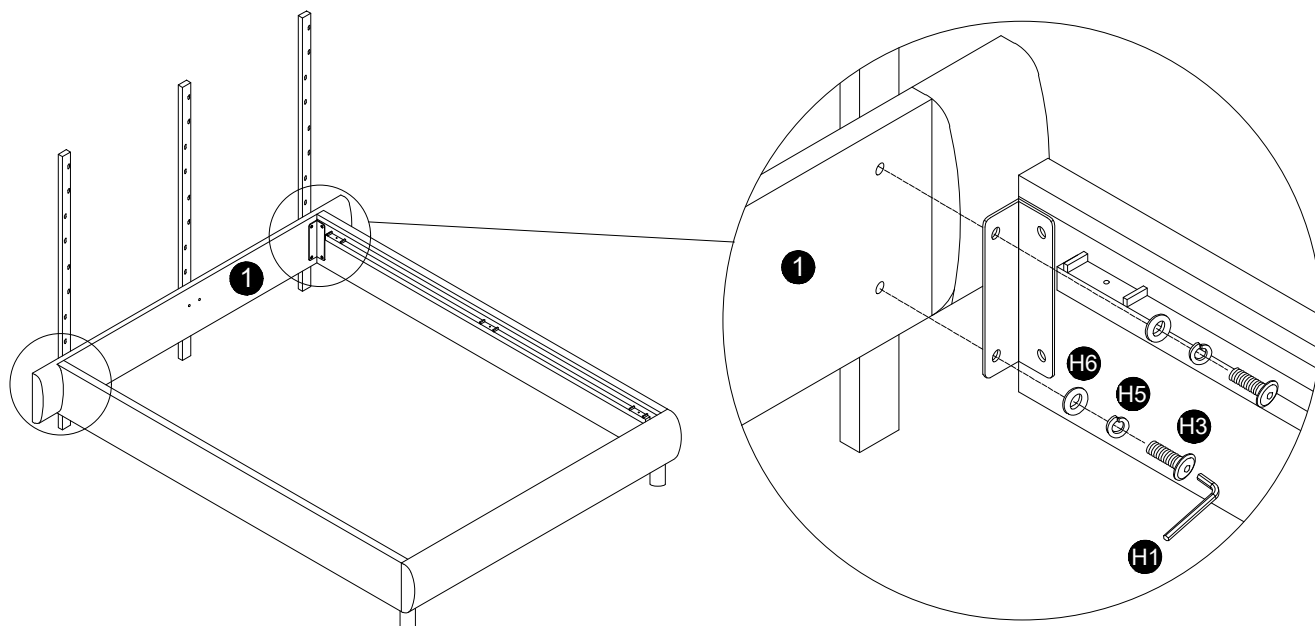



5

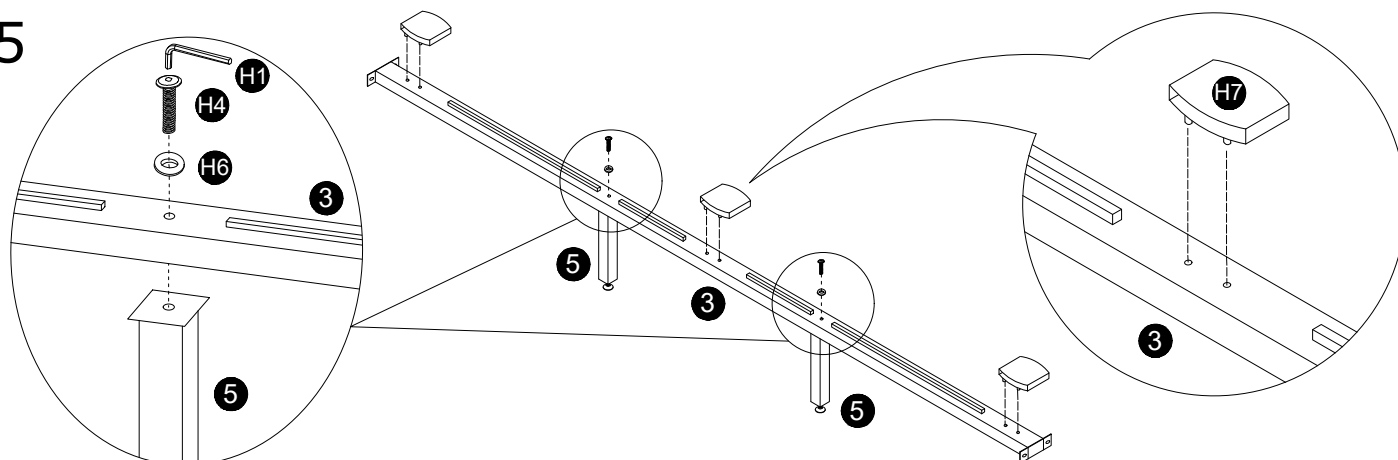




6

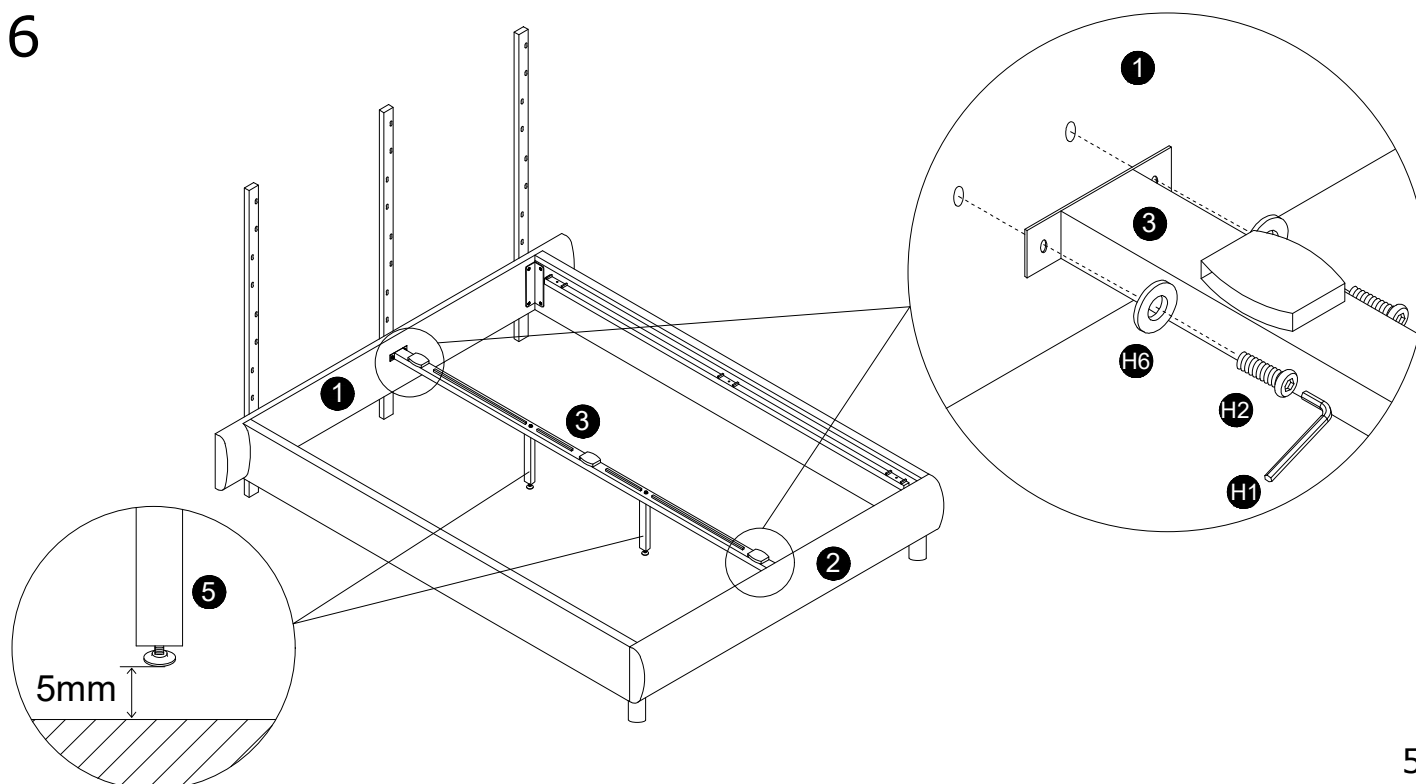

7

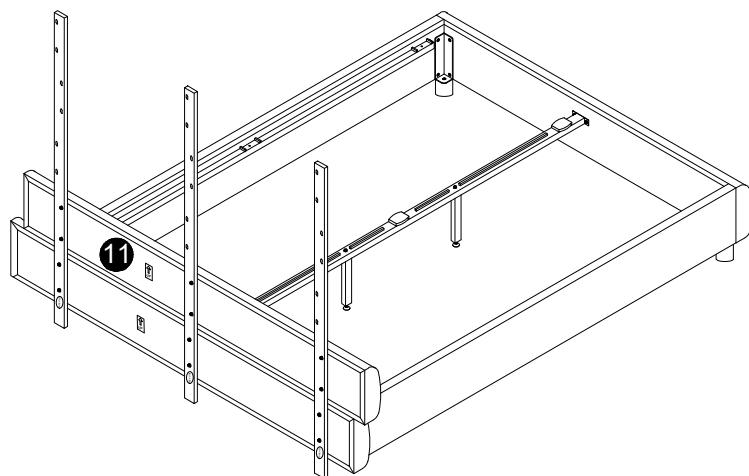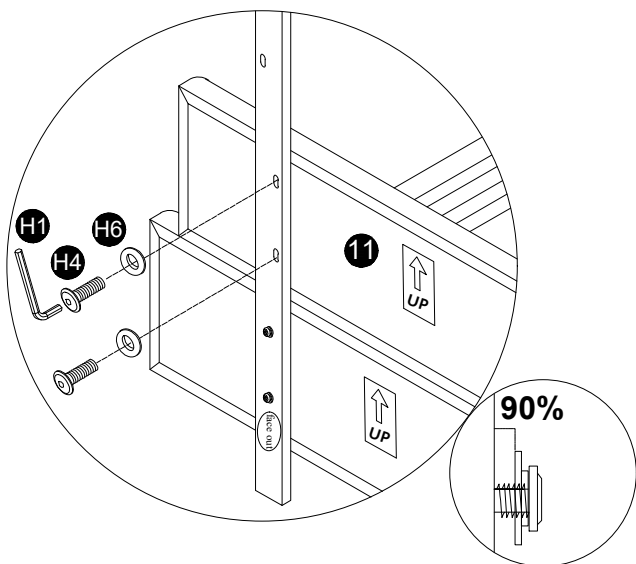


Need to be installed from
bottom to top by layer

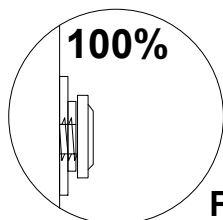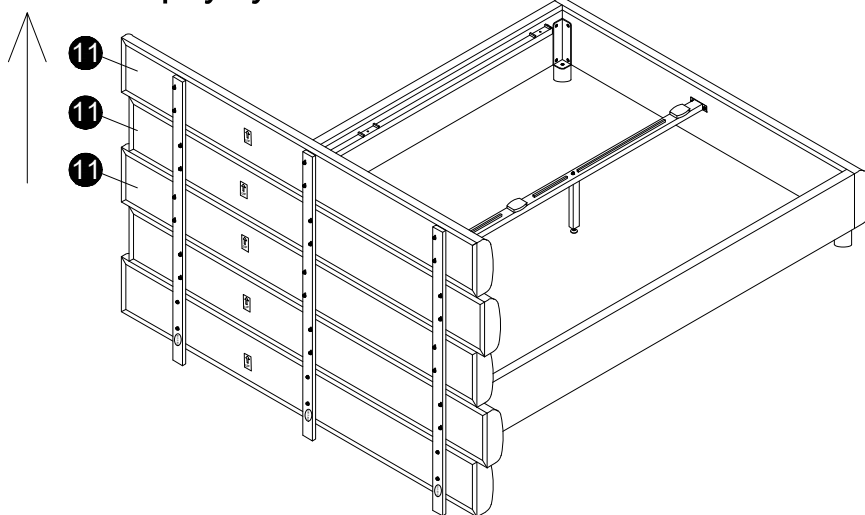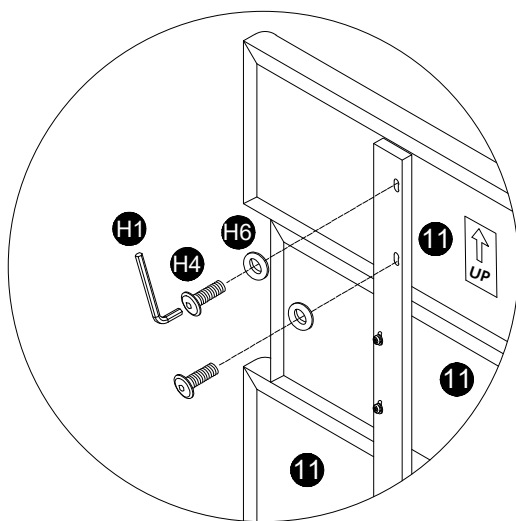

Fully tighten all fixings.

8

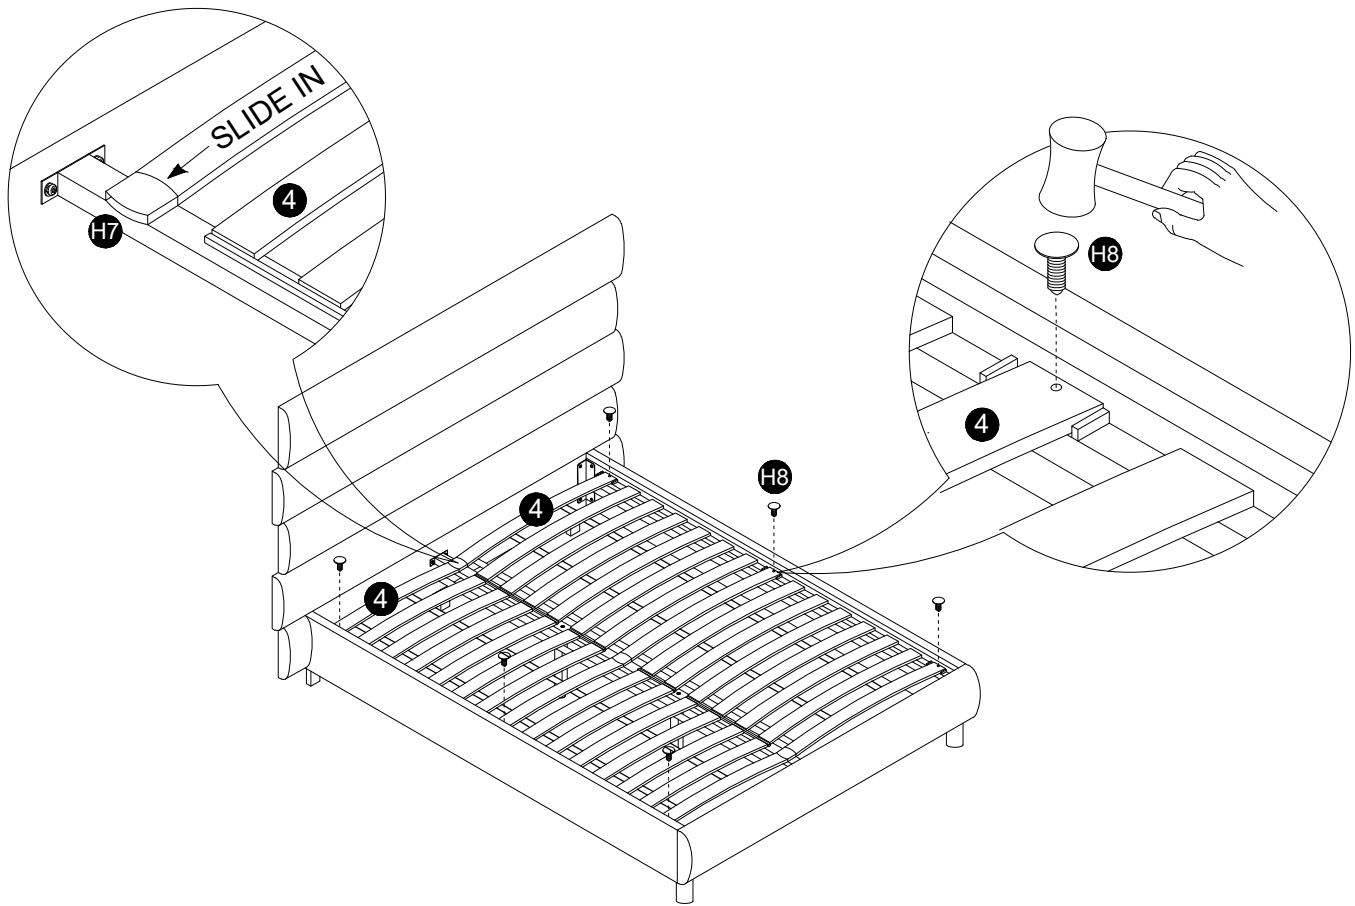

Job Complete !

In the interest of our environment please dispose of all packaging thoughtfully.