



PEEL & STICK WALLPAPER

INSTALLATION GUIDE

Professional Application for a Refined, Luxurious Finish



OVERVIEW

Peel and stick wallpaper offers a clean, modern solution for elevating interiors with minimal disruption. When installed correctly, it delivers a seamless, high-end aesthetic comparable to traditional wallcoverings—without paste or permanent commitment.

SURFACE REQUIREMENTS (CRITICAL)

For optimal adhesion and longevity:



SUITABLE SURFACES

- Smooth, flat walls
- Painted drywall with matte, eggshell, or satin finishes



UNSUITABLE SURFACES

- Textured walls (including orange peel, knockdown, or heavy stippling)
- Semi-gloss or high-gloss finishes (these reduce adhesive grip and can cause lifting or failure)
- Brick, concrete, unfinished wood, or porous surfaces



IMPORTANT: The adhesive is engineered for controlled bonding on smooth, low-sheen finishes. Higher gloss levels create a barrier that weakens adhesion.

PREPARATION



1. CLEAN THE SURFACE

Remove dust, grease, and residue using a mild, non-abrasive cleaner. Allow the wall to dry completely.



2. CURE TIME FOR FRESH PAINT

Wait at least 2–4 weeks after painting before installation.



3. ENVIRONMENTAL CONDITIONS

Ideal temperature: 65°F–80°F (18°C–27°C)
Avoid high humidity environments during installation.



4. TOOLS RECOMMENDED

- Measuring tape
- Level or laser level
- Utility knife (sharp blade)
- Squeegee or smoothing tool
- Microfiber cloth




PROFESSIONAL TIP

For a truly luxurious finish, lighting and alignment are everything—take extra care with your first panel. It sets the visual standard for the entire installation.


INSTALLATION STEPS

1. PLAN & ALIGN

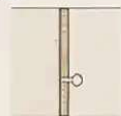

Begin at a vertical reference line (use a level). Dry-fit panels to confirm pattern alignment.

2. PEEL GRADUALLY

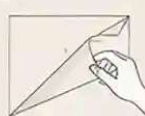

Start at the top of the panel. Peel back 6–12 inches of backing at a time.

3. APPLY WITH PRECISION




Press the exposed adhesive to the wall. Use a smoothing tool to eliminate air pockets. Work top to bottom, center outward.

4. CONTINUE IN SECTIONS



Slowly remove backing while maintaining alignment. Avoid stretching the material.

5. TRIM EDGES

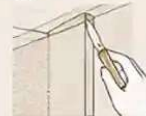

Use a sharp blade for clean cuts along ceilings, baseboards, and corners.

6. SEAM MATCHING



Butt seams carefully—do not overlap unless specified by the design.

FINISHING TOUCHES

- ✓ Re-smooth all panels to ensure full adhesion
- ✓ Inspect seams and edges for lifting
- ✓ Allow 24 hours for adhesive to fully settle



REMOVAL

Gently peel from a top corner at a 45° angle. Remove slowly to minimize surface impact. Residue is minimal when applied to proper surfaces.

DISCLAIMERS & IMPORTANT NOTES



SURFACE COMPATIBILITY

This product is not suitable for textured walls or surfaces with irregular finishes. Adhesion failure is likely under these conditions.



PAINT FINISH LIMITATION

Avoid applying to semi-gloss or glossy paints, as reduced surface friction can compromise adhesion performance.



SURFACE INTEGRITY

Application on fragile, poorly primed, or low-quality paint may result in paint lifting during removal.



ENVIRONMENTAL FACTORS

Excess humidity, temperature fluctuations, or poor ventilation may affect adhesion and durability.



USER RESPONSIBILITY

It is strongly recommended to test a small, inconspicuous area prior to full installation.



WARRANTY LIMITATION

Improper surface conditions, incorrect installation, or environmental factors beyond manufacturer control may void product guarantees.

THANK YOU FOR CHOOSING OUR PEEL & STICK WALLPAPER
ENJOY YOUR BEAUTIFULLY TRANSFORMED SPACE.