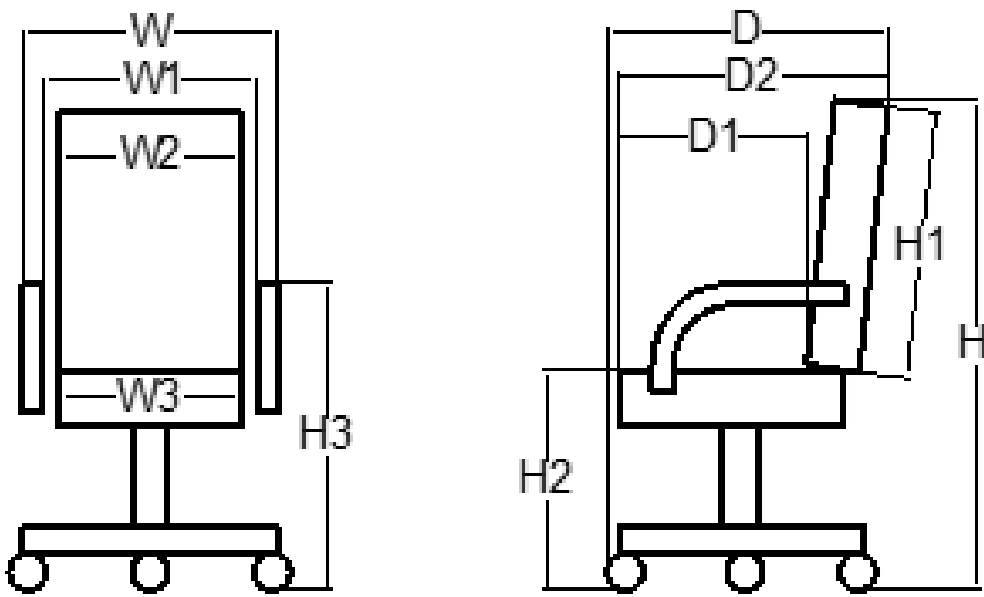


FULL CHAIR DIMENSION(inch)			
ARM.O.W	25.98	 The technical drawing consists of two views of an office chair. The left view is a front elevation showing the chair's profile with dimensions W (total width), W1 (width at the top of the backrest), W2 (width of the backrest), W3 (width of the seat), and H3 (height from the base to the top of the backrest). The right view is a side elevation showing the chair's profile with dimensions D (total depth), D2 (depth of the backrest), D1 (depth of the seat), H1 (height of the backrest), H2 (height from the base to the seat), and H (total height). The chair has a five-point base with casters.	
ARM.I.W1	20.67		
SEAT.W3	21.06		
SEAT.H2	18.50-21.46		
SEAT.D1	19.69		
BACK.W2	21.06		
BACK.H1	29.53		
D2	29.53		
ARM.H3	25.98-28.94	OVERALL SIZE (D*W*H)	D32.09*W25.98*H43.5-46.46