


Assembly Instructions




General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

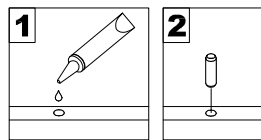


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

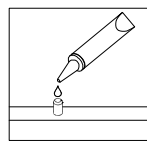



- VI. A Phillips head screwdriver is required for the assembly of this product .

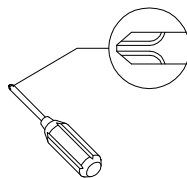





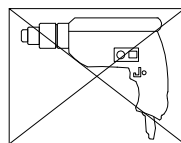












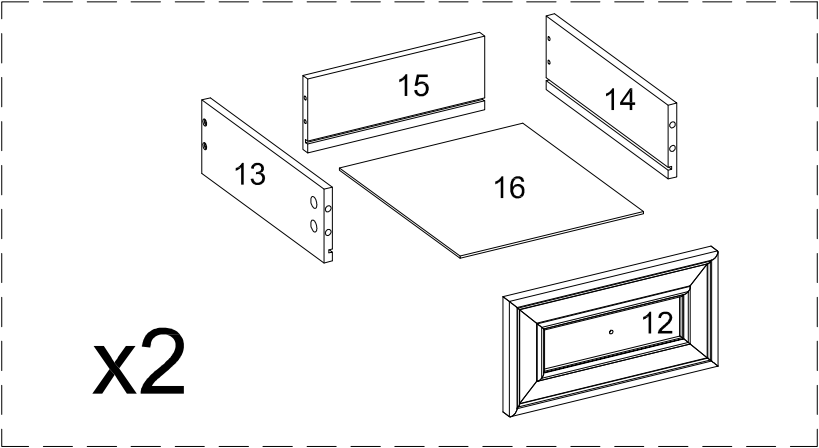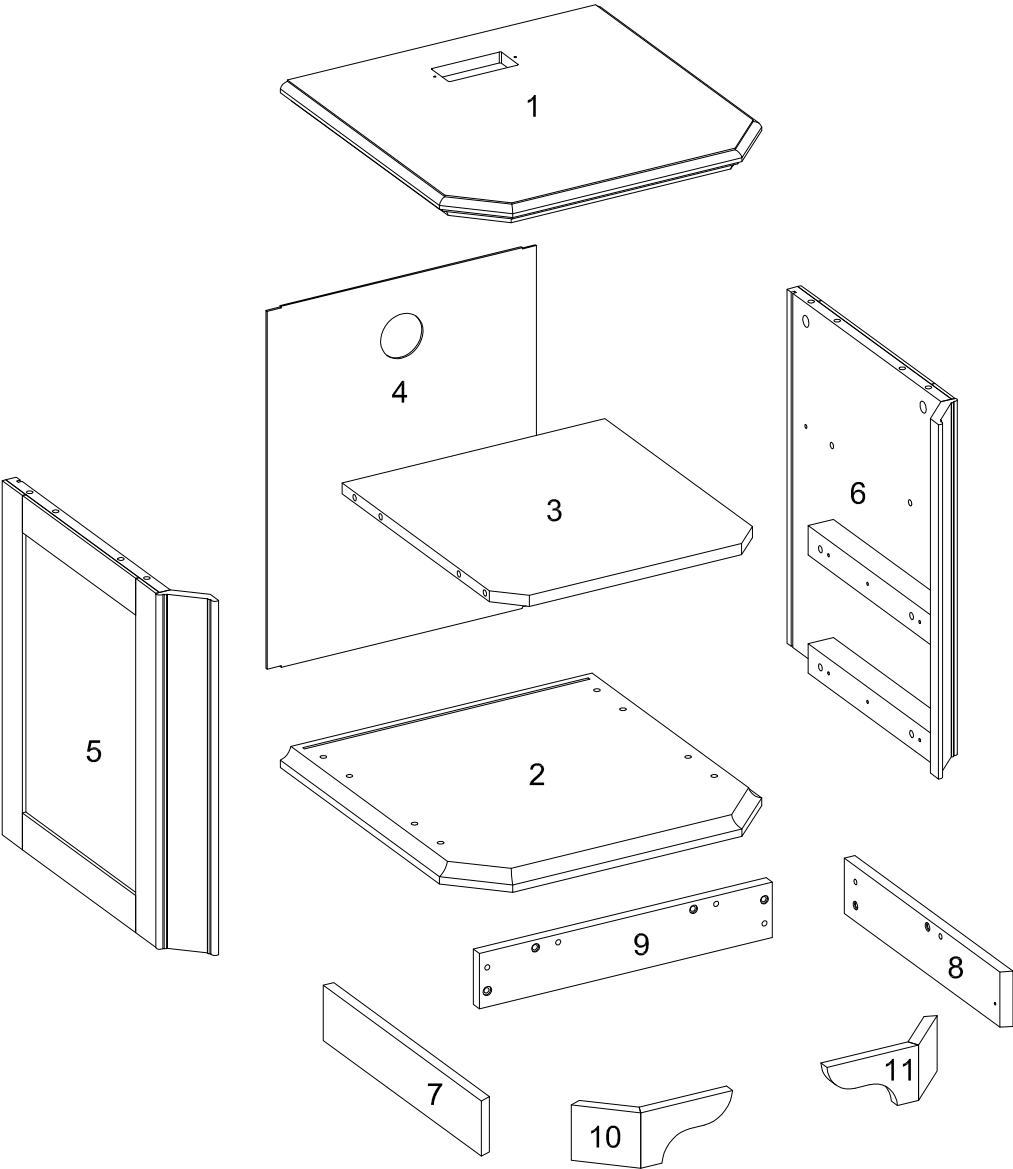




- VII. Power tools should not be used to assemble this product .




Parts List




Hardware List

A		Ø8x30mm	Long dowel	12 pcs
B		Ø6x35mm	Cam bolt	16 pcs
C		Ø15x11mm	Large Cam lock	8 pcs
D		Ø30mm	Cam cover	16 pcs
E			Glue	1 pc
F			Plastic Bracket	6 pcs
G		Ø3x17mm	Flat-head screw	6 pcs
H		Ø4x12mm	Knob bolt	2 pcs
J			Knob	2 pcs
K		Ø15x9.5mm	Small Cam lock	8 pcs
L		Ø4x38mm	Screw	8 pcs
M		Ø6x50mm	Screw	4 pcs
N		Ø6x13mm	Bolt	20 pcs
P			Connector	10 pcs
Q			L shape bracket	2 pcs
R		Ø3.5x12mm	Screw	30 pcs
S		12"	Left cabinet member	2 pcs
T		12"	Right cabinet member	2 pcs
U		12"	Left drawer runner	2 pcs
V		12"	Right drawer runner	2 pcs
W			USB Interface	1 pc
X		M 4	wrench	1 pc

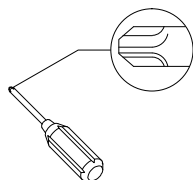


Philips head screwdriver required for assembly
(not included)


Step 1

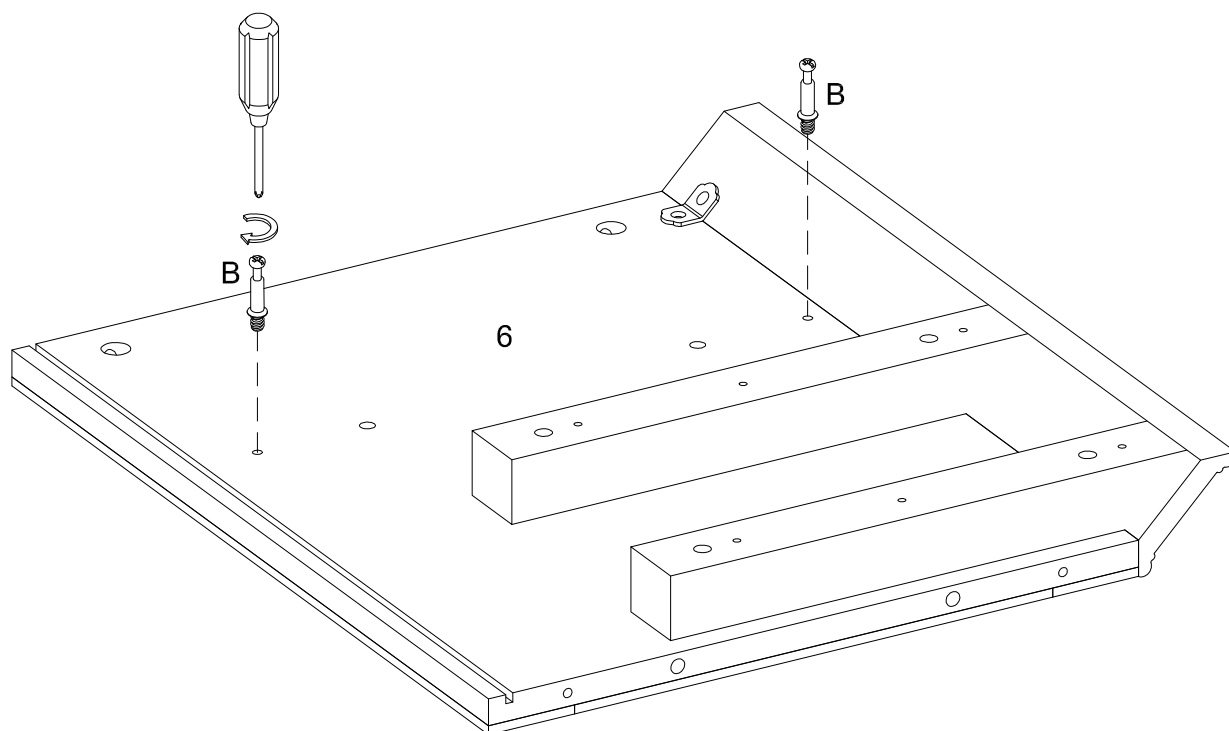


Step 2

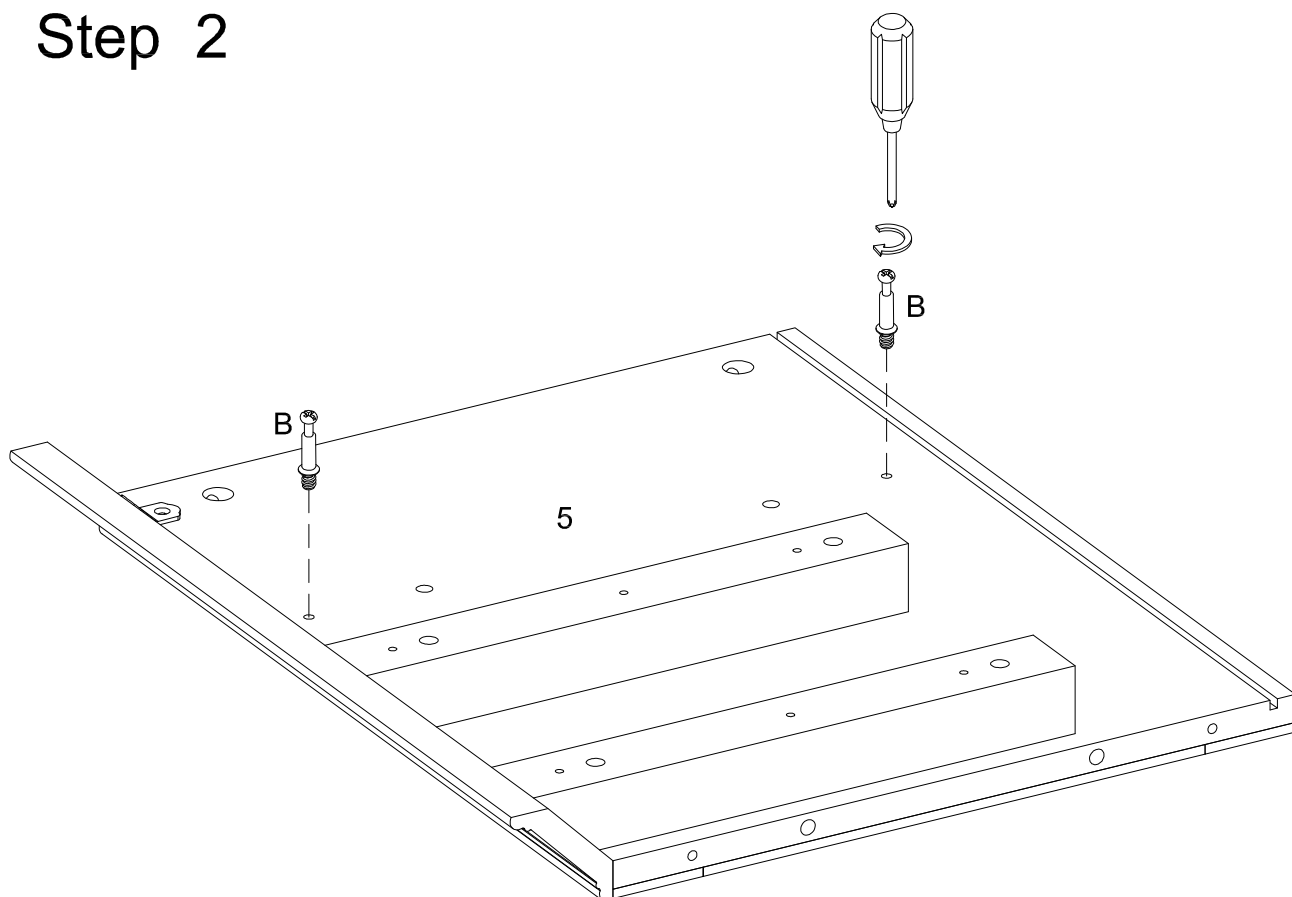


Step 3

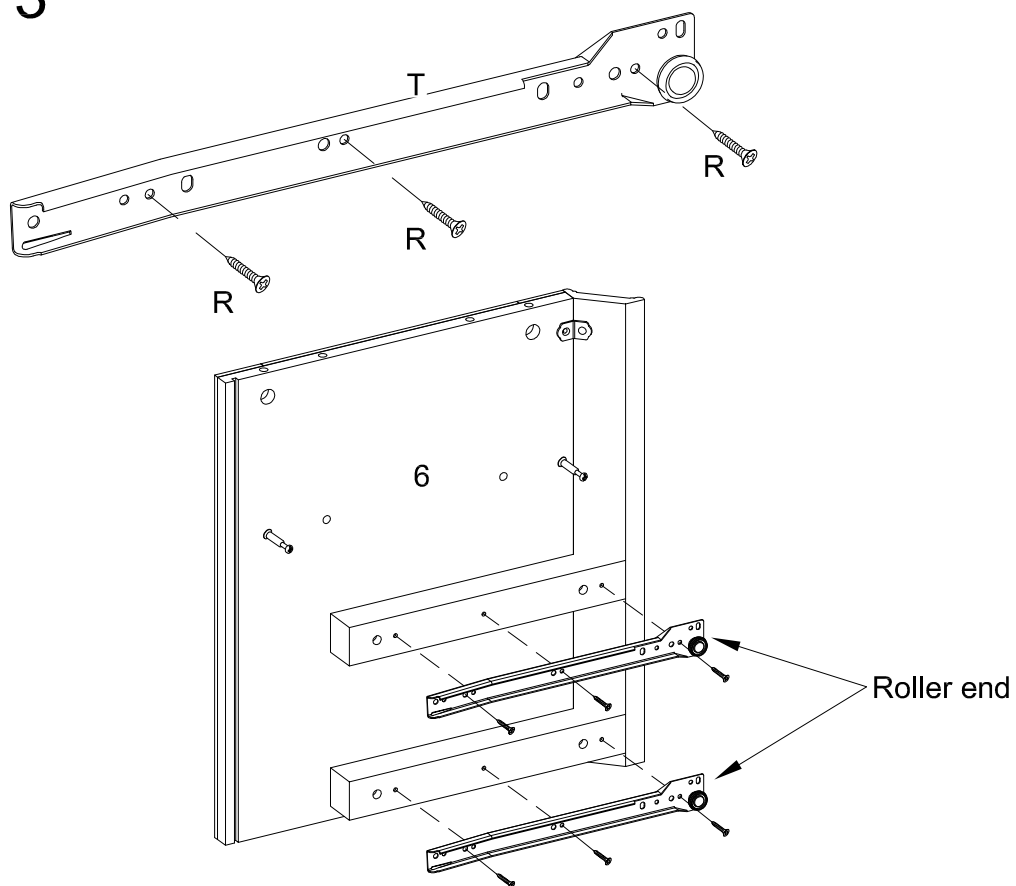


Step 4

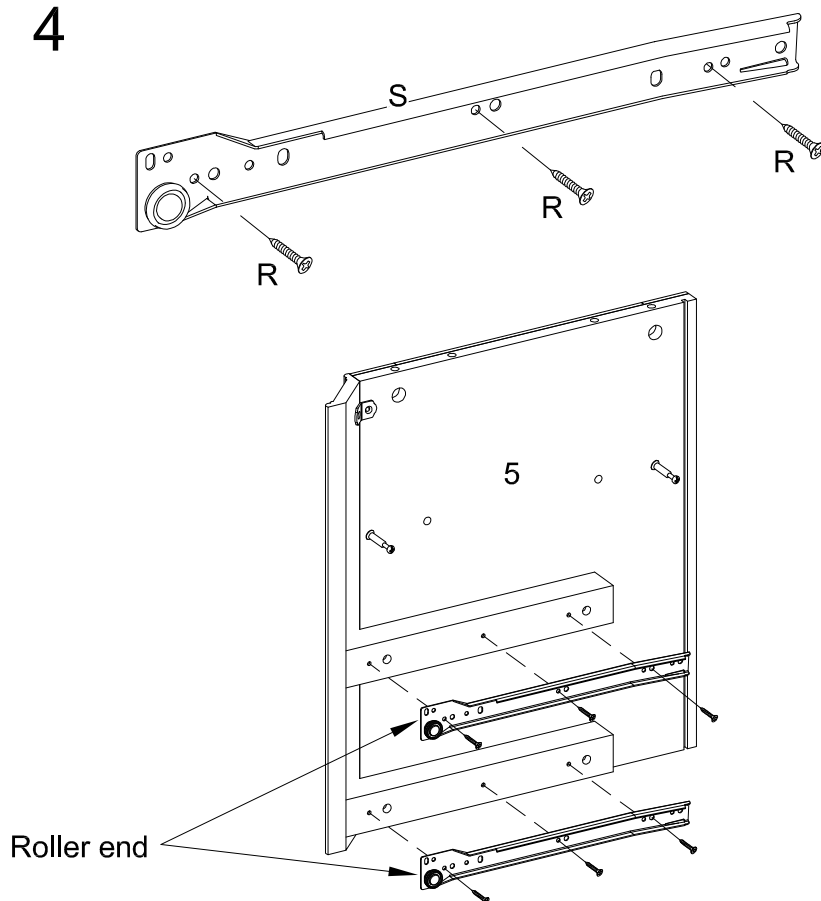


Step 5

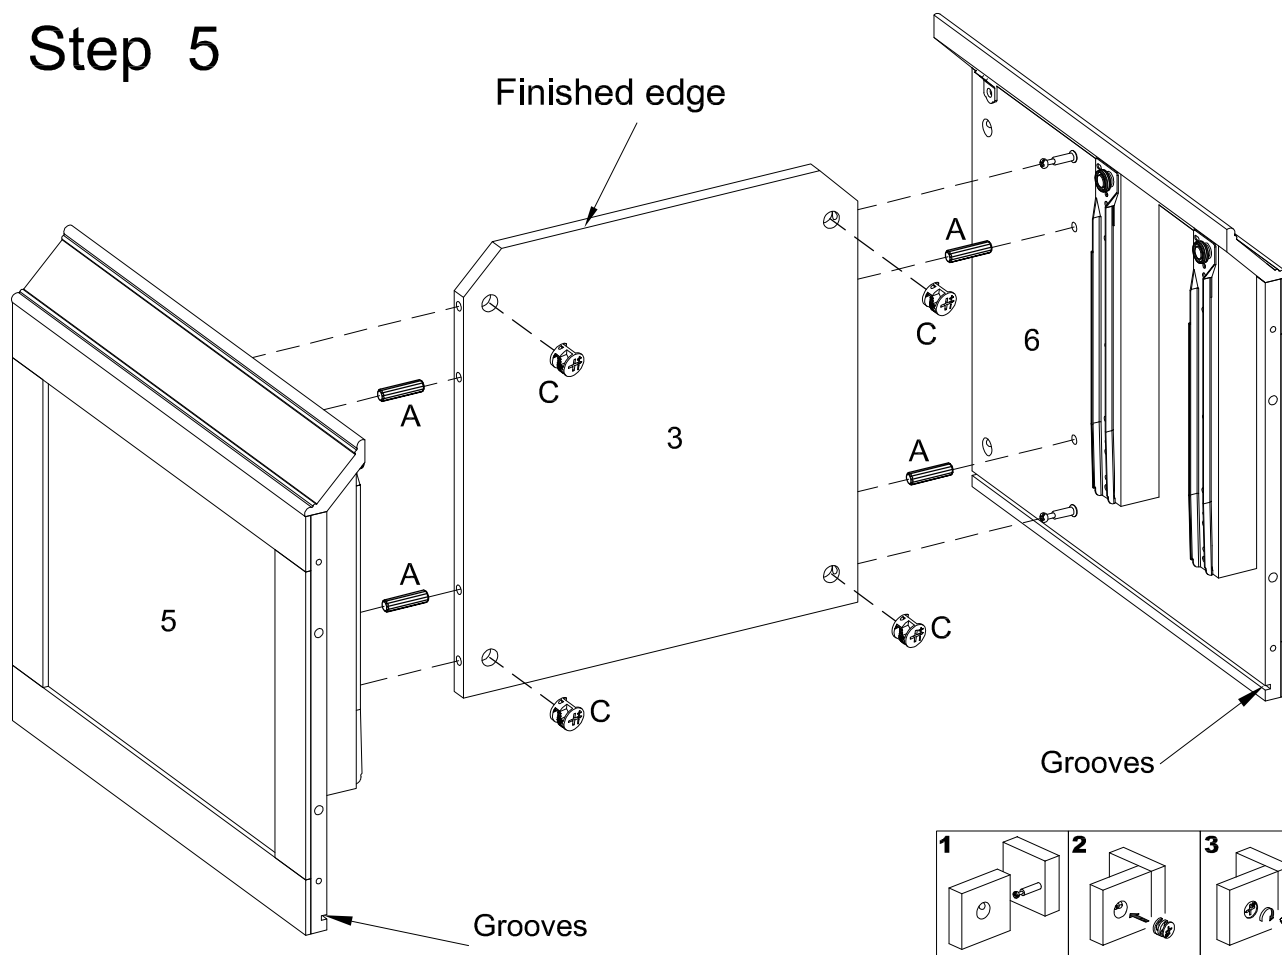


Step 6

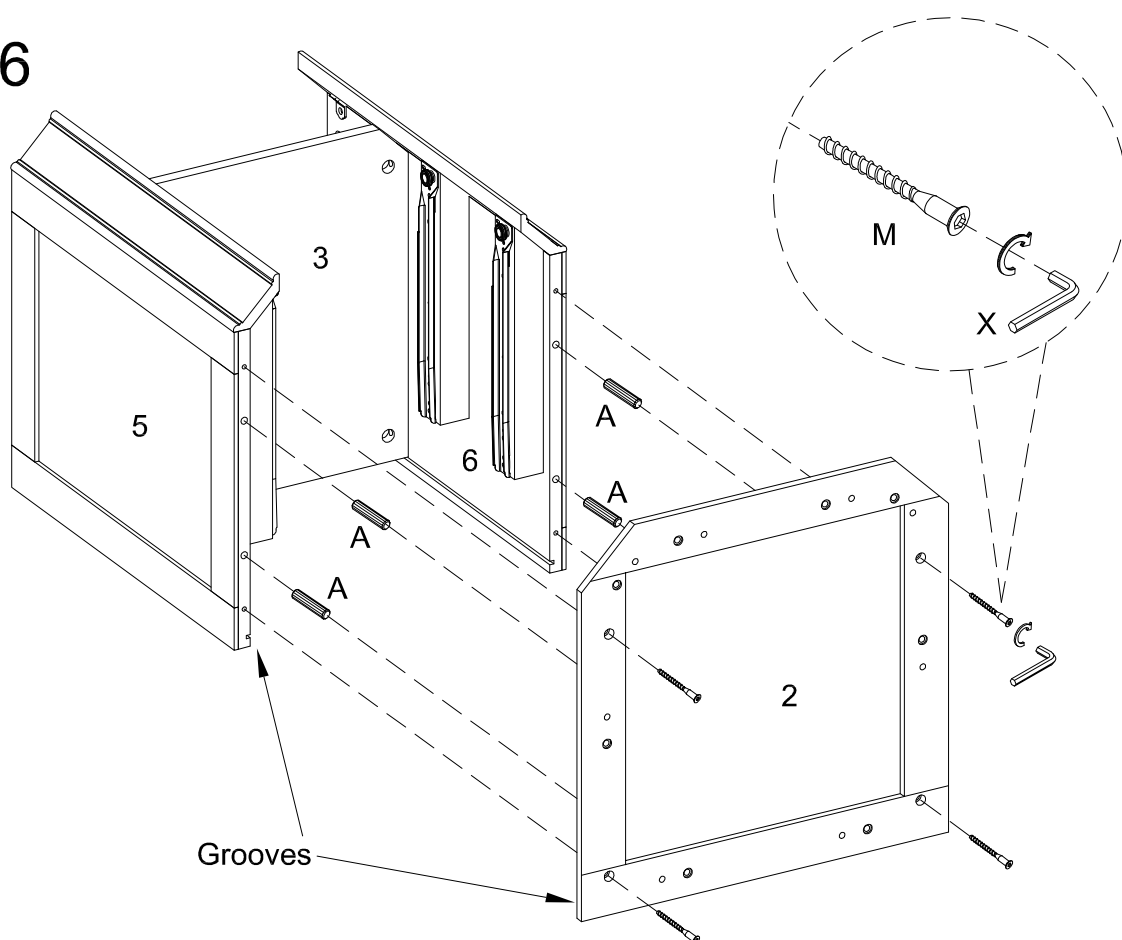


Step 7

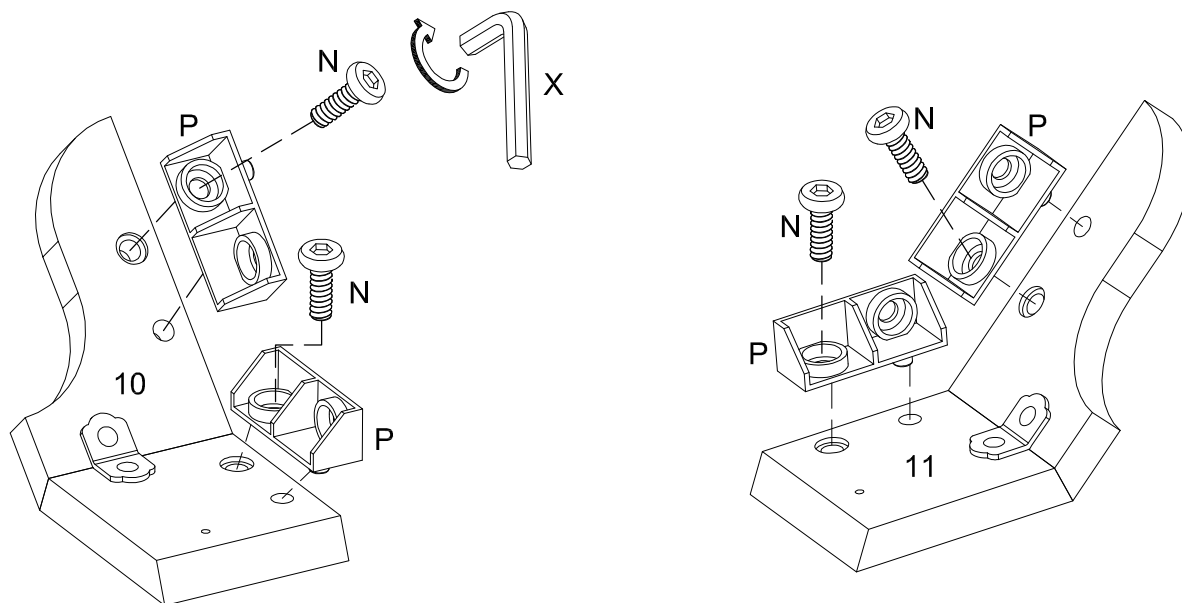


Step 8

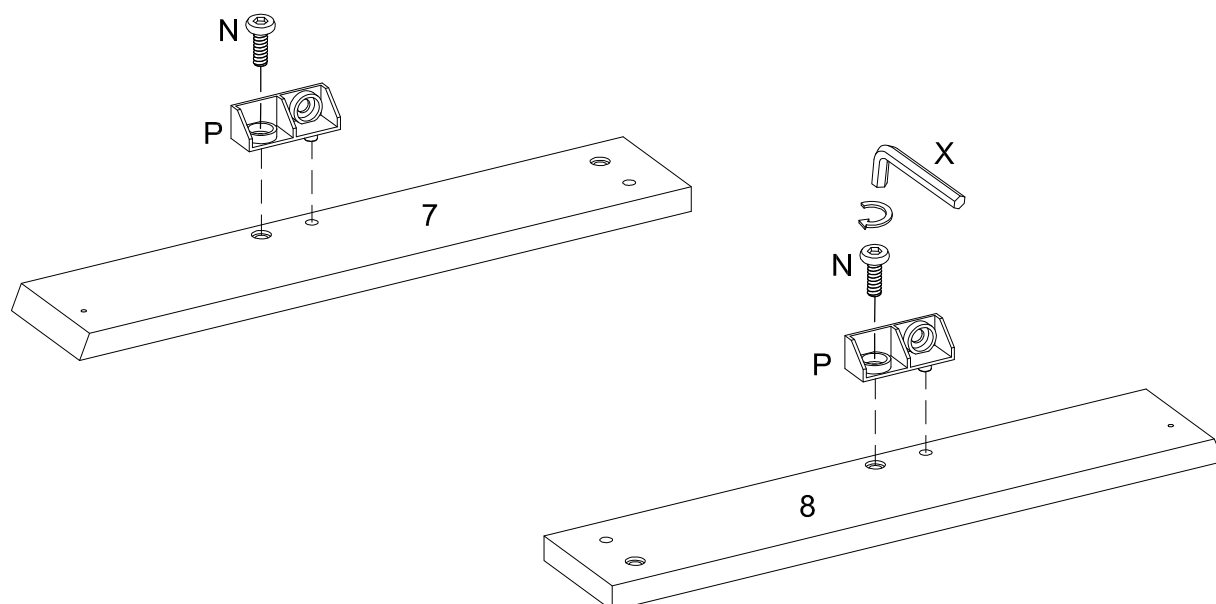


Step 9

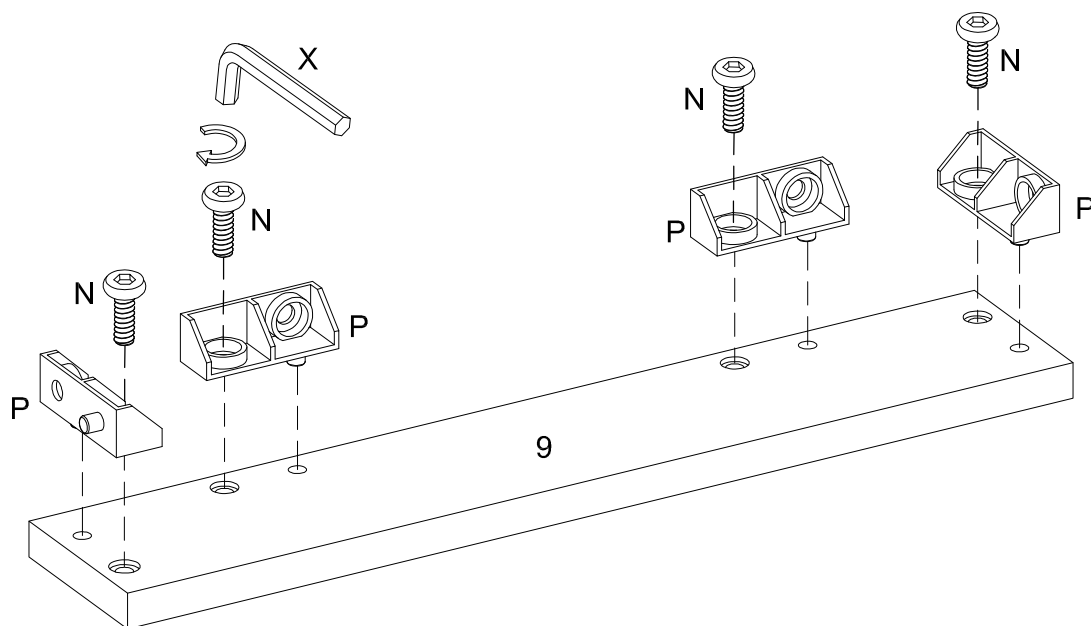


Step 10

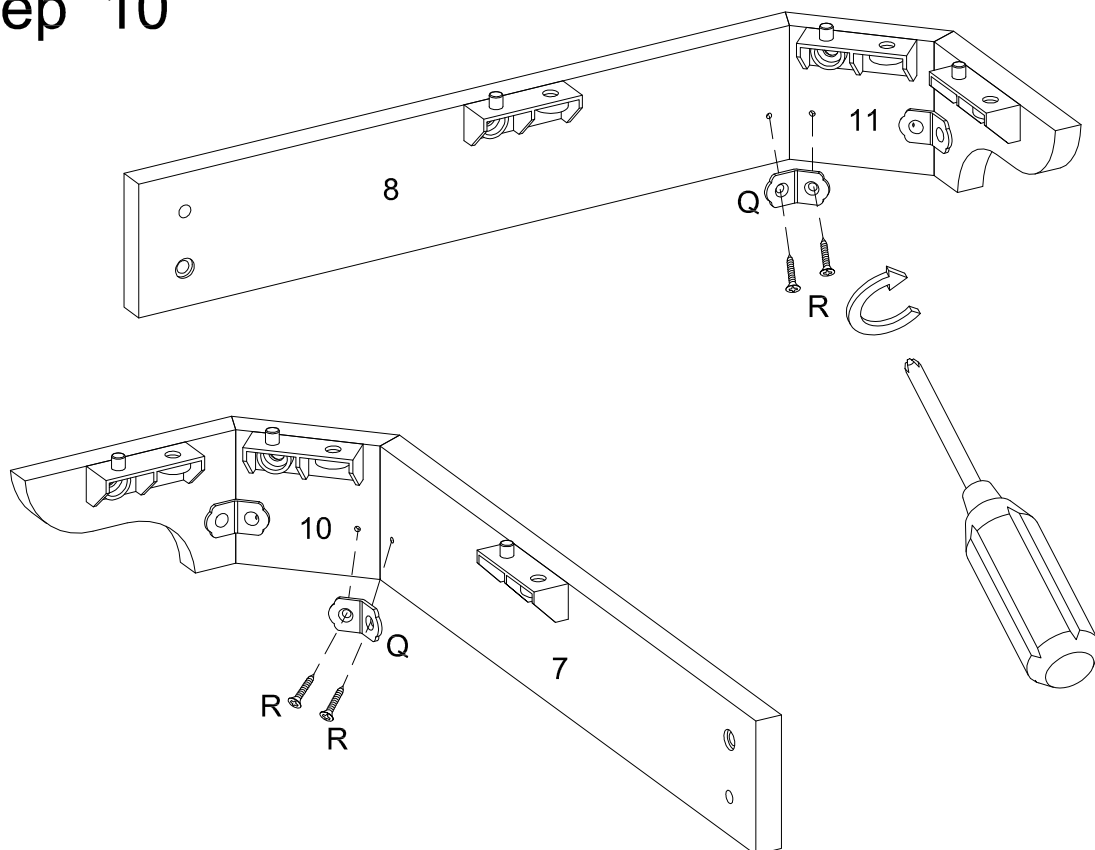


Step 11

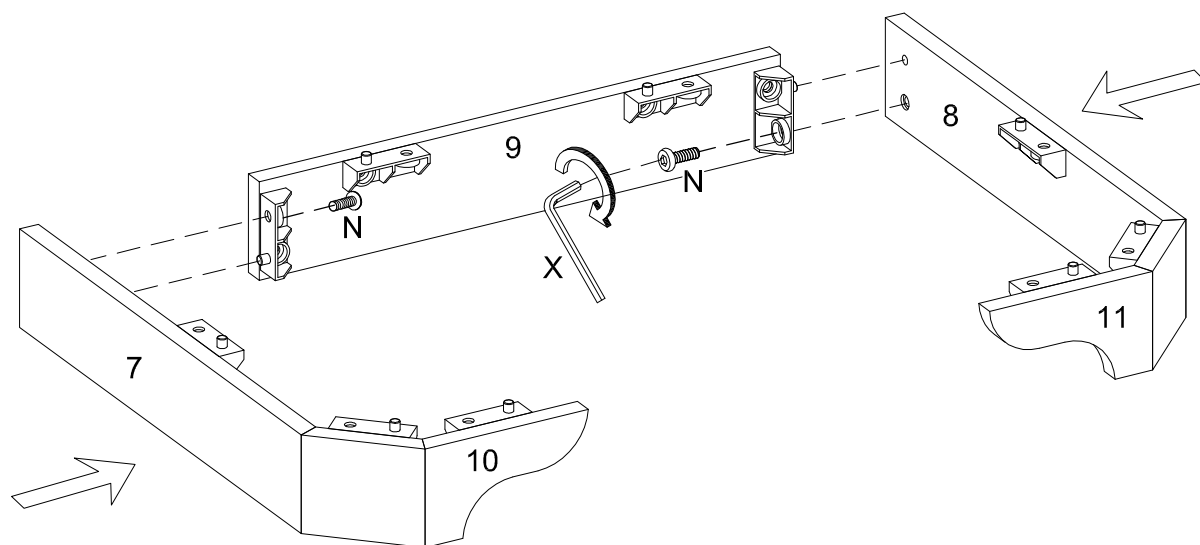


Step 12

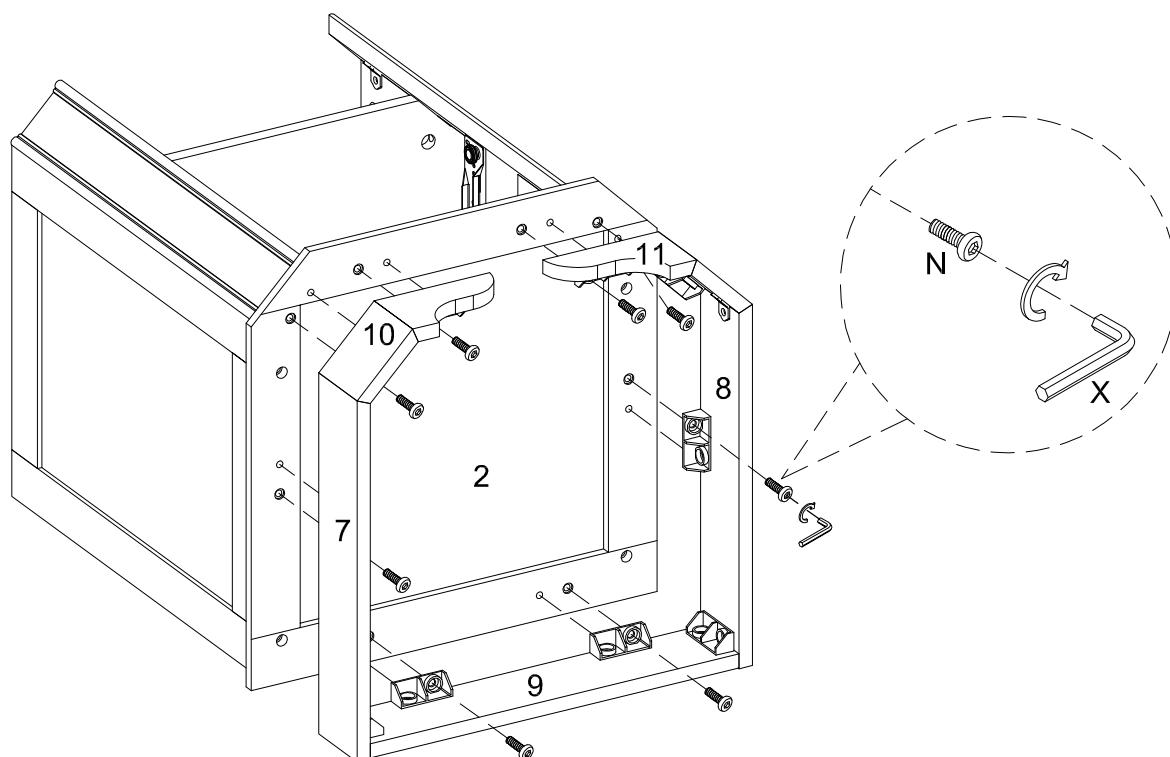


Step 13

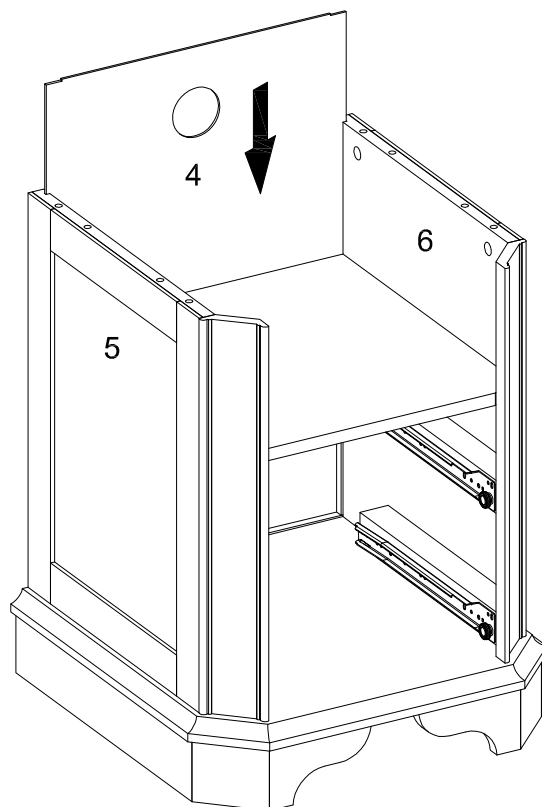


Step 14

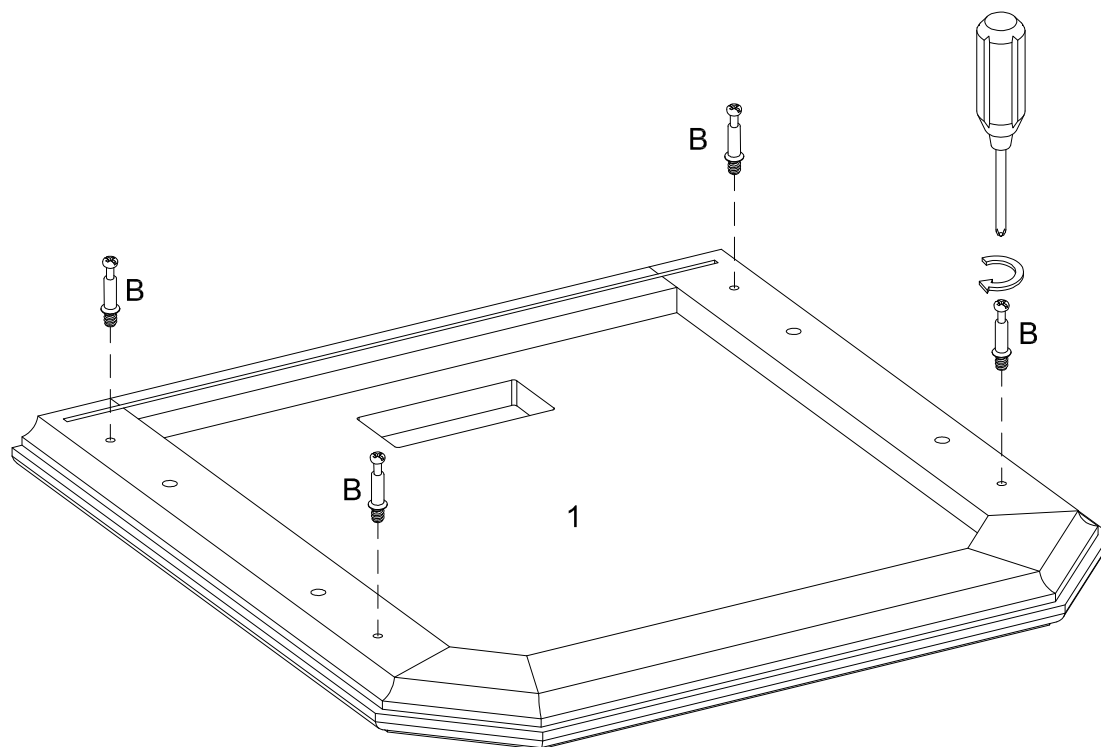


Step 15

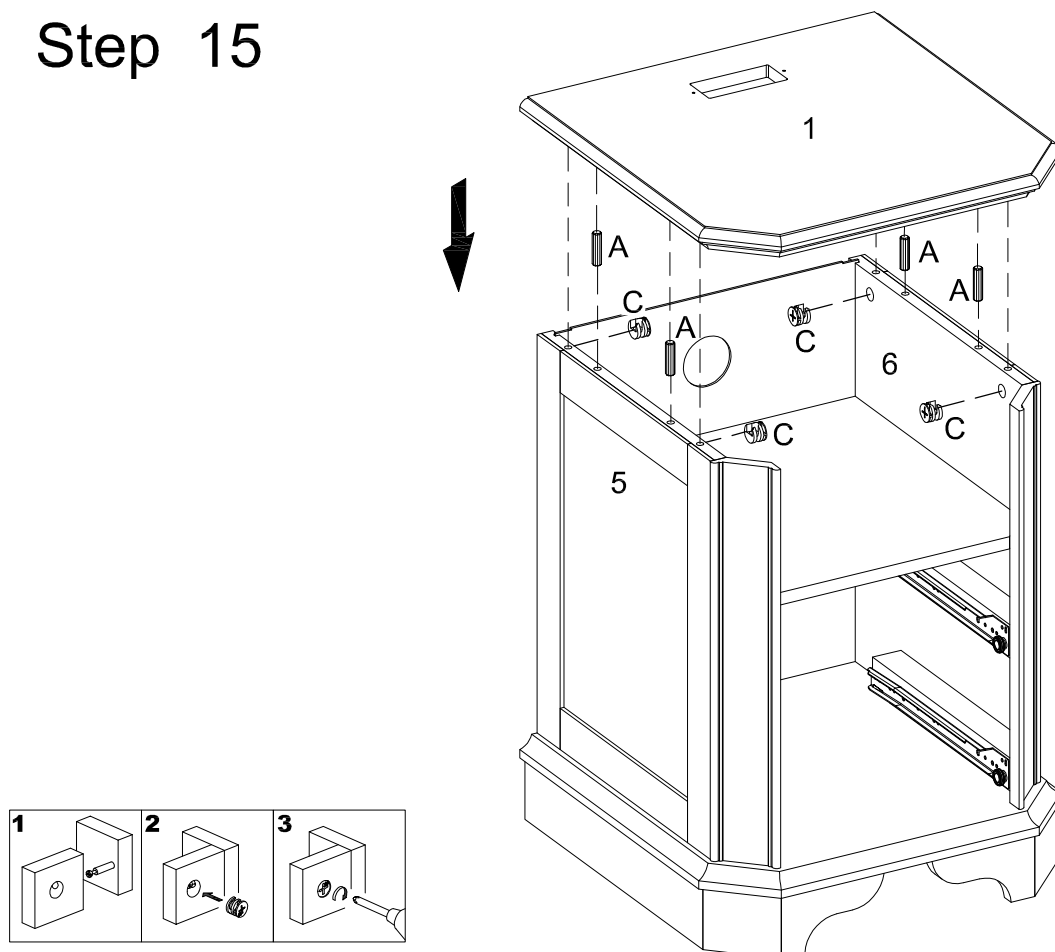


Step 16

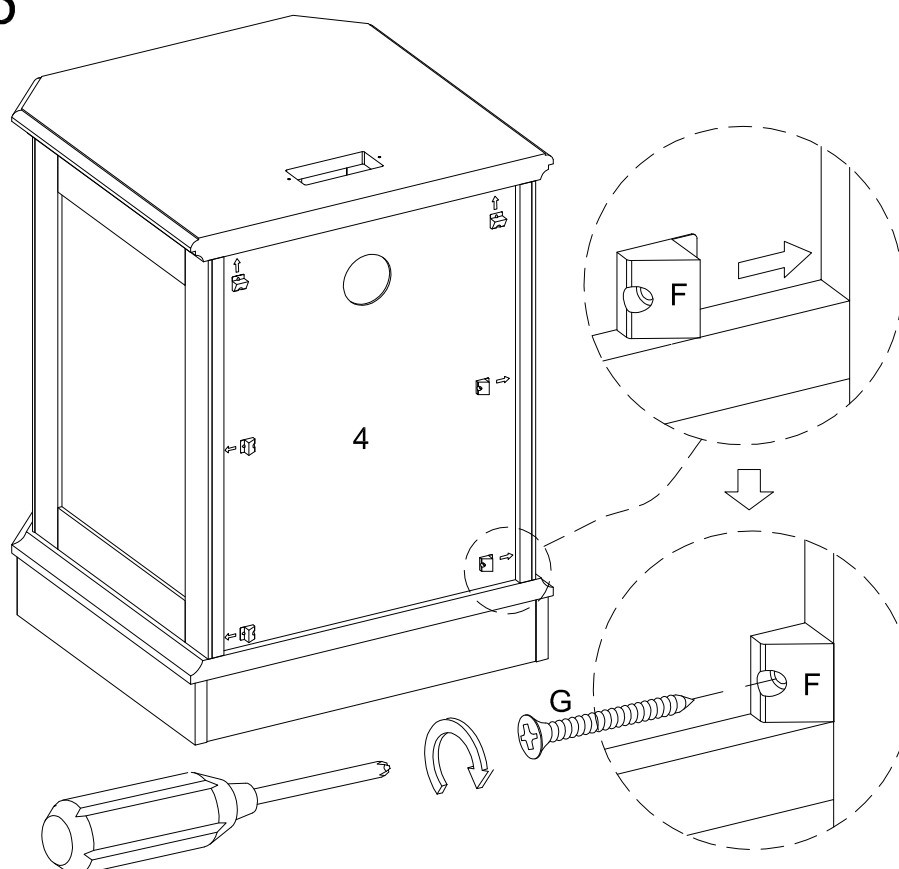



Step 17

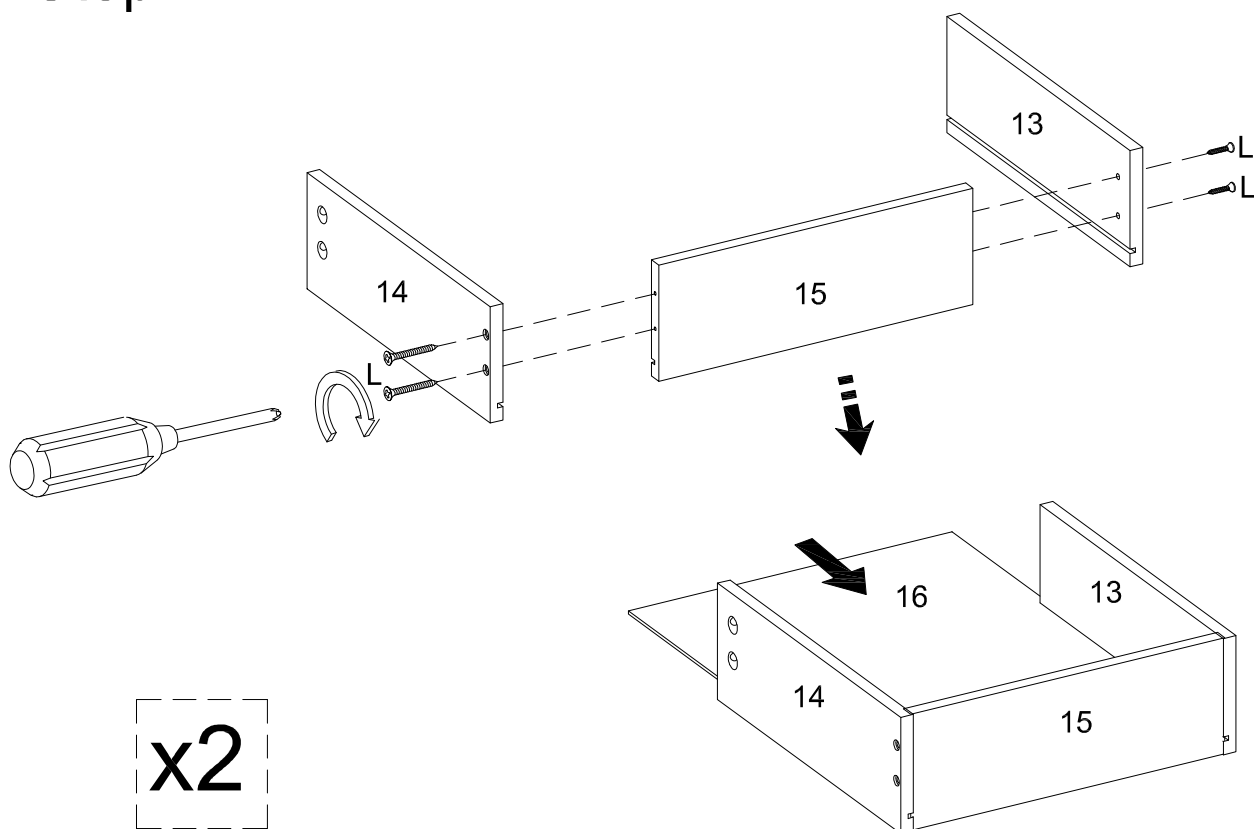


Step 18

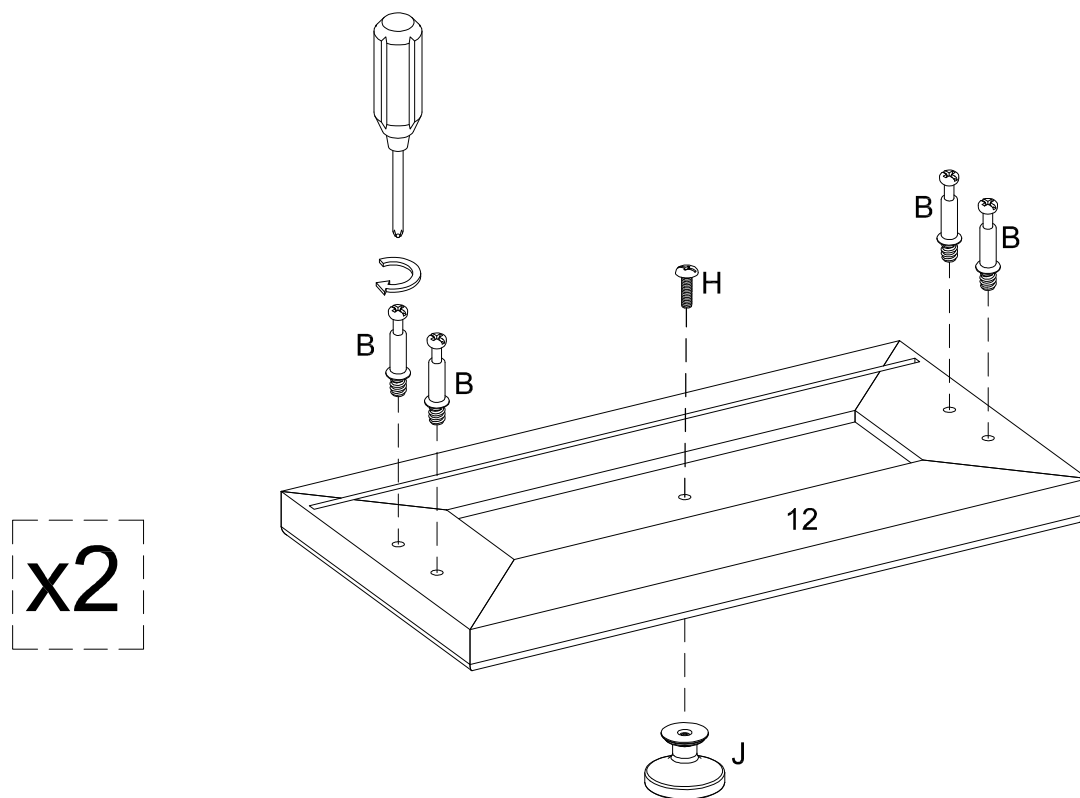




Step 19

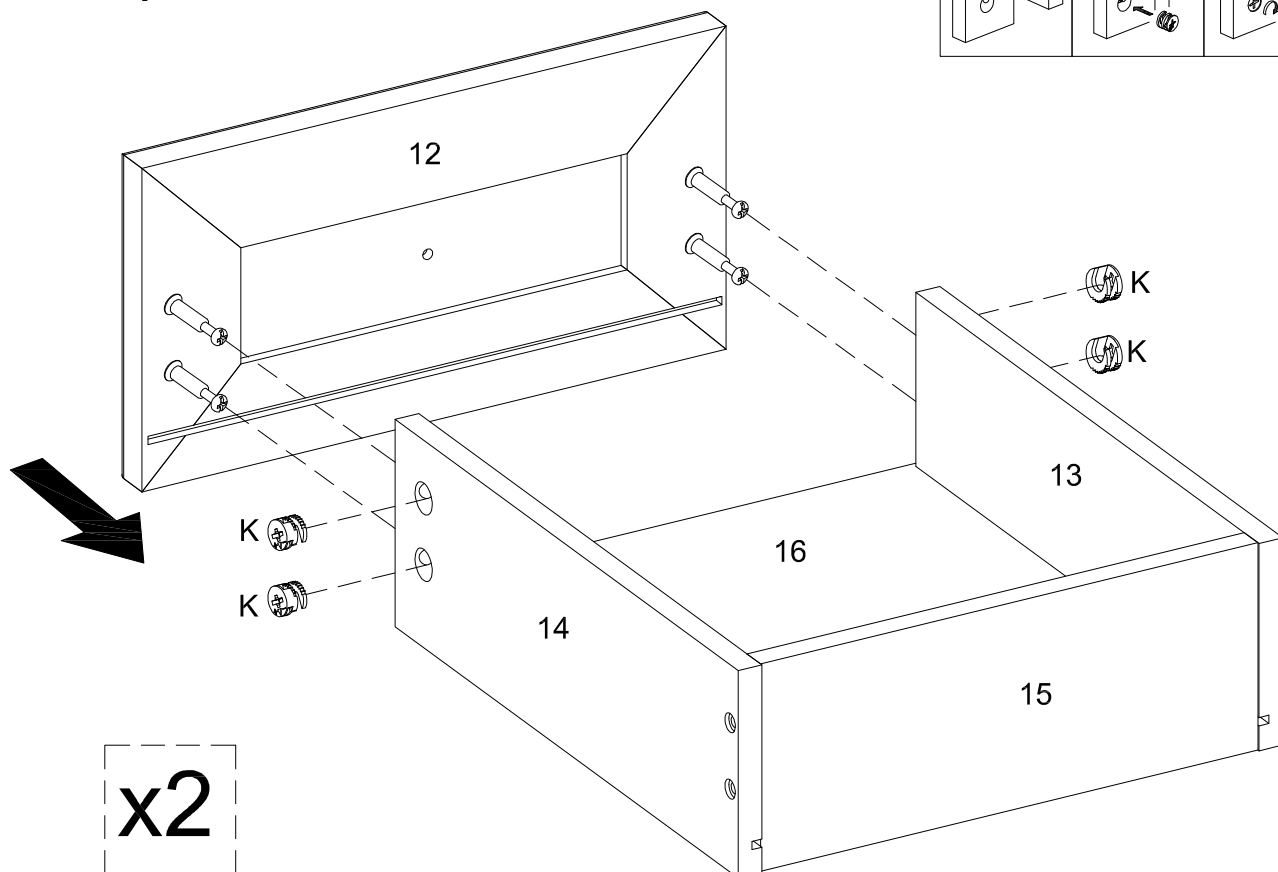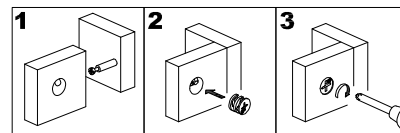



Step 20

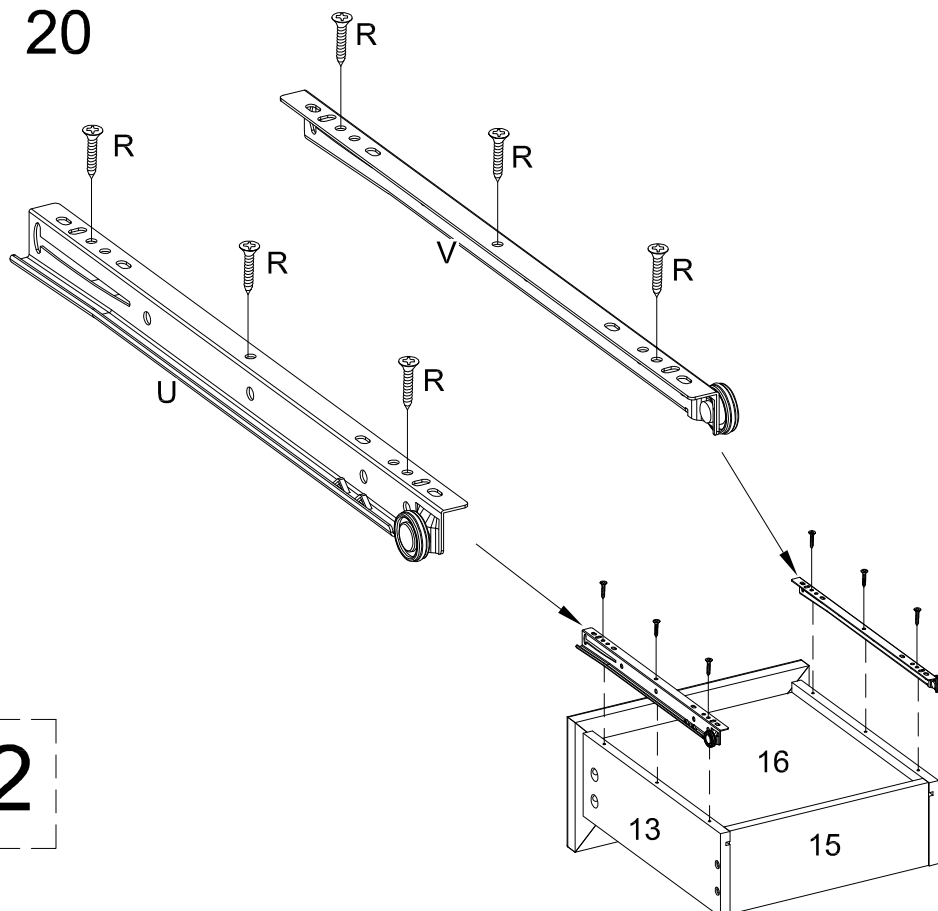



Step 21

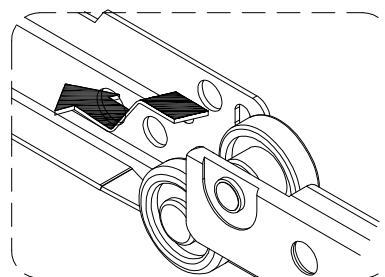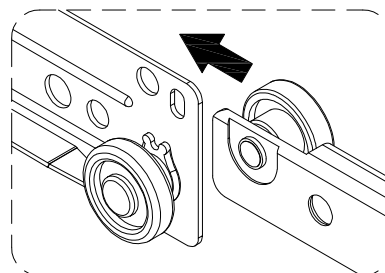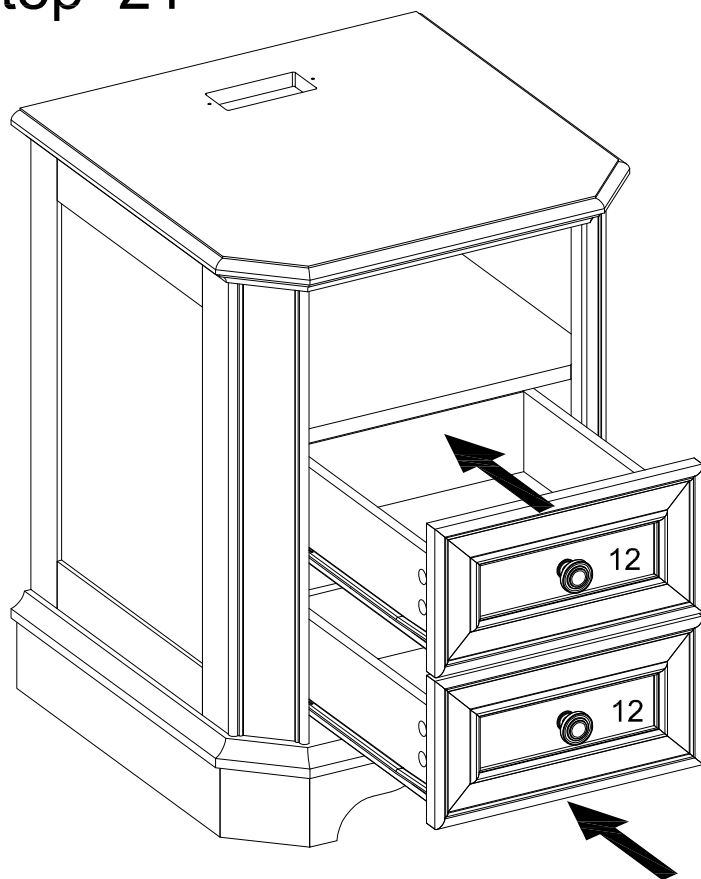

Step 22

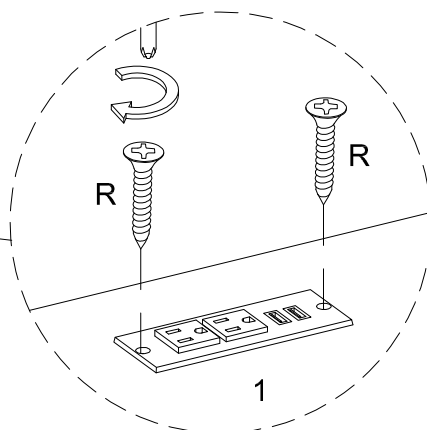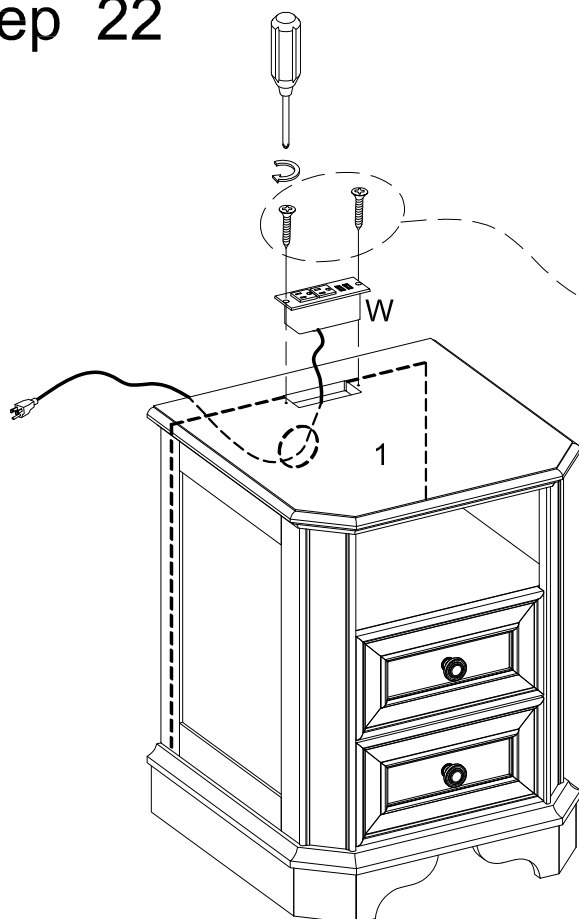

Step 23

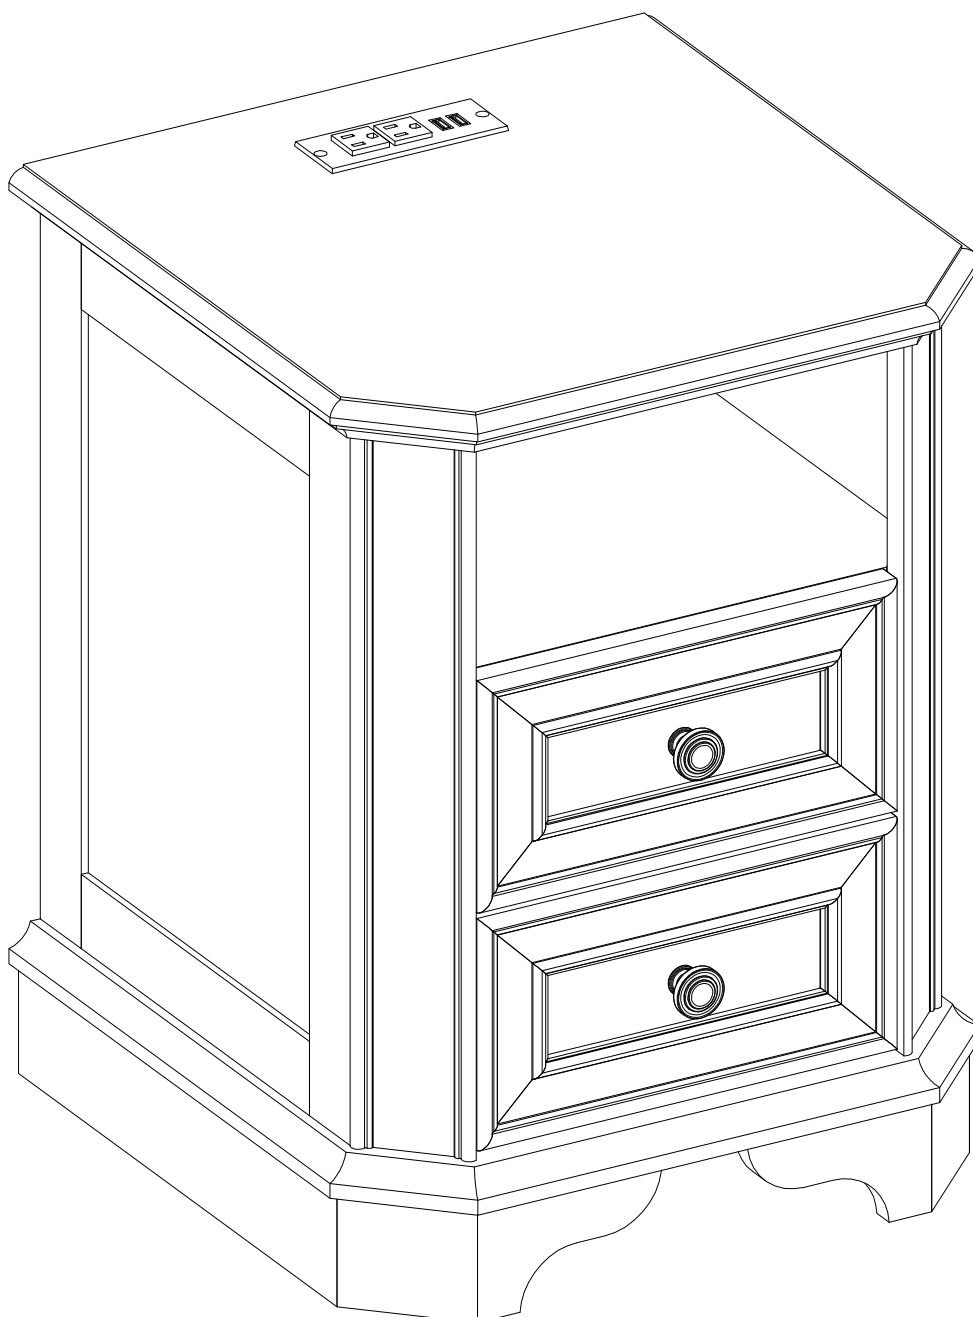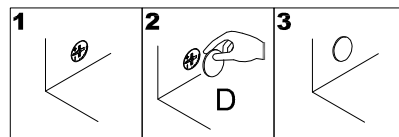

Final Assembly