
V18-16 INSTRUCTIONS

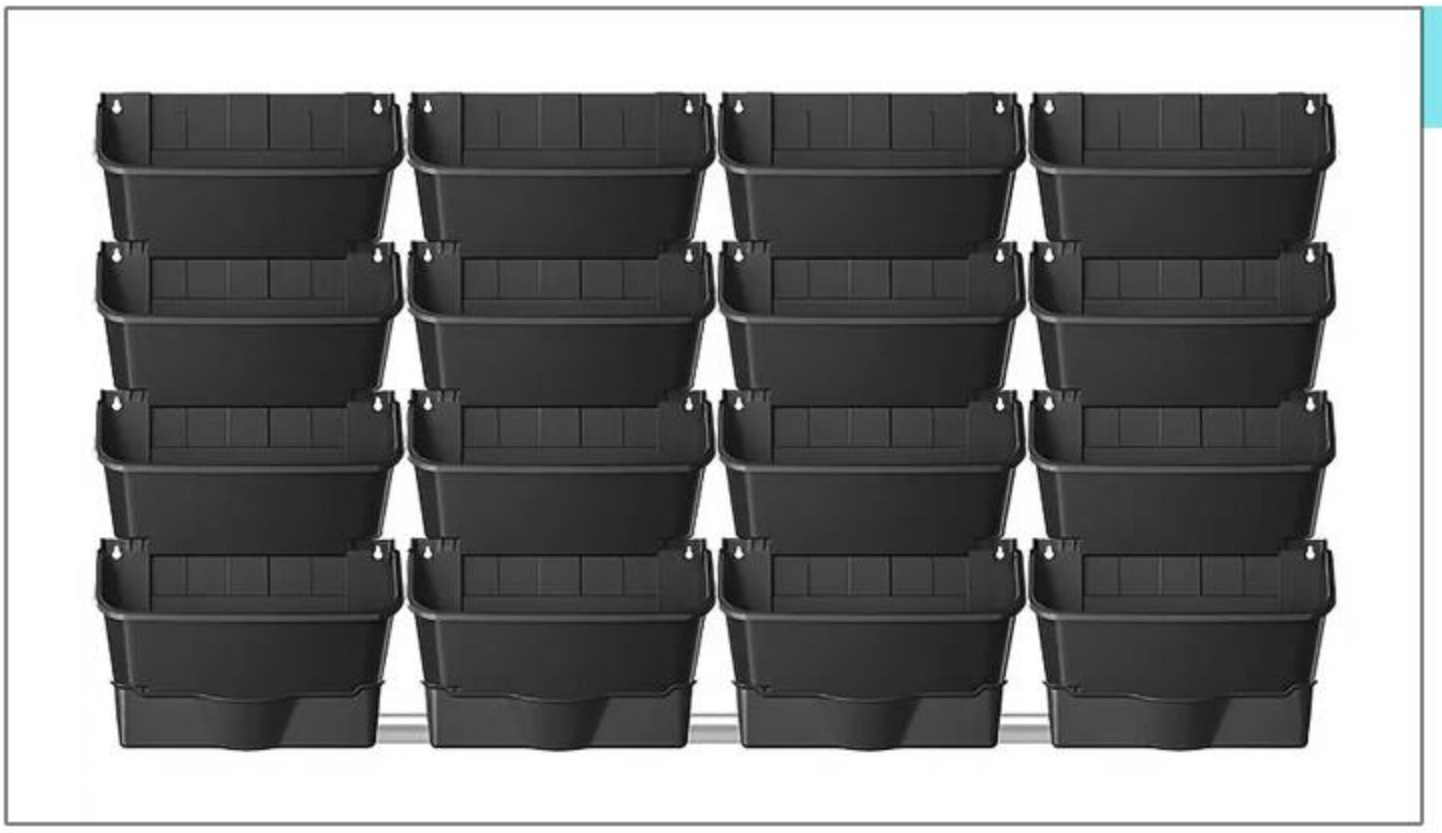

Accessory part



Flower pots *16 pcs



Drainage Tray *4 pcs



Plug Rubber Stopper* 2 pcs




Non-woven fabrics*16 pcs

Connecting hose* 3 pcs



Expansion screws* 4 packs

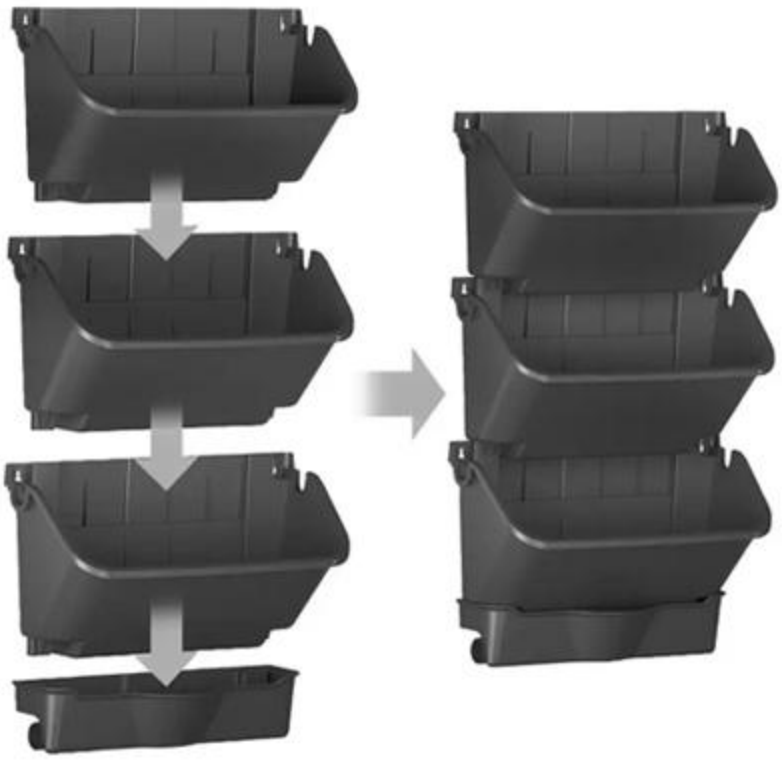



Use of 8 mm drill bit




Easy to install
Stable and solid

Use an electric drill to drill the holes, insert the expansion plugs and screw in the screws



Snap-on installation, no tools required, just press down

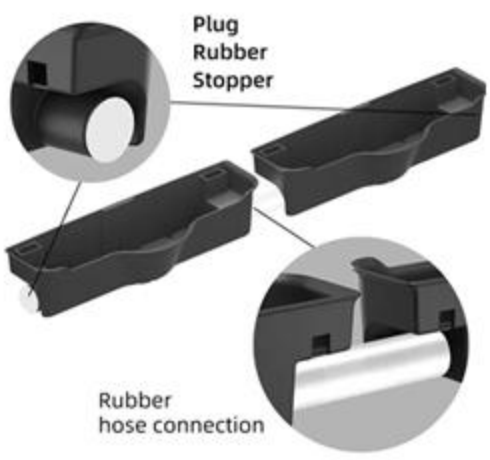

Easy Planting

