



Assembly Instructions

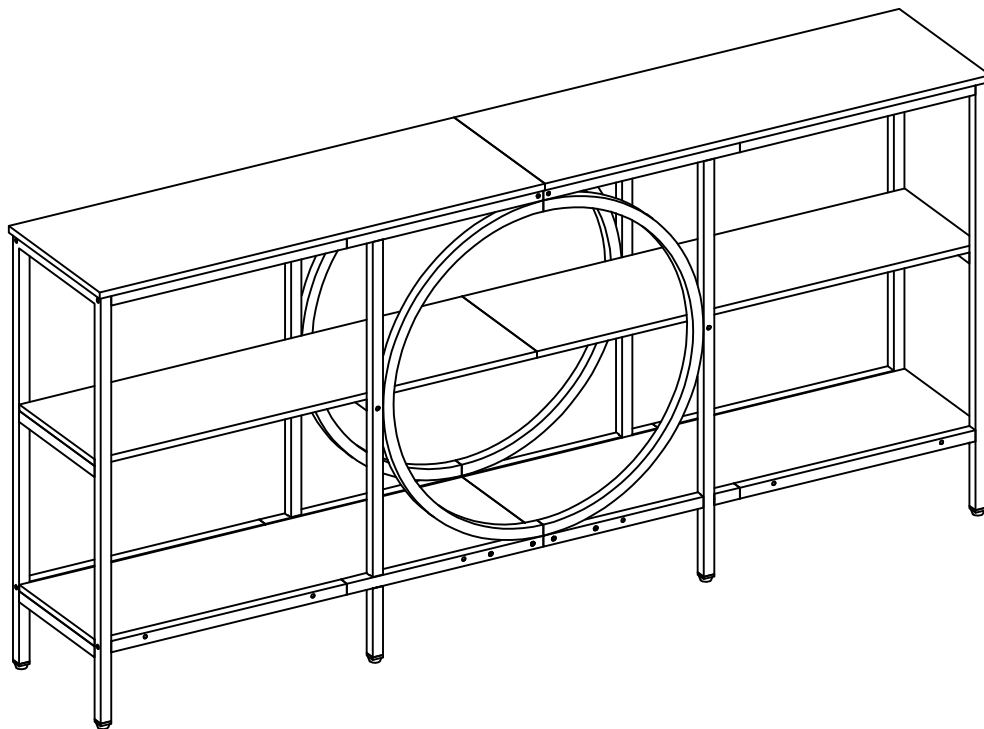


Attention: Please ensure you have all parts before commencing assembly.
Please read all the instructions before commencing.

PART LIST

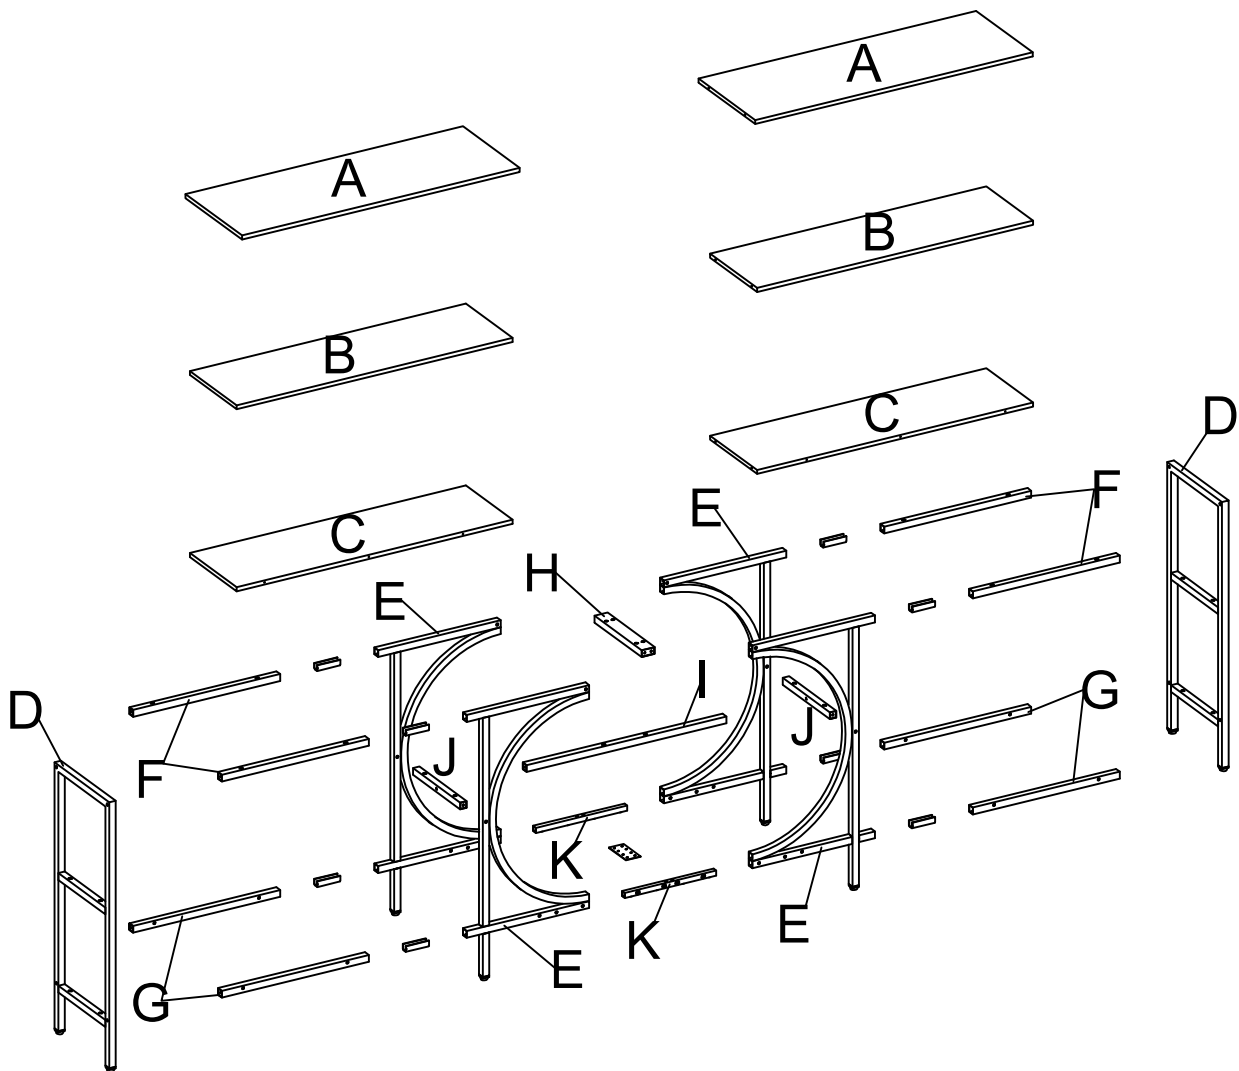


PART LIST


A x 2pcs

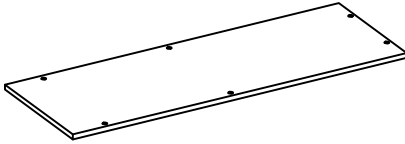


B x 2pcs

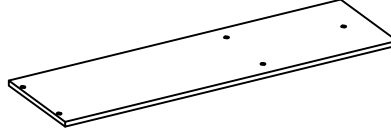


C x 2pcs

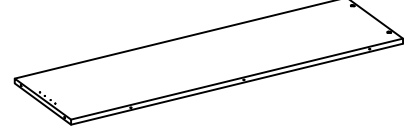


D x 2pcs

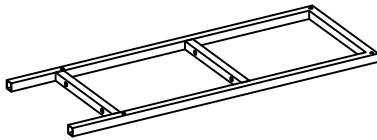

E x 4pcs

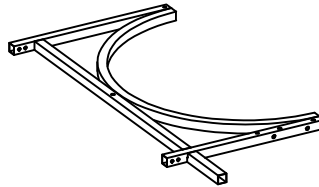


F x 4pcs




G x 4pcs




H x 1pc




I x 1pc













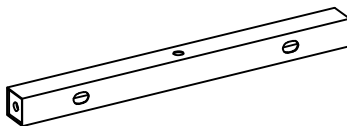
J x 2pcS



K x 2pcs





HARDWARE LIST
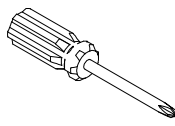
<p>①</p>  <p>M6x35 18 pcs</p>	<p>②</p>  <p>M6x27 26 pcs</p>	<p>③</p>  <p>M6x12 48 pcs</p>
<p>④</p>  <p>M5x45 12 pcs</p>	<p>⑤</p>  <p>M3x12 8 pcs</p>	<p>⑥</p>  <p>1 pc</p>
<p>⑦</p>  <p>20x20xM6 8 pcs</p>	<p>⑧</p>  <p>8 pcs</p>	<p>⑨</p>  <p>M6x30 6 pcs</p>
<p>⑩</p>  <p>1 pc</p>	<p>⑪</p>  <p>M4 1 pc</p>	

Please count and verify all parts before assembly .

STEP 1



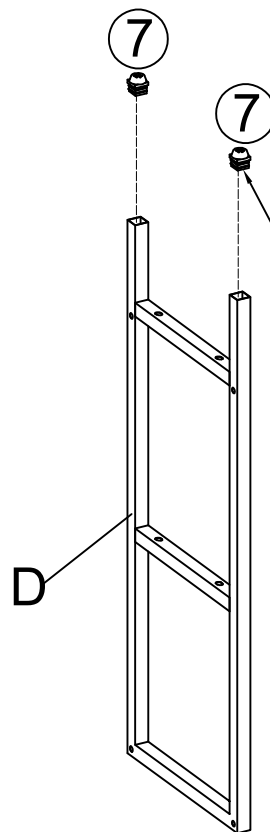
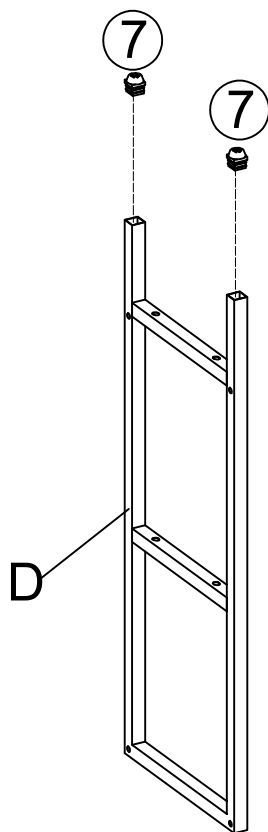


Please use a hammer or solid tools (not included) to knock the footpads into the frame.

7  x4

STEP 2


Please use a hammer or solid tools (not included) to knock the footpads into the frame.

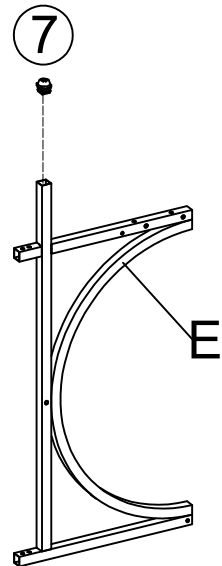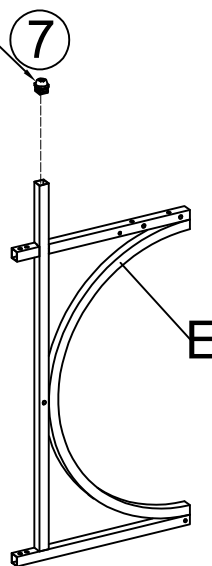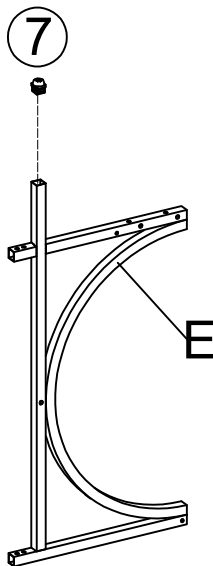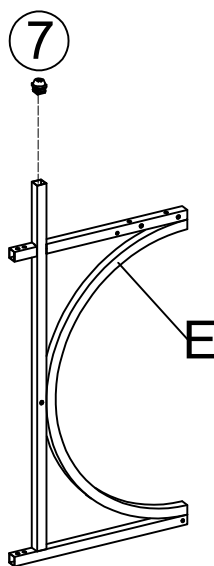


7  x4

STEP 3

Note: Before tightening the screws, push the wood boards tightly to make closer, otherwise it may cause large gaps.

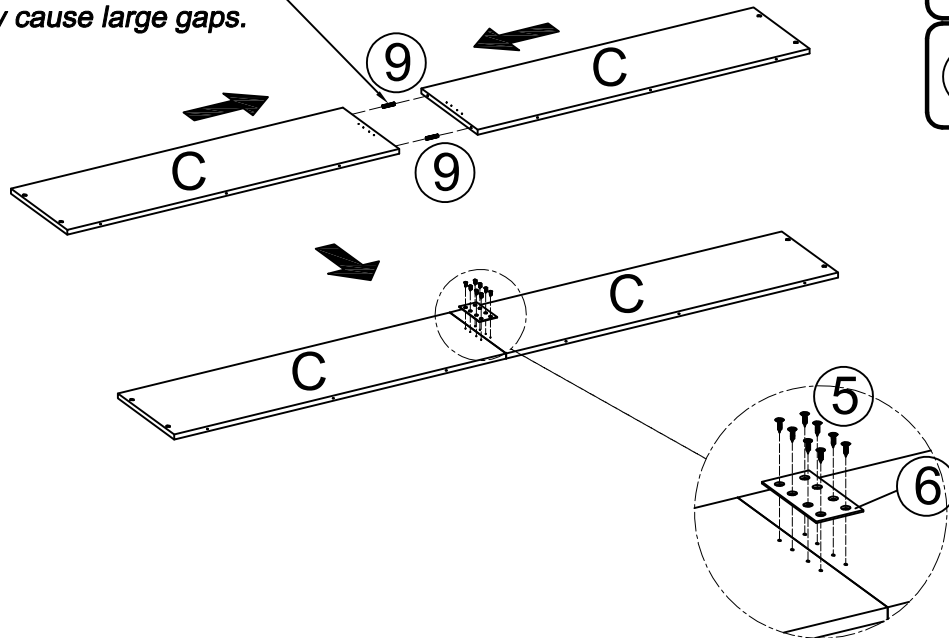


⑤  x8


⑥  x1

⑨  x2


STEP 4

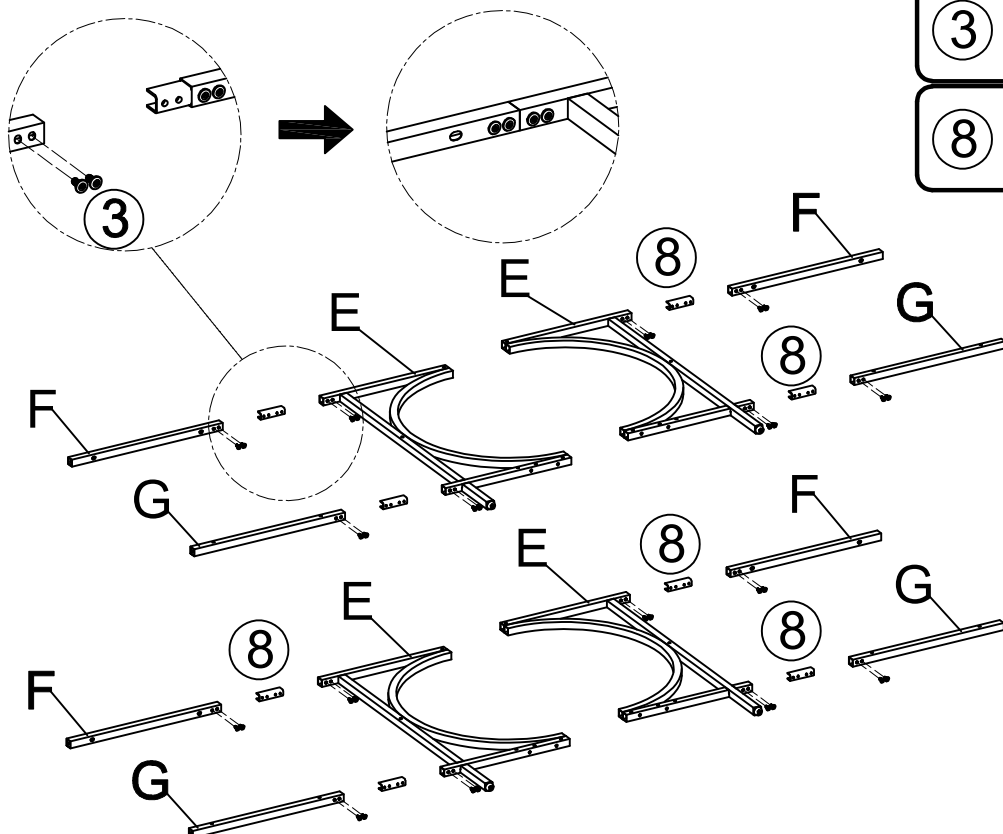


③  x32

⑧  x8

STEP 5

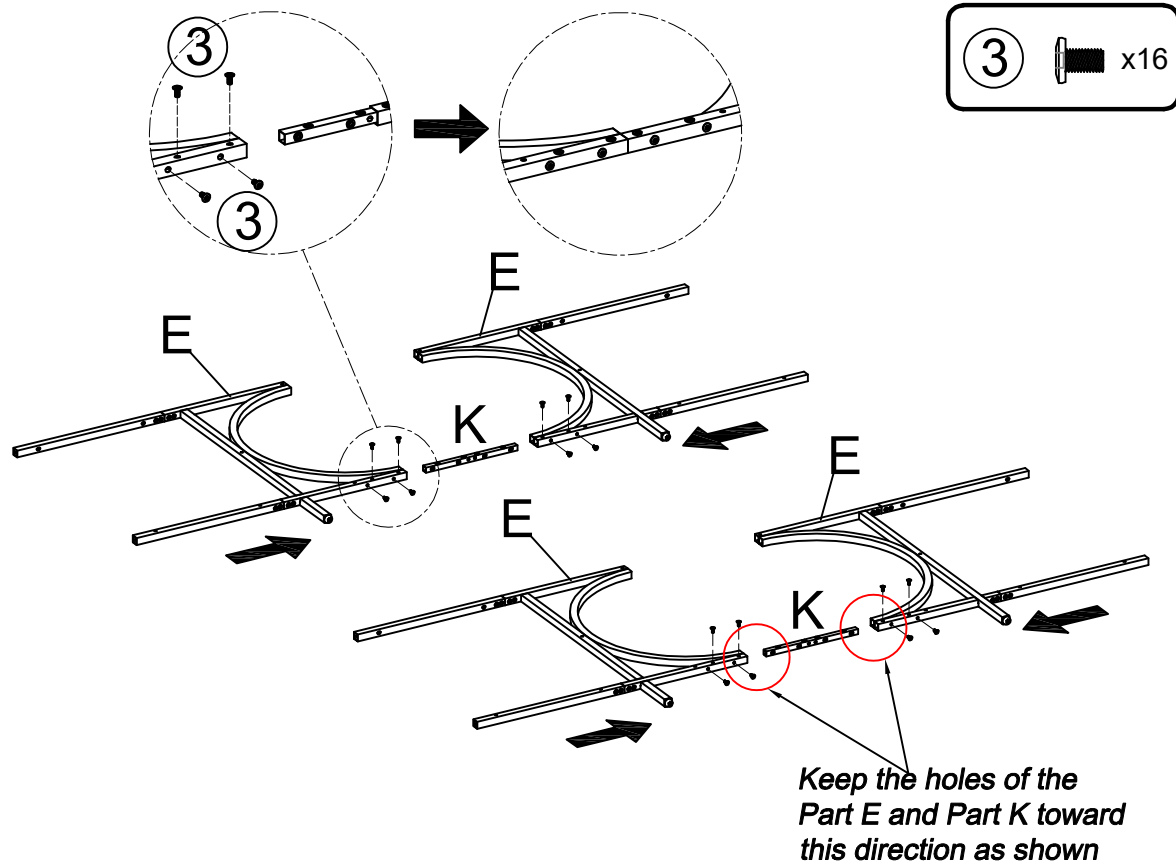


STEP 6

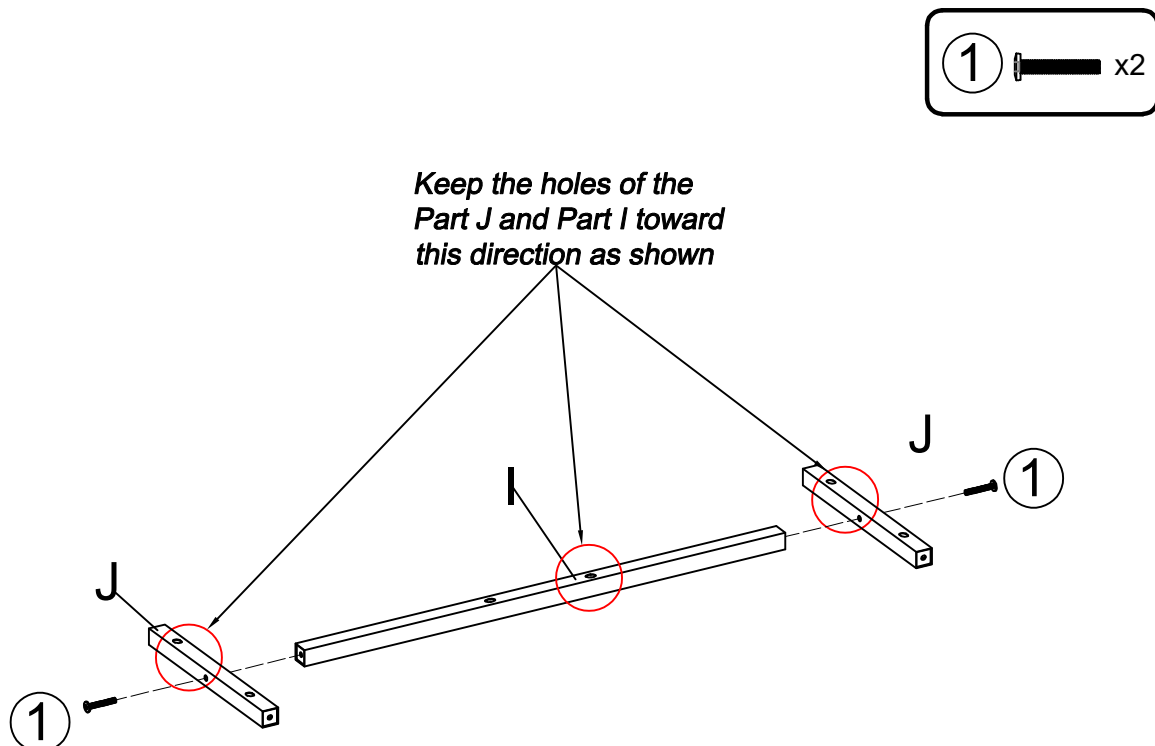

STEP 7

①  x8


④  x12

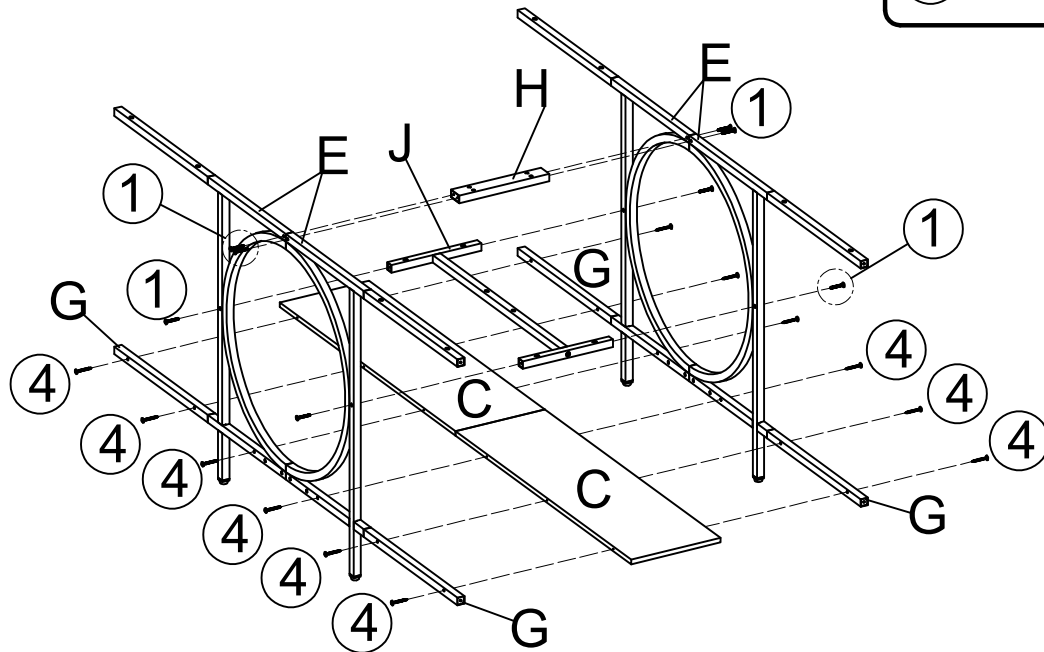


STEP 8

⑨  x2


Note: Before tightening the screws, push the wood boards tightly to make closer, otherwise it may cause large gaps.

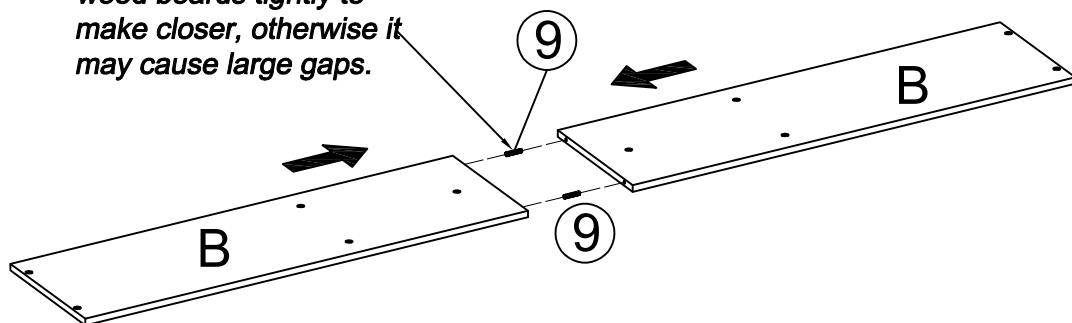

STEP 9

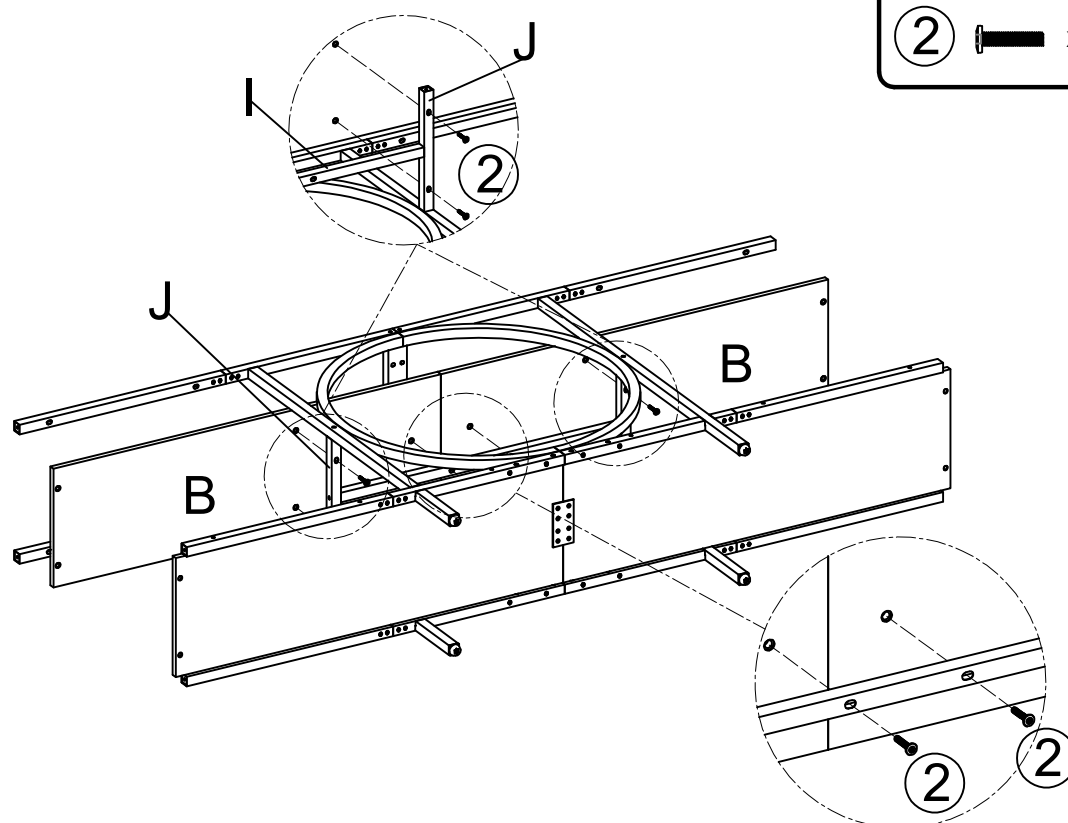


STEP 10

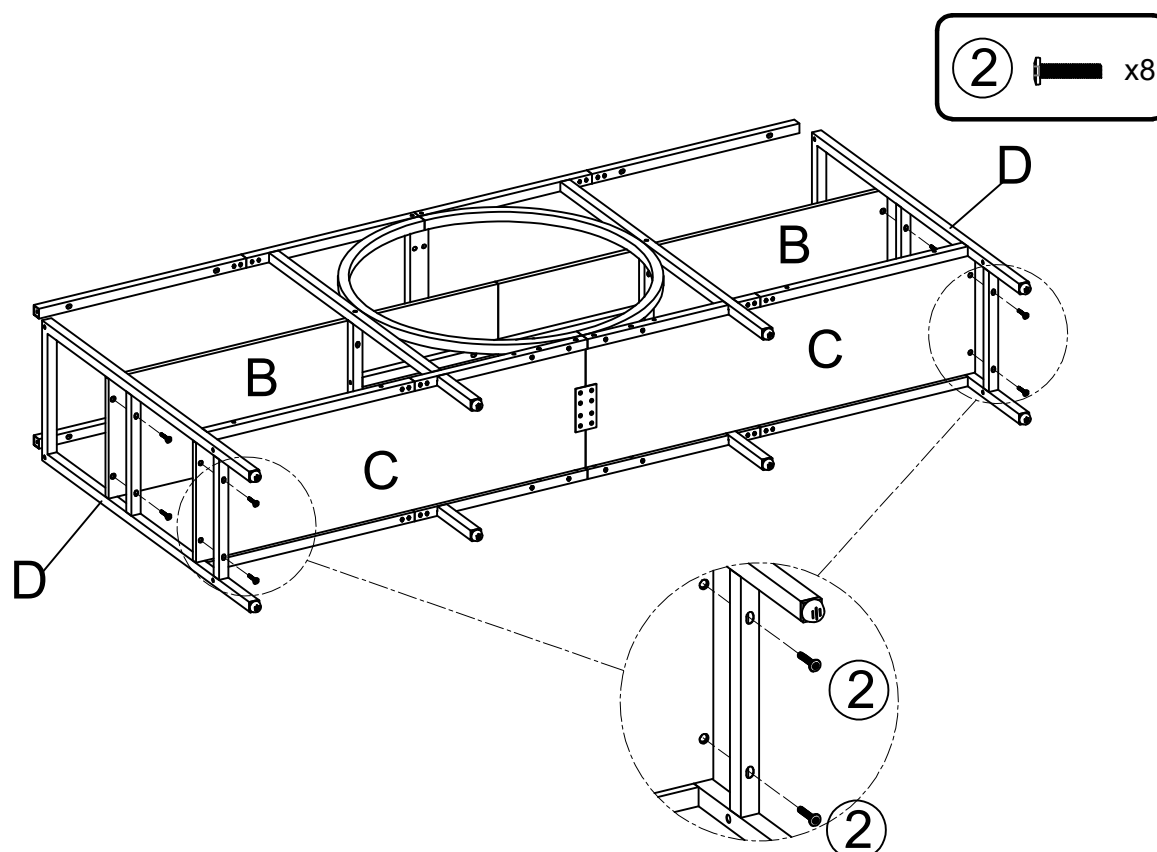

STEP 11


①  x8

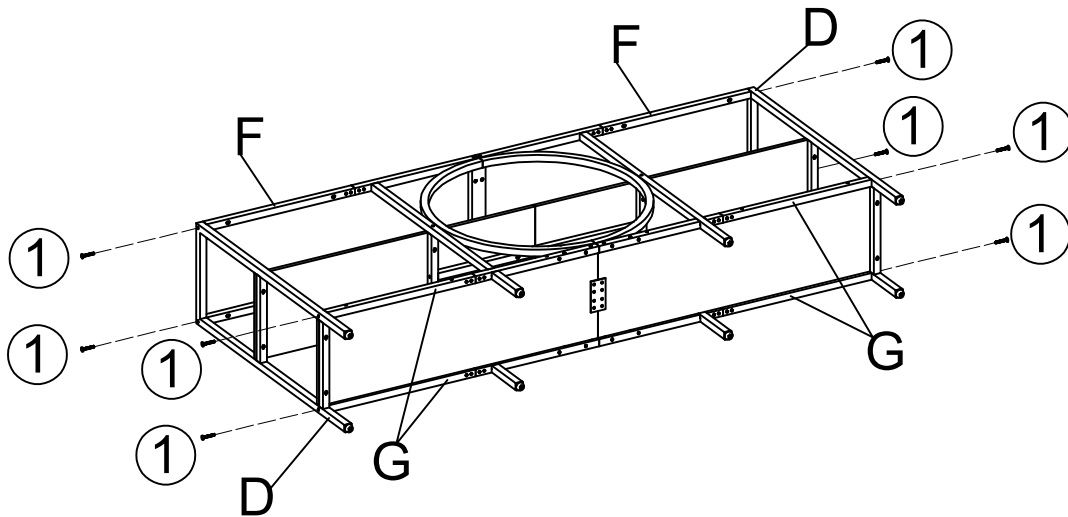

STEP 12

⑨  x2

Note: Before tightening the screws, push the wood boards tightly to make closer, otherwise it may cause large gaps.

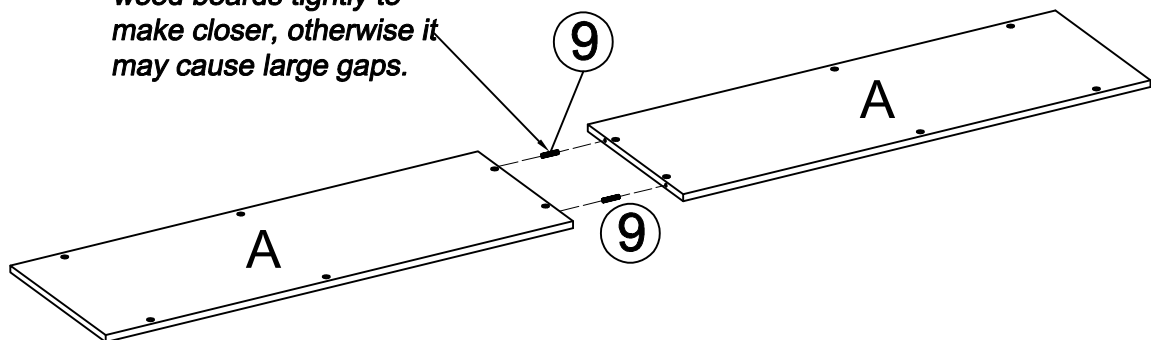

STEP 13

②  x12

Note: Before tightening the screws, push the wood boards tightly to make closer, otherwise it may cause large gaps.

