





ASSEMBLY INSTRUCTIONS

Chair Assembly Precaution:


Leave all plastic dowels approximately 1/4" exposed before attaching the apron and seat assembly.





Part C



Part D

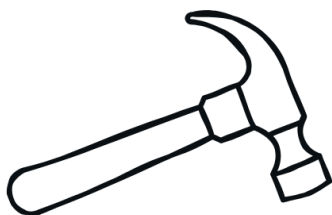

Leave 1/4"
Exposed

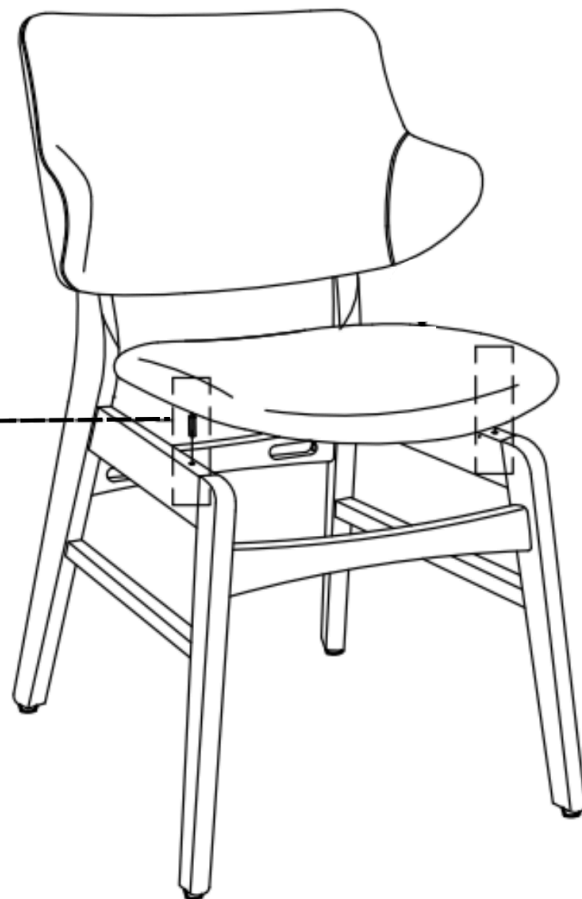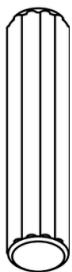



ASSEMBLY INSTRUCTIONS

Chair Assembly Precaution:

Hold the backrest in position while installing the screws. A second person may be helpful.



Assembly Tip

Due to the thick cushion, additional pressure may be required to align the screw holes. Assistance may be helpful.



Fully tighten all screws only after assembly is complete and all parts are aligned.

