









ASSEMBLY INTRODUCTION

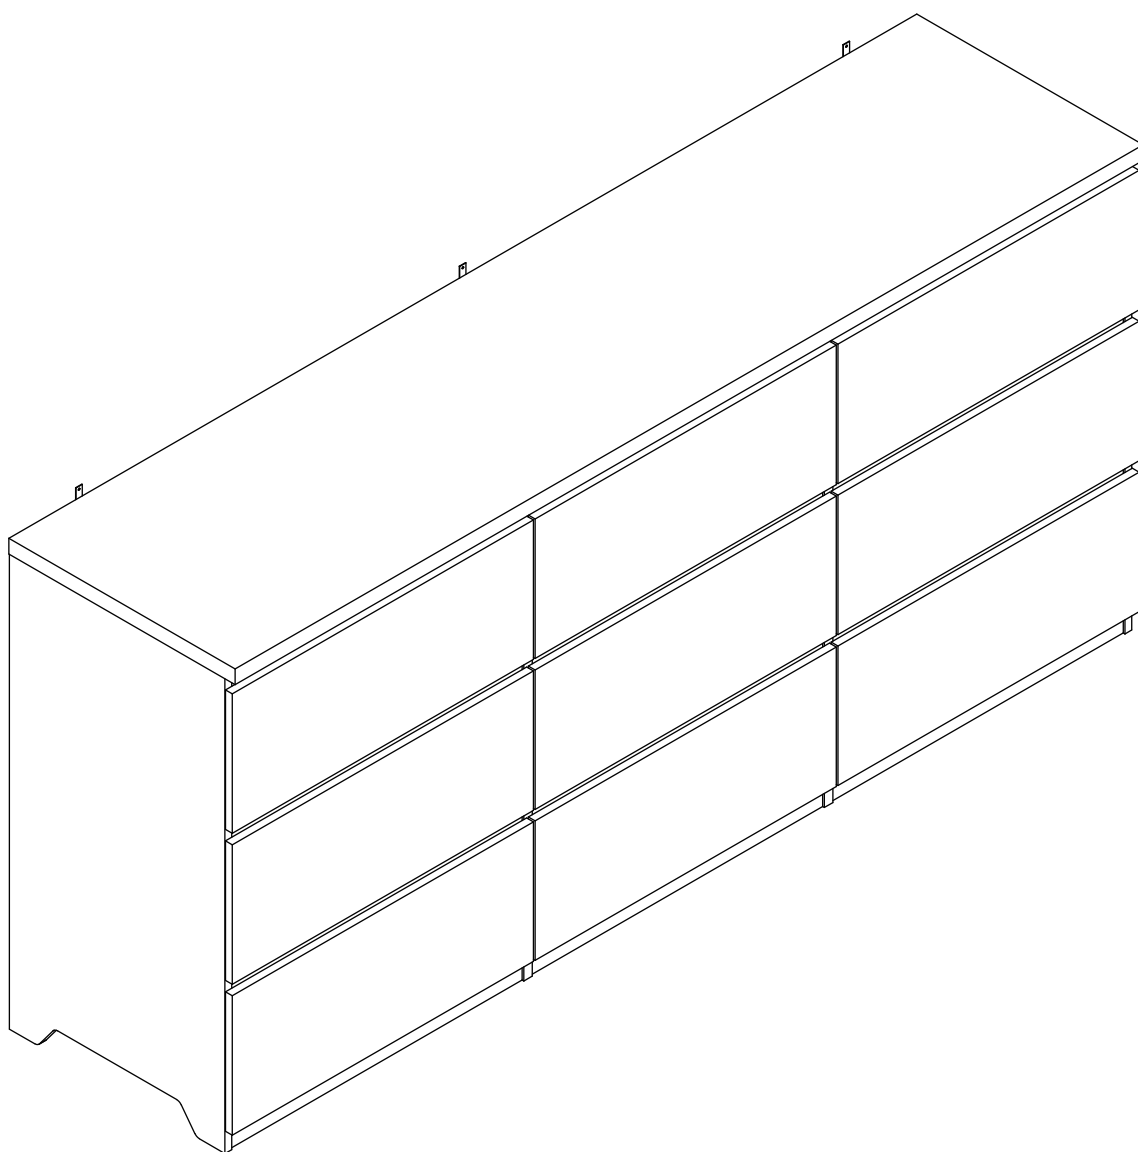


Exploded View

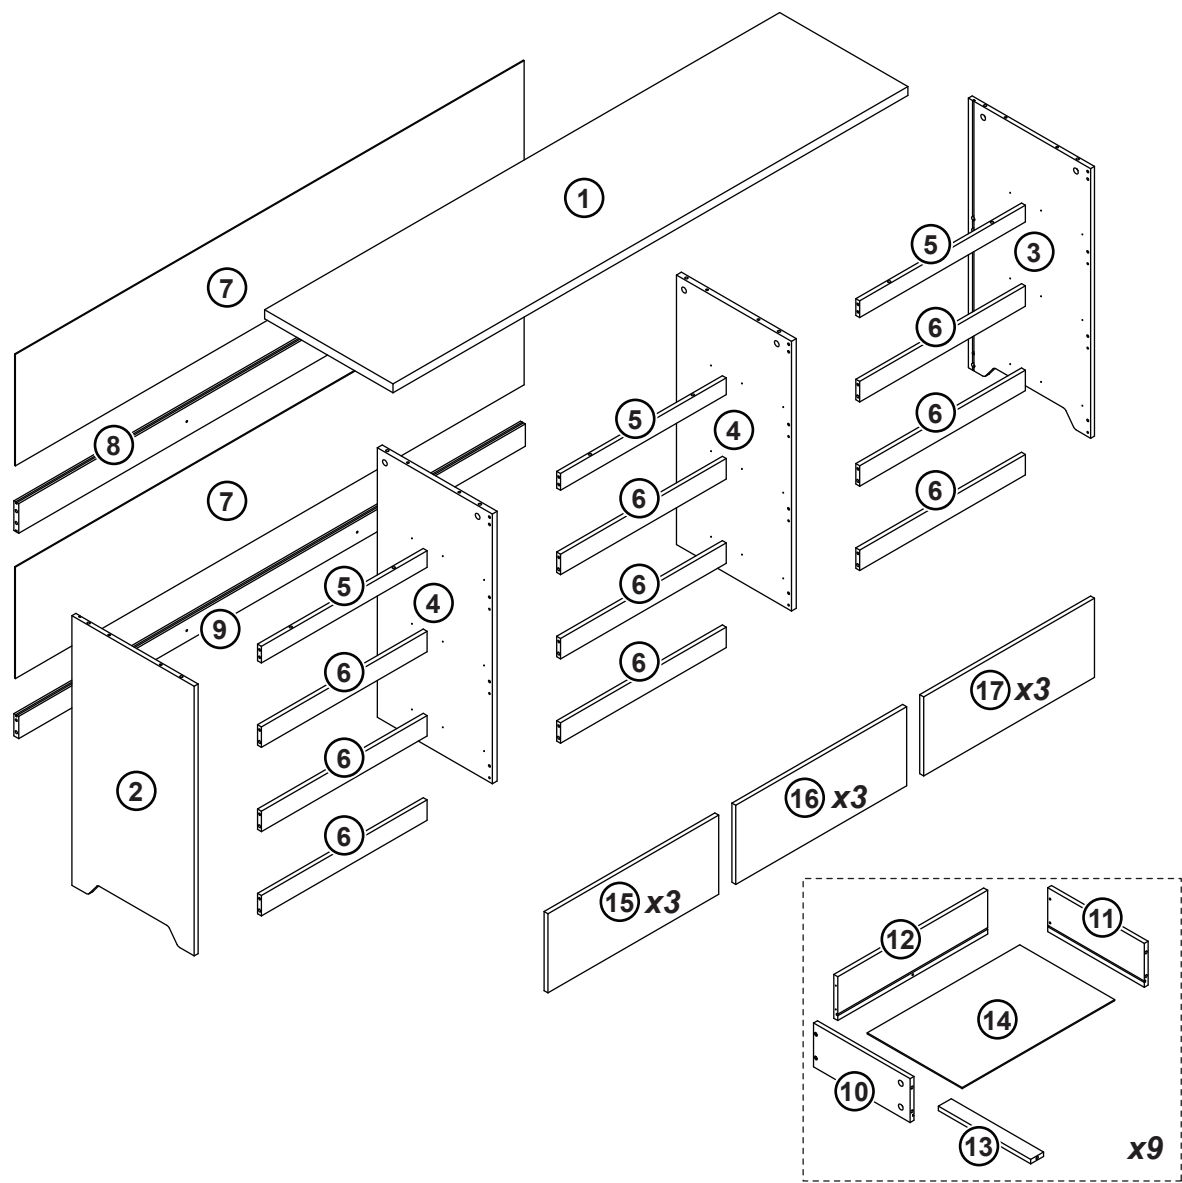


Fitting

 A x 83 M6 x 35 mm	 B x 83 φ15 x 9.5 mm	 C x 20 φ6 x 30 mm	 D x 49 φ4 x 35 mm	 E x 108 φ3 x 12mm
 F x 10 φ6 x 50 mm	 G x 3 35 x 35 mm	 H x 6 φ4 x 12 mm	 I x 3 φ6 x 30 mm	 J x 3 φ4 x 40 mm
 K x 16	 CL x 9 300 mm	 CR x 9 300 mm	 DL x 9 300 mm	 DR x 9 300 mm



Step 1

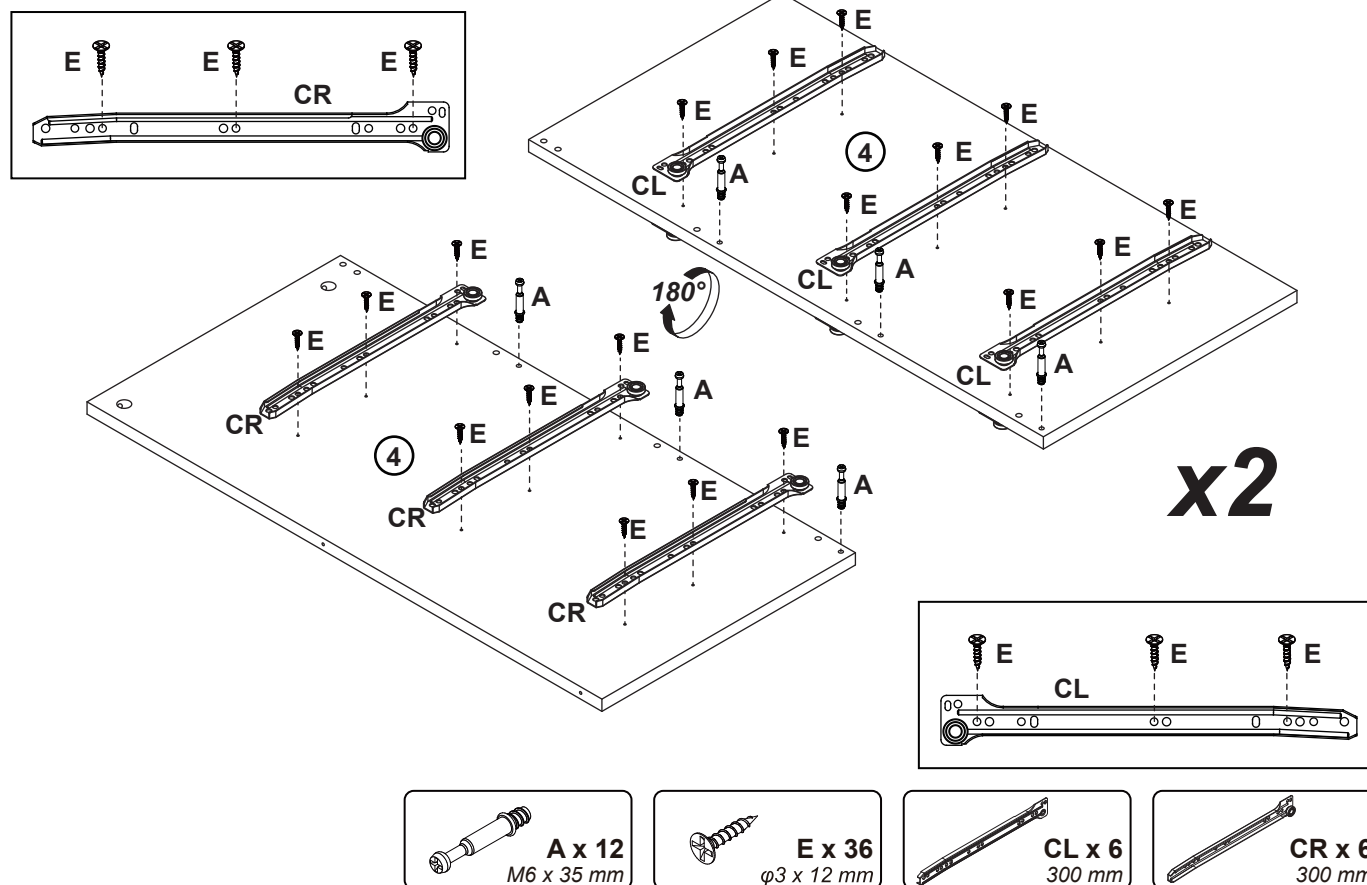



Step 2

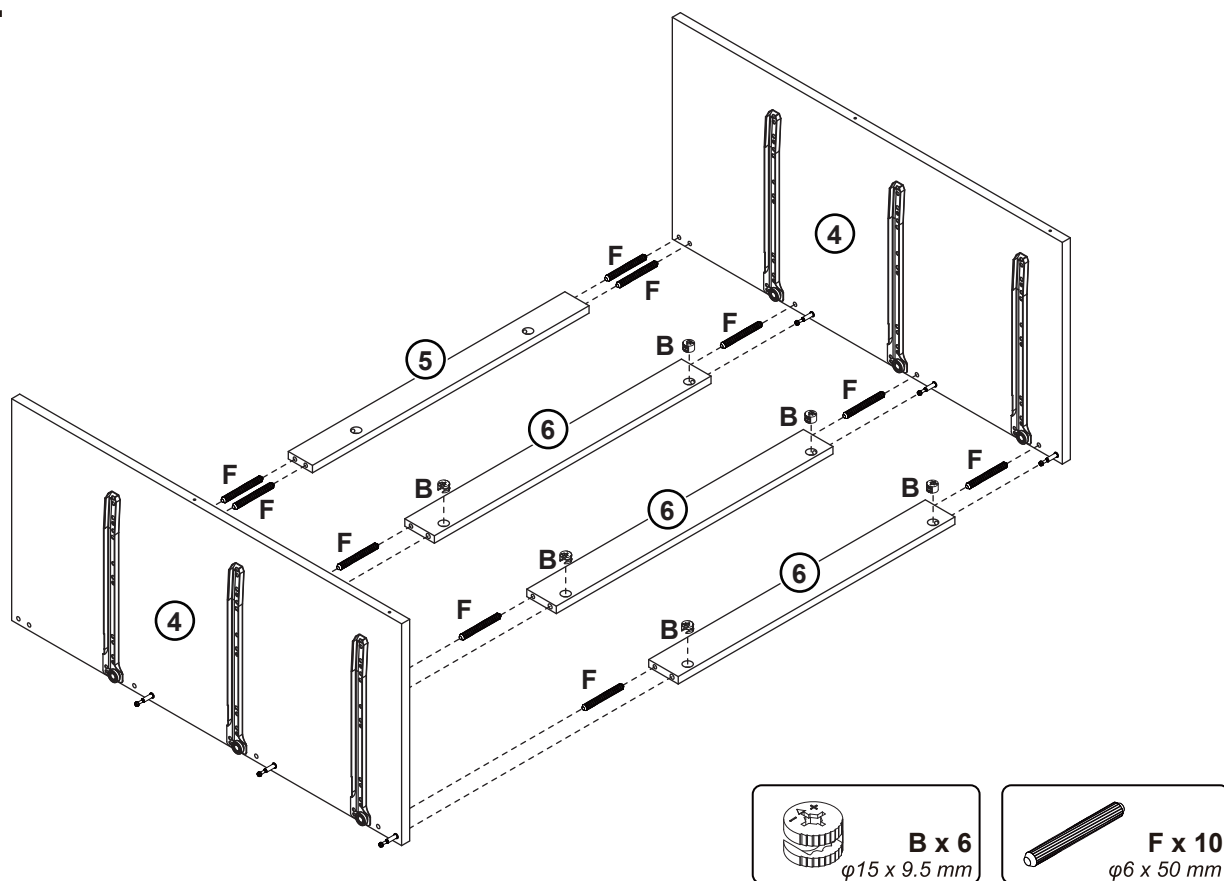


Step 3

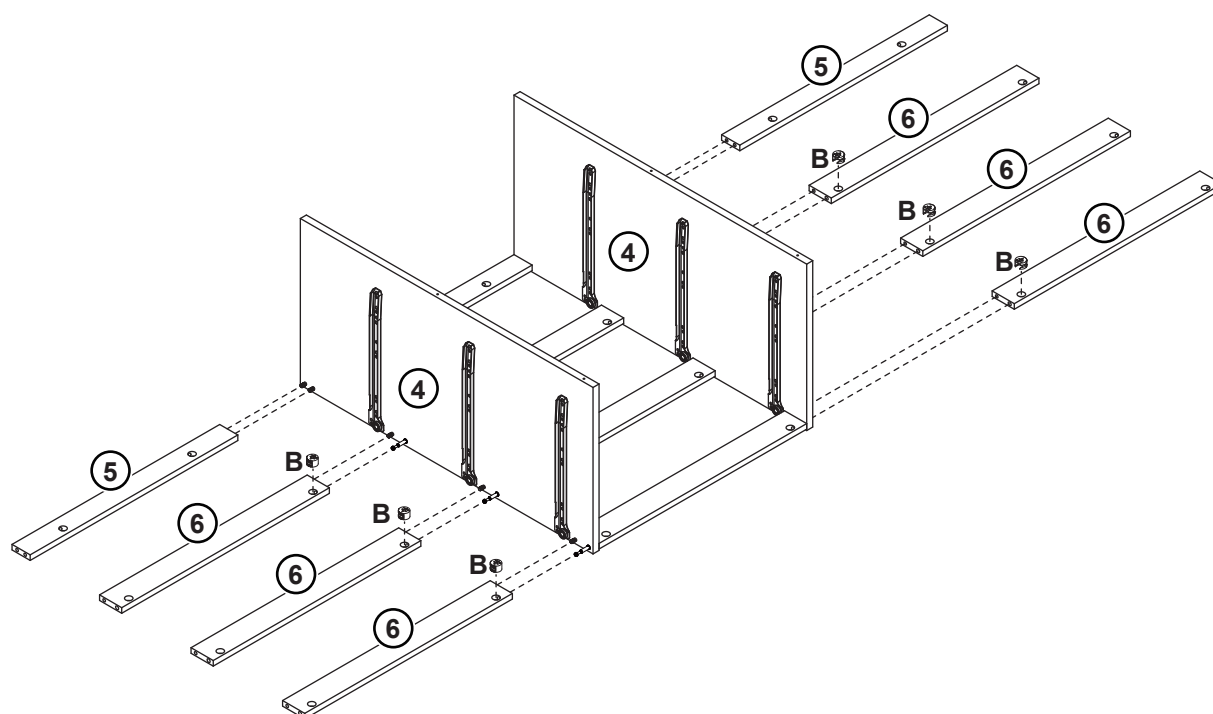


Step 4

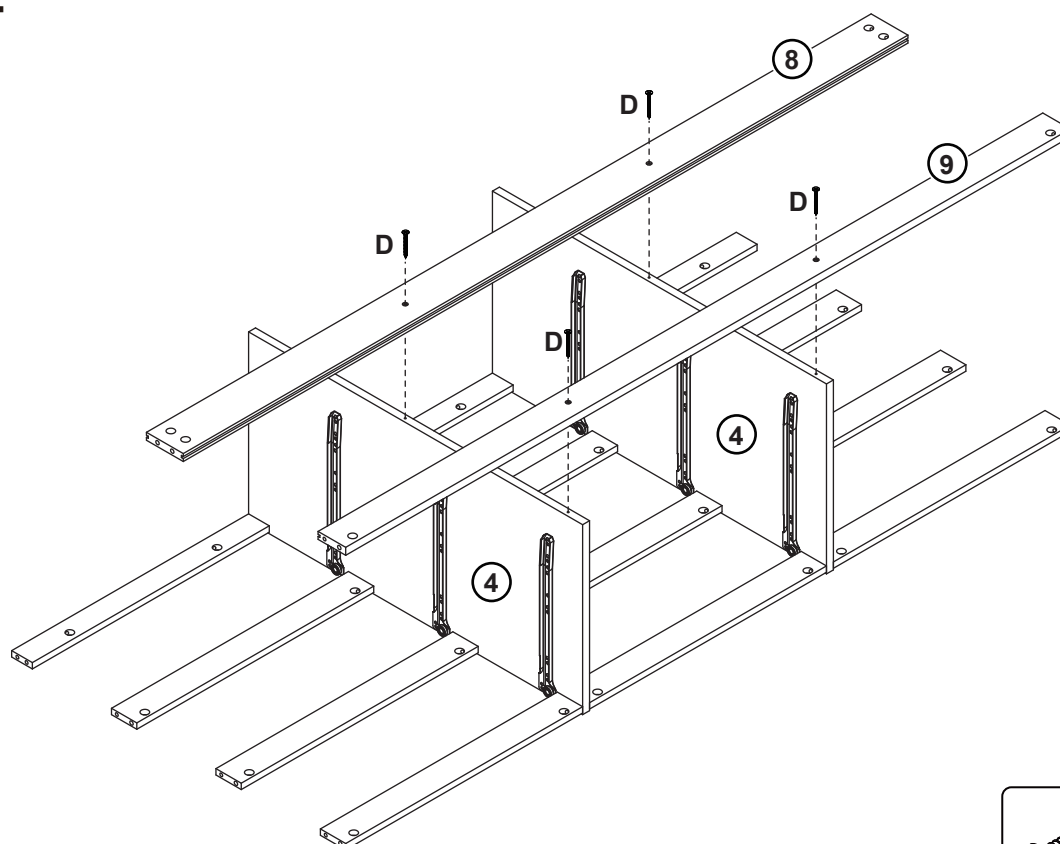


Step 5

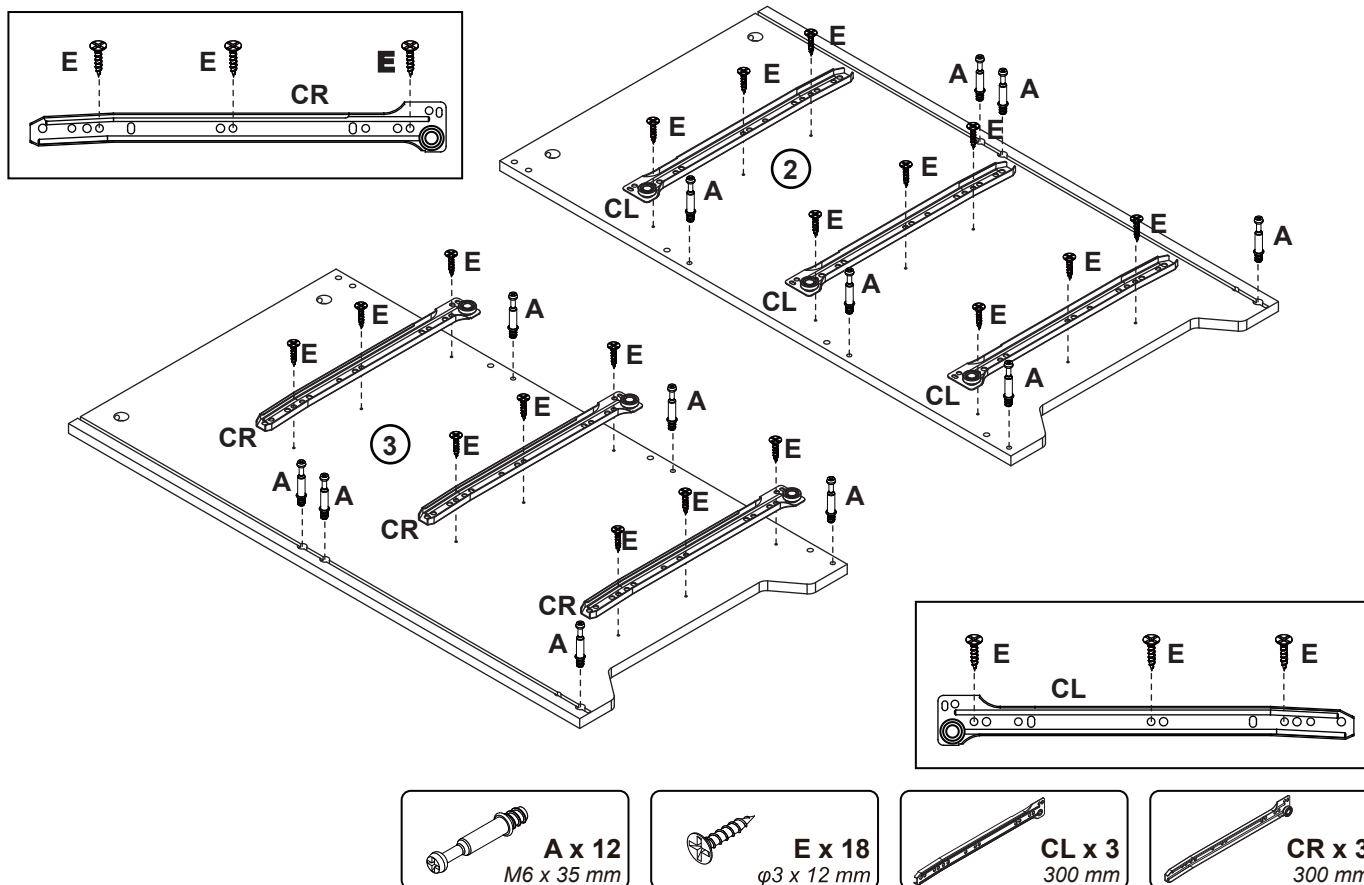


Step 6

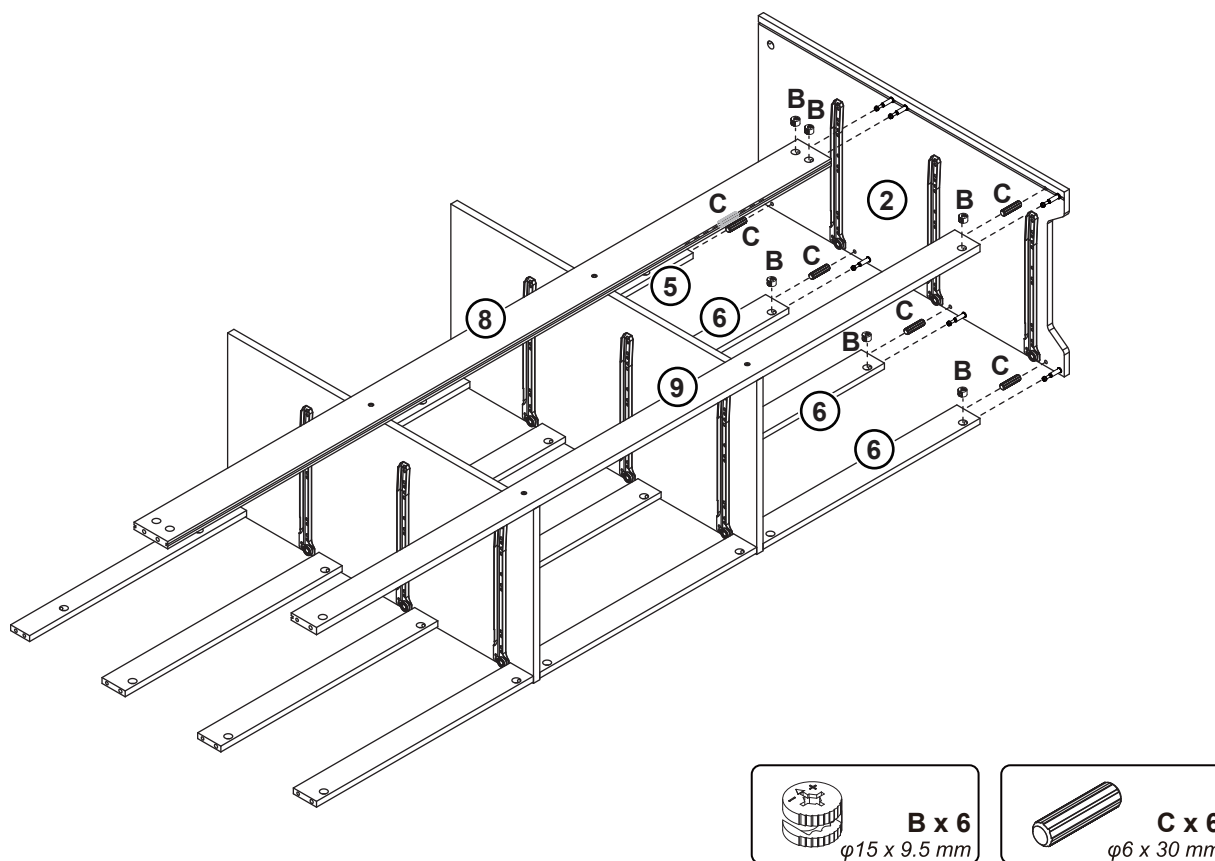


Step 7

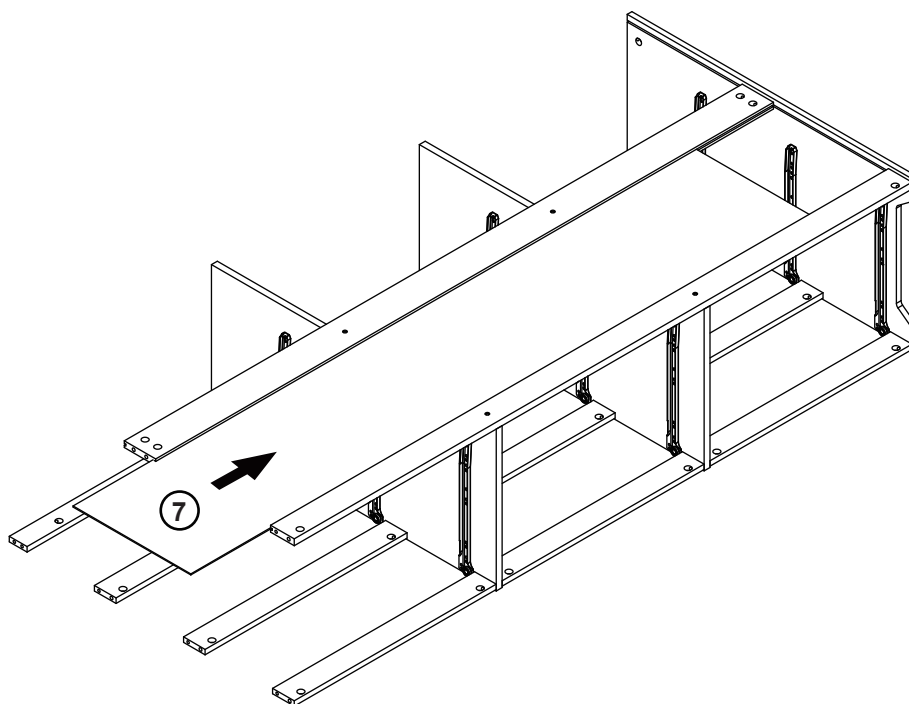



Step 8

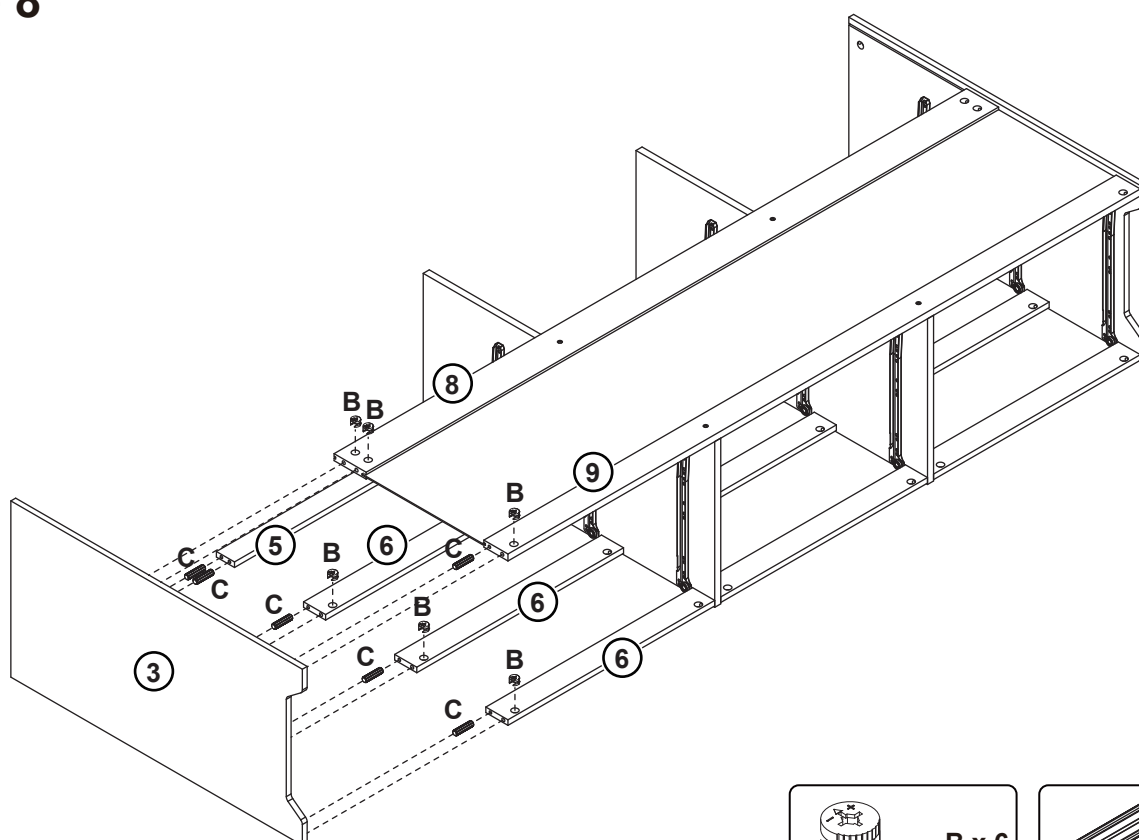



Step 9

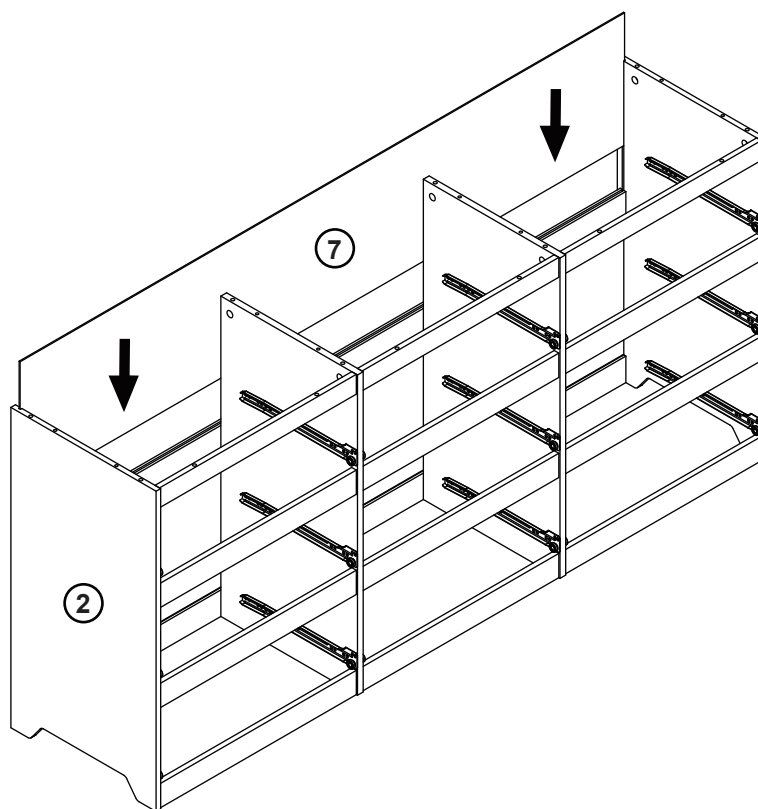


Step 10

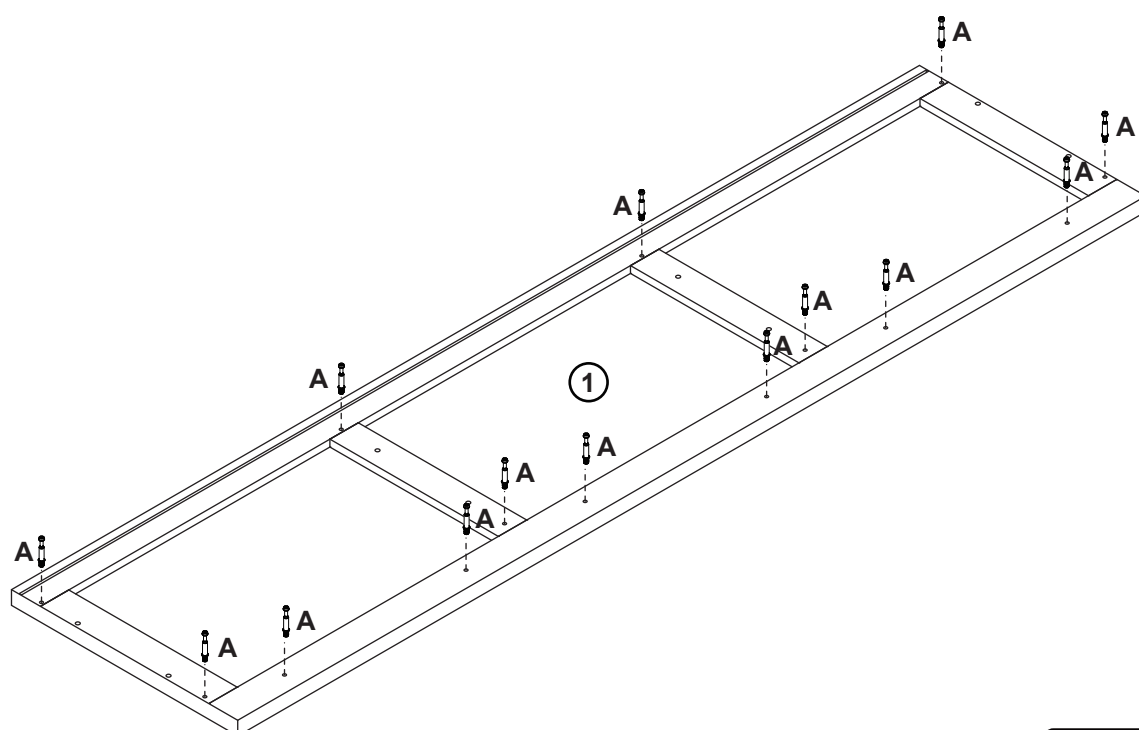




Step 11

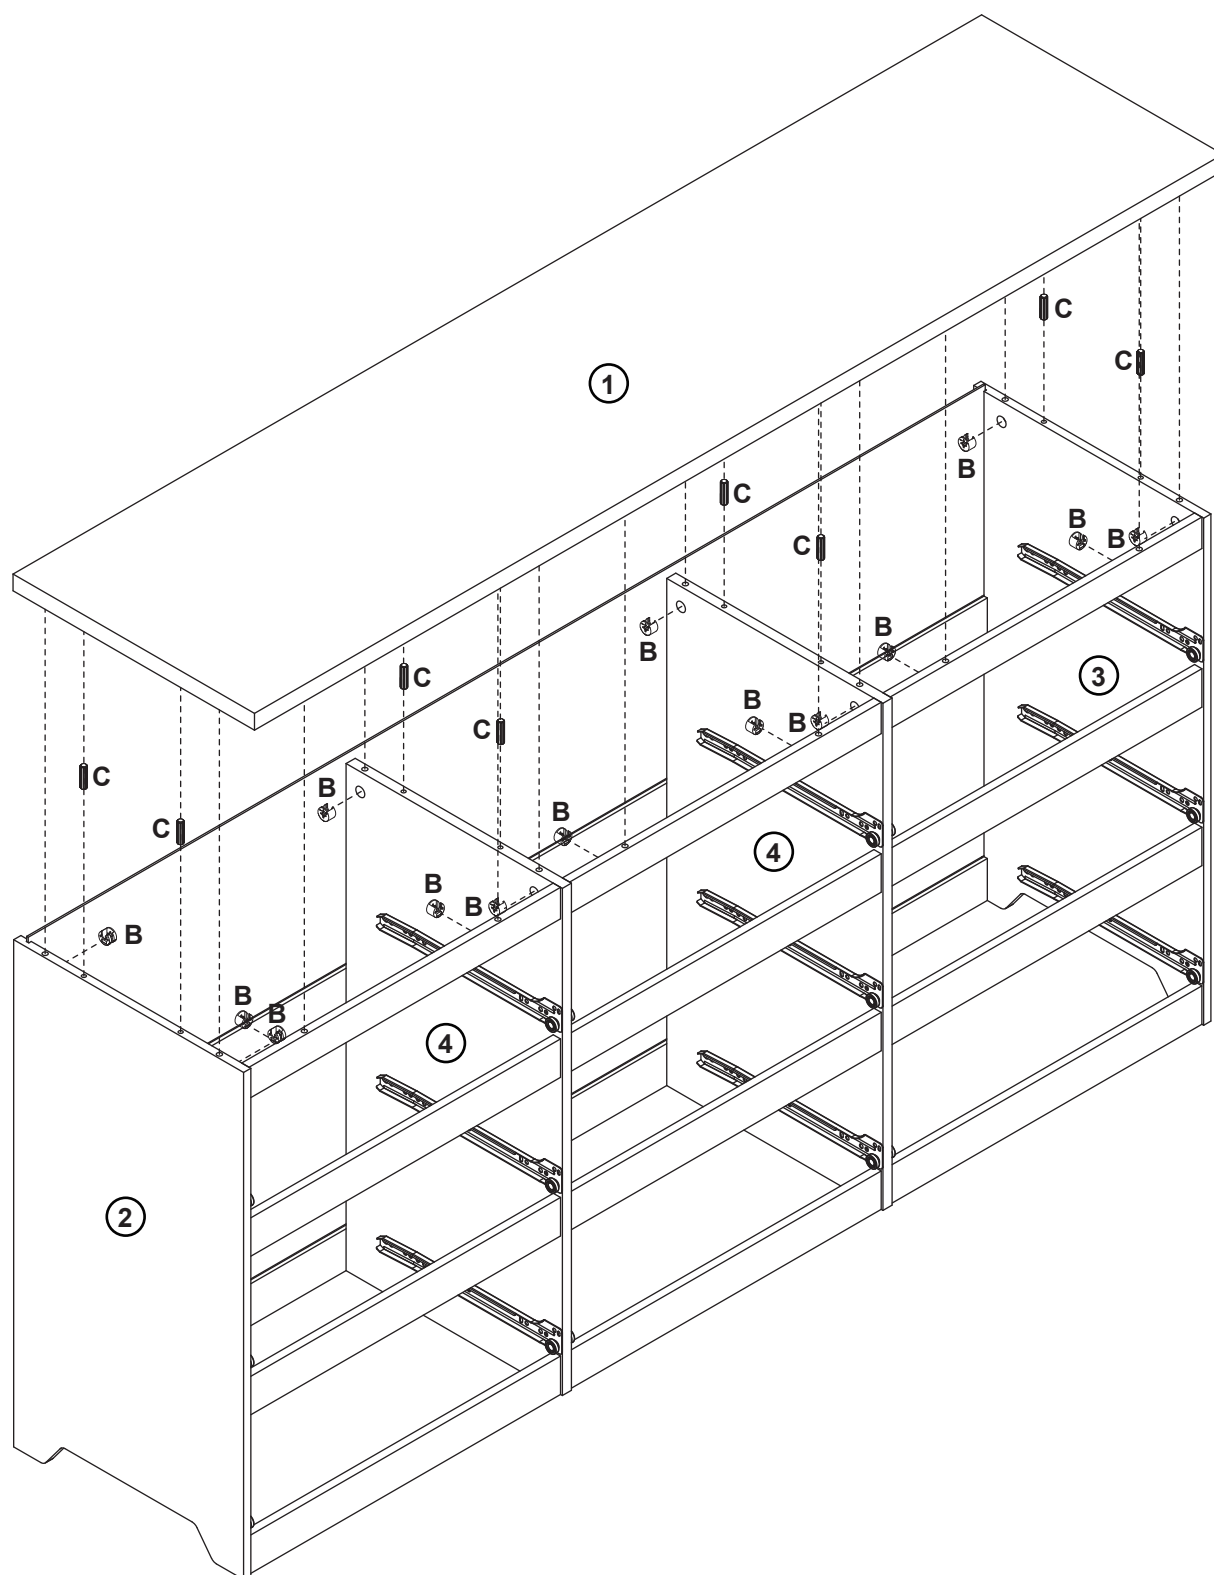


Step 12

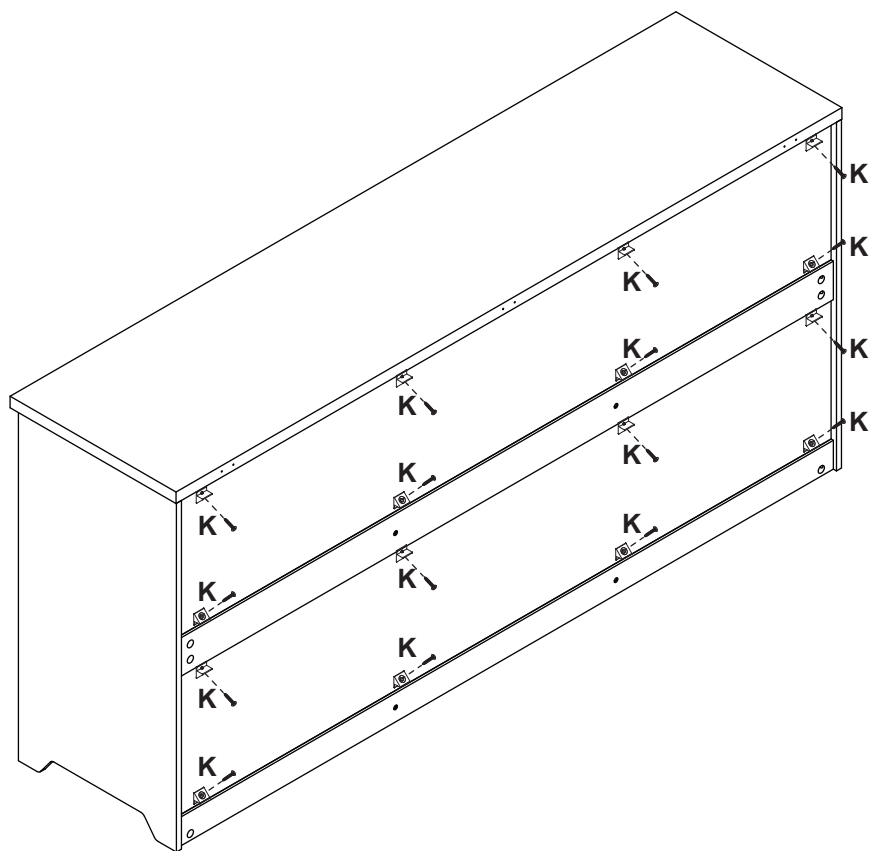


Step 13

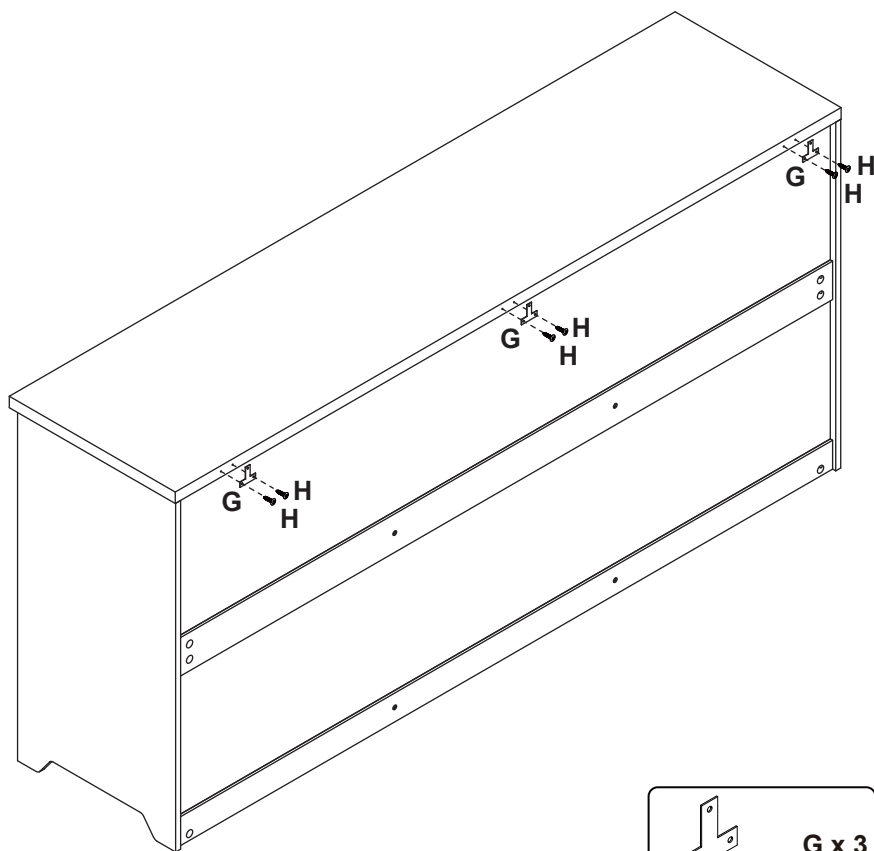


Step 14

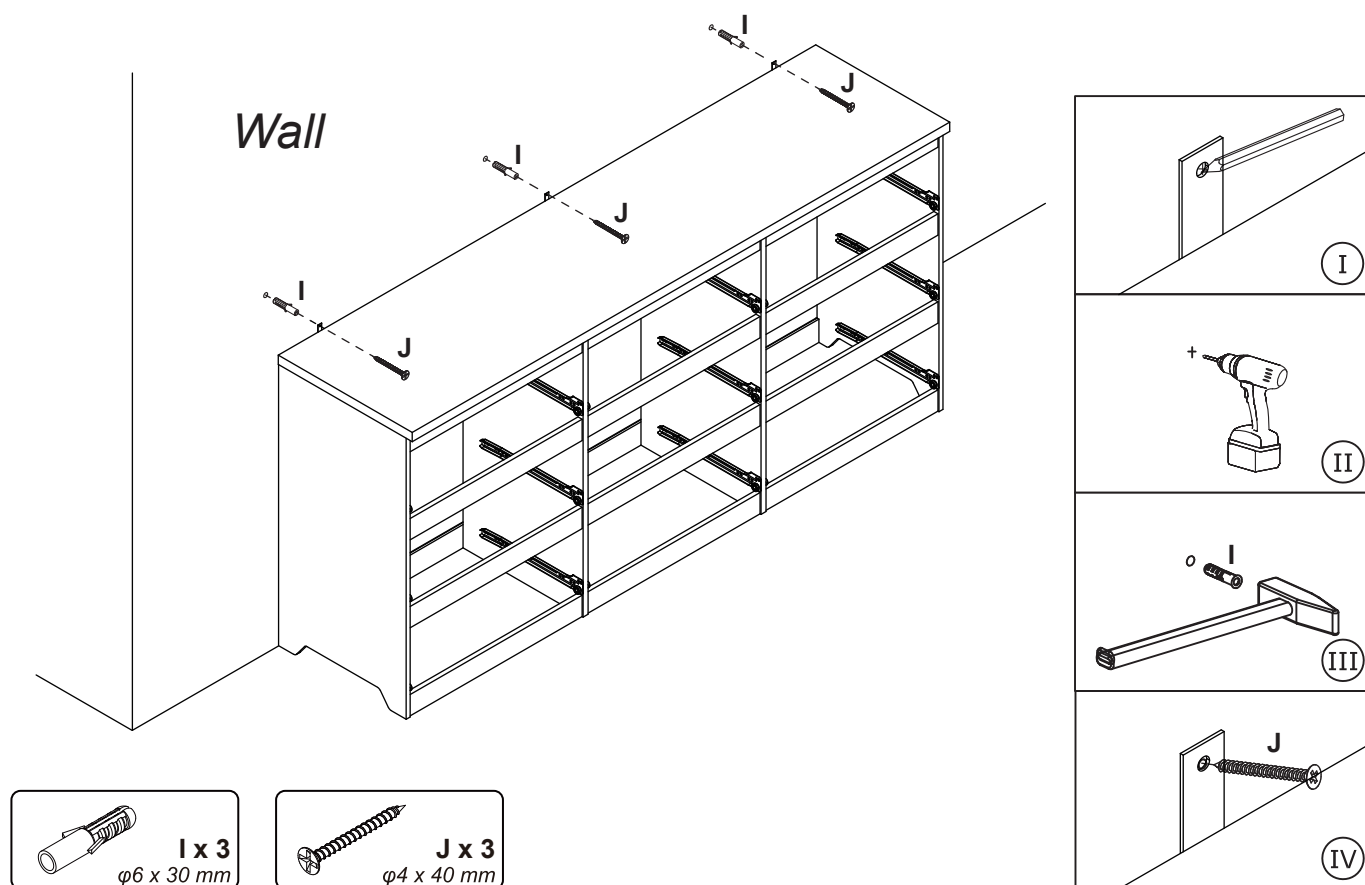



Step 15

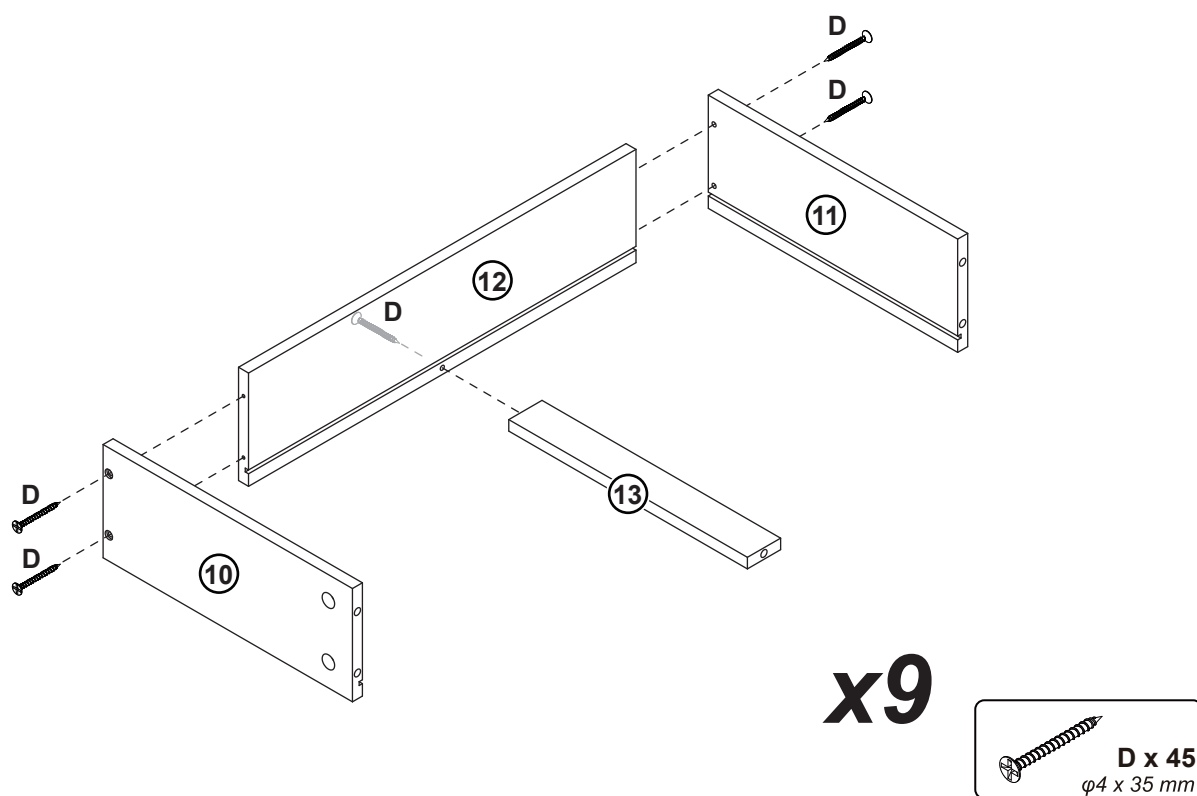


Step 16

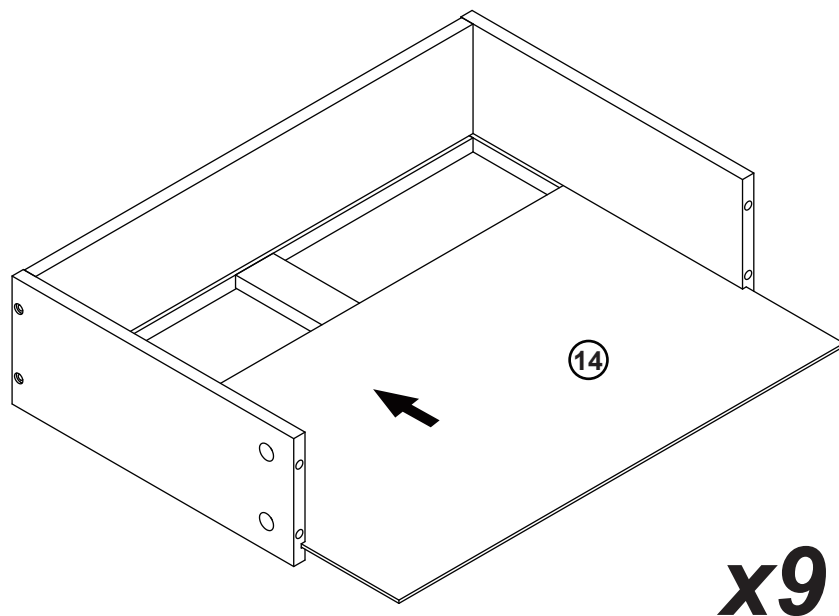



Step 17

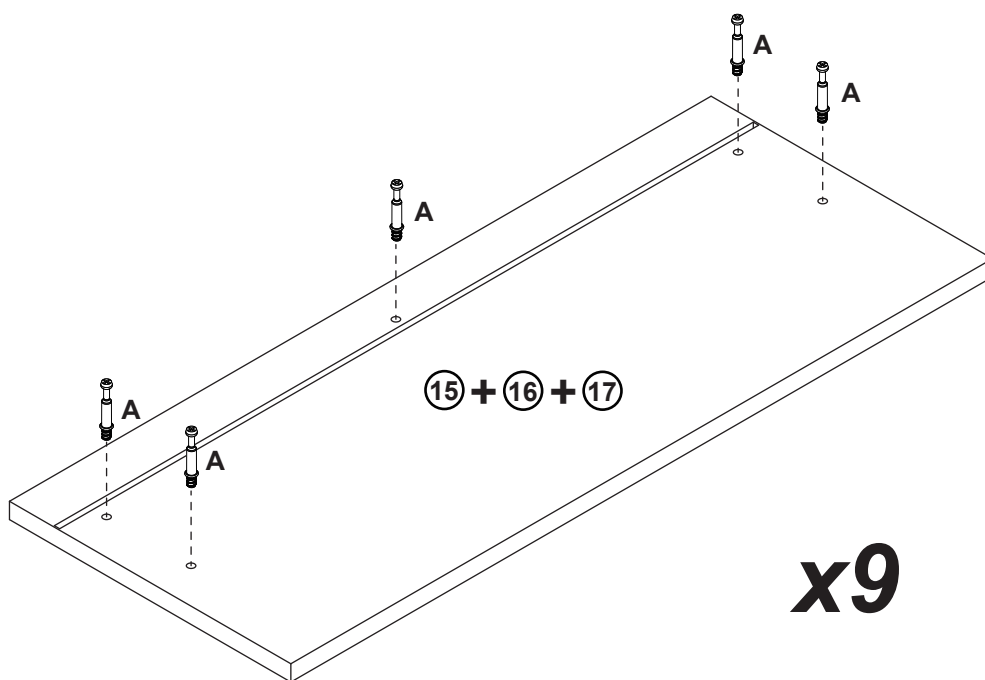


Step 18

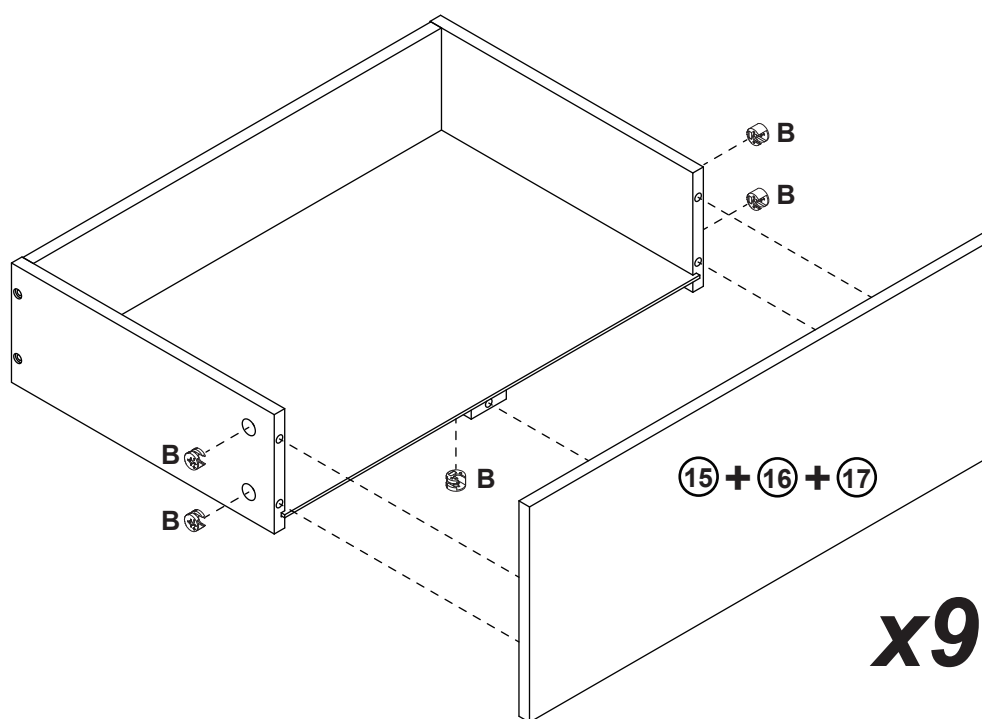

Step 19

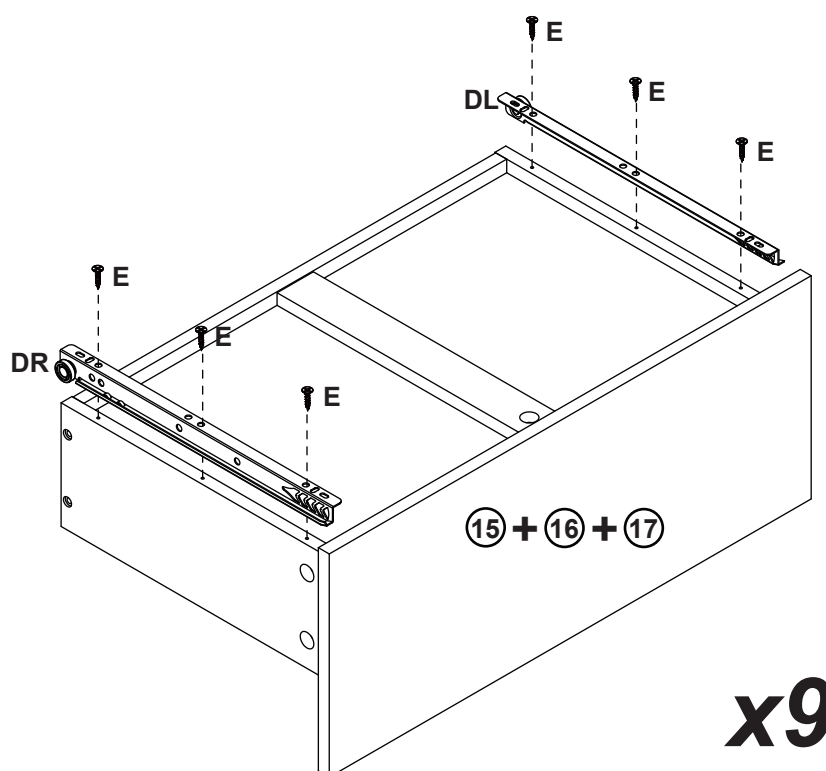

Step 20

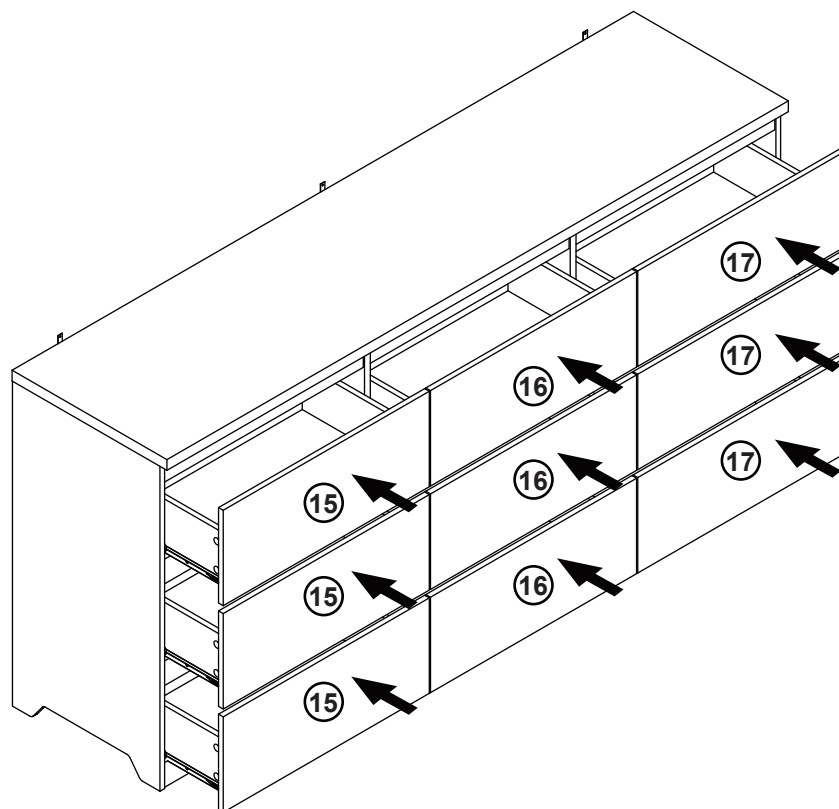

Step 21

