






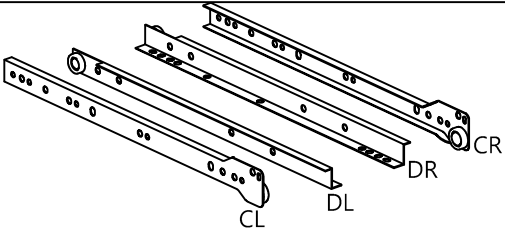
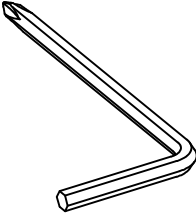


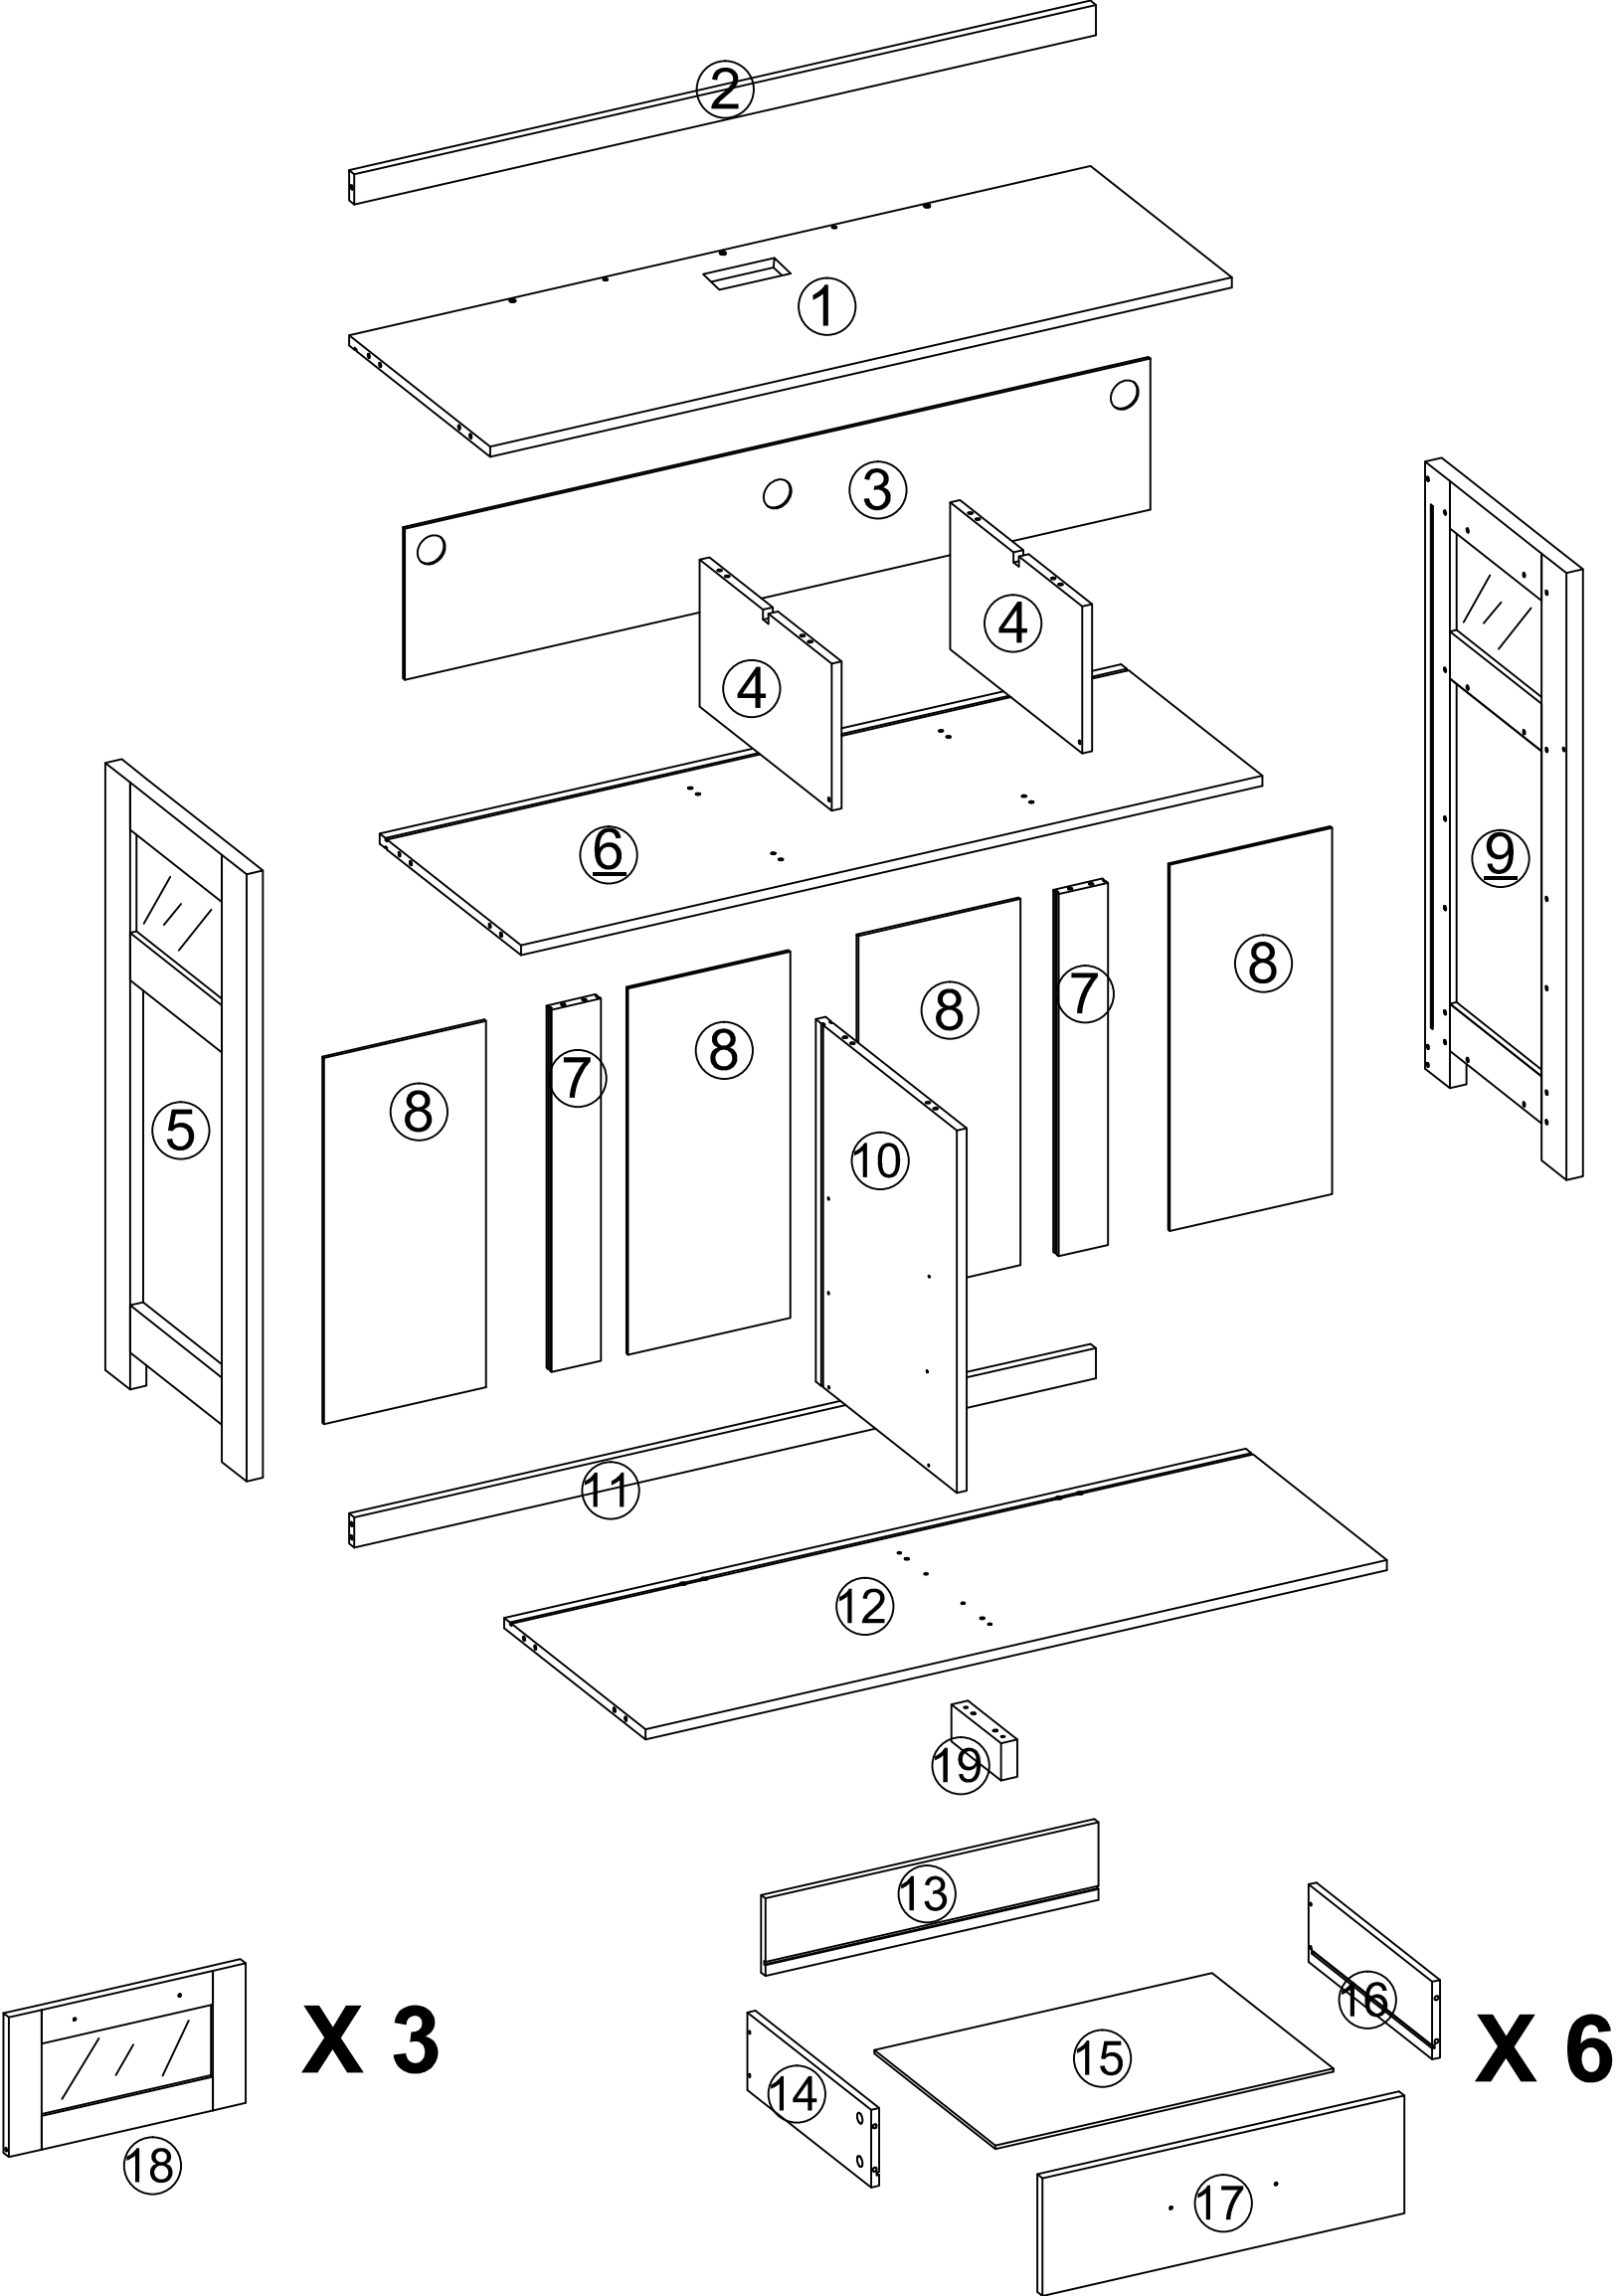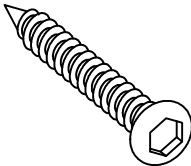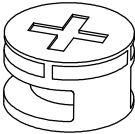





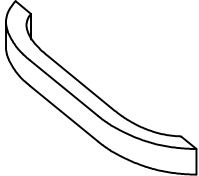
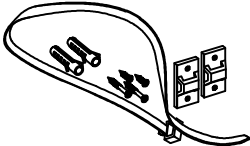


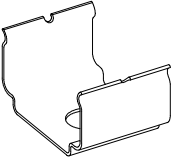
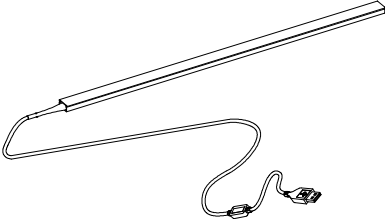


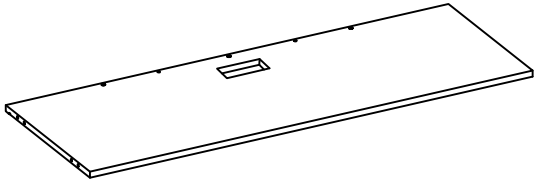
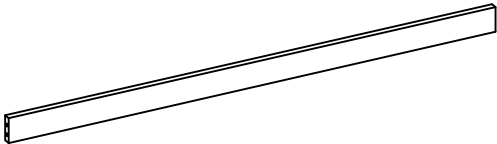
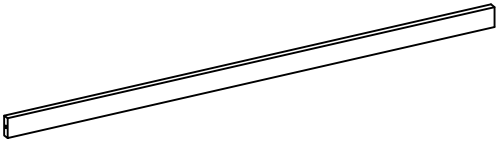
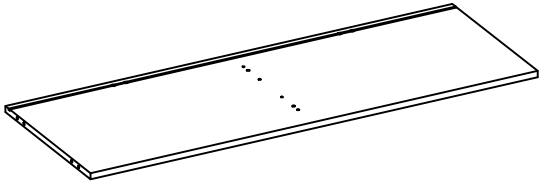
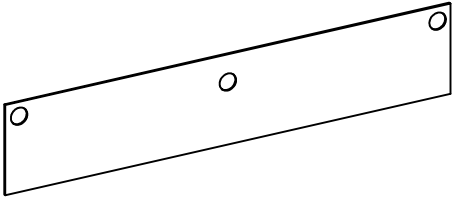
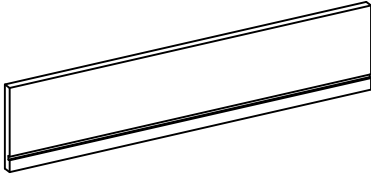
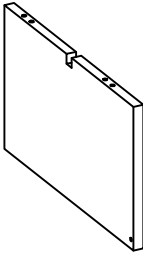
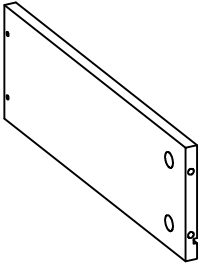

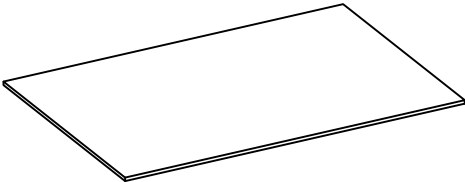
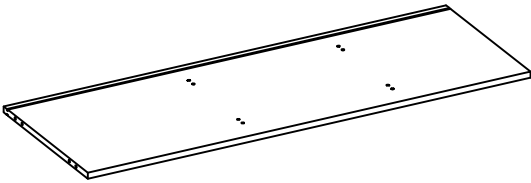
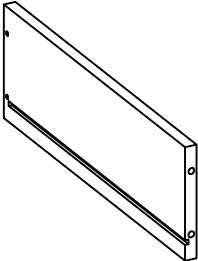

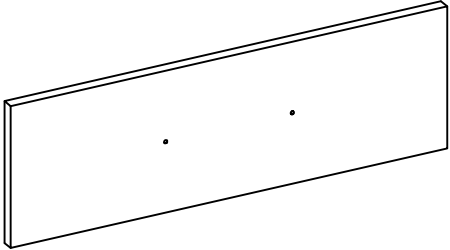

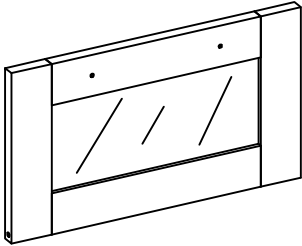

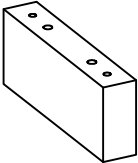
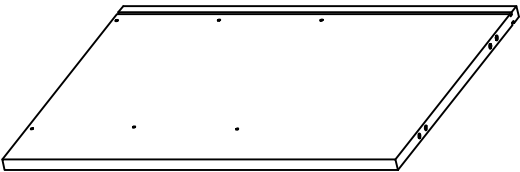



ASSEMBLING INSTRUCTION

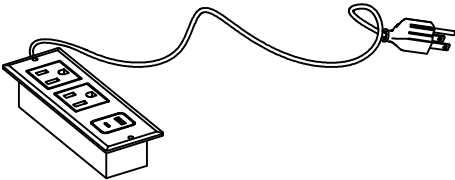



A		X62	N		X8
B	 ø15*12mm	X38	P		X1
C	 ø15*10mm	X24	Q		X6
D		X6	R		X1
E	 ø6*30mm	X30	S	 M3.5*14mm	X14
F	 M3*12mm	X60	T	 M3*14mm	X16
G	 M4*35mm	X24	U		X8
H	 M4*18mm	X18	V		X62
J		X9	W		X2
K	 K-1  K-2	X3	X		X4
L		X1	Y		X5
M		X2			

①		X1	⑪		X1
②		X1	⑫		X1
③		X1	⑬		X6
④		X2	⑭		X6
⑤		X1	⑮		X6
⑥		X1	⑯		X6
⑦		X2	⑰		X6
⑧		X4	⑱		X3
⑨		X1	⑲		X1
⑩		X1			

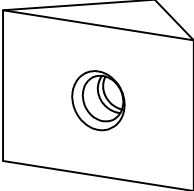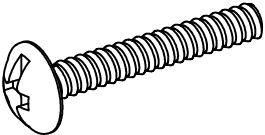
Step:1

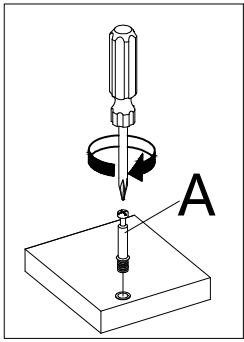




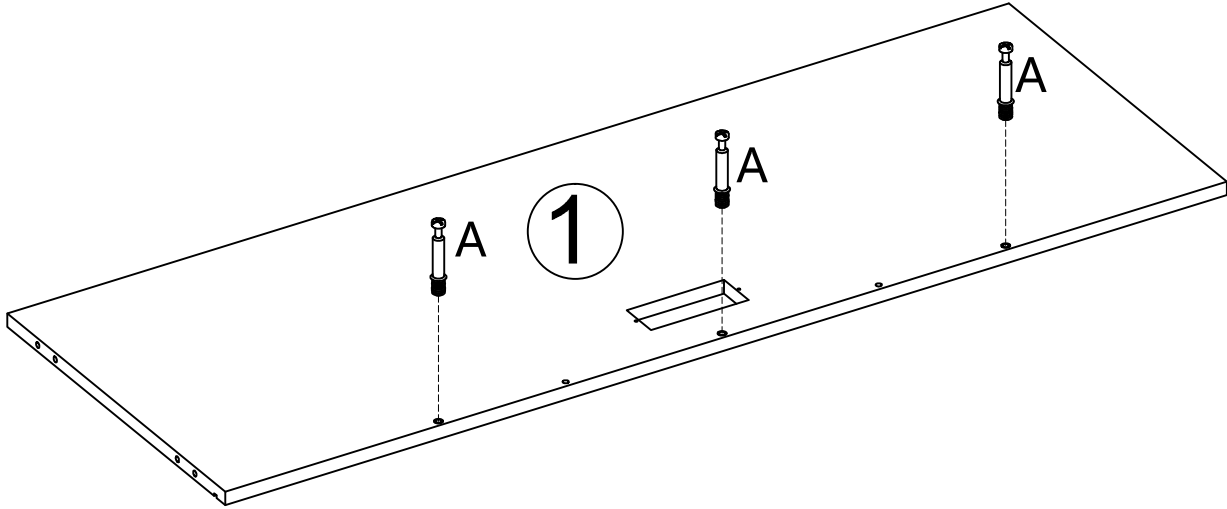
A		X3
---	---	----

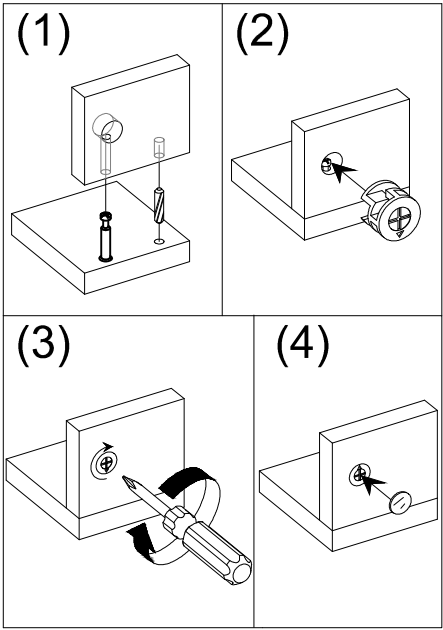

Step:2





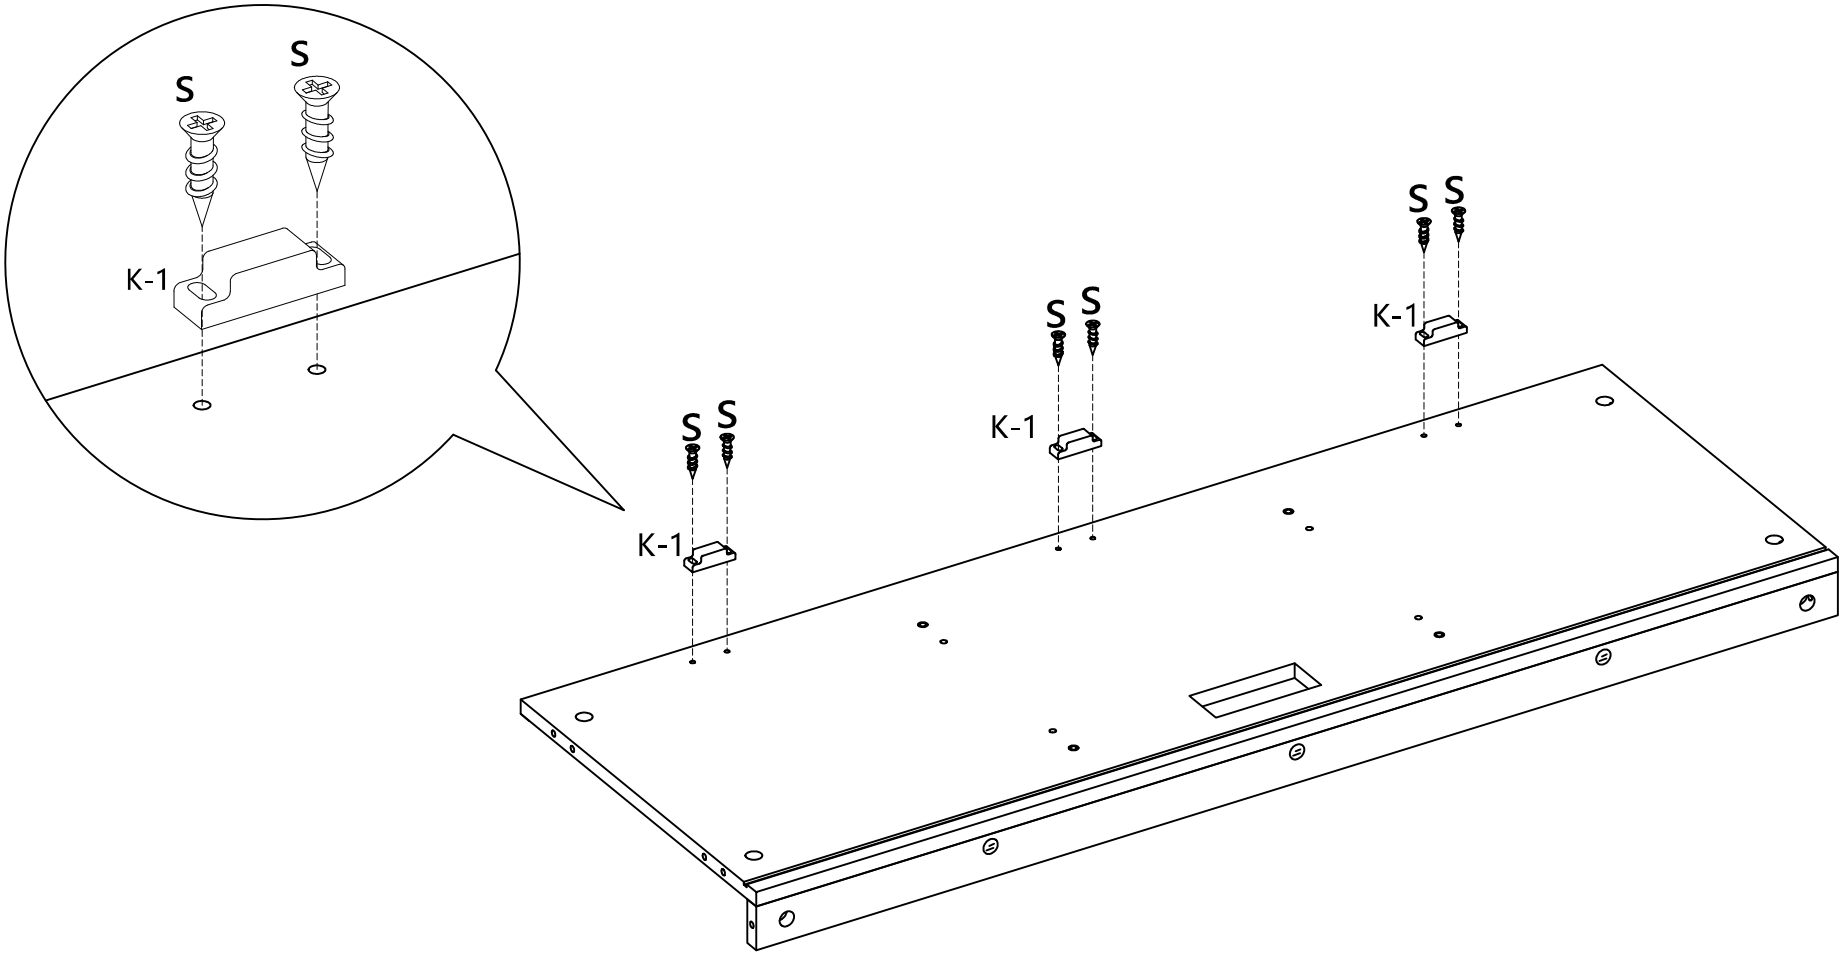
B	 ø15*12mm	X3
E	 ø6*30mm	X2
V		X3

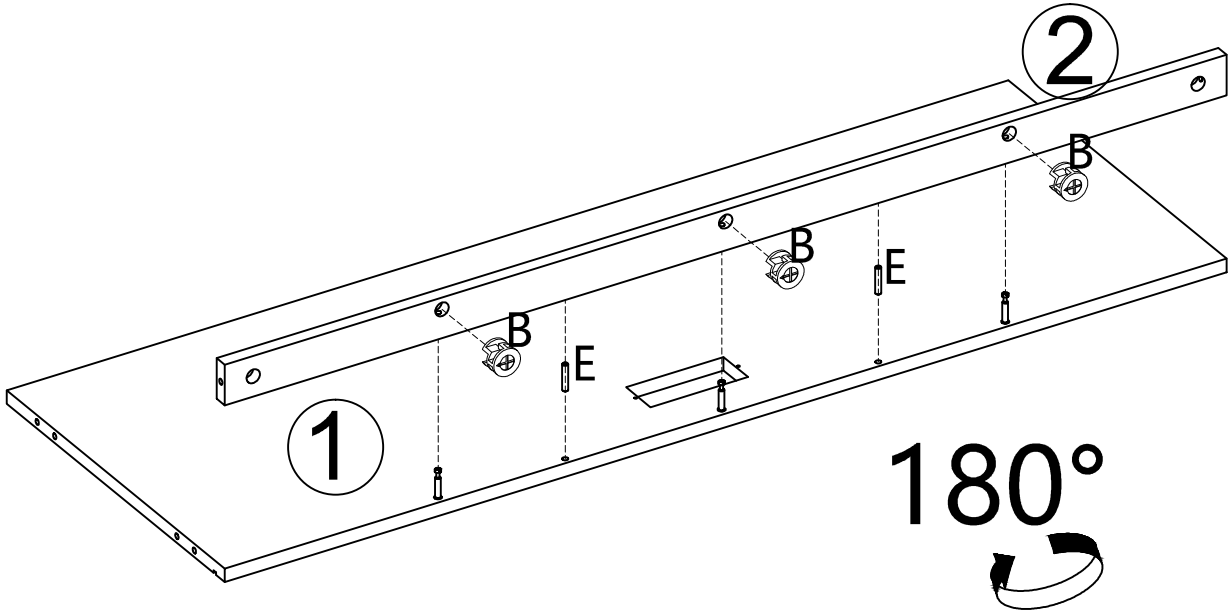



Make sure board 1 and board 2 are even when installing them.


Step:3

K-1		X3
S	 M3.5*14mm	X6




Step:4


T	 M3*14mm	X4
X		X4

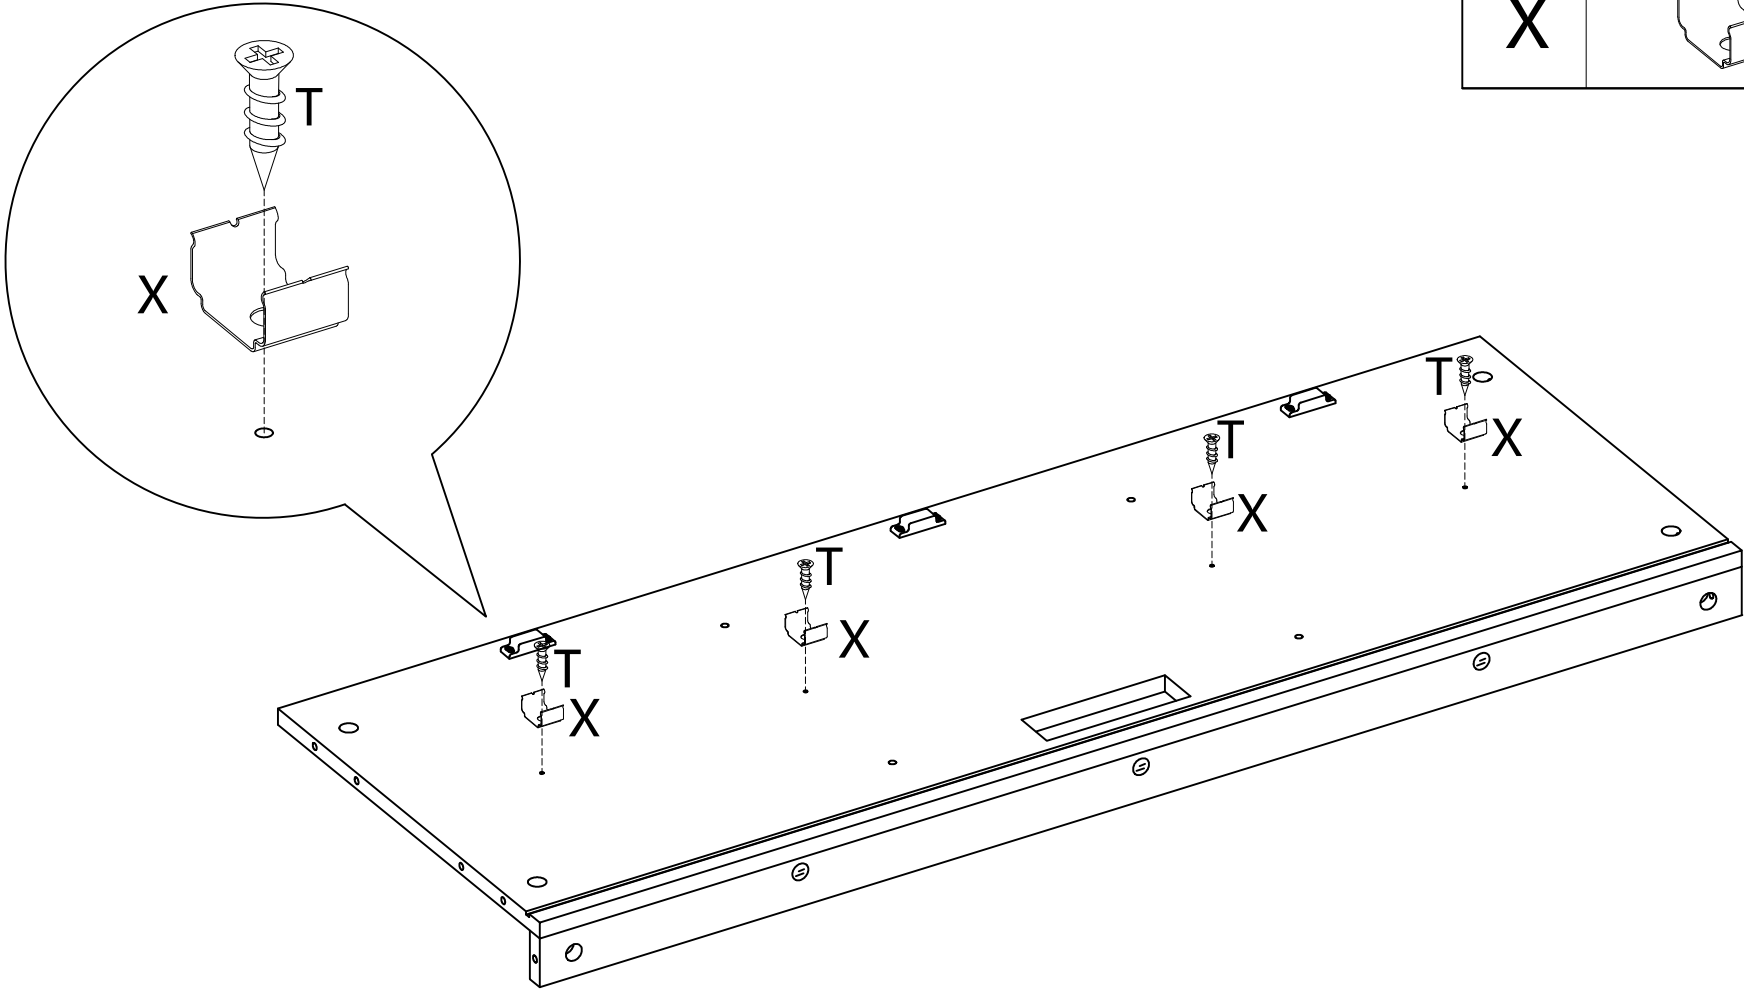



Step:5



L		X1
---	---	----

Buckle the light strip in.

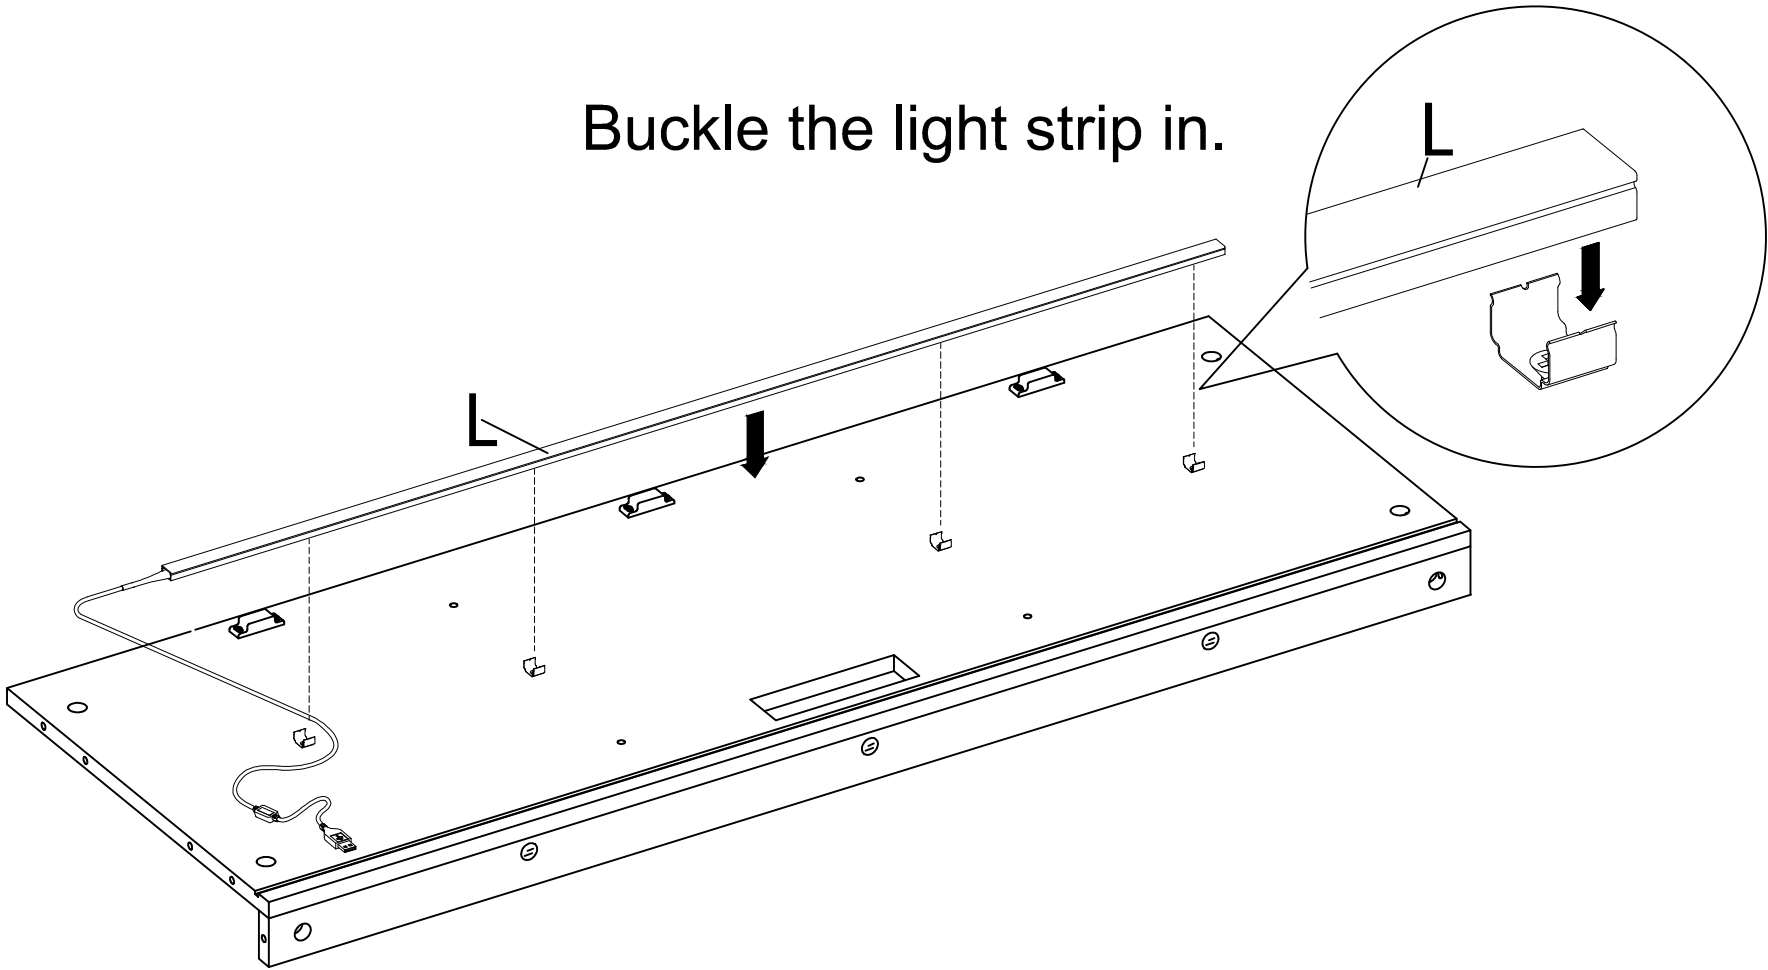




Step:6

T	 M3*14mm	X4
M		X2

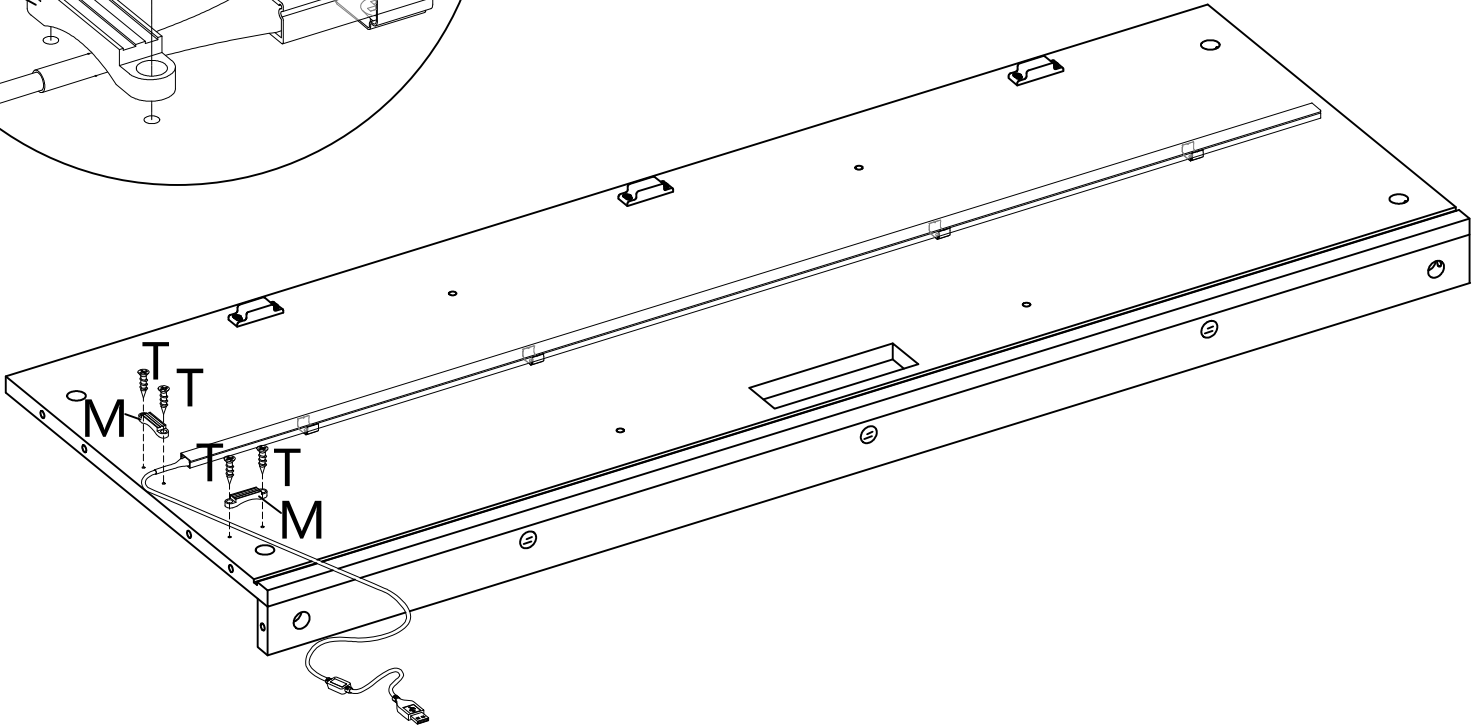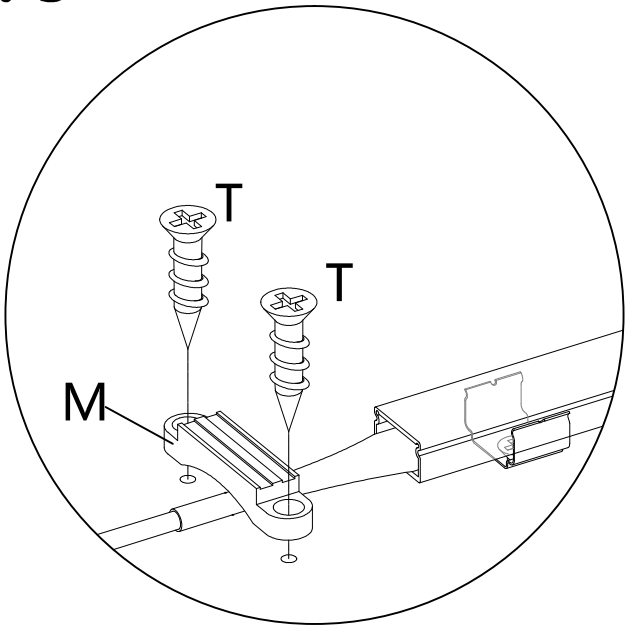




Step:7

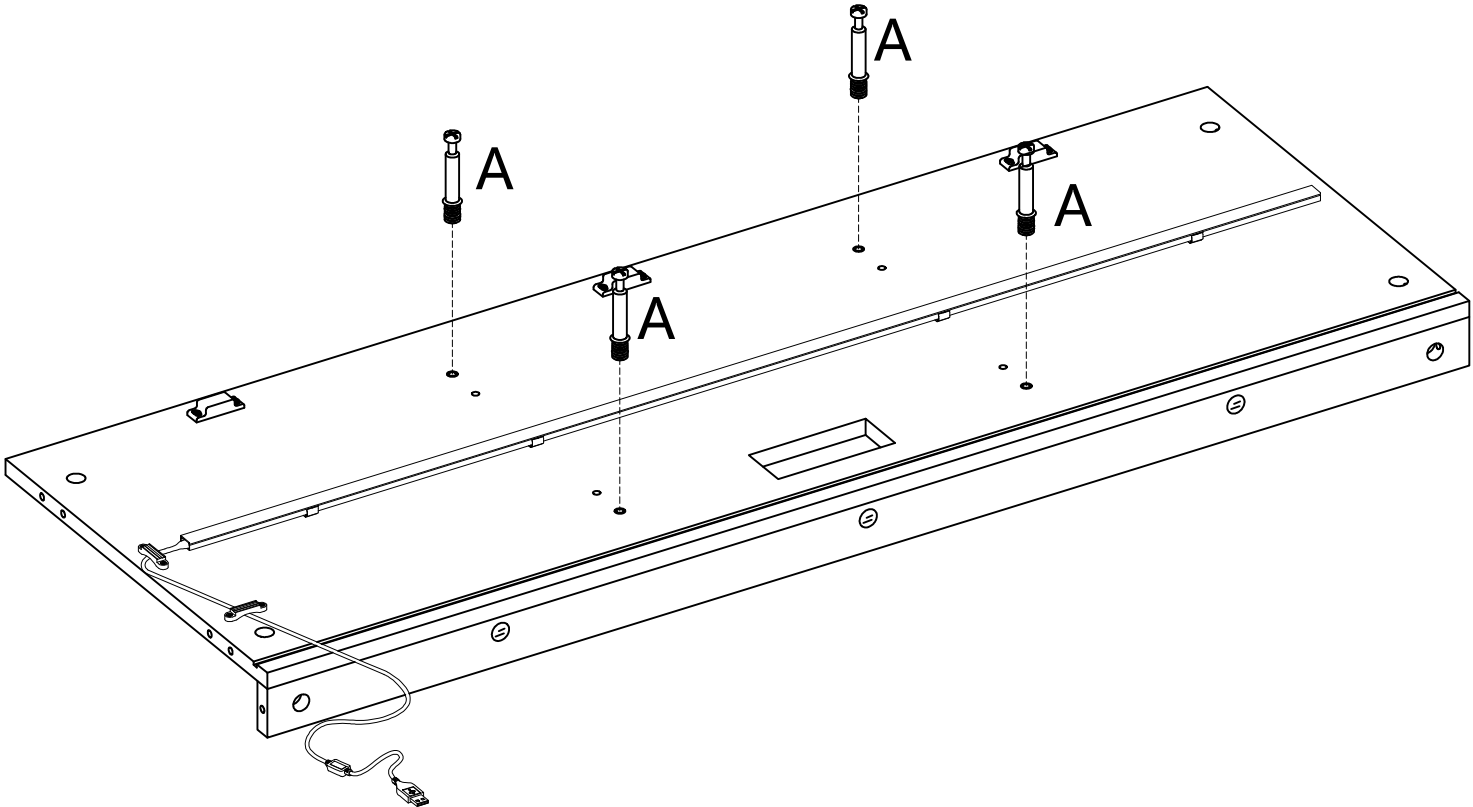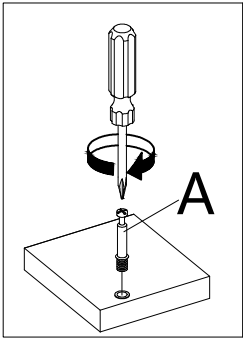A		X4
---	---	----





Step:8

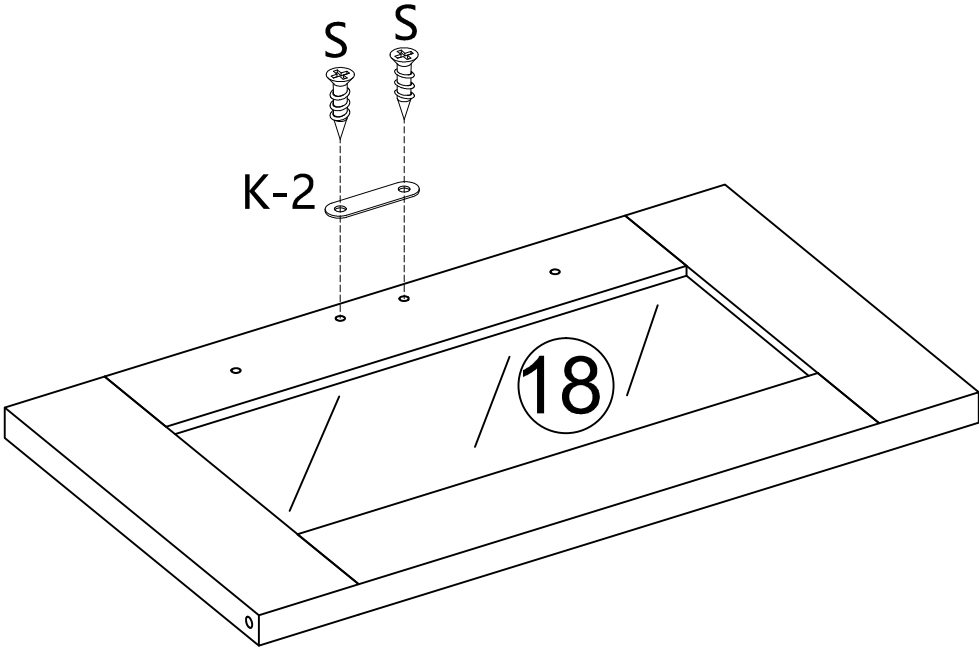
K-2		X3
S	 M3.5*14mm	X6



X 3


Step:9


J		X3
H		X6

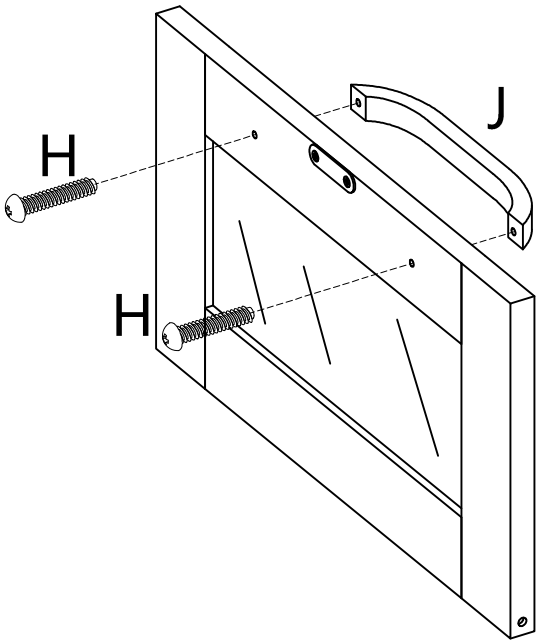

X 3


Step:10

Q		X6
---	---	----

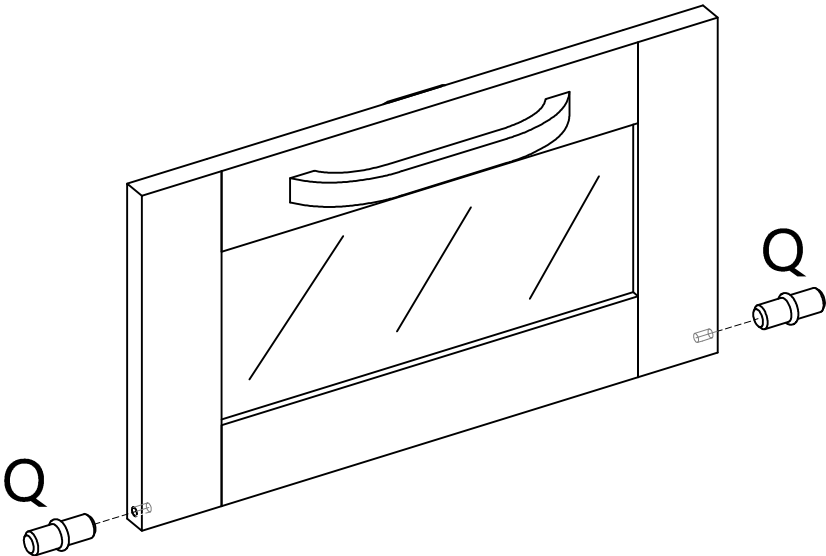


X 3

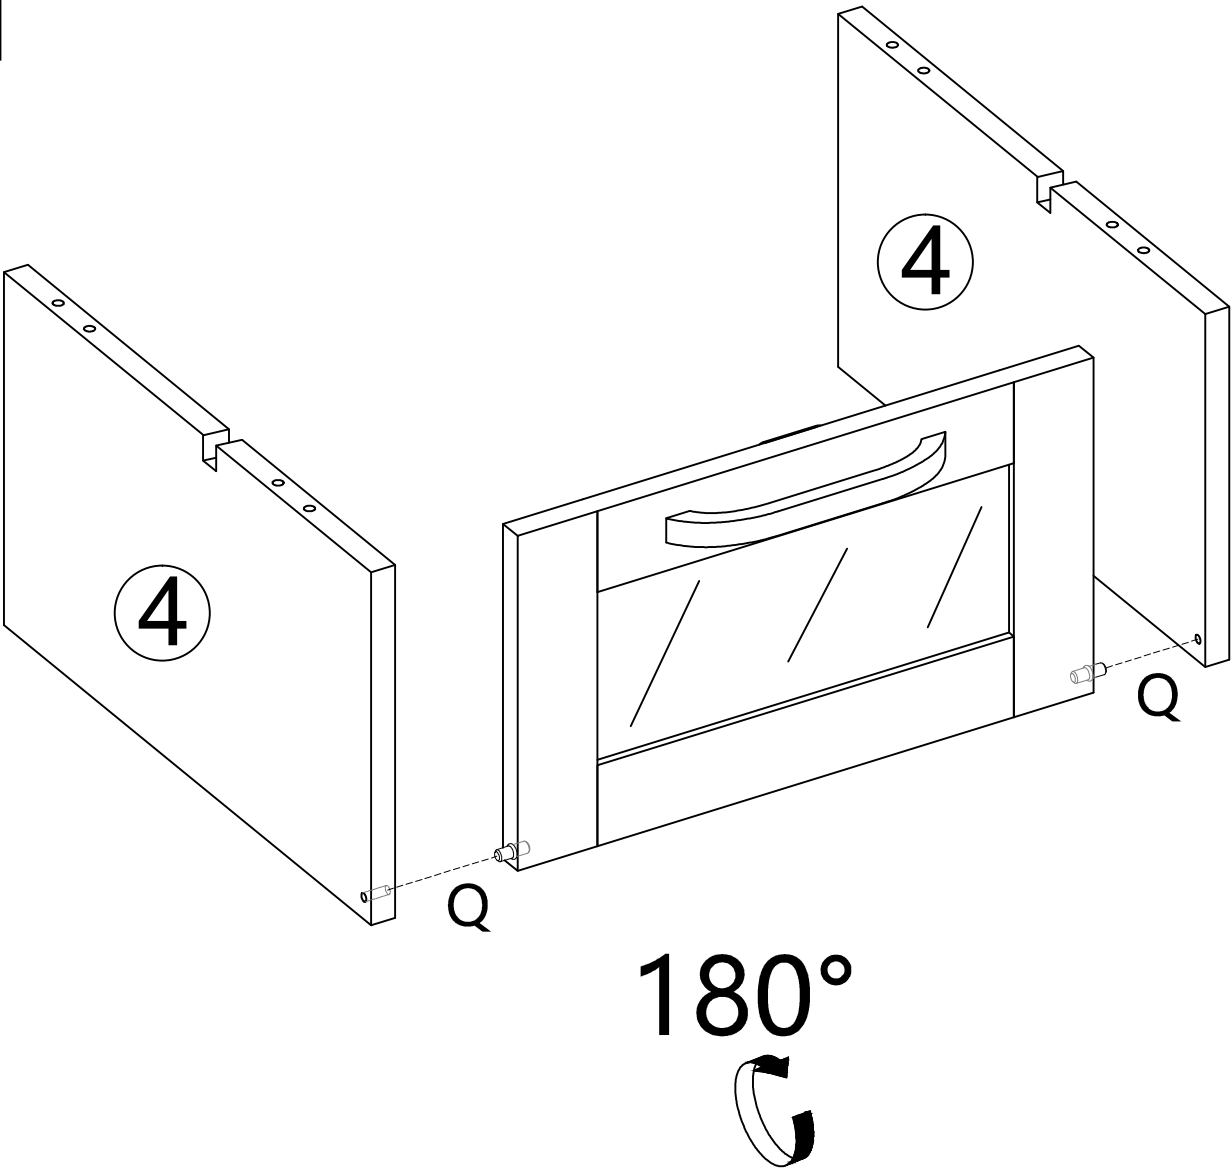


Step:11




Step:12

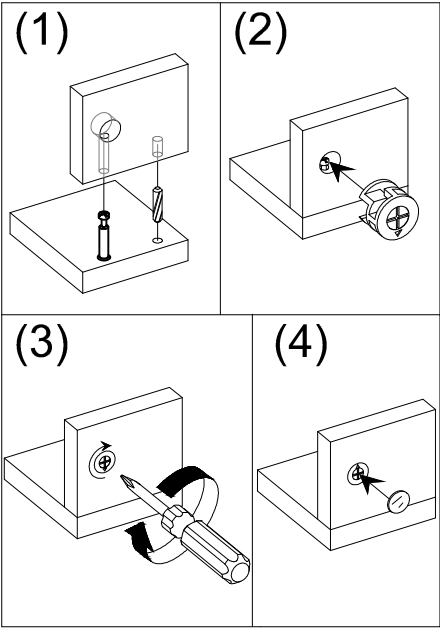
The unsealed side of board 4 faces backward





B	 ø15*12mm	X4
E	 ø6*30mm	X4
V		X4

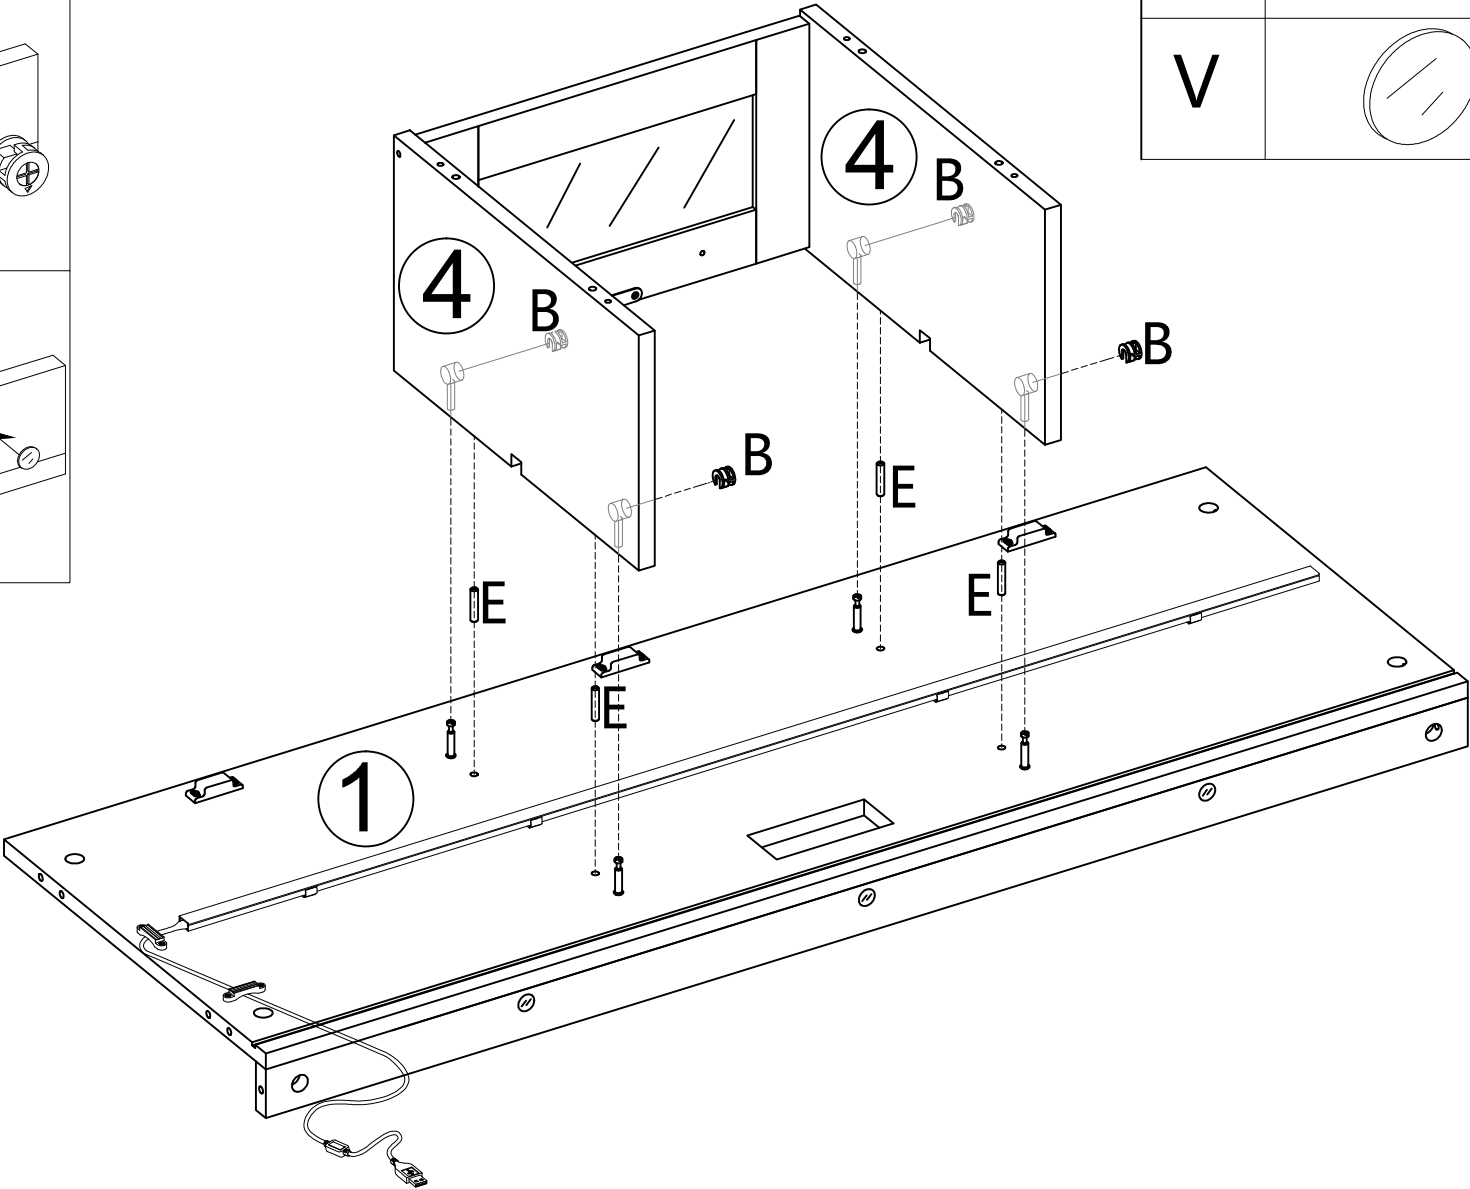


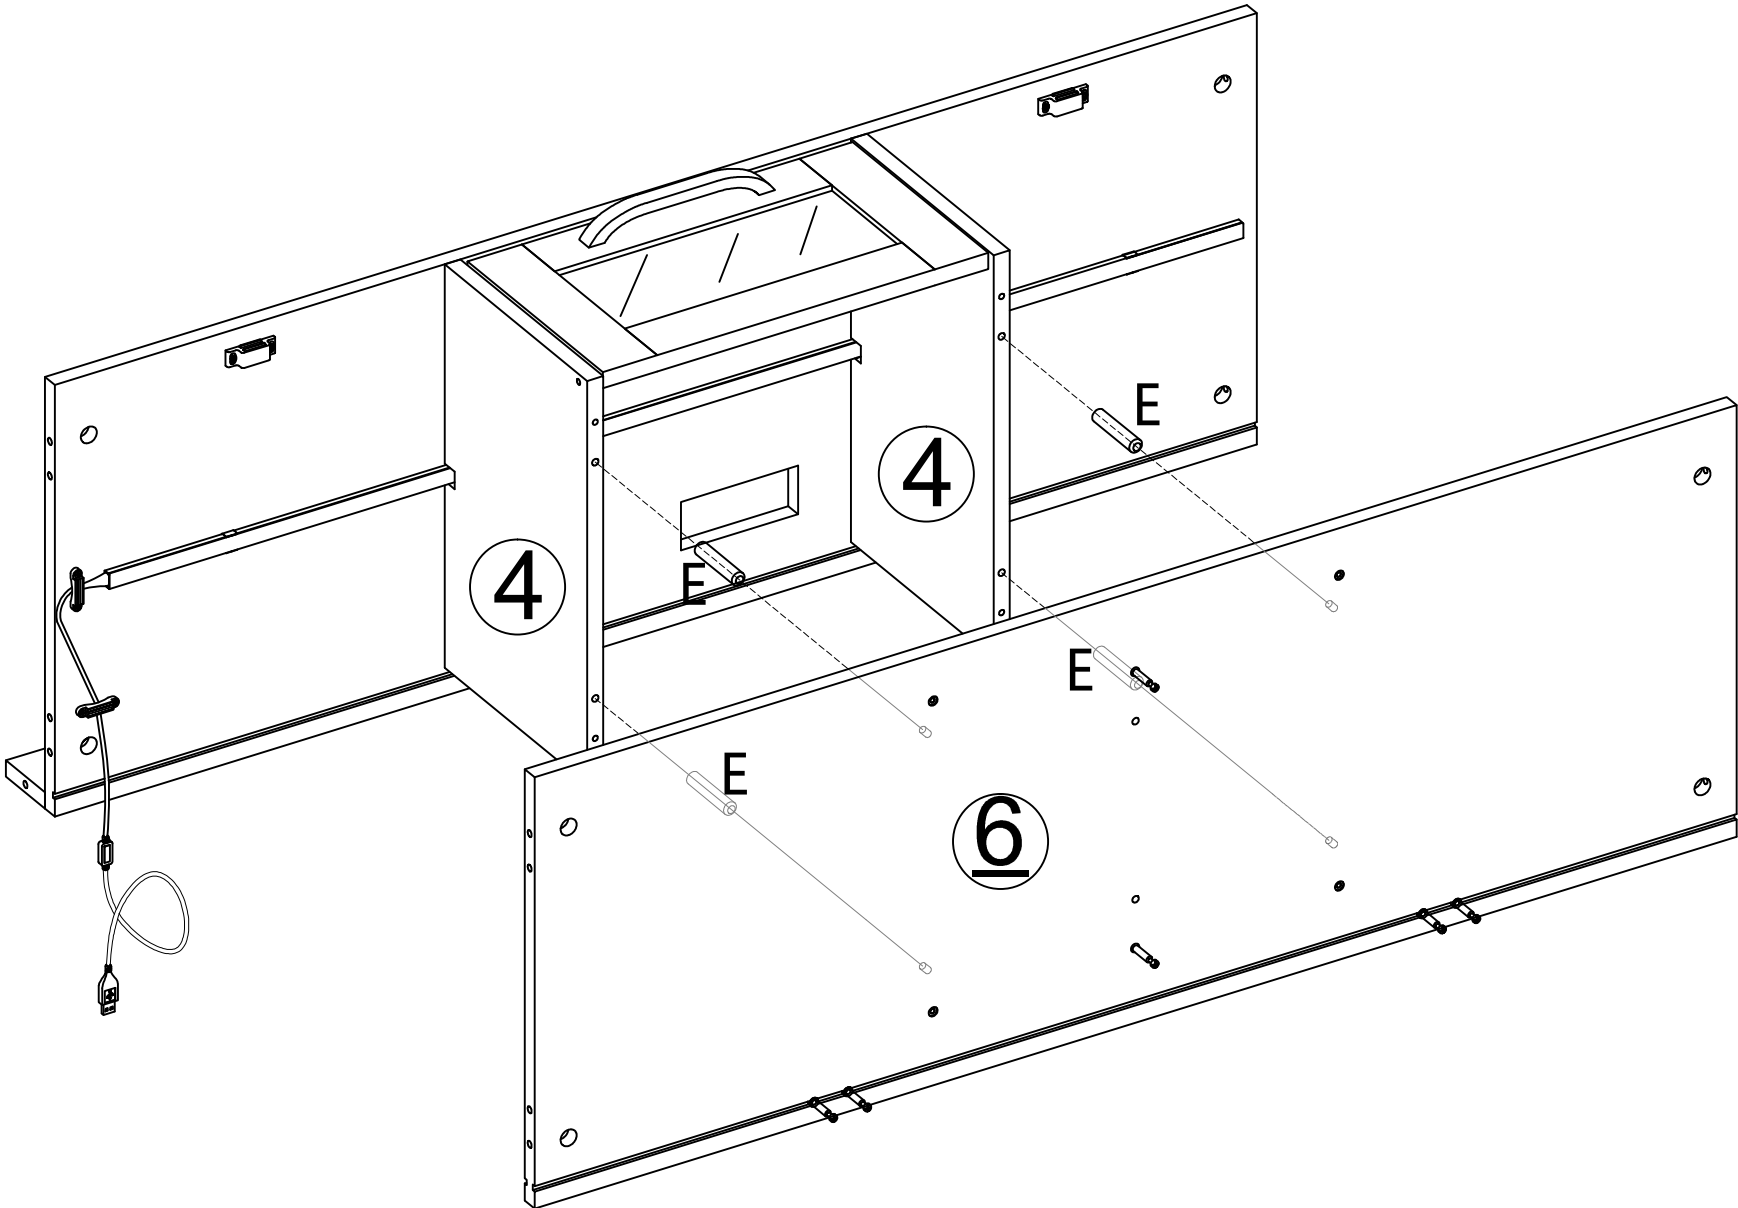
Step:13

A		X6
---	---	----

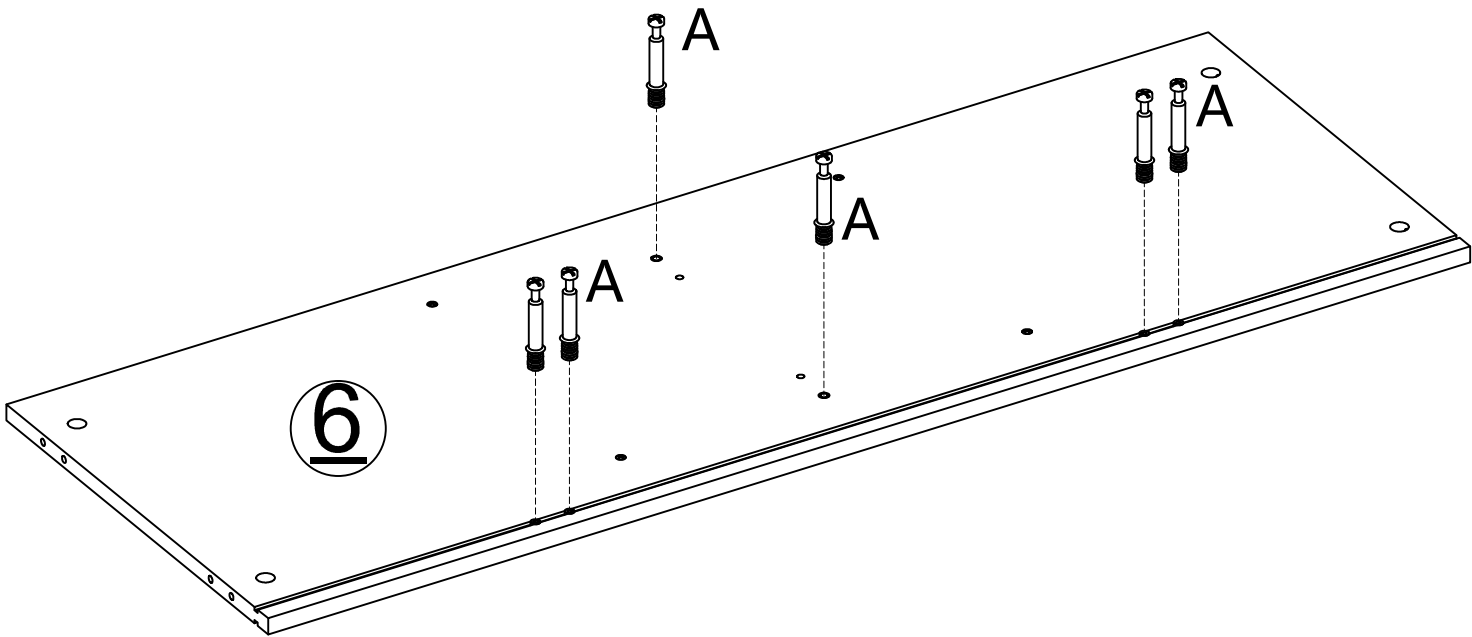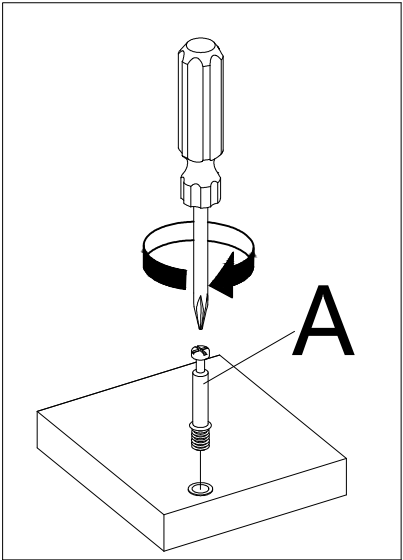





Step:14

E	 ø6*30mm	X4
---	--	----





Step:15


N		X4
R		X1

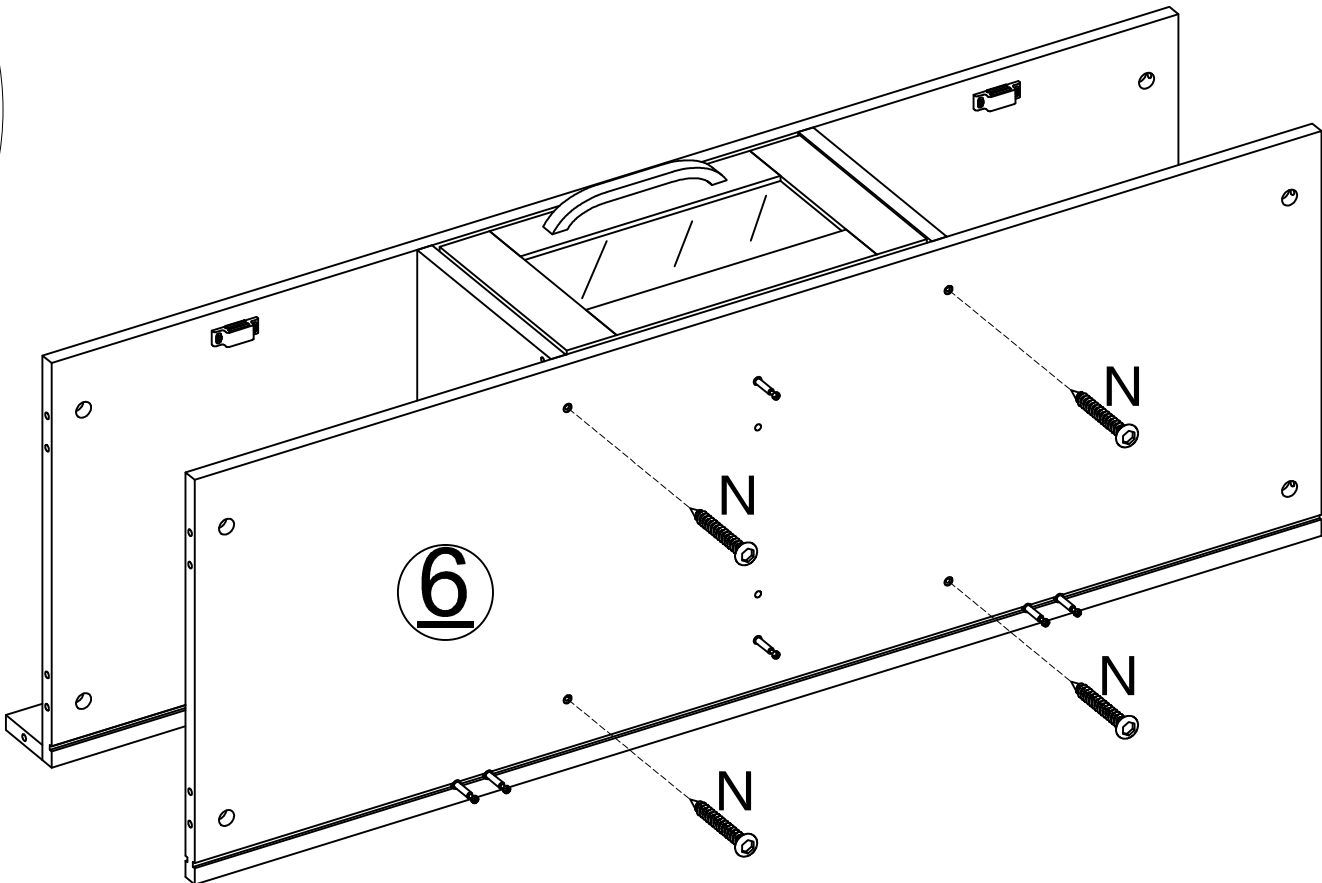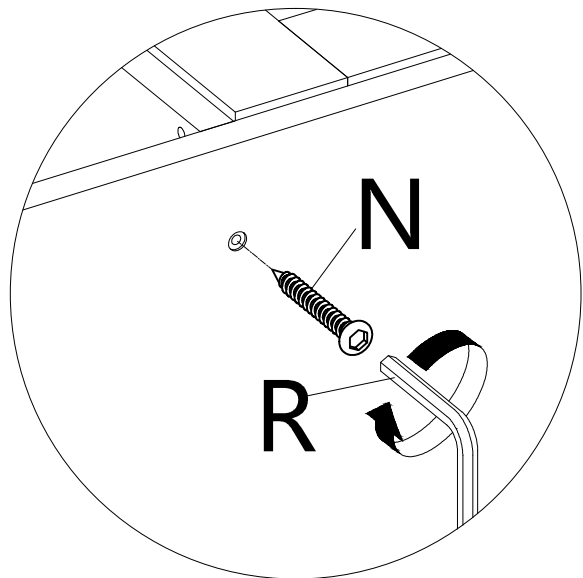


Step:16

F	 M3*12mm	X12
D	 CR CL	X3


Punch the position
of the hole 1

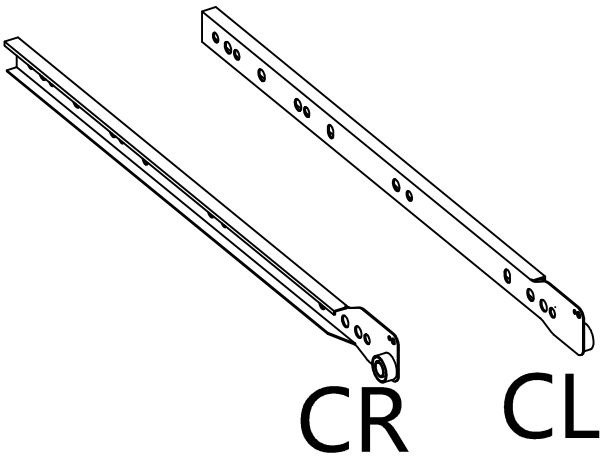

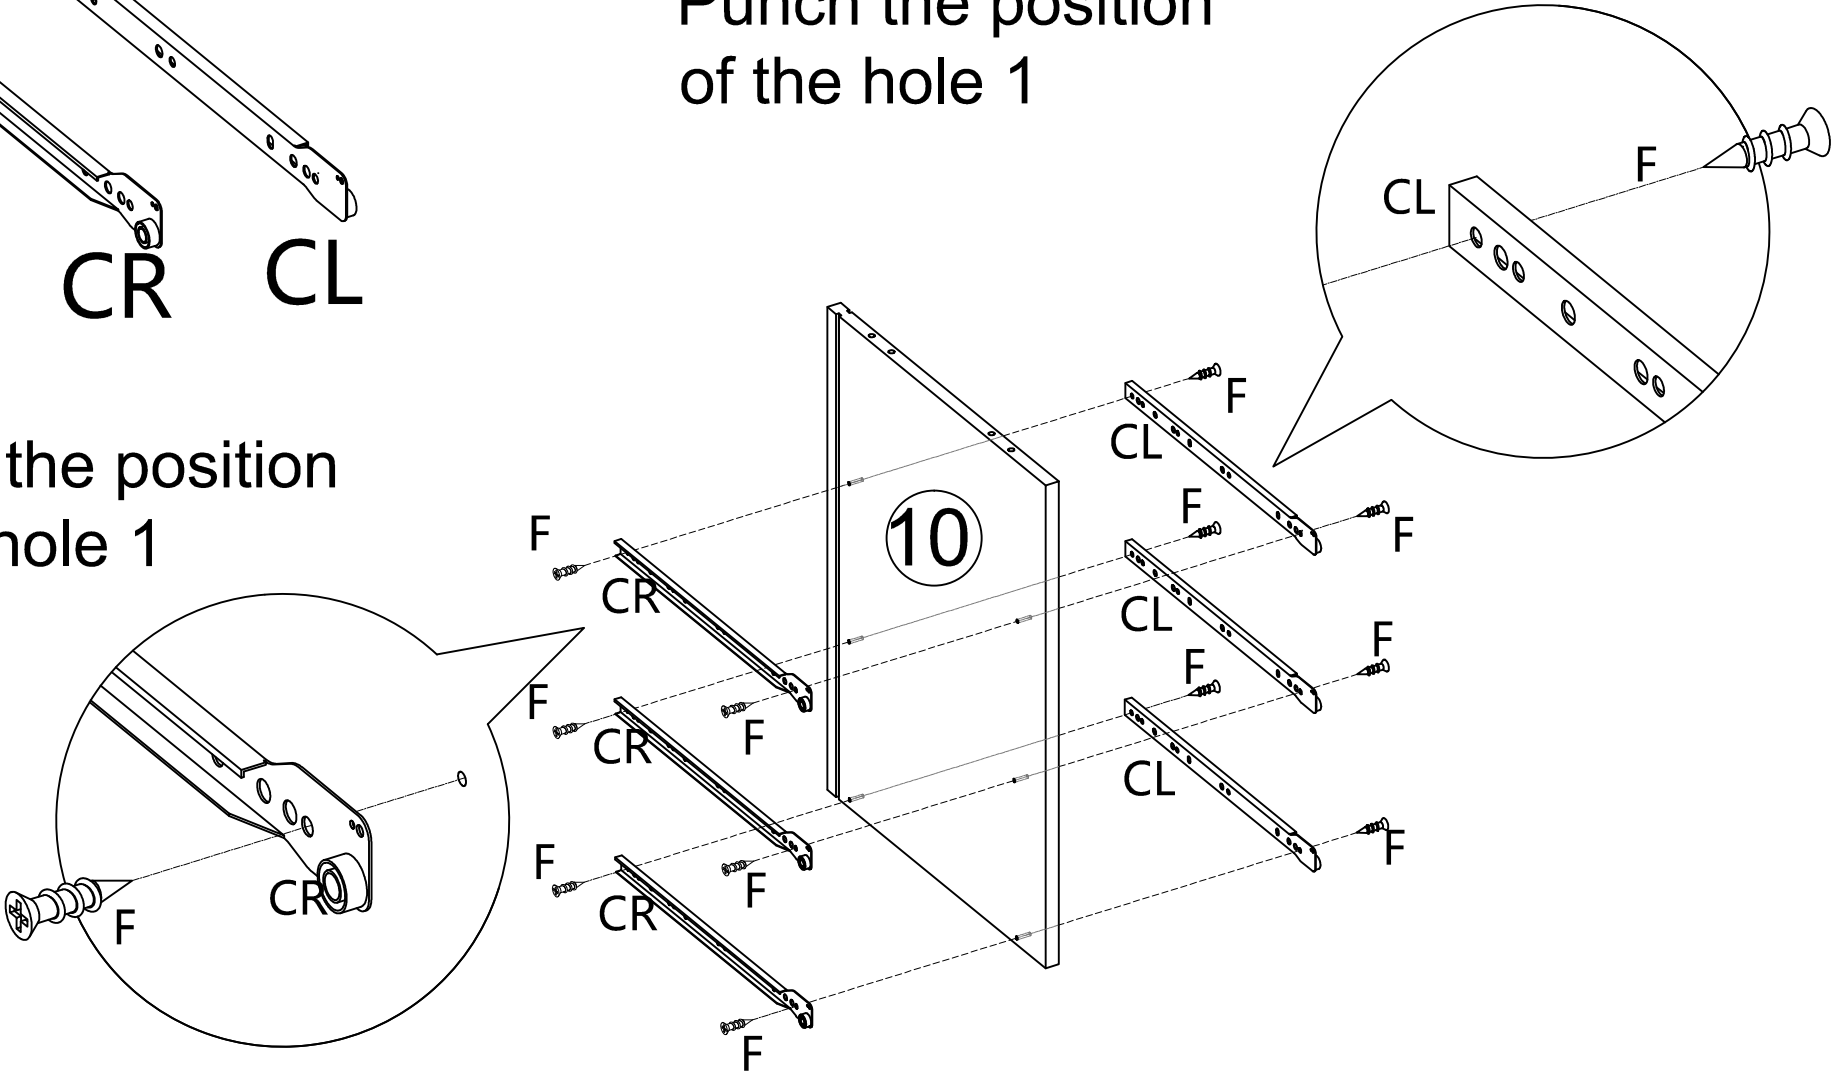



Punch the position
of the hole 1

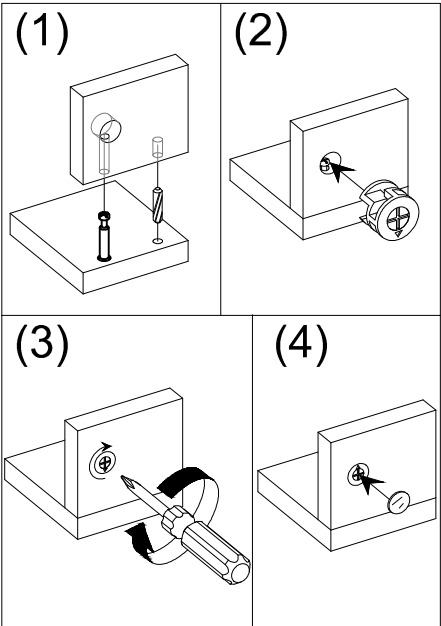


Step:17






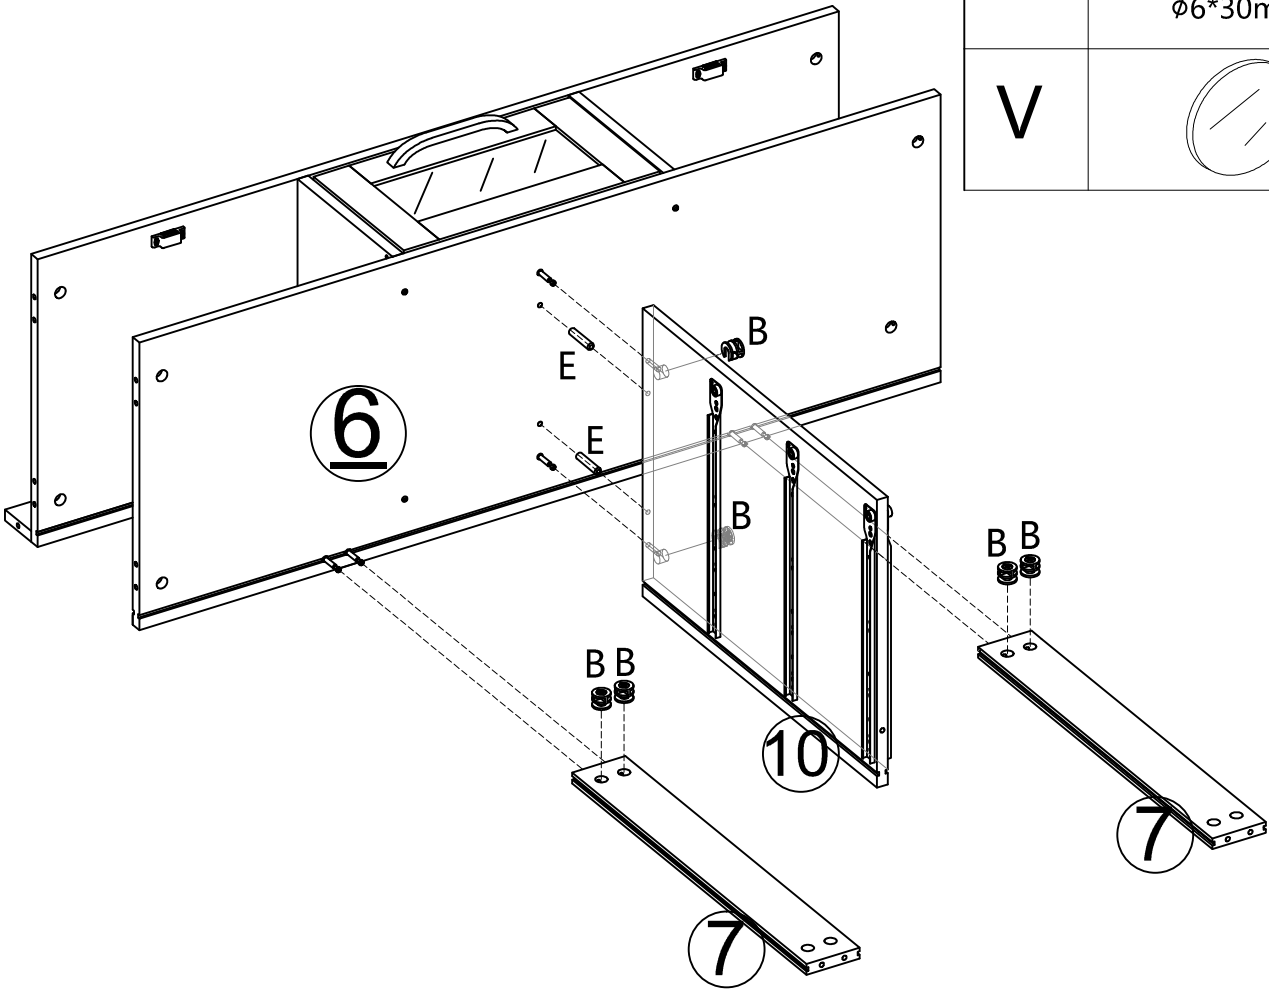B	 φ15*12mm	X6
E	 φ6*30mm	X2
V		X6

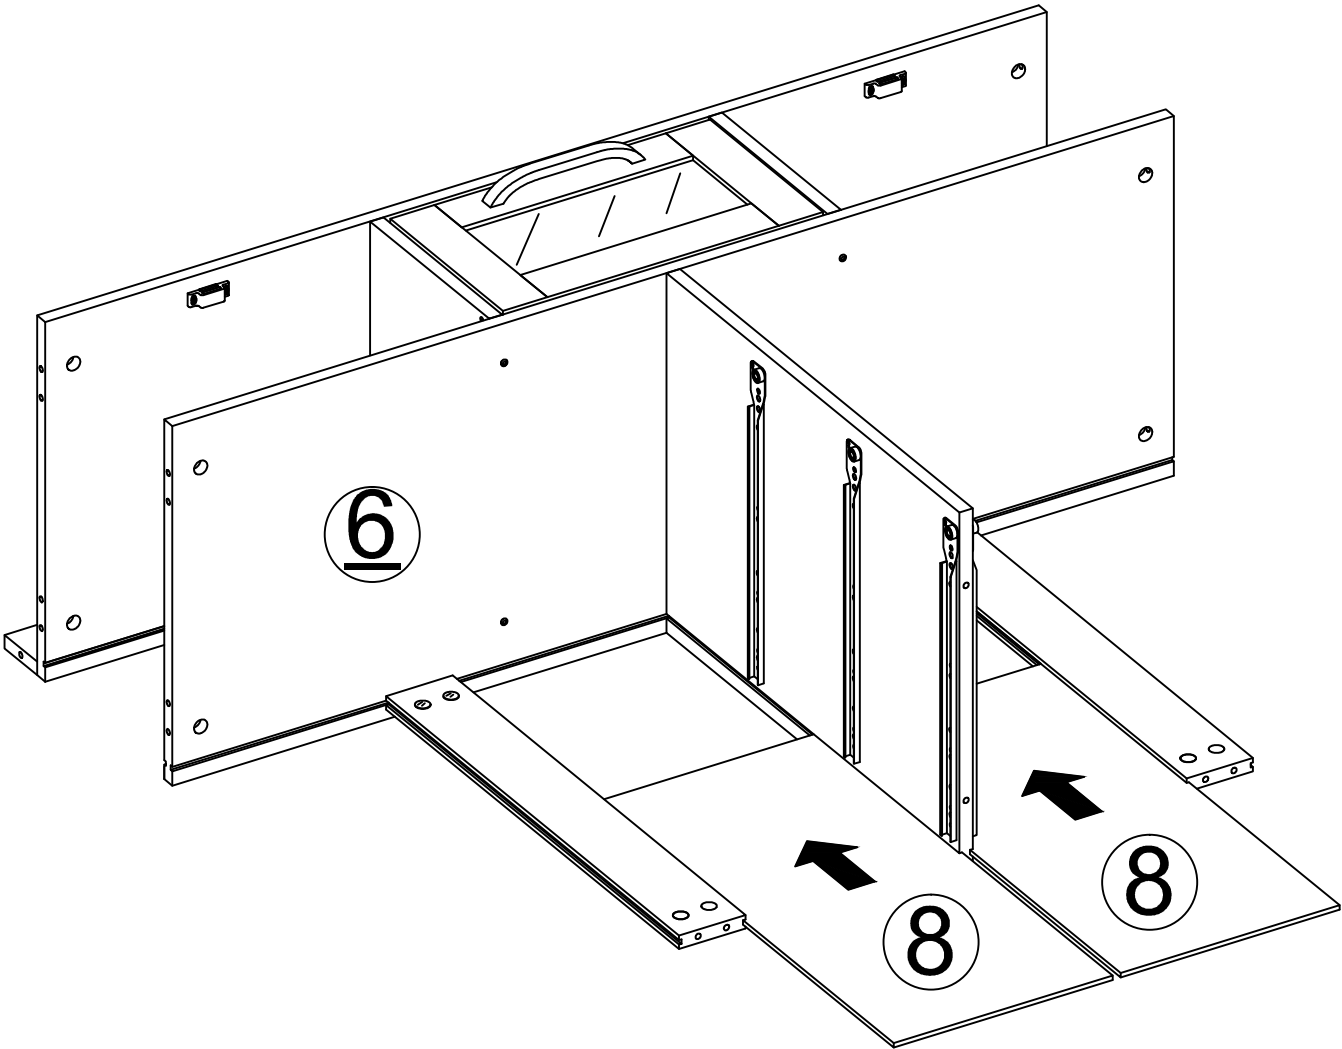


Step:18








Step:19

E	 ø6*30mm	X2
N		X2
R		X1

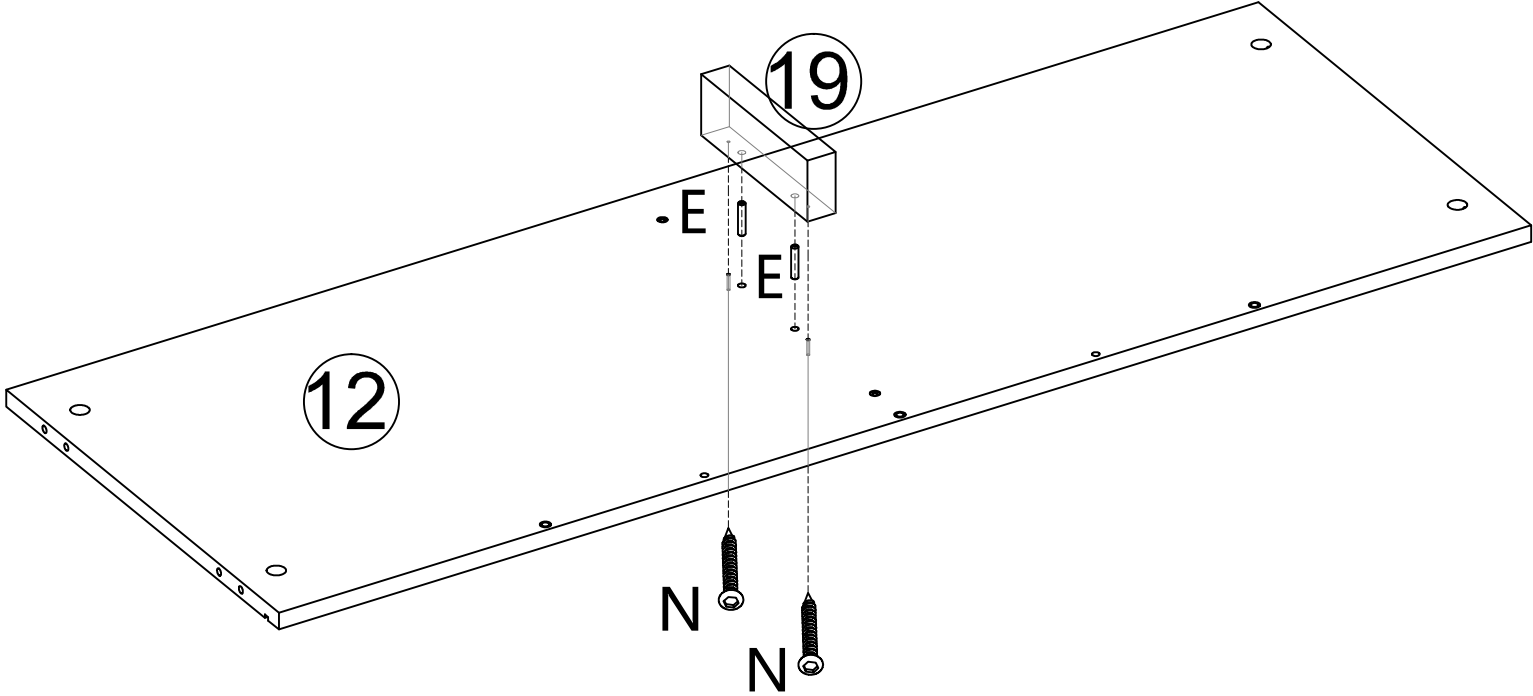





Step:20

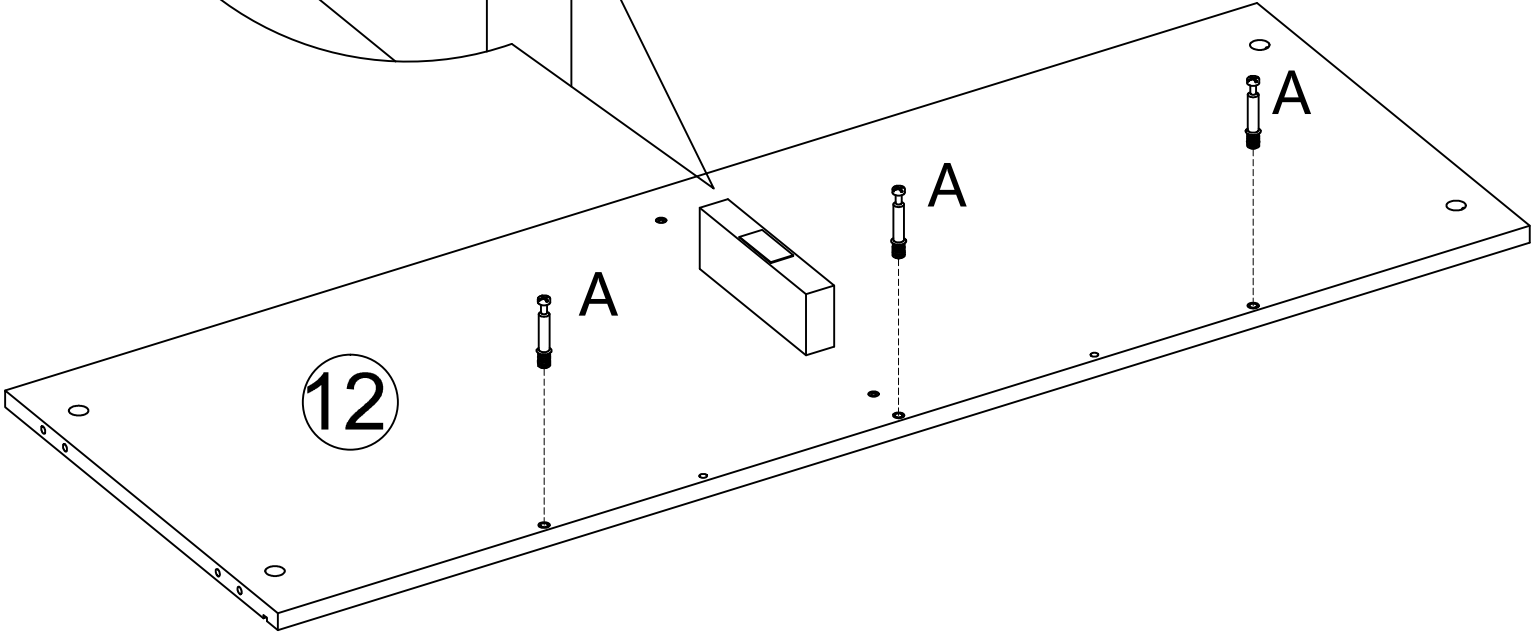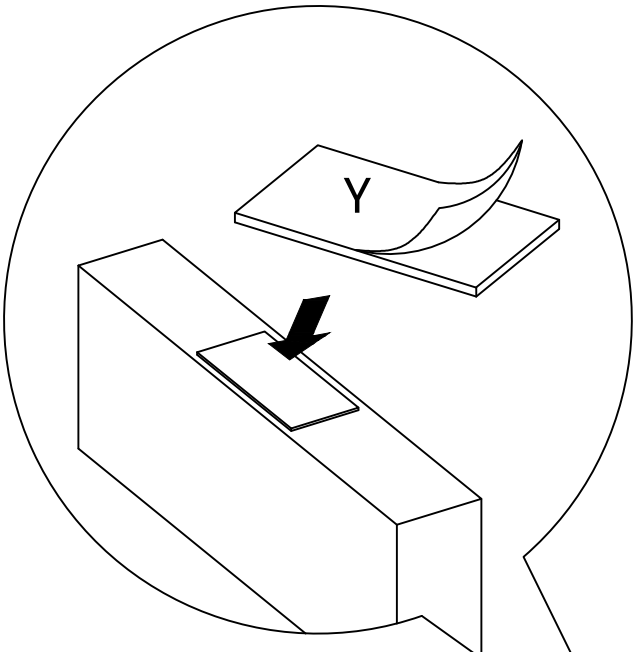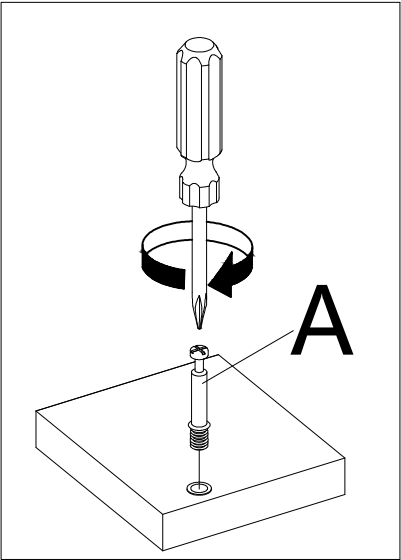
A		X3
Y		X1

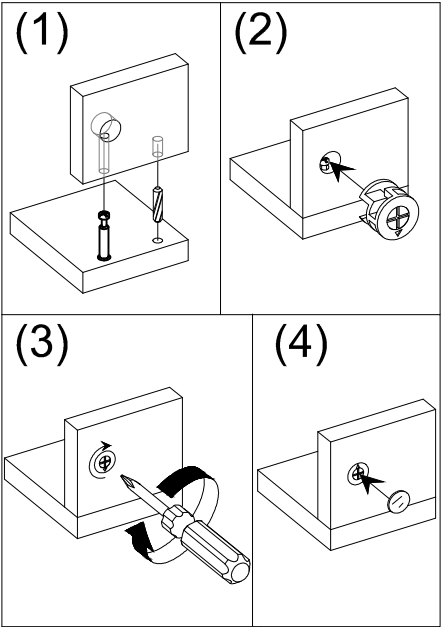


Step:21





B	 φ15*12mm	X3
E	 φ6*30mm	X2
V		X3

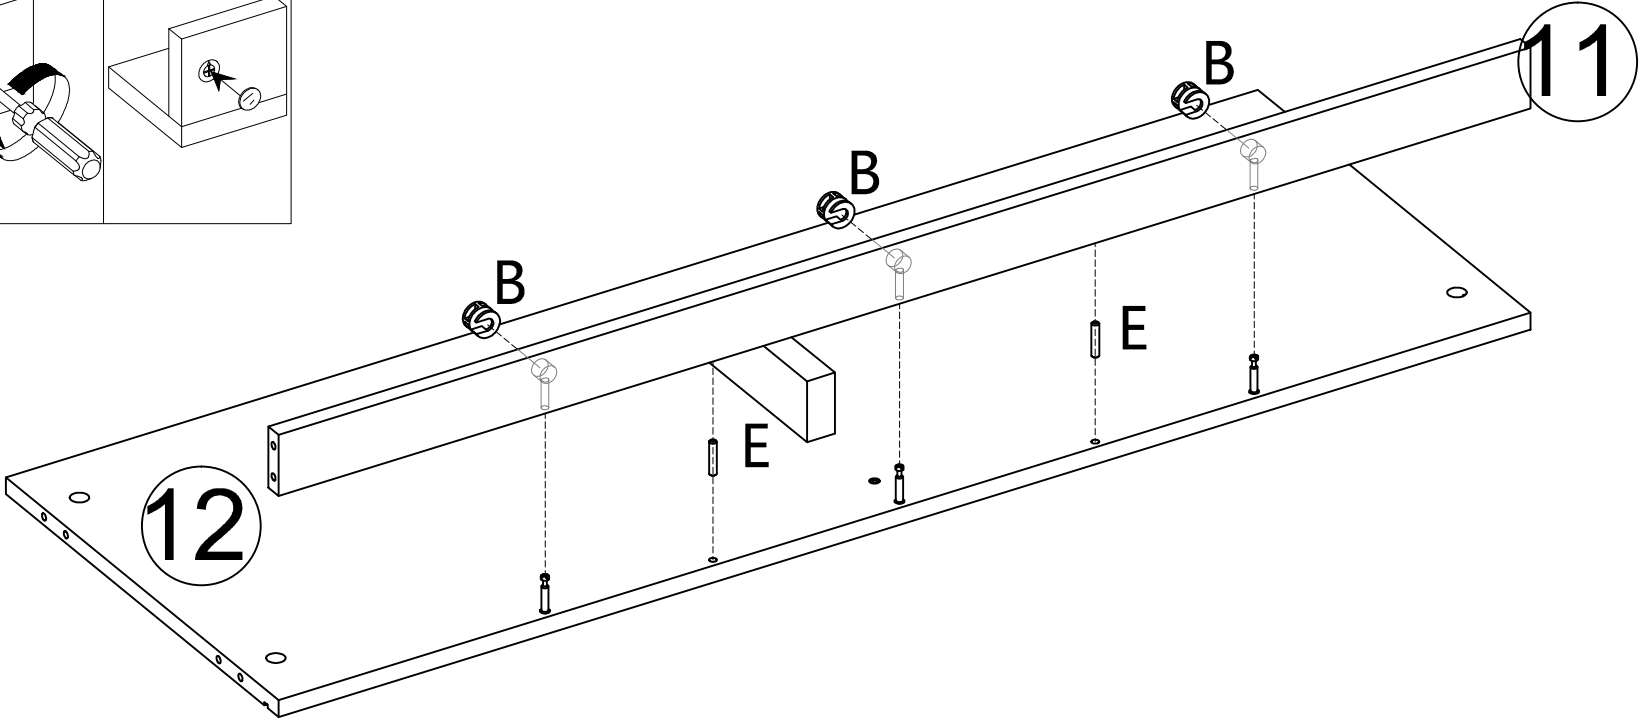



Step:22

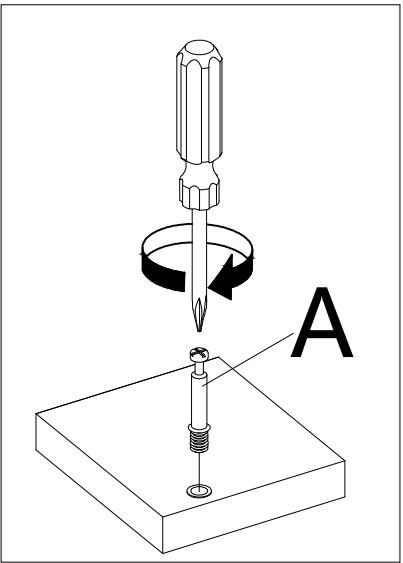




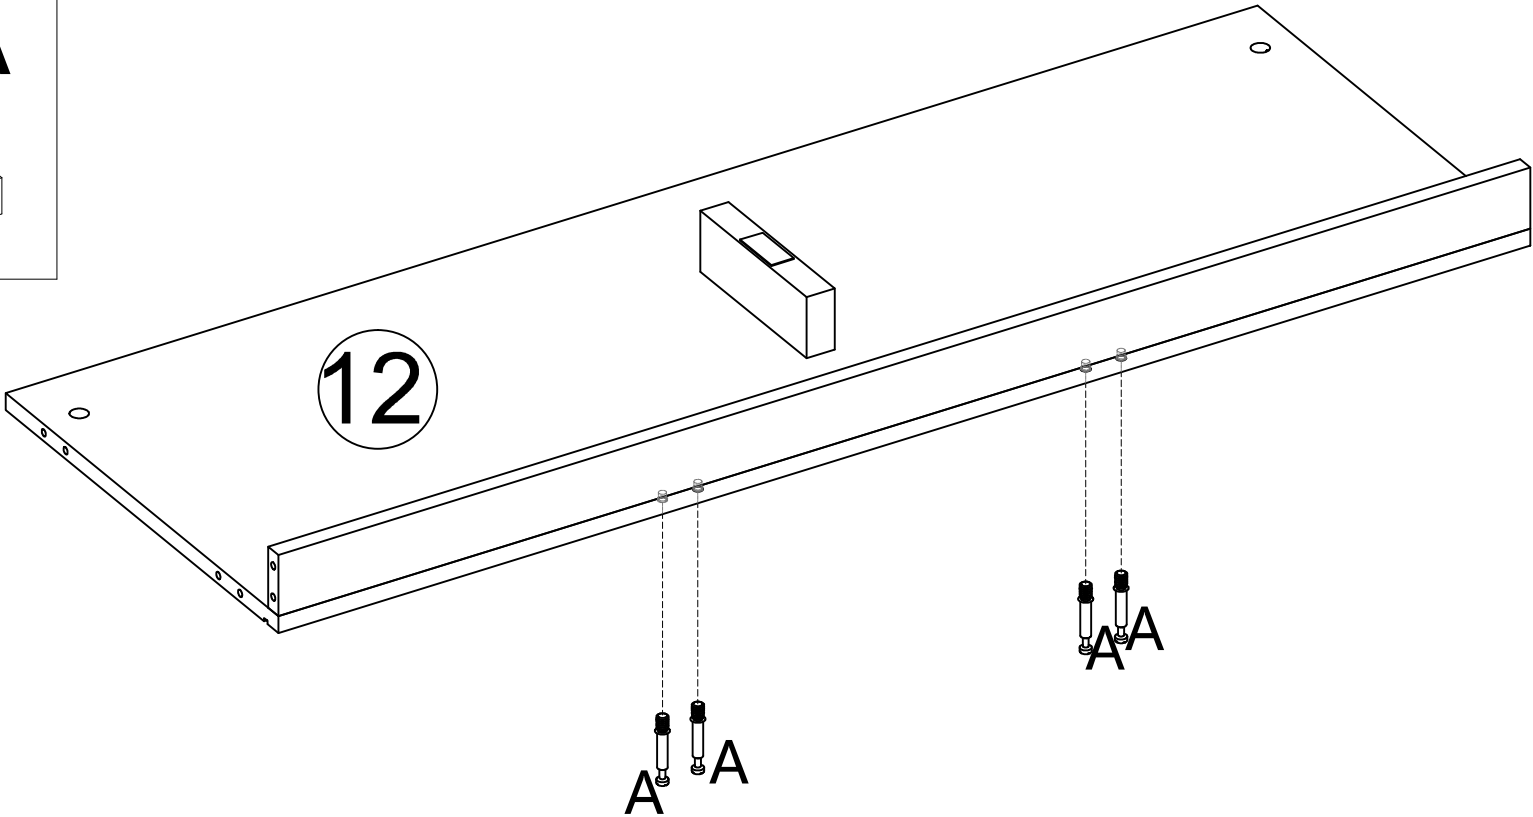A		X4
---	---	----



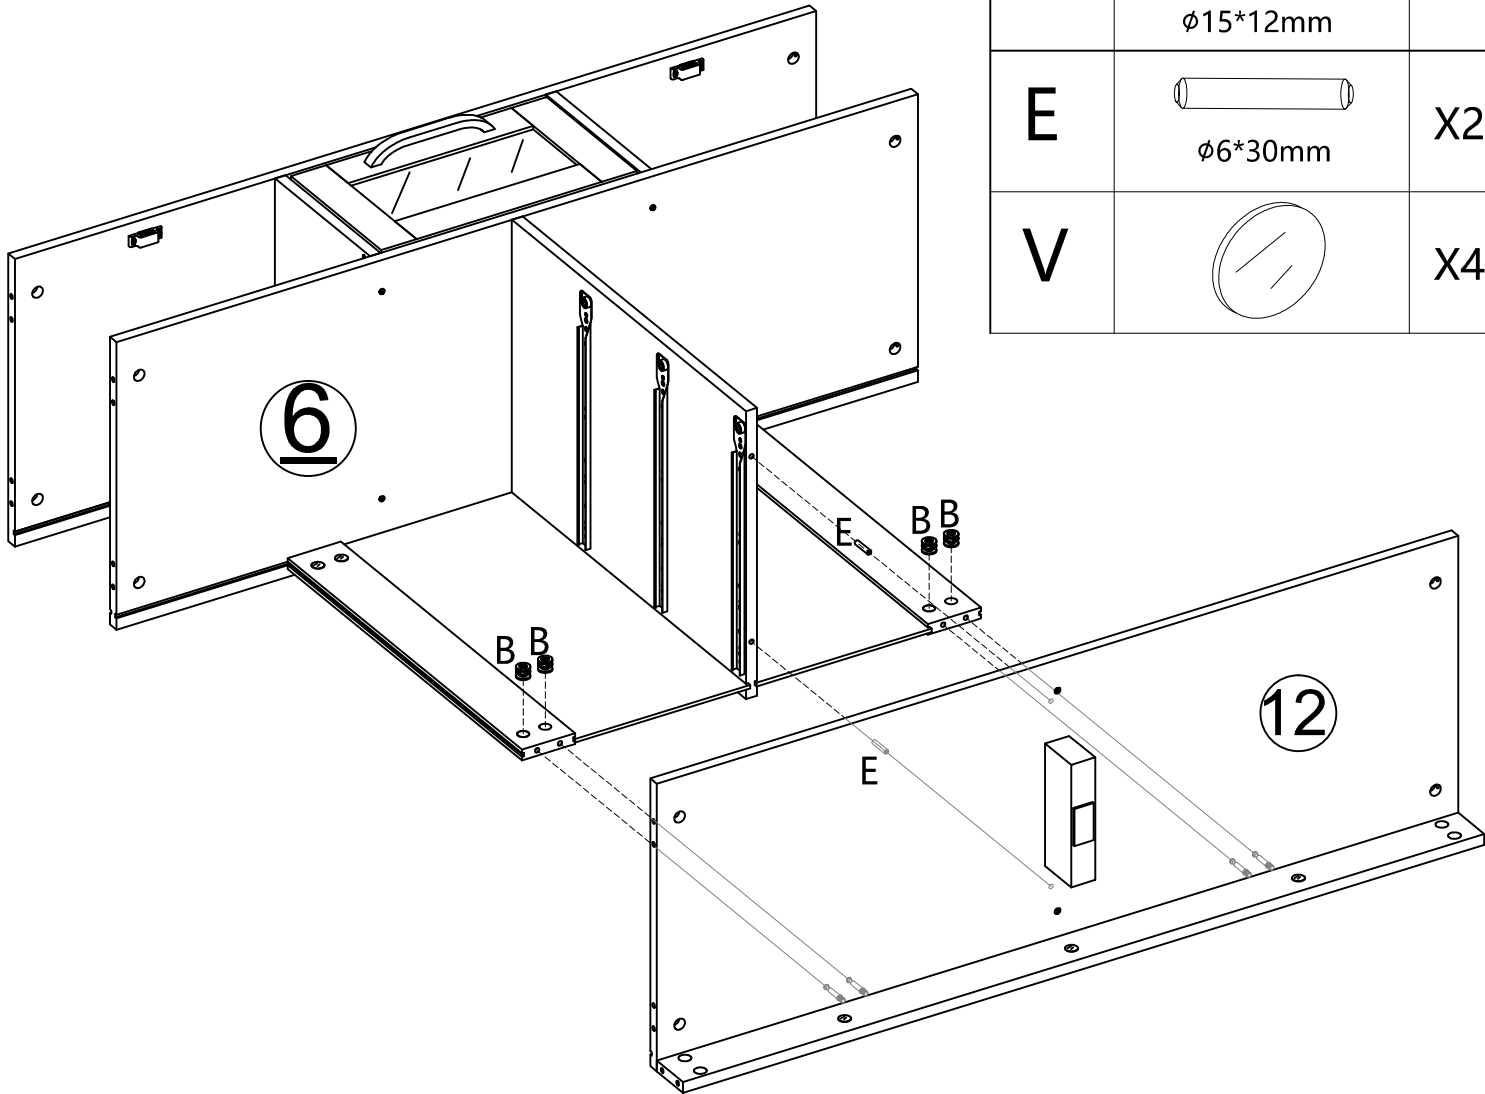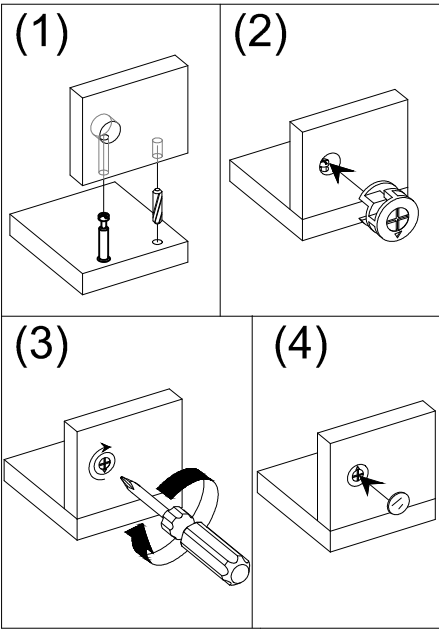



Step:23




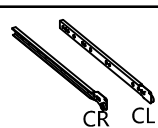
B	 ø15*12mm	X4
E	 ø6*30mm	X2
V		X4

Step:24


N		X2
R		X1

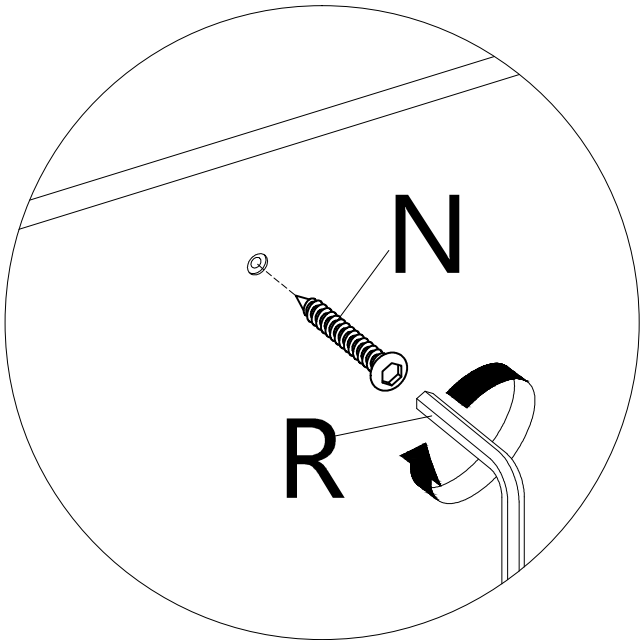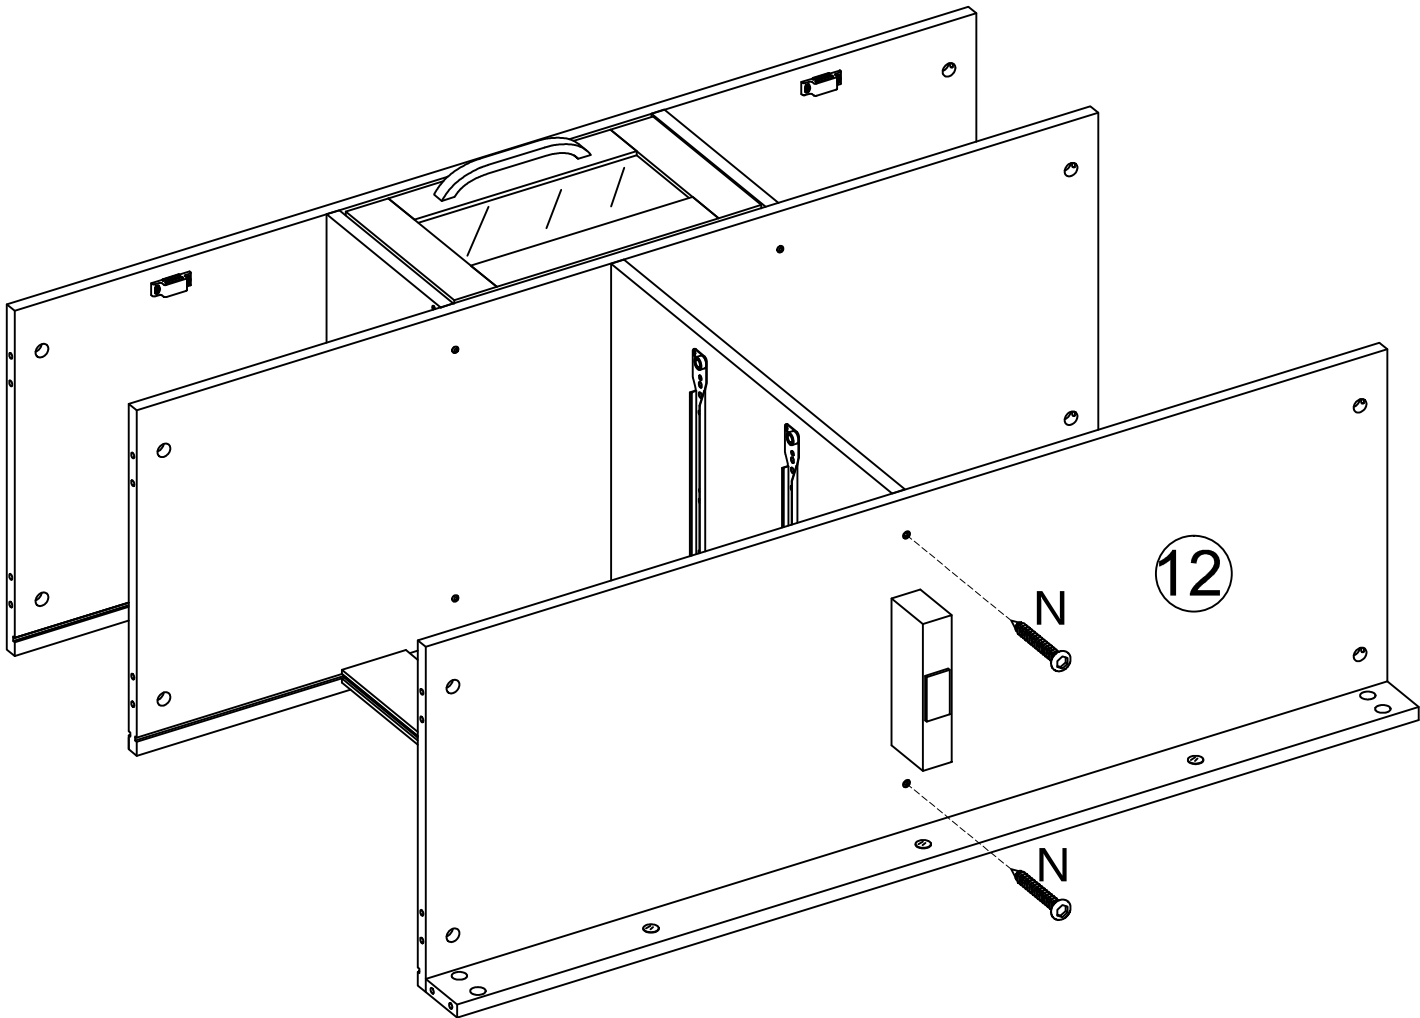


Step:25

F	 M3*12mm	X12
D	 CR CL	X3


Punch the position
of the hole 1

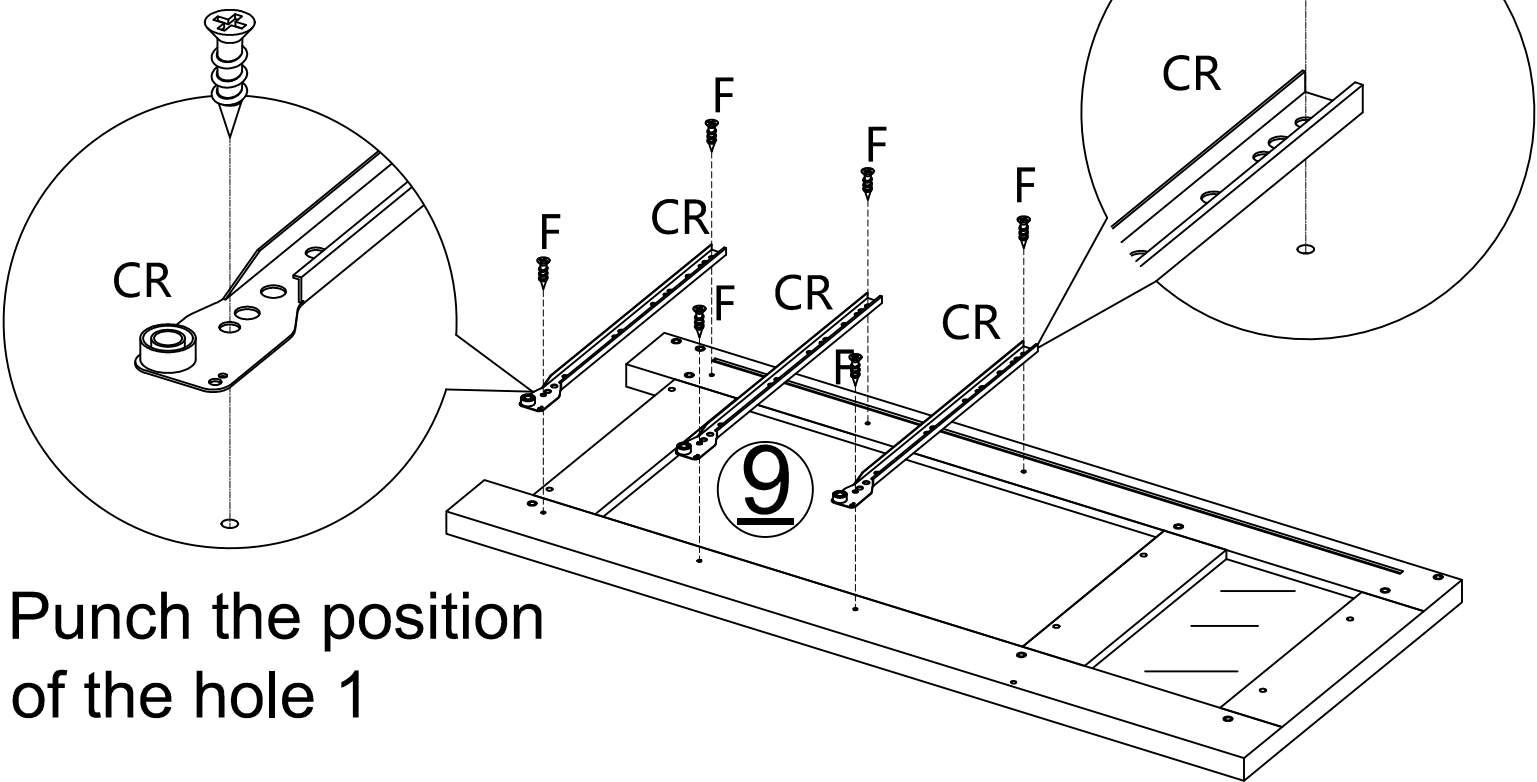



Punch the position
of the hole 1





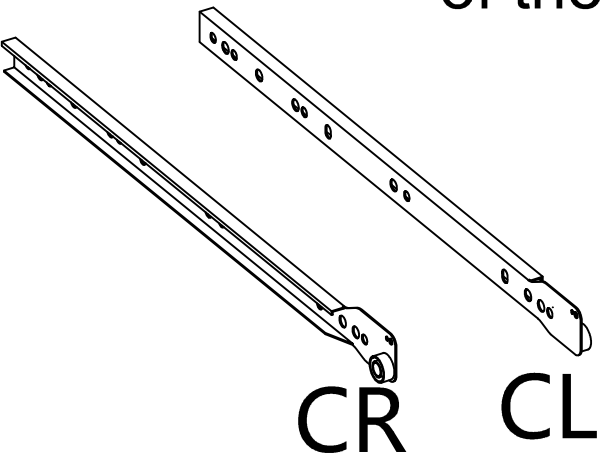


Punch the position
of the hole 1

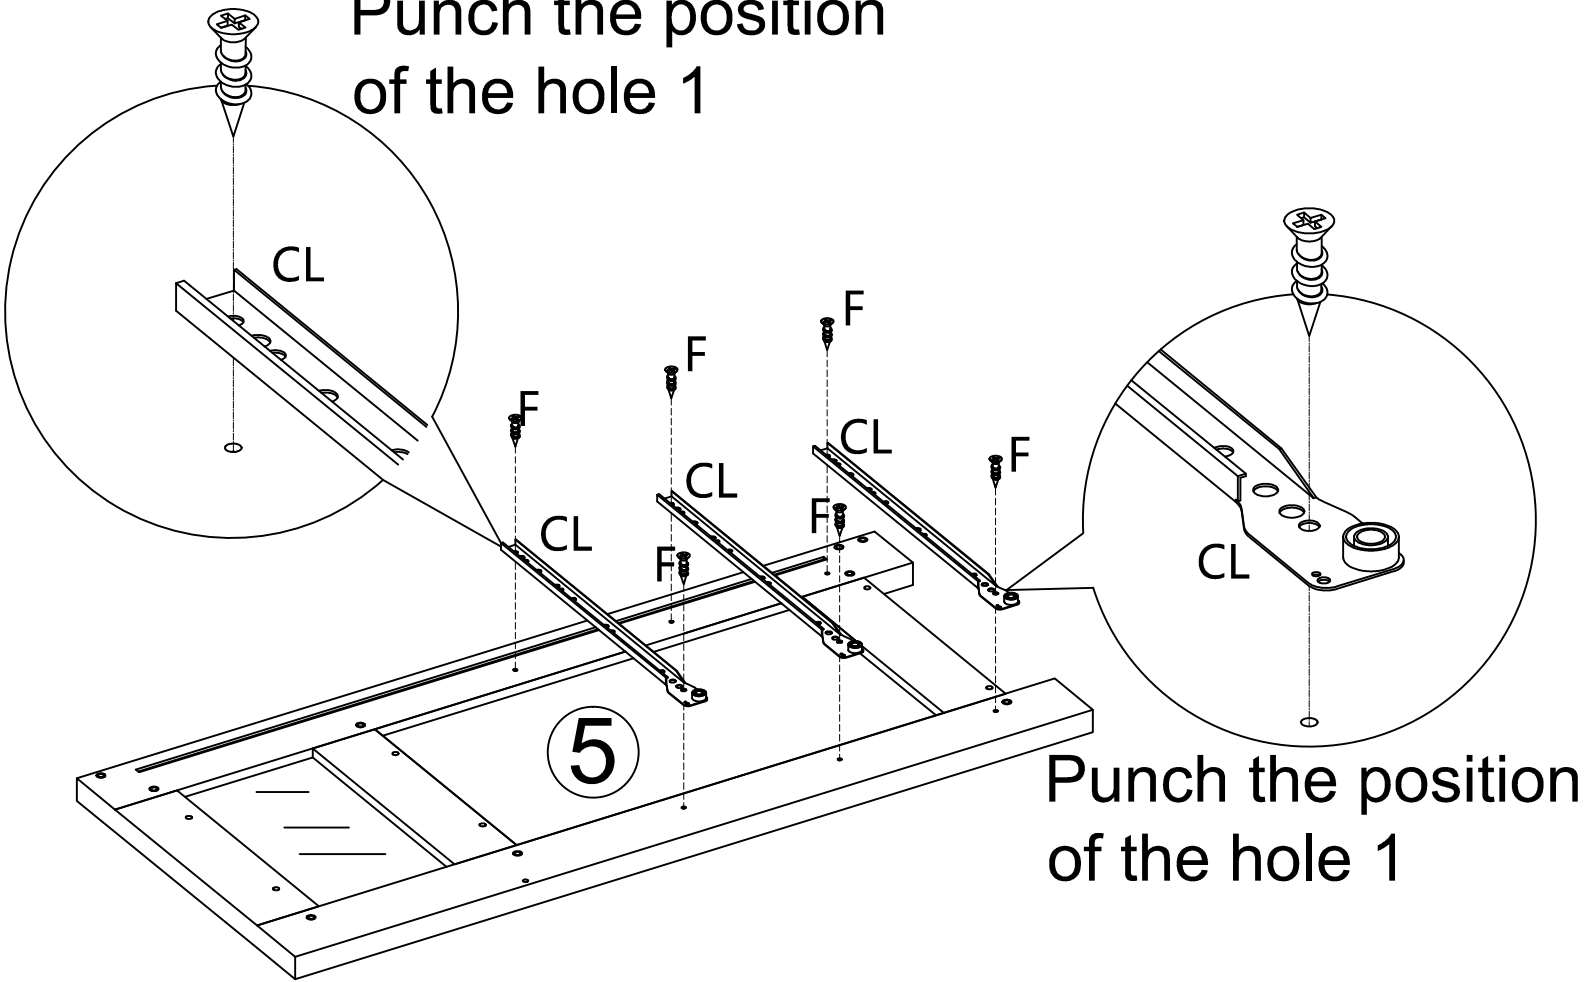




Step:26

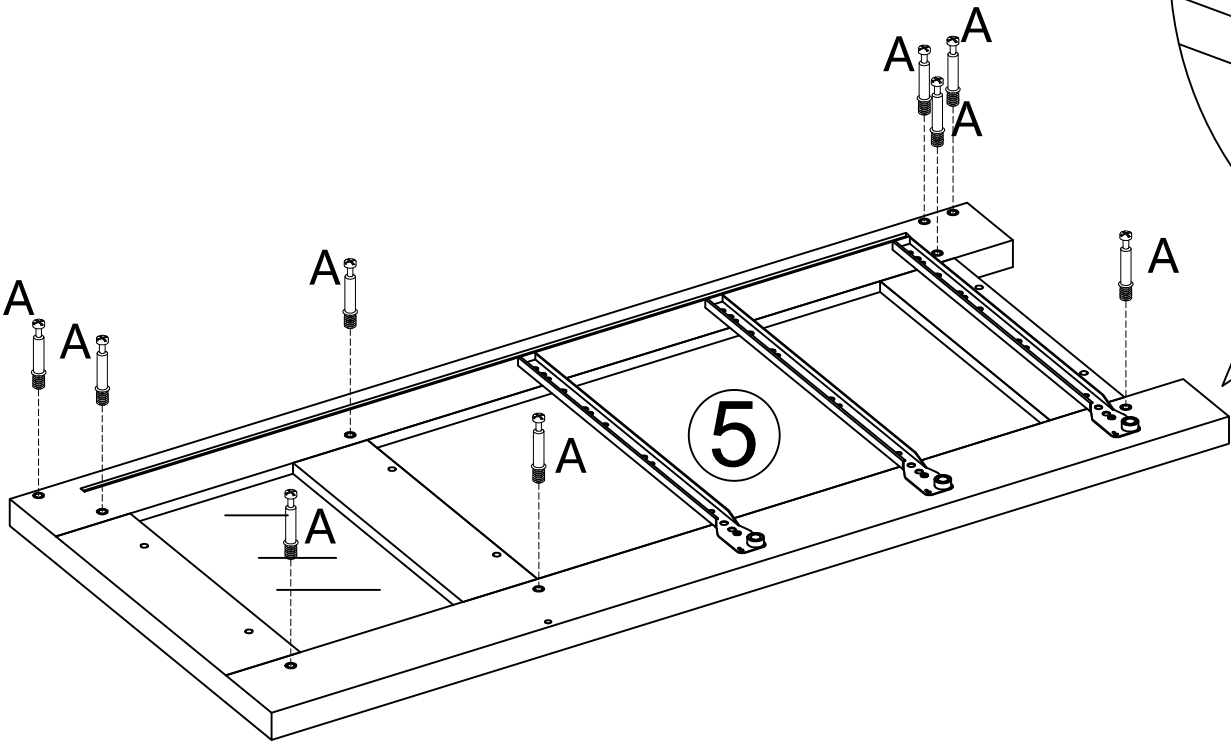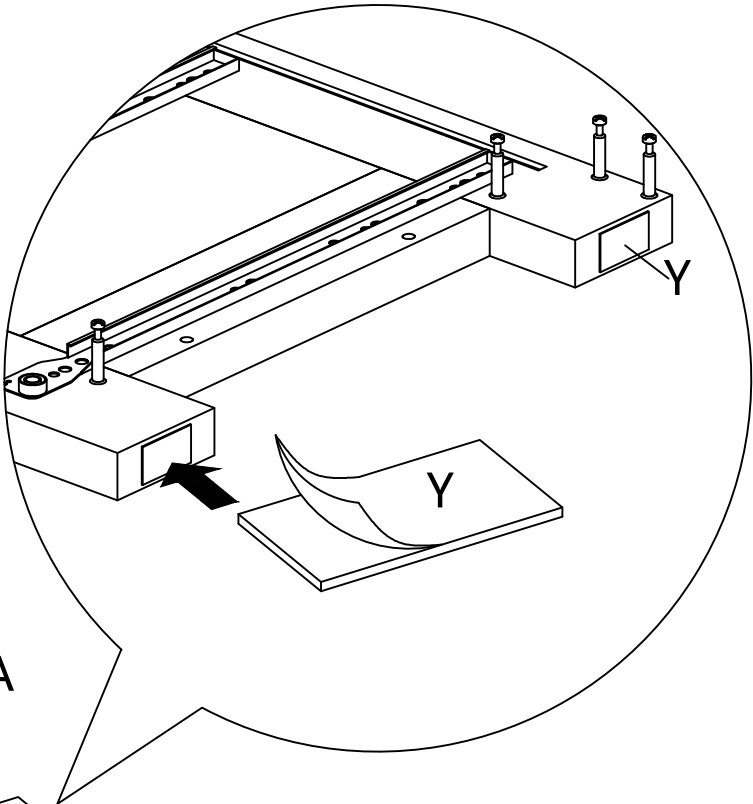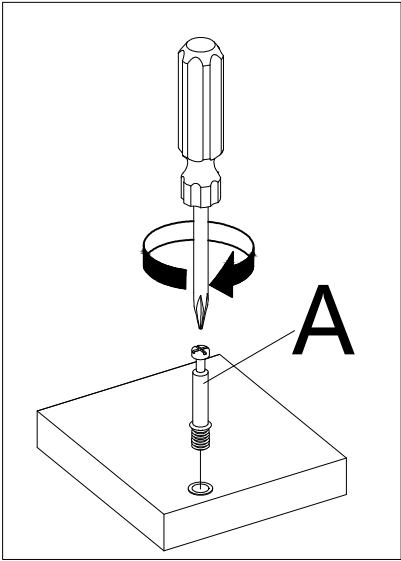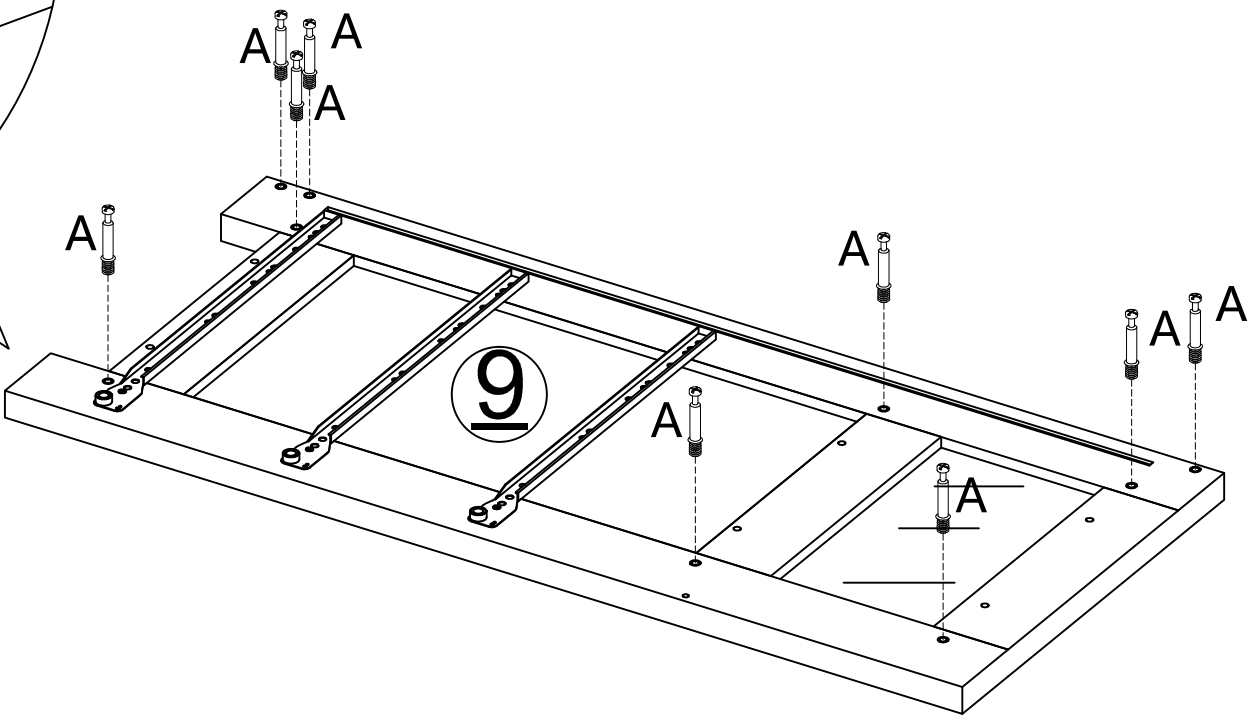
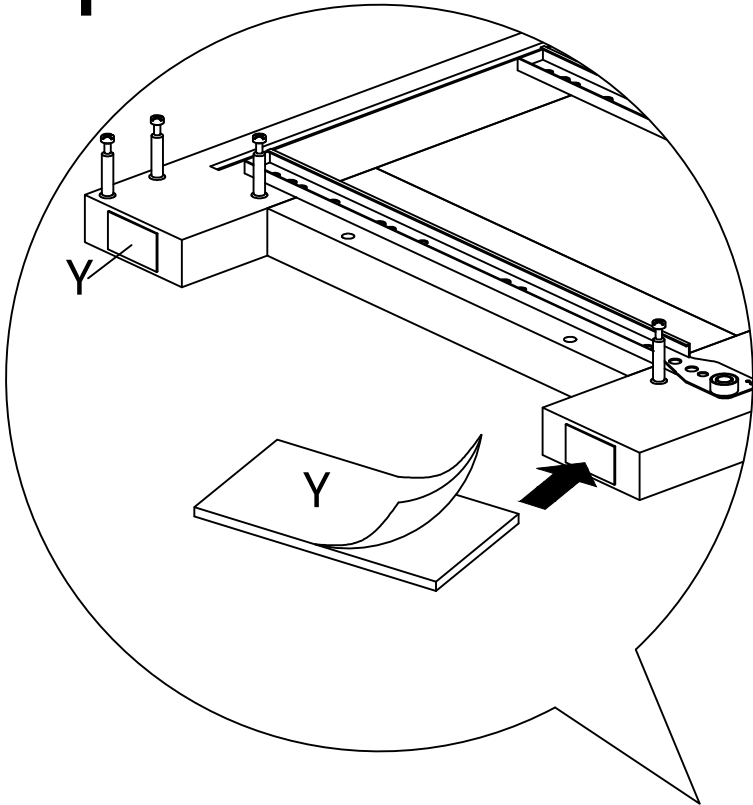
A		X18
Y		X4




Step:27

Install the number 8 back plate first


B	 ø15*12mm	X9
E	 ø6*30mm	X6
V		X9

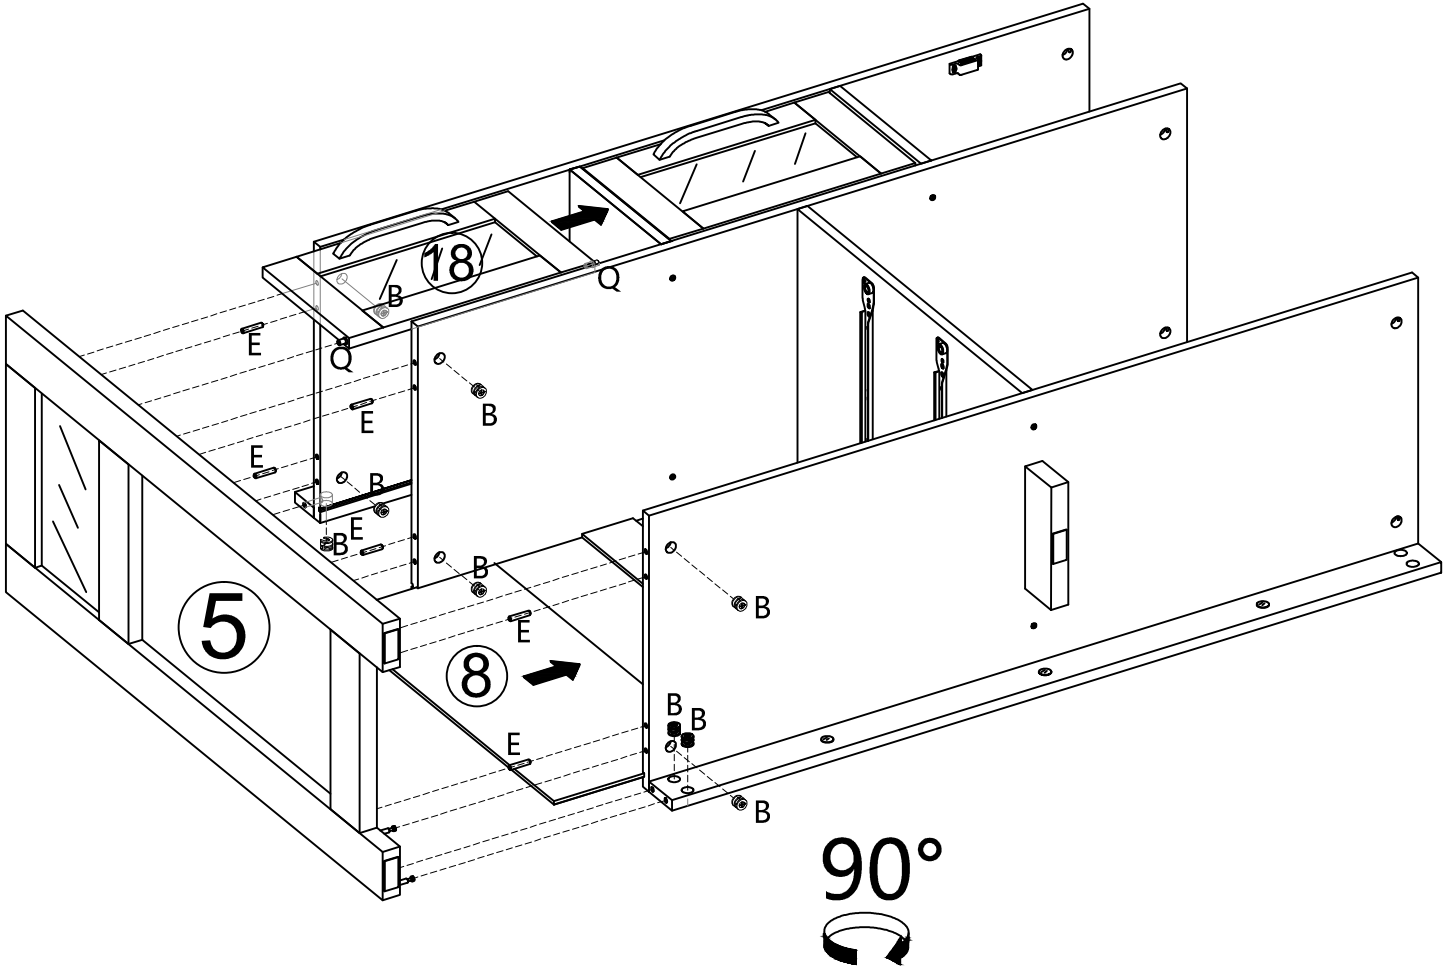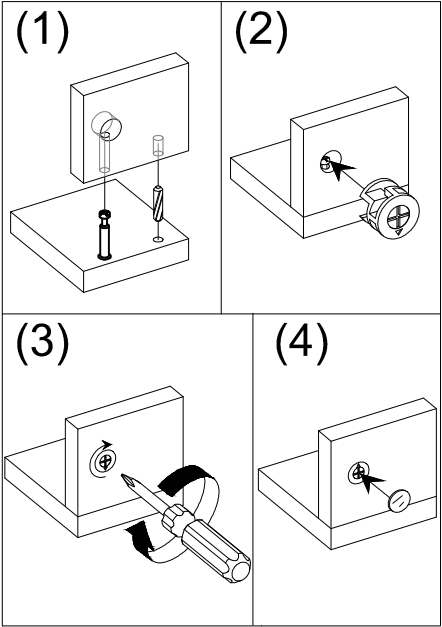

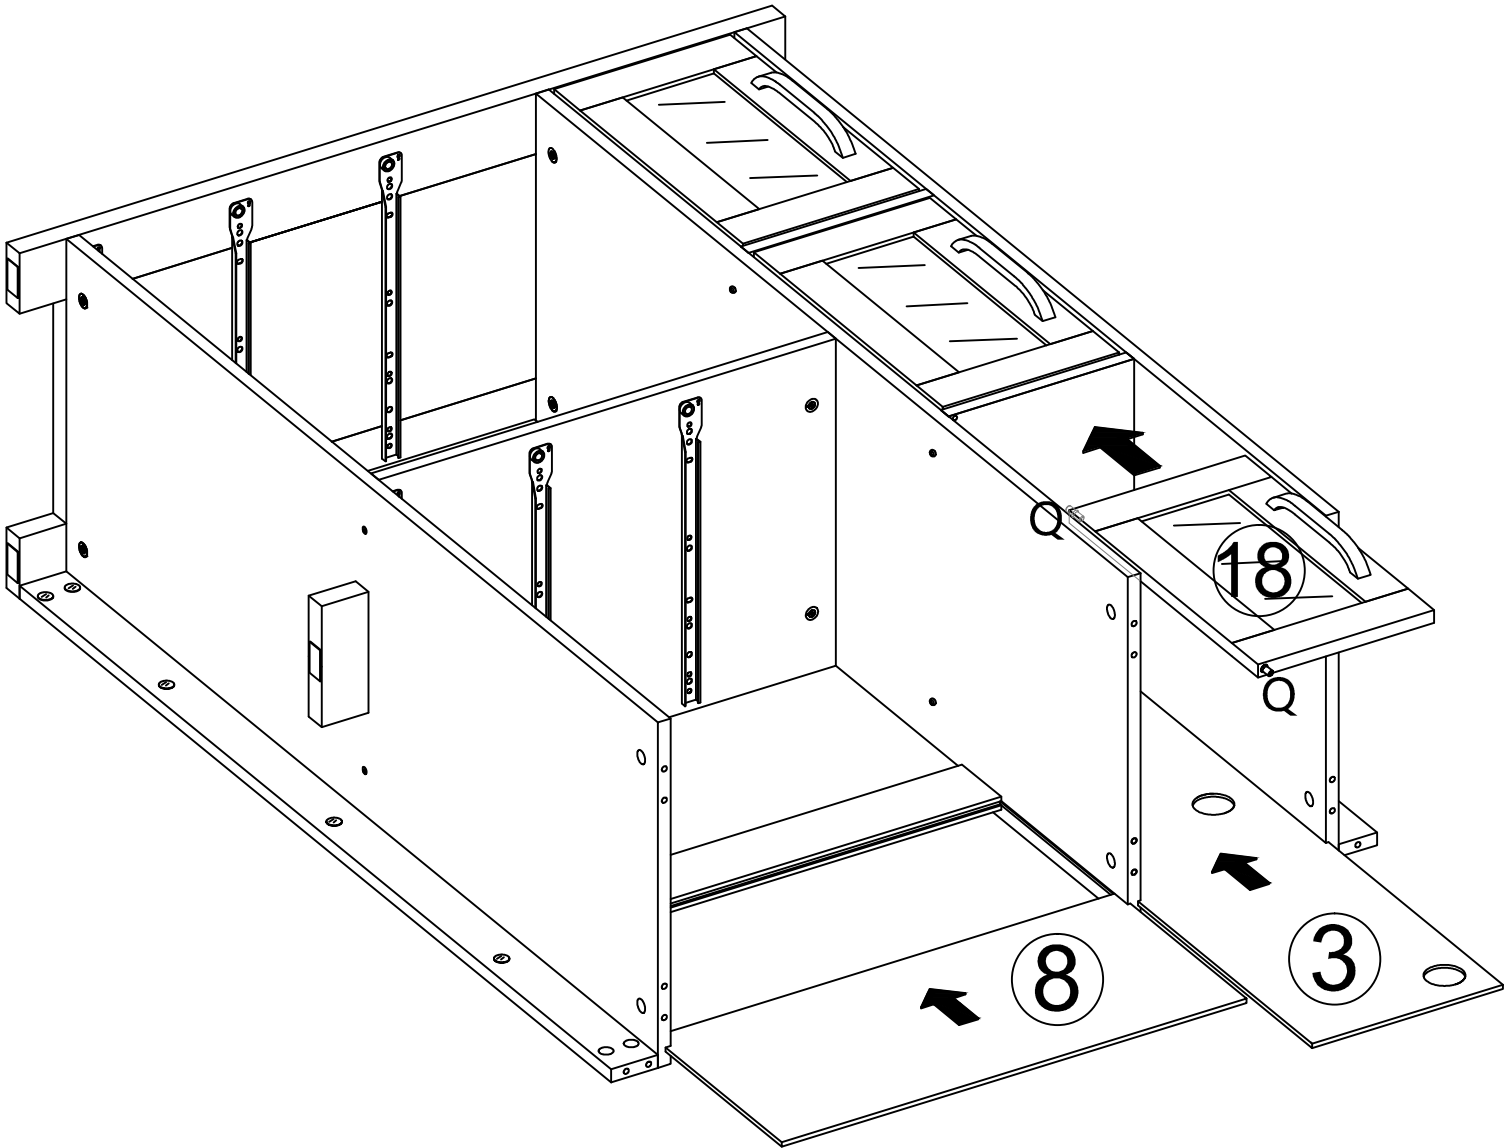


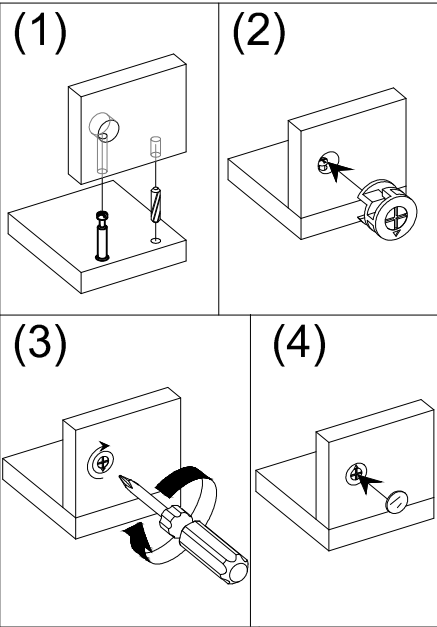
Step:28

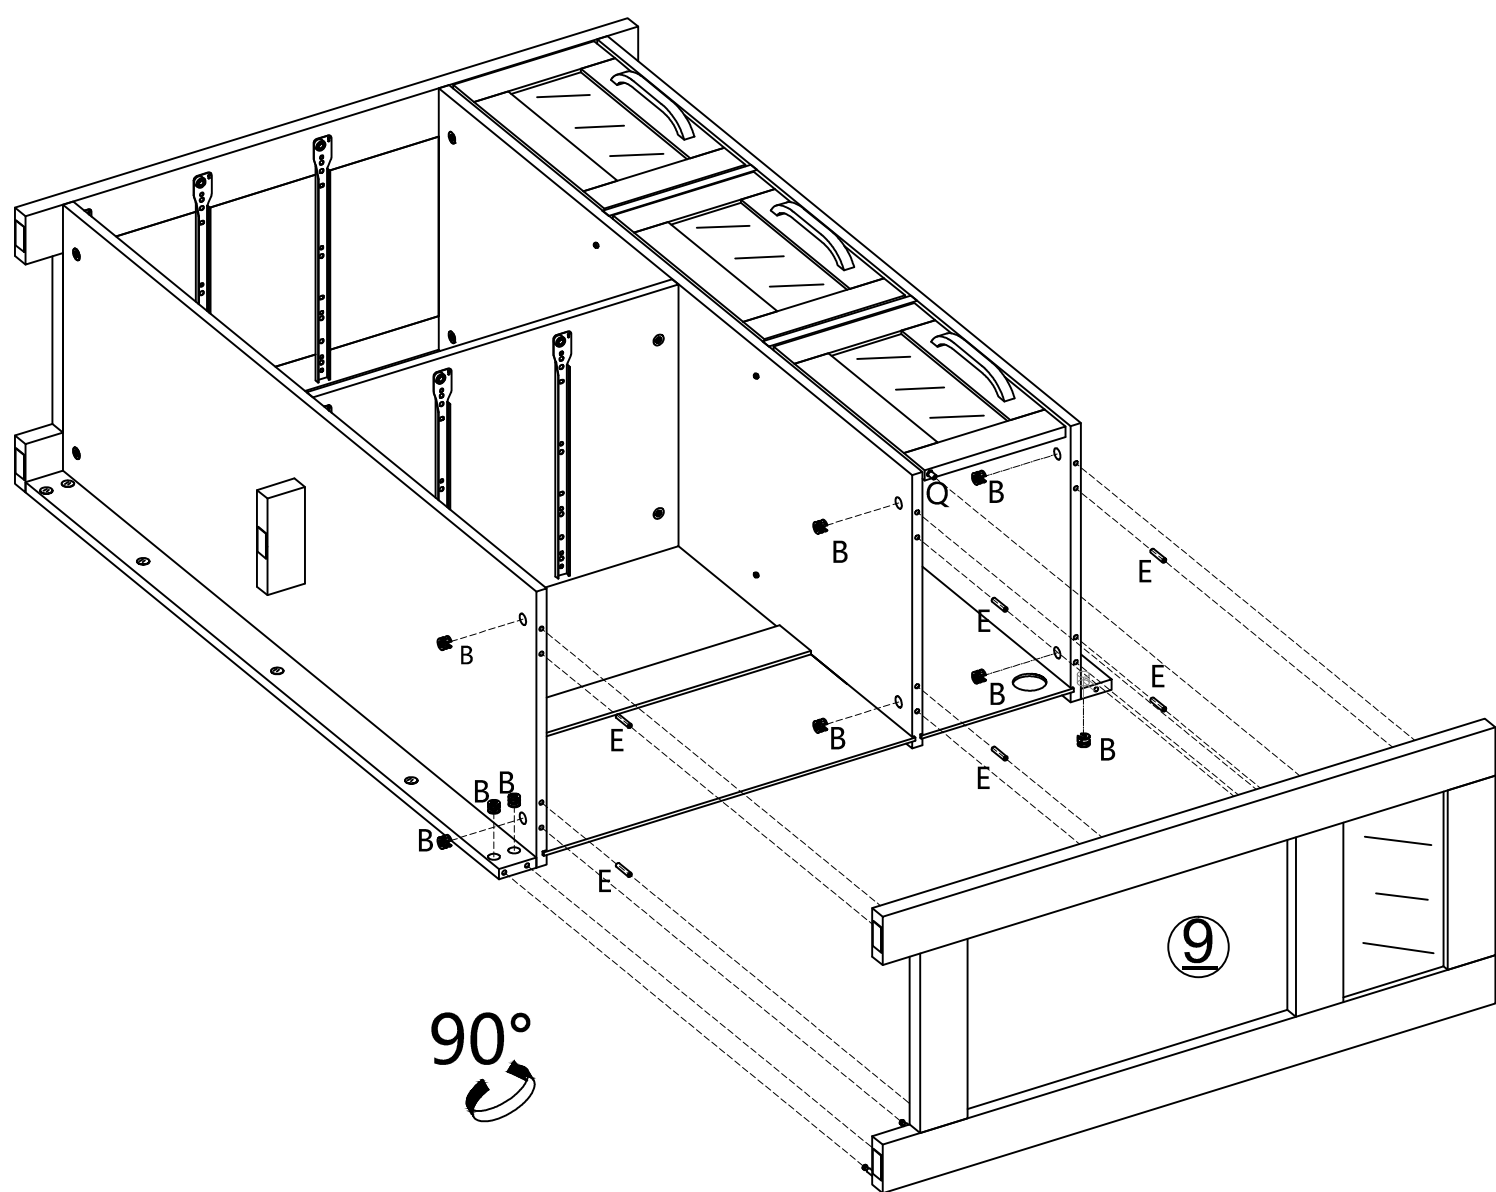



Step:29





B	 Ø15*12mm	X9
E	 Ø6*30mm	X6
V		X9



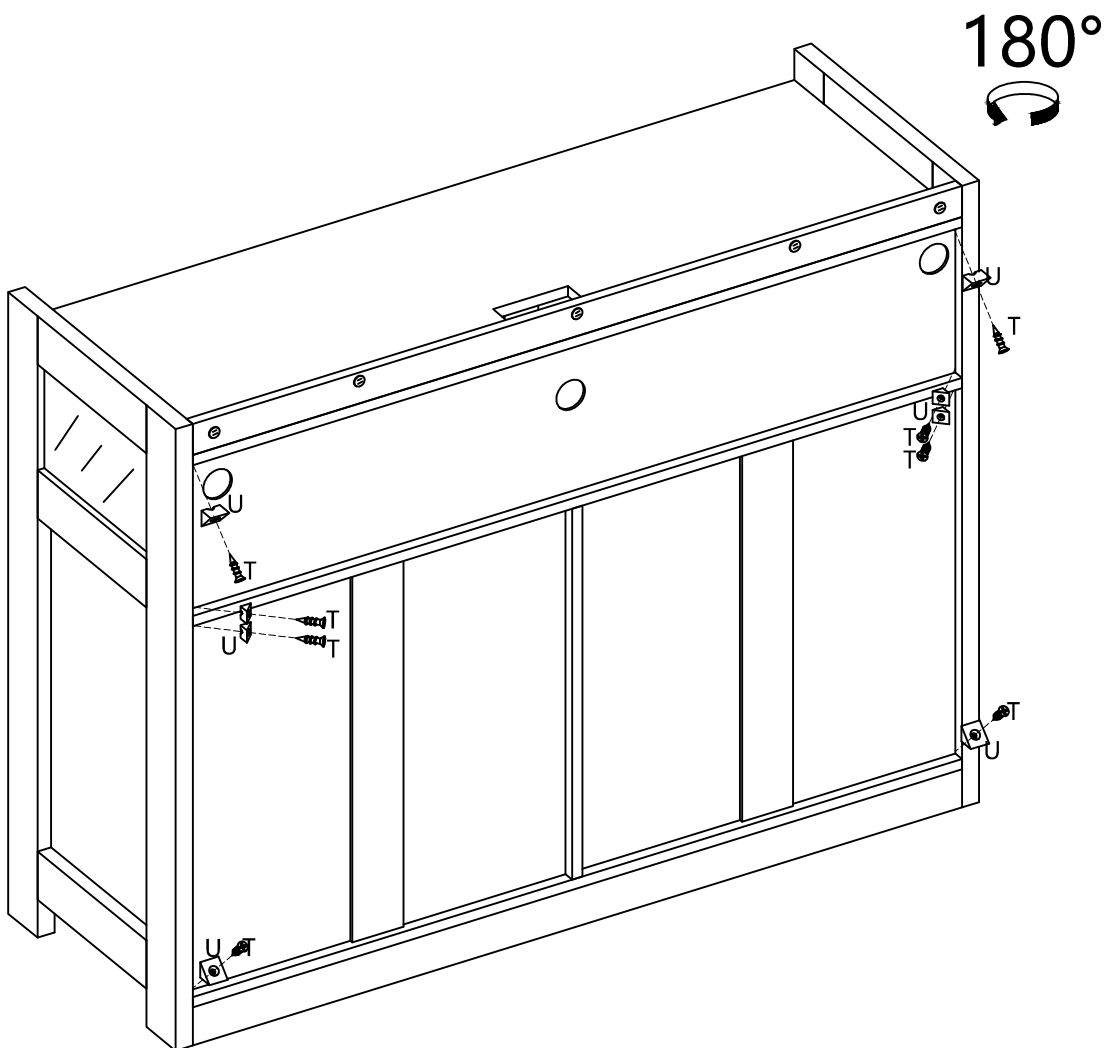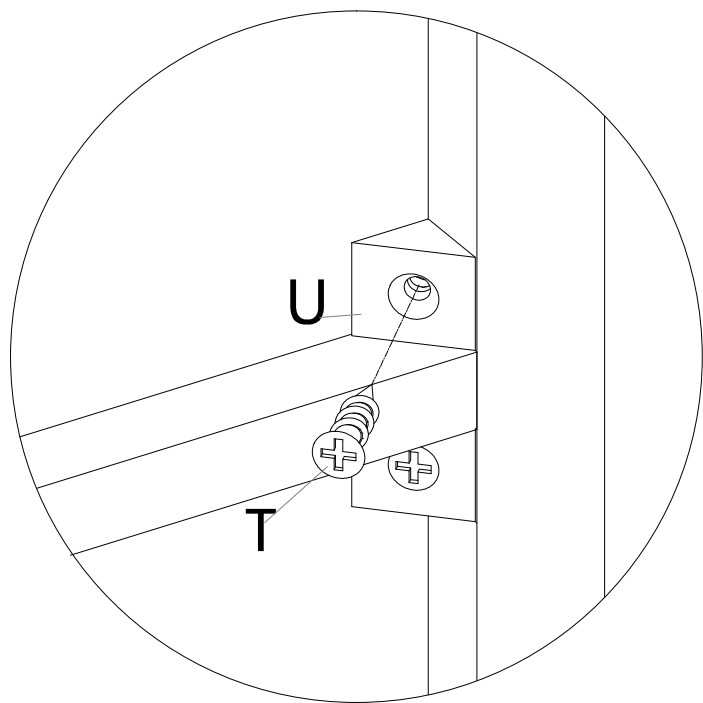



Step:30




T	 M3*14mm	X8
U		X8


Step:31

P		X1
S	 M3.5*14mm	X2

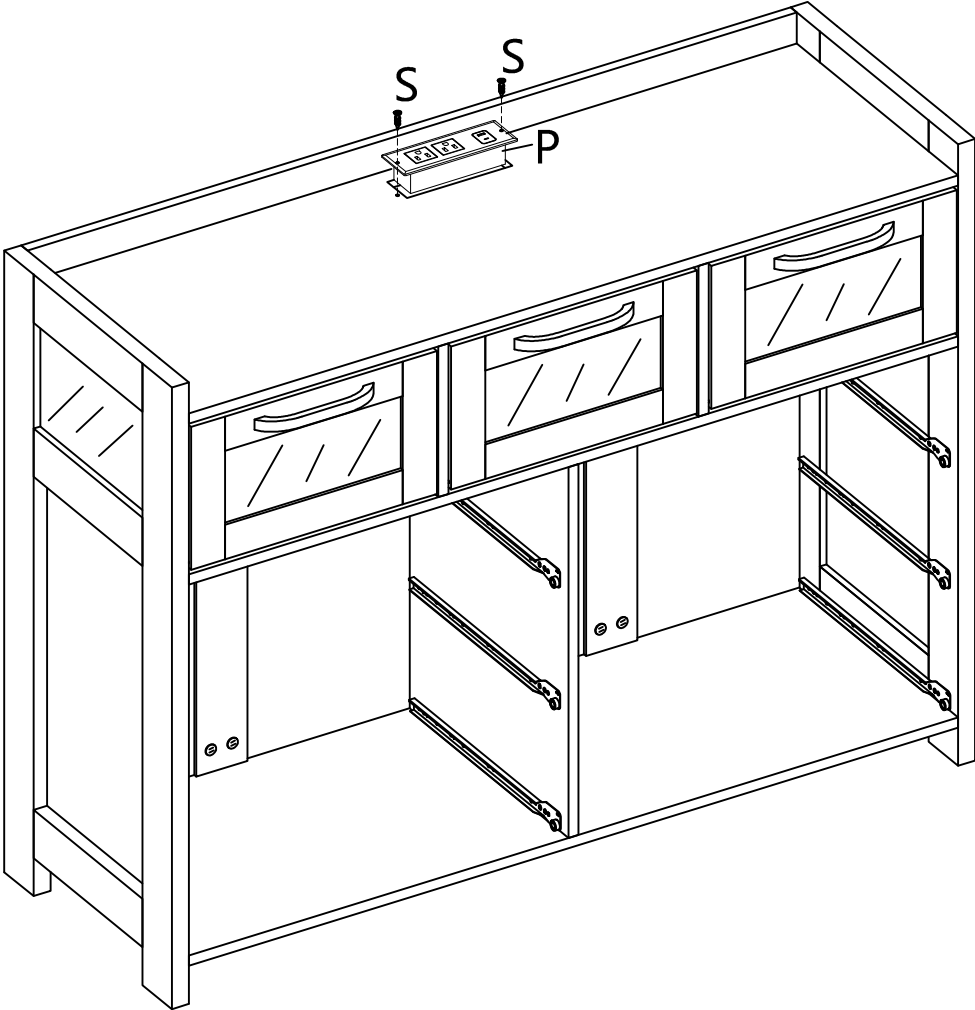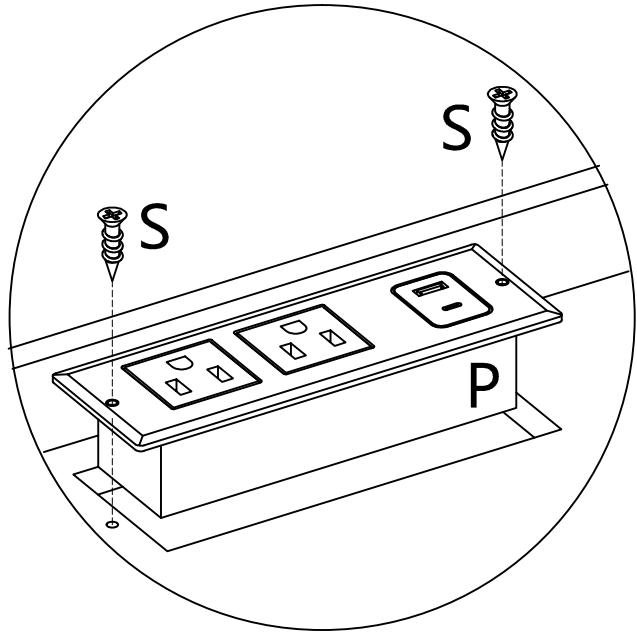




Step:32

G	 M4*35mm	X24
---	--	-----

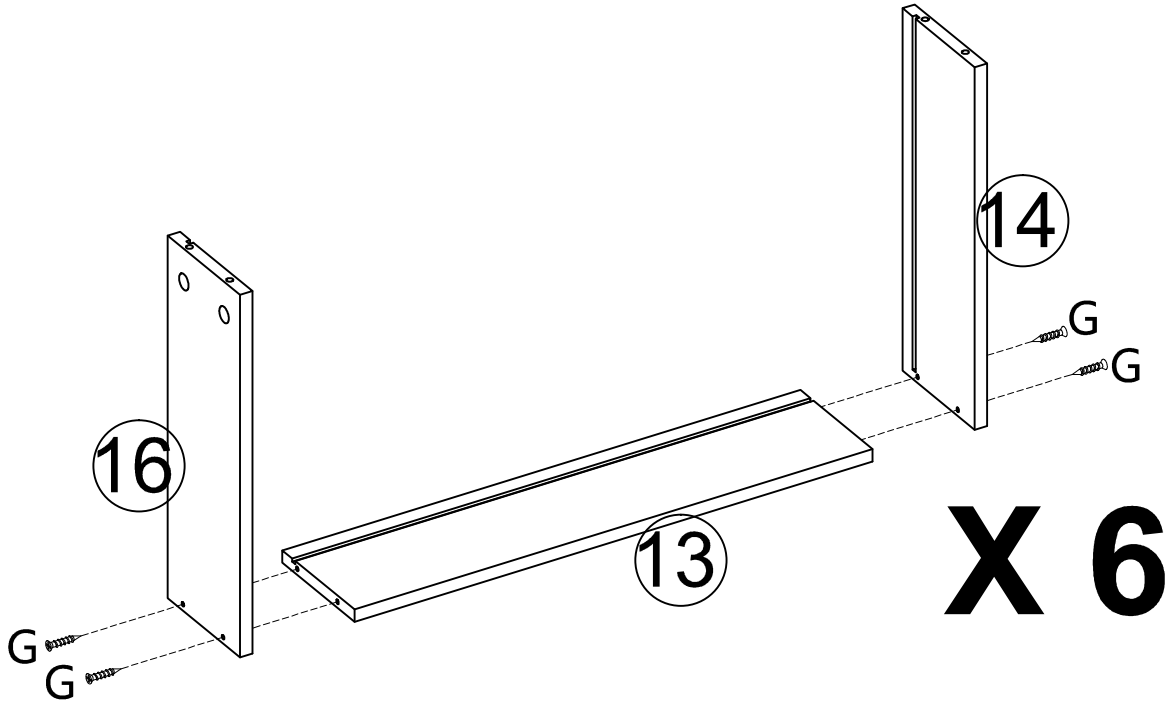



Step:33

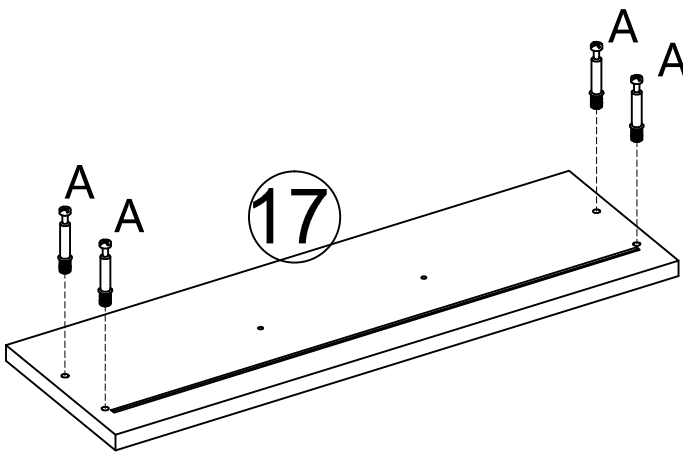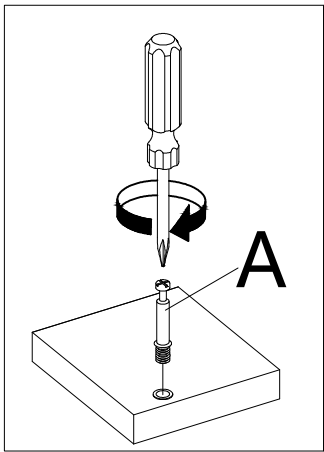
A		X24
---	---	-----



X 6



Step:34

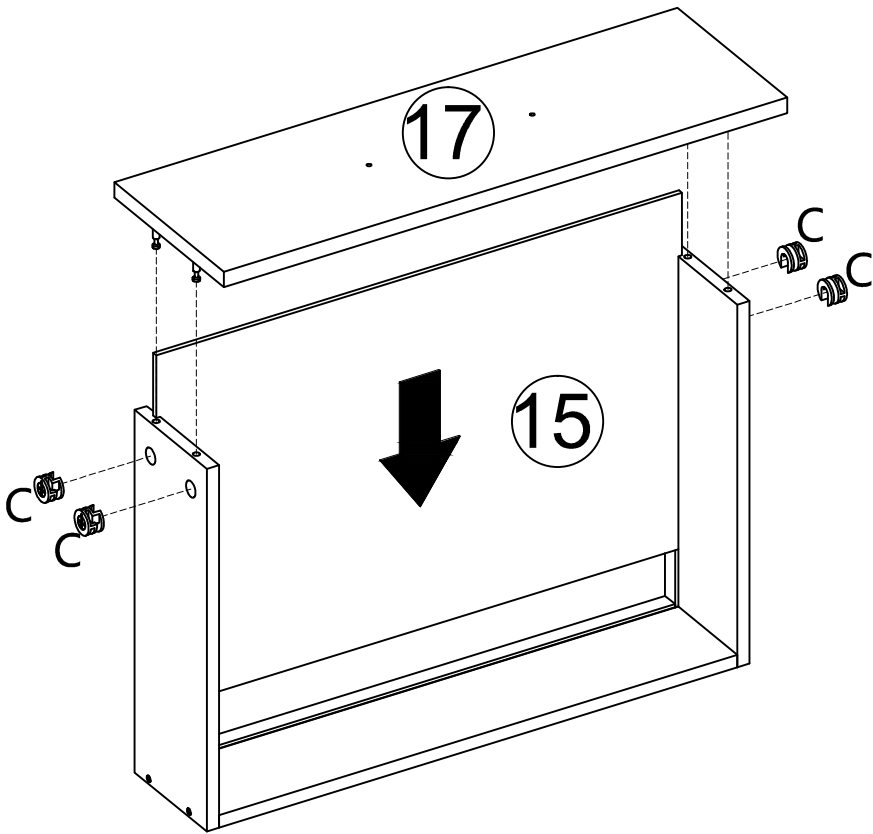
C	 ø15*10mm	X24
V		X24



X 6



Step:35


J		X6
H		X12

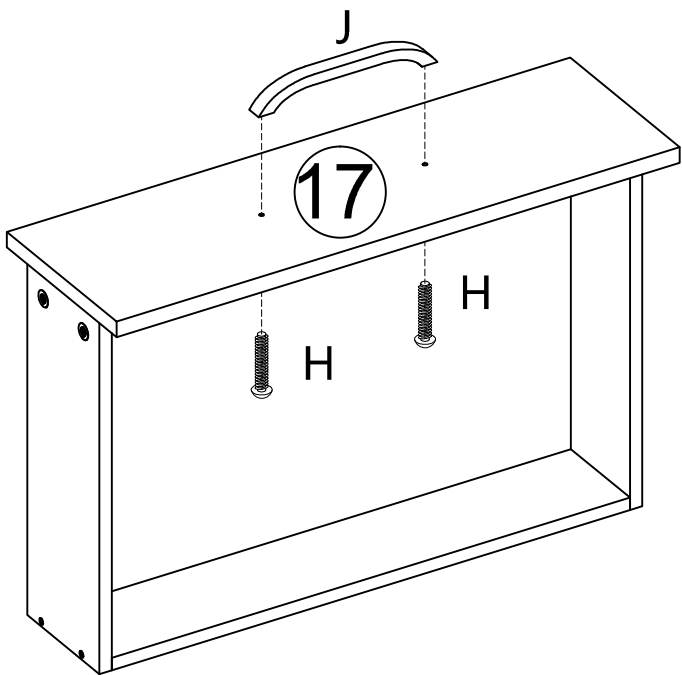


X 6

Step:36


D		X6
F	 M3*12mm	X36

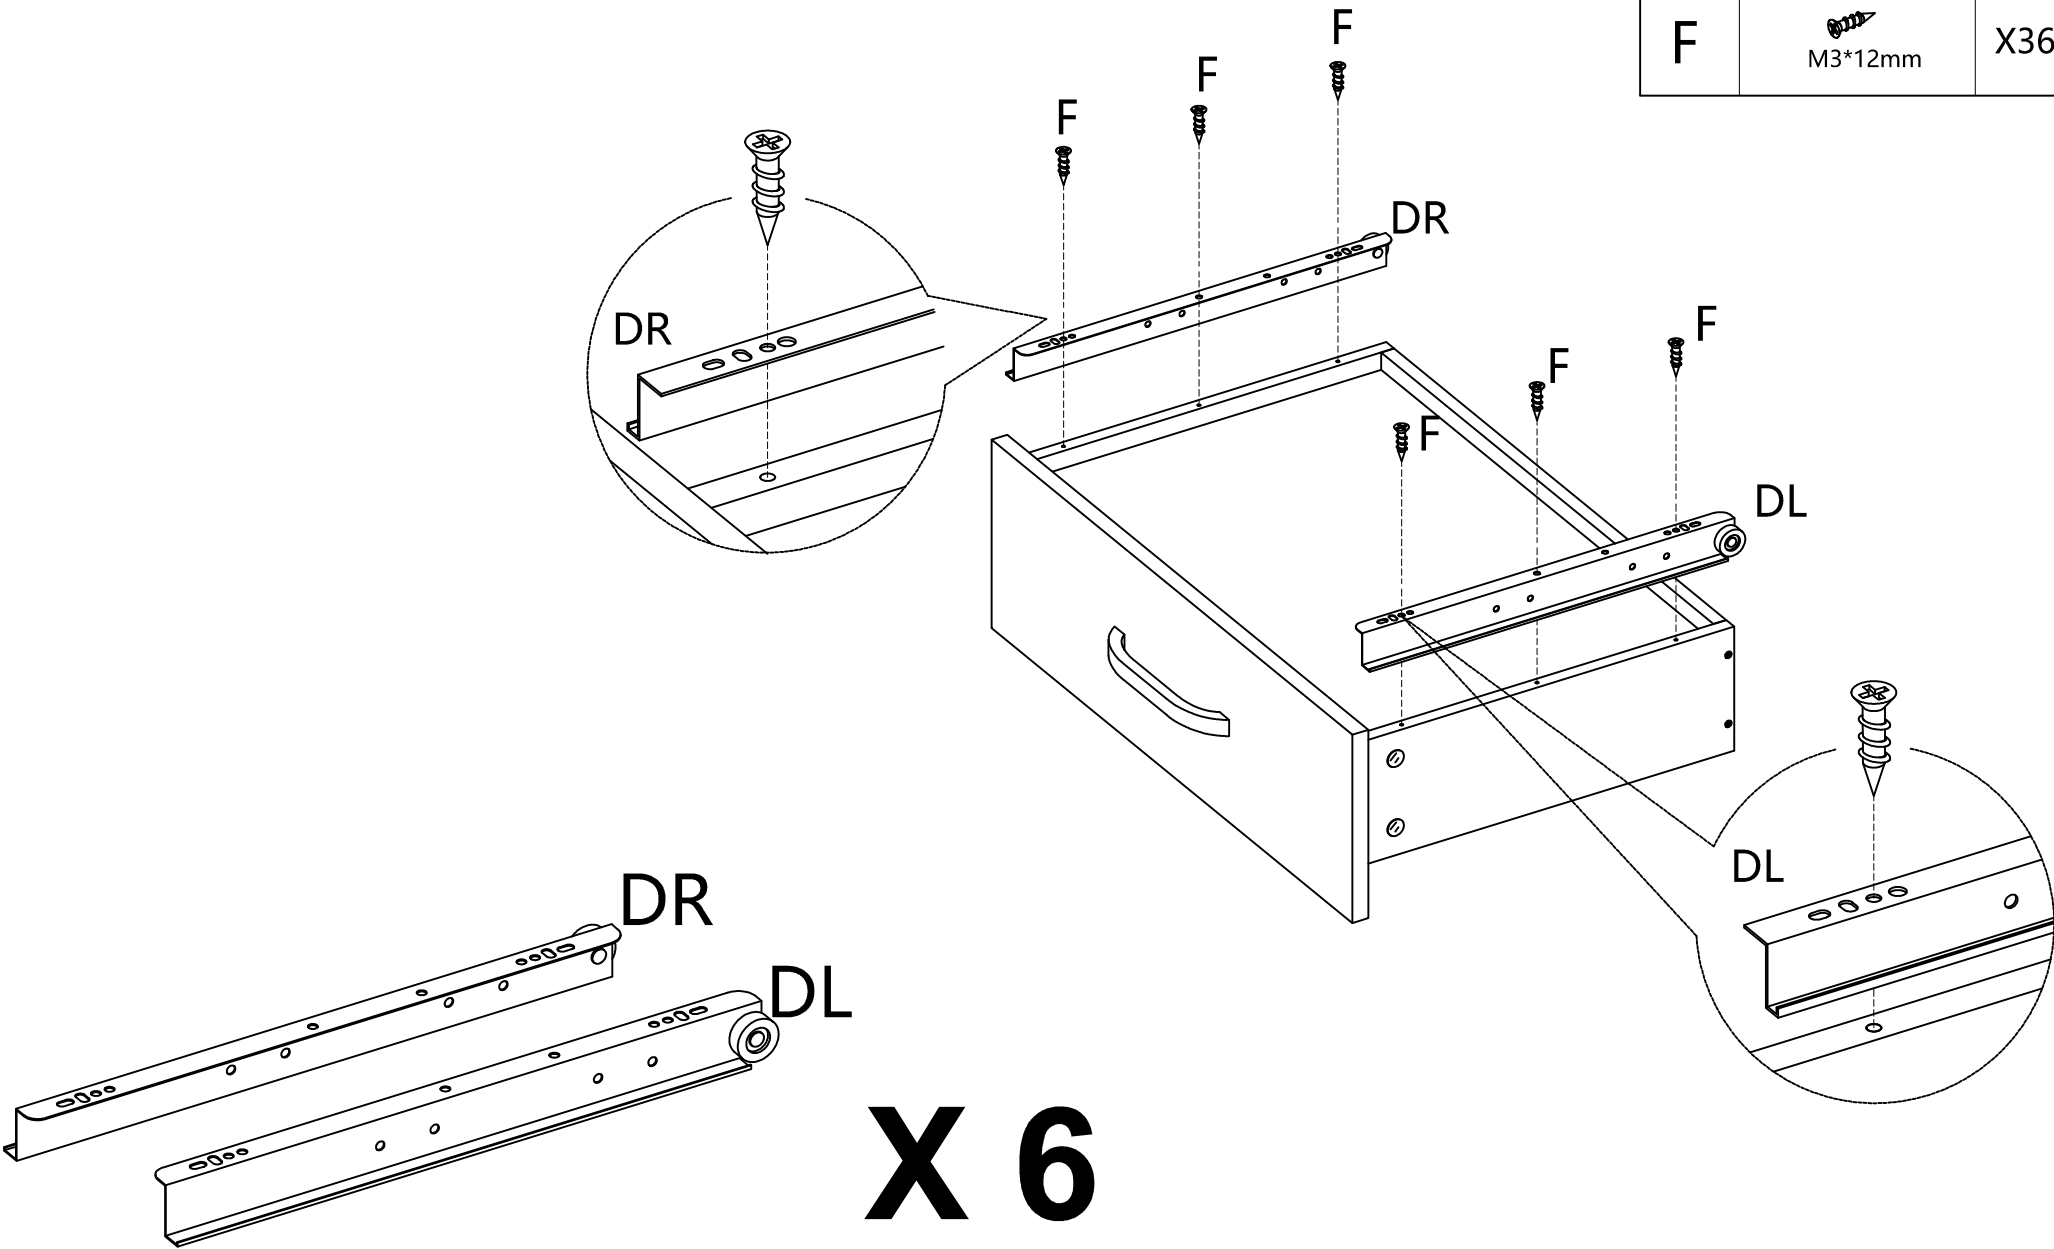

Step:37

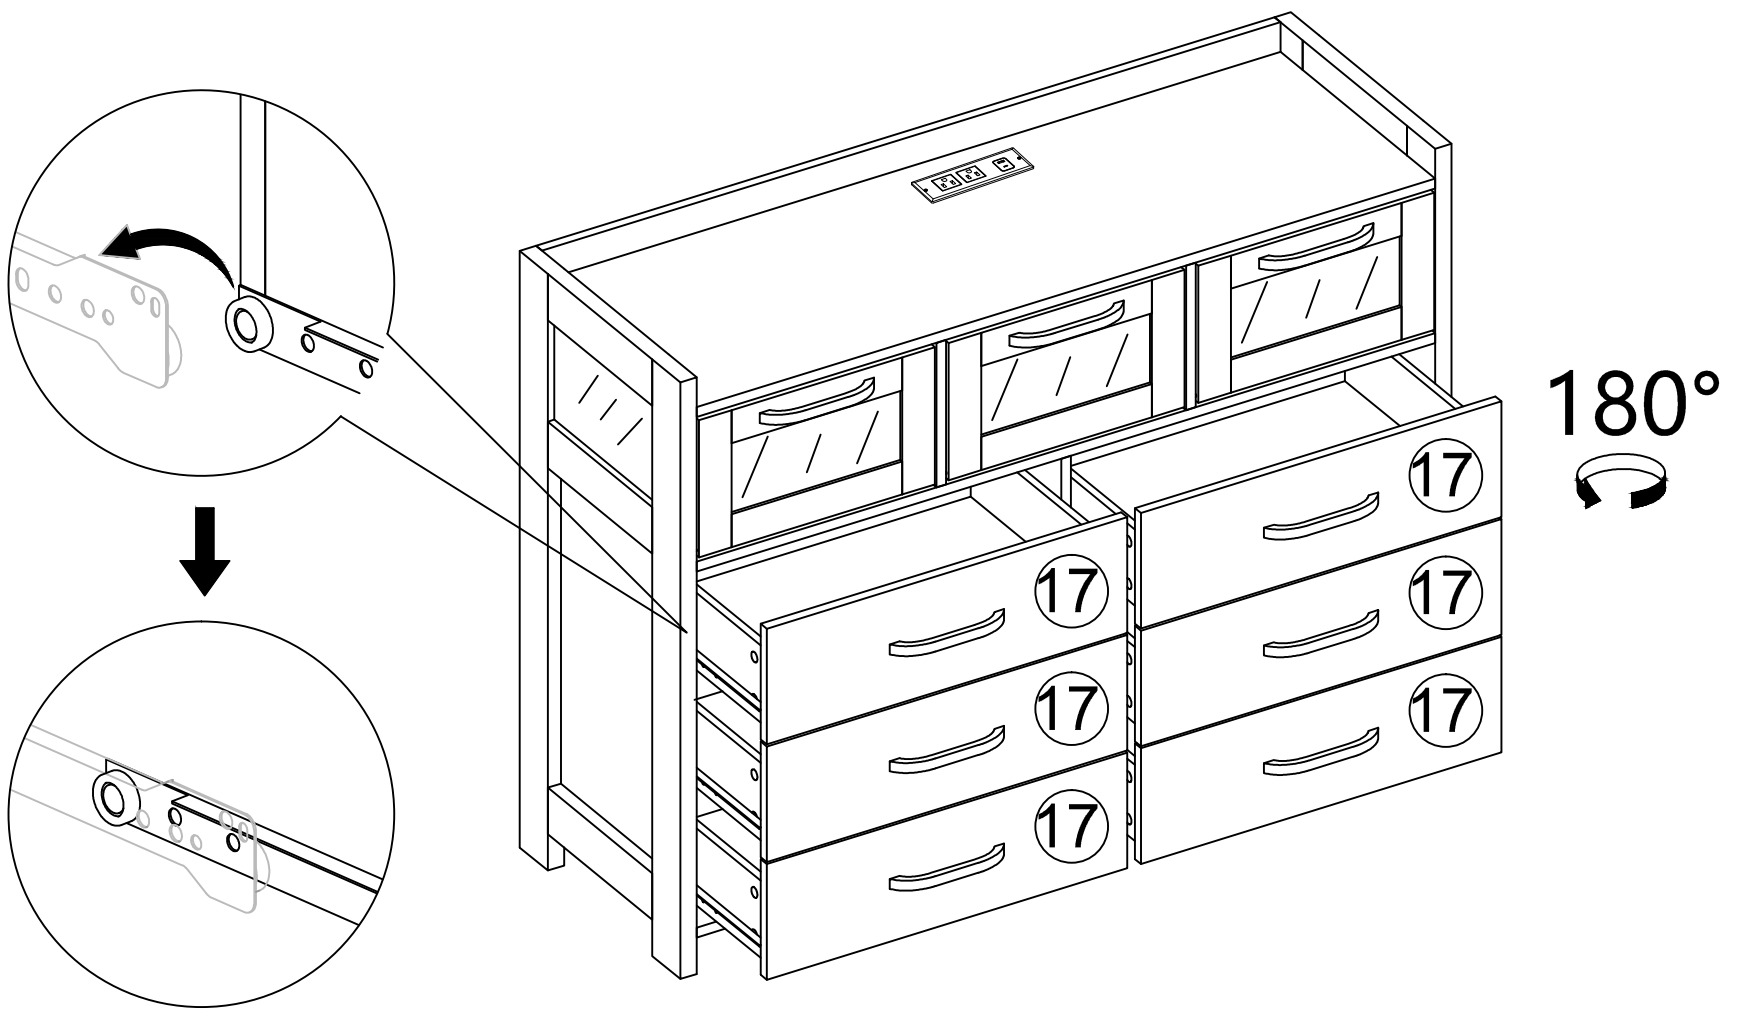

Step:38

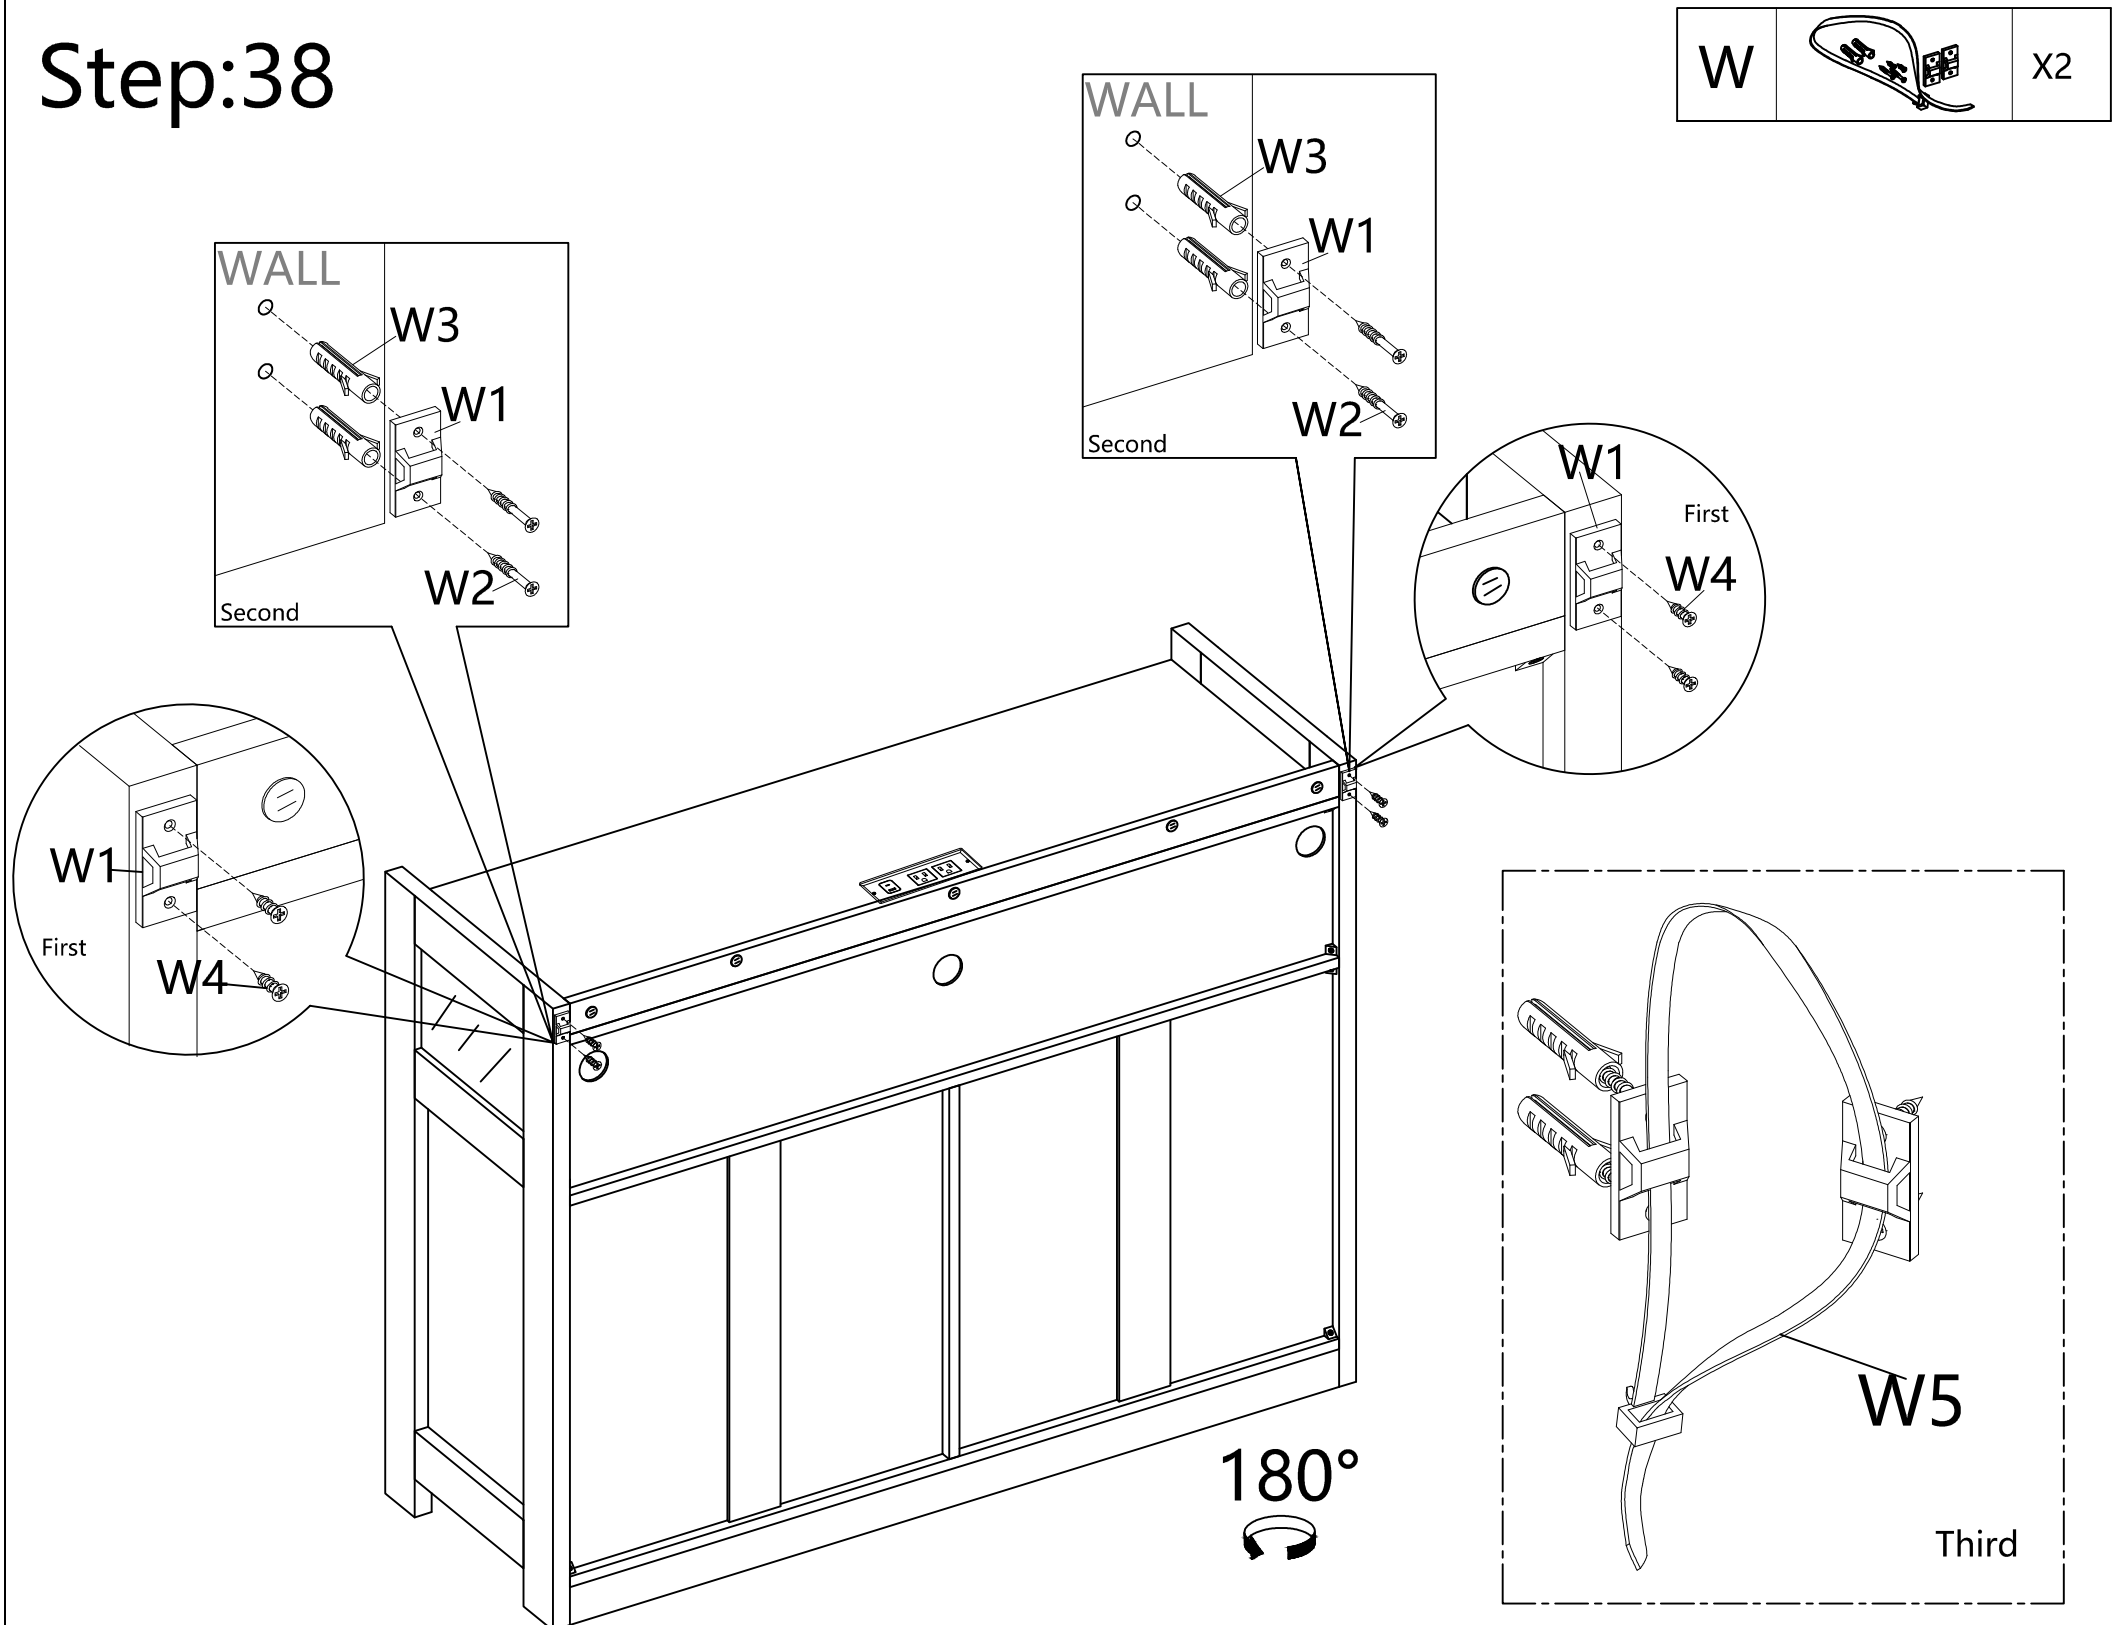

Step:39



MADE IN CHINA