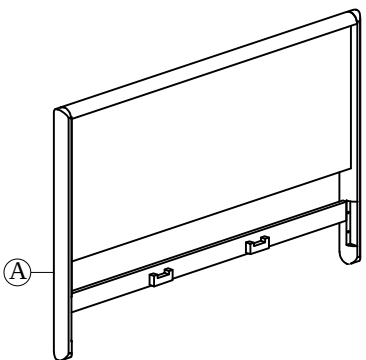
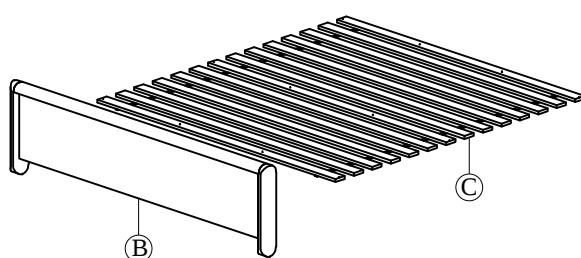
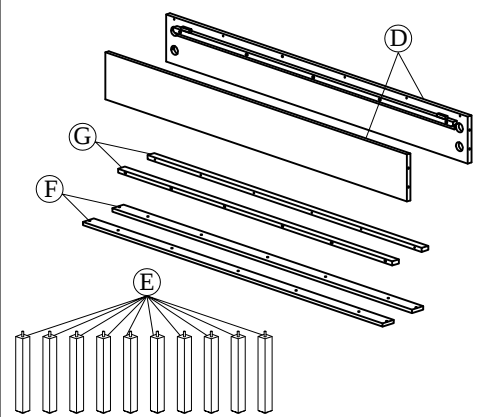


# XOLANI PLATFORM C. KING BED


## ASSEMBLY INSTRUCTIONS

MODUS  
FURNITURE

### PARTS PACKING CONFIGURATIONS

|                                                                                  |                                                                                    |                                                                                                                                 |
|----------------------------------------------------------------------------------|------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------|
| <b>BOX #1:</b><br>A. HEADBOARD 1 PC                                              | <b>BOX #2:</b><br>B. FOOTBOARD 1 PC<br>C. SLAT ROLL 1 SET                          | <b>BOX #3:</b><br>D. SIDE RAILS 2 PCS<br>E. SLAT SUPPORT LEG 10 PCS<br>F. CENTER SLAT SUPPORT 2 PCS<br>G. MATTRESS SPACER 2 PCS |
|  |  |                                              |

### FULLY ASSEMBLED

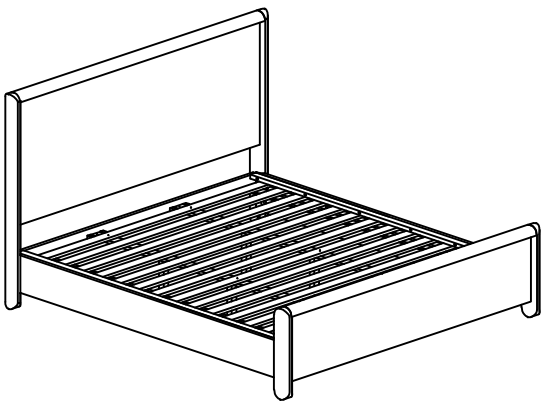


Not provided

### HARDWARE KIT PACKED IN BOX #2

| No. | Description                  | Image                                                                                 | Quantity |
|-----|------------------------------|---------------------------------------------------------------------------------------|----------|
| 1   | THREADED BOLT (8x90mm)       |    | 8 PCS    |
| 2   | HALF MOON WASHER (7x14x27mm) |  | 8 PCS    |
| 3   | HEX NUT (M8)                 |  | 8 PCS    |
| 4   | ALLEN KEY (4mm)              |  | 1 PC     |
| 5   | WOOD SCREW (4x30mm)          |  | 16 PCS   |
| 6   | WRENCH (13mm)                |  | 1 PC     |
| 7   | ALLEN BOLT (6x60mm)          |  | 12 PCS   |
| 8   | SPRING WASHER (M6)           |  | 12 PCS   |
| 9   | FLAT WASHER (M6)             |  | 12 PCS   |

### STEP 1:

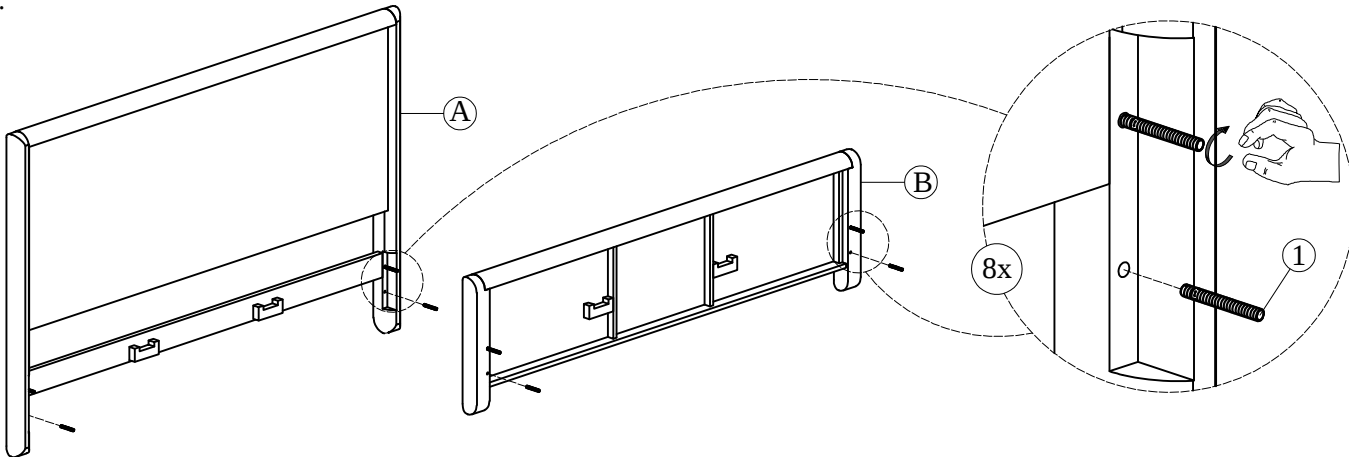


# XOLANI PLATFORM C. KING BED


## ASSEMBLY INSTRUCTIONS



### STEP 2:

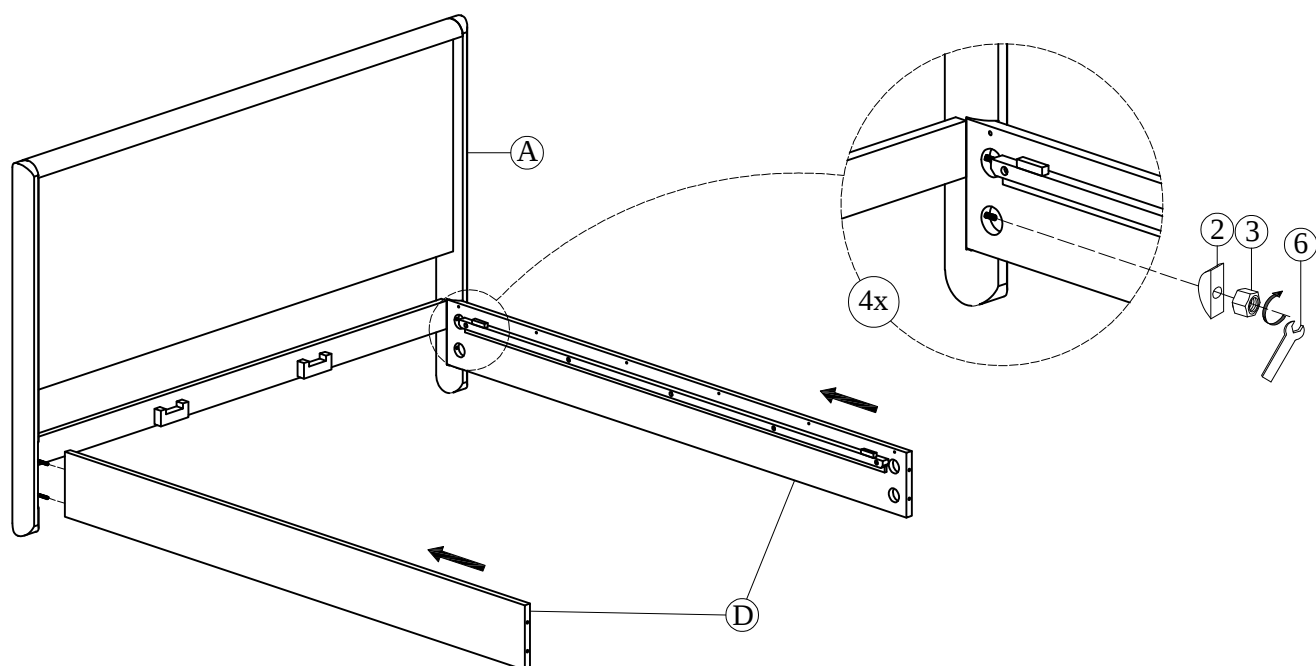


### STEP 3:

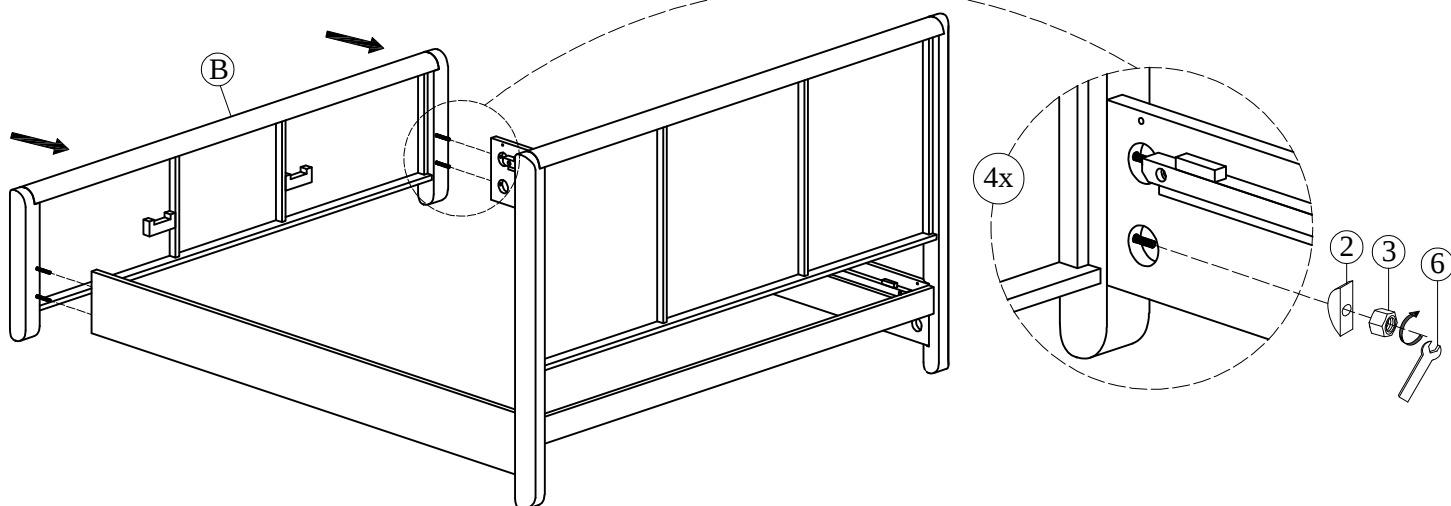

### STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 4, 5, 6 & 7 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 4

### STEP 4:

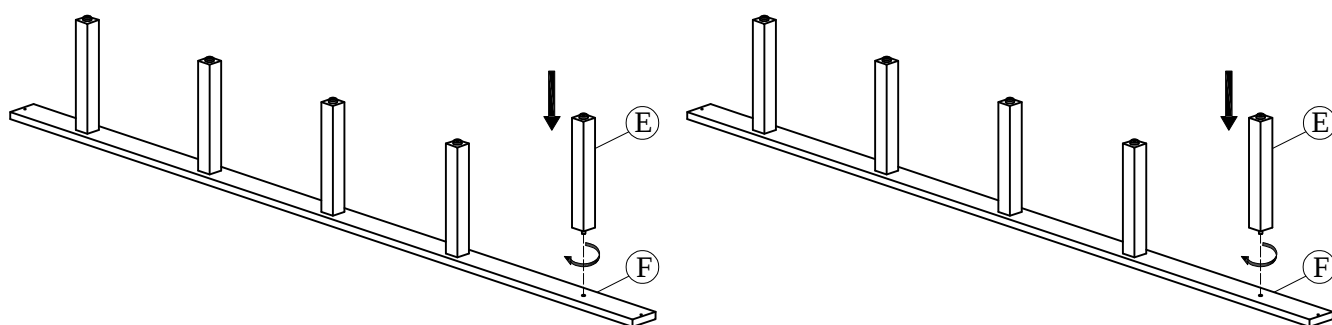


# XOLANI PLATFORM C. KING BED


## ASSEMBLY INSTRUCTIONS




### STEP 5:

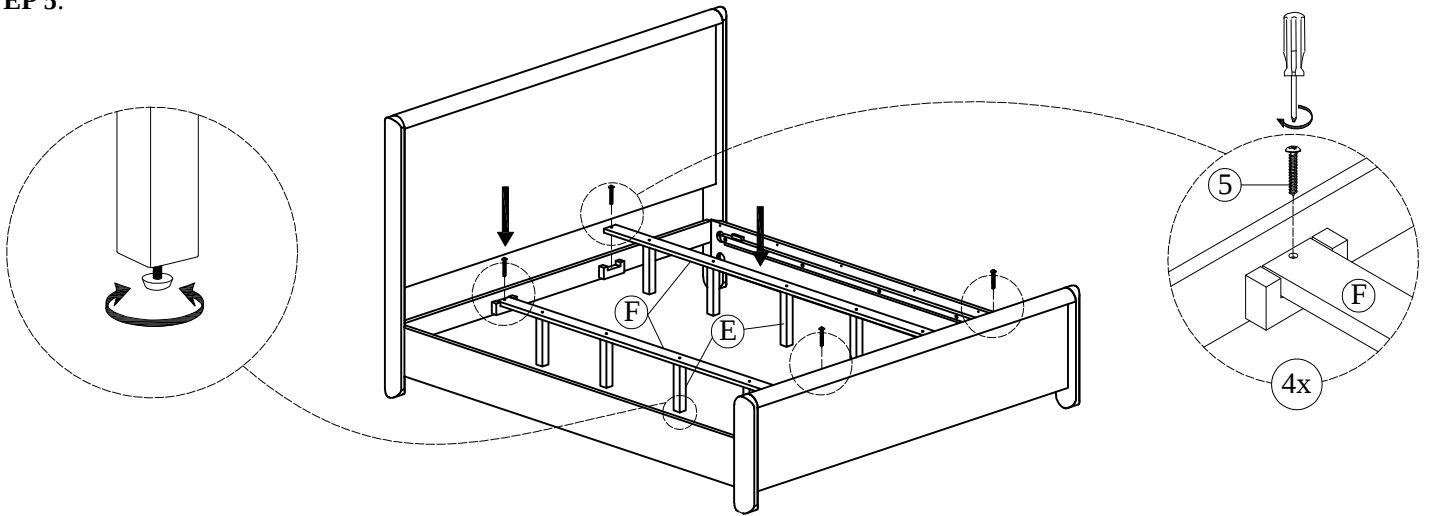


### STEP 6:

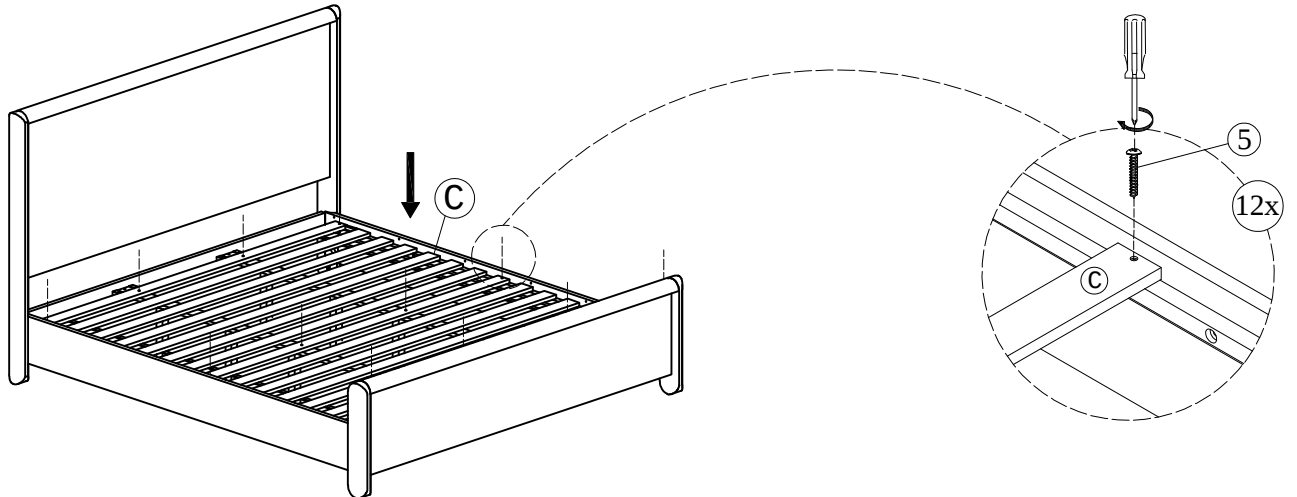

### STEP 7:

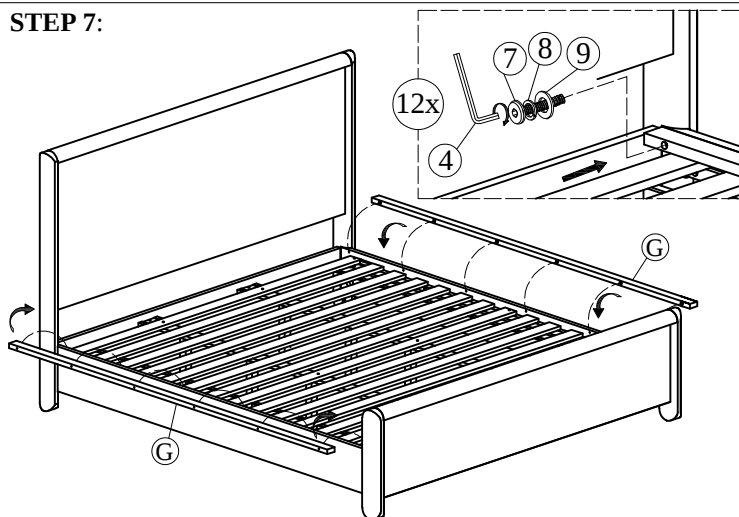

### STEP 8:

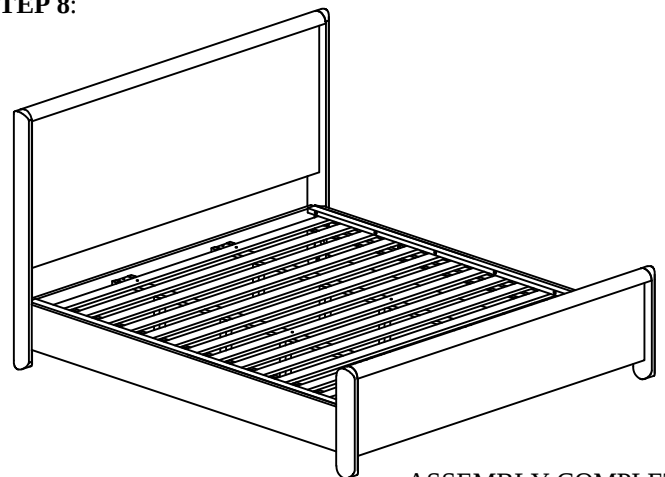


ASSEMBLY COMPLETE

### INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.

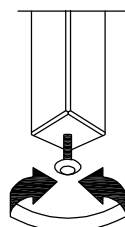

### MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

# XOLANI PLATFORM C. KING BED

## ASSEMBLY INSTRUCTIONS

### APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT



AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

|                        |         |                        |          |
|------------------------|---------|------------------------|----------|
| C. SLAT ROLL           | :1 SET  | 5. WOOD SCREW (4x30mm) | :16 PCS  |
| E. SLAT SUPPORT LEG    | :10 PCS | 7. ALLEN BOLT (6x60mm) | :12 PCS  |
| F. CENTER SLAT SUPPORT | :2 PCS  | 8. SPRING WASHER (M6)  | :12 PCS  |
| G. MATTRESS SPACER     | :2 PCS  | 9. FLAT WASHER (M6)    | : 12 PCS |

#### STEP 1:

USE ALLEN KEY (4) IN BOX #2 TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

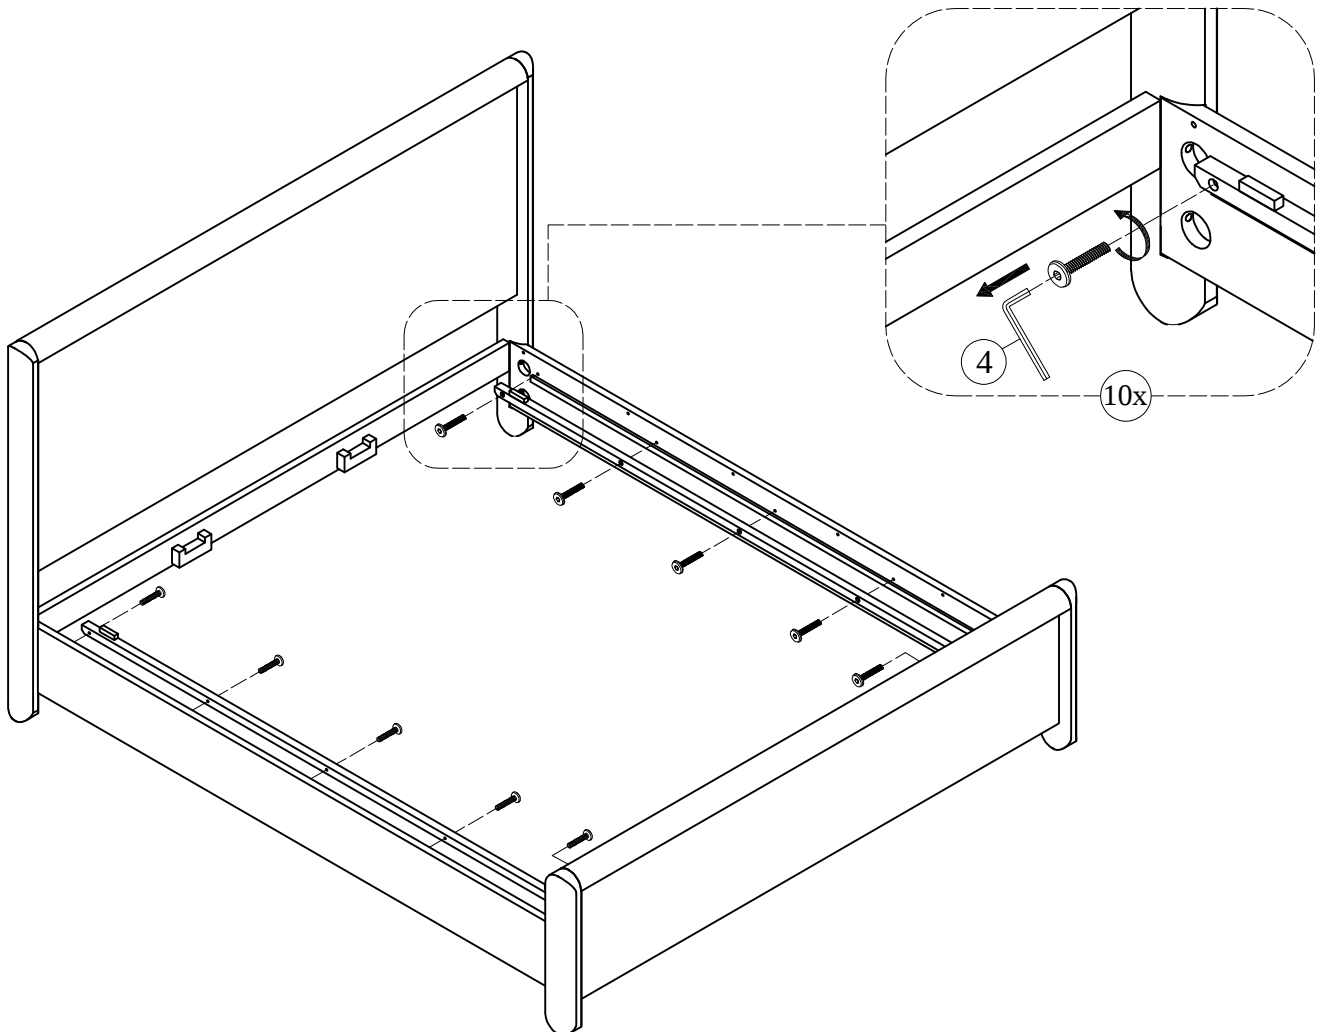

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION.