


Hall Tree

Assembly Instructions - Please keep for future reference

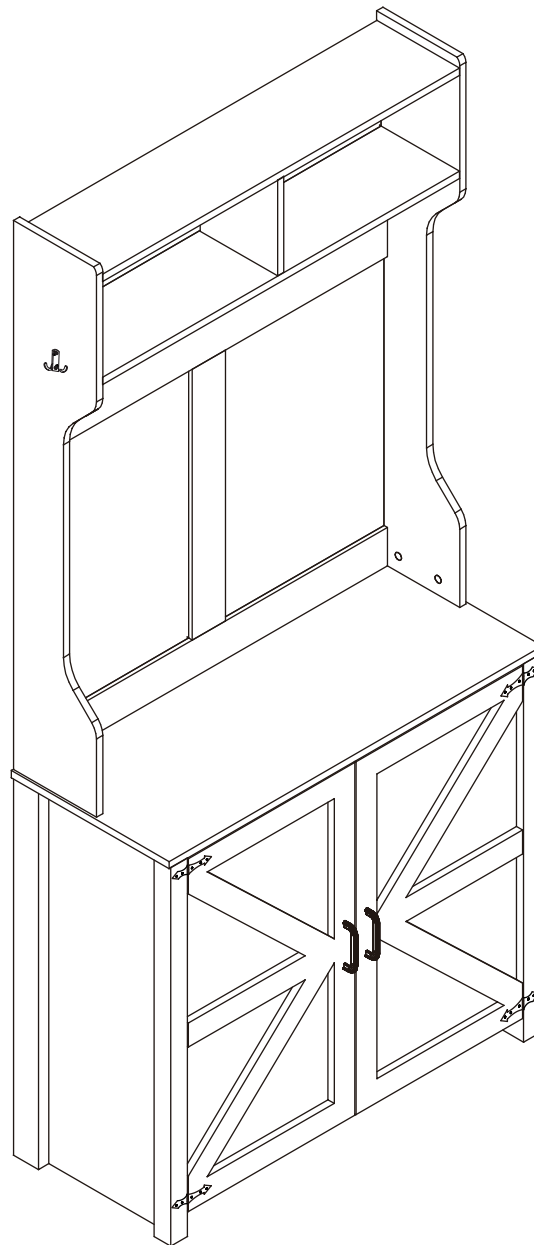

Dimensions

Width-35.4inch

Depth-15.0inch

Height-76.8inch

Important – Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING

In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

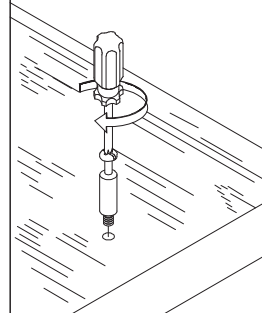

Step 2

Push the male camlock into the entry hole.

2

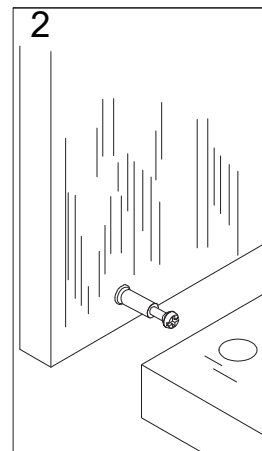


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

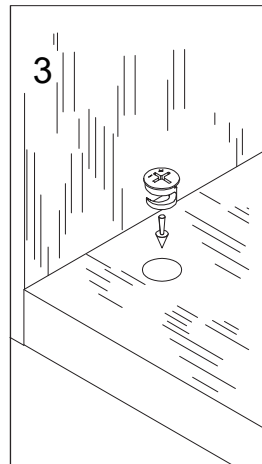


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.














4

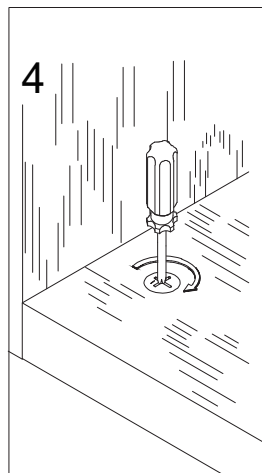














Assembly Instructions

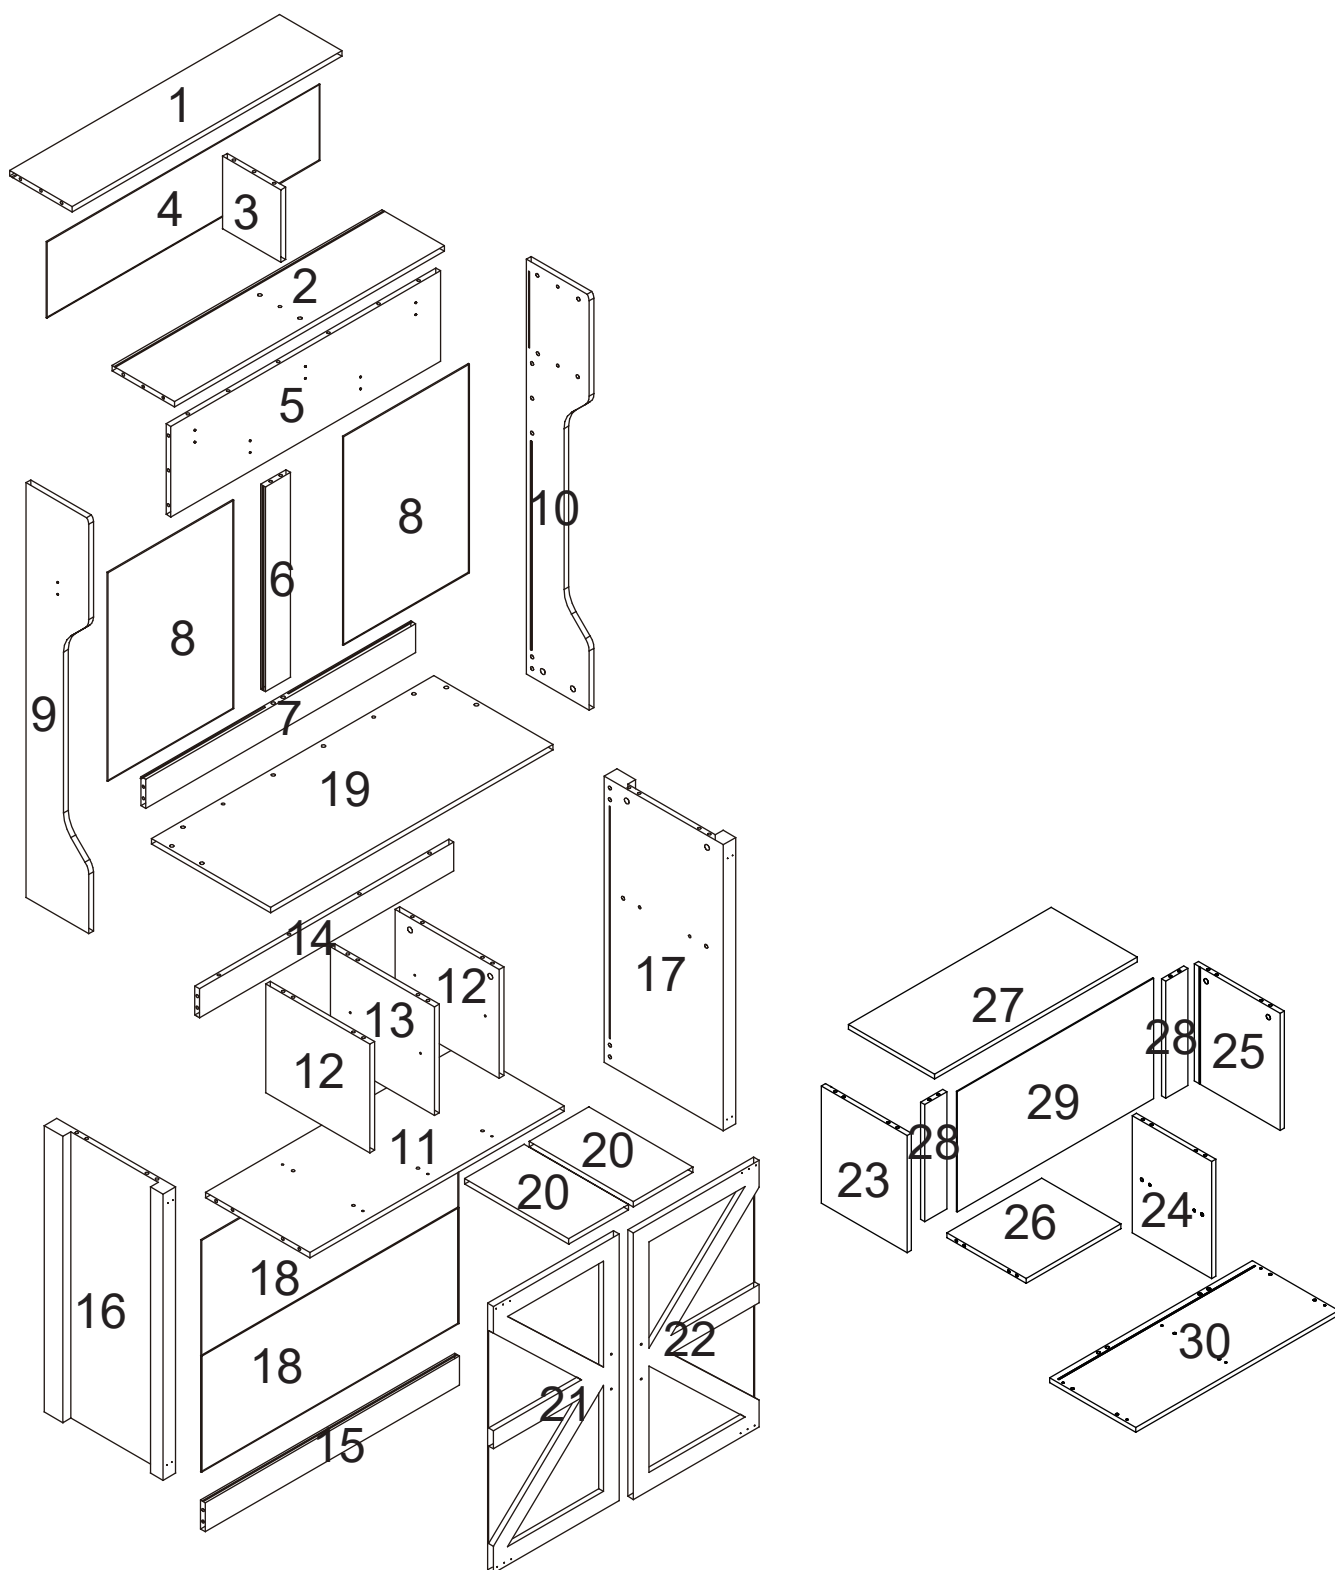

Assembly Instructions

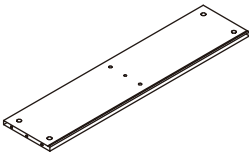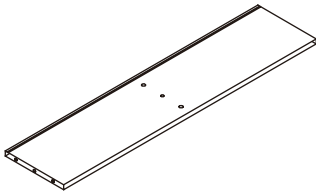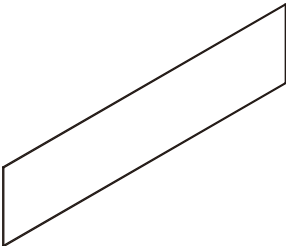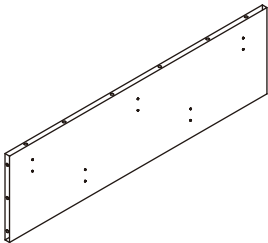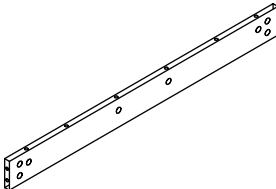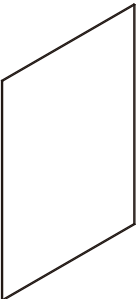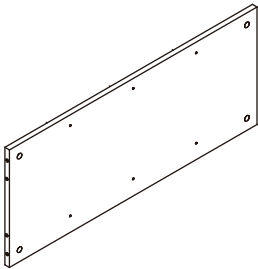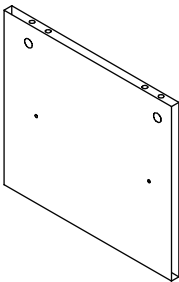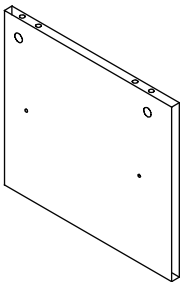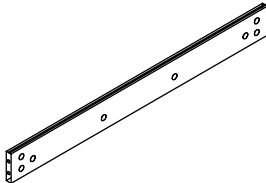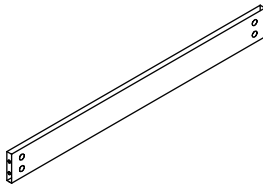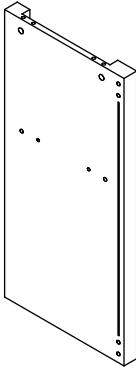			
① x 1	② x 1	③ x 1	④ x 1
			
⑤ x 1	⑥ x 1	⑦ x 1	⑧ x 2
			
⑨ x 1	⑩ x 1	⑪ x 1	⑫ x 2
			
⑬ x 1	⑭ x 1	⑮ x 1	⑯ x 1






Assembly Instructions

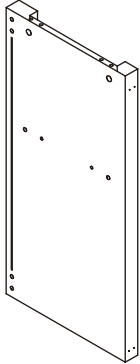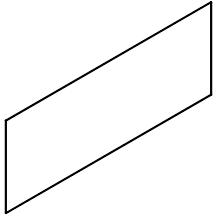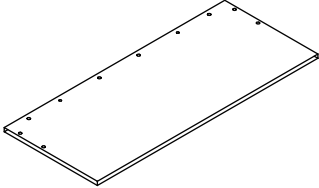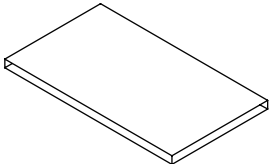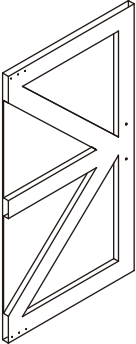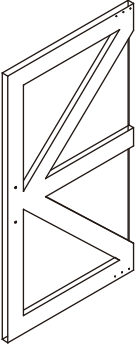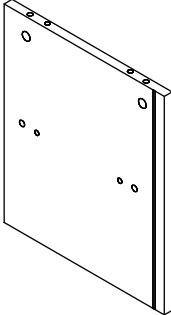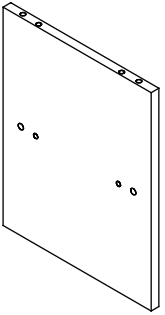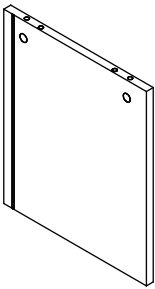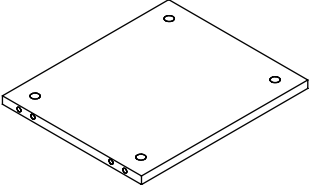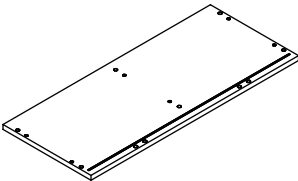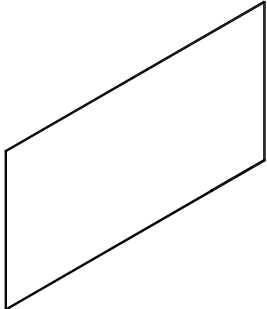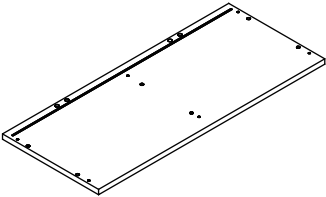			
17 x 1	18 x 2	19 x 1	20 x 2
			
21 x 1	22 x 1	23 x 1	24 x 1
			
25 x 1	26 x 1	27 x 1	28 x 2
			
29 x 1	30 x 1		


Components-Fittings

Please check you have all the panels listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

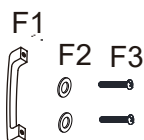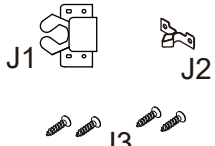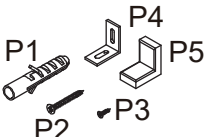(A)  Cam Bolt x 82+3	(B)  Cam Lock x 82+3	(C)  8*30mm Dowel x 46+3	(D)  3.5*14mm Screw x 24+2
(E)  5*40mm Screw x 12+2	(F)  Hole Pitch Handle x 2 set	(G)  Bulkhead Pins x 8+1	(H)  Backboard buckle x 28+2
(J)  Door clamshell x 2	(K)  Clothes-hook x 7	(L)  universal wheel x 6	(M)  Perfect Fit x 22+2
(N)  felt x 9+2	(P)  Anti dumping x 2 set	(Q)  hinge x 4	(R)  3.5*14mm Screw x 34+2
(S)  Screwdriver x 1			












1.

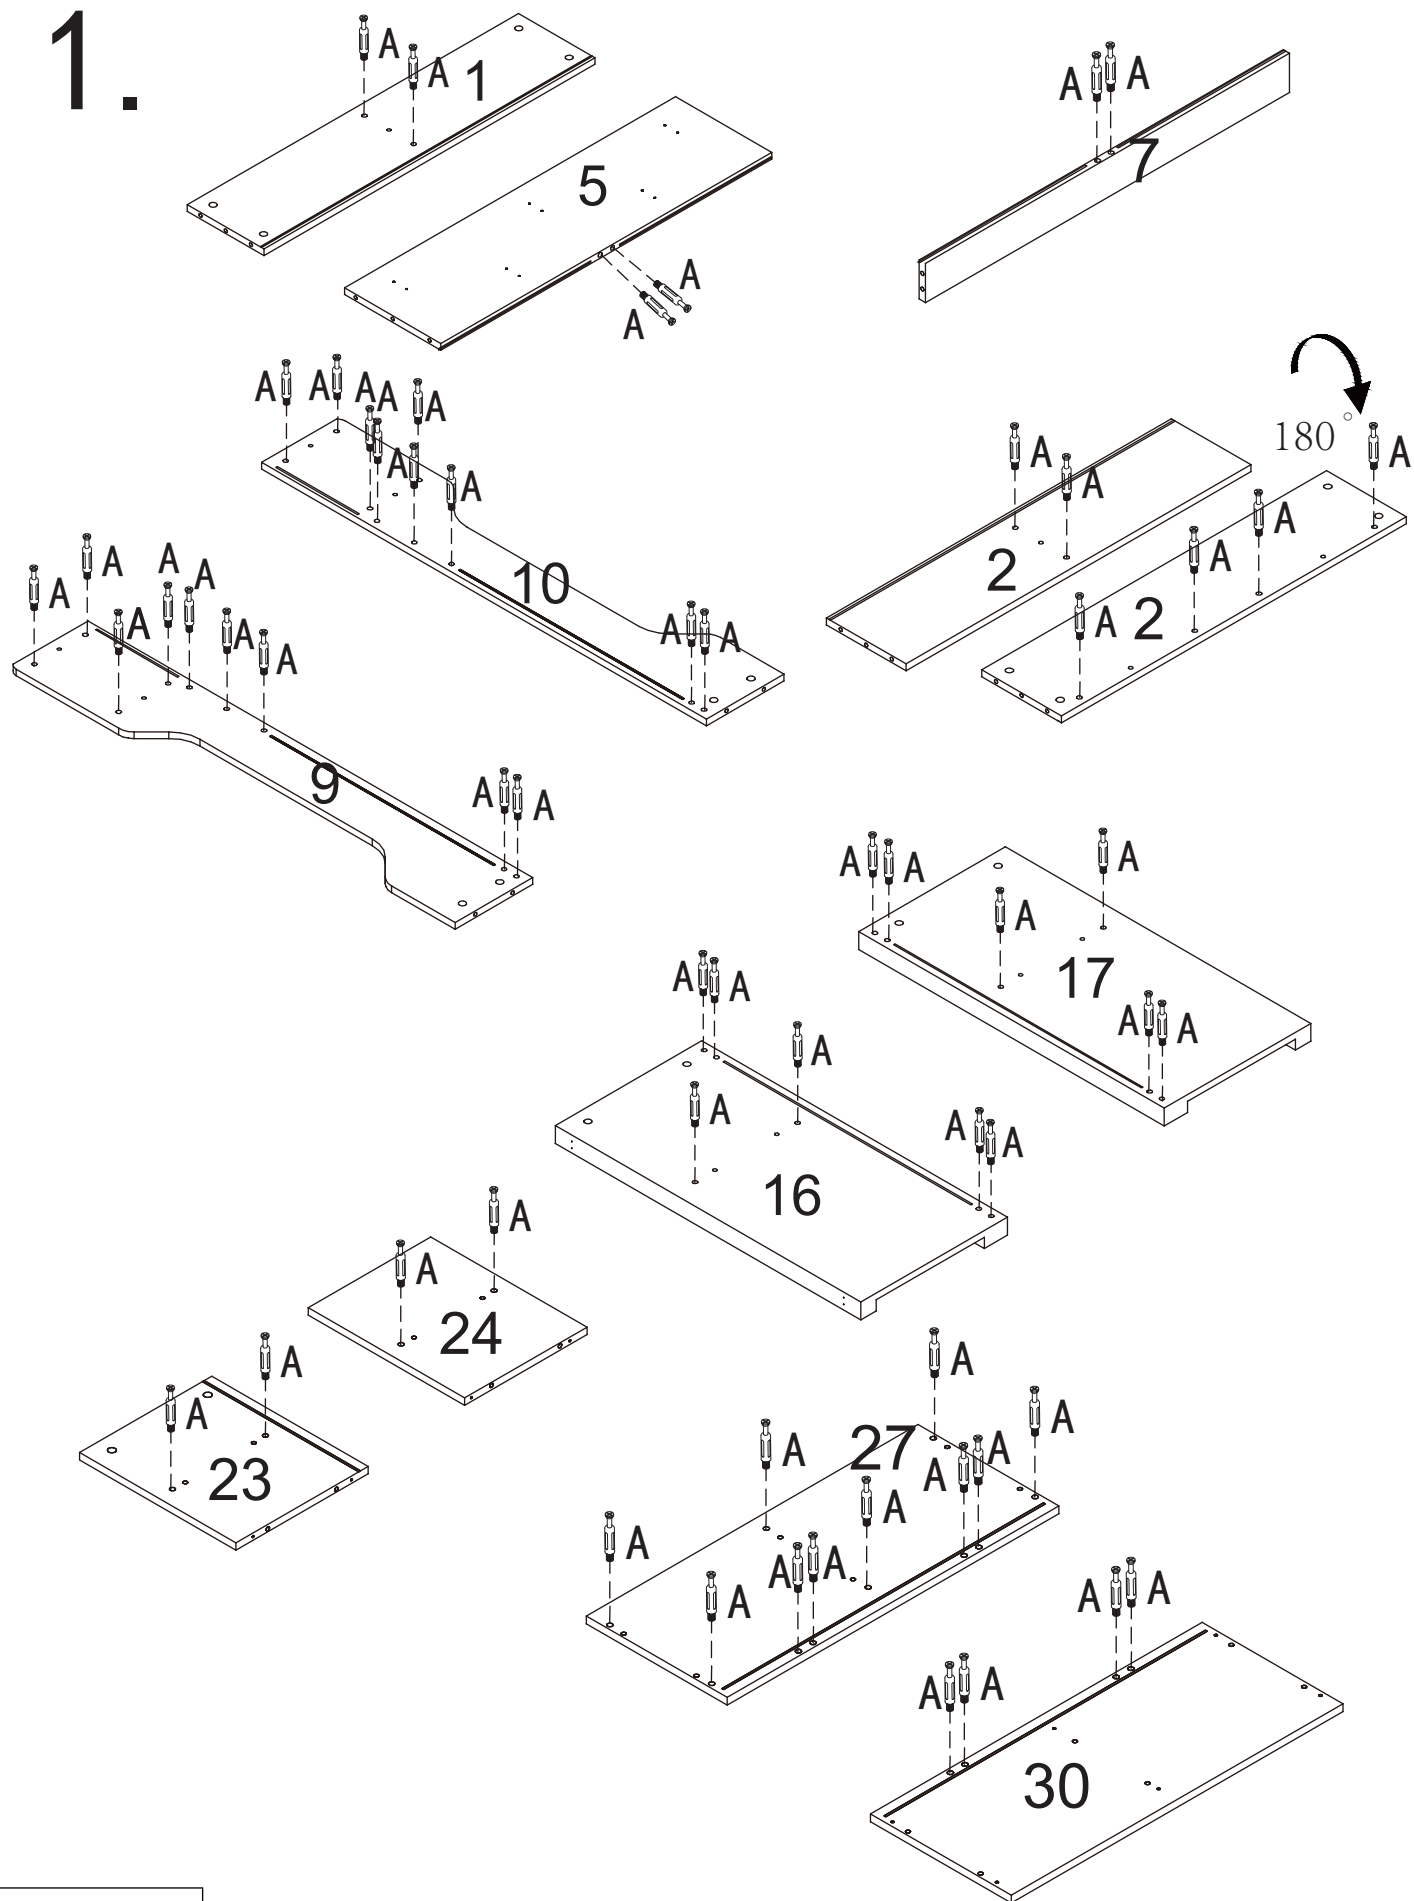


A*60



2.

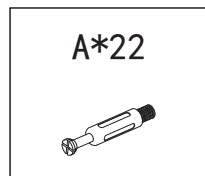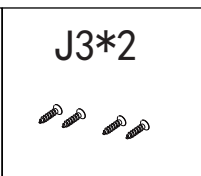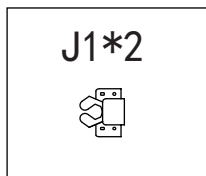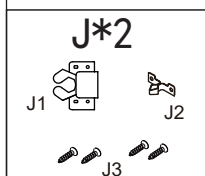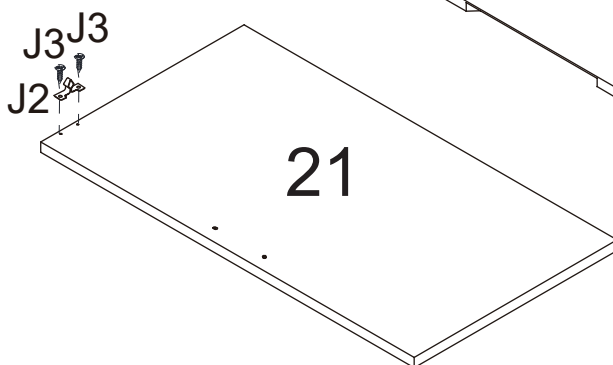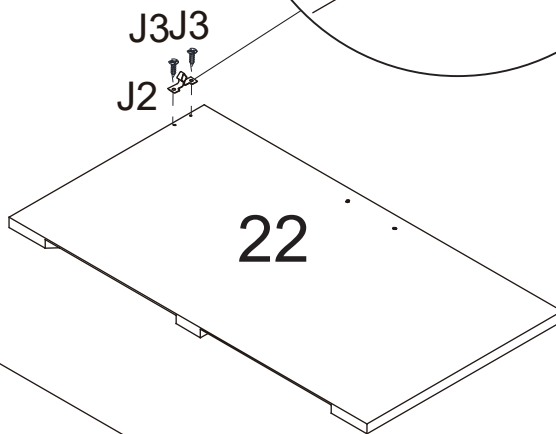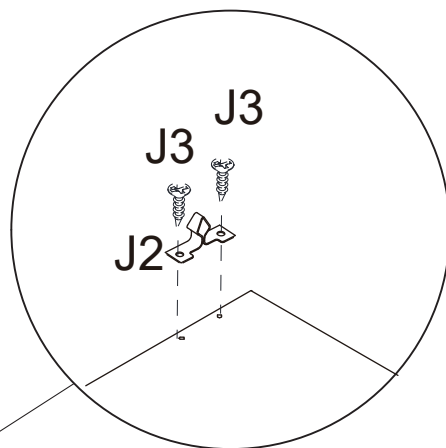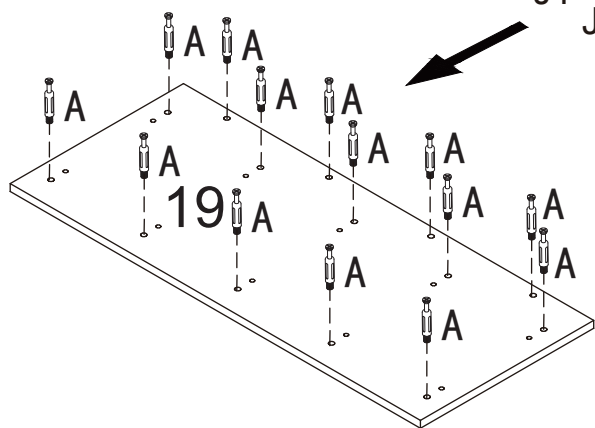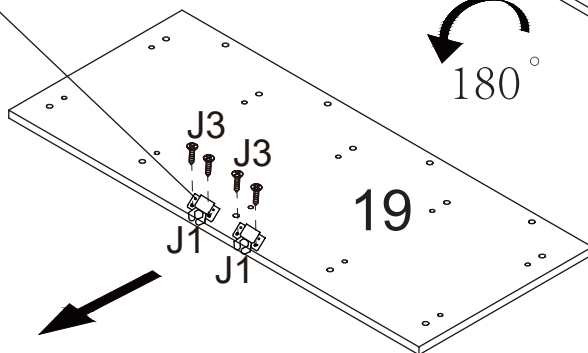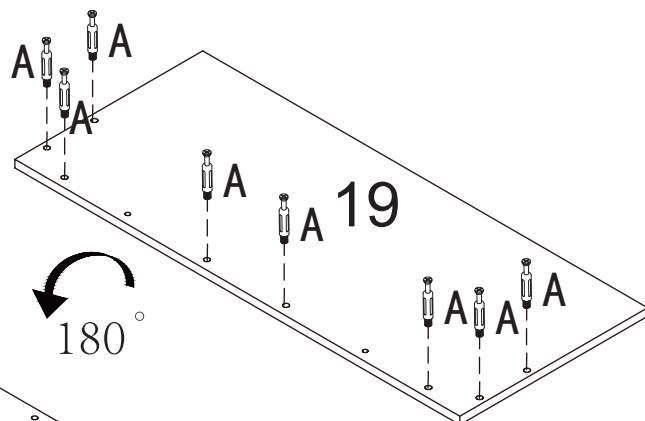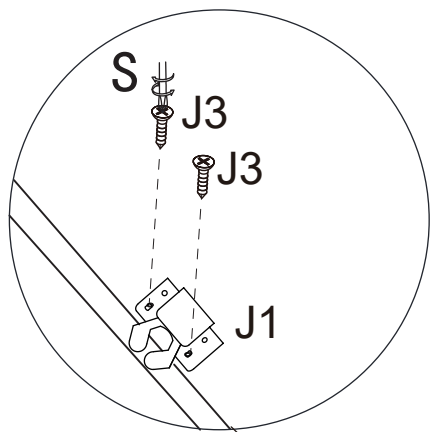

3.

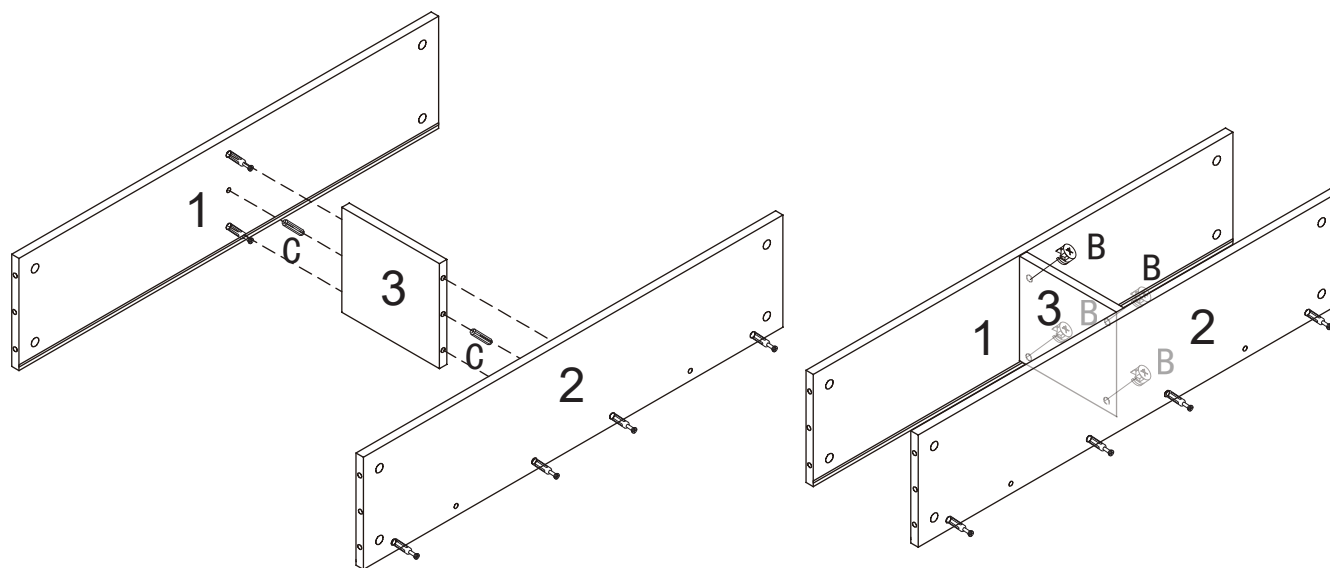

B*4




C*2



Ø 8 x 30 mm

4.

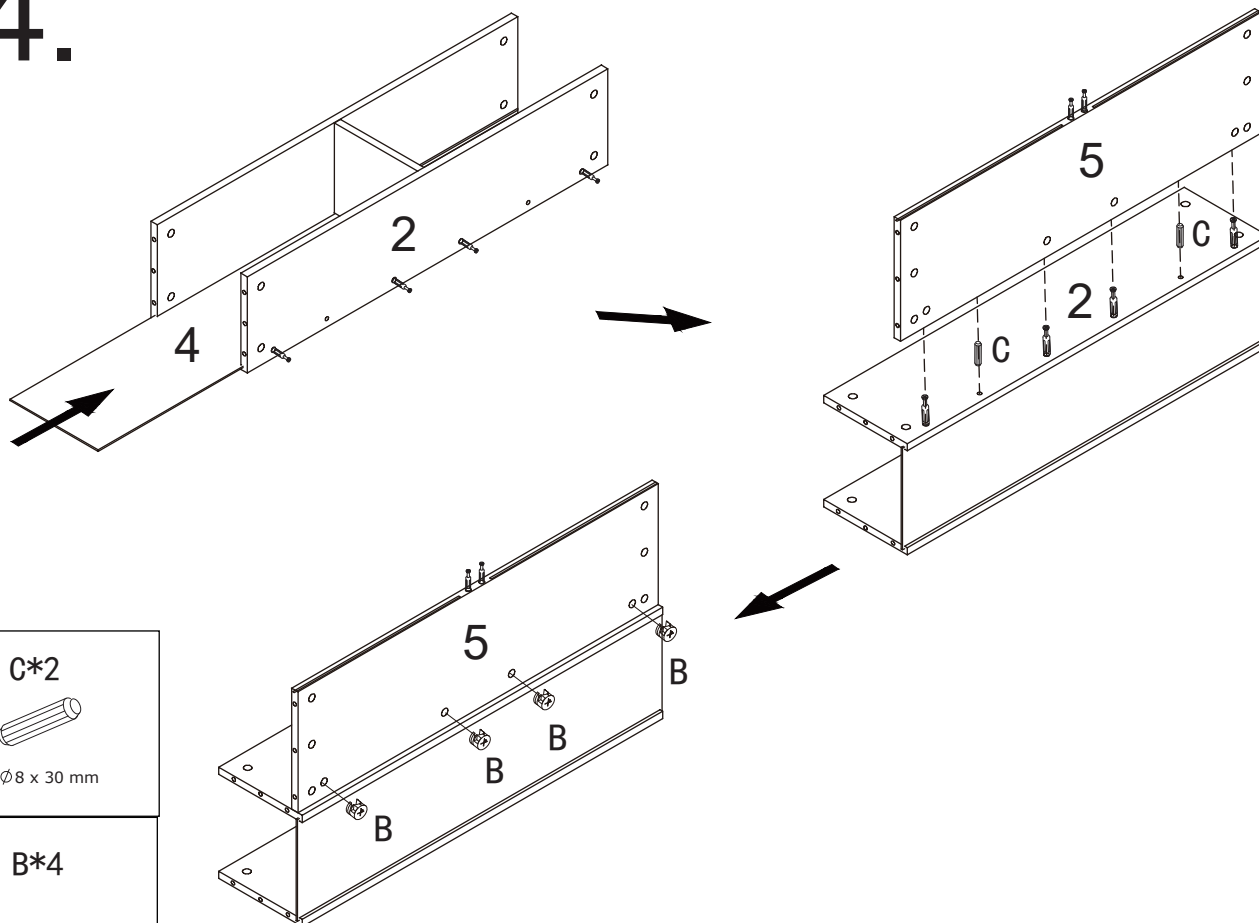

C*2




Ø 8 x 30 mm

B*4




5.

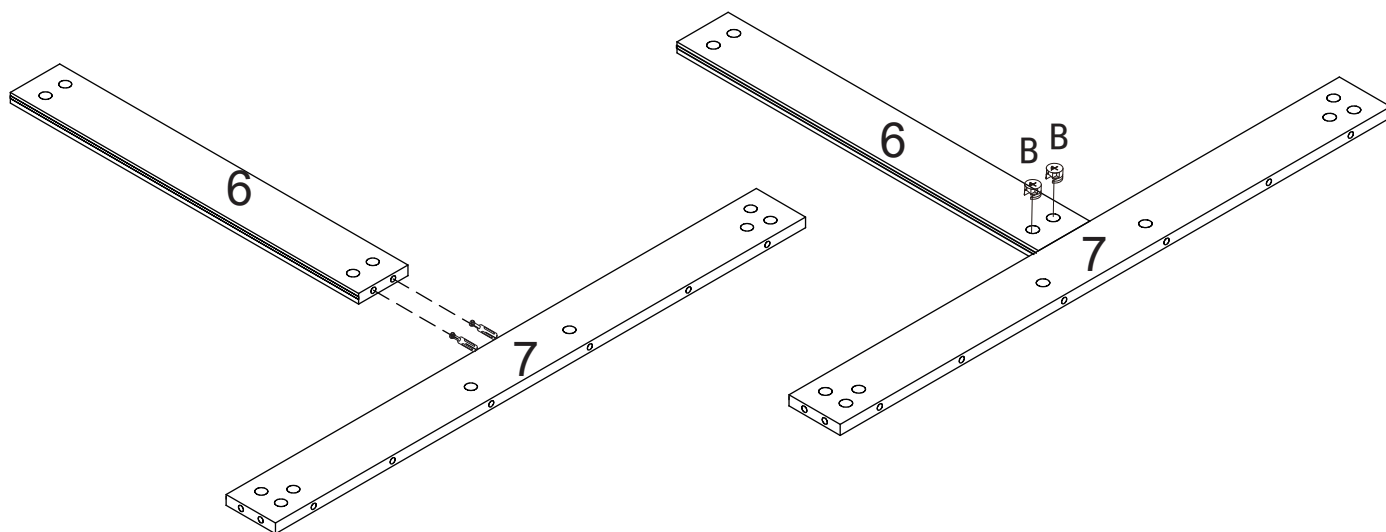

B*2




6.

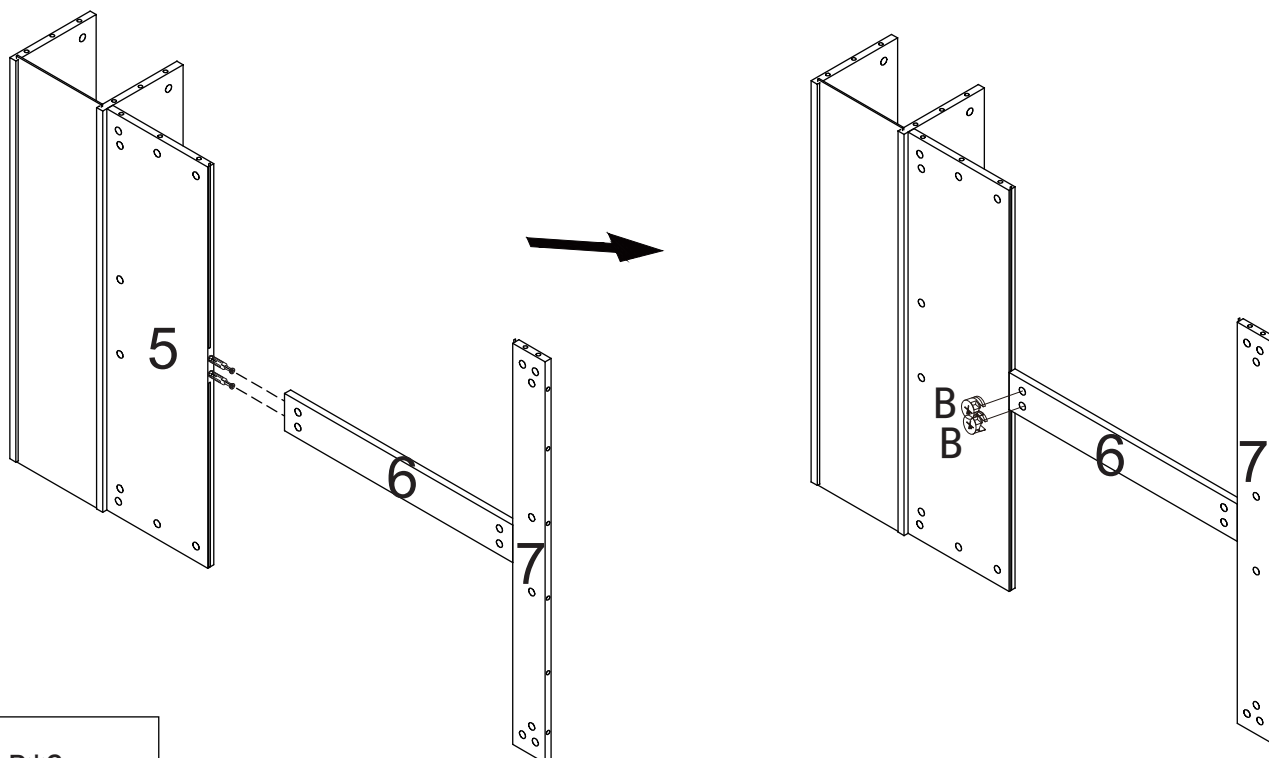


B*2



7.

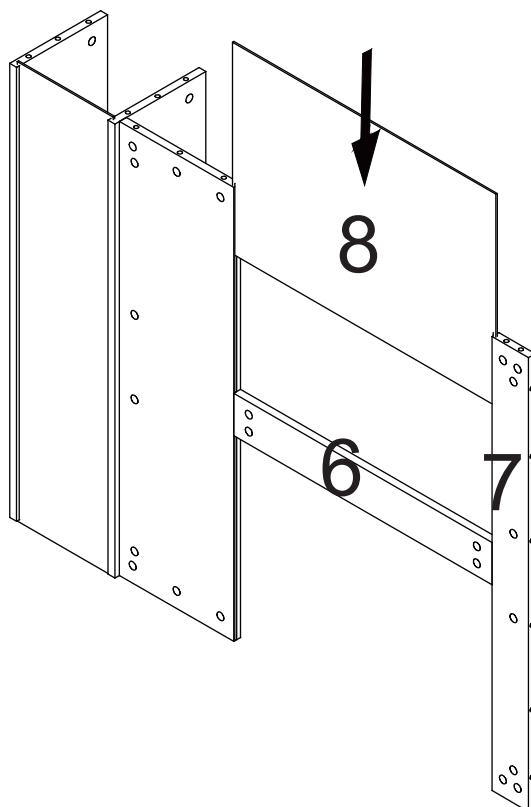

8.

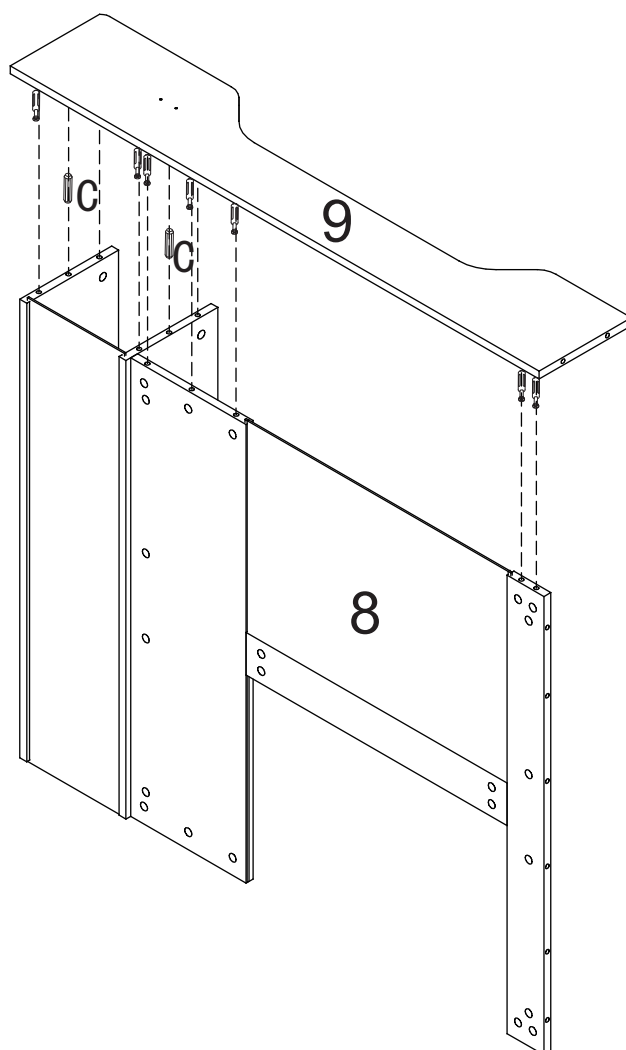


C*2



Ø8 x 30 mm

9.


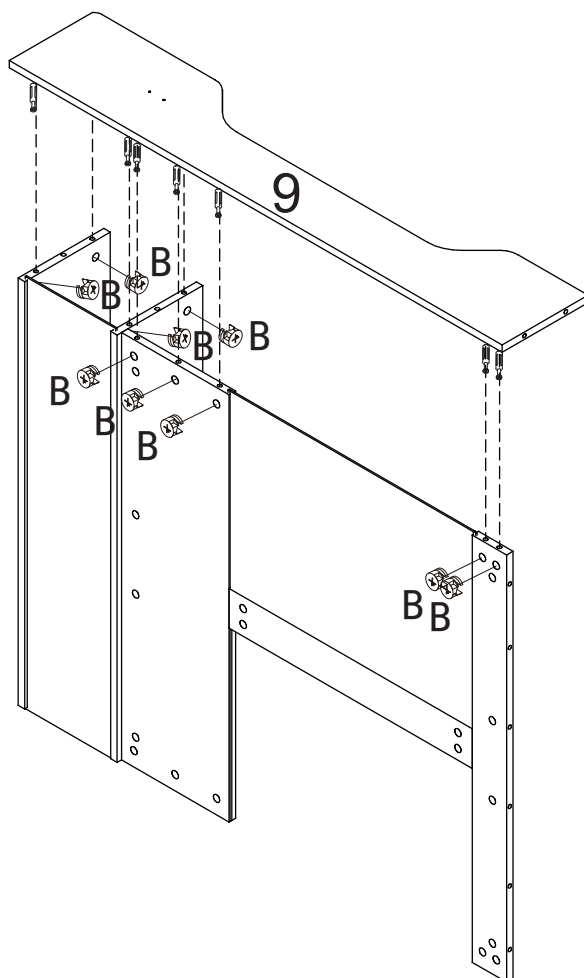


B*9



10.

Please flip carefully
Veuillez retourner avec précaution

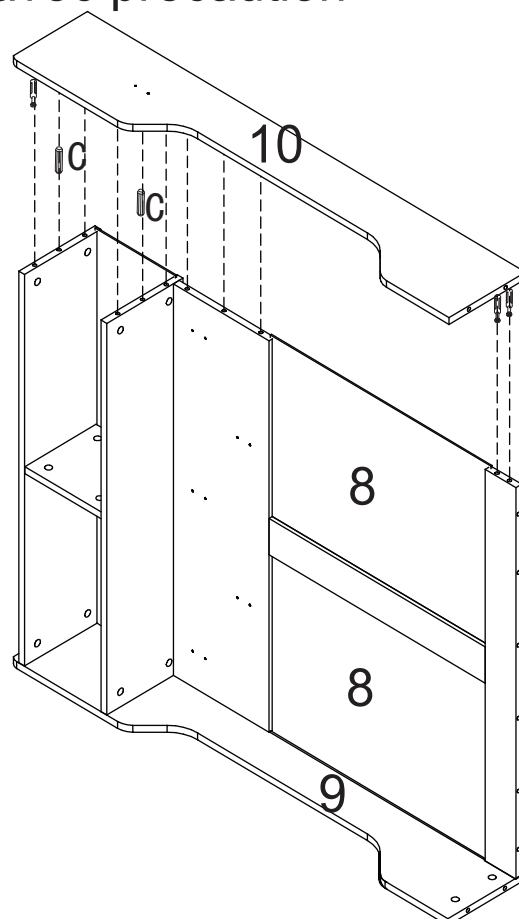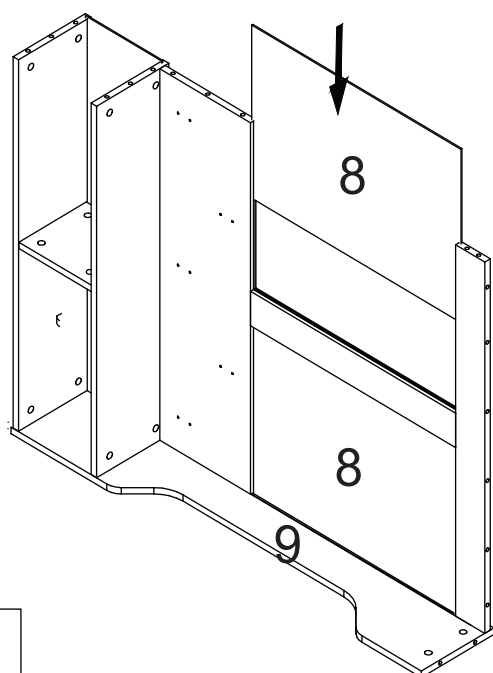


C*2



Ø8 x 30 mm



11.

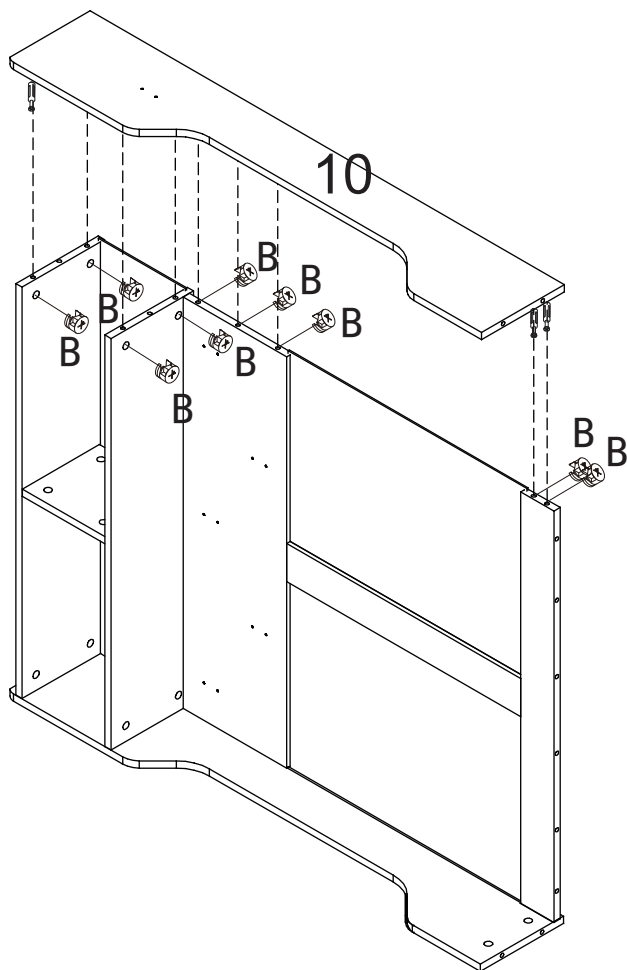

B*9



12.

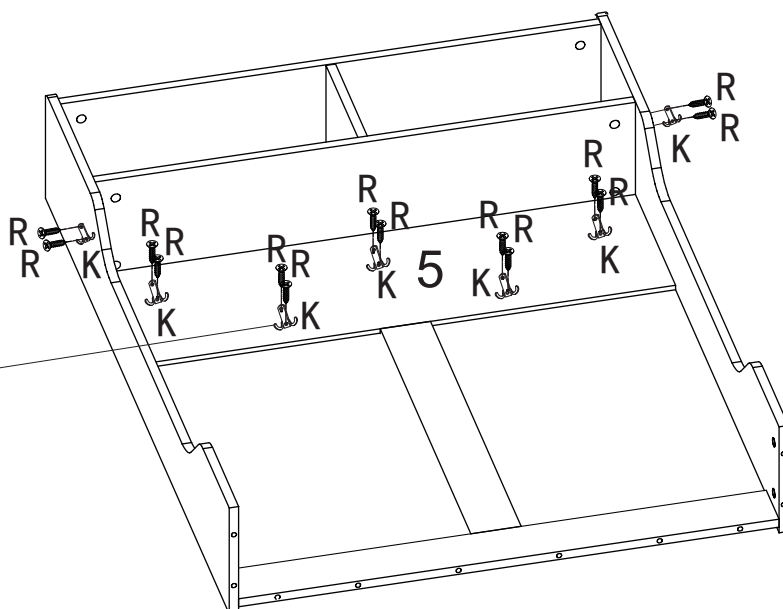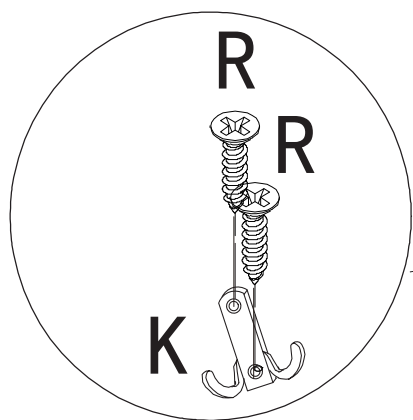

Note the use of black self-tapping R
 Notez l'utilisation de l'autotaraudage noir R

K*7




R*14



Ø 3.5 x 14 mm

13.

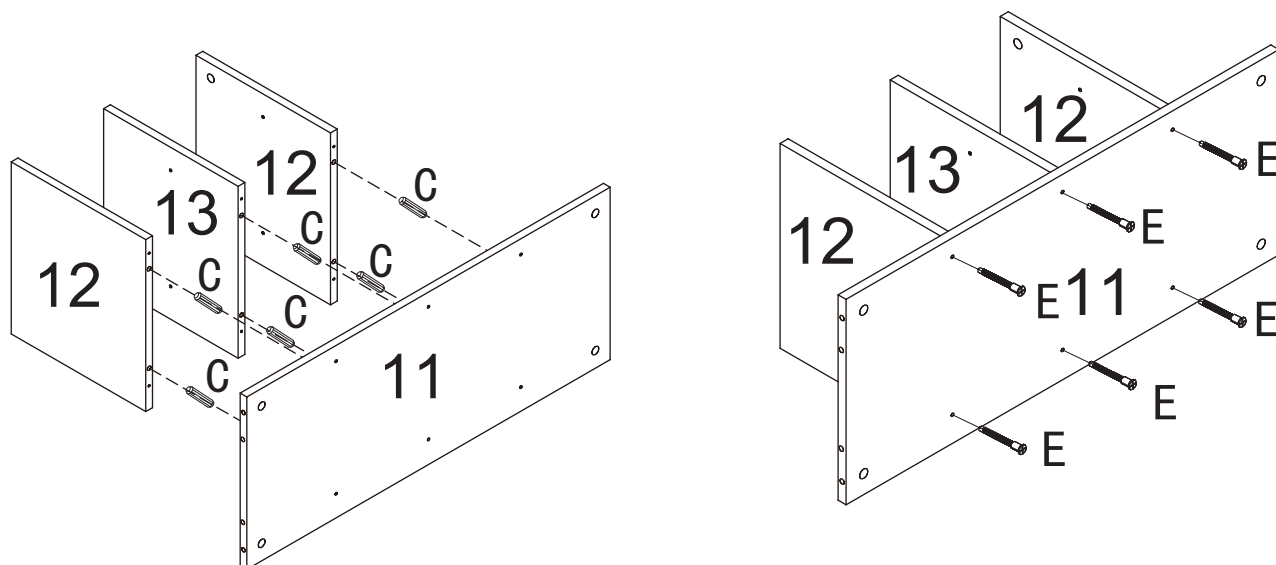

C*6




Ø8 x 30 mm

E*6



Ø5 x 40 mm

14.

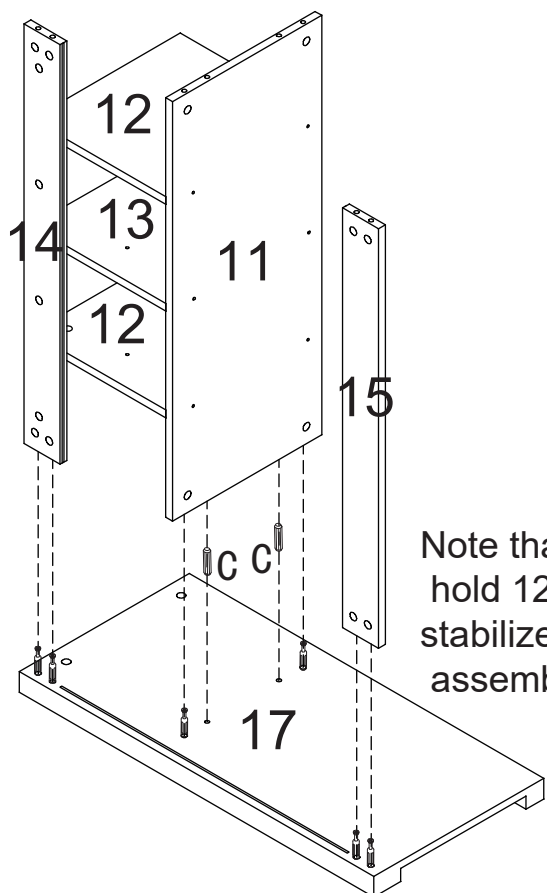

Note that this step requires one person to hold 12 and 13 with their hands to stabilize them, and the other person to assemble them according to the steps


C*2



Ø8 x 30 mm

Notez que cette étape nécessite qu'une personne tienne les 12 et 13 avec ses mains pour les stabiliser, et que l'autre personne les assemble selon les étapes


15.

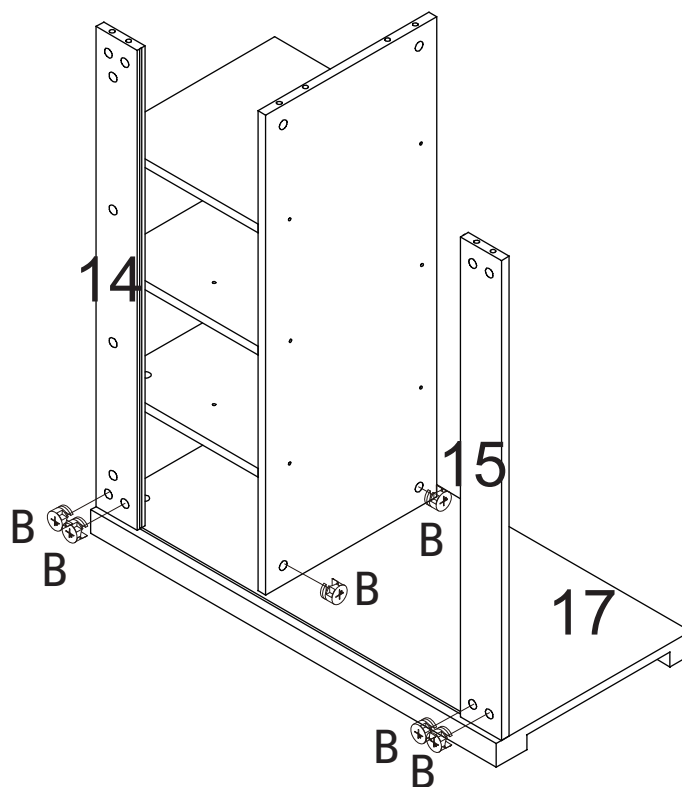


B*6



16.

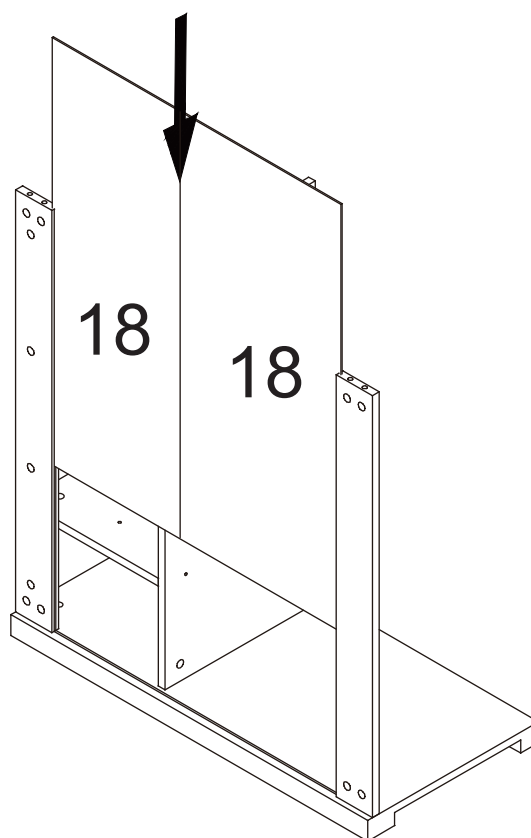

17.

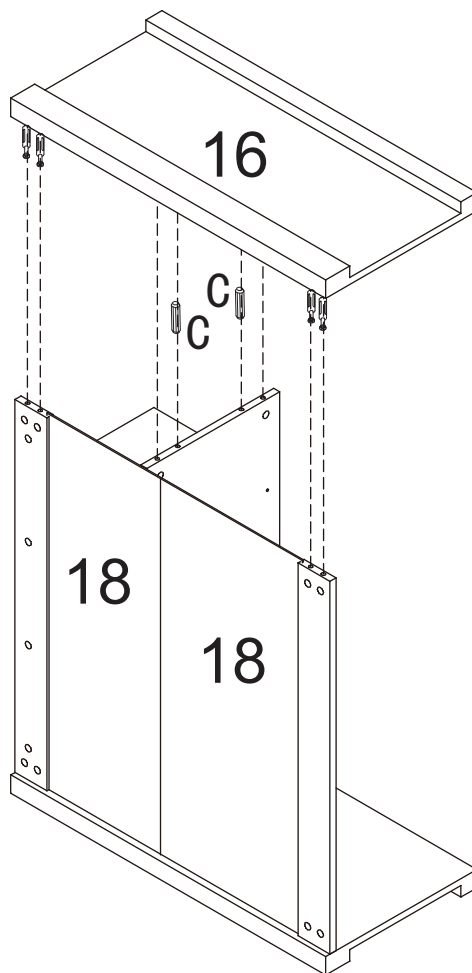


C*2



Ø8 x 30 mm


18.

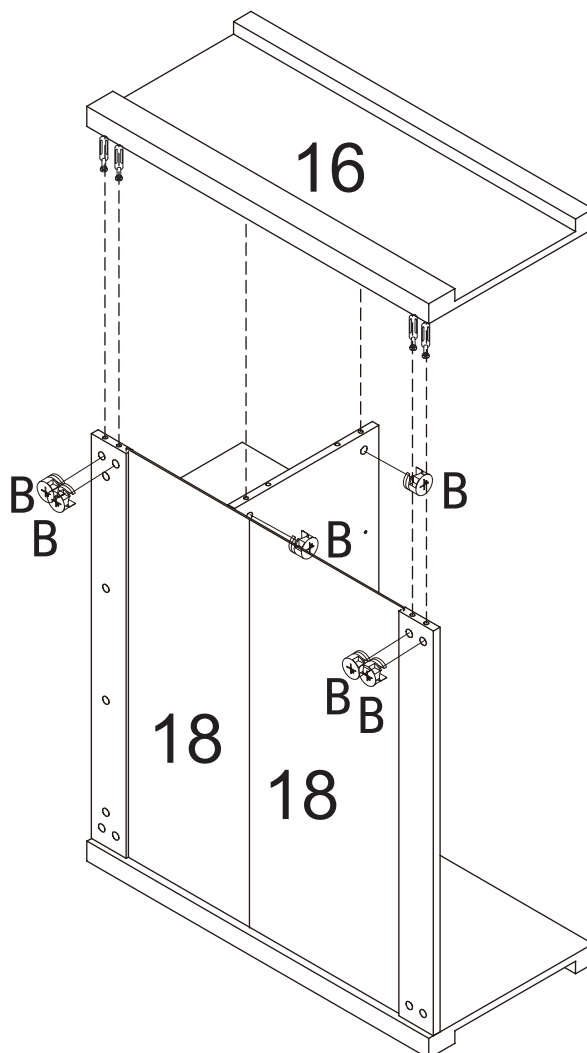

B*6




19.

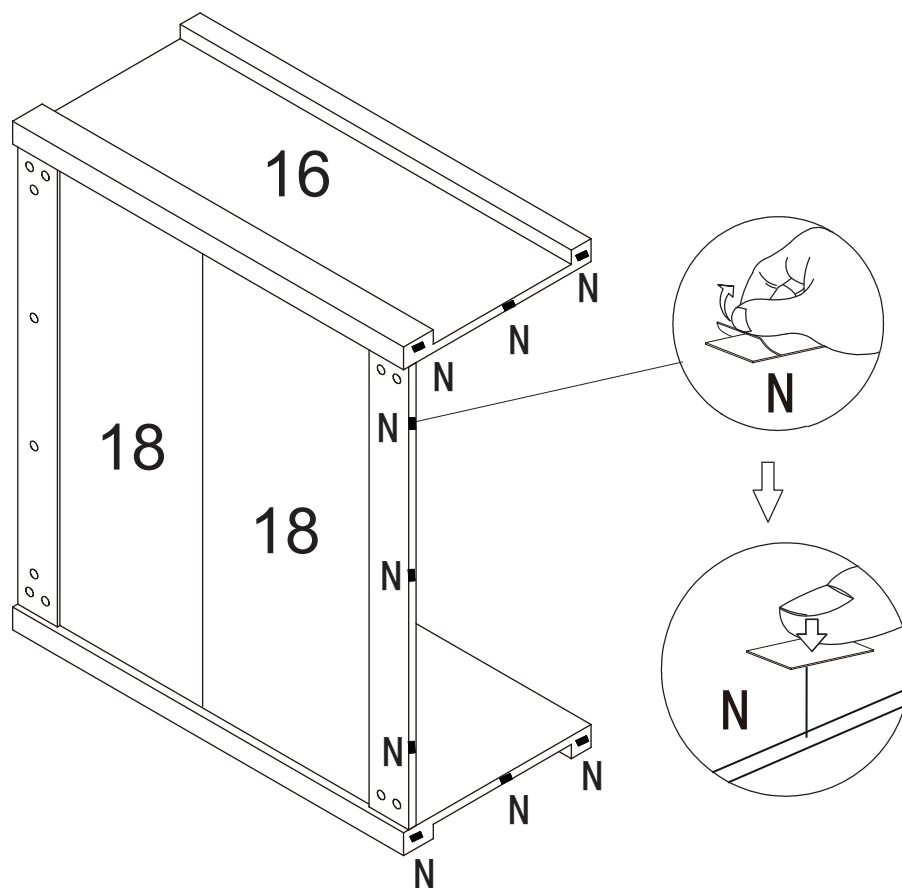

N*9



20.

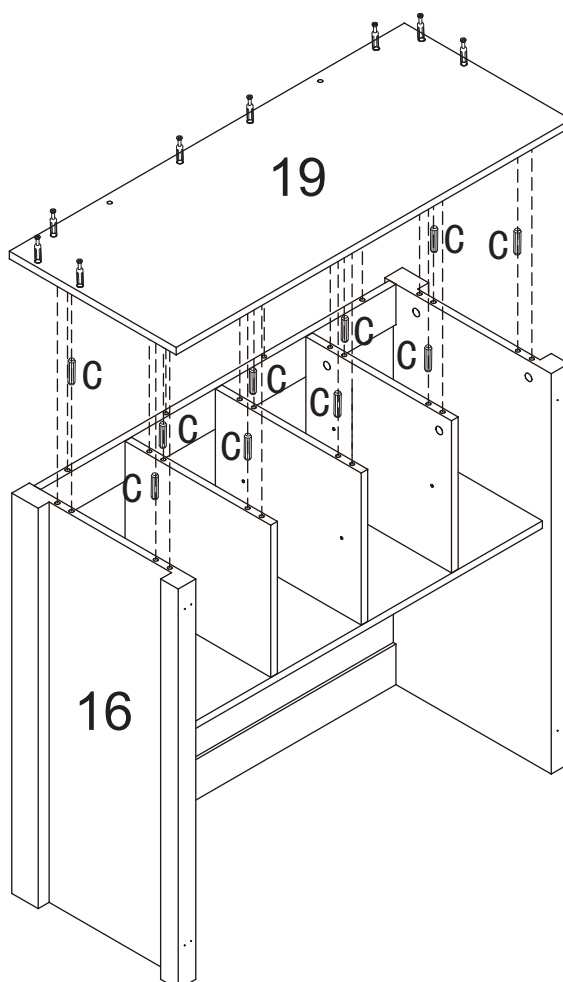


C*10



Ø 8 x 30 mm


21.

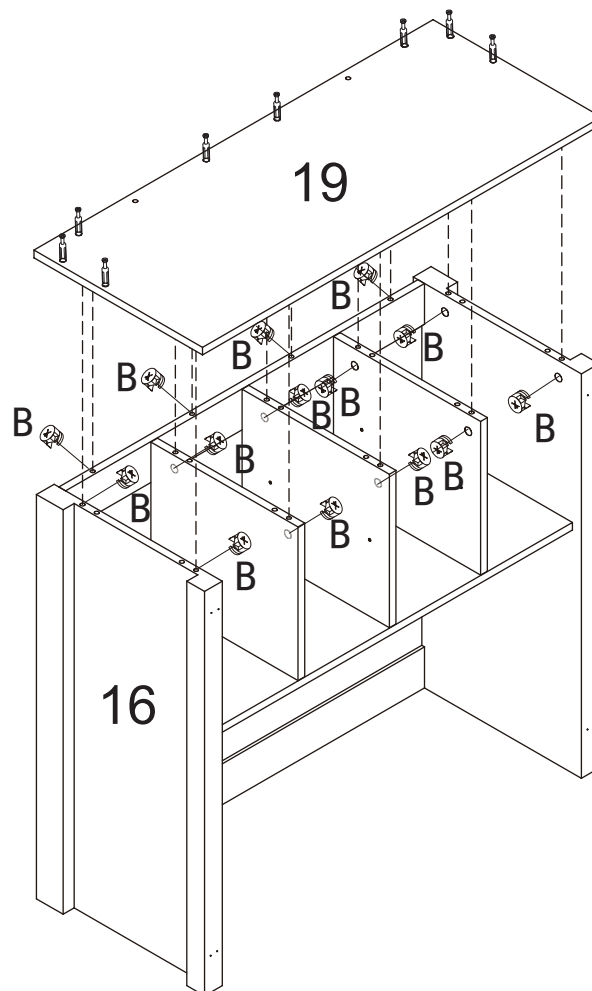

B*14



22.

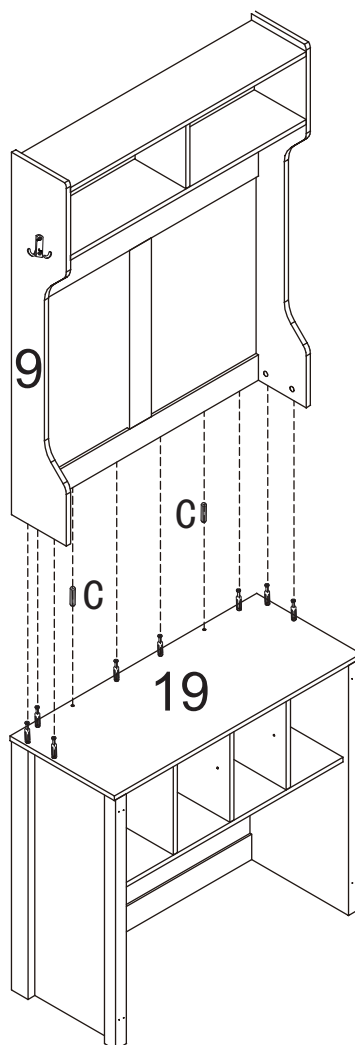


C*2



Ø 8 x 30 mm


23.

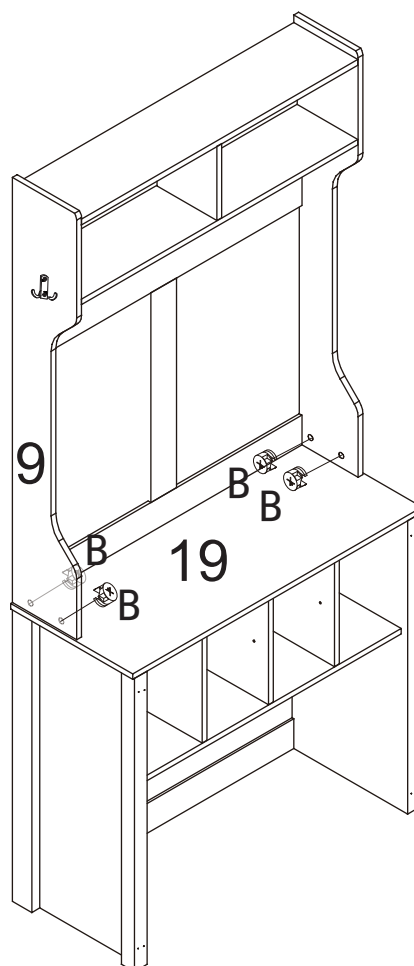

B*4




24.

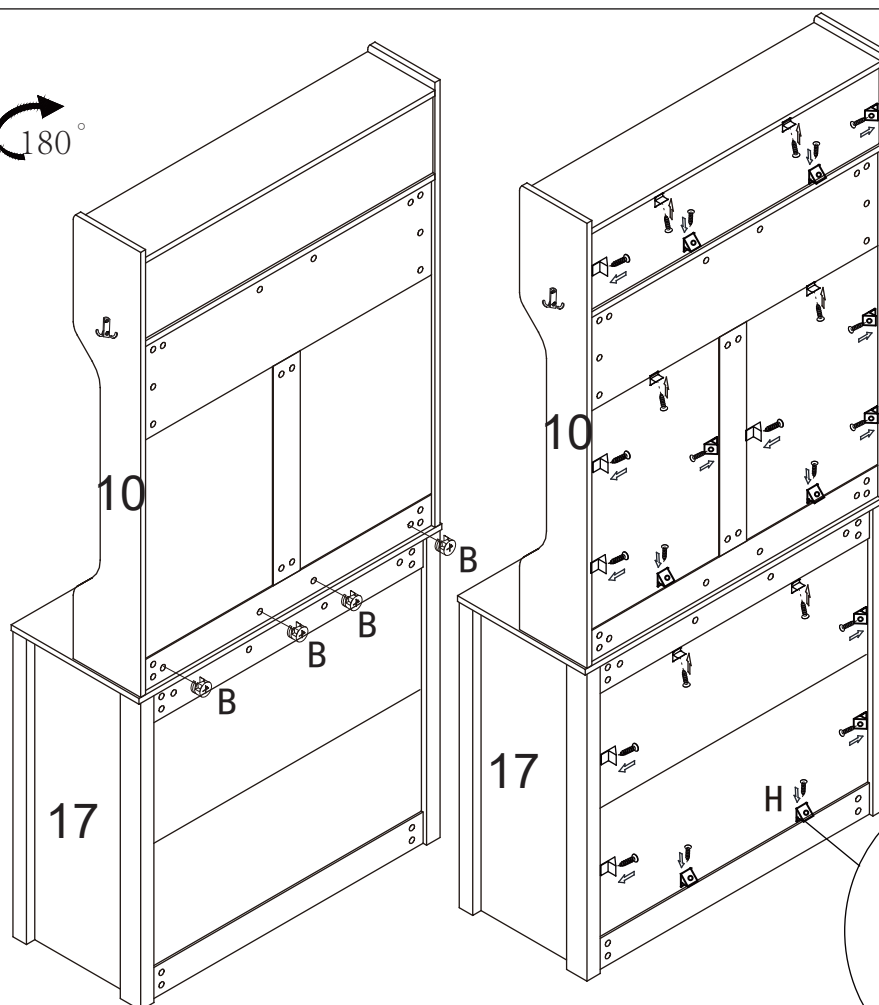


B*4



H*24

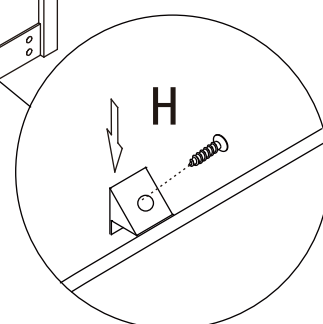

25.

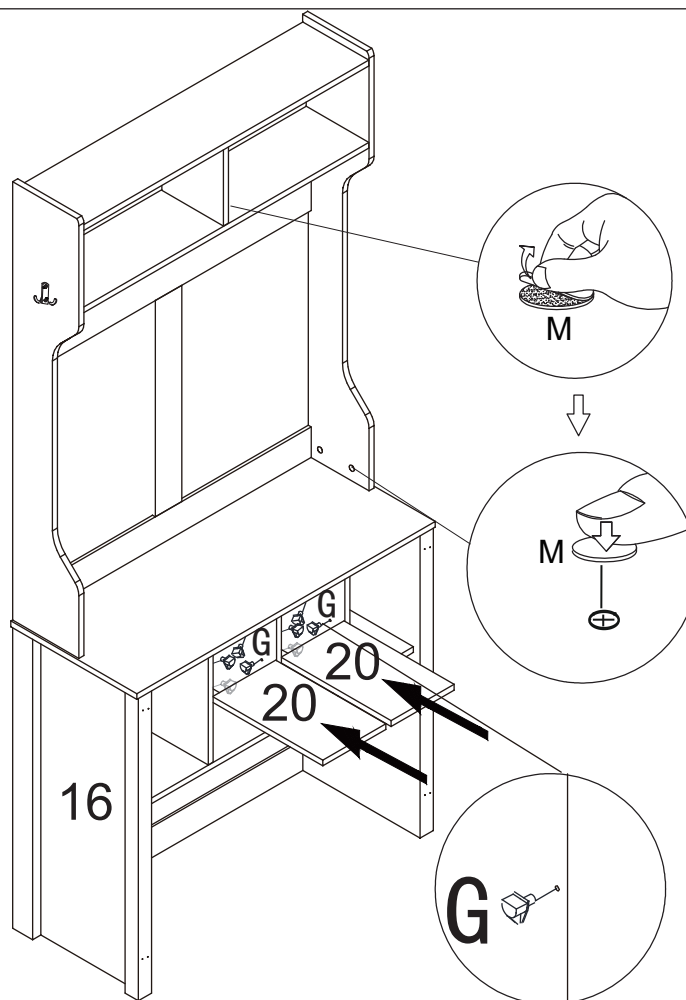


G*8



M*16



26.

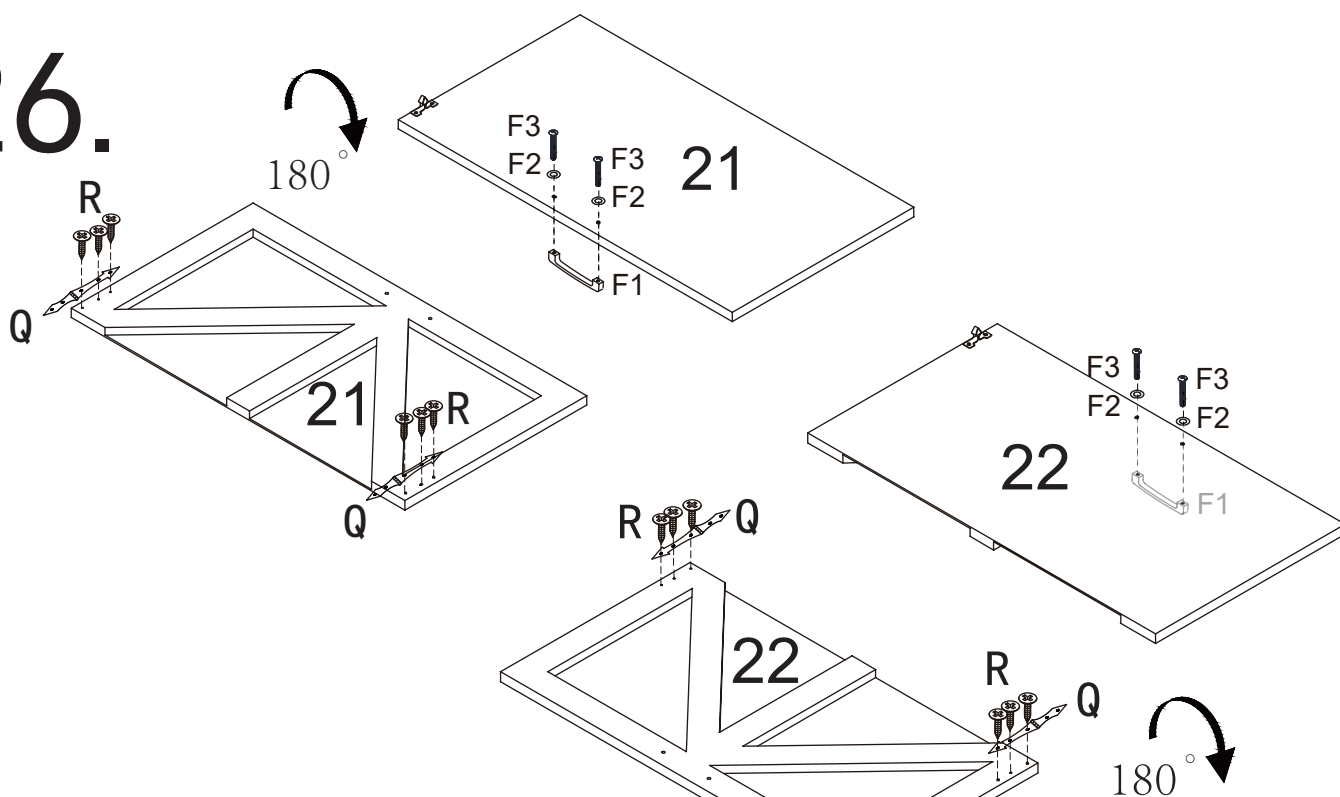

Note the use of black self-tapping R
 Notez l'utilisation de l'autotaraudage noir R

R*12




Ø3.5 x 14 mm

Q*4



F1 F2 F3



F1*2




F2*2



F3*2



27.

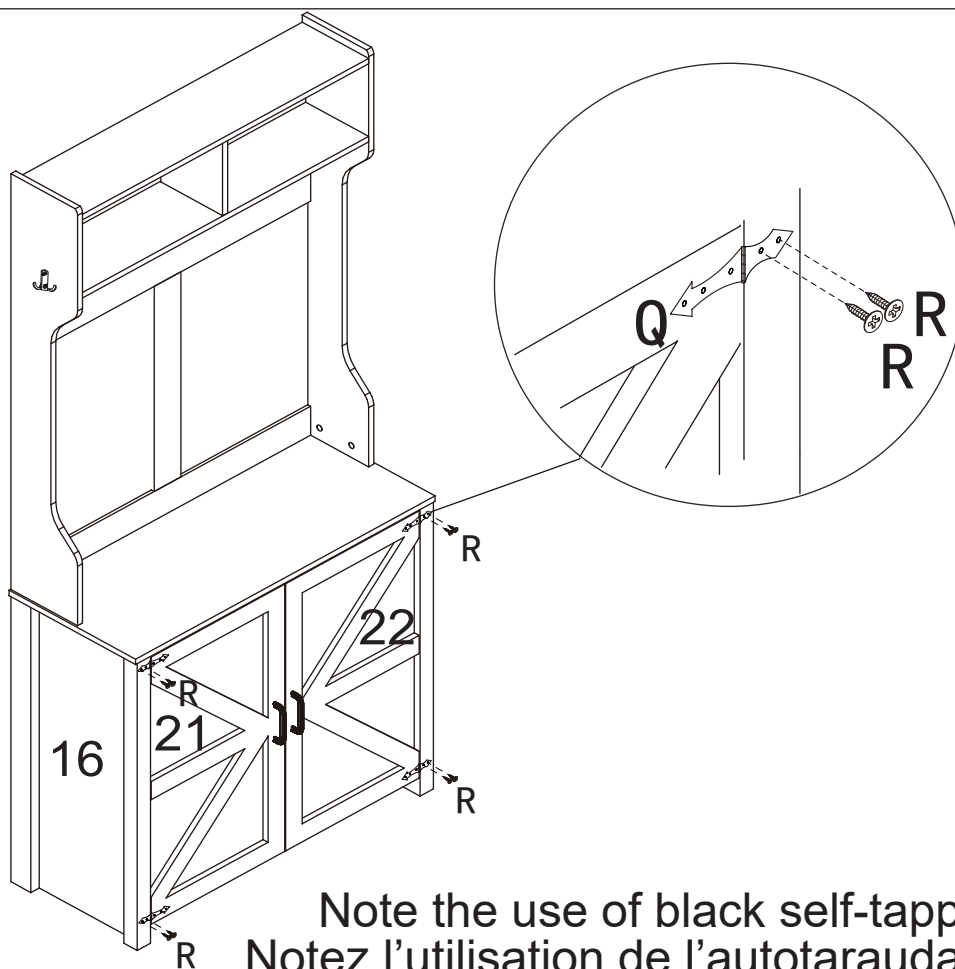


R*8



Ø 3.5 x 14 mm

Note the use of black self-tapping R
Notez l'utilisation de l'autotaraudage noir R

28.

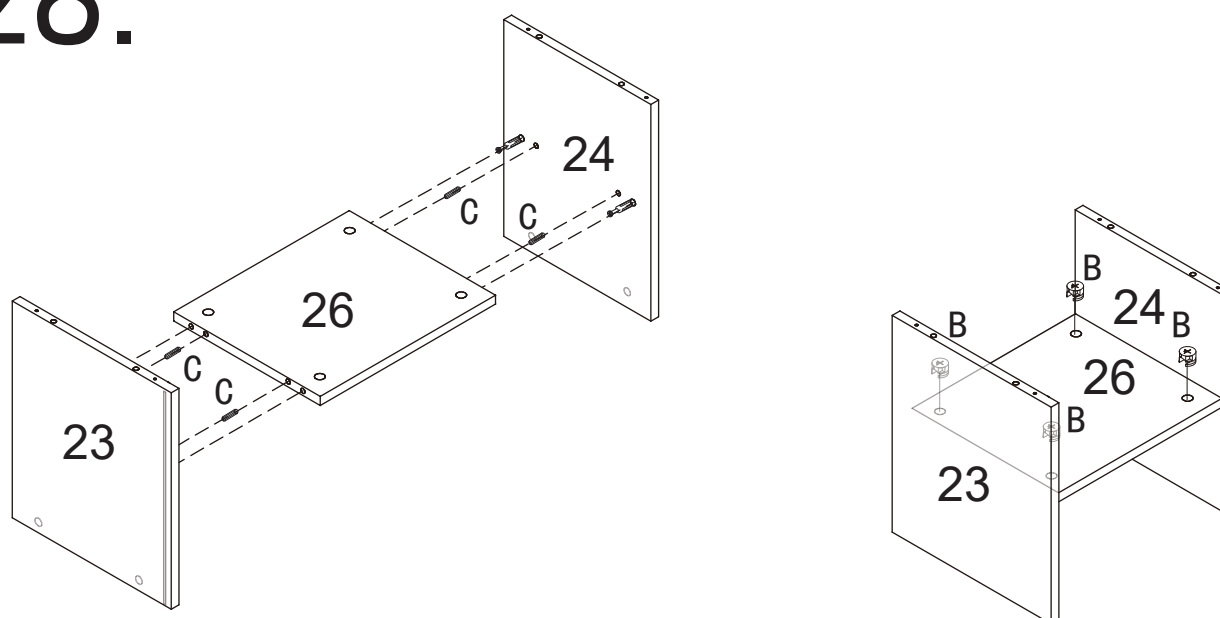

B*4





C*4



Ø 8 x 30 mm

29.

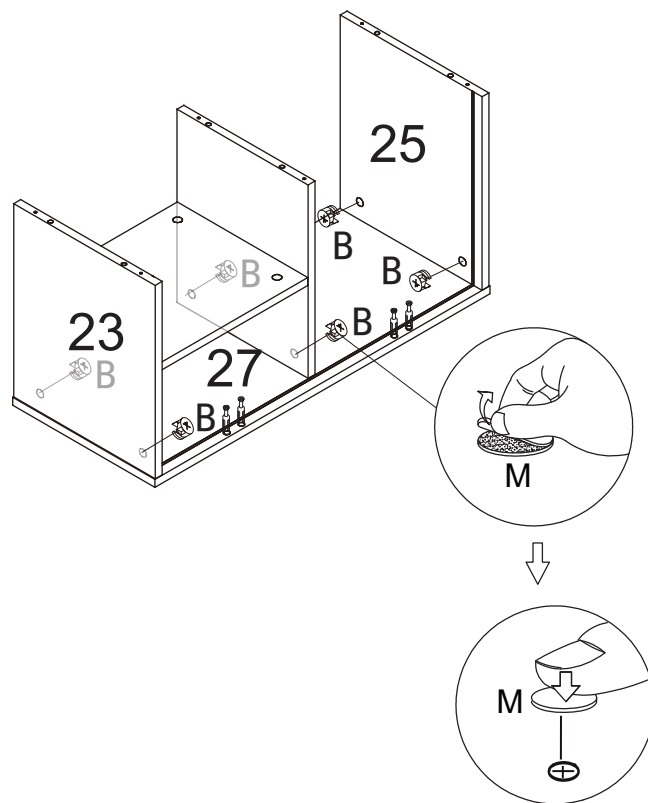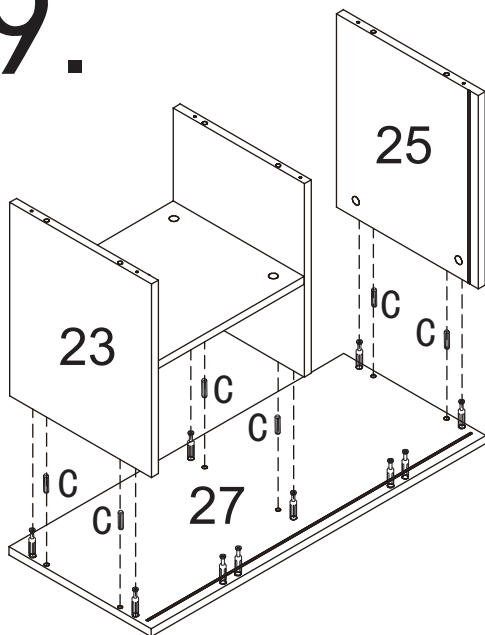

B*6



C*6





Ø 8 x 30 mm

M*6





30.

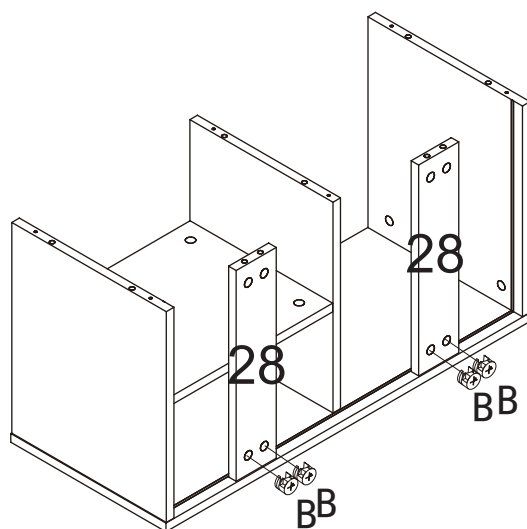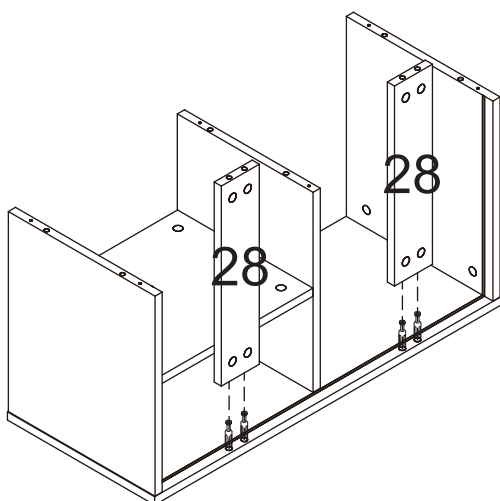

B*4



31.


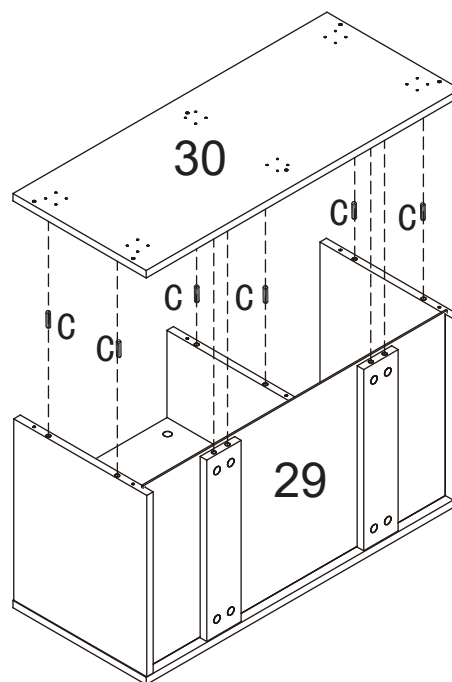
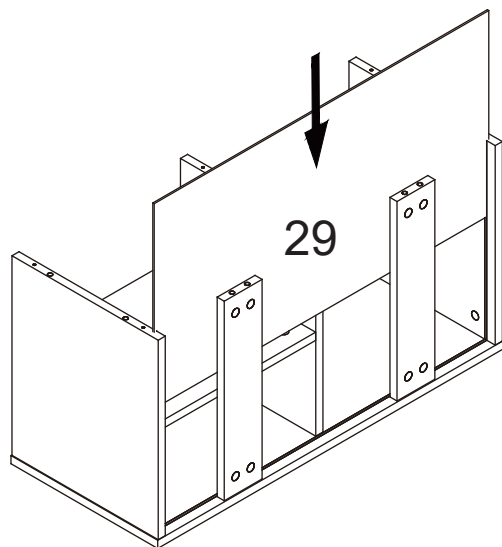


C*6




Ø8 x 30 mm

32.

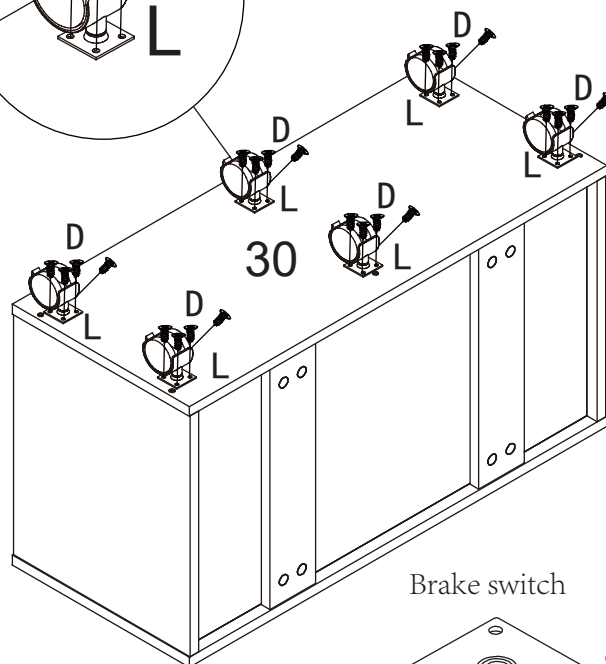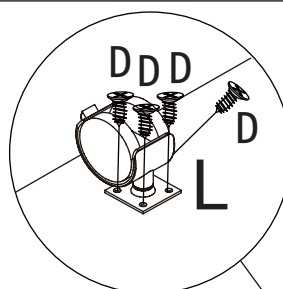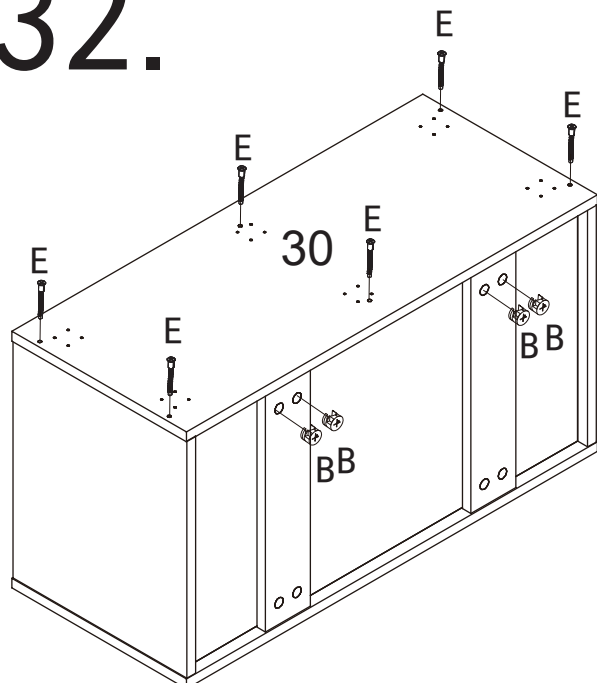

Brake switch

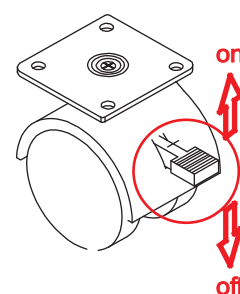

E*6



Ø5 x 40 mm

D*24



Ø3.5 x 14 mm



L*6



B*4







33.

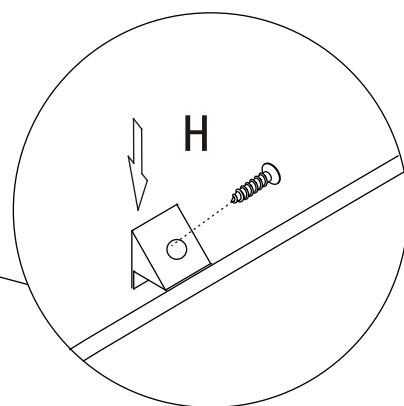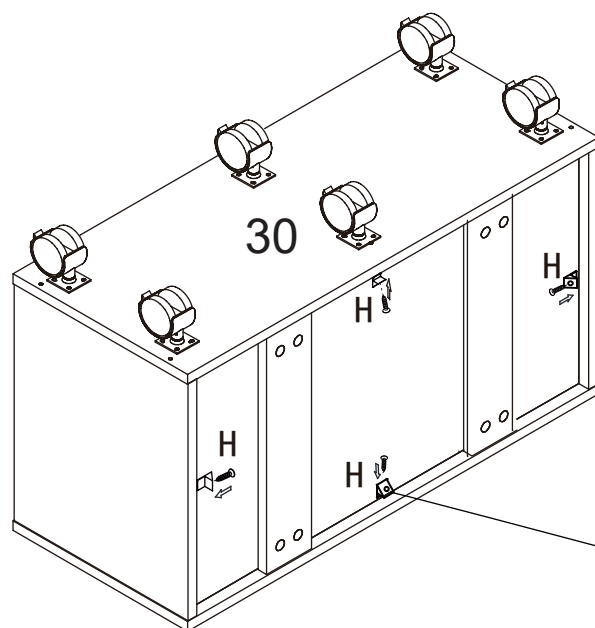


H*4




34.

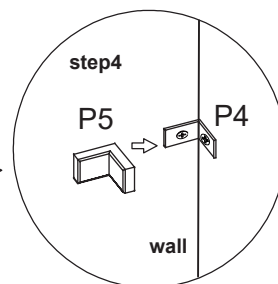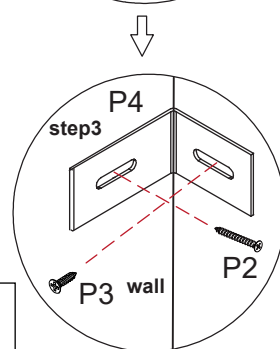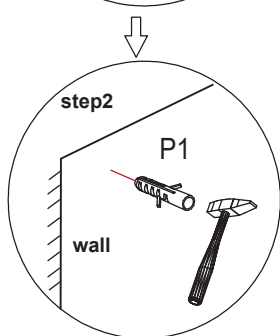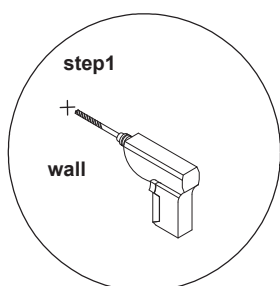

P

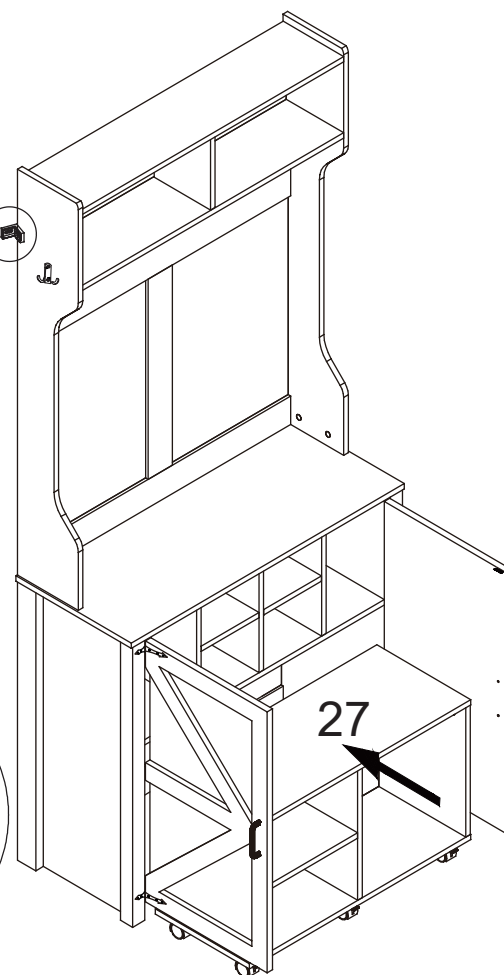

P*2

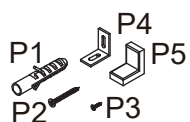

35.

