






KJW.A076 Assembly Manual

Accent Chair

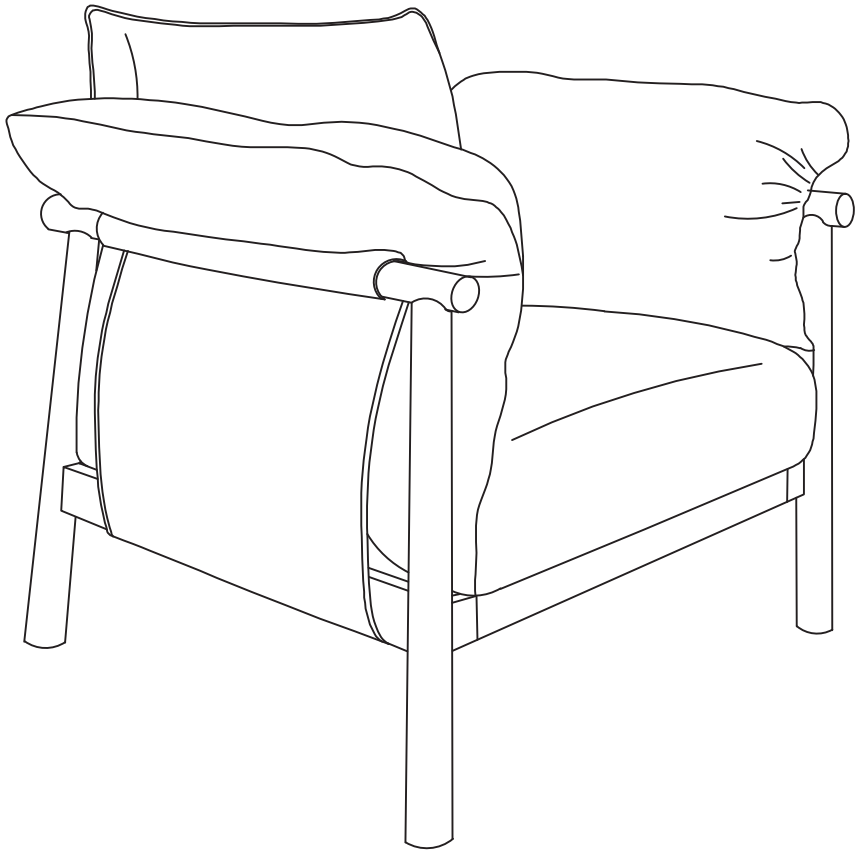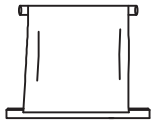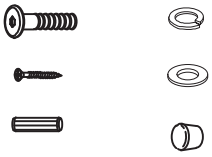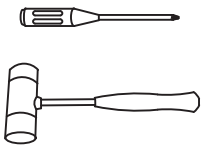


⚠ CAUTION


THIS ASSEMBLY MANUAL CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.

A x 1  Left Arm Frame	B x 1  Right Arm Frame	C x 1  Back Frame	D x 1  Front Rail
E x 1  Left Arm Cushion	F x 1  Right Arm Cushion	G x 1  Seat Cushion	H x 1  Back Cushion
H1 x 8  M6 x 50mm JCBC Bolt	H2 x 8  5/16" Lock Washer	H3 x 4  1/4" x 19mm Flat Washer	H4 x 2  M8 x 30mm Wood Dowel
H5 x 1  M4 Allen Wrench	H6 x 1  1/4" Allen Wrench	H7 x 2  M4x 25mm CSK Screw	H8 x 4  Wooden Plug
 Extra Hardware	 Not Included		


1. Open the bottom fabric underneath the Seat Cushion (G) to take out the Back Cushion (H).

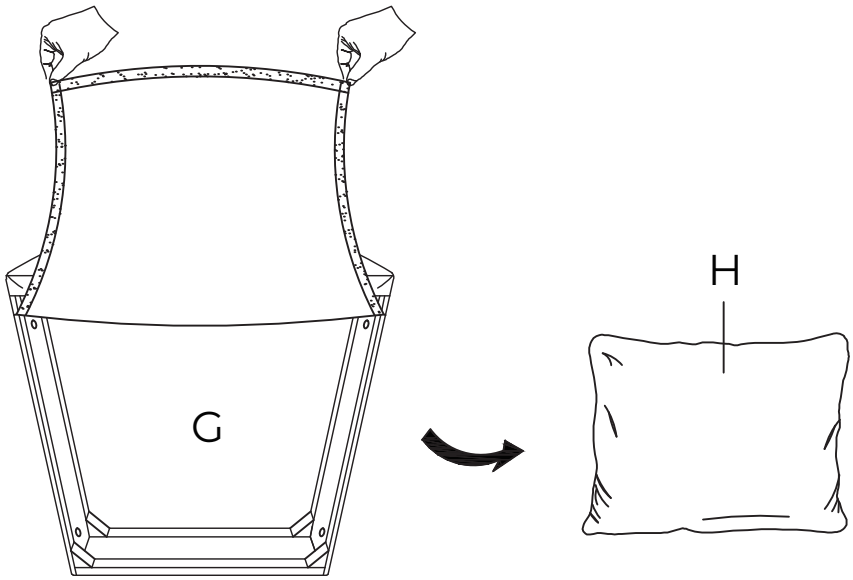

2. Attach the Velcro on Left Arm Cushion (E) to the Left Arm Frame (A) and Right Arm Cushion (F) to the Right Arm Frame (B)

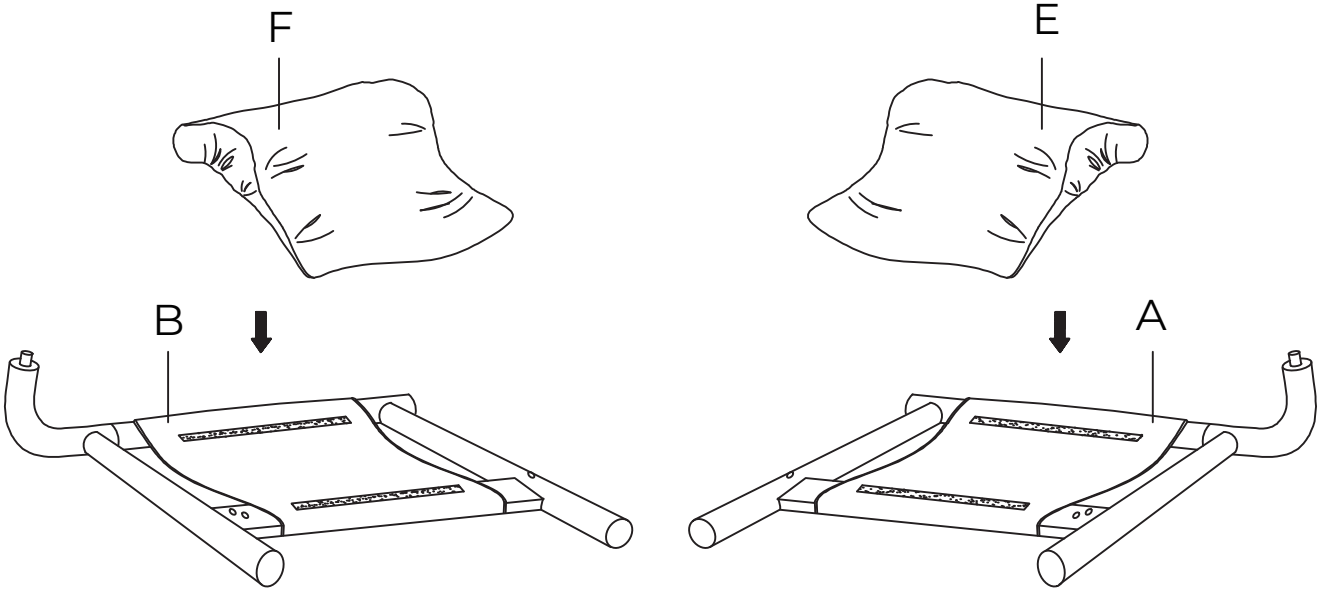


3 Attach the Left Arm Frame (A) to Seat Cushion (G), using Flat Washers (H3), Lock Washers (H2), JCBC Bolts (H1) and Allen Wrench (H5).
Do not fully tighten yet.
Note : Please pay attention to the Front Sticker.

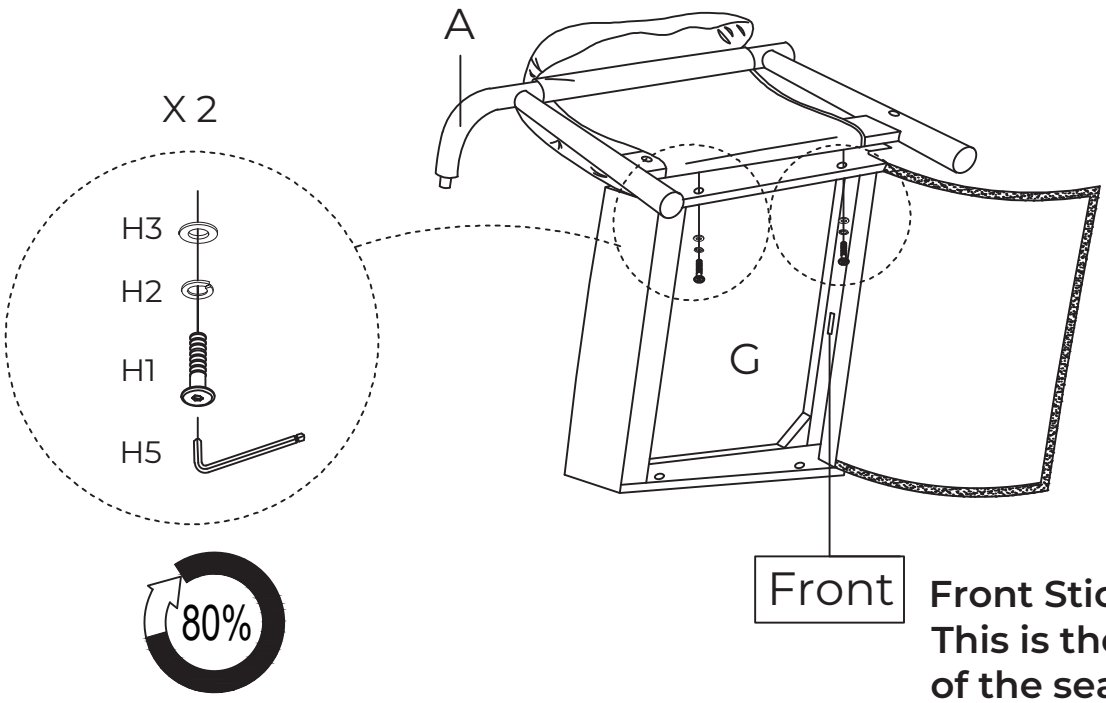


Front Sticker :
This is the front side of the seat.


4 Attach the Front Rail (D) to the Left Arm Frame (A), using Lock Washer (H2), JCBC Bolt (H1) and Allen Wrench (H5).
Do not fully tighten yet.

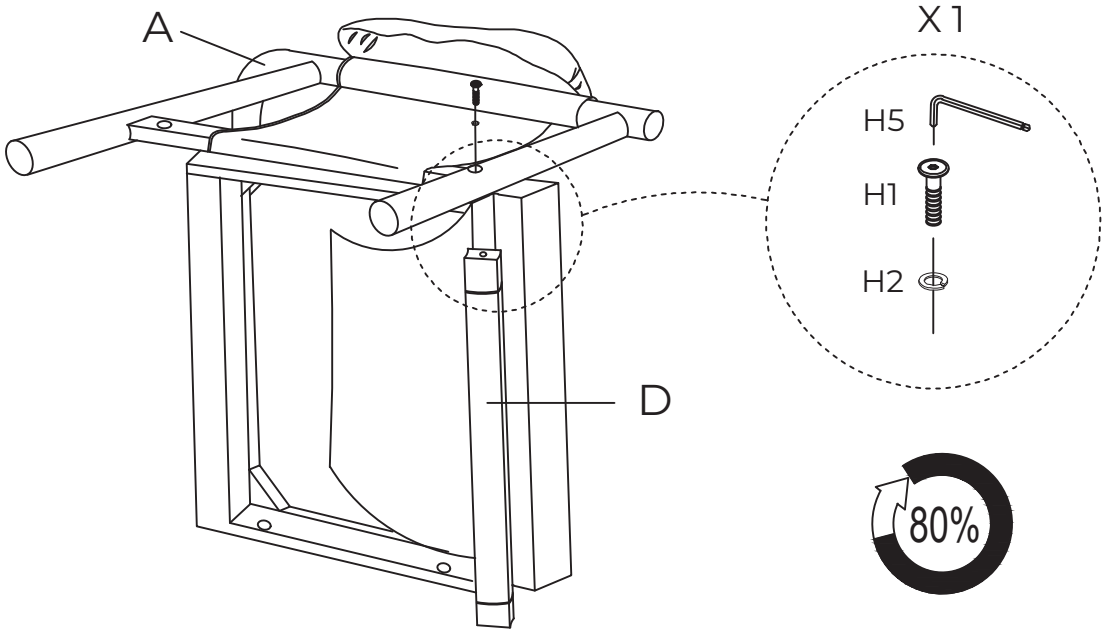


5 Insert Wood Dowels (H4) to the Back Frame (C).

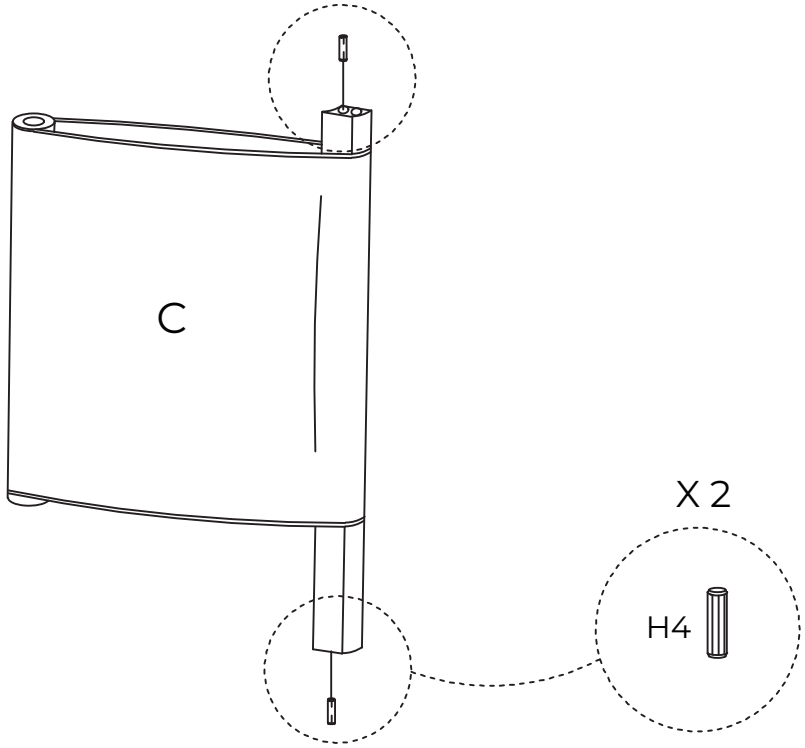


6 Attach the upper side of the Back Frame (C) to the upper side of the Left Arm Frame (A) as indicated below (Step 1). Attach the bottom side of the Back Frame (C) to the bottom side of the Left Arm Frame (A), using Lock Washer (H2) , JCBC Bolt (H1) and Allen Wrench(H5) as indicated below (Step 2). **Do not fully tighten yet.**

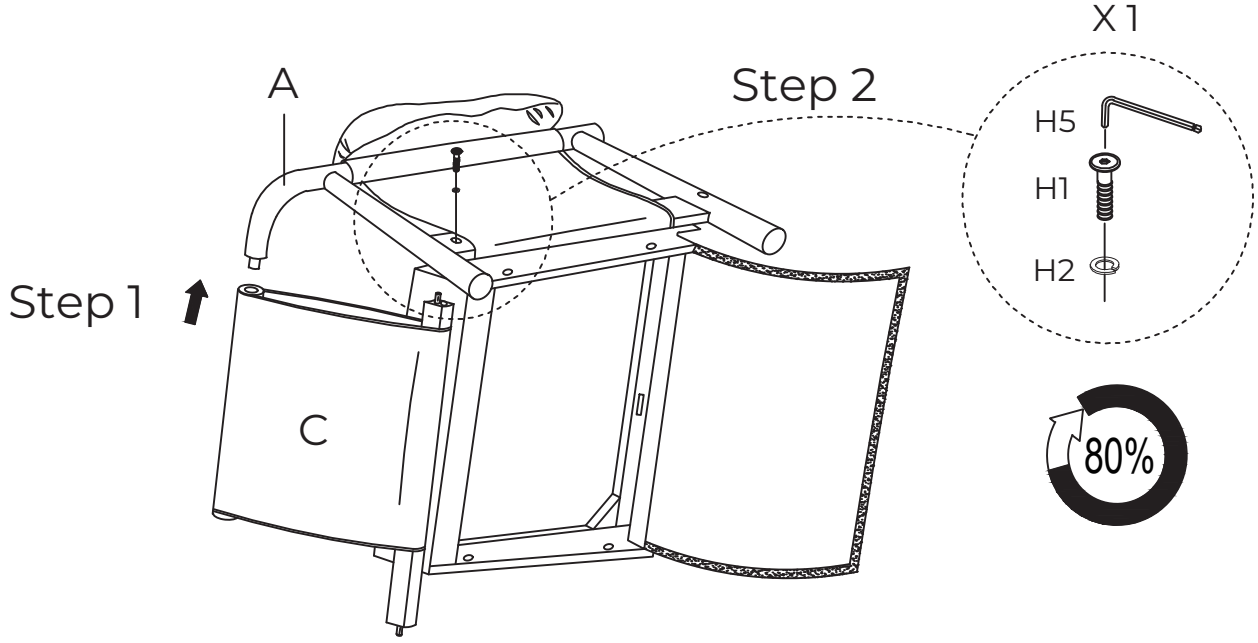


7 Attach the upper side of the Back Frame (C) to the upper side of the Right Arm Frame (B) as indicated below (Step 1). Attach the Right Arm Frame (B) to Seat Cushion (G), using Flat Washers (H3), Lock Washers (H2), JCBC Bolts (H1) and Allen Wrench (H5) as indicated below (Step 2). **Do not fully tighten yet.**

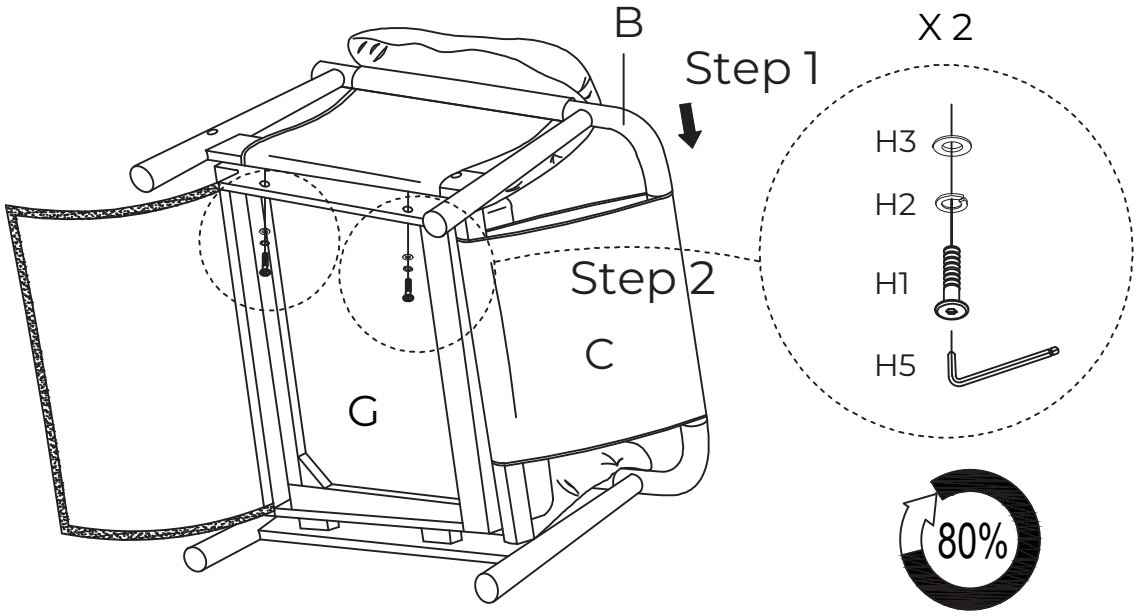


8 Attach the Right Arm Frame (B) to Back Frame (C) and Front Rail (D), using Lock Washers (H2) , JCBC Bolts (H1) and Allen Wrench (H5). **Do not fully tighten yet.**

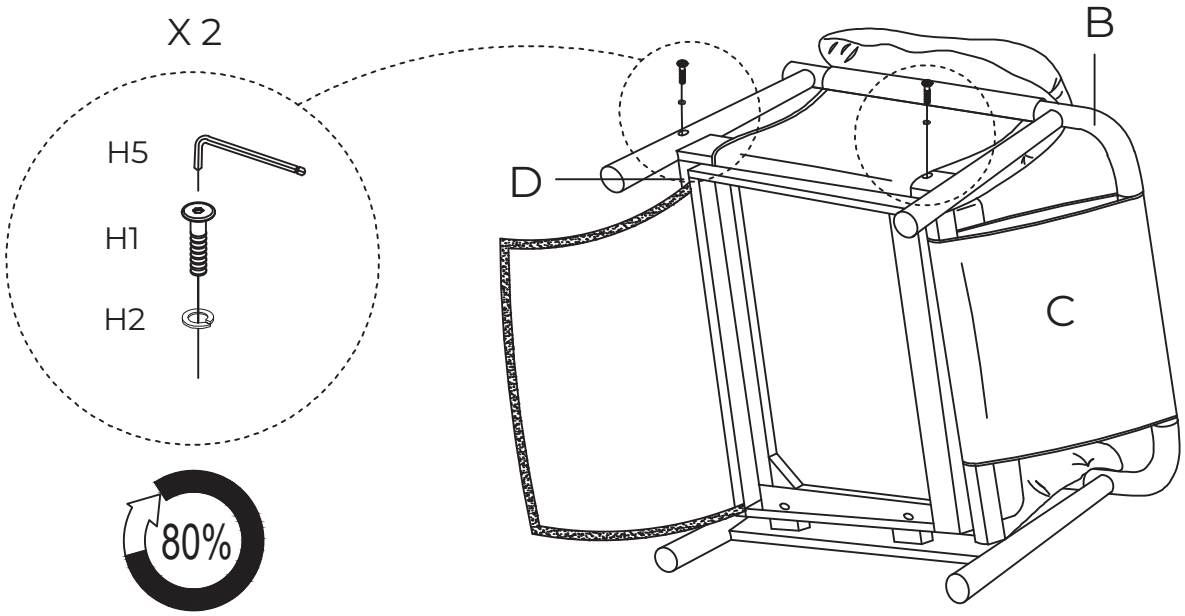


9 Turn assembled chair upright and place on a flat surface. Push legs up or down as necessary to level.

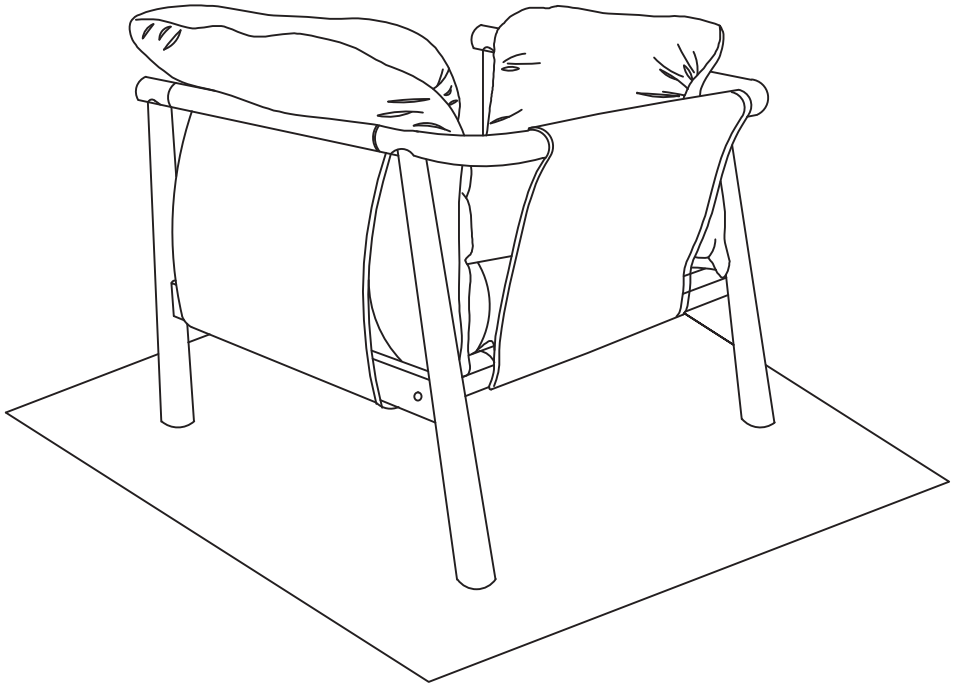

10 Use the Allen Wrench (H5) to tighten all of the bolts inside the Seat Cushion (G)and Left & Right Arm Frame (A & B). Attach the Velcro underneath the Seat Cushion (G).

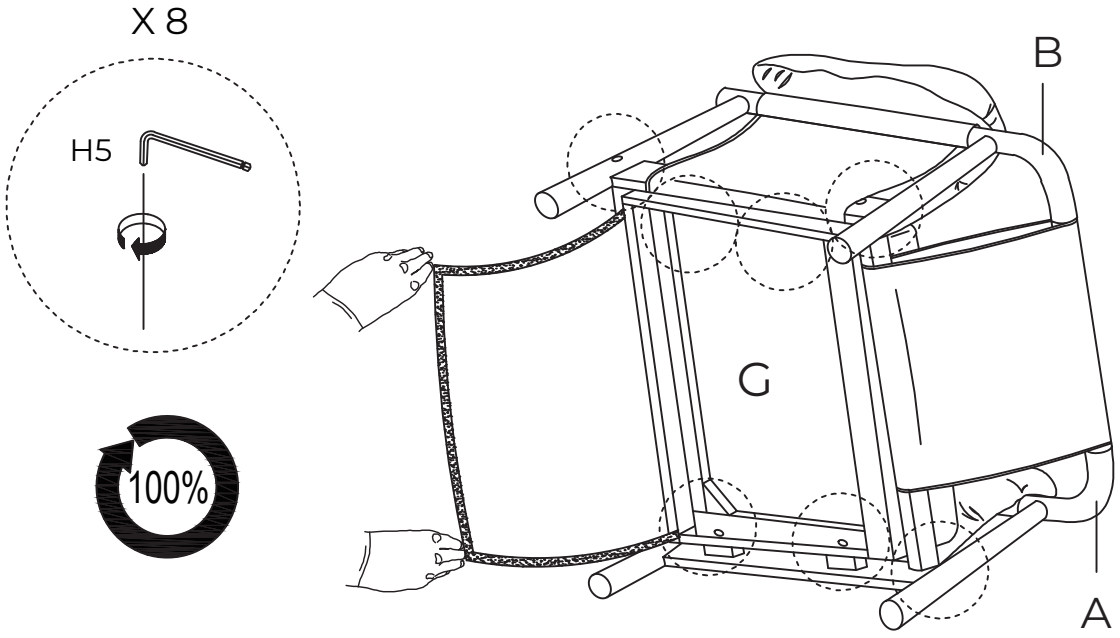


11 Push the upper side of the Left Arm Frame (A) and Right Arm Frame (B) inward, and tighten with CSK Screws (H7) and Allen Wrench (H6). Fully tighten.
NOTE: We recommend using a screwdriver (not included) to tighten.

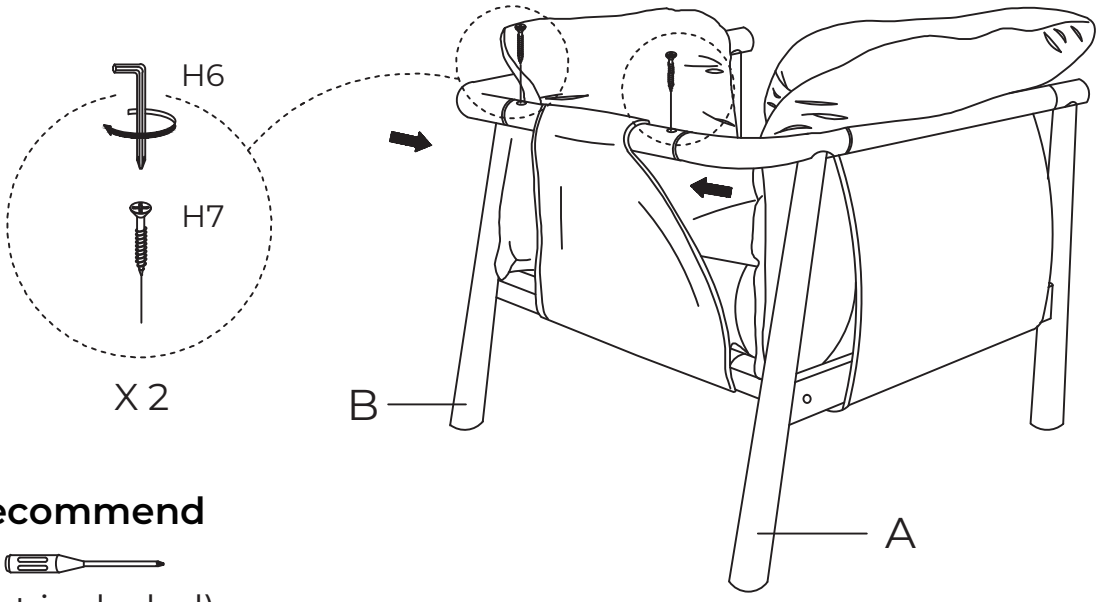


Recommend

(Not included)

12 Put on the Back Cushion (H) and attach the Velcro Tape underneath the Left & Right Arm Cushion (E & F).

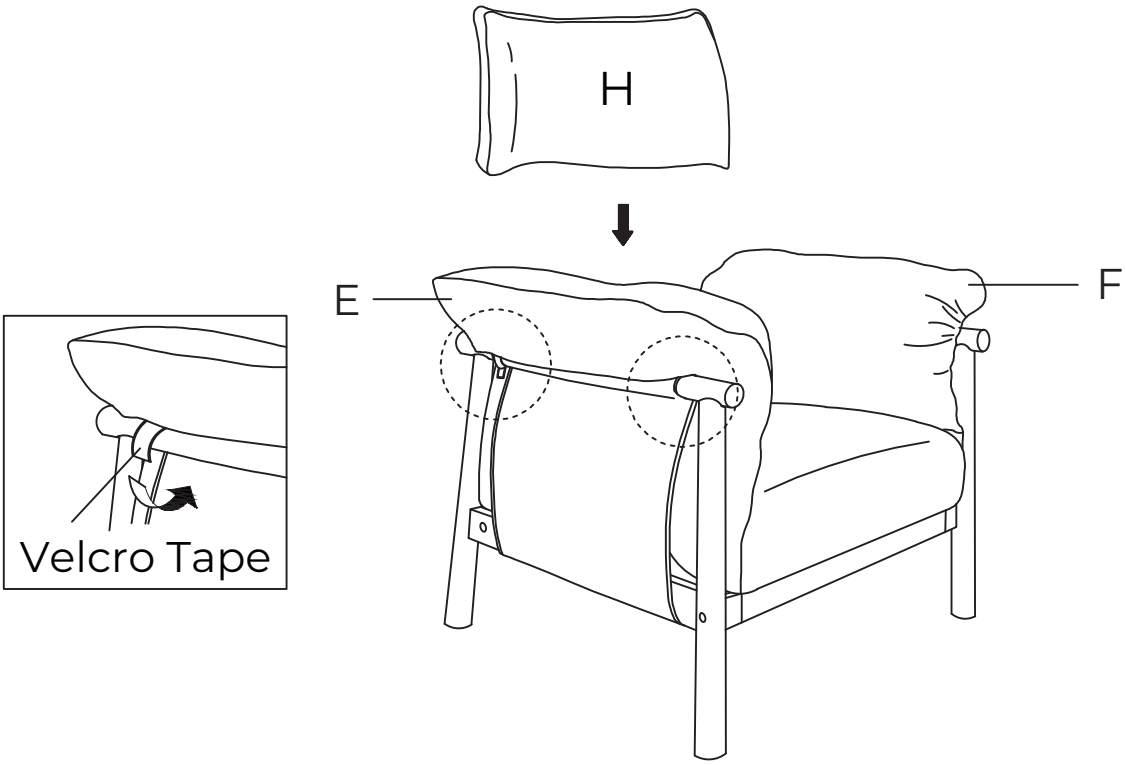

13 Gently tap the Wooden Plugs (H8) into the Left and Right Leg.

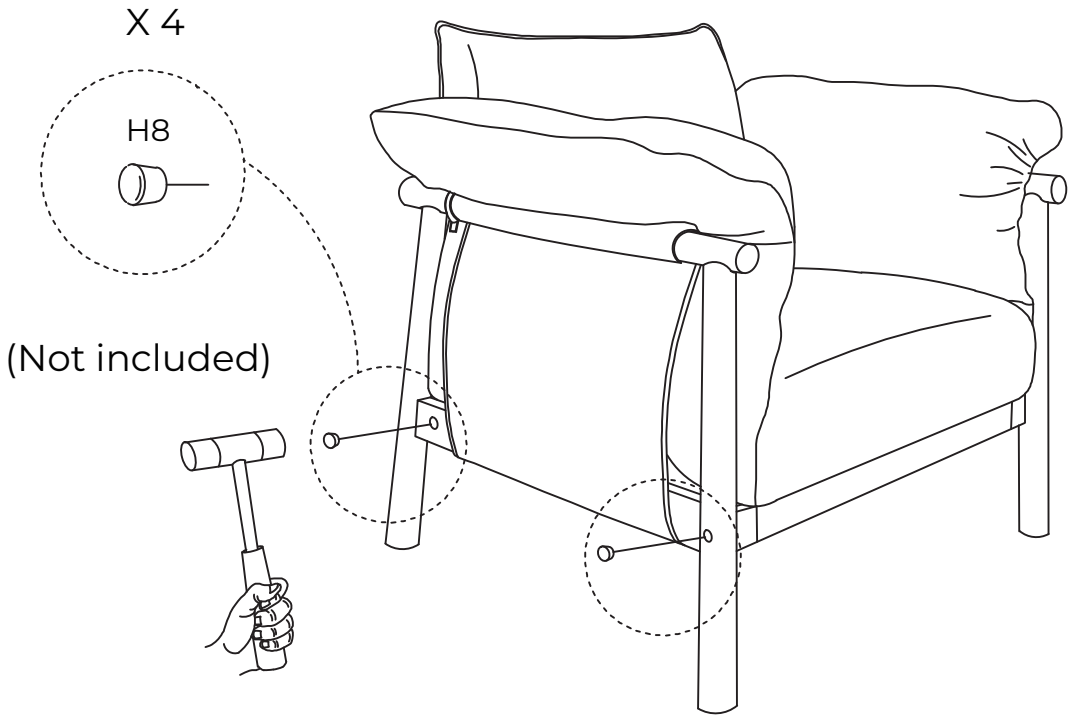

13 Assembly complete. Enjoy.

