


## Assembly Instructions

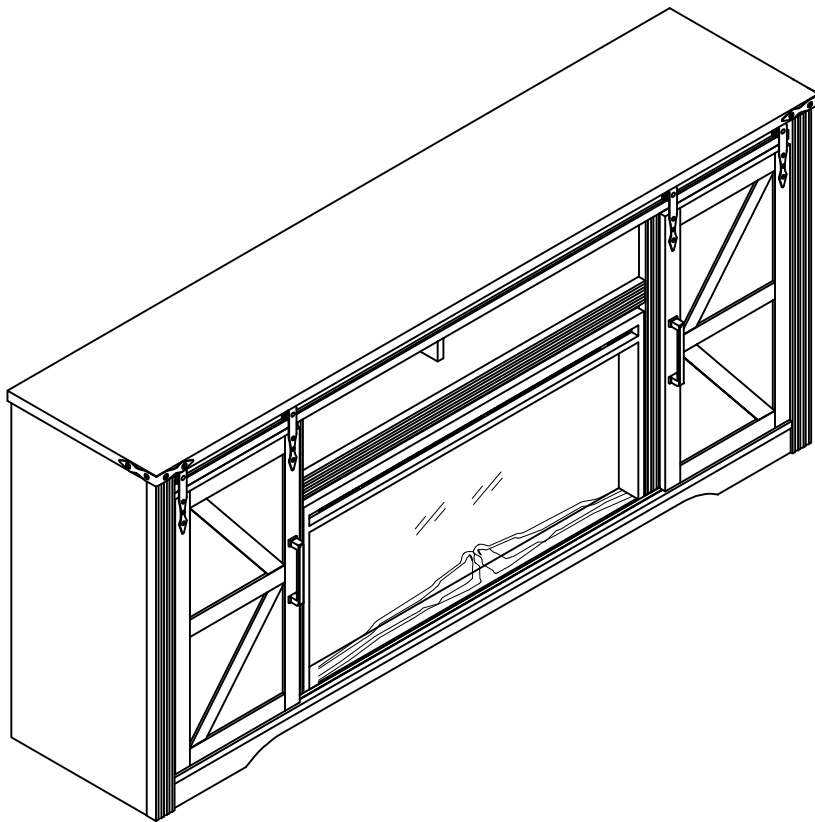


If you have any questions, please follow these steps(“Find Your Orders” – “Problem with the Order” – “Contact Seller”) to contact our customer service. Thanks!


NOTE: There are two packages A and B for this item. Please wait patiently if you only receive one for now

# General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

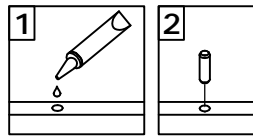


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

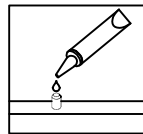


- VI. A Phillips head screwdriver is required for the assembly of this product .

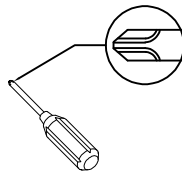


- VI. Power tools should not be used to assemble this product .

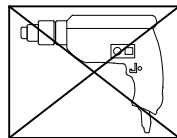


- VIII. Concealed hinges are three-way adjustable.

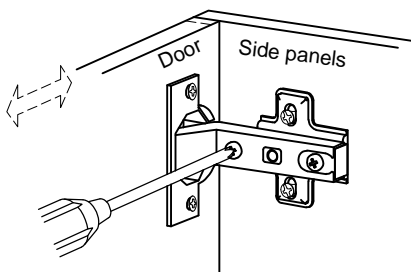

Horizontal  
by screw adjustment

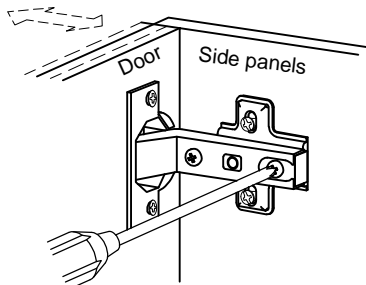


In-and-Out  
by loosening the hinge-arm  
mounting screw or via cam  
adjustment

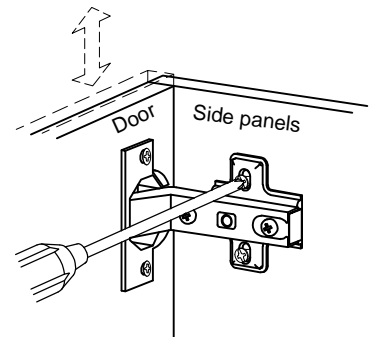







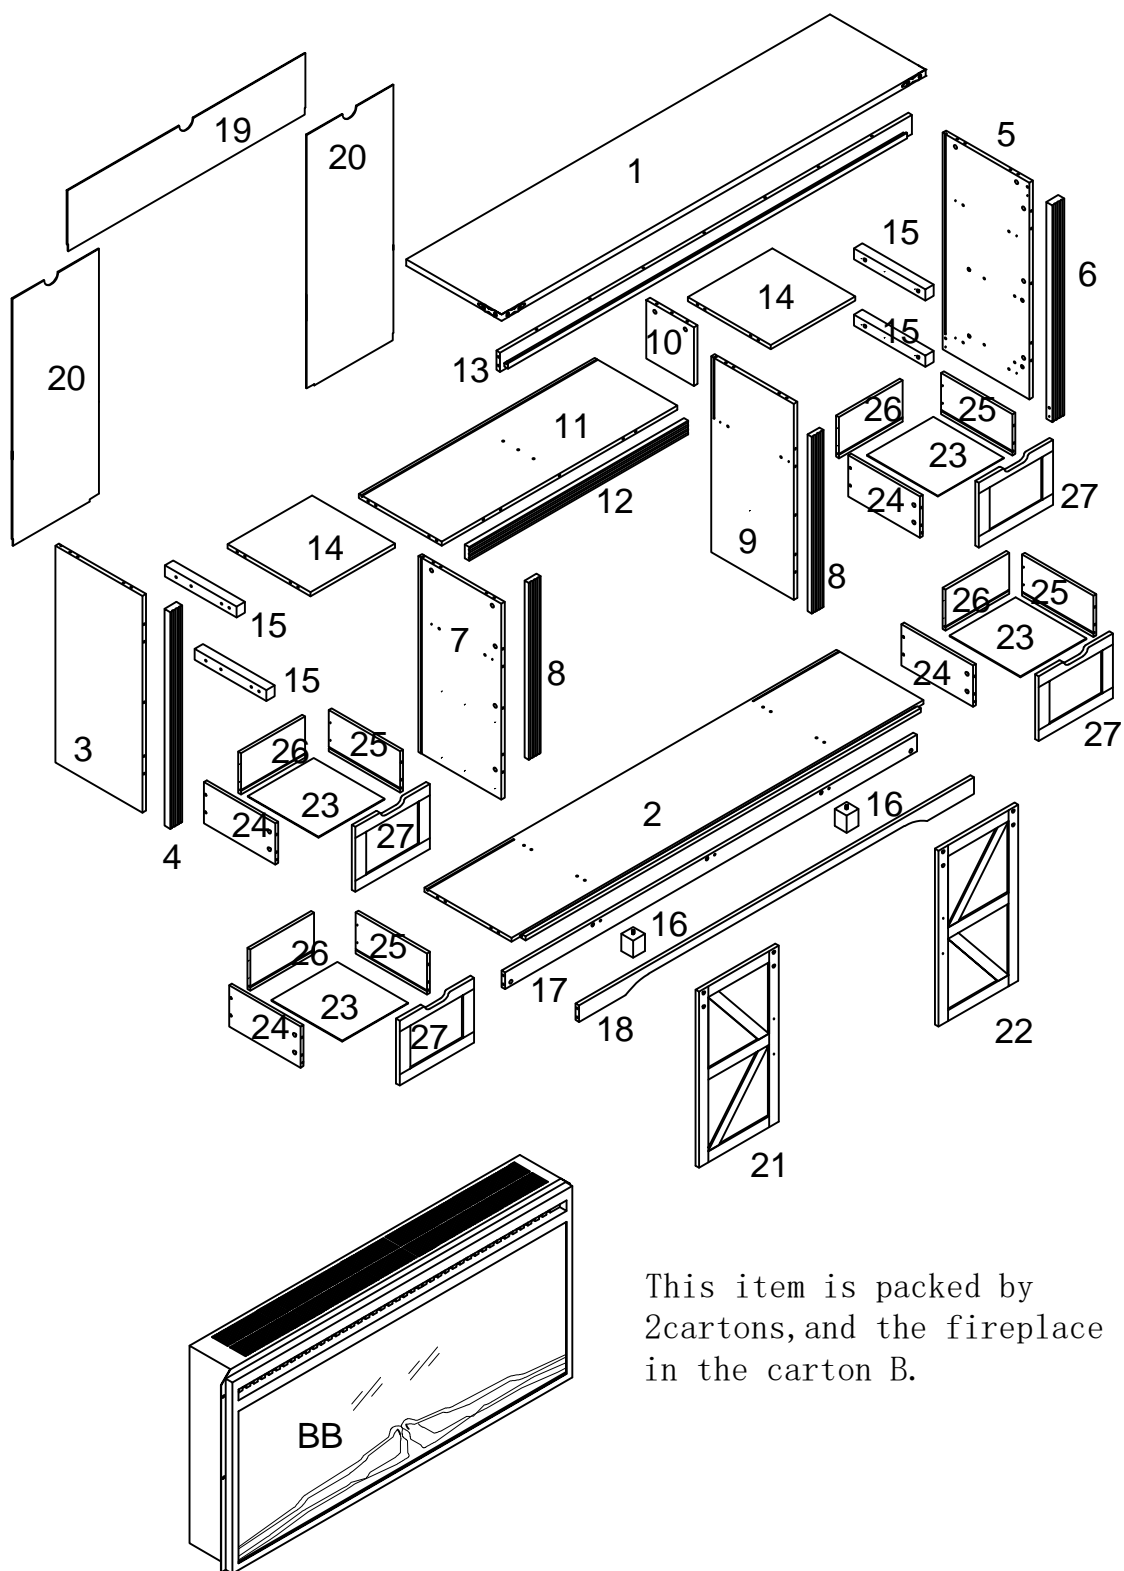




















Vertical  
Via slots in the mounting  
plate or via cam adjustment


# Parts List



This item is packed by  
2cartons, and the fireplace is  
in the carton B.

## Hardware List


A		Ø8x30mm	Wooden dowel	57 pcs
B		Ø6x32mm	Cam bolt	67 pcs
C		Ø15x11mm	Cam lock	51 pcs
D		Ø30mm	Sticker	67 pcs
E		Ø6x50mm	Bolt	6 pcs
F		M 4	Hex Key	1 pc
G		M6*12mm	Bolt	12 pcs
H			Plastic wedge	6 pcs
I			Handle	2 pcs
J		Ø4x19mm	Bolt	4 pcs
K		M6*35mm	Bolt	8 pcs
L		12"	Drawer slides	4 sets
M		Ø3x12mm	Screw	48 pcs
N		Ø4x32mm	Screw	16 pcs
O		Ø15x9mm	Cam lock	16 pcs
P			Pulley	4 pcs
Q		M6*12mm	Screw	8 pcs
R			Metal plate	4 pcs
S		Ø4*12mm	Screw	8 pcs
T			Plastic wedge	16 pcs
U		Ø3x17mm	Screw	16 pcs
V			Anti-inversion piece	4 pcs
W		Ø4x15mm	Screw	4 pcs
X		Ø4x35mm	Screw	4 pcs
Y			House lizard	4 pcs
Z			Strip	2 pcs
AA			Glue tube	2 pcs

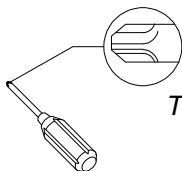


Philips head screwdriver required for assembly  
(not included)


*The hardware quantities listed above are required for proper assembly.  
Some extra hardware may also have been included.*


# Step 1

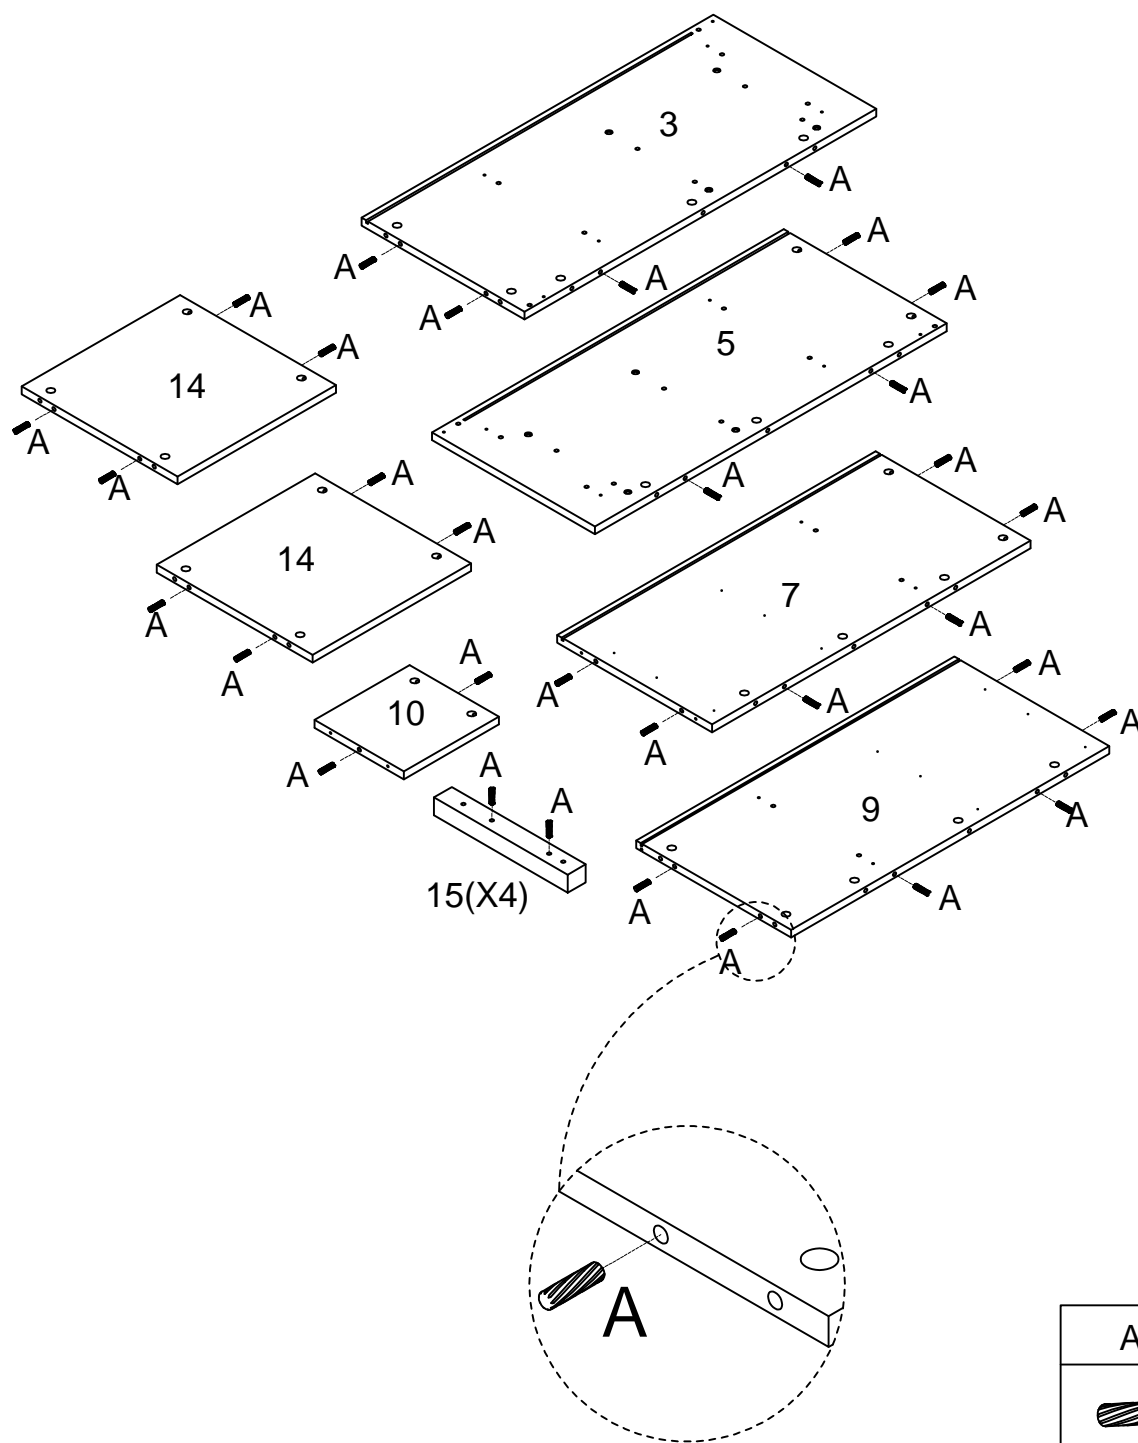


A

X38

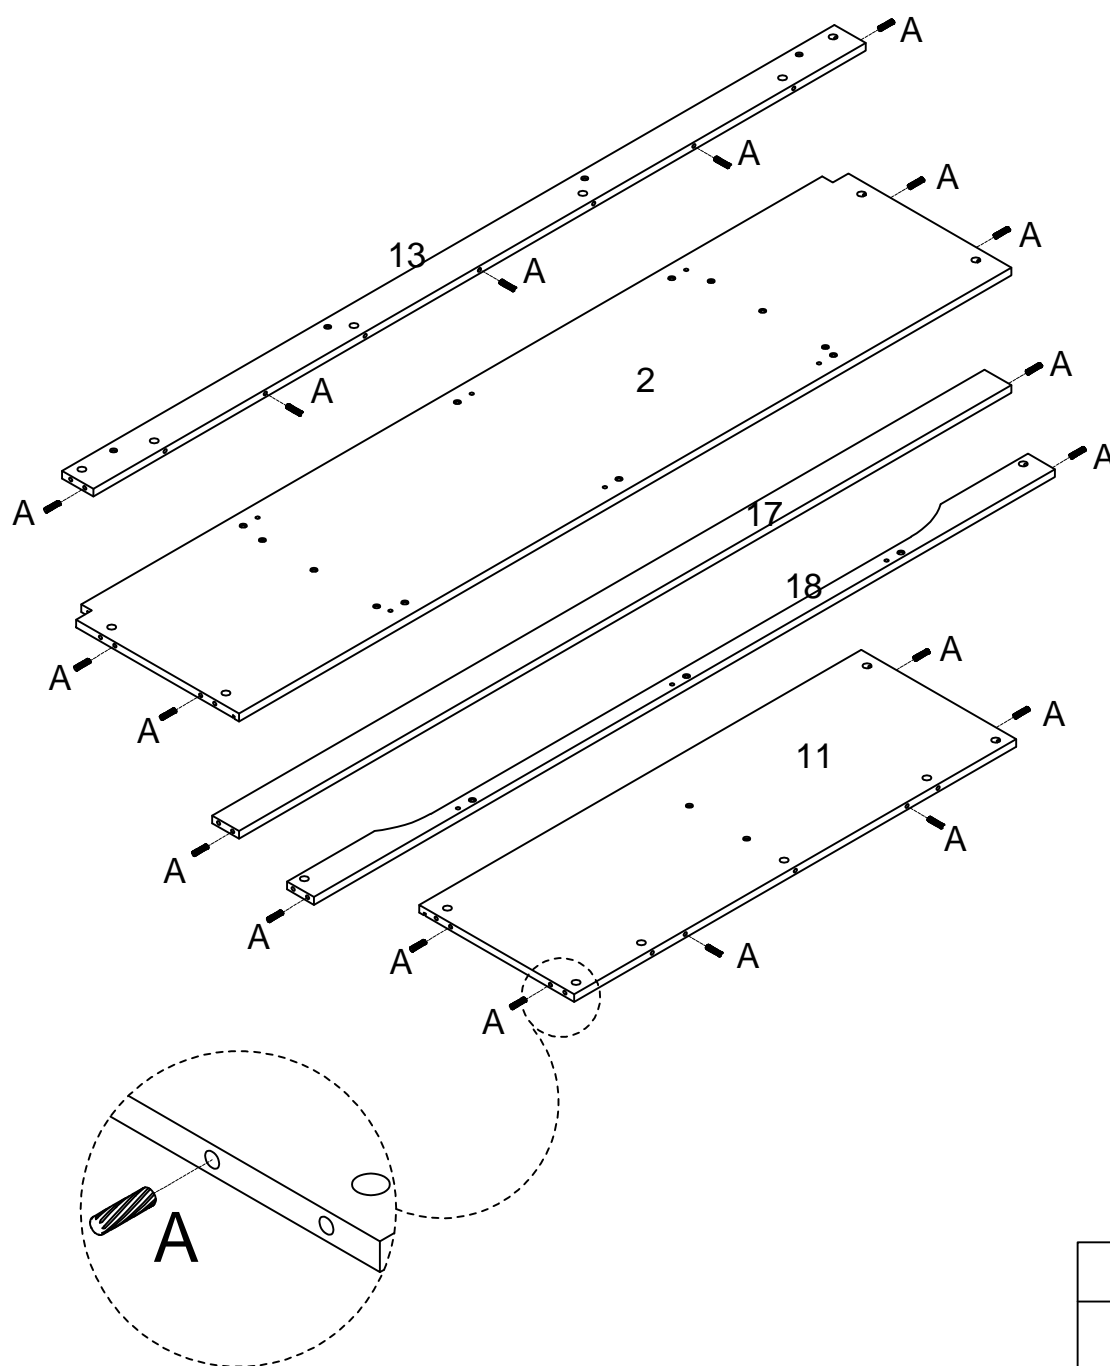
## Step 2




A

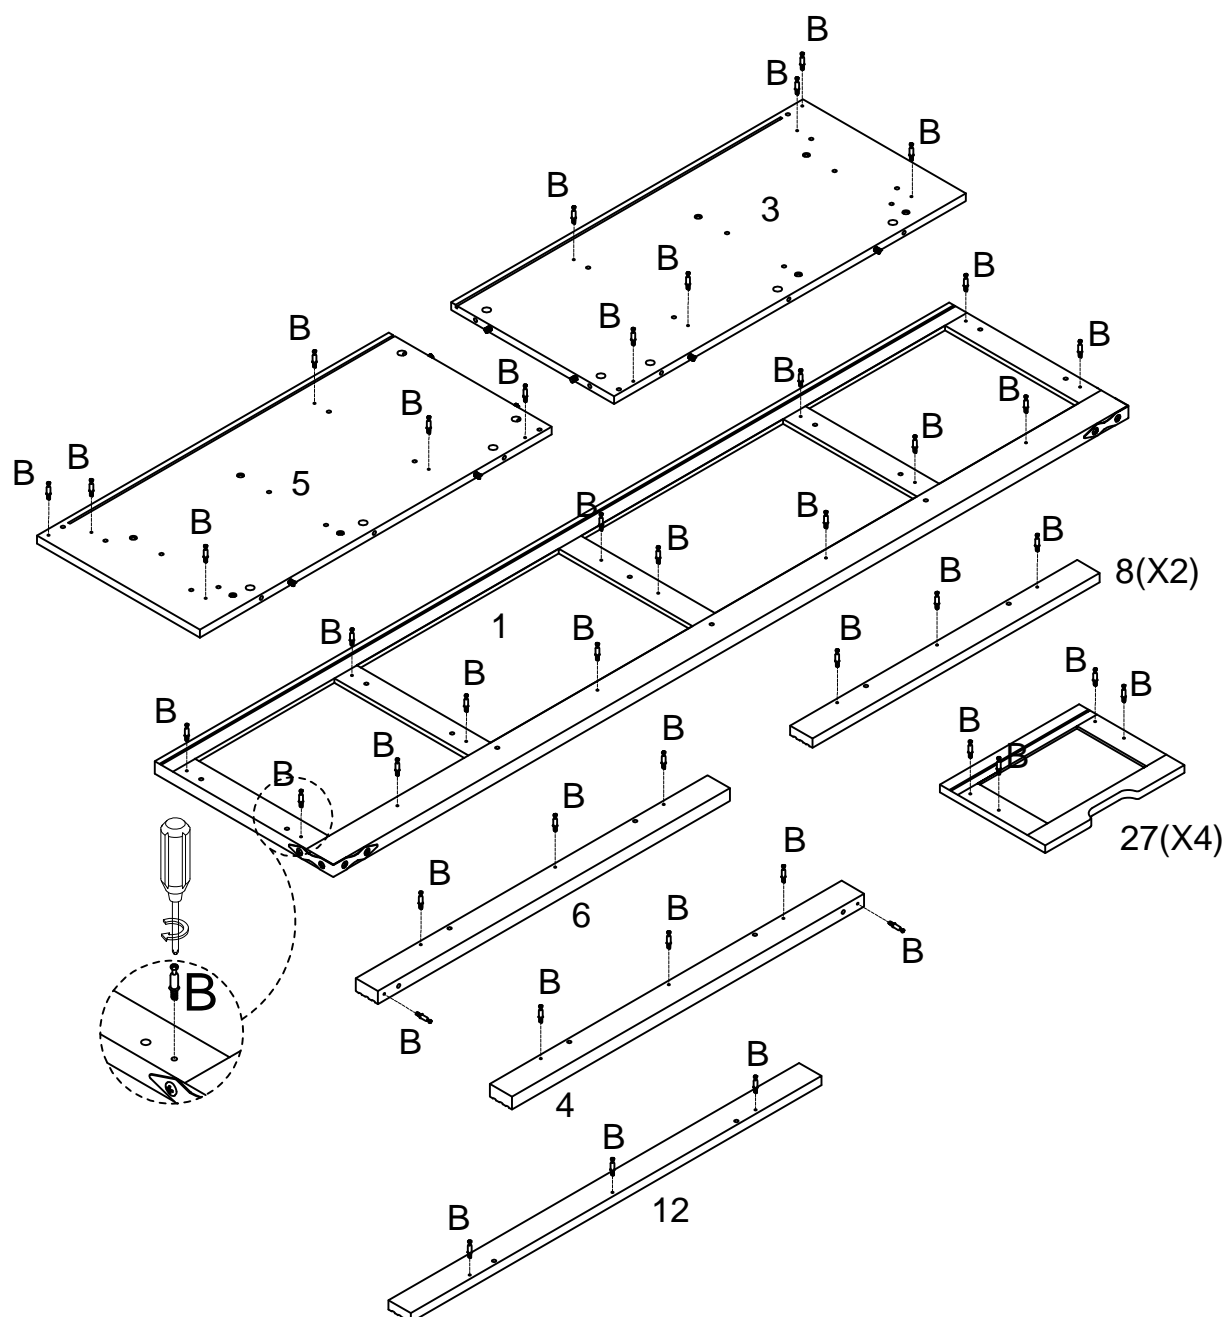X19


# Step 3



B

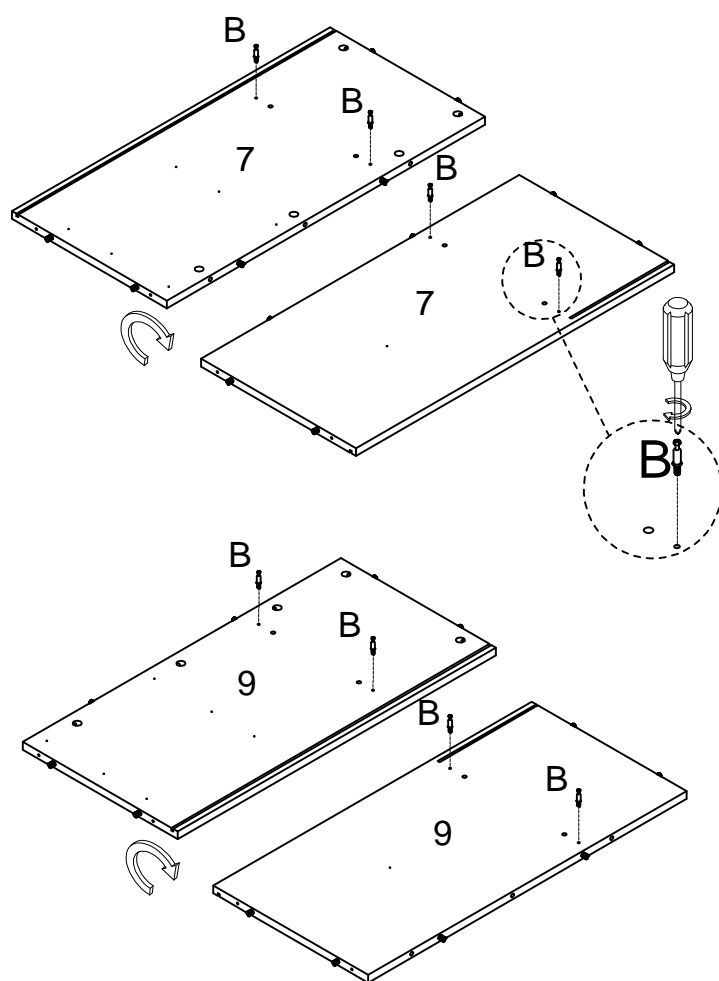X59



## Step 4




B

X8

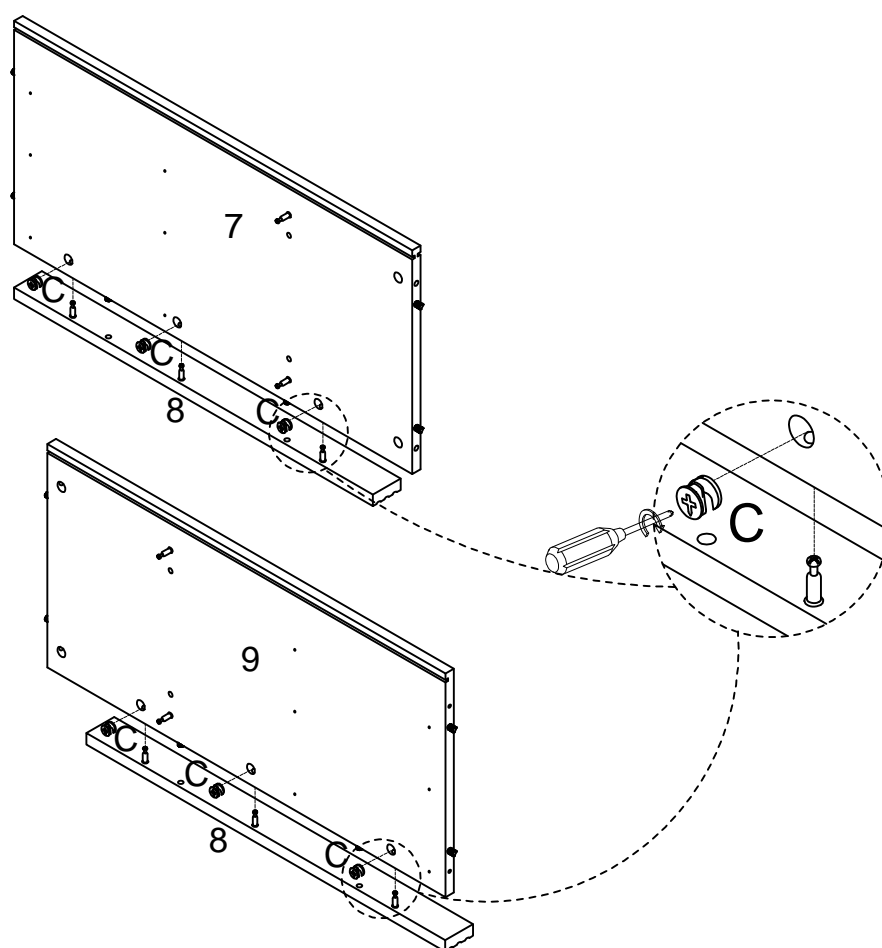
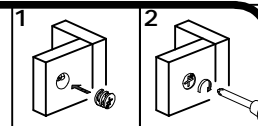



## Step 5




C

X6

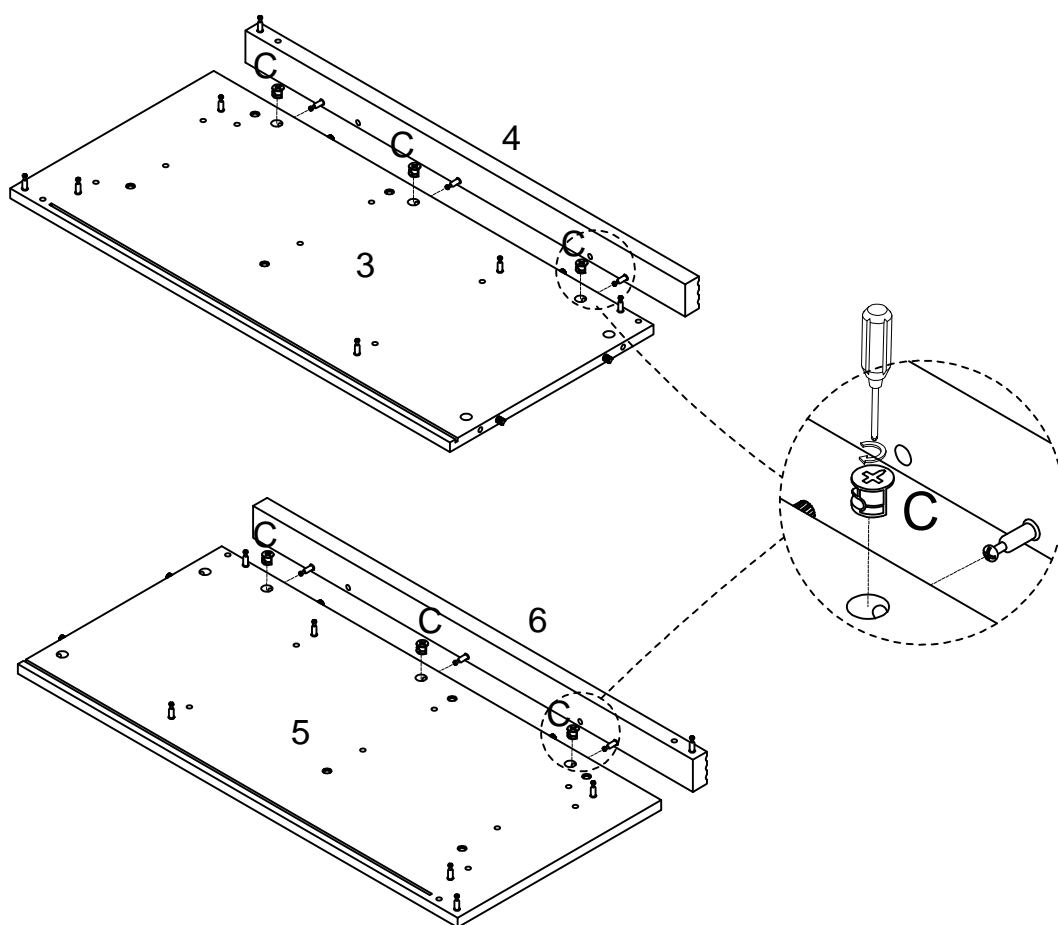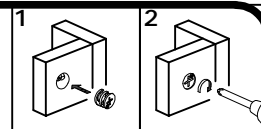

## Step 6

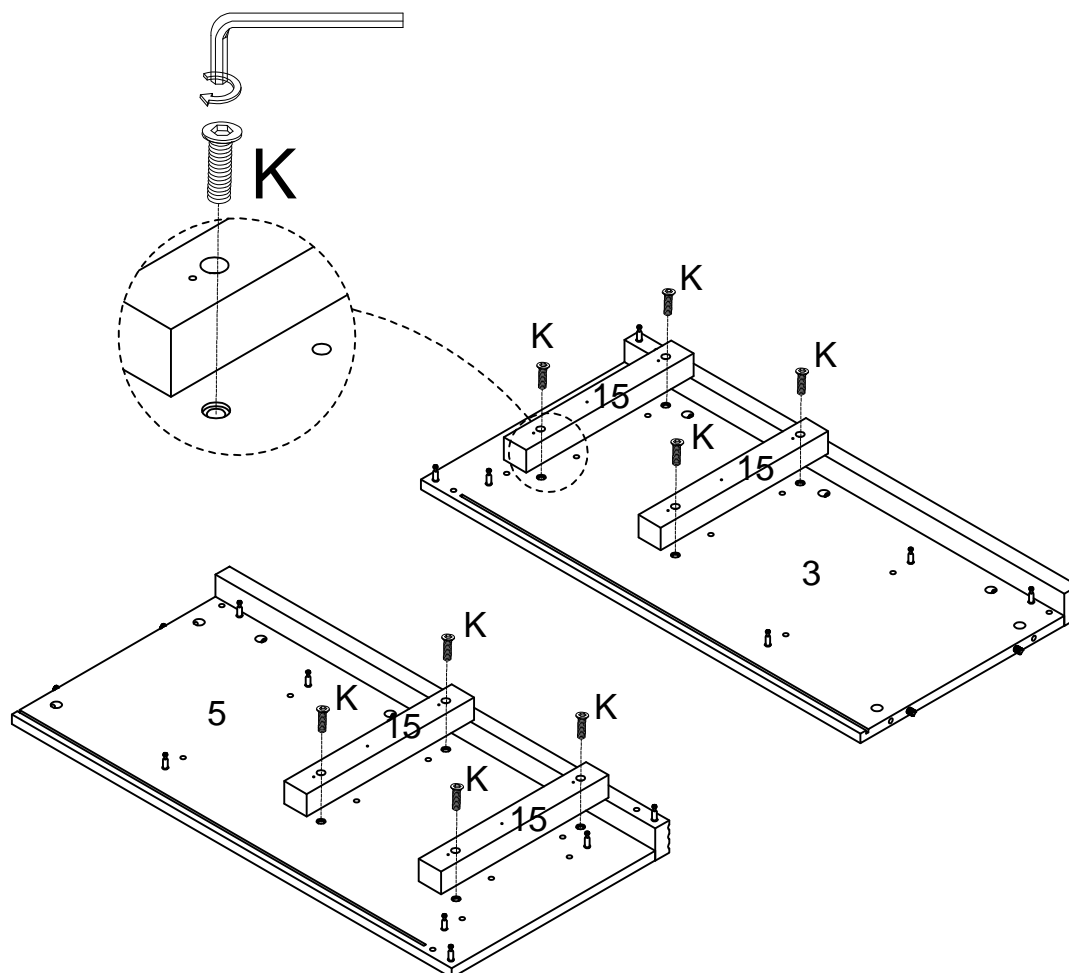





C

X6

## Step 7



K	F
	
X8	X1
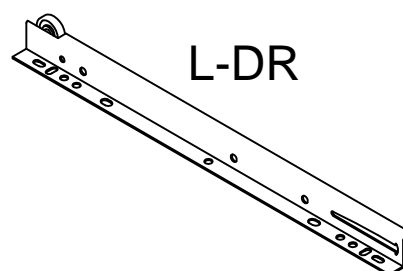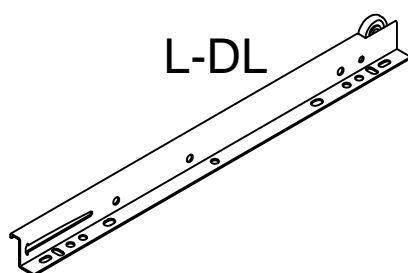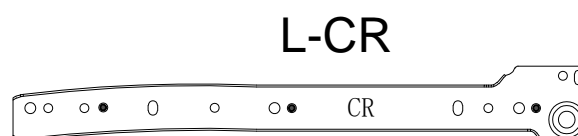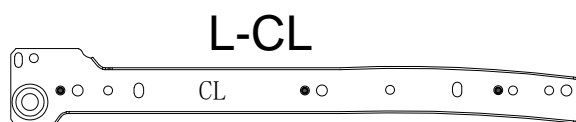
## Step 8









# Step 9



## NOTE:

Refer to the images to identify L-CL (left) and L-CR (right). Attach L-CL to #9 panel and L-CR to #7 panel. [M] screws must go in the exact spots shown.

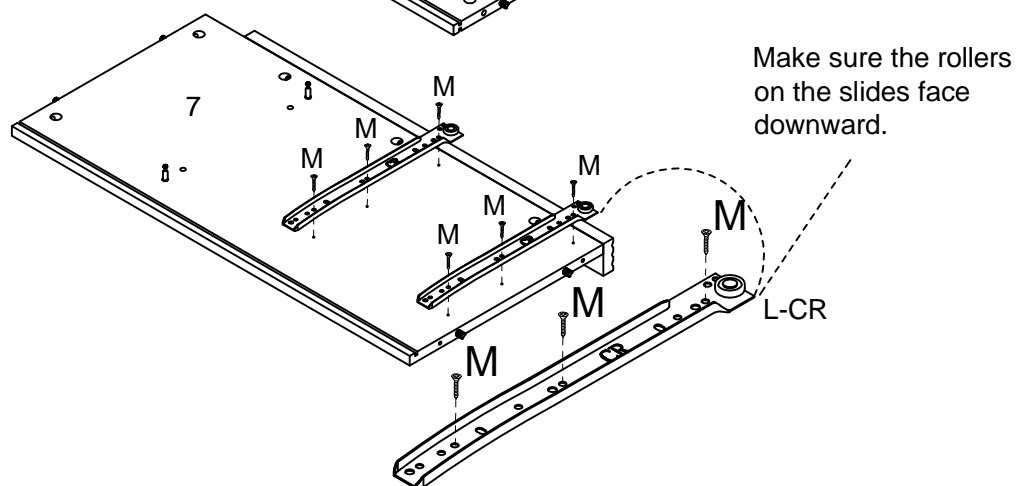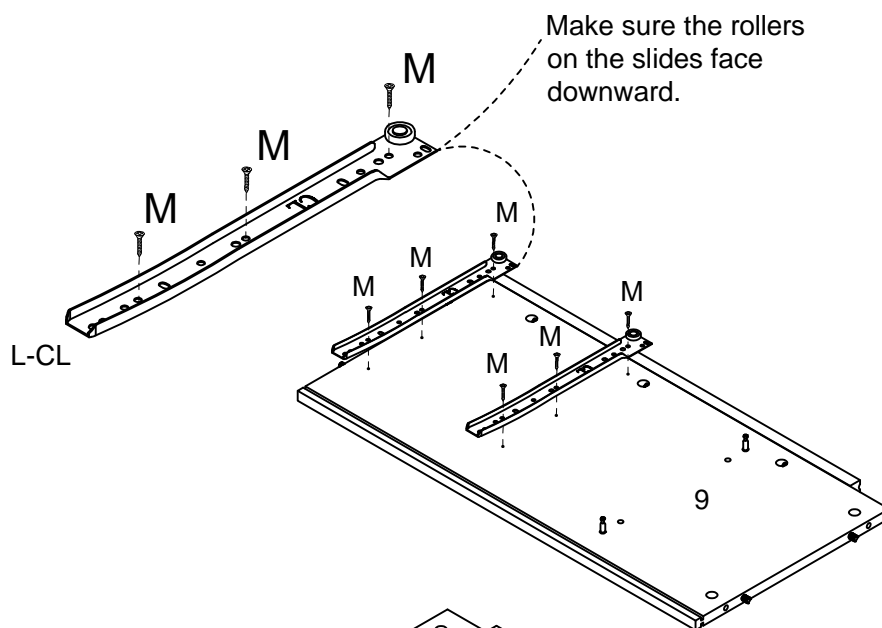


M	L
	
X12	X2



# Step 10

## NOTE:






Refer to the images to identify L-CL (left) and L-CR (right). Attach L-CL to #15 panel and L-CR to #15 panel. [M] screws must go in the exact spots shown.

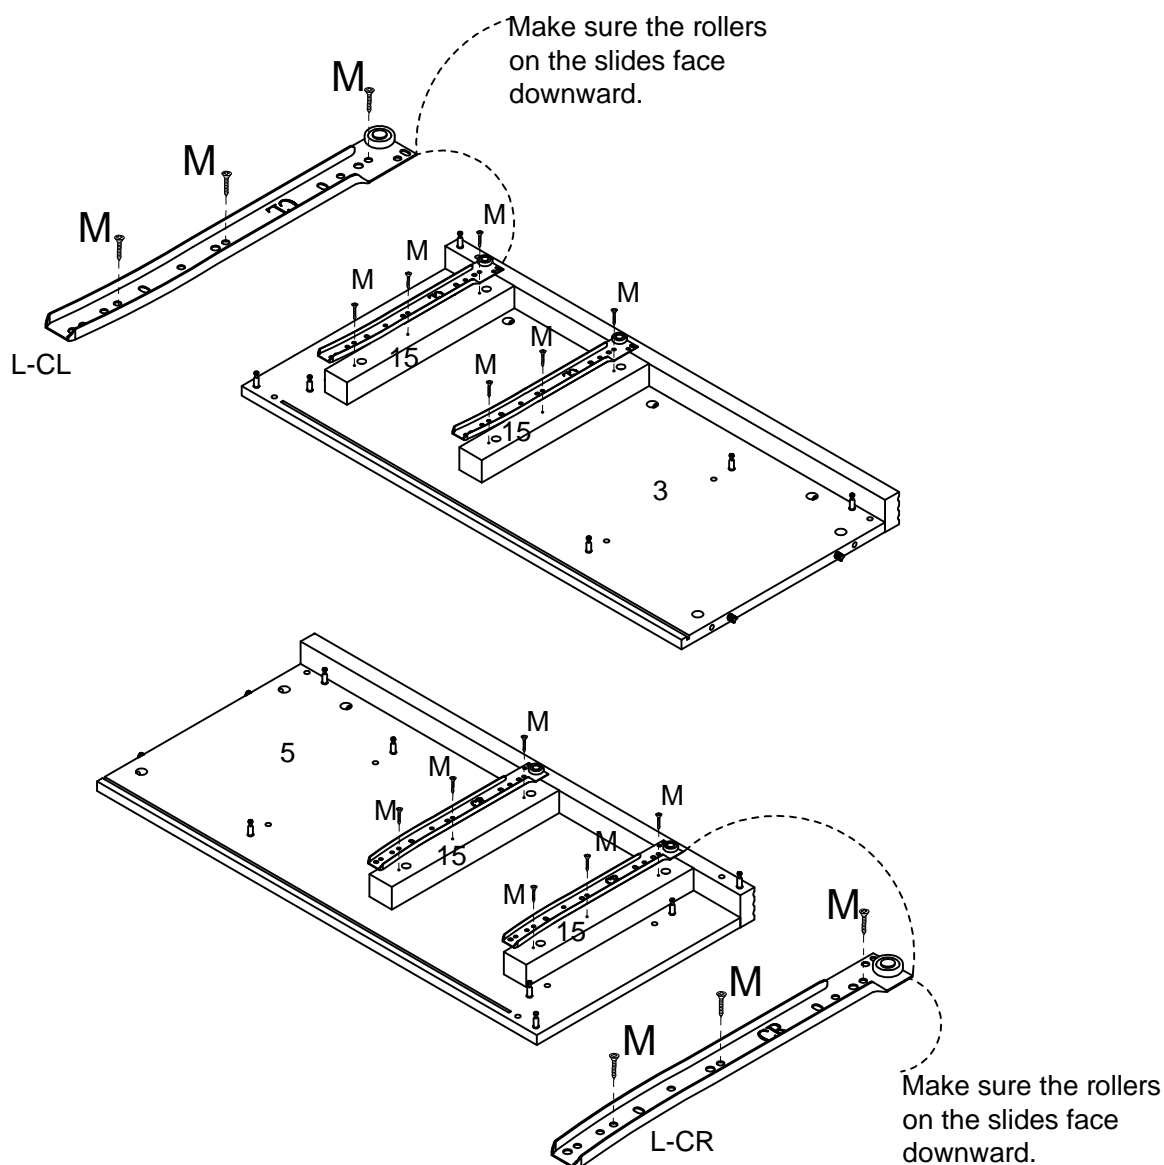



M	L
	
X12	X2


# Step 11

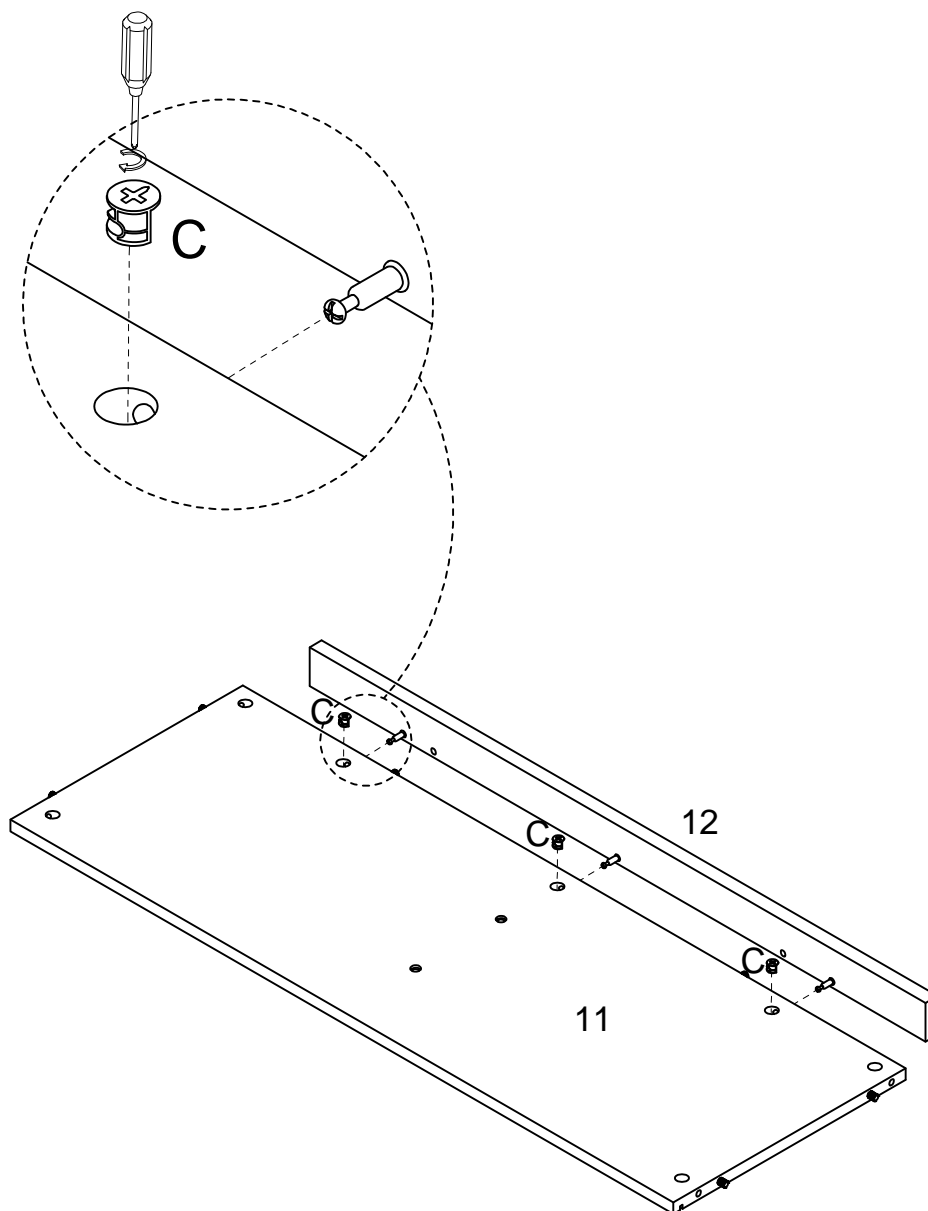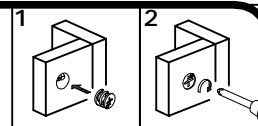

C

X3

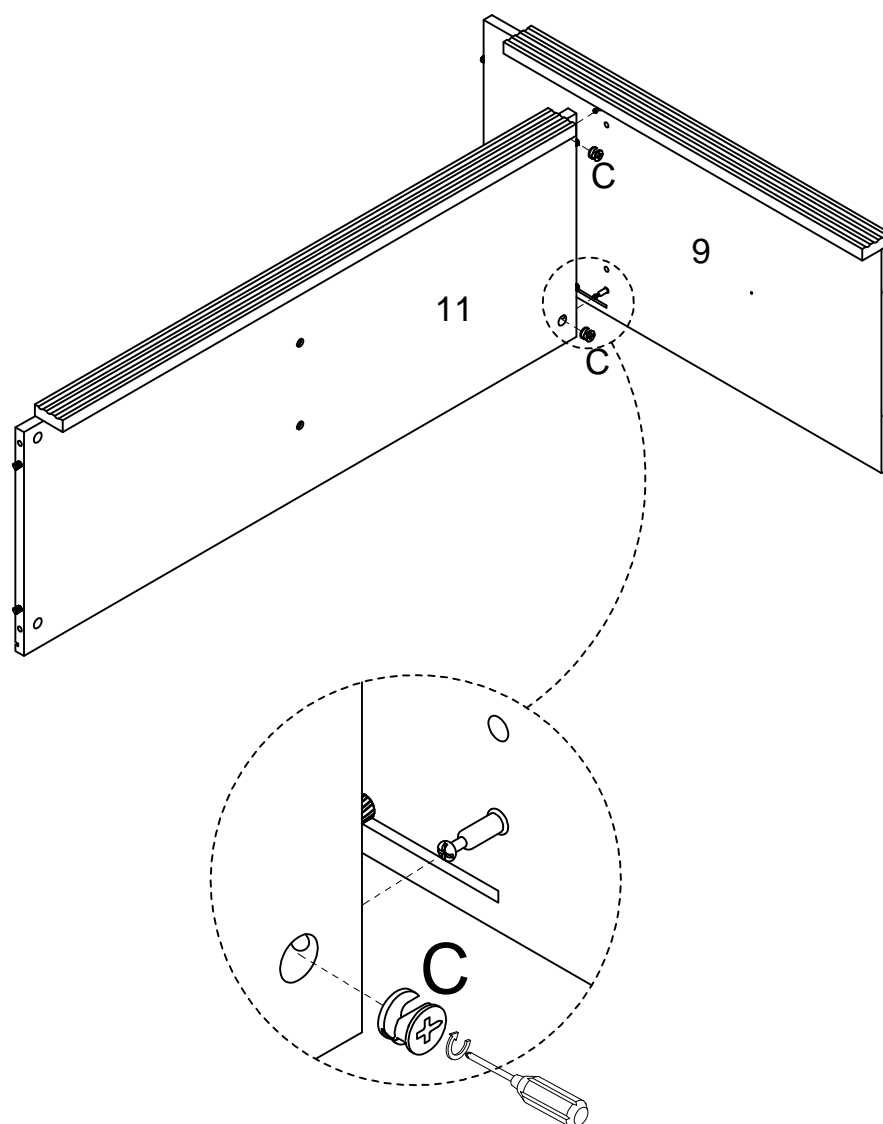
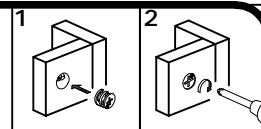
## Step 12




C

X2




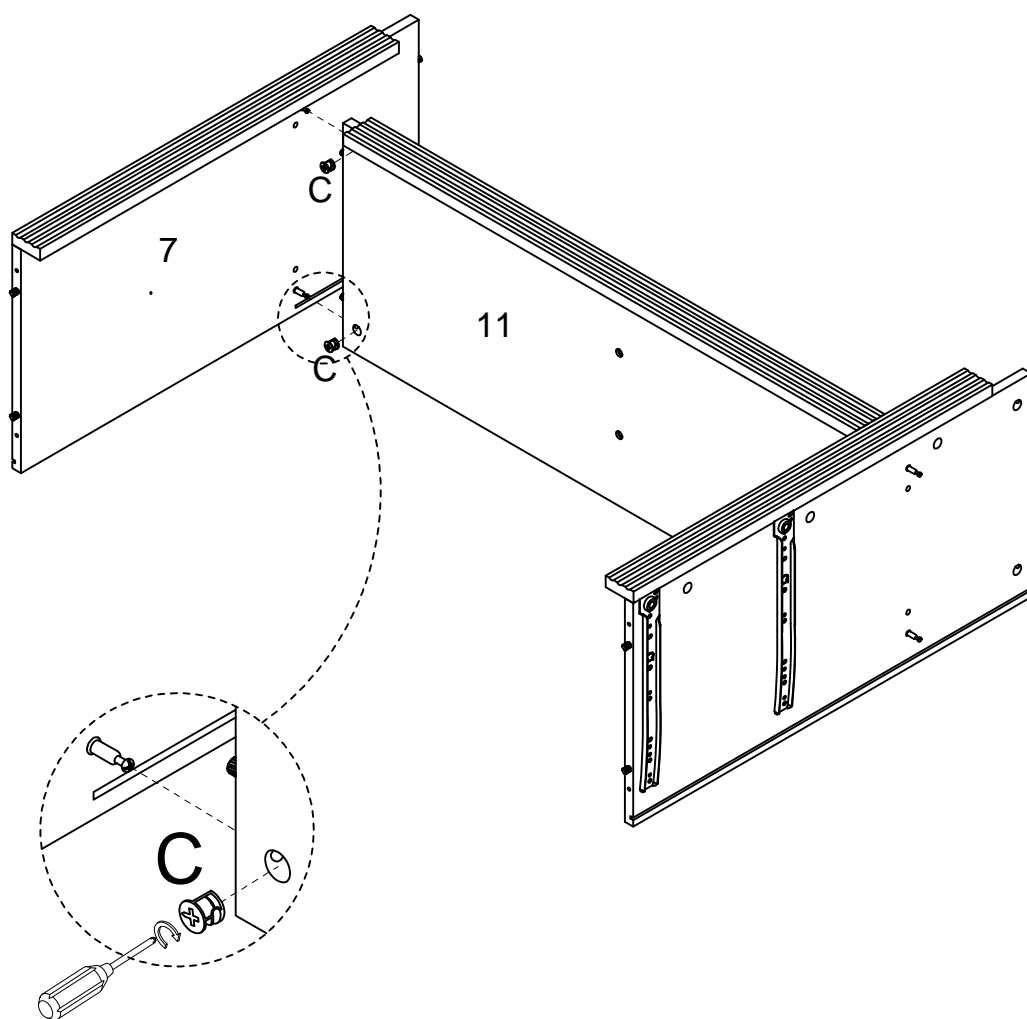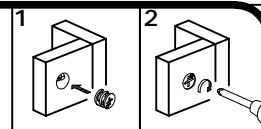

# Step 13




C

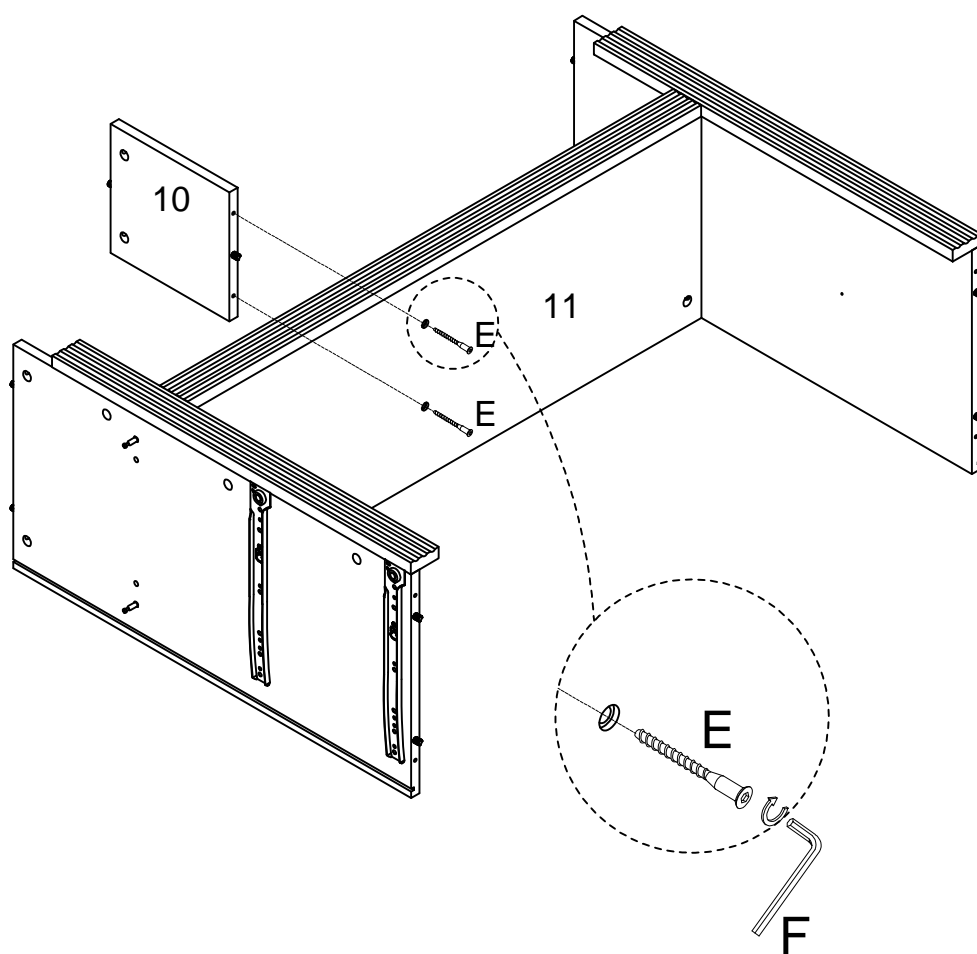X2




## Step 14

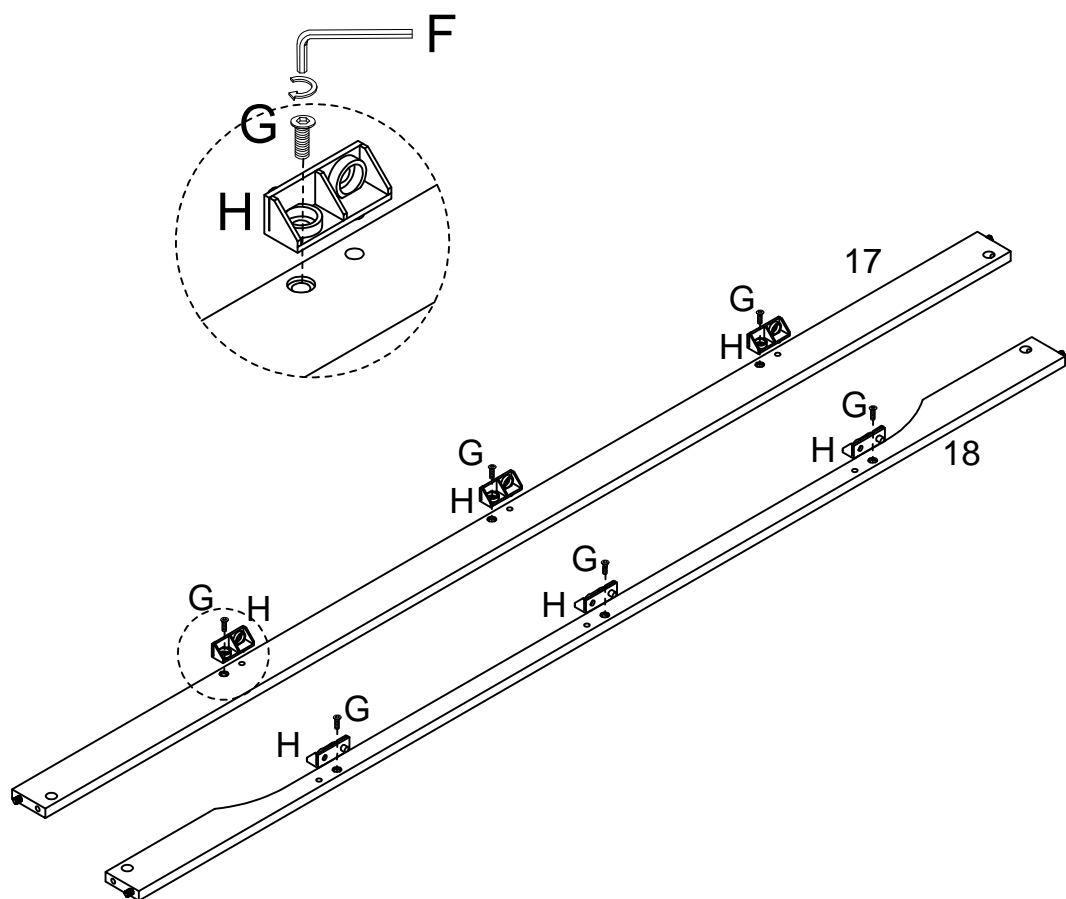


E	F
	
X2	X1



# Step 15




H	G	F
		
X6	X6	X1
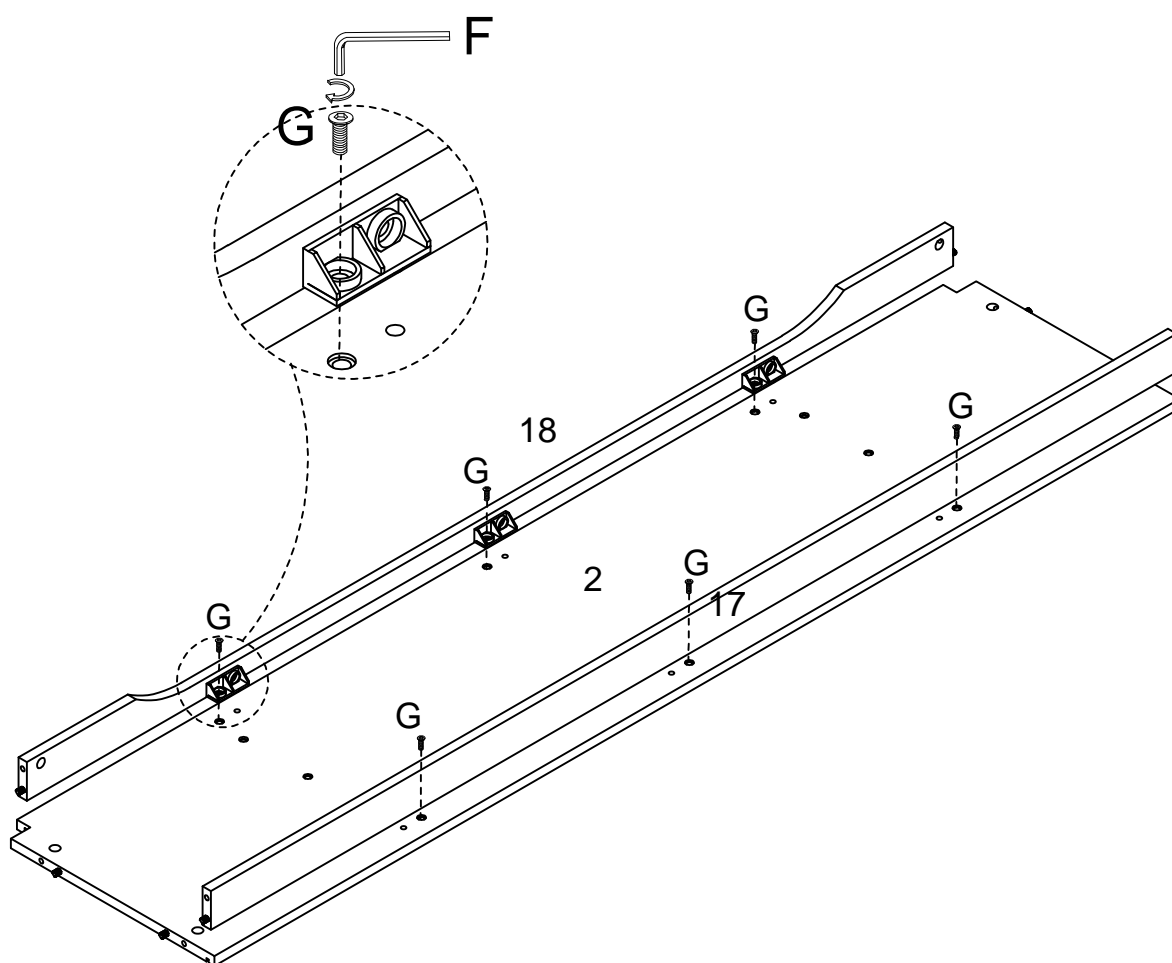
## Step 16




G	F
	
X6	X1



## Step 17

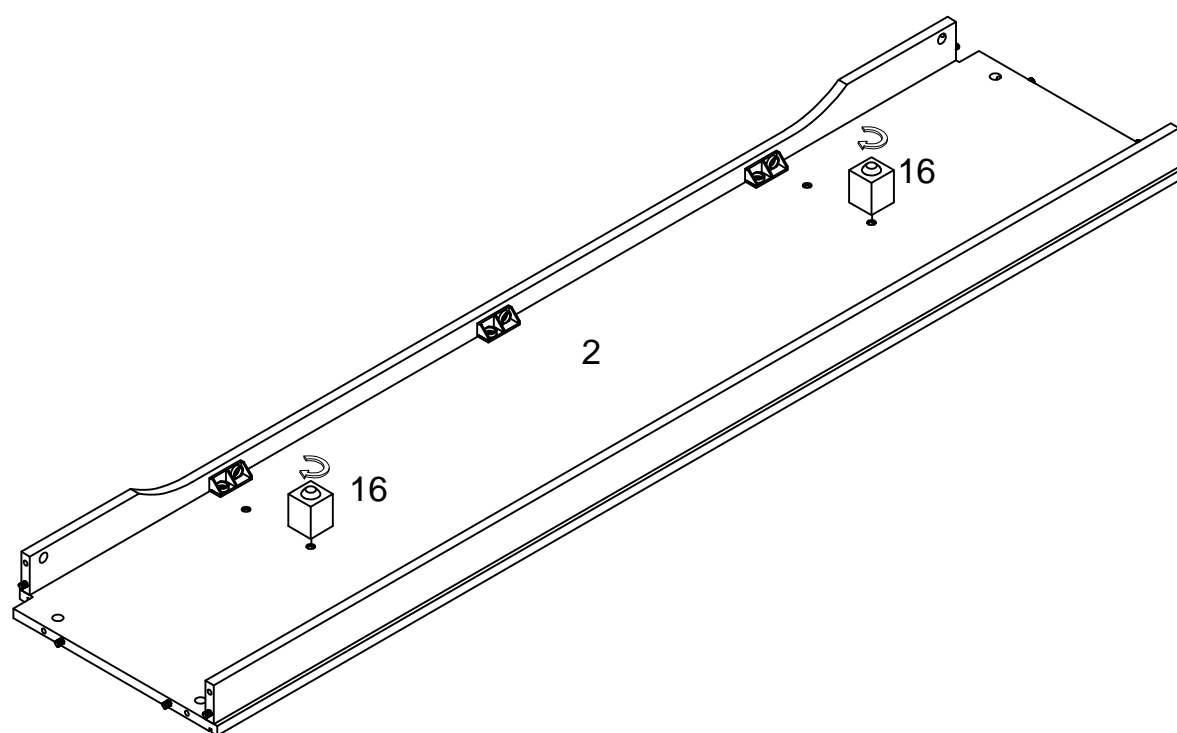


Step 18


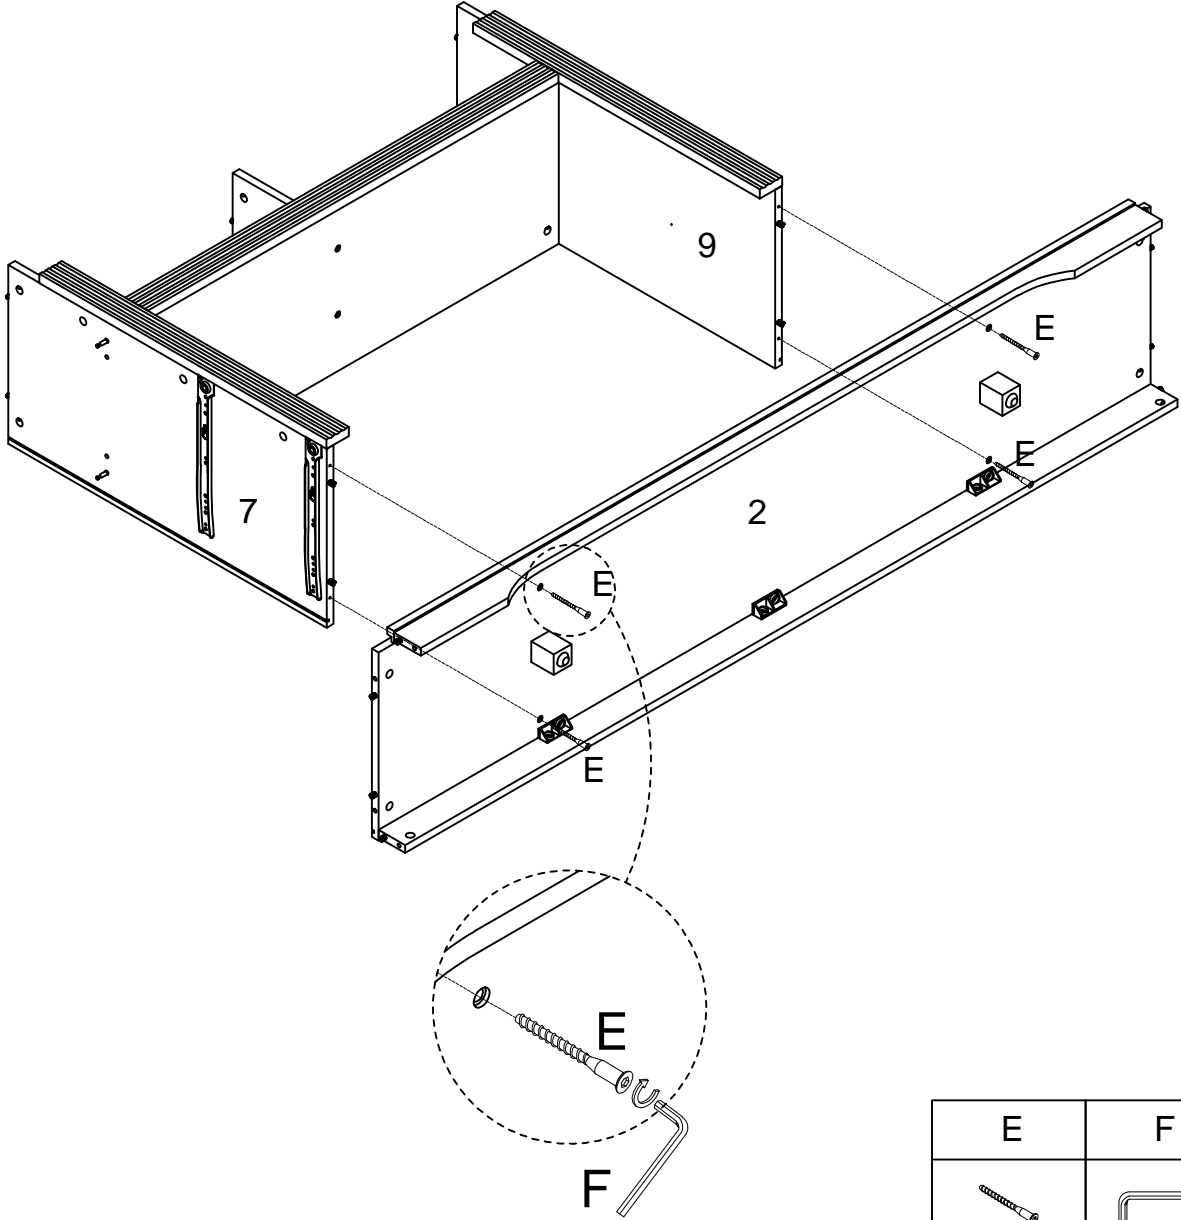



# Step 19

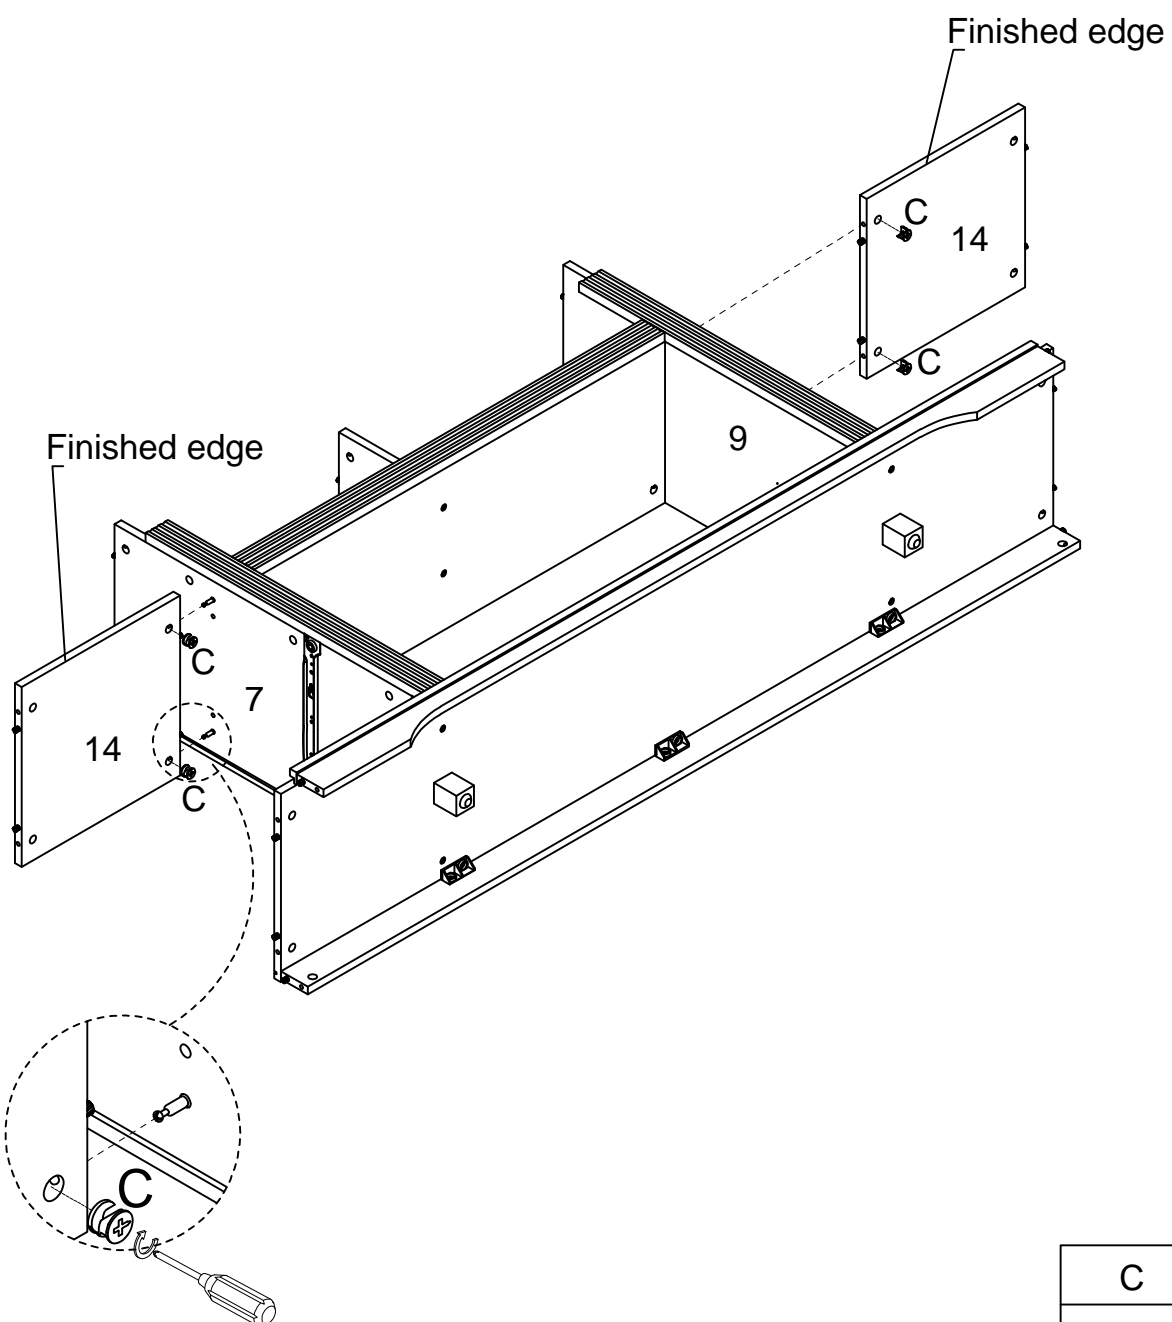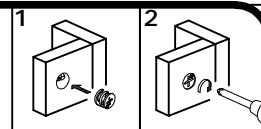

C

X4

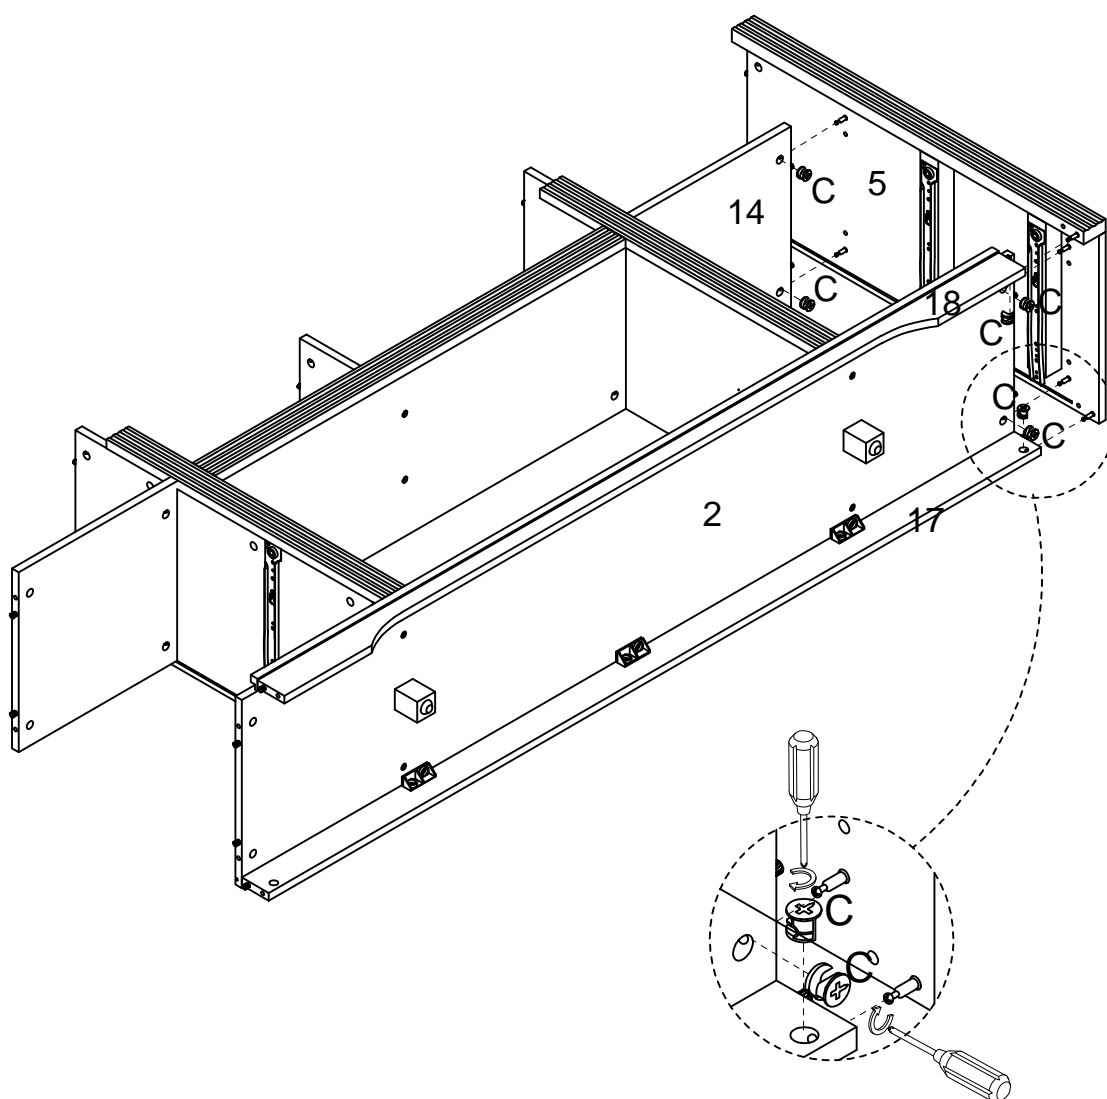
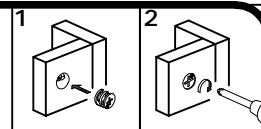
# Step 20



C

X6

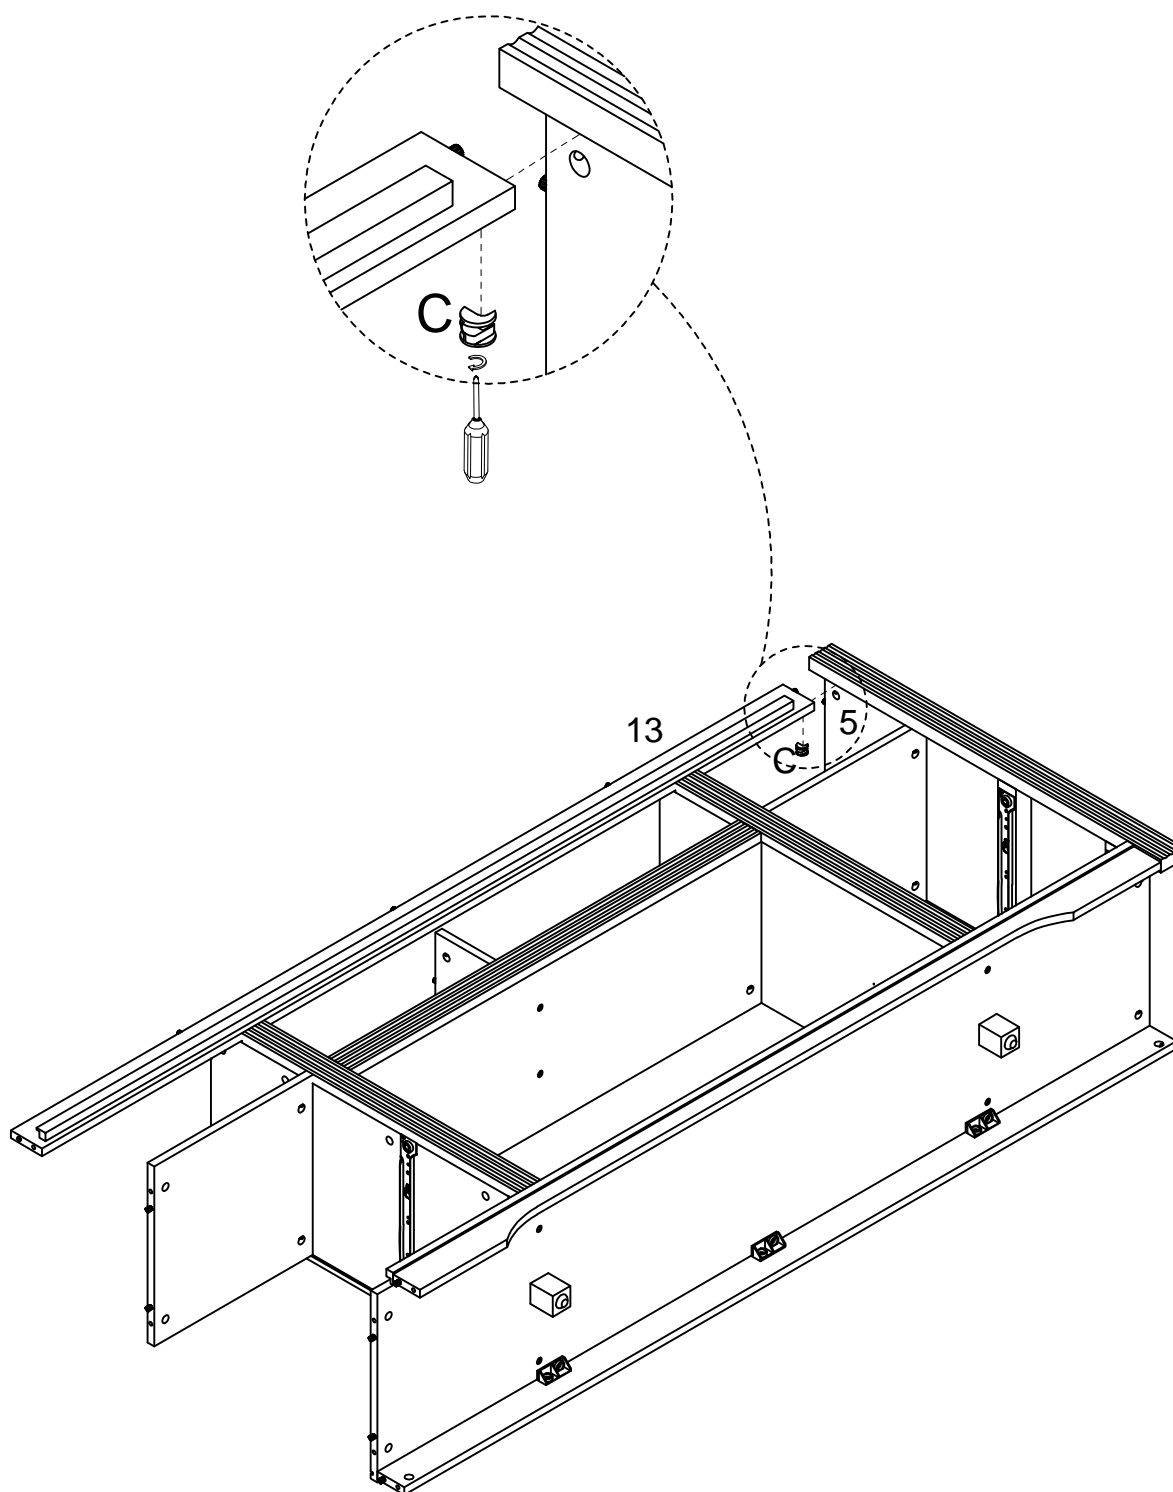
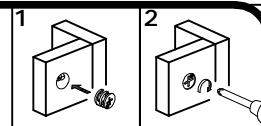


# Step 21




C
X1

# Step 22

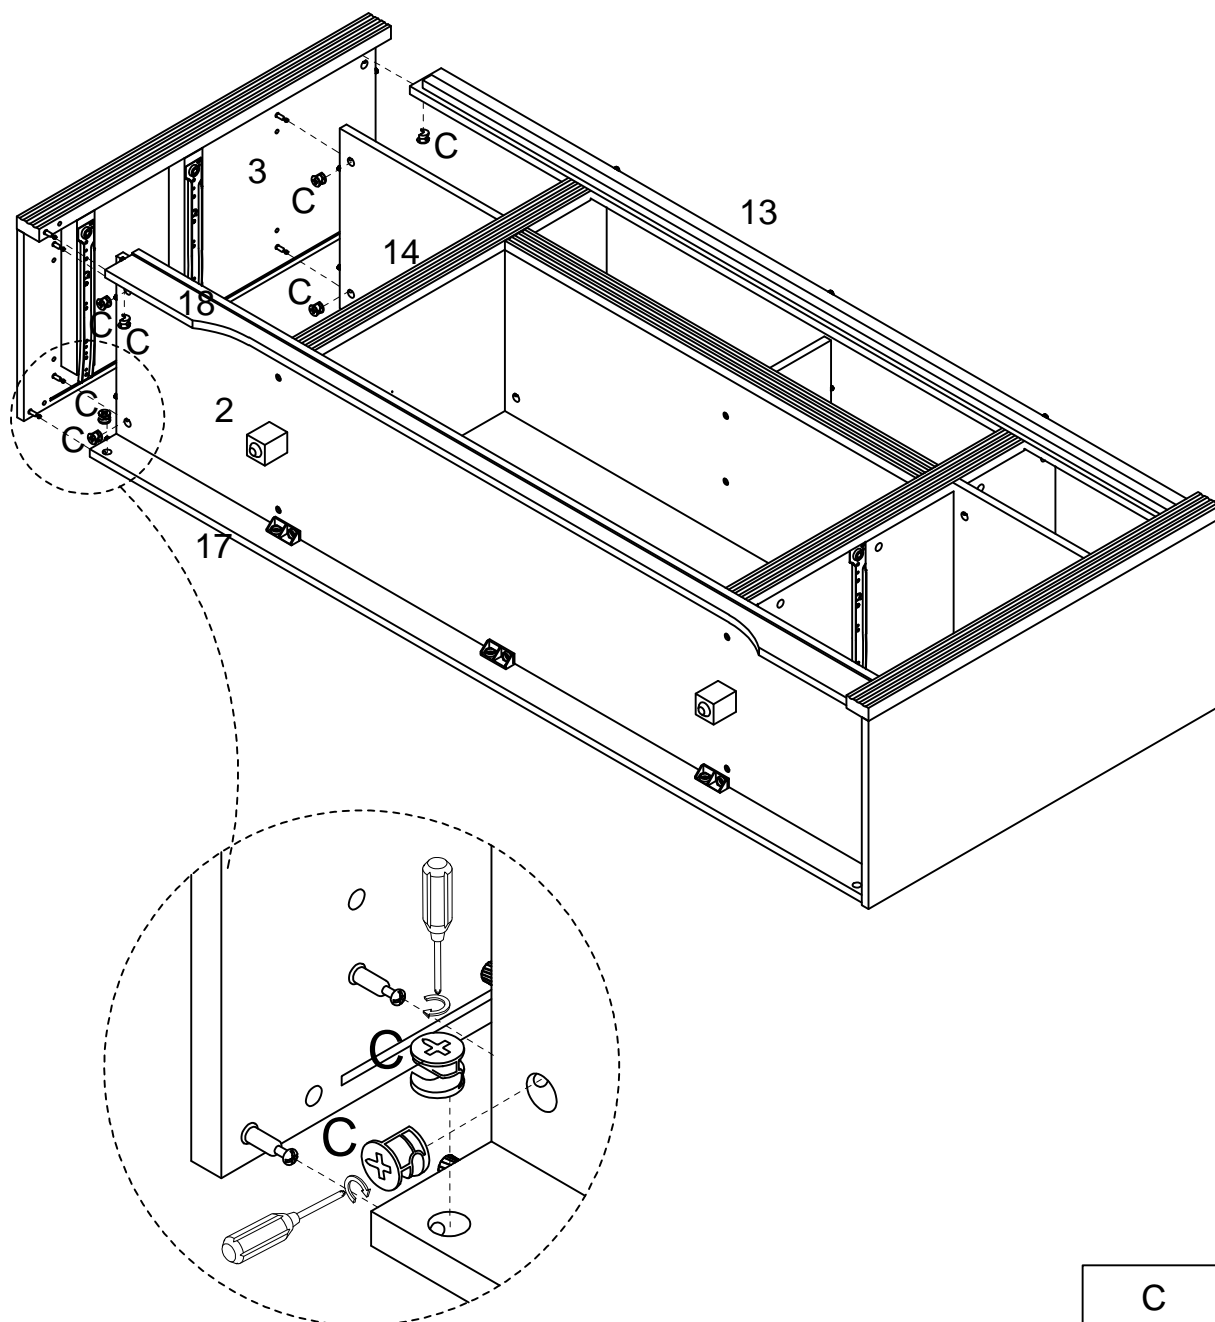
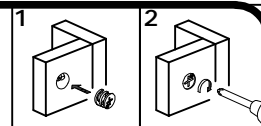



C
X7

## Step 23

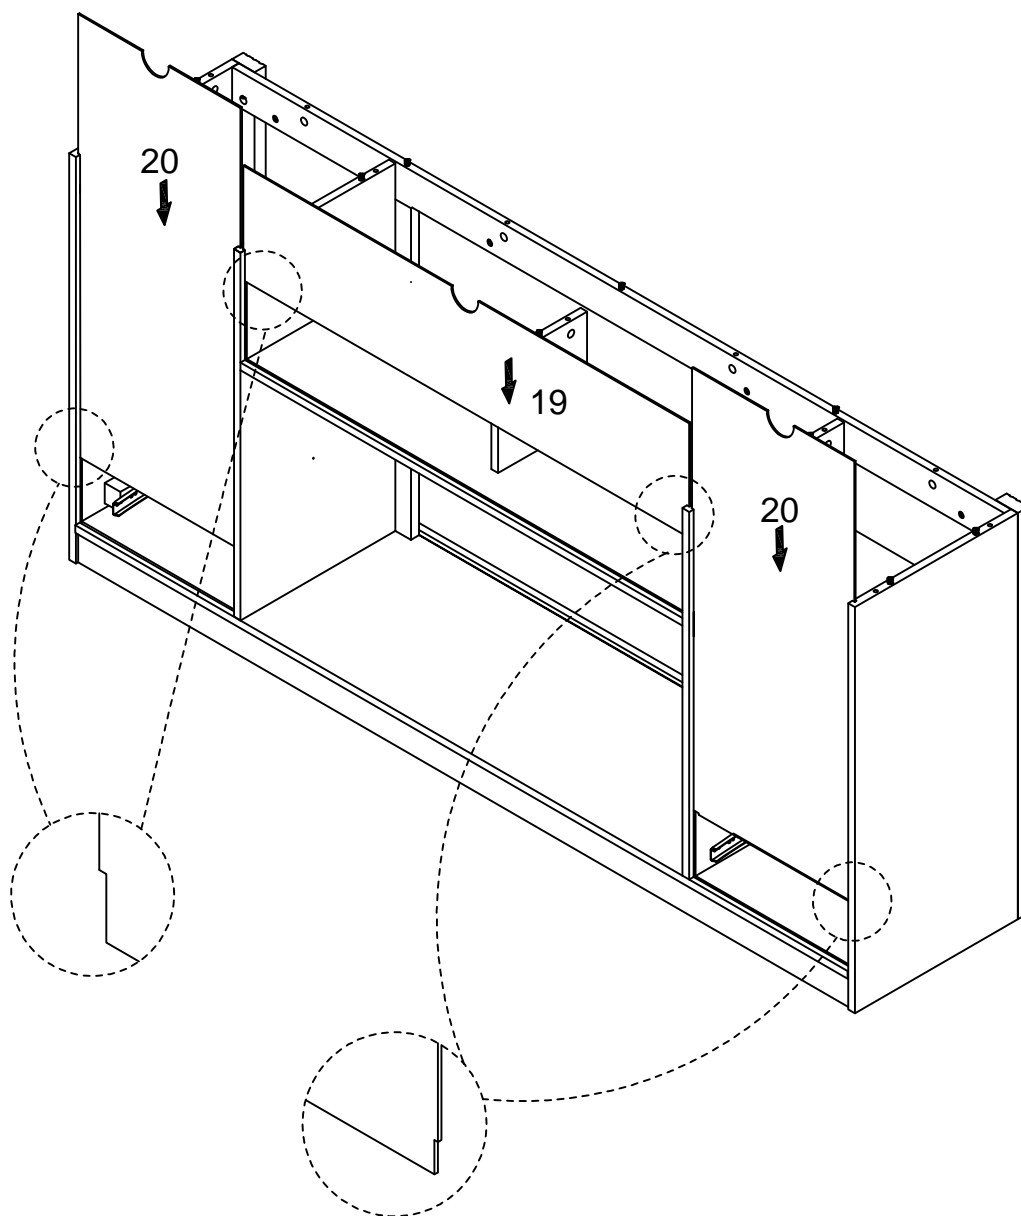


# Step 24

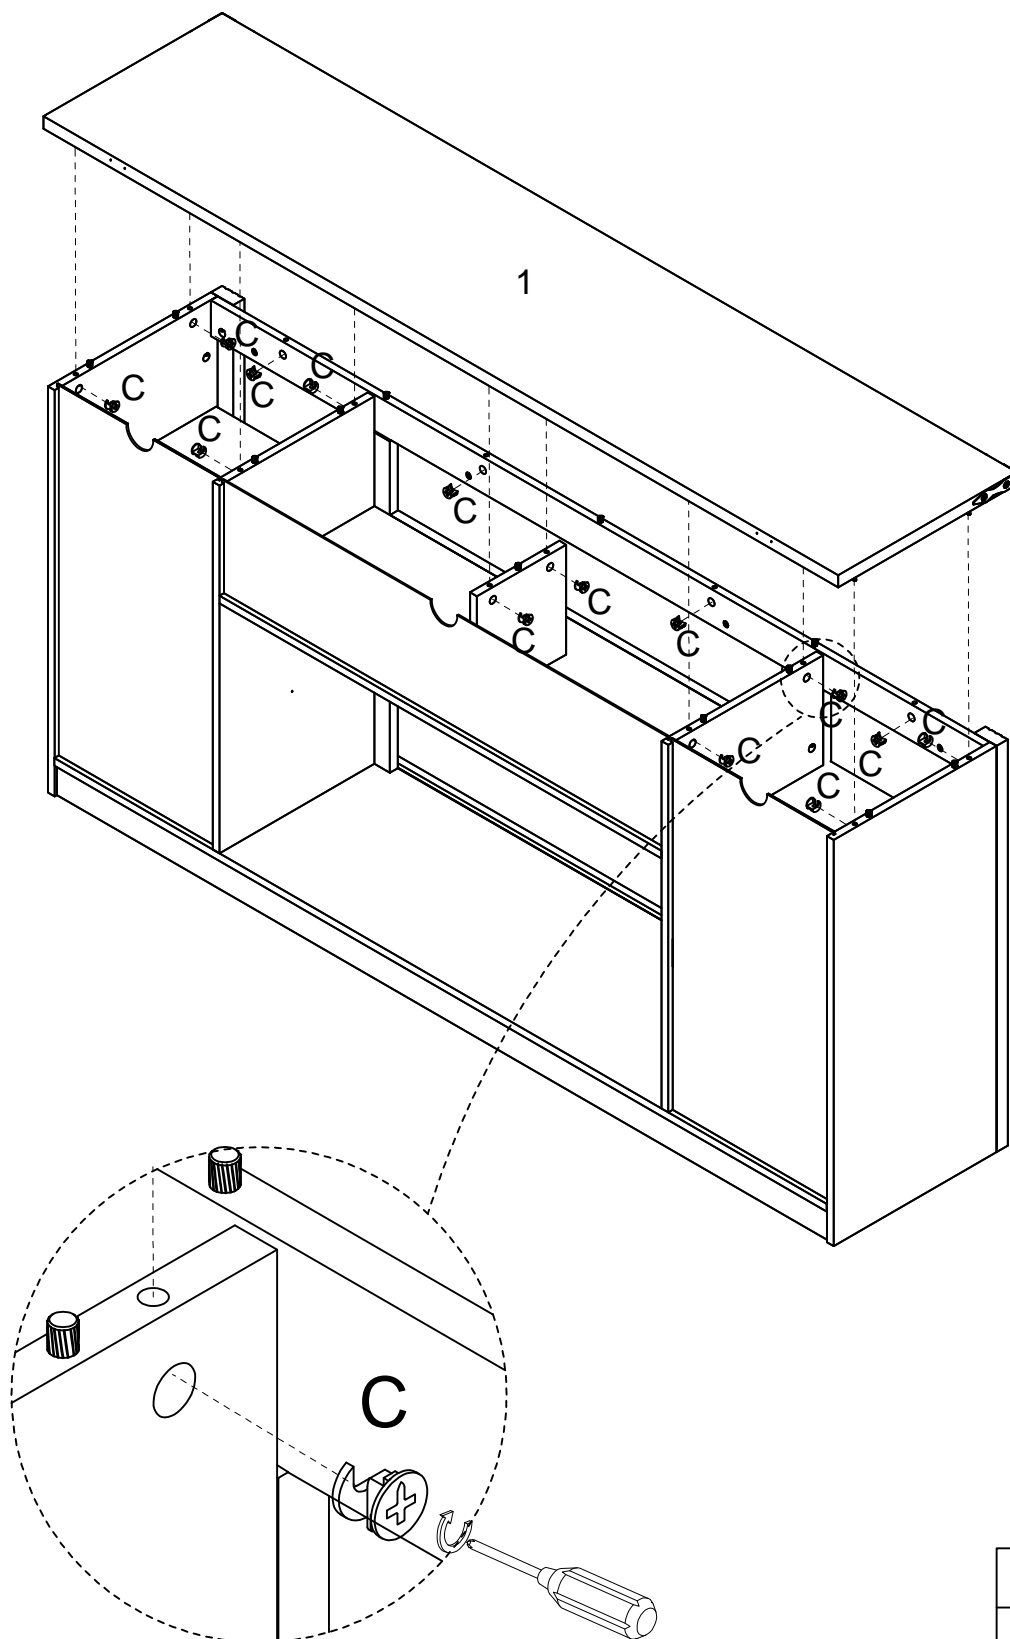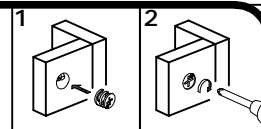


C

X14

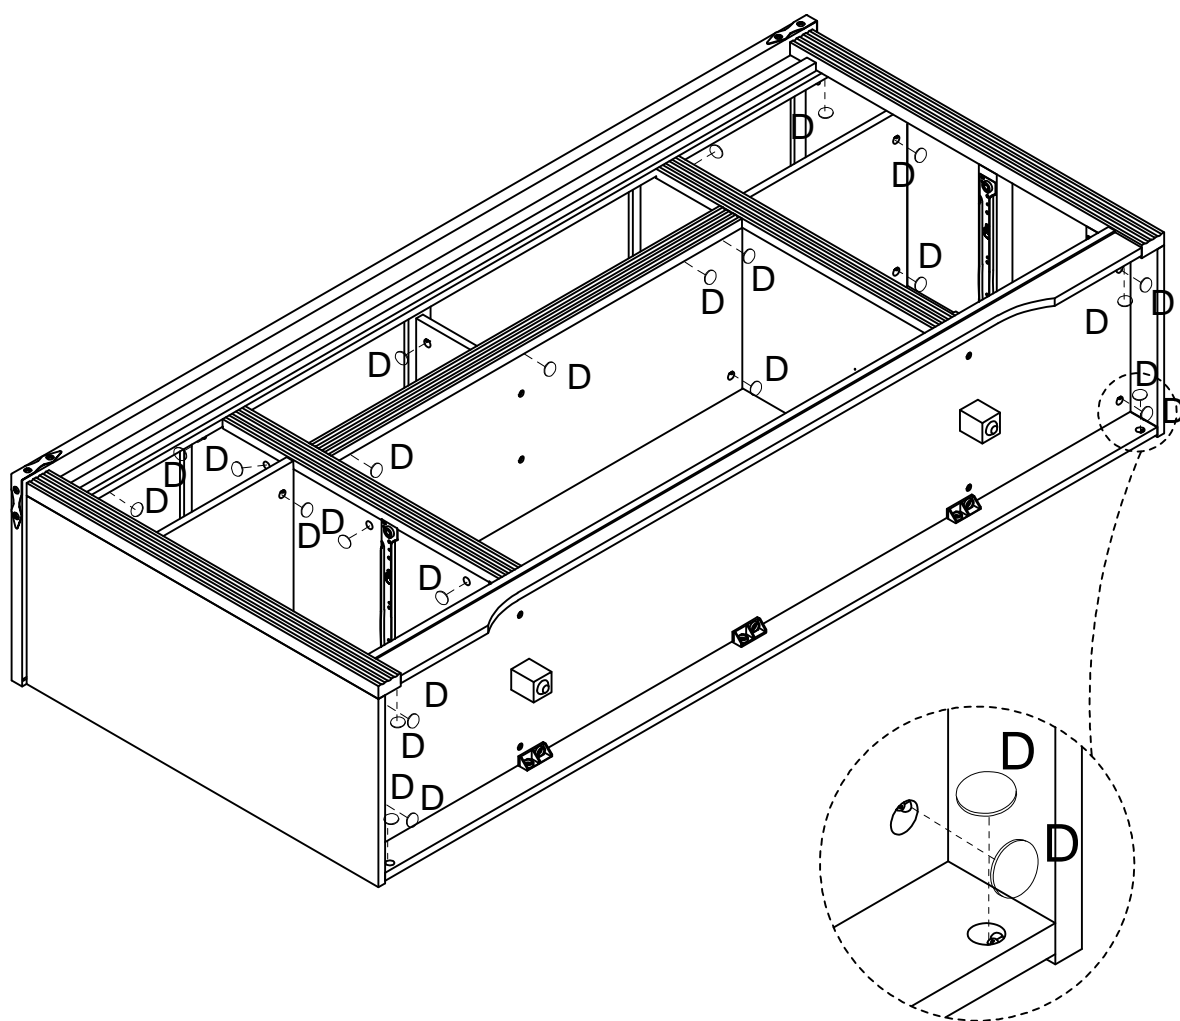
## Step 25




D
O
X51
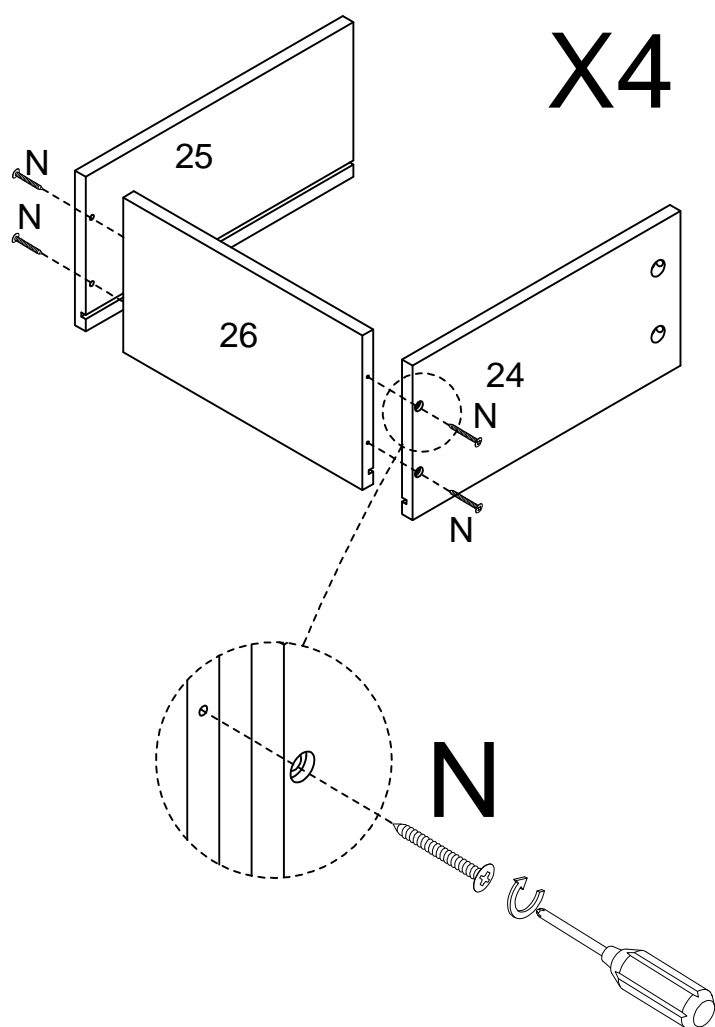
## Step 26





N

X16
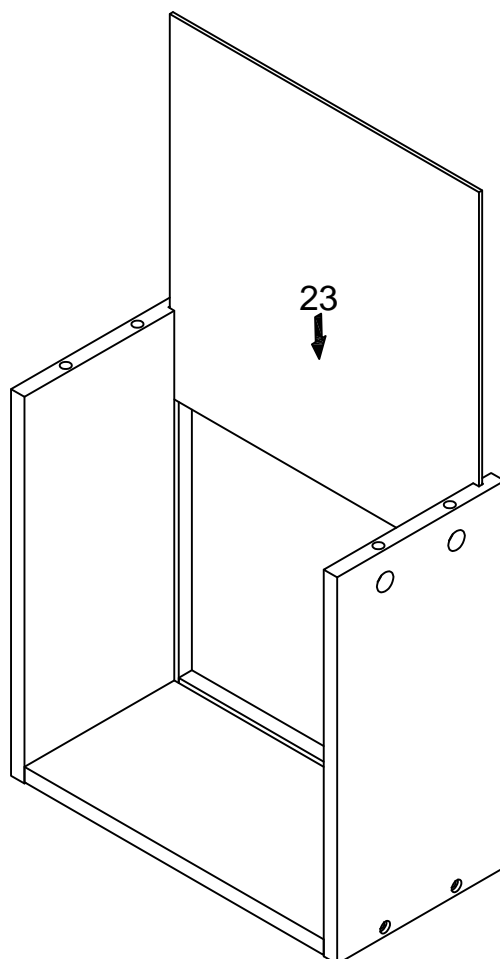
## Step 27




X4
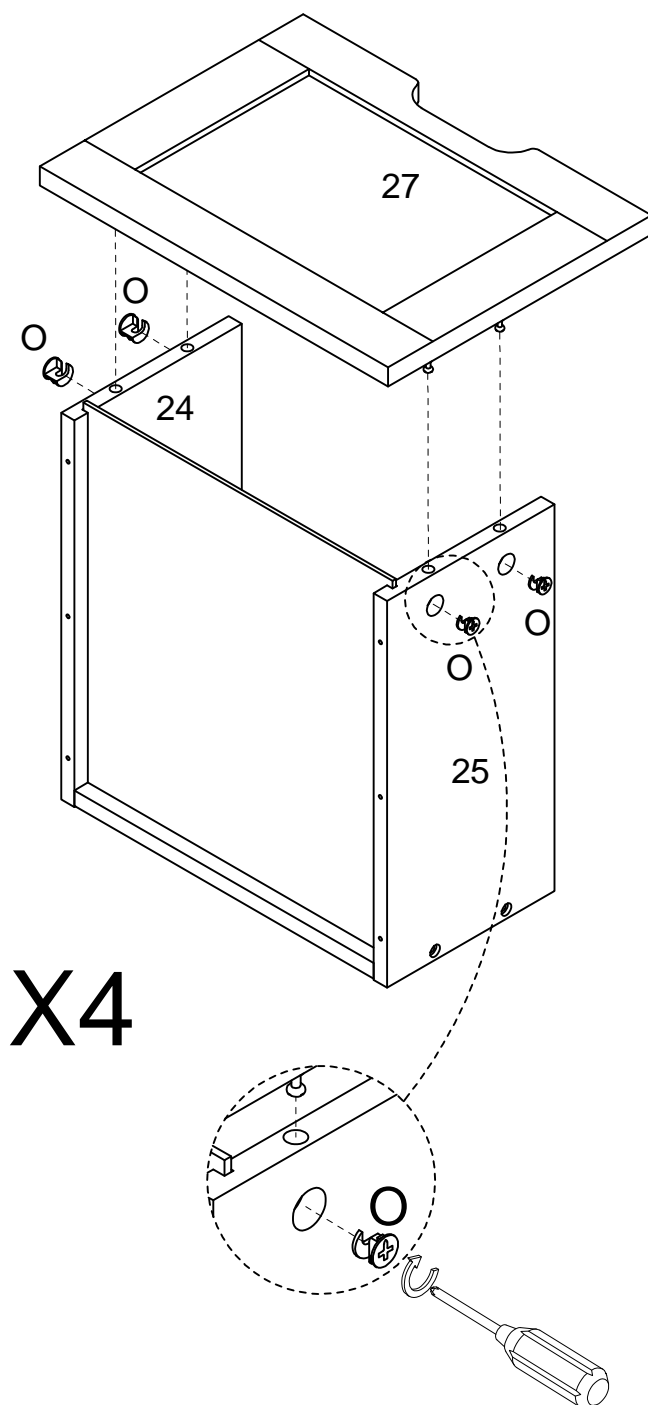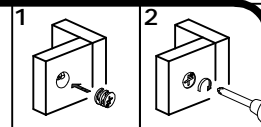
## Step 28



X4

O

X16






## Step 29



### NOTE:


Refer to the images to identify L-DL (left) and L-DR (right). Attach L-DL to #24 panel and L-DR to #25 panel. [M] screws must go in the exact spots shown.

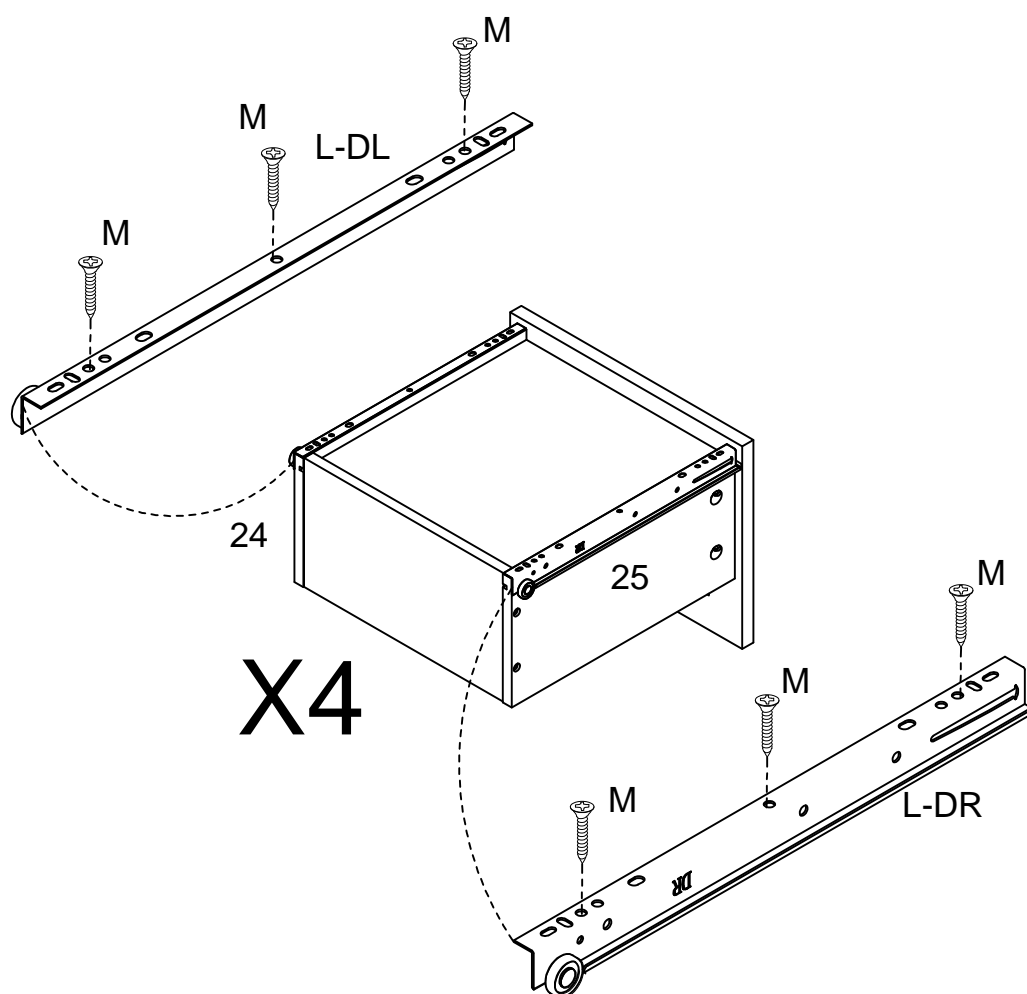


M	L
	
X24	X4


## Step 30

X4

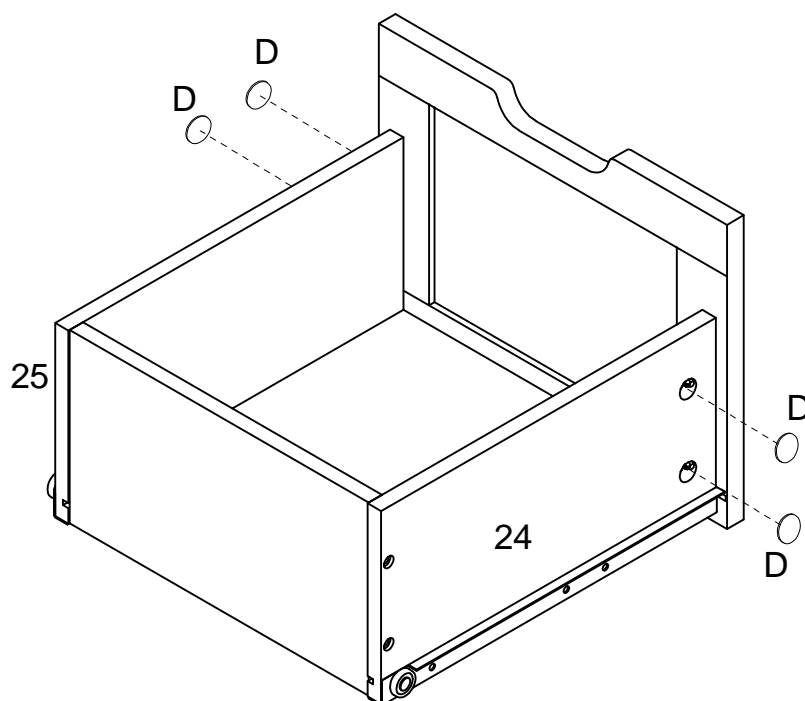




D

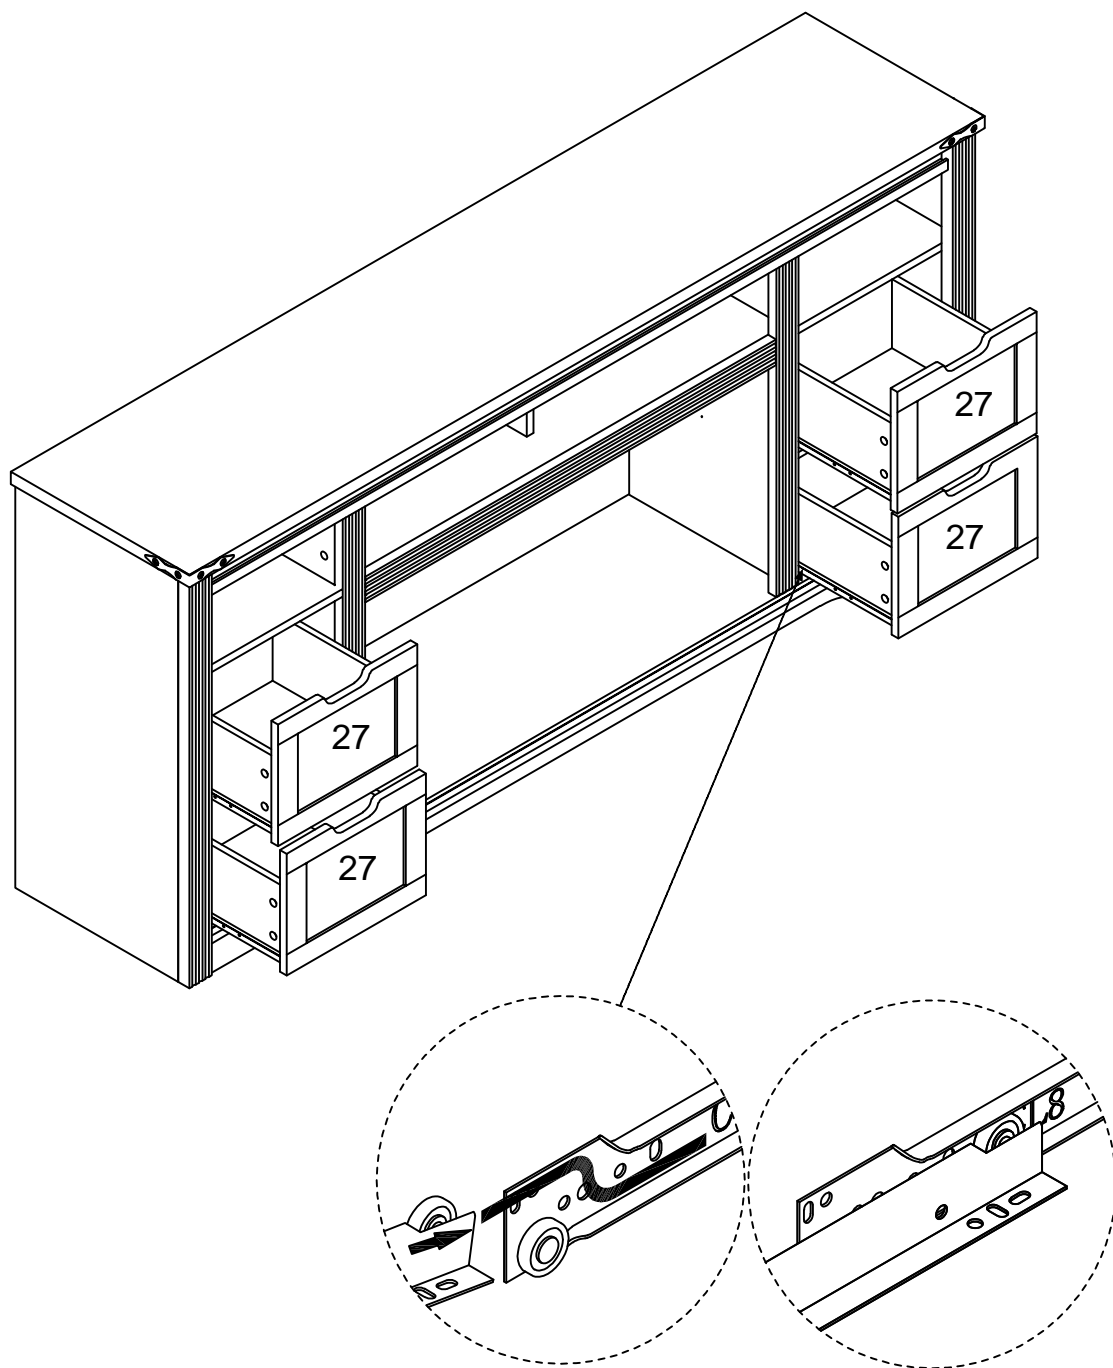X16

## Step 31

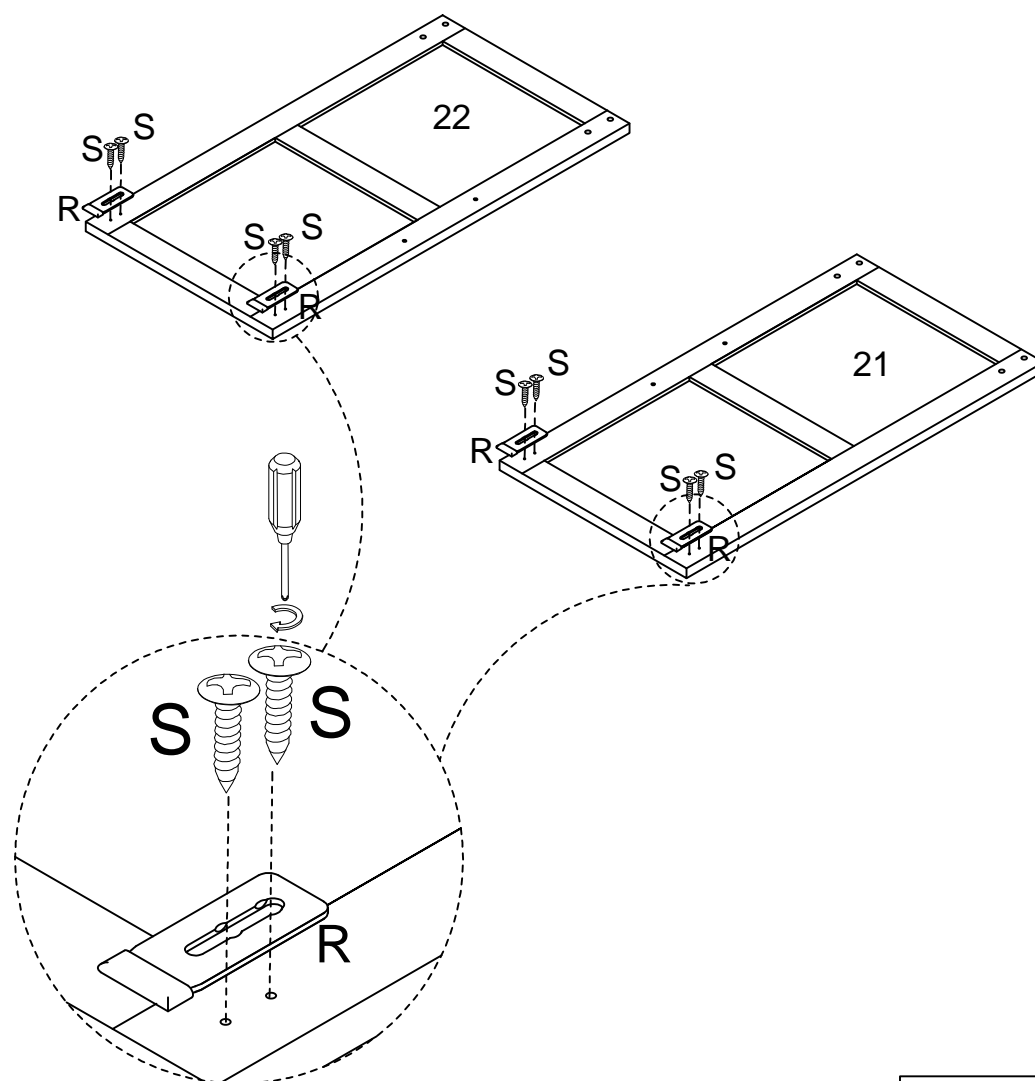




## Step 32




S	R
	
X8	X4

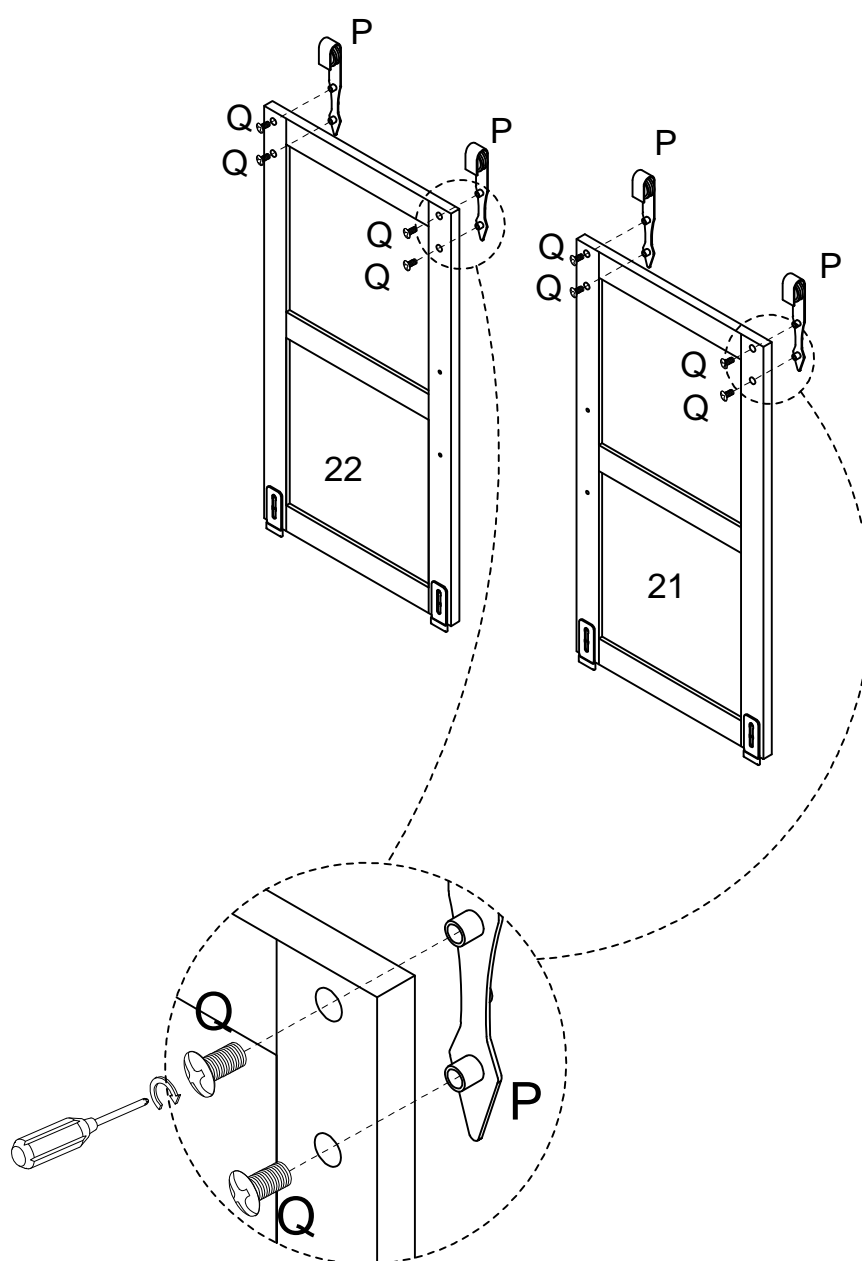

## Step 33




Q	P
	
X8	X4
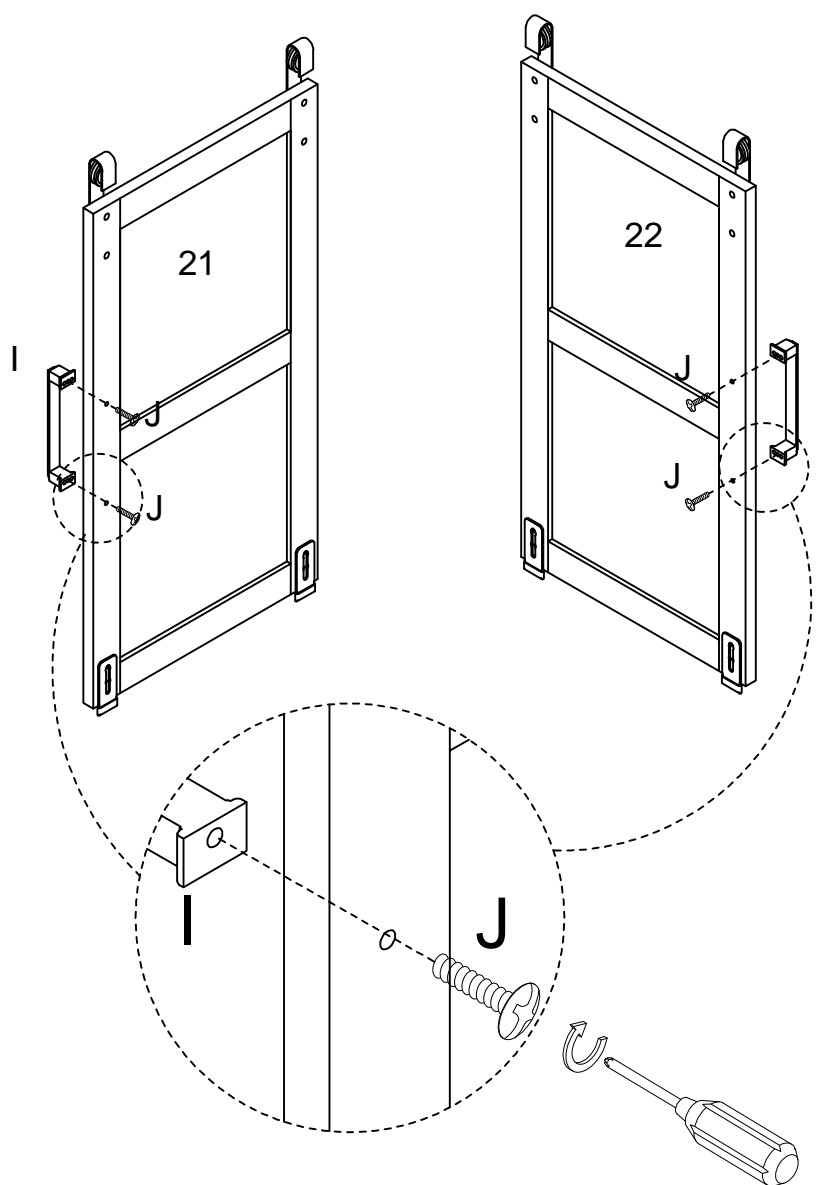
## Step 34




J	I
	
X4	X2

## Step 35

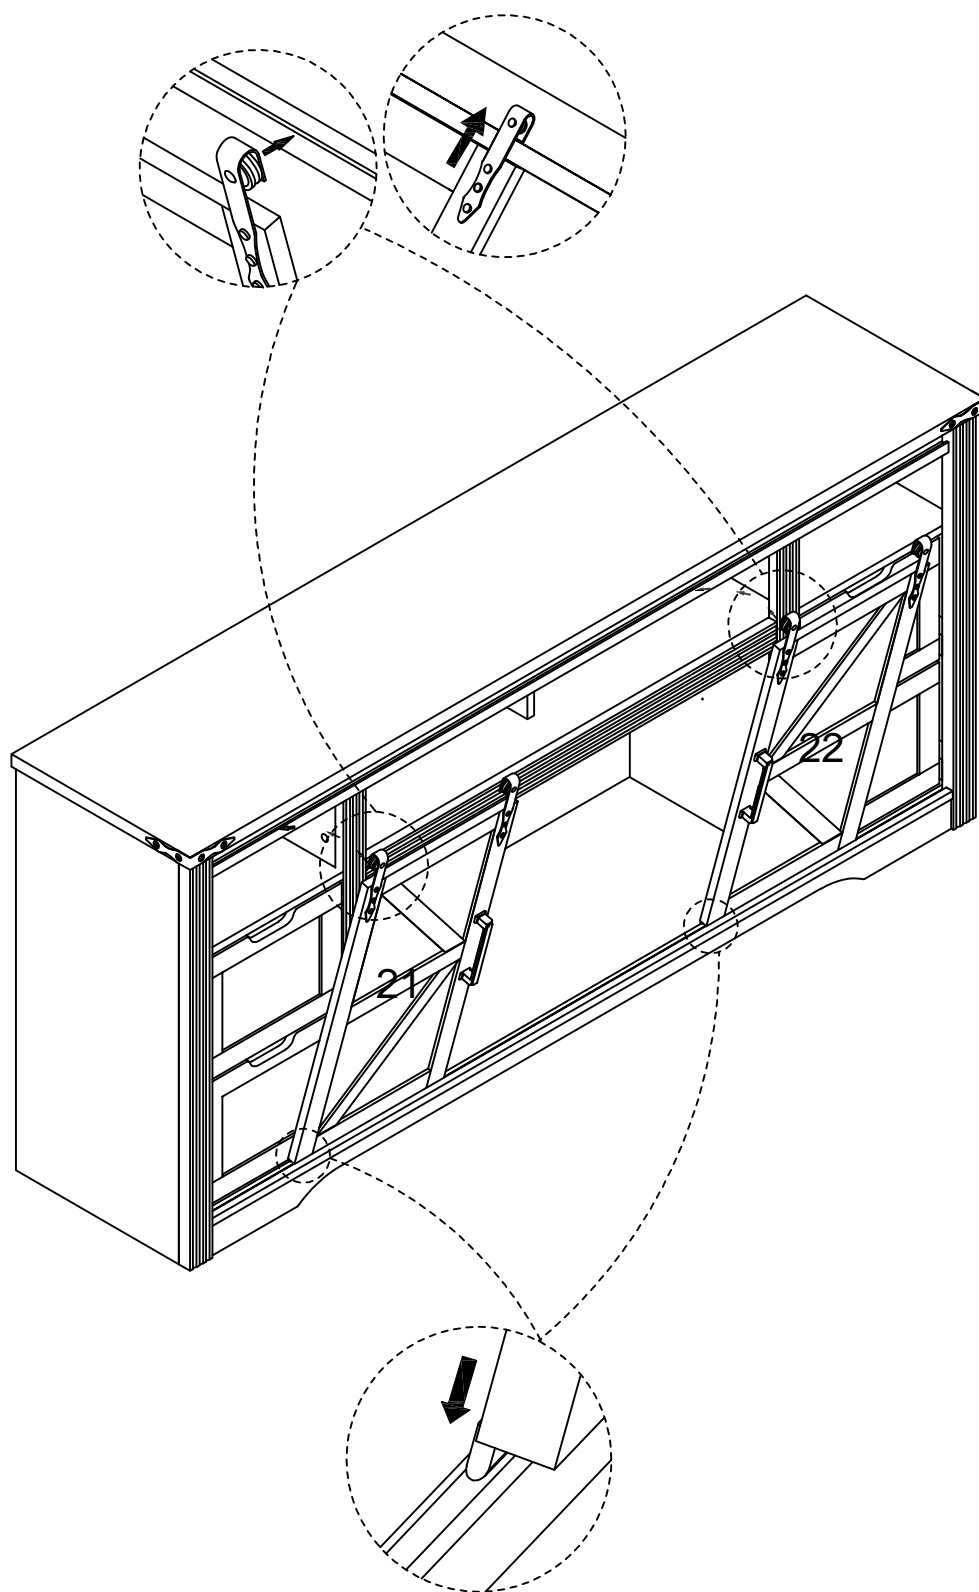


# Step 36

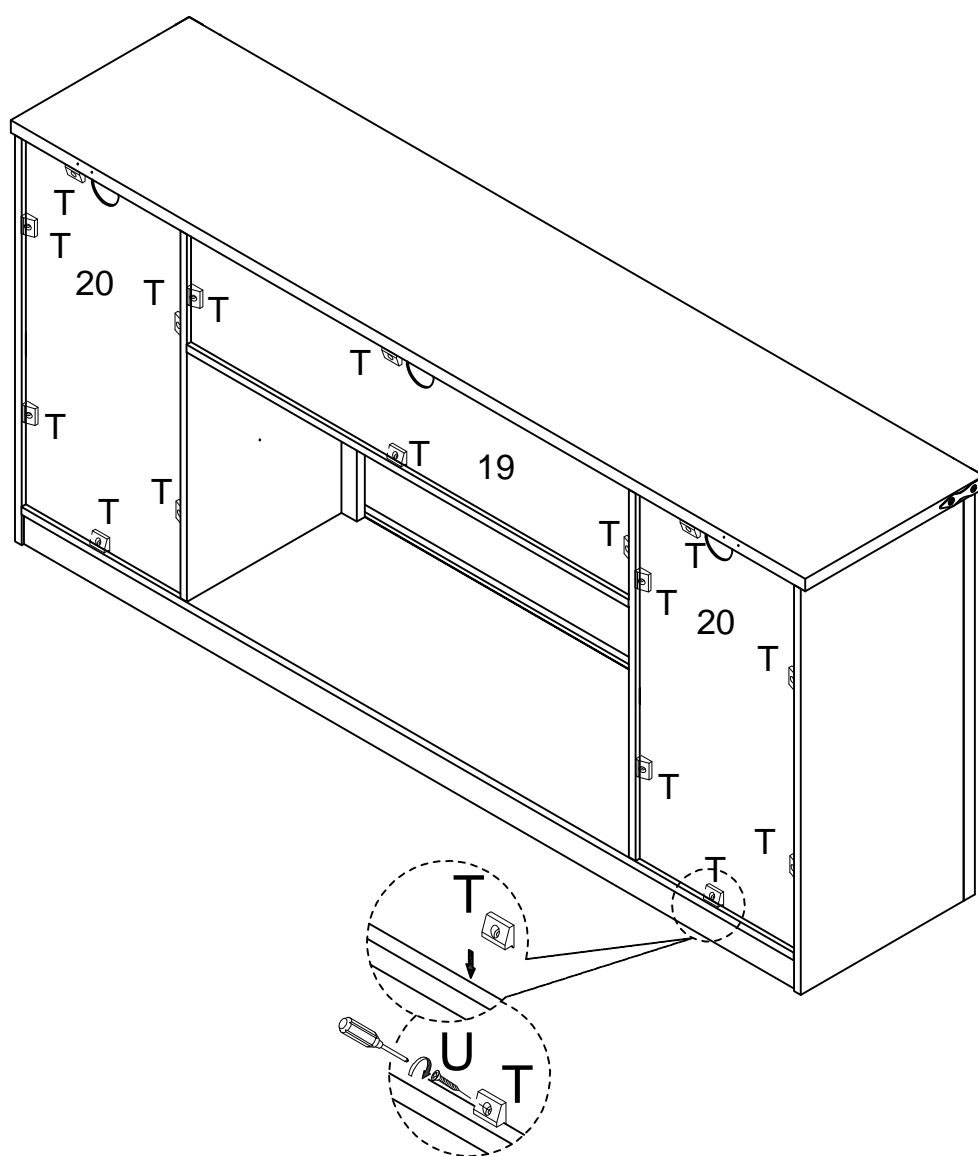



U	T
X16	X16



## Step 37


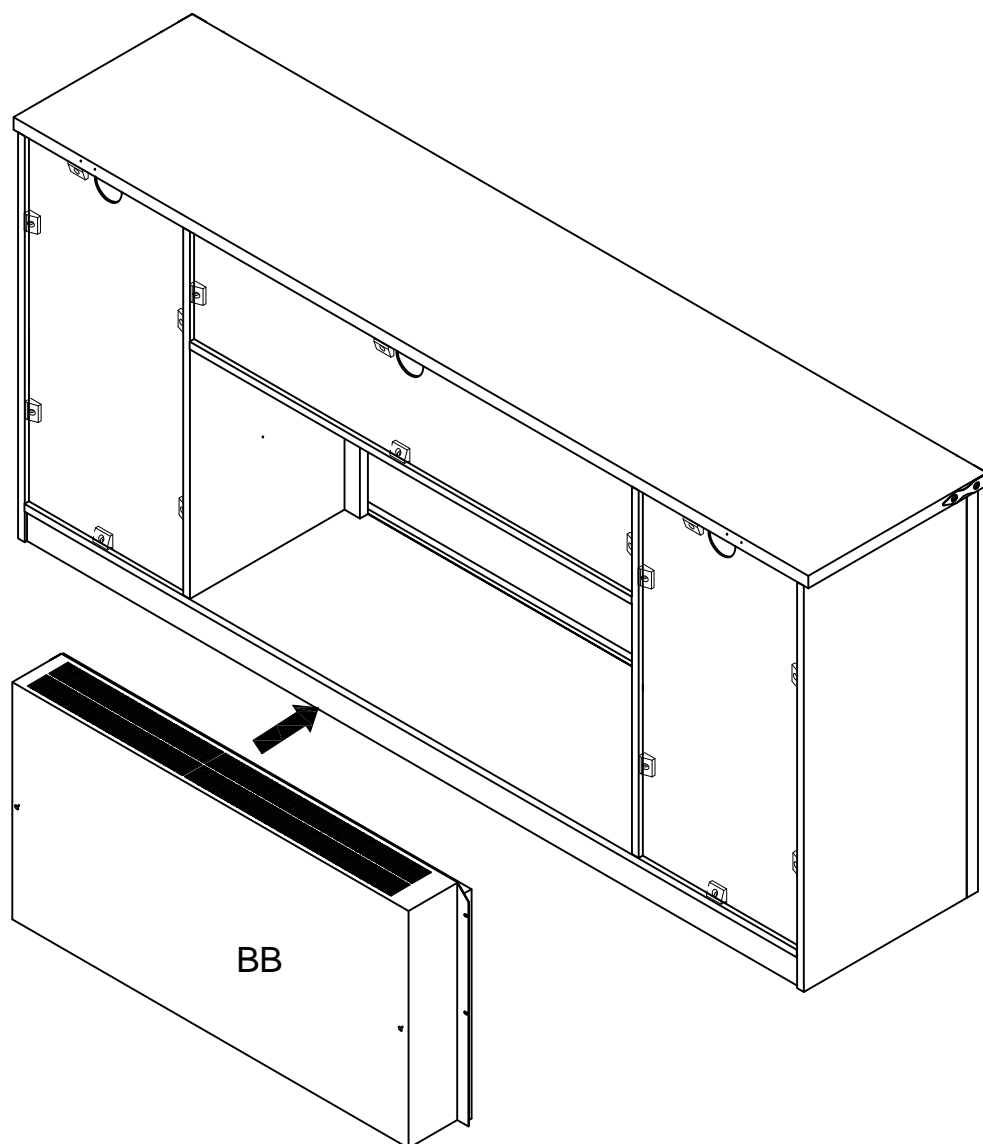




## Step 38

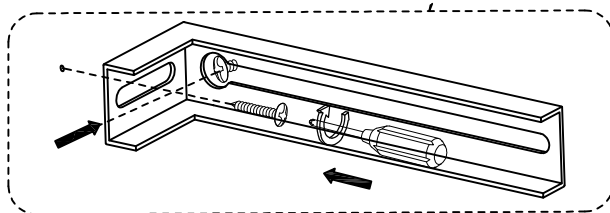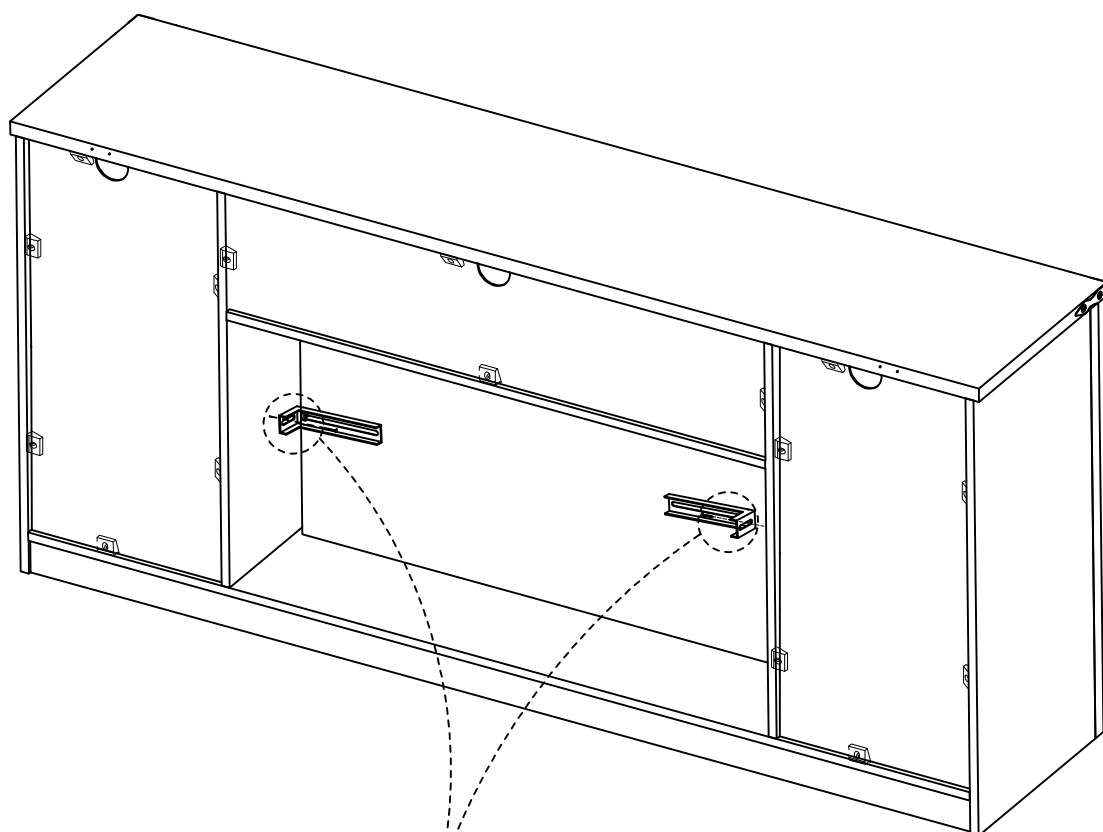





The fireplace blocking parts are in the B packing box, please refer to the fireplace installation instructions for installation steps

# Step 39

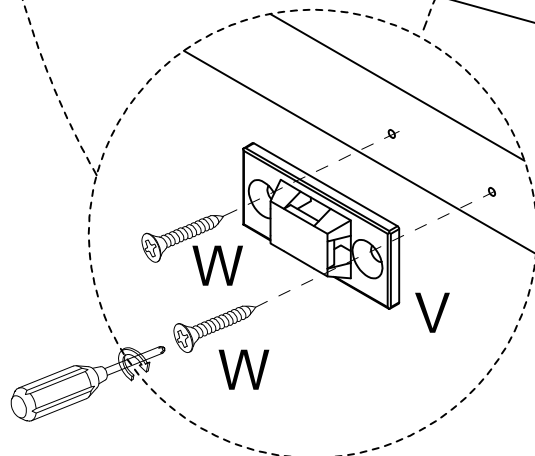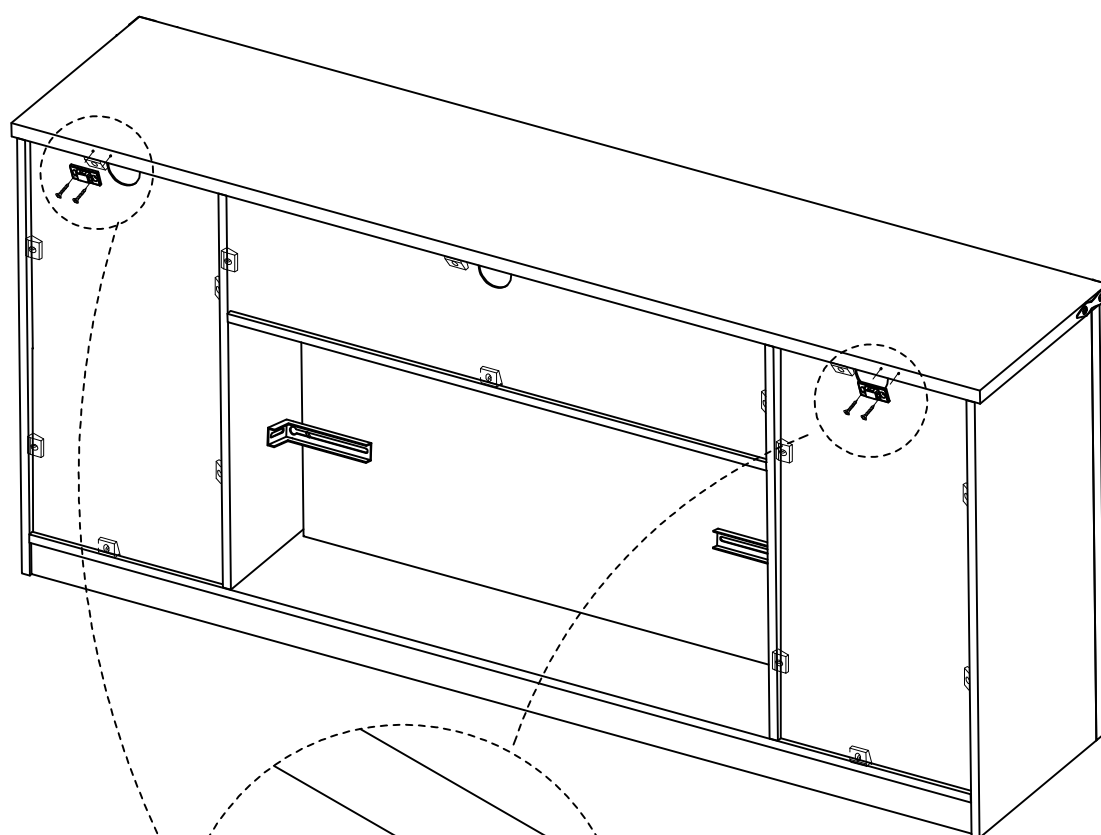




W	V
	
X4	X2

## Step 40

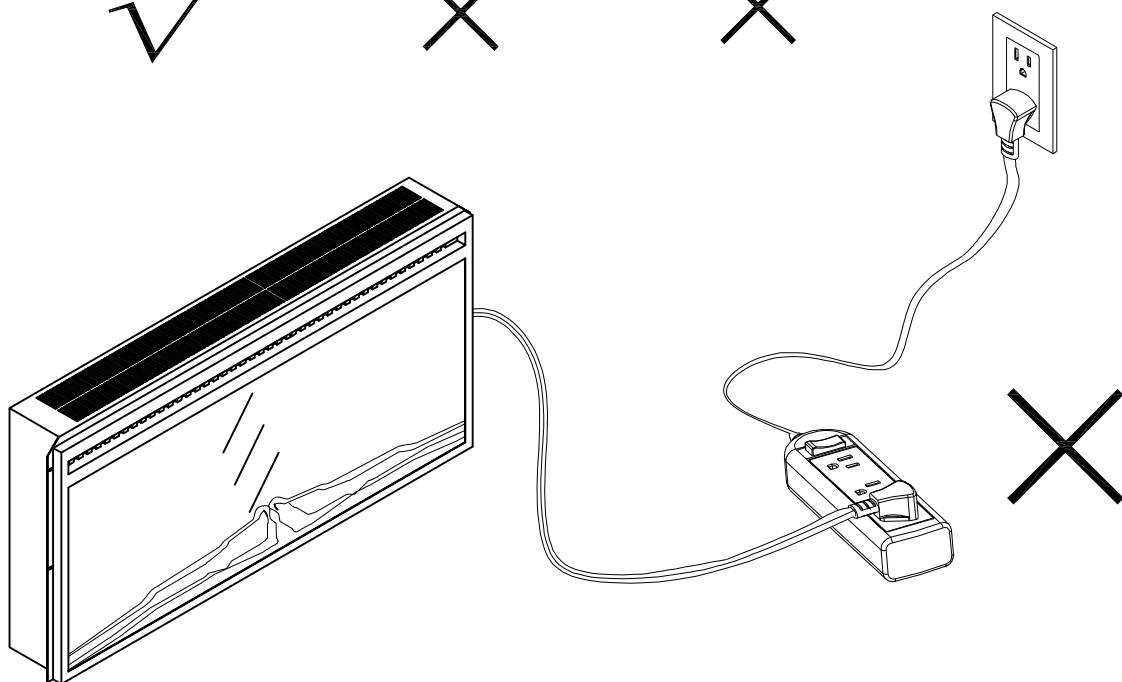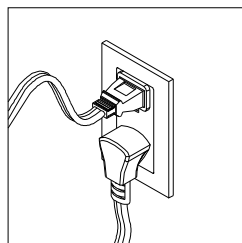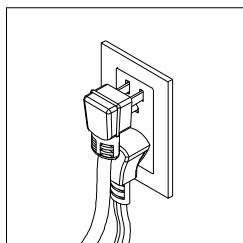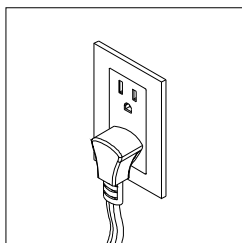



## Step 41

Make Four holes 45MM deep

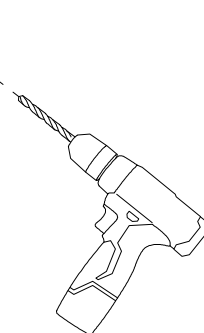


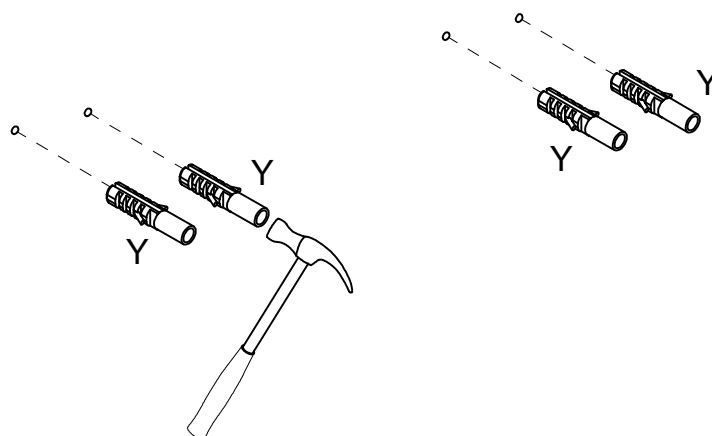

## Step 42




Y

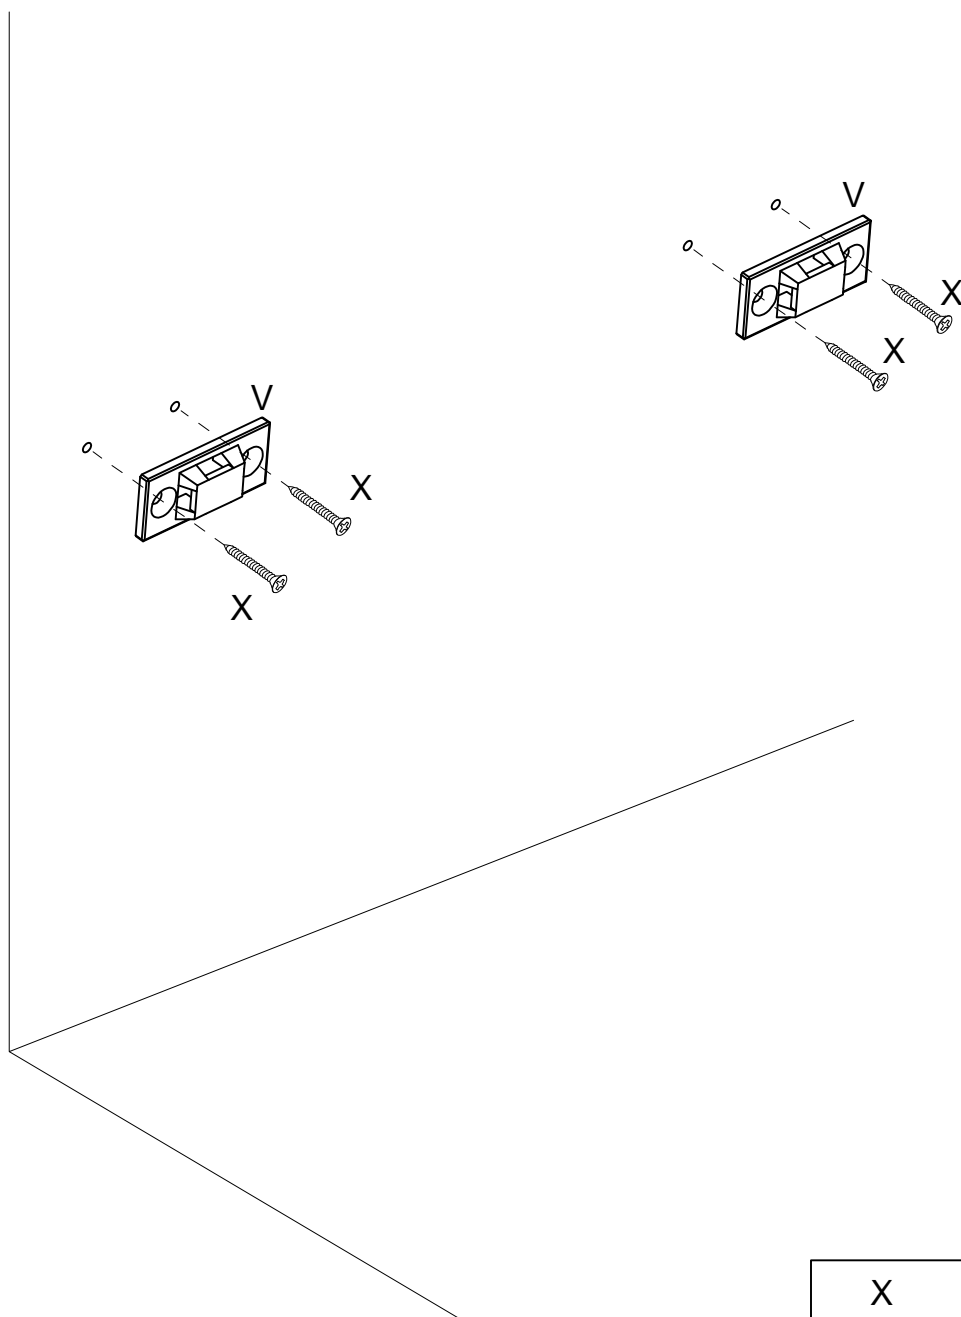X4


# Step 43



X	V
	
X4	X2
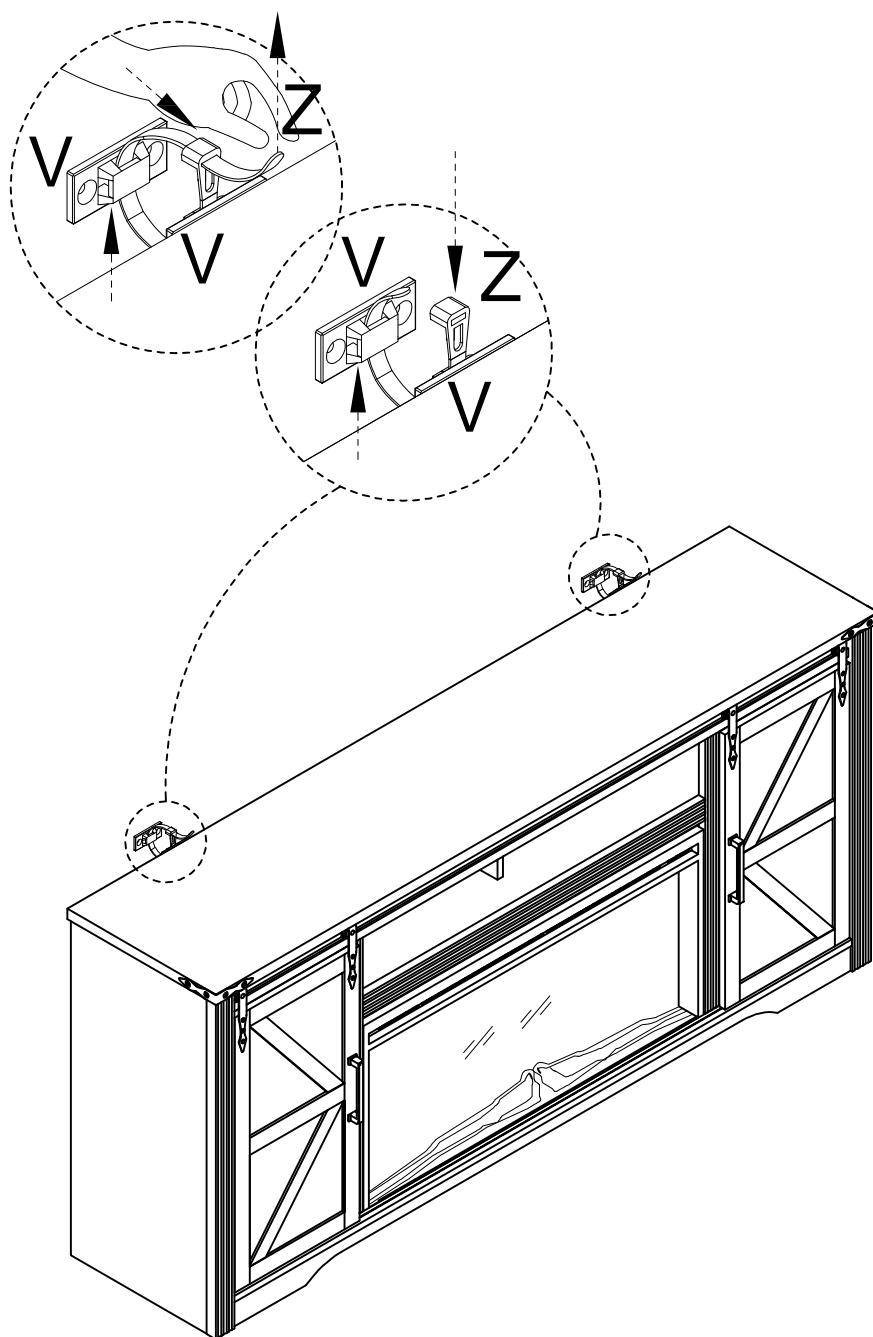
## Step 44



Z

X2



## Step 45

### Final Assembly

