

TODDLER BED WITH DRAWER



MADE IN CHINA

CAUTION: ANY MATTRESS USED IN THIS TODDLER BED MUST BE AT LEAST 51-5/8 INCHES (131CM) BY 27-1/4 INCHES (69CM) WITH A THICKNESS OF AT LEAST 4 INCHES (10CM) AND NOT EXCEEDING 6 INCHES (15CM) .



WARNING:

****** KEEP INSTRUCTIONS FOR FUTURE USE ******

READ ALL INSTRUCTIONS BEFORE ASSEMBLY

CAUTION: BEFORE USING THIS TODDLER BED, RECHECK ALL SCREWS TO BE SURE THAT THEY ARE TIGHTENED SECURELY. A PERIODICAL CHECK SHOULD BE MADE OF ALL SCREWS & NUTS TO BE SURE THEY REMAIN TIGHT.



WARNING:

FAILURE TO FOLLOW THESE WARNINGS AND THE ASSEMBLY INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH.

THE GUARDRAILS PROVIDED **MUST** BE USED

STRINGS CAN CAUSE STRANGULATION ! DO NOT PLACE
ITEMS WITH A STRING AROUND A CHILD'S NECK SUCH AS
HOOD STRINGS OR PACIFIER CORDS

DO NOT SUSPEND STRINGS OVER THE TODDLER BED OR
ATTACH STRINGS TO TOYS

DO NOT PLACE THE TODDLER BED NEAR A WINDOW
WHERE CORDS FROM BLINDS OR DRAPES CAN STRANGLE
A CHILD. DO NOT TIE PACIFIER, NECKLACES, OR ANY OTHER
ITEMS AROUND A CHILD'S NECK OR ON THE TODDLER BED
PARTS. THIS COULD CAUSE STRANGULATION.

BEFORE EACH USAGE OR ASSEMBLY, INSPECT THE
TODDLER BED FOR DAMAGED HARDWARE, LOOSE
JOINTS, MISSING PARTS, OR SHARP EDGES. DO NOT USE
THE TODDLER BED IF ANY PARTS ARE MISSING OR
BROKEN. ASK YOUR DEALER OR WRITE, FOR
REPLACEMENT PARTS AND INSTRUCTIONAL
LITERATURE IF NEEDED. DO NOT SUBSTITUTE ANY
PARTS.

IF REFINISHING, USE A NON TOXIC FINISH SPECIFIED FOR
CHILDREN'S PRODUCTS. TO CLEAN, WASH WITH MILD
SOAP AND A DAMP CLOTH.


TO STORE, KEEP IN A COOL, DRY PLACE.

DO NOT USE WITH LESS THAN 12 INCHES (31CM) OF
SPACE BETWEEN THE TODDLER BED AND SOLID OBJECTS
AS A WALL OR DRESSER. A CHILD COULD SLIDE INTO A
SMALL SPACE AND SUFFOCATE.


DO NOT USE THE TODDLER BED FOR INFANTS. THIS
TODDLER BED IS NOT A SUBSTITUTE FOR A CRIB. THE
TODDLER BED IS INTENDED FOR A CHILD BETWEEN THE
AGE OF 15 MONTHS TO 5 YEARS WITH A MAXIMUM
WEIGHT OF 50 POUNDS (23KG).

DO NOT USE A WATER MATTRESS WITH THIS PRODUCT.


HARDWARE AND TOOL DIAGRAM




(a) Bolt 3 11 PCS




(b) Bolt 2 3 PCS




(c) Barrel Nut 13 PCS

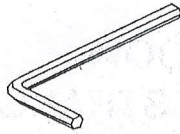


(d) Allen Wrench 1 PC




(e) Bolt 1 3/5 1 PCS

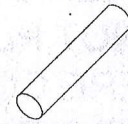


(f) Wood Dowel 2 PCS



(g) Cam Bolts 12 PCS




(h) Cams 12 PCS




(i) WOOD SCREW 1 PC


Component Parts

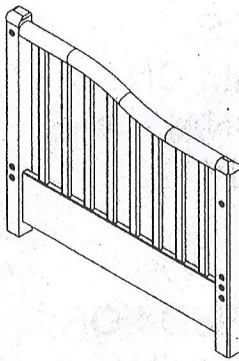


(A) Headboard 1PC

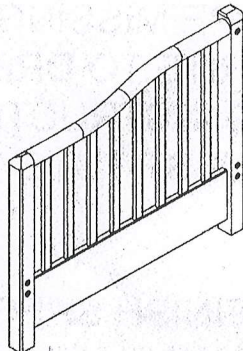


(B) Footboard 1PC

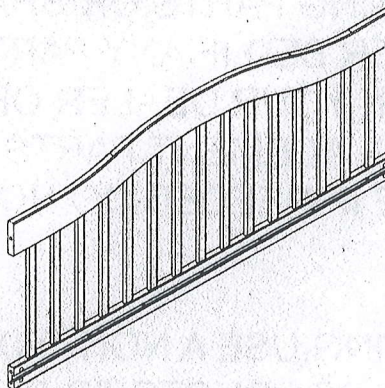


(C) Back Rail 1 PC

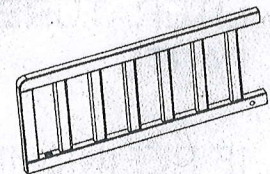


(D) Bed Rail 1 PC

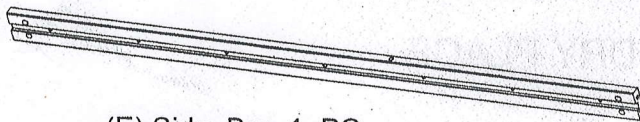


(E) Side Bar 1 PC




(F) Cross Middle Bar 1 PC





(G) Cross Bar 6 PCS




(H) Drawer Front Panel 1PC

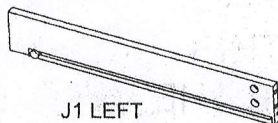


(J) Drawer Left/Right Panel 2PCS

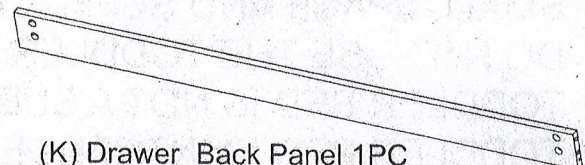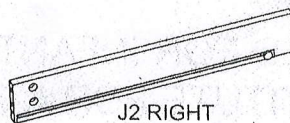


(K) Drawer Back Panel 1PC

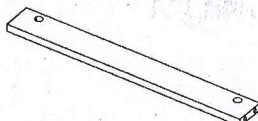

(L) Drawer Middle Panel 1PC

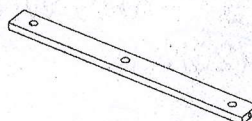


(M) Drawer Bottom Support Bar 1PC

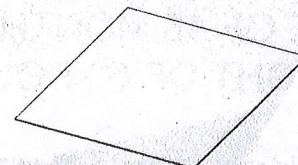


(N) Drawer Bottom Panels 2PCS

STEP#1

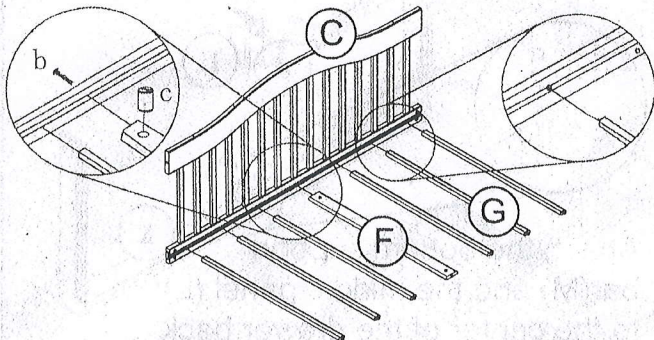


Connect Cross middle bar (F) to the back rail (C) using barrel nut (c) and bolt (b). Attach cross bar (G) to the back rail (C). Please note: dowel end should fit into hole in the groove.

STEP#4

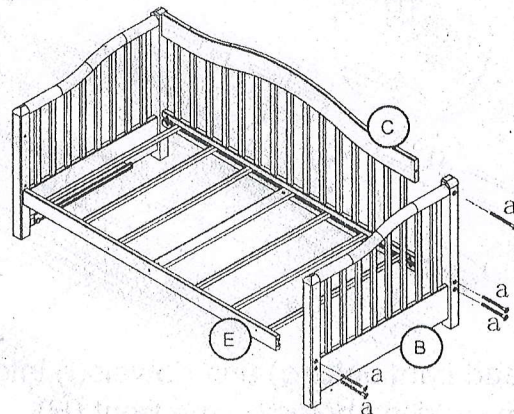


Repeat step 3 for the footboard (B) as shown.

STEP#2

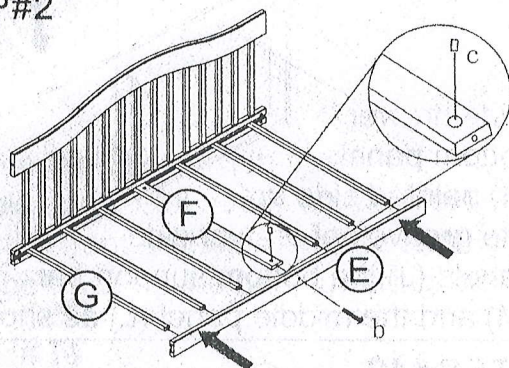


Connect the Side bar (E) to the Cross middle bar (F) using barrel nut (c) and bolt (b). Make sure cross bar (G) are connected to the grooving on the side bar (E) and the hole on the side bar (E) are facing up.

STEP#5

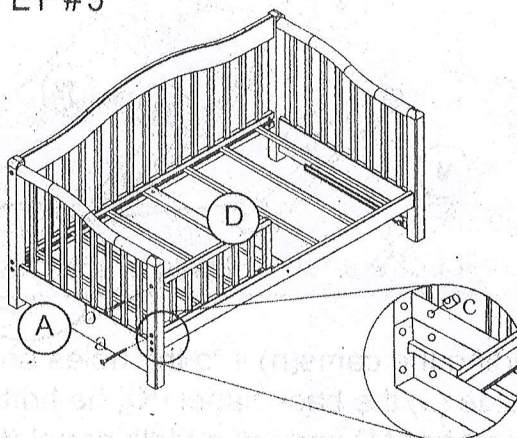


Connect the bed rail (D) to the headboard (A) using the barrel nut (c) and the bolt (a) and bolt (b).

STEP#3

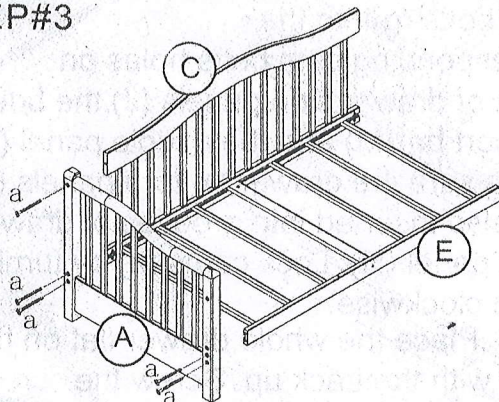


Attach the side bar (E) and the back rail (C) to the headboard (A) using barrel nuts (c) and bolts (a).

STEP#6

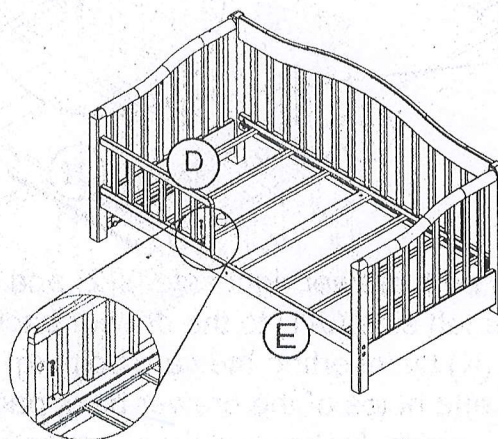


Bolt bottom side rail into the Side bar (E) using bolt (e) as shown.

STEP#7

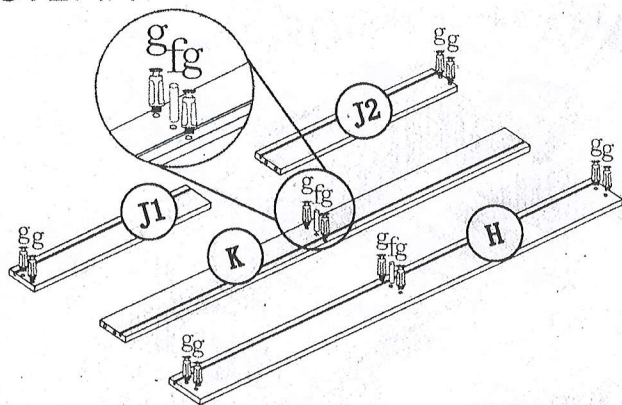


Thread cam bolts(g) and dowels(f) into the pre-drilled holes on the front (H), side (J) and back panel (K)

STEP# 8

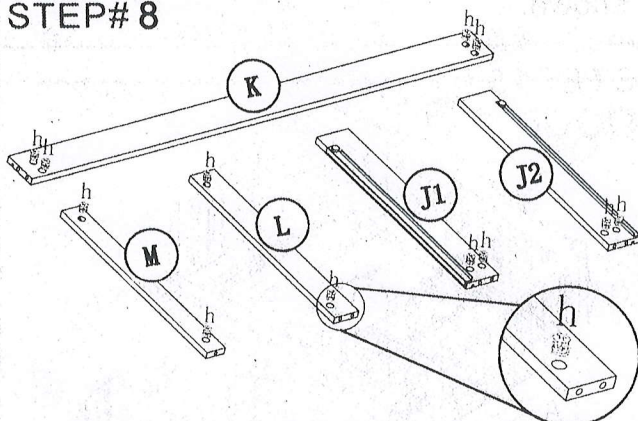


Inserting the cams(h) into the holes on the side (J),the back panel (K),the bottom support bar(M) and the middle panel (L).

STEP# 9

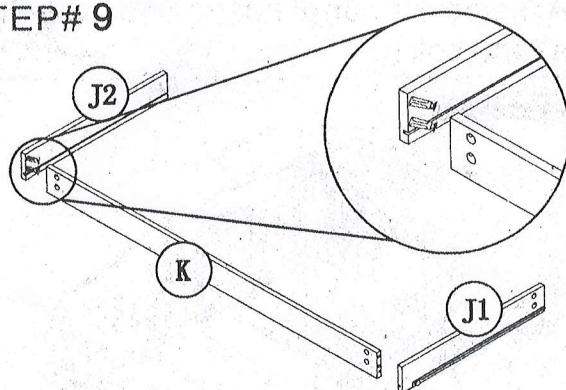


Attach both drawer right side (J-2) and drawer left side (J-1) to the drawer back panel (K) by inserting the cam bolts (g) to the end holes of the drawer back panel (K) as shown. Make sure the grooves line up and face inside. Lock the cams (h) in the drawer back panel (K) by turning them.

STEP# 10

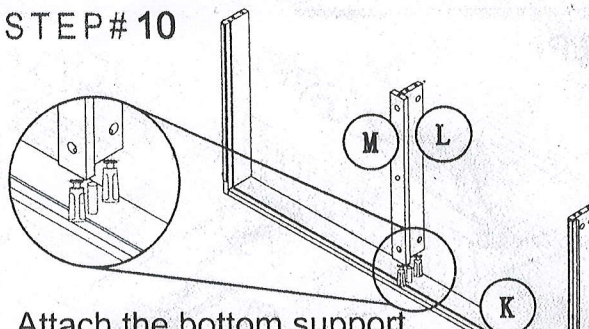


Attach the bottom support bar(M) and the middle panel (L) to the center of the drawer back panel (K) in the same way as shown.

STEP#11

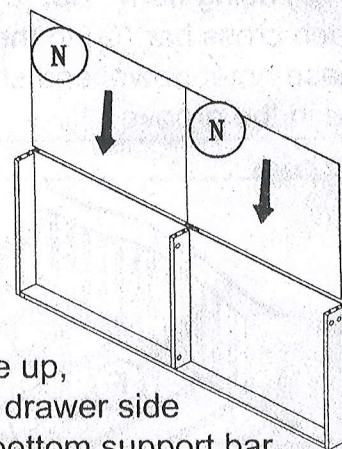

Slide drawer bottom panels (N) painted side up, into grooves of drawer side panels (J),the bottom support bar (M) and the middle panel (L) as shown.


STEP#12

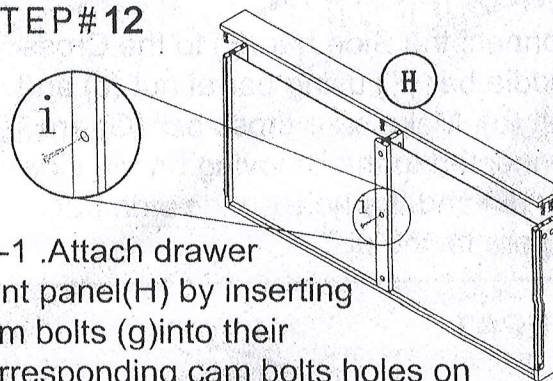

12-1 .Attach drawer front panel(H) by inserting cam bolts (g)into their corresponding cam bolts holes on ends of drawer side panels (J),the bottom support bar(M) and the middle panel (L). Make sure the drawer bottom panels (M) are also inserted into grooves of drawer front panel (H). Lock cams (h) by turning them clockwise.


12-2 .Place the whole drawer flat on the floor with the back up. Screw the screw(i) from the middle of the bottom support bar (K) to the middle panel (J), as the image shown.

STEP#13

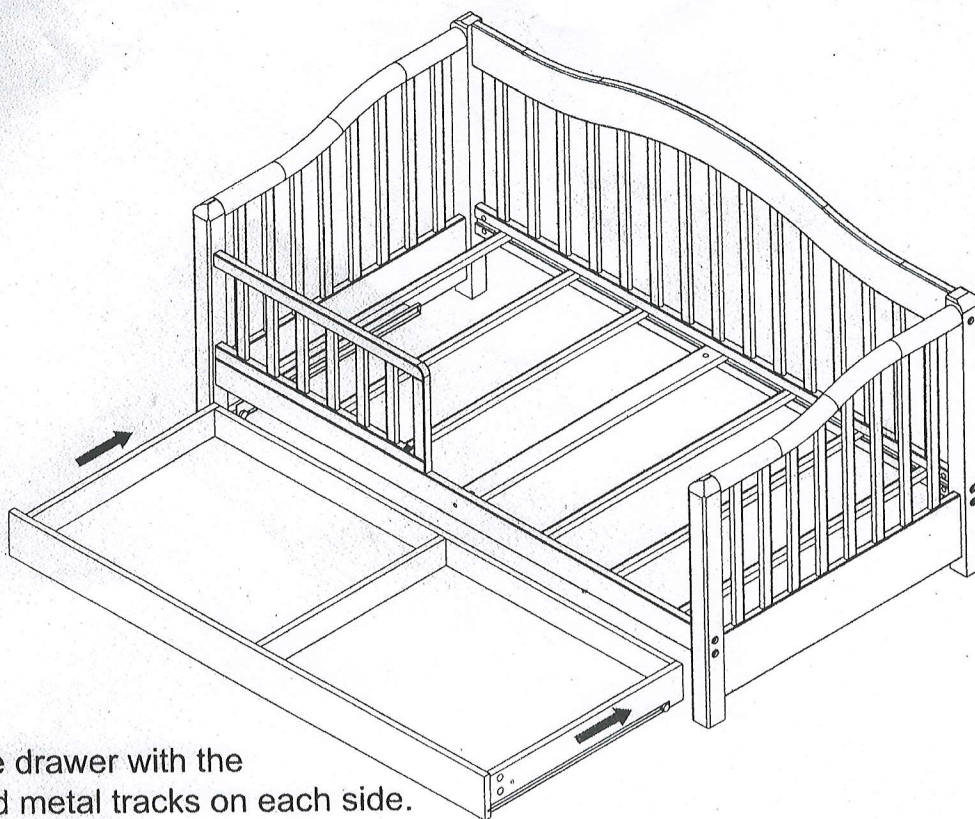

Line up the drawer with the wheels and metal tracks on each side. With the front slightly elevated, slide into the track on the bed, lowering the front as it rolls into place under the toddler bed.

STEP#14

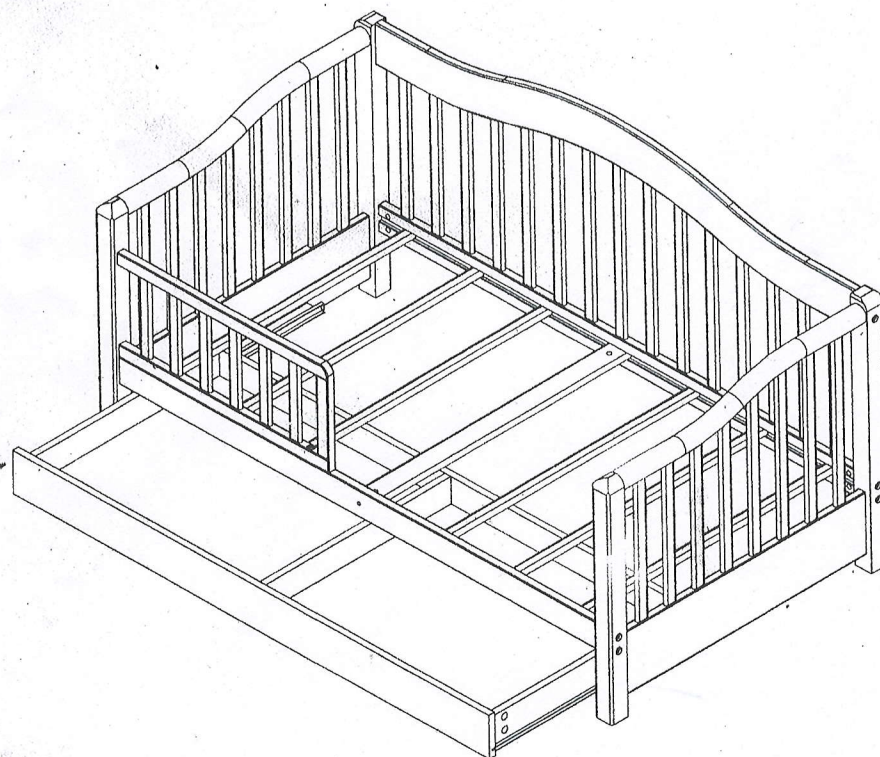

Congratulations, your toddler bed with drawer is ready to use.