NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help.

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 30 minutes.
- * Tools Required for Assembly : Phillips Screwdriver


CARE AND MAINTENANCE

Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on non abrasive material as to prevent damage to the wood finish. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish.

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
А	TOP PANEL		1X
В	SHELF		1X
С	BOTTOM PANEL		1X
D	LARGE PANEL		4X
E	SMALL PANEL		4X
F	LONG RAIL	(<u> </u>	2X
G	SHORT RAIL	(e · · · · · · · · · · · · · · · · · · ·	2X

Product Dimensions; 23 19/32"W x 23 19/32"D x 21"H

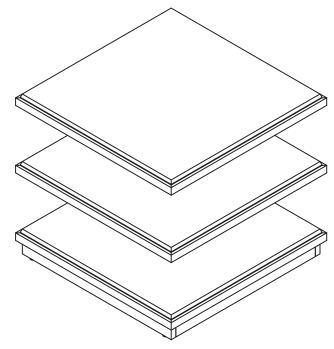

WEIGHT CAPACITY: TOP: 50 LBS


SHELF: 20 LBS

WARNING: DO NOT OVER TORQUE BOLTS/SCREWS

PIECE	DESCRIPTION	PICTURE	QUANTITY
HW1	1 3/4" HEAD CAP SCREW	M6x44mm (111111111)	12X
HW2	CAMBOLT	Ø8x32mm €0≡)	24X
HW3	CAMLOCK	Ø15x12mm	24X
HW4	DOWEL	Ø8x28mm	16X


PREPARATION


- * Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 30 minutes.
- * Tools Required for Assembly : Phillips Screwdriver
- * If you are having difficulty, our friendly Customer Care team is always here to help.

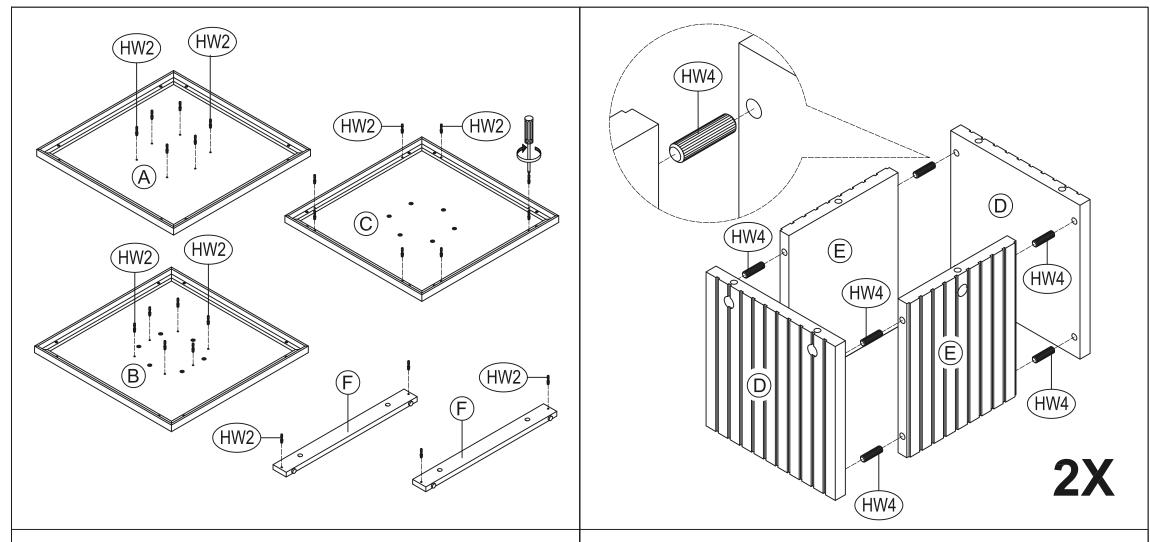


STEP 1 ATTACH CAMBOLTS (HW2) TO TOP PANEL (A), SHELF (B) AND BOTTOM PANEL (C) AND LONG RAILS (F).

STEP 2 ATTACH SMALL PANELS (E) TO LARGE PANELS (D) USING DOWELS (HW4).

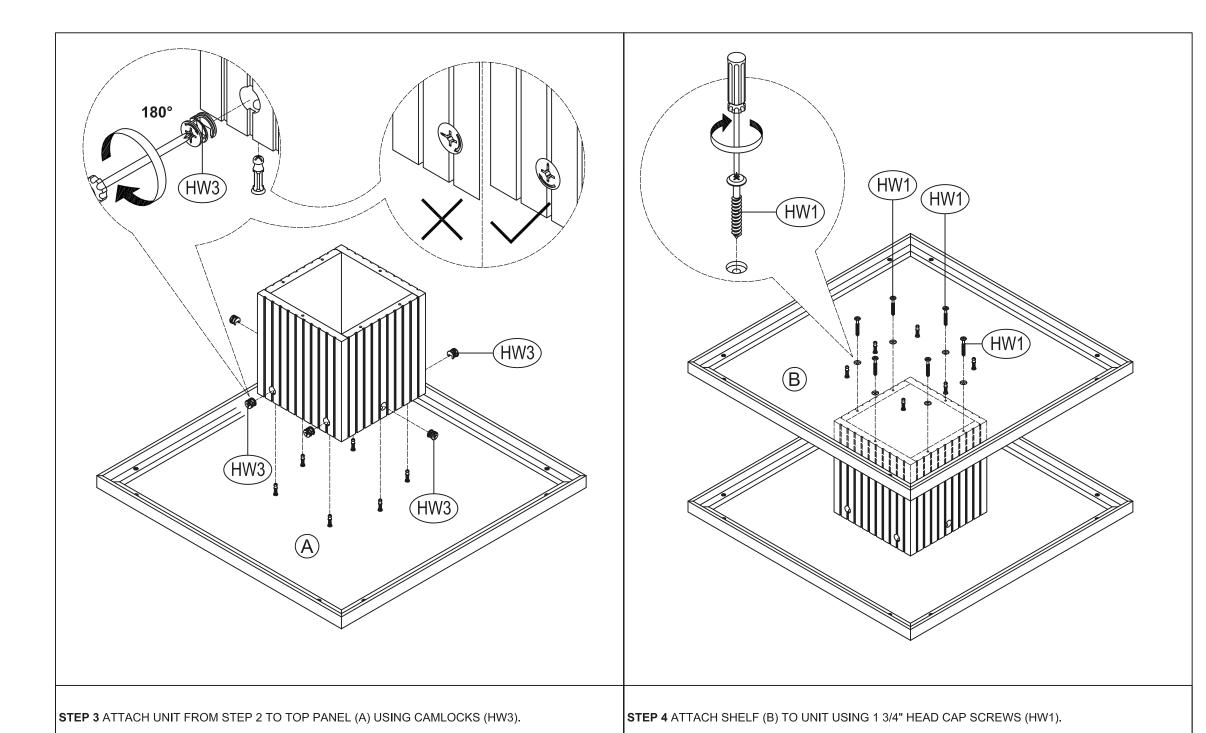


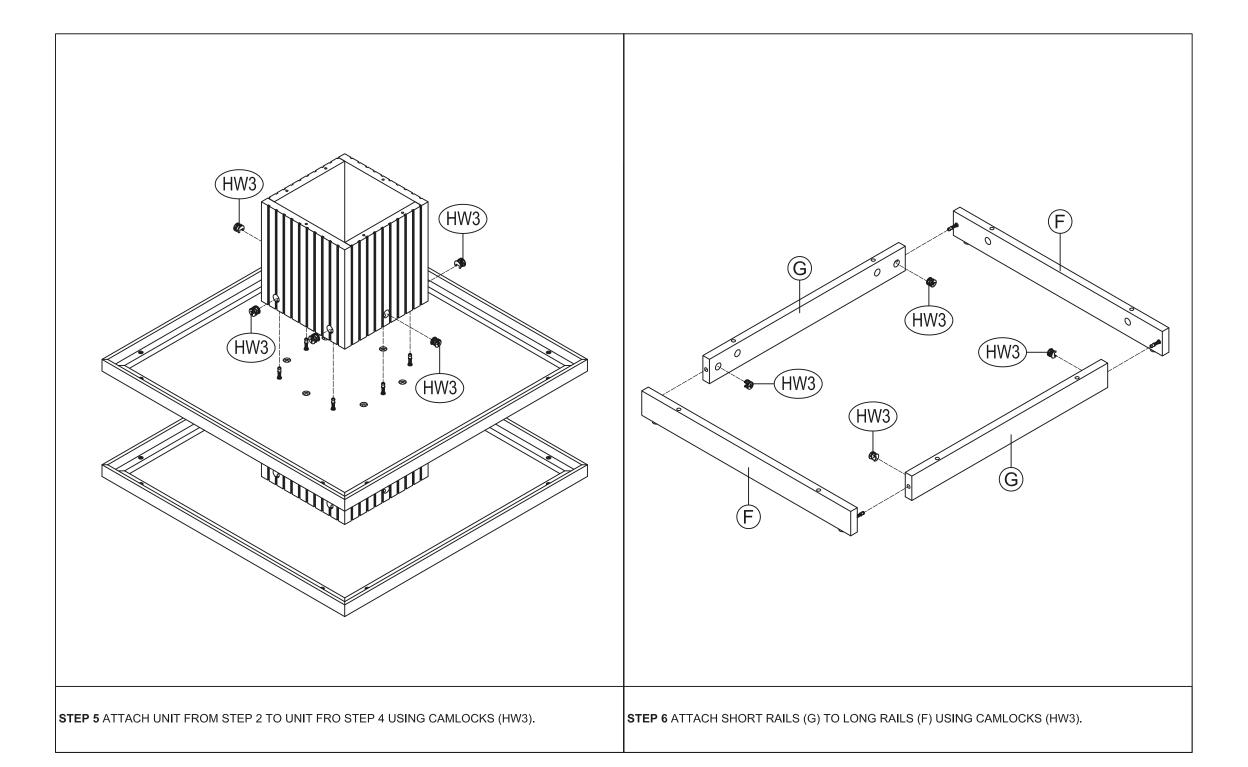

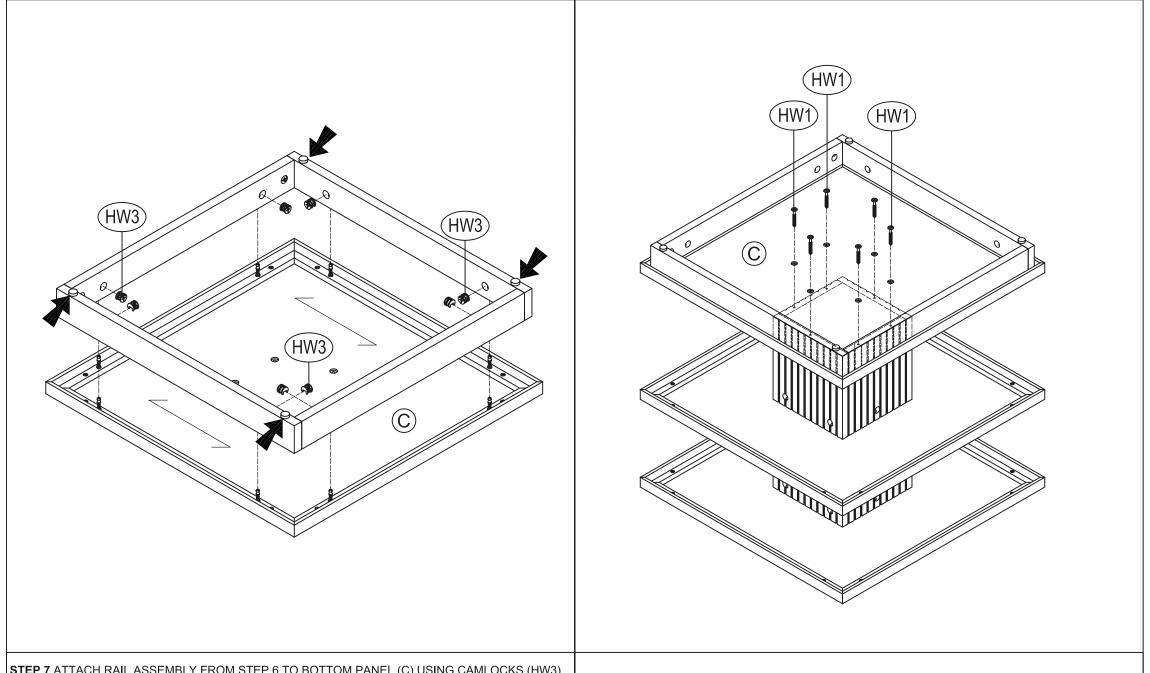

STEP 7 ATTACH RAIL ASSEMBLY FROM STEP 6 TO BOTTOM PANEL (C) USING CAMLOCKS (HW3). NOTE: MAKE SURE THE WOOD GRAIN DIRECTION AND POSITION ADJUSTABLE LEVELER (SEE FIGURE).

STEP 8 ATTACH BOTTOM PANEL (C) TO UNIT USING 1 3/4" HEAD CAP SCREWS (HW1).

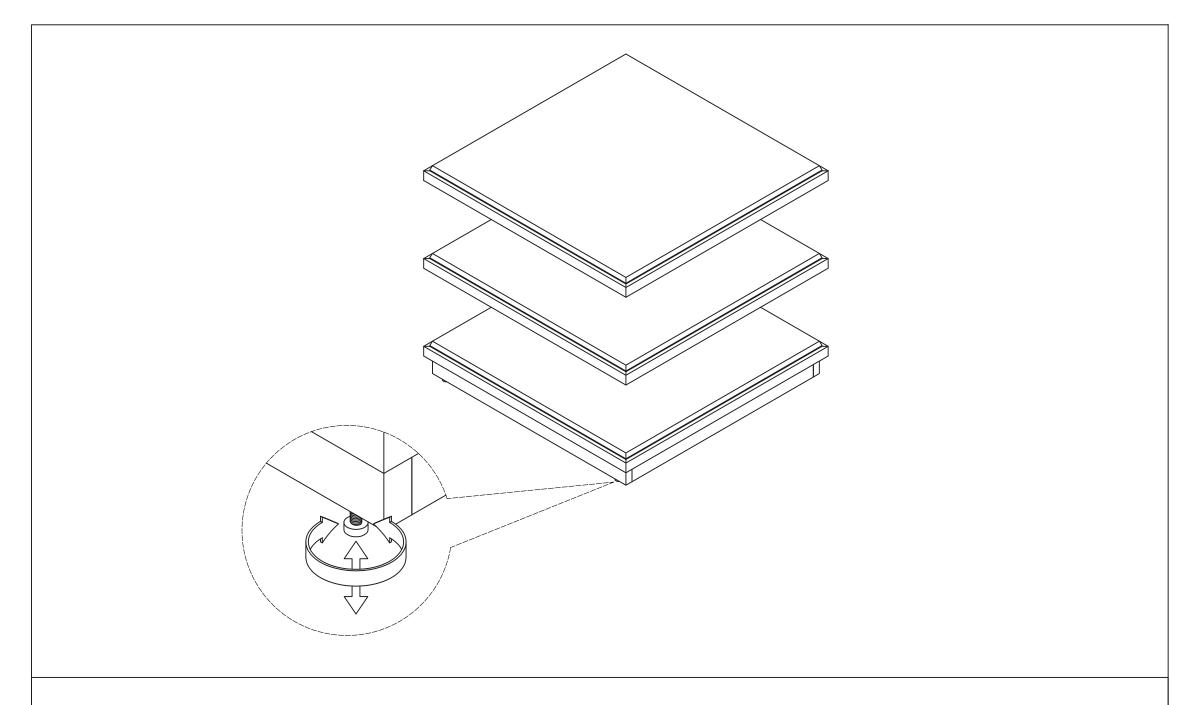

STEP 9 ADJUST THE ADJUSTER THAT HAS ALREADY BEEN ASSEMBLED TO THE LEGS TO STABILIZE YOUR UNIT.