


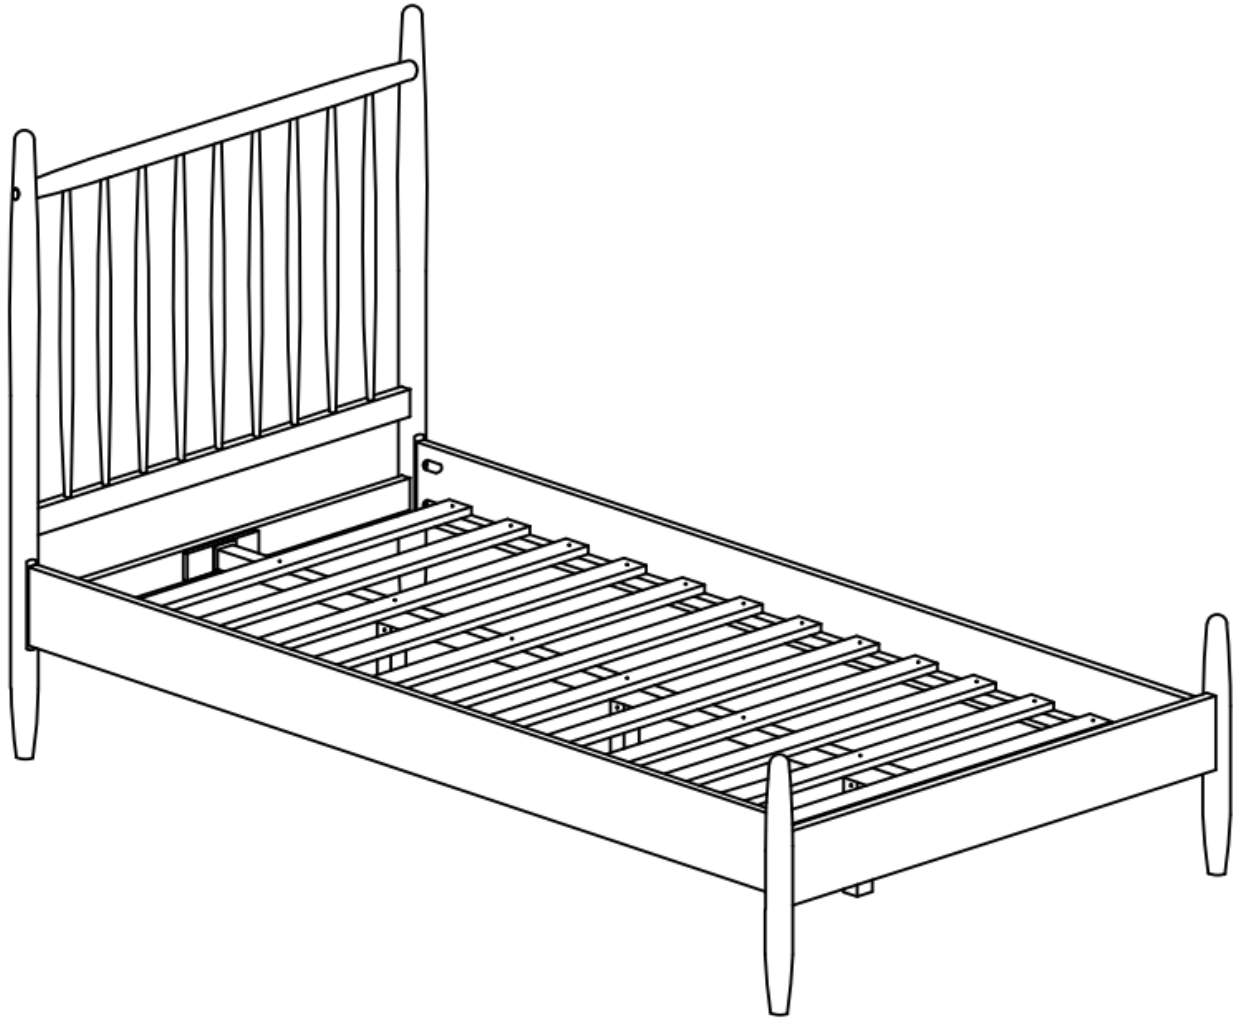

ASSEMBLY INSTRUCTIONS

Twin Bed

MOD-7301/ V0.03.18.25

modway



Questions? Contact us!

609.256.9000

cs@modway.com

Welcome.

Let's get started.

Before you begin, here are some things to keep in mind:

Assembly will take most people **about 30 minutes**. Consider having a friend help you!

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Read through all of the instructions before starting. Make sure you have all parts and components before discarding any packing materials.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Care instructions are listed in the last step of this manual.

WAIT!

Missing parts or hardware? Need assistance?
Contact us before returning your item.
We're here to help!




HARDWARE INCLUDED IN THE BOX:

1		JCBC BOLT M6 x 15mm	x4
2		JCBC BOLT M6 x 40mm	x38
3		JCBC BOLT M6 x 100mm	x3
4		ADJUSTABLE FOOT	x3
5		BARREL NUT	x3
6		WOOD DOWEL 10 x 40mm	x6
7		WOOD BUTTON	x2
8		WOOD SCREW M4 x 32mm	x12
9		WOOD SCREW M4 x 20mm	x9
10		L BRACKET	x2
11		M4 ALLEN KEY	x1

FURNITURE COMPONENTS INCLUDED IN THE BOX:

All parts are numbered with a sticker according to this list.

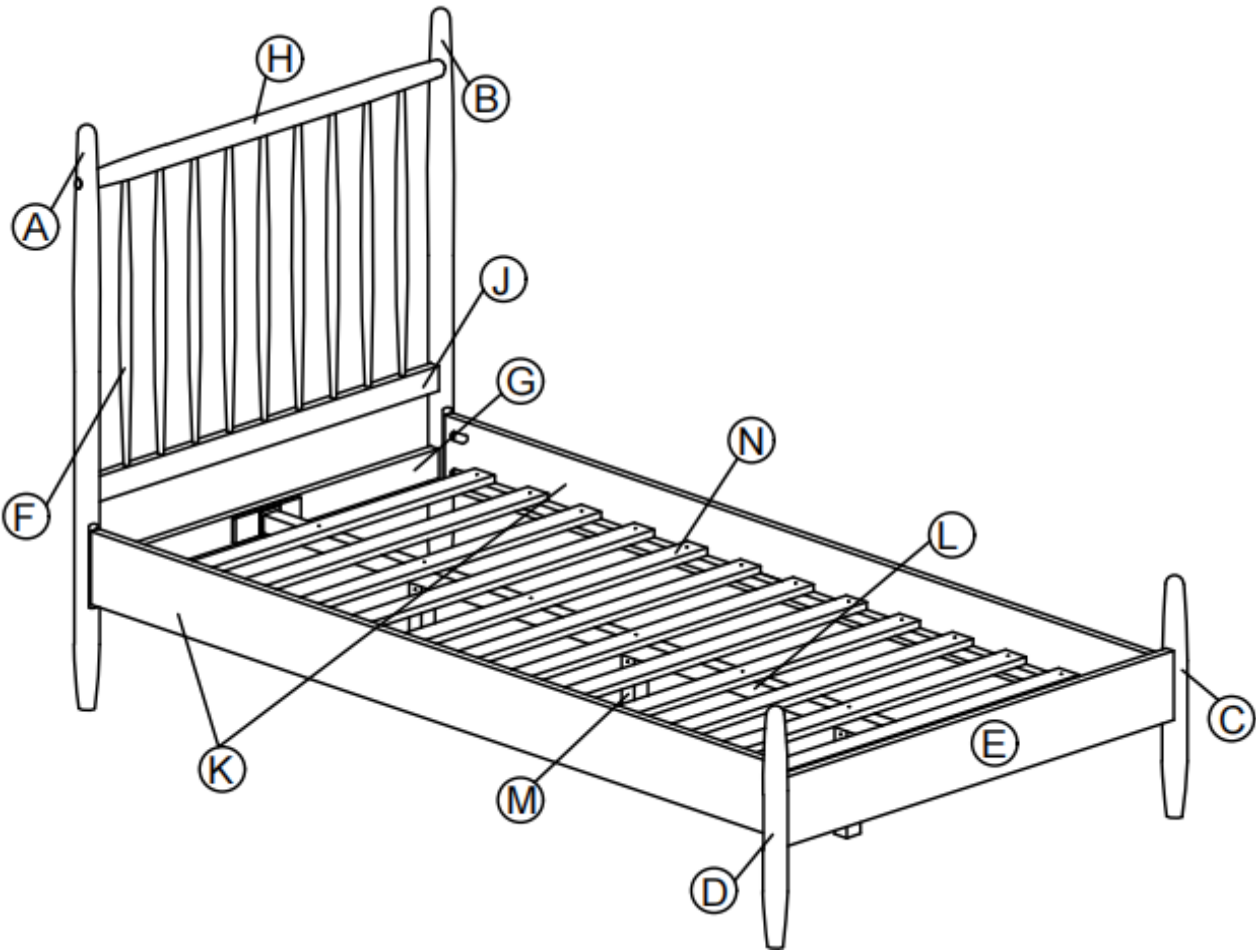

Box 1 of 1

A	HEADBOARD POST (L)	x1
B	HEADBOARD POST (R)	x1
C	FOOTBOARD POST (R)	x1
D	FOOTBOARD POST (L)	x1
E	FOOTBOARD PANEL	x1
F	HEADBOARD SPINDER	x9
G	HEADBOARD SUPPORT	x1

H	HEADBOARD TOP BAR	x1
J	HEADBOARD LOWER BAR	x1
K	SIDE RAIL	x2
L	LONG SUPPORT	x1
M	SUPPORT LEG	x3
N	BED SLATS	x1
O	HARDWARE PACK	x1

STEP 01

HARDWARE


- ① JCBC BOLT M6 x 15mm x1
 ⑩ L BRACKET x1

COMPONENTS

- Ⓖ HEADBOARD SUPPORT x1

TOOLS

- ⑪ M4 ALLEN KEY x1

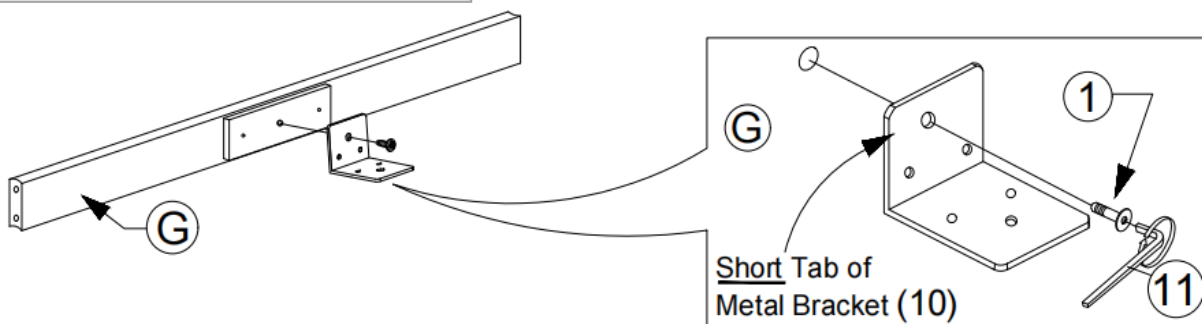

STEP 02

HARDWARE


- ① JCBC BOLT M6 x 15mm x1
 ⑩ L BRACKET x1

COMPONENTS

- Ⓔ FOOTBOARD PANEL x1

TOOLS

- ⑪ M4 ALLEN KEY x1

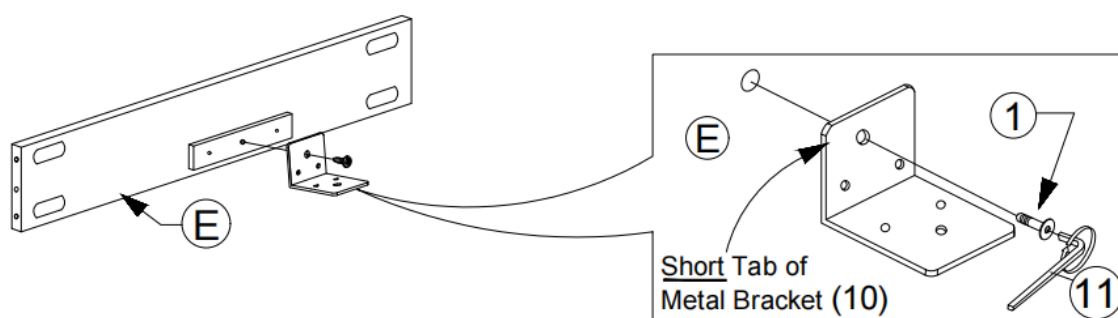


STEP 03

HARDWARE

- ④ ADJUSTABLE FOOT x3

COMPONENTS


- Ⓜ SUPPORT LEG x3

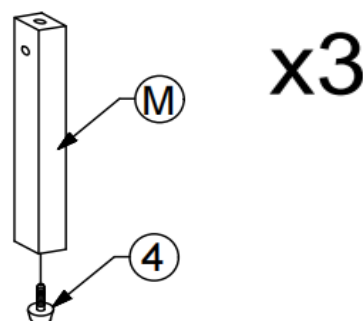

STEP 04

COMPONENTS


F	HEADBOARD SPINDER	x9
H	HEADBOARD TOP BAR	x1

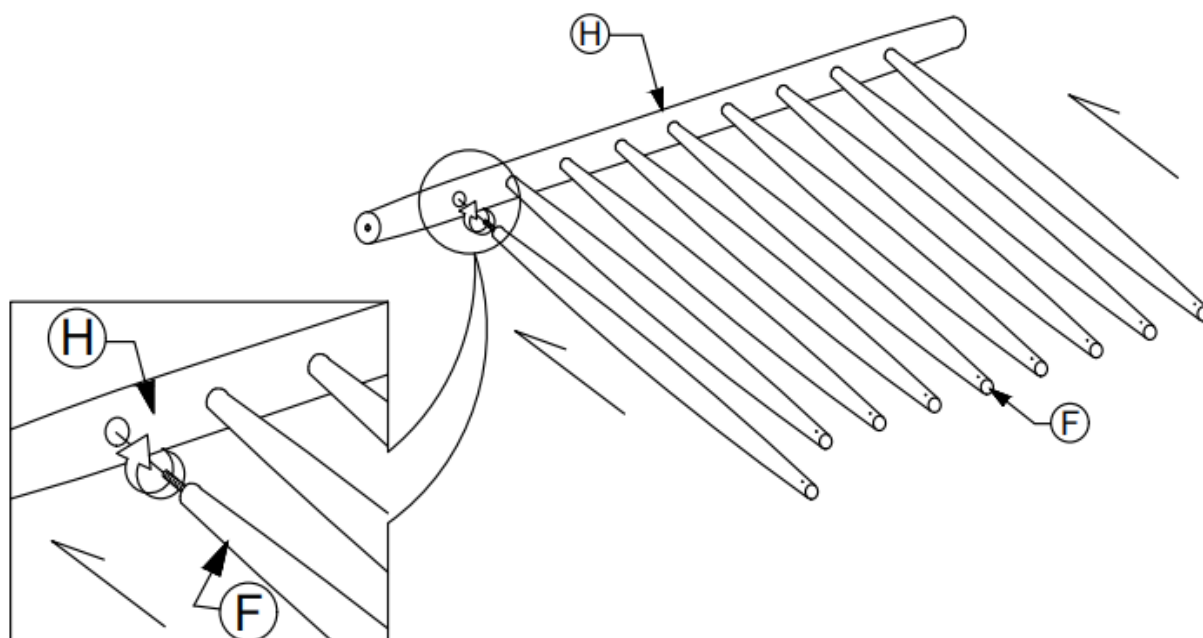

STEP 05

COMPONENTS

F	HEADBOARD SPINDER	x9
J	HEADBOARD LOWER BAR	x1

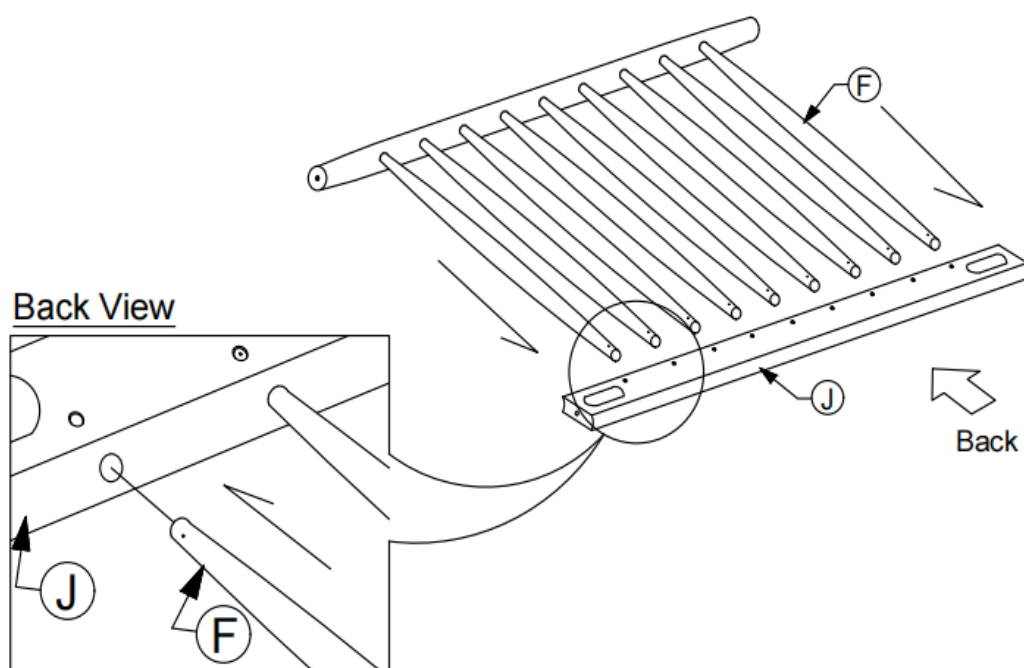

STEP 06


HARDWARE

9 WOOD SCREW M4 x 20mm x9

COMPONENTS

F HEADBOARD SPINDER x9

J HEADBOARD LOWER BAR x1

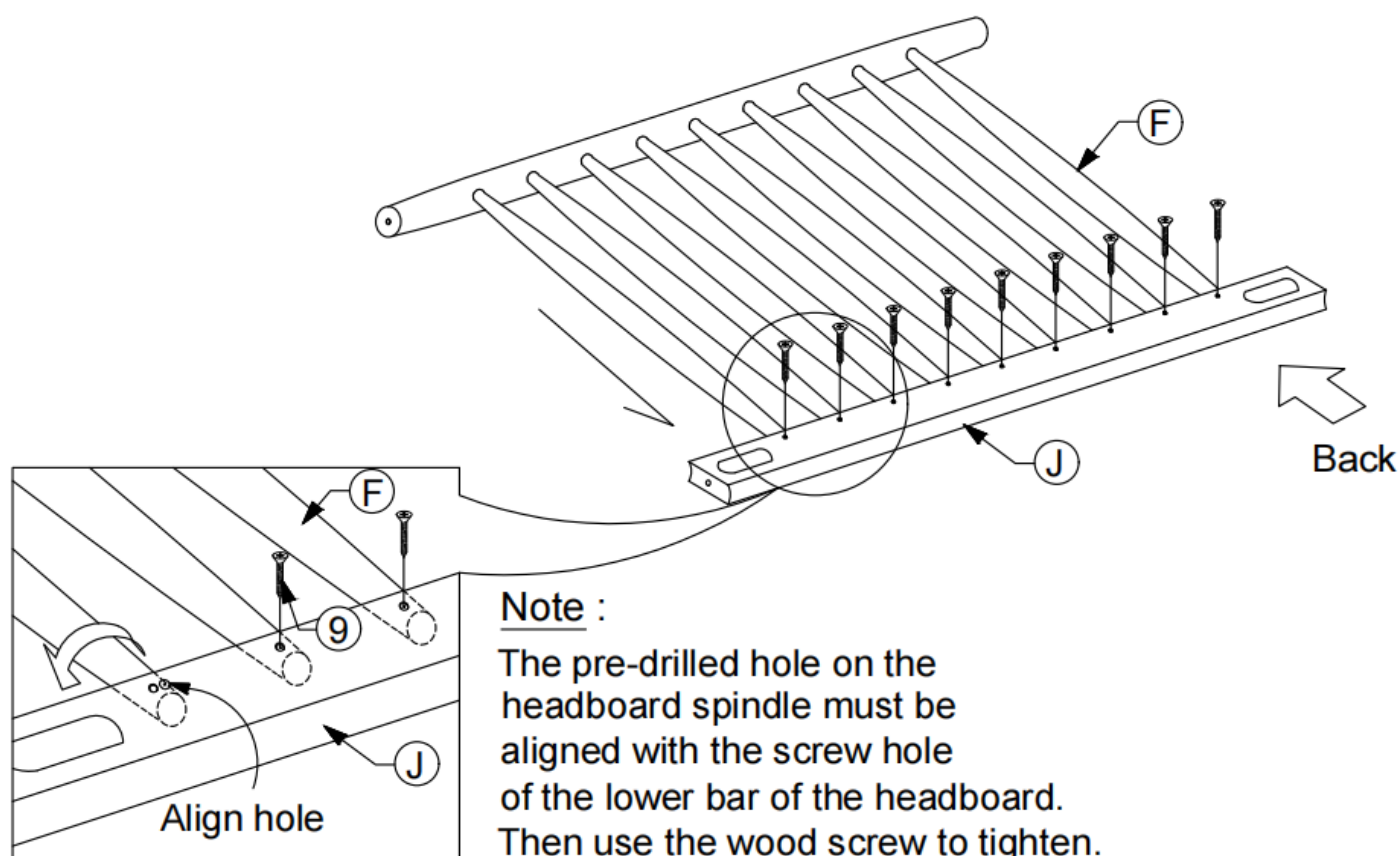

STEP 07

HARDWARE

2 JCBC BOLT M6 x 40mm x8

7 WOOD BUTTON x2

COMPONENTS

A HEADBOARD POST (L) x1

B HEADBOARD POST (R) x1


G HEADBOARD SUPPORT x1

H HEADBOARD TOP BAR x1

J HEADBOARD LOWER BAR x1

TOOLS

11 M4 ALLEN KEY x1

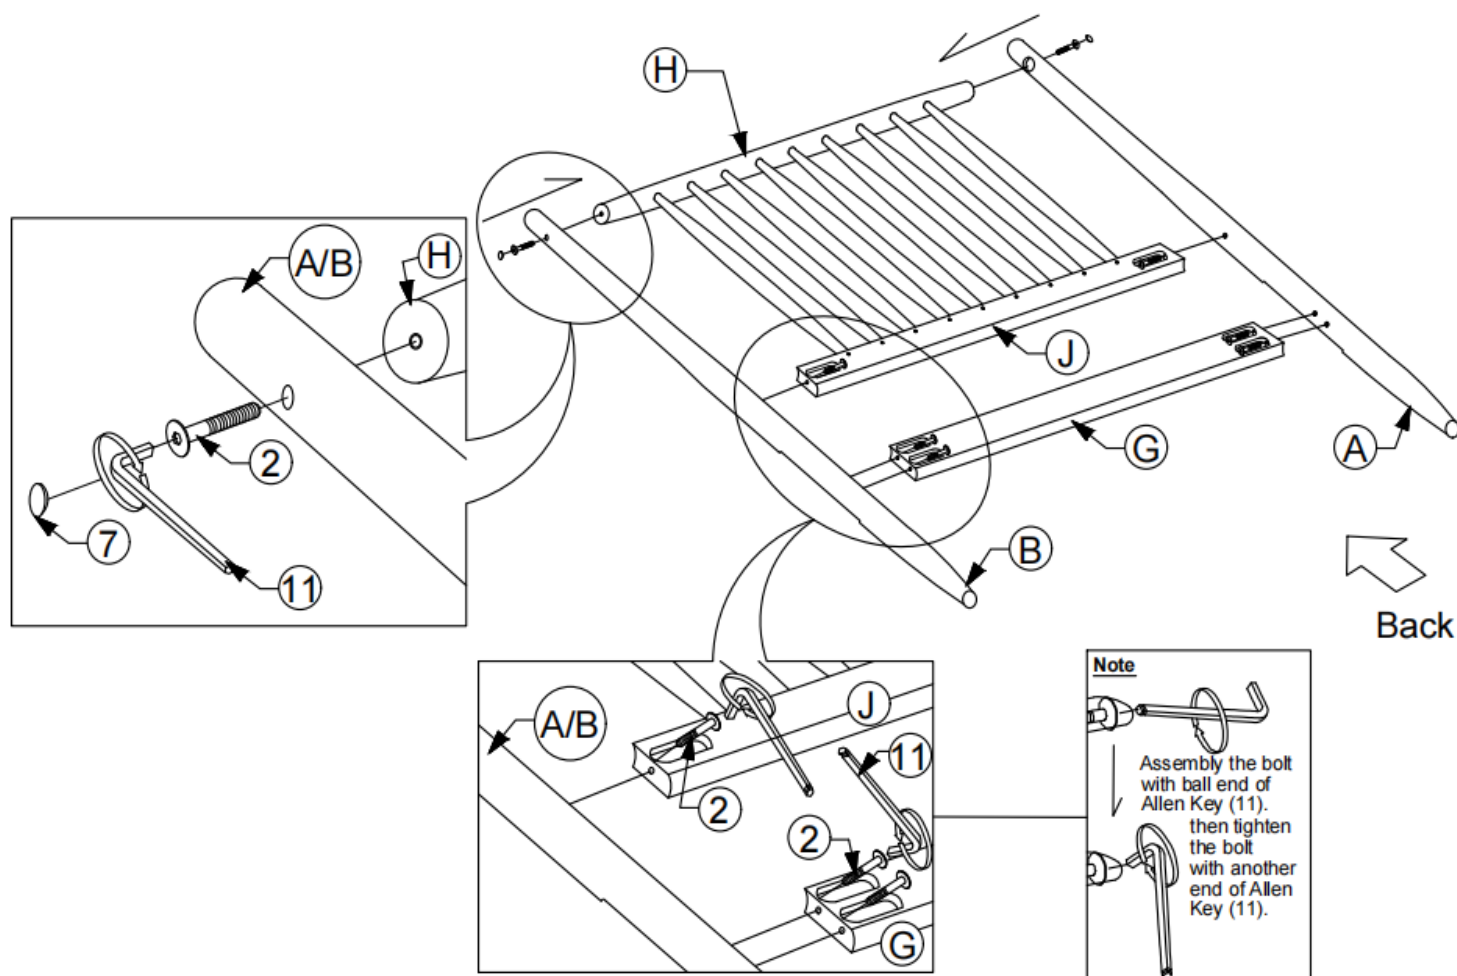

STEP 08

HARDWARE

2 JCBC BOLT M6 x 40mm x4

6 WOOD DOWEL 10x 40mm x2

COMPONENTS


C FOOTBOARD POST (R) x1

D FOOTBOARD POST (L) x1

E FOOTBOARD PANEL x1

TOOLS

11 M4 ALLEN KEY x1

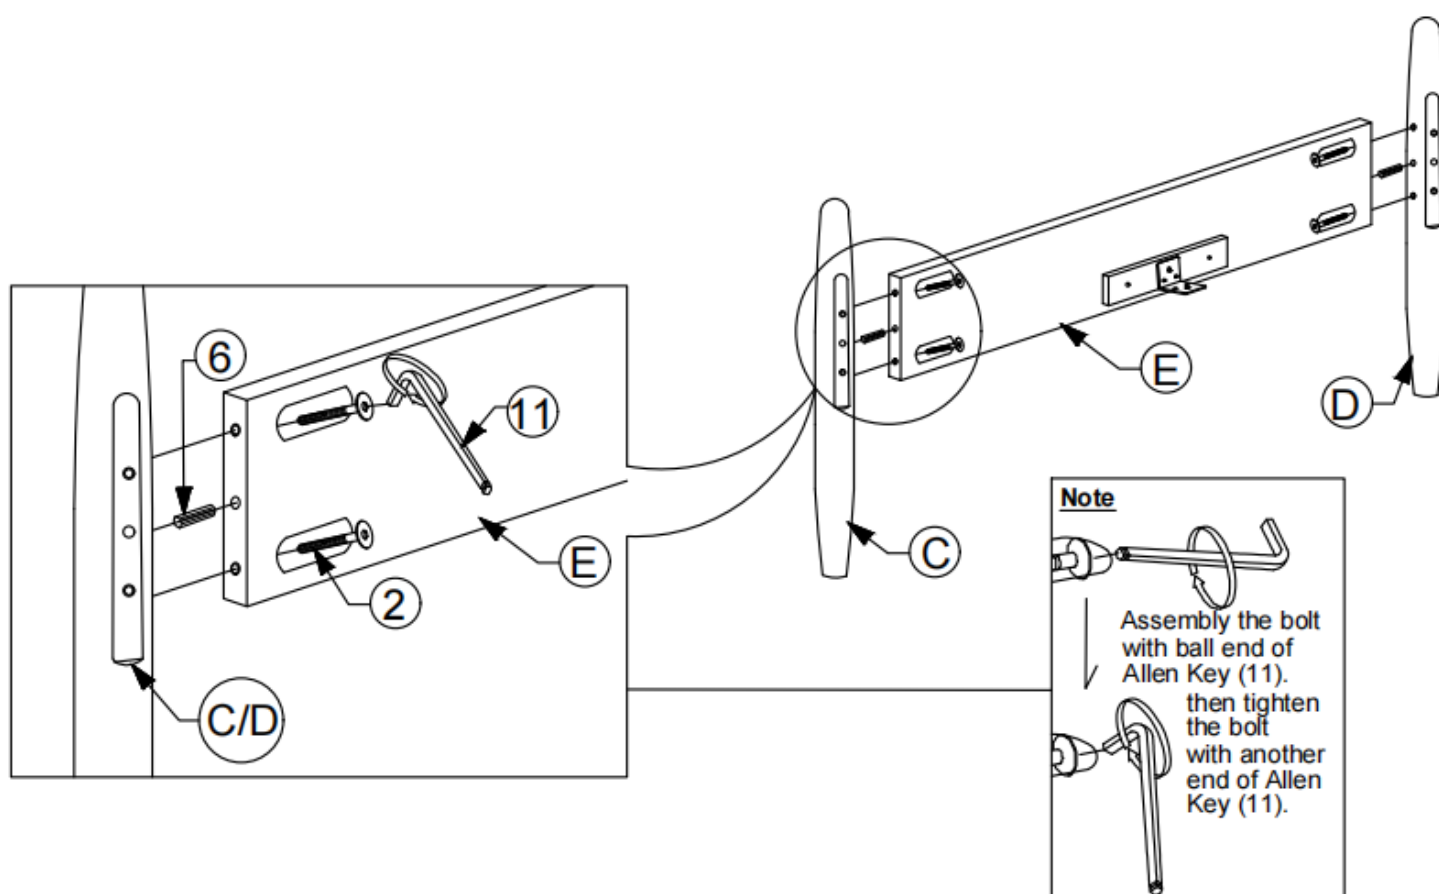

STEP 09

HARDWARE


2	JCBC BOLT M6 x 40mm	x8
6	WOOD DOWEL 10 x 40mm	x4

COMPONENTS

A	HEADBOARD POST (L)	x1
B	HEADBOARD POST (R)	x1
C	FOOTBOARD POST (R)	x1
D	FOOTBOARD POST (L)	x1
K	SIDE RAIL	x2

TOOLS

11	M4 ALLEN KEY	x1
-----------	--------------	----

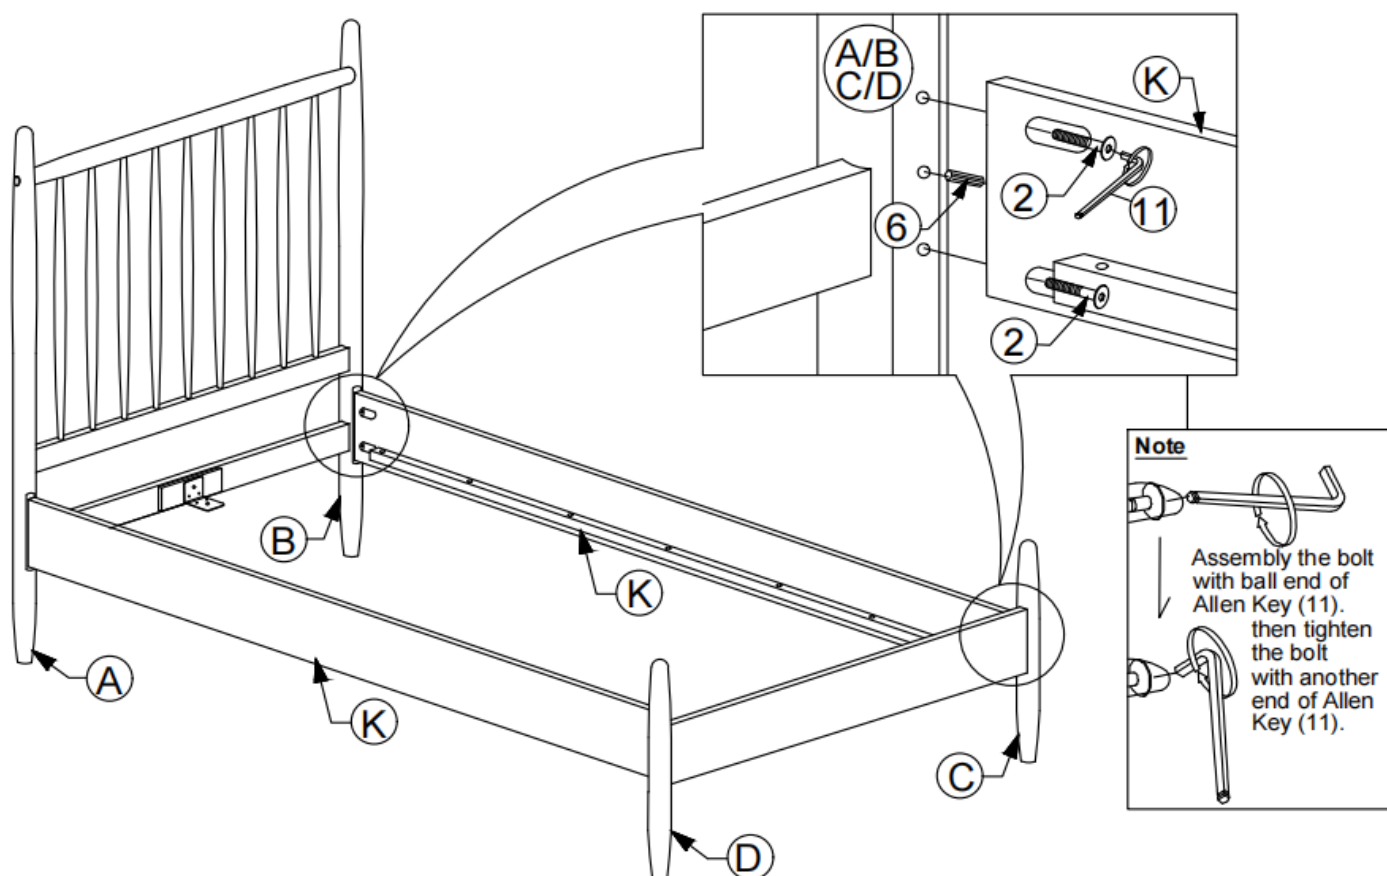

STEP 10

HARDWARE

1 JCBC BOLT M6 x 15mm x2

COMPONENTS


E FOOTBOARD PANEL x1

G HEADBOARD SUPPORT x1

L LONG SUPPORT x1

TOOLS

11 M4 ALLEN KEY x1

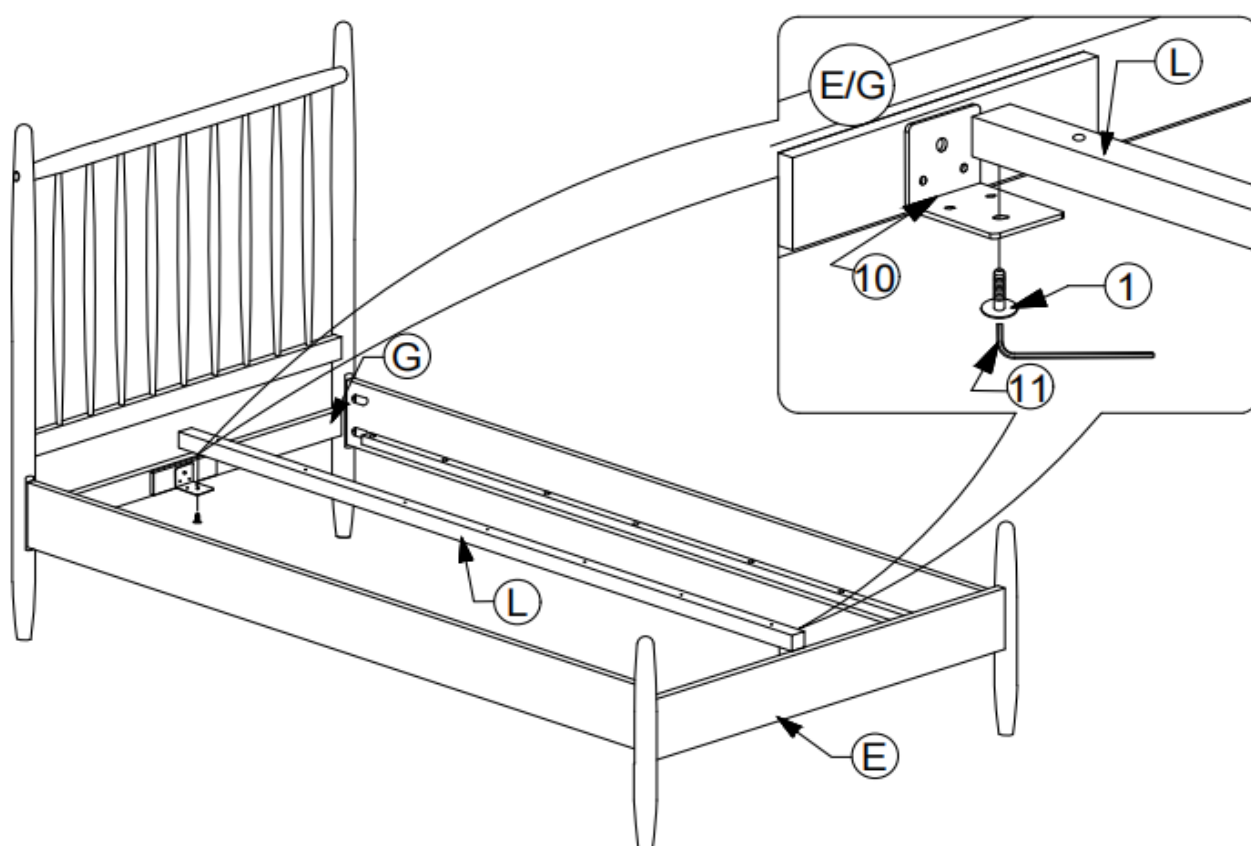

STEP 11

HARDWARE


2	JCBC BOLT M6 x 40mm	x5
3	JCBC BOLT M6 x 100mm	x1
5	BARREL NUT	x1
8	WOOD SCREW M4 x 32mm	x2

COMPONENTS

K	SIDE RAIL	x2
L	LONG SUPPORT	x1
M	SUPPORT LEG	x1
N	BED SLATS	x1

TOOLS

11	M4 ALLEN KEY	x1
-----------	--------------	----

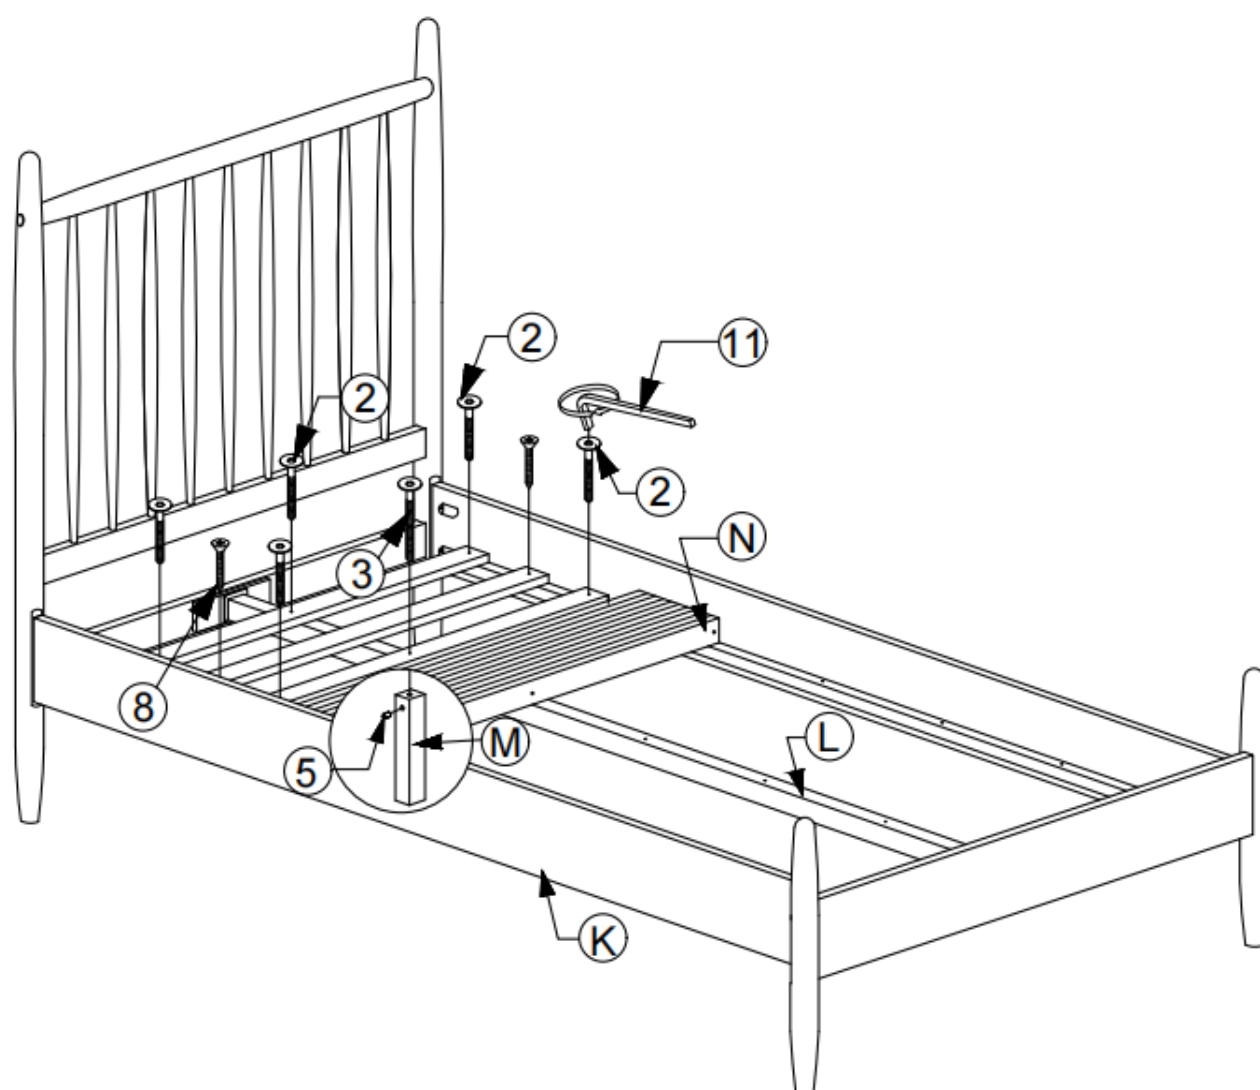

STEP 12

HARDWARE


2	JCBC BOLT M6 x 40mm	x5
3	JCBC BOLT M6 x 100mm	x1
5	BARREL NUT	x1
8	WOOD SCREW M4 x 32mm	x4

COMPONENTS

K	SIDE RAIL	x2
L	LONG SUPPORT	x1
M	SUPPORT LEG	x1
N	BED SLATS	x1

TOOLS

11	M4 ALLEN KEY	x1
-----------	--------------	----

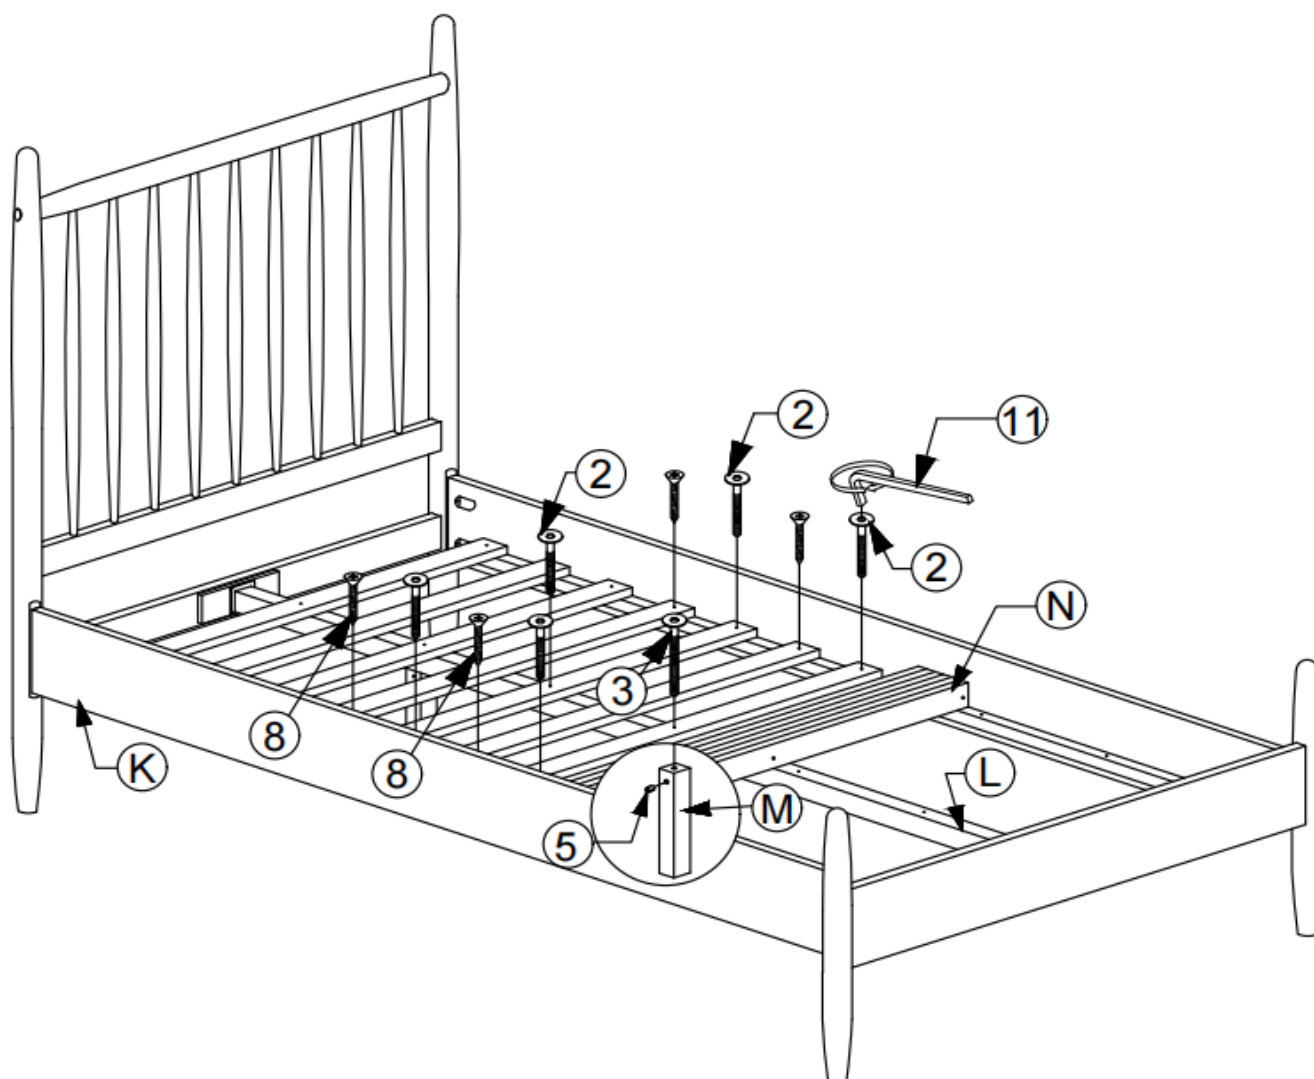

STEP 13

HARDWARE


2	JCBC BOLT M6 x 40mm	x5
3	JCBC BOLT M6 x 100mm	x1
5	BARREL NUT	x1
8	WOOD SCREW M4 x 32mm	x4

COMPONENTS

K	SIDE RAIL	x2
L	LONG SUPPORT	x1
M	SUPPORT LEG	x1
N	BED SLATS	x1

TOOLS

11	M4 ALLEN KEY	x1
-----------	--------------	----

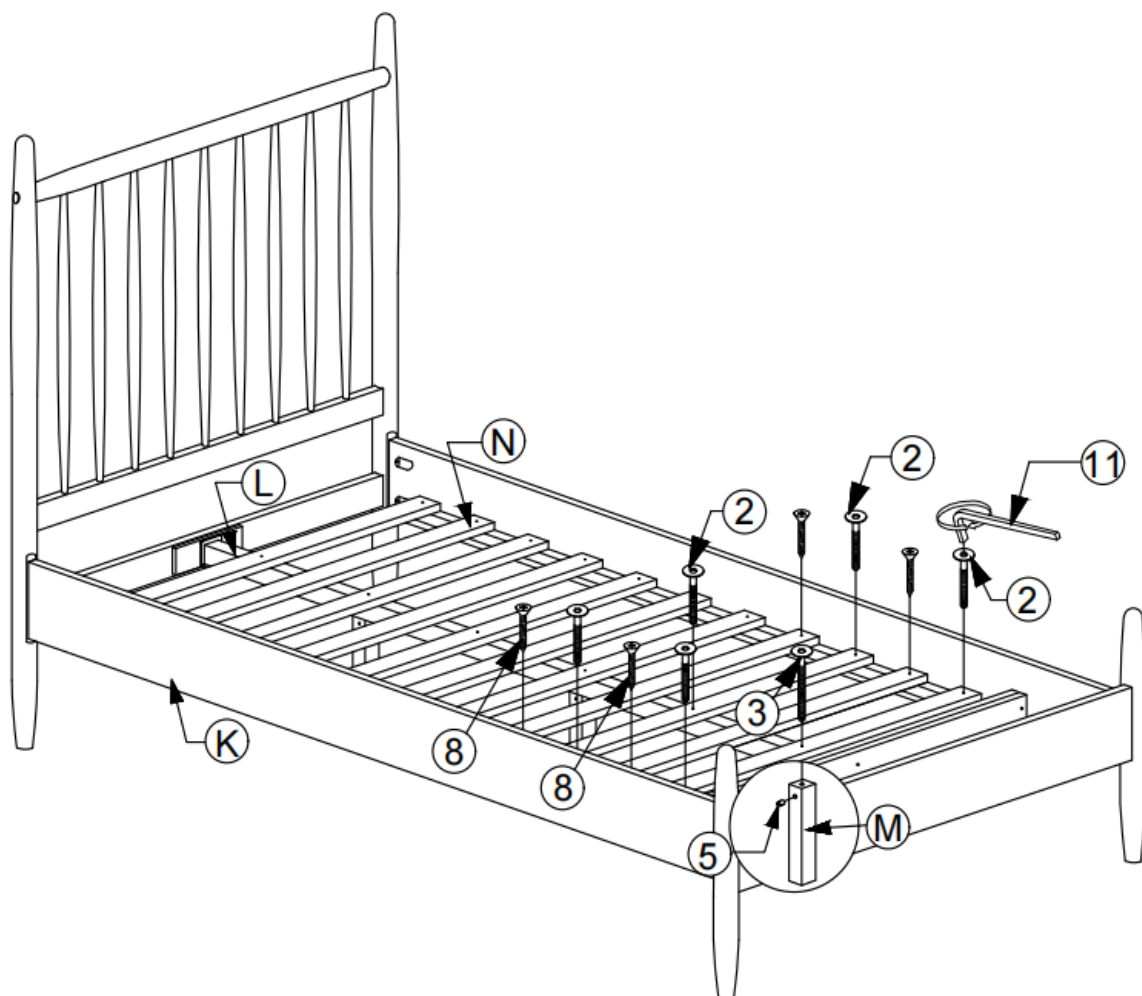

STEP 14

HARDWARE

2 JCBC BOLT M6 x 40mm x3

8 WOOD SCREW M4 x 32mm x2

COMPONENTS


K SIDE RAIL x2

L LONG SUPPORT x1

N BED SLATS x1


TOOLS

11 M4 ALLEN KEY x1

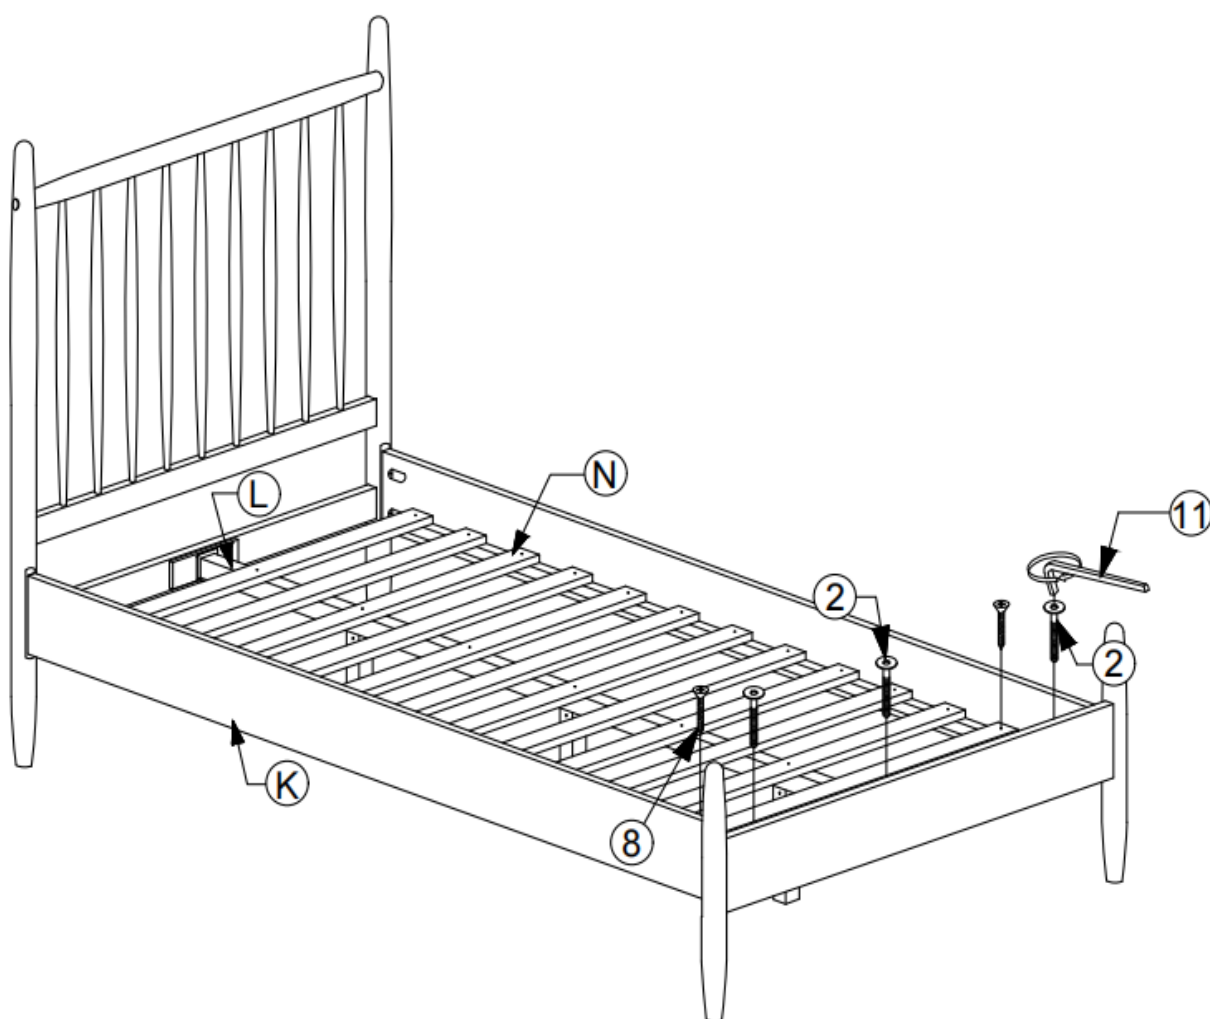

Great job!

Your new bed is complete.

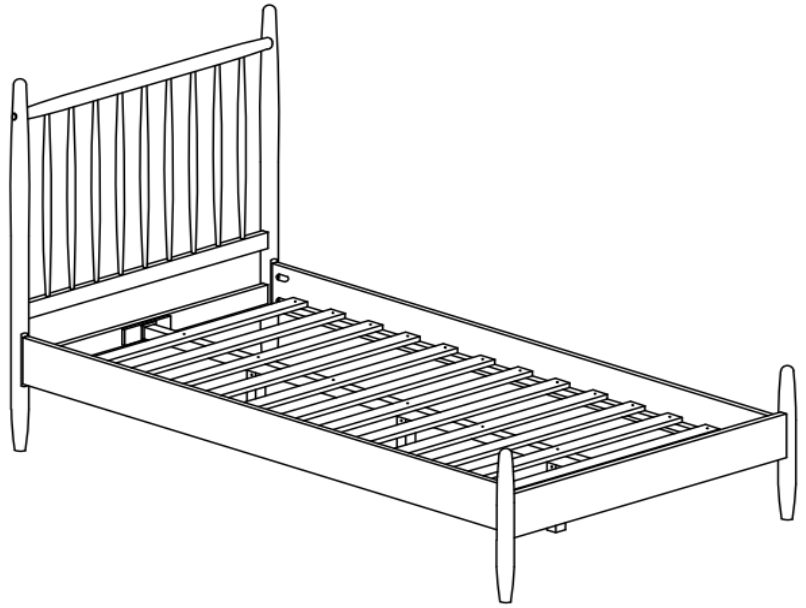

CARING FOR YOUR ITEM

- Indoor use only.
- Not contract grade.
- Clean using a non-abrasive cloth and a mild cleaner.
- Never use harsh chemicals, as they could damage the finish or integrity of the item.



CONNECT WITH US!

Tag us **@modway_furniture** and **#modway** for a chance to be featured.

modway



Questions? Contact us!
609.256.9000
cs@modway.com