
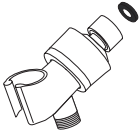




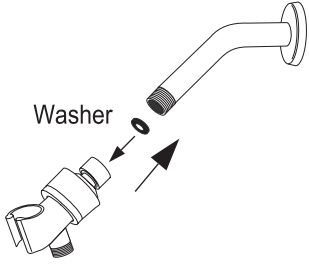
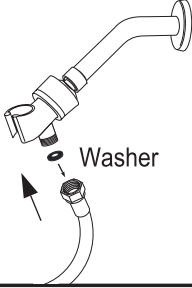
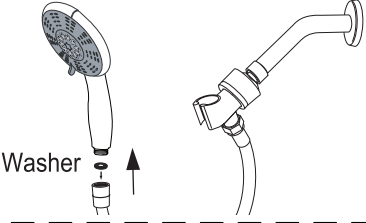
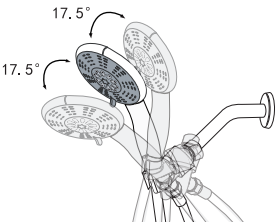
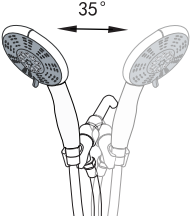


<p><b>What's in the package.</b></p>			
 <p>Handheld Shower Head x 1 Water Regulator x 1</p>	 <p>Washer x 1 Bracket x 1</p>	 <p>Shower Hose x 1 Washer x 2</p>	 <p>Teflon Tape x 1</p>
<p>① Remove old showerhead.</p>  <p>Old Showerhead (Remove)</p>	<p>② Wrap Teflon tape clockwise a few rounds to cover the shower arm threads.</p> 		
<p>③ Ensure a washer is in the ball joint of the bracket.</p> <p>Screw the bracket to the shower arm clockwise.</p> <p>After fully tightened, slowly turn the bracket clockwise to the upright position.</p>	 <p>Washer</p>		
<p>④ Ensure a washer is in the hose HEX NUT.</p> <p>Connect HEX NUT to the BRACKET.</p>	 <p>Washer</p>		
<p>⑤ Ensure a washer is in the hose CONICAL NUT.</p> <p>Connect CONICAL NUT to the HANDHELD SHOWER HEAD.</p>	 <p>Washer</p>		
<p><b>⚠ DO NOT apply BOTH <b>water regulator</b> and <b>washer</b> at the same time for handheld shower head.</b></p>			

**Adjusting the bracket angle gently.**

<p>a. Vertically</p> 	<p>b. Horizontally</p> 
<p><b>⚠ WARNING: Total adjusting angle CANNOT exceed 35 degrees both vertically and horizontally.</b></p>	