



USER'S MANUAL

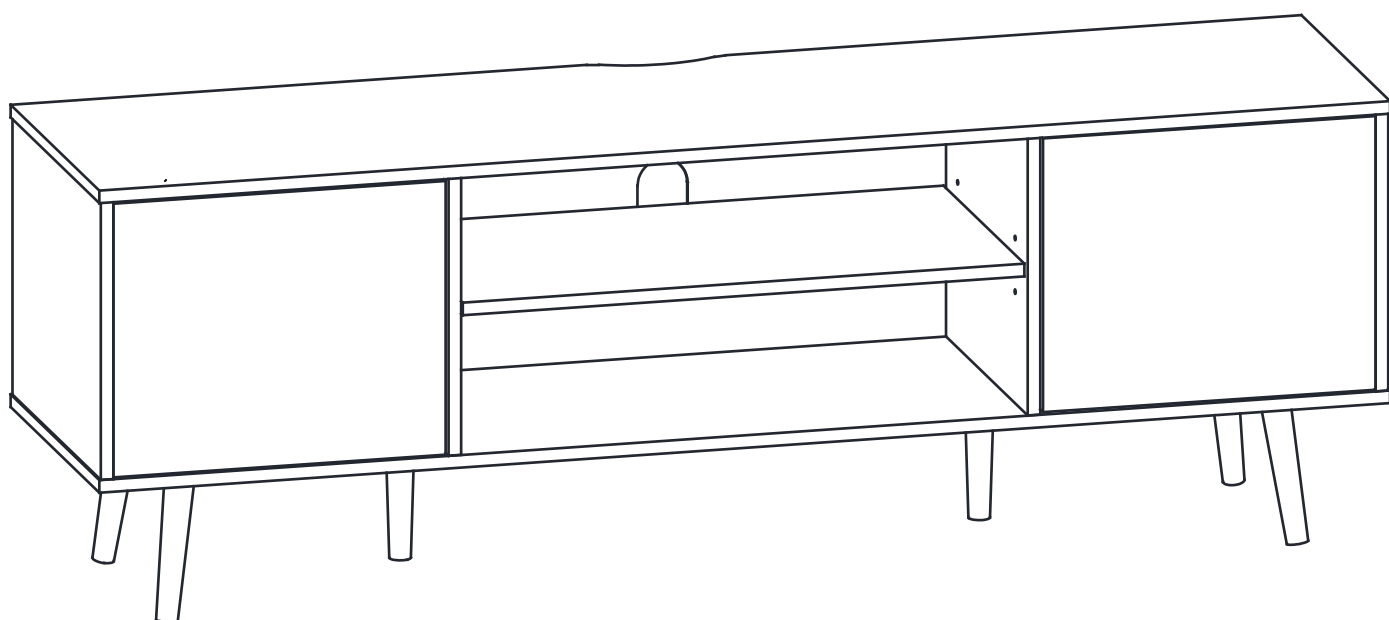


Structural analysis

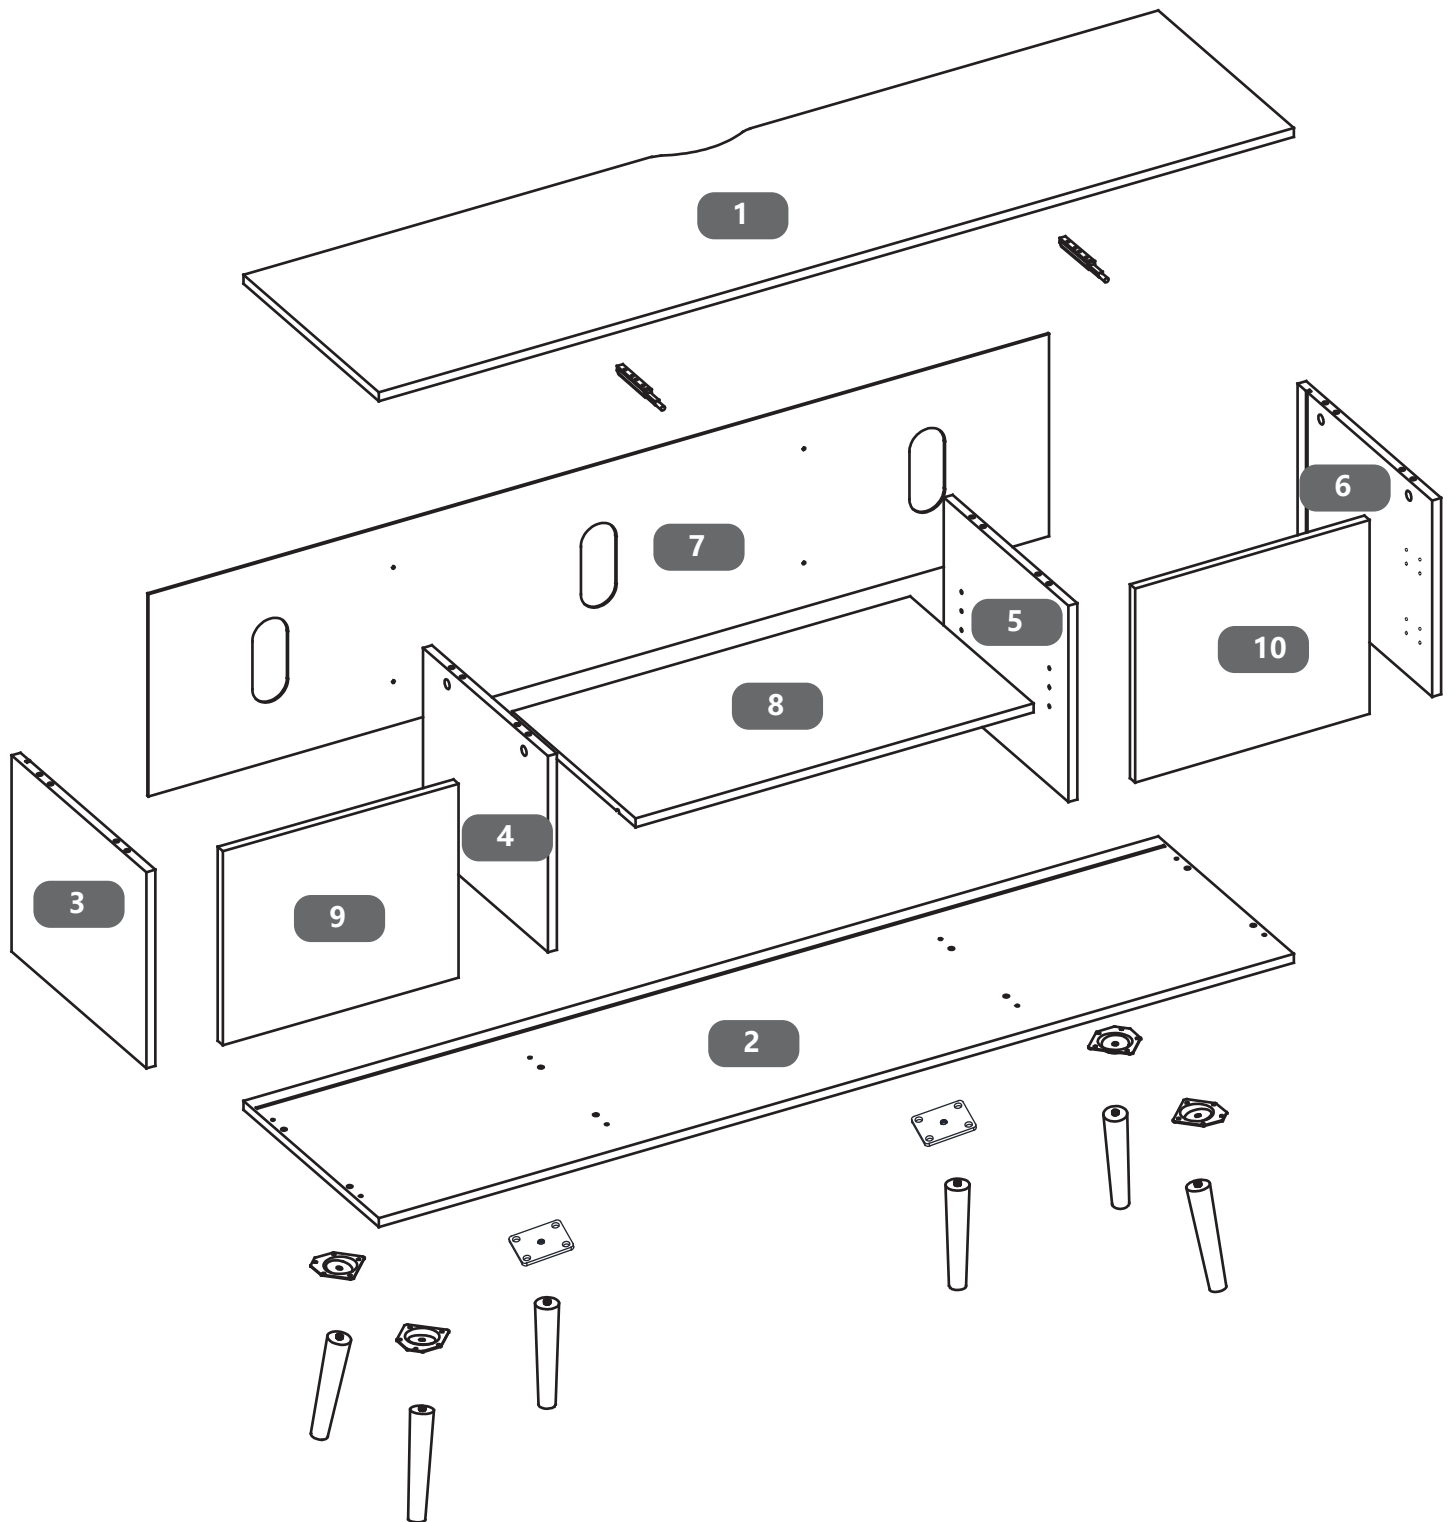


Parts details

1

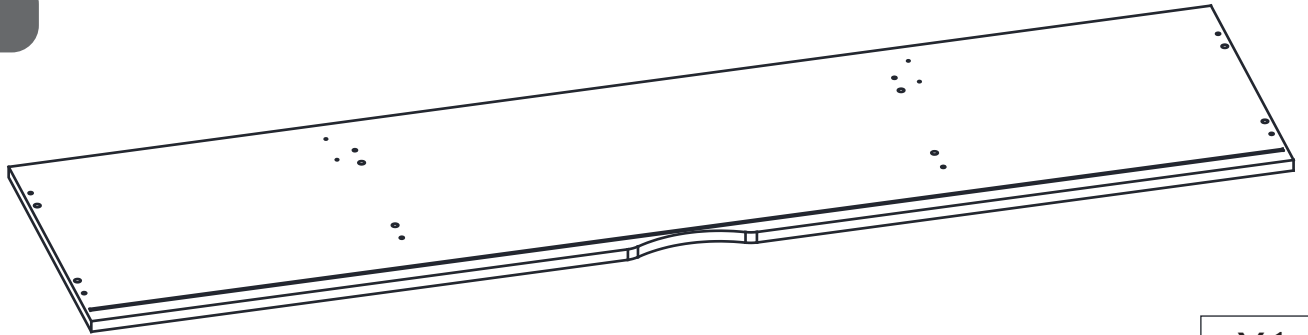


X1

2

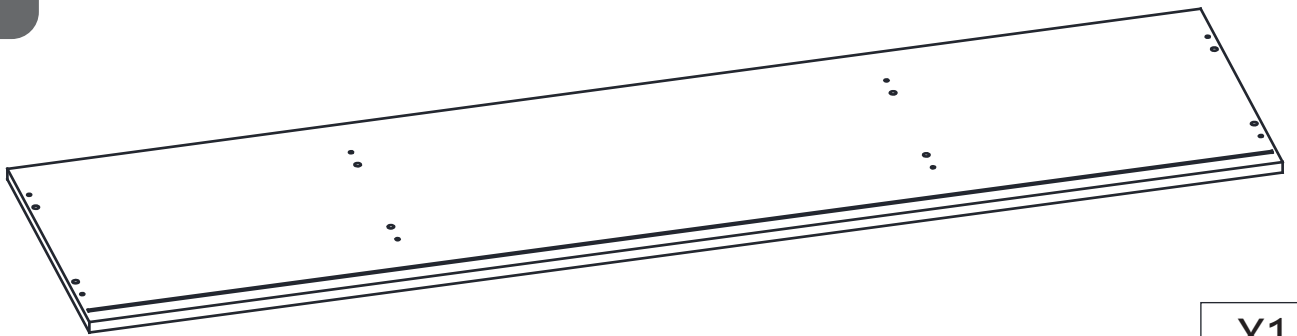


X1

3

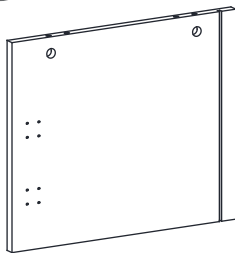


X1

4

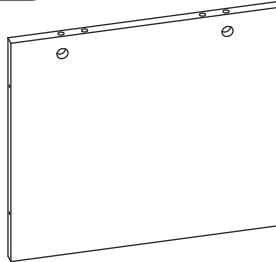


X1

5

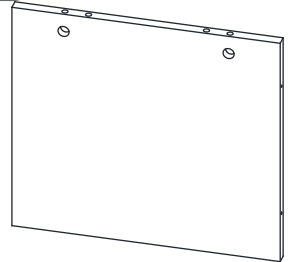


X1

6








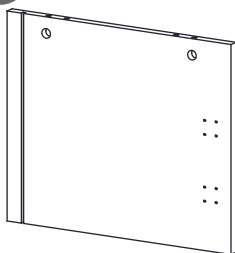








X1

7

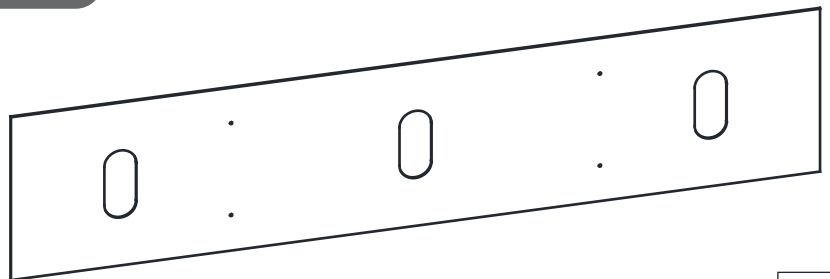


X1

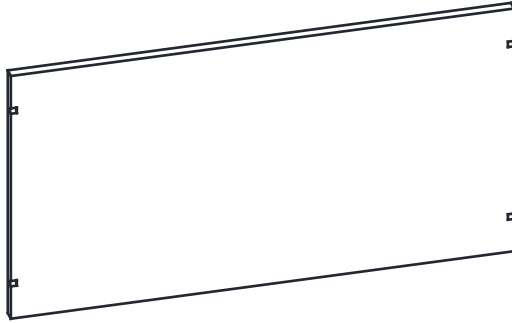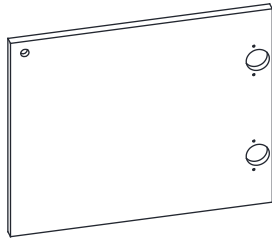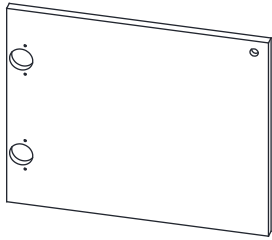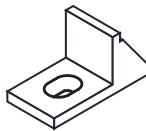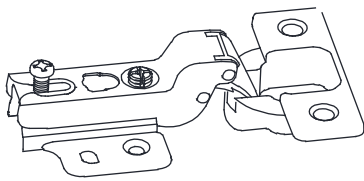
8  X1	9  X1	
10  X1	A 8X40mm  X16	B  X8
C  X8	D ST5X40mm  X8	E  X4
F M4X12  X52	G  X2	H  X4

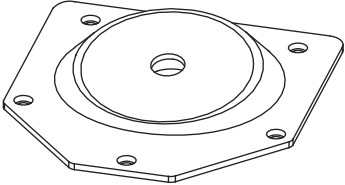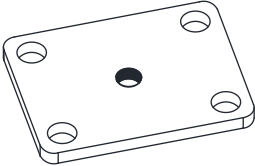I  X4	J  X4	K  X6
L  X2	M M6X12  X8	N M4X14  X4
O  X1	P  X1	

■ Wooden Dowel Installation As Below:

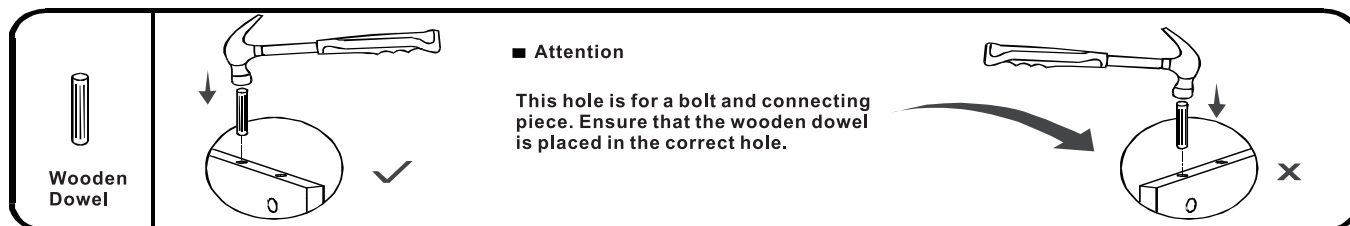


■ 8×40MM Bolt Installation As Below:

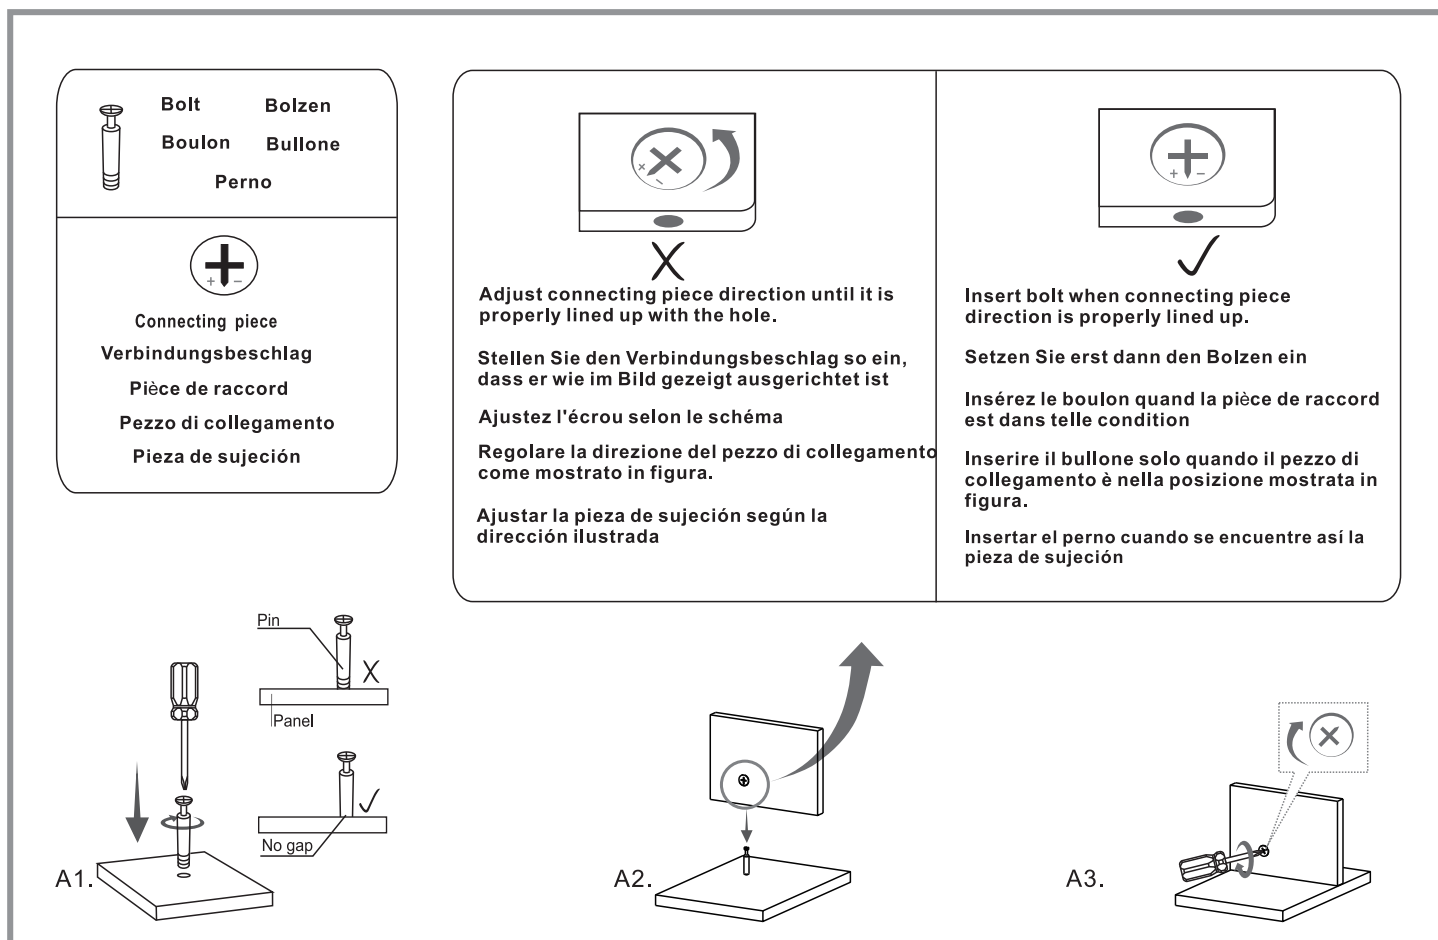


Installation procedure


STEP 1






F X4



G X2



O X1

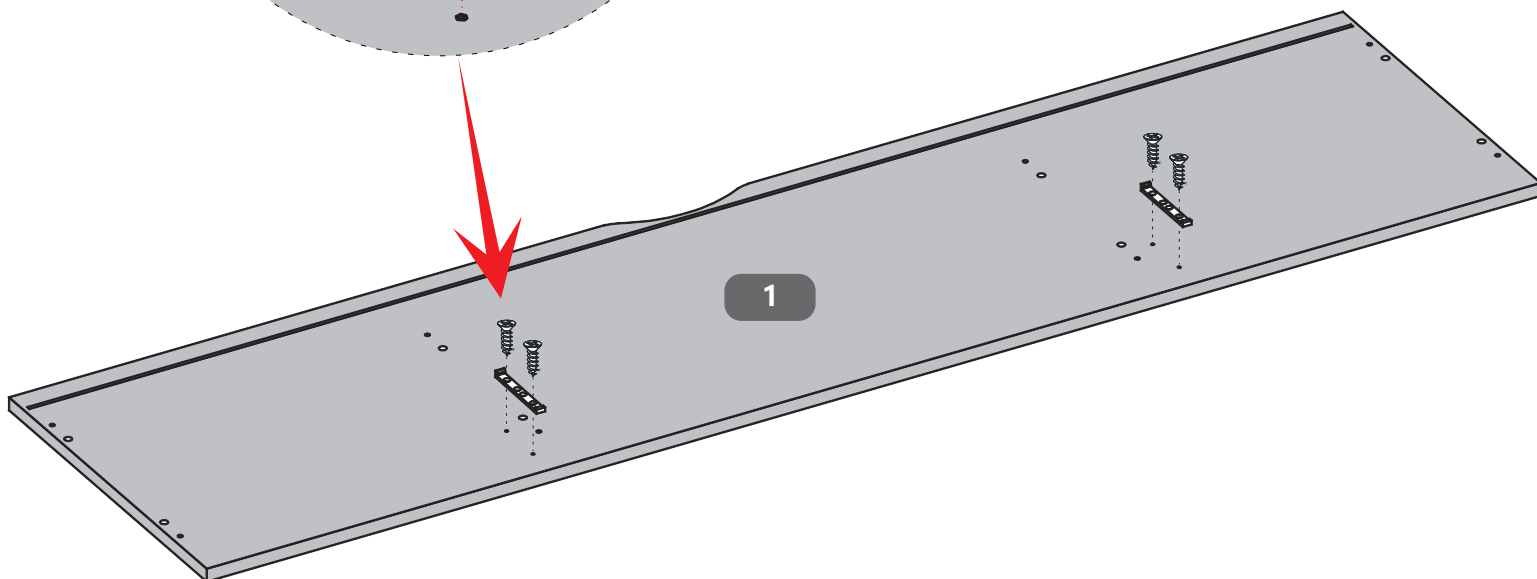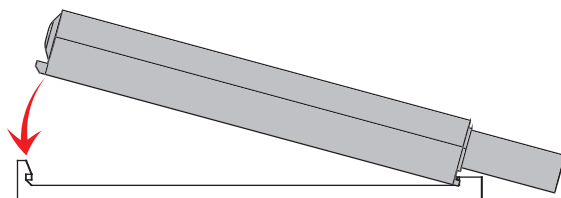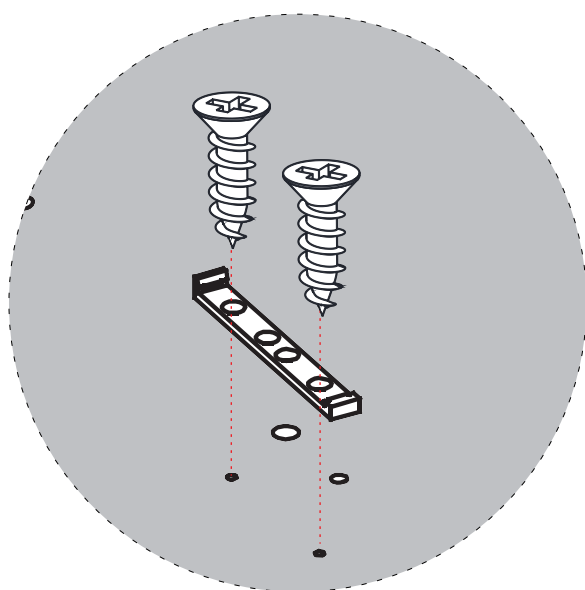

Installation procedure

STEP 2




B X8




C X8



A X8




O X1

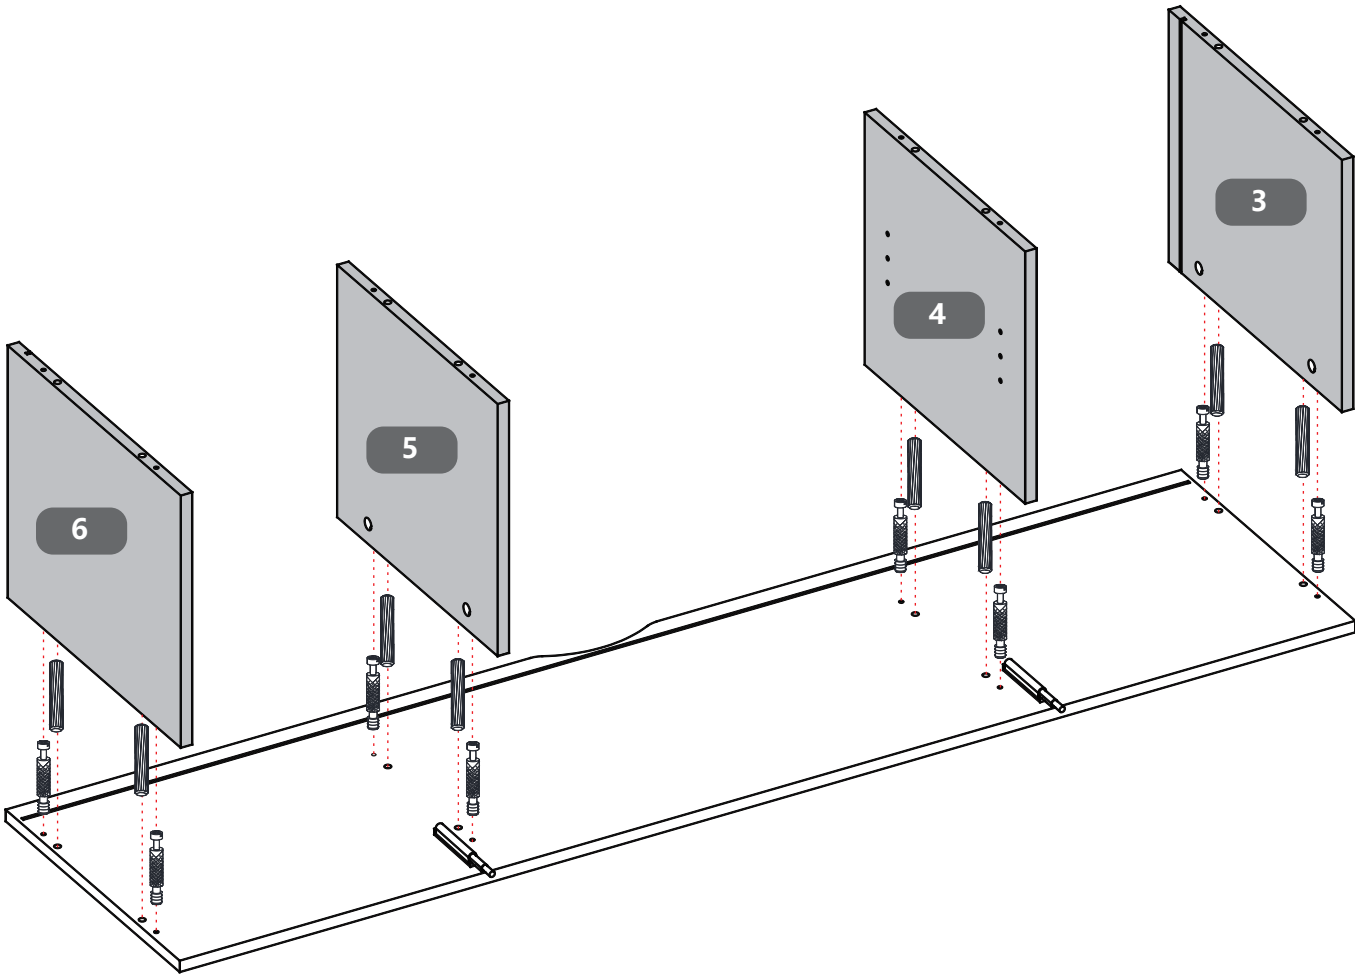

Installation procedure

STEP 3

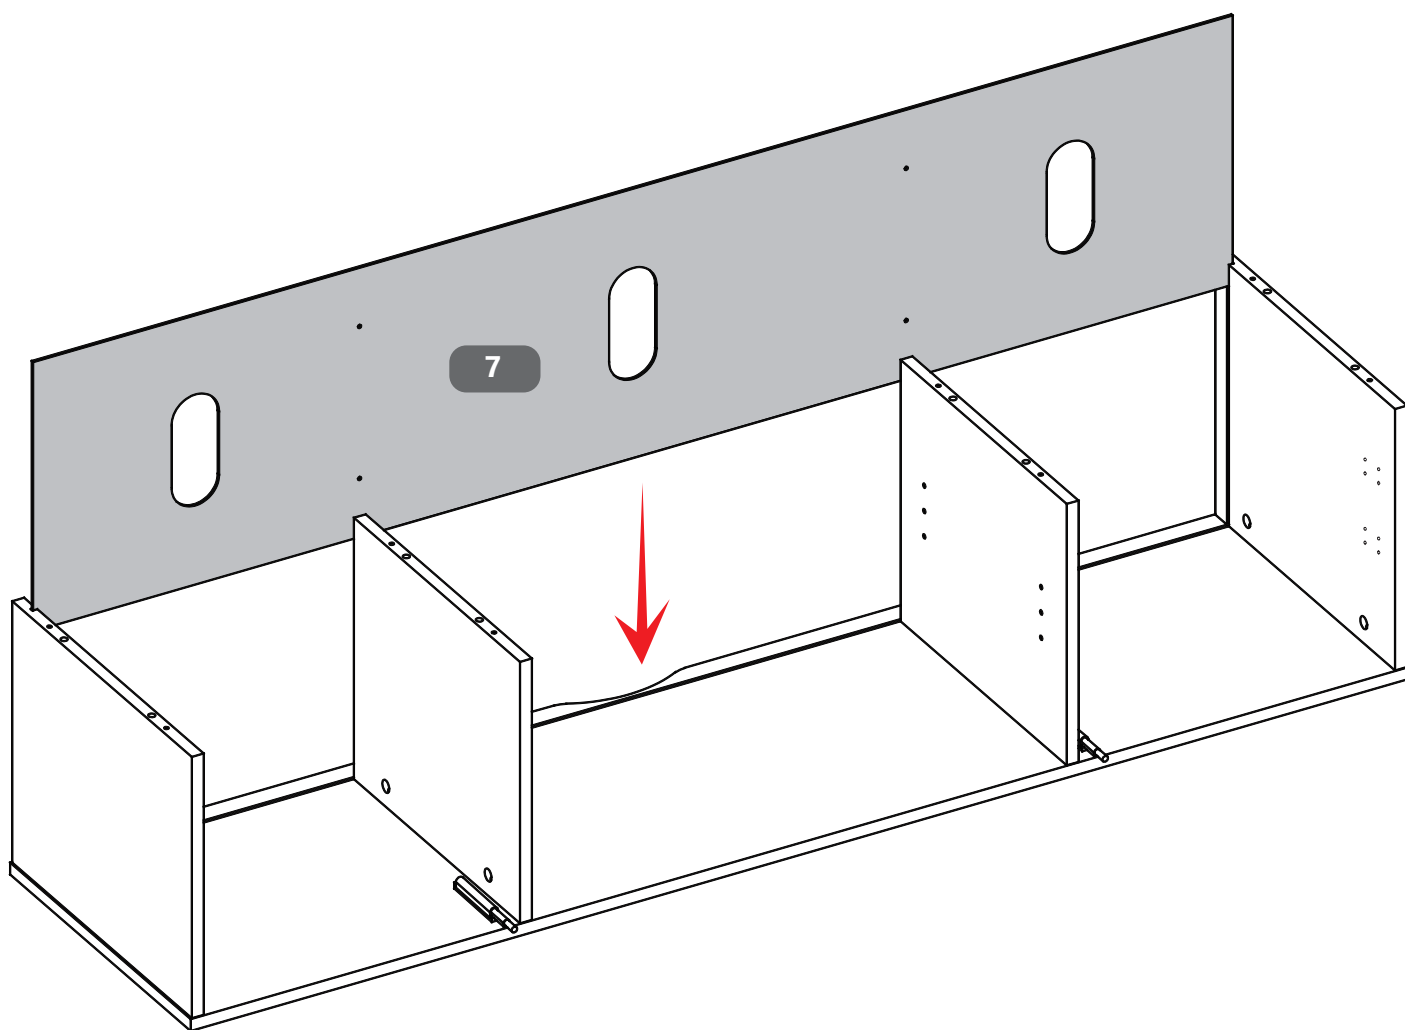


Installation procedure

STEP 4



A X8

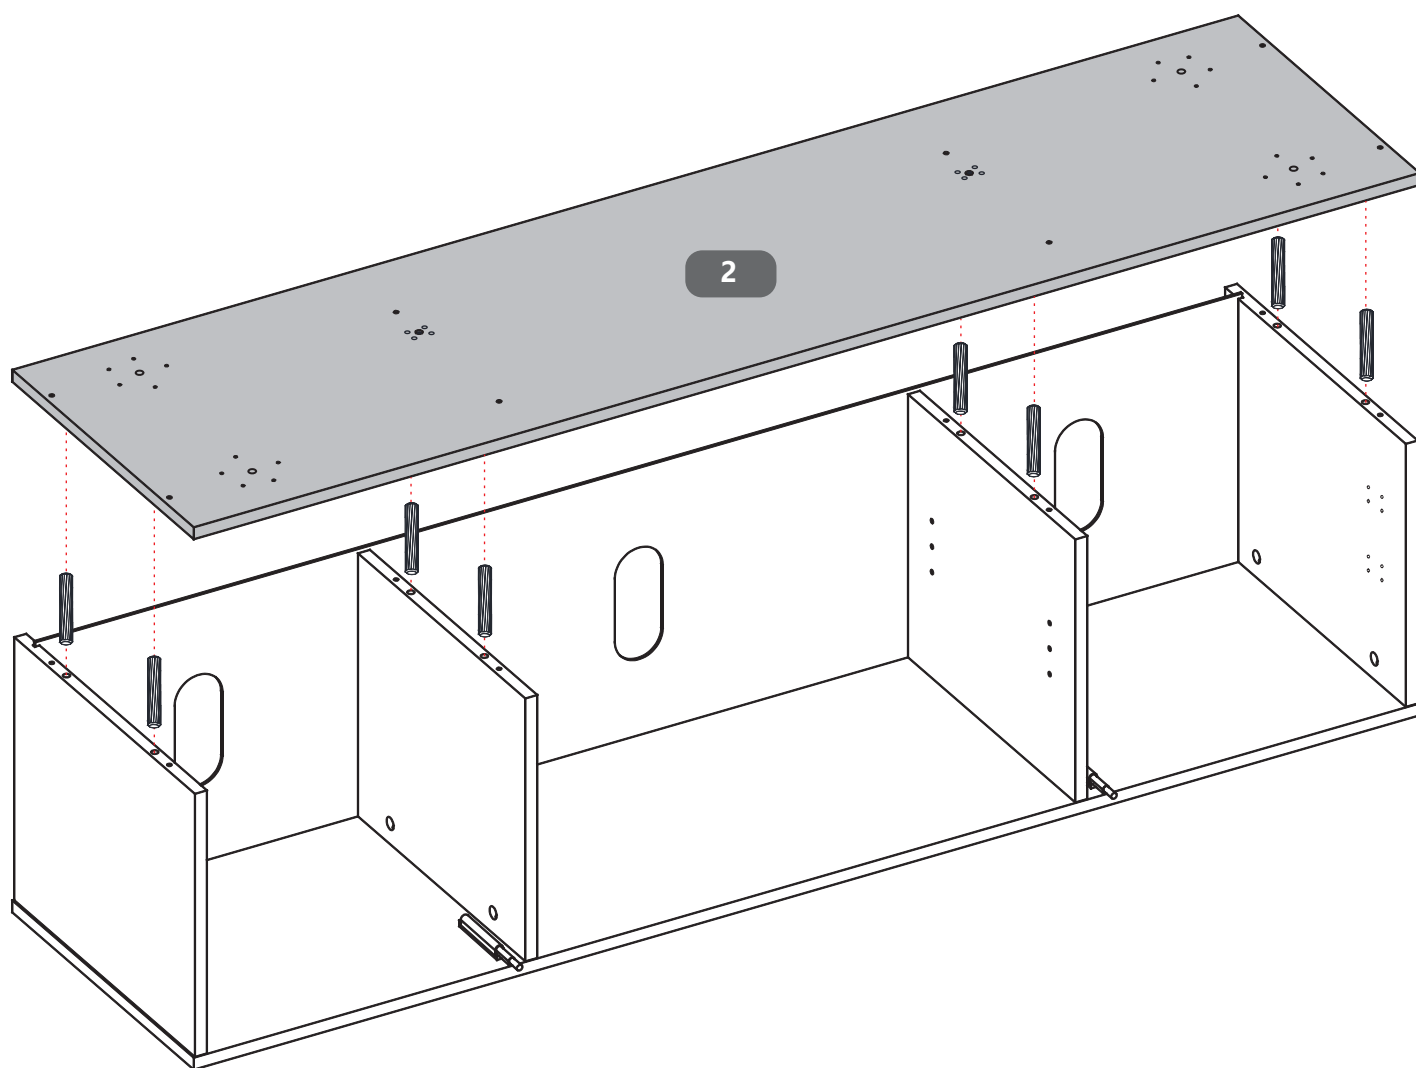


Installation procedure


STEP 5



D X8




O X1

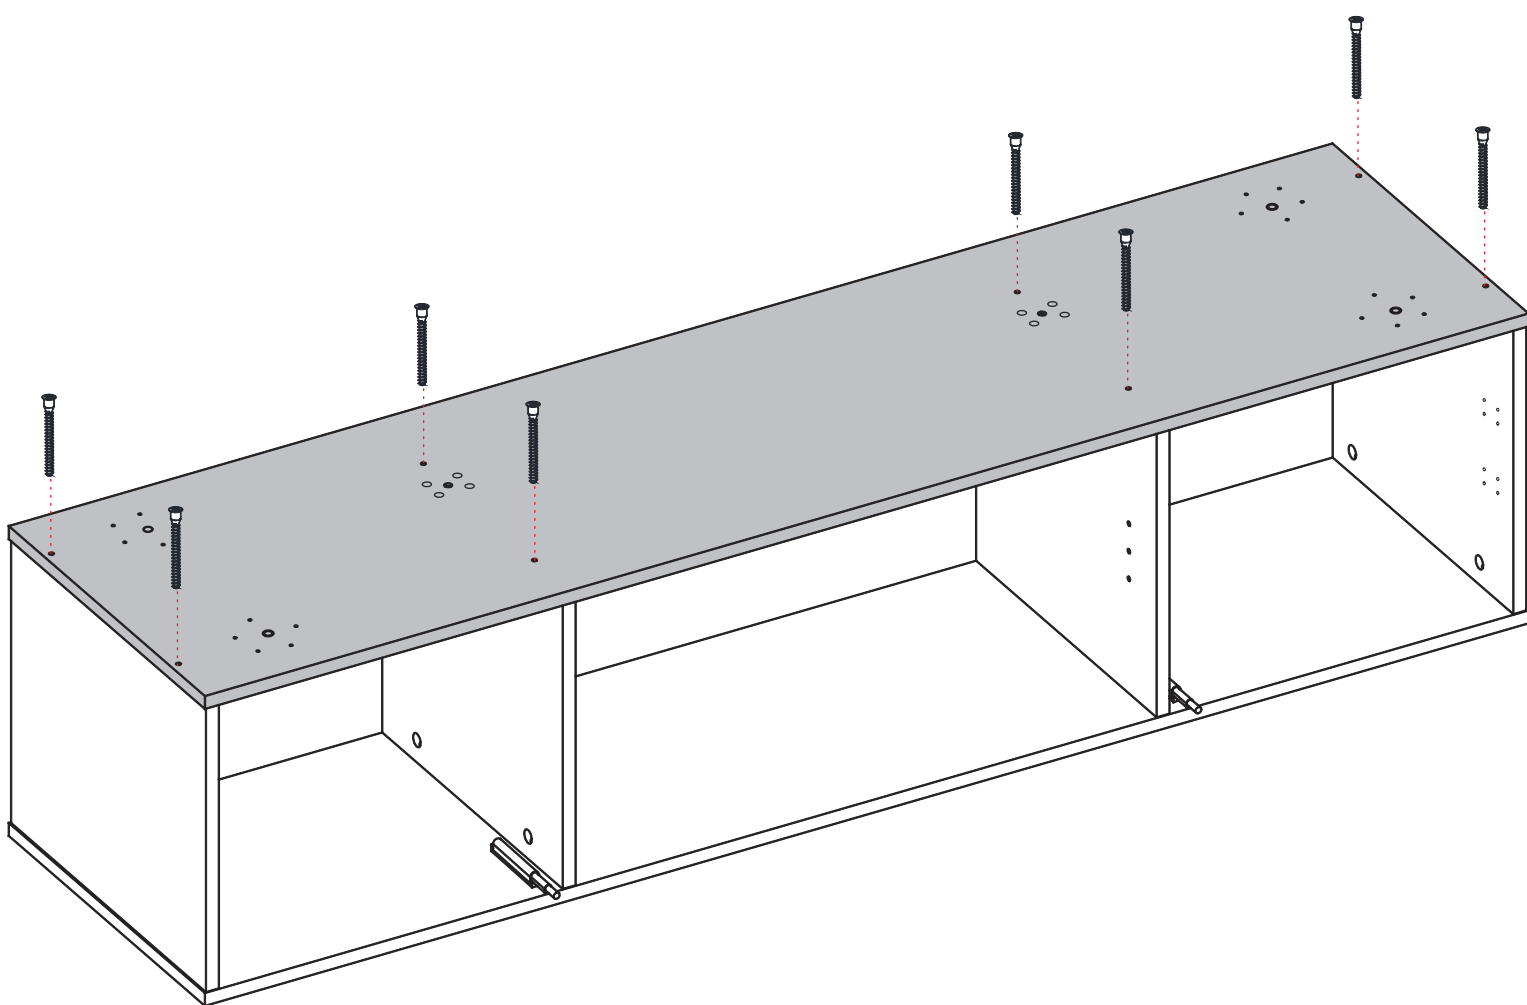

Installation procedure

STEP 6




J X4




L X2



F X20






M X8



O X1



P X1

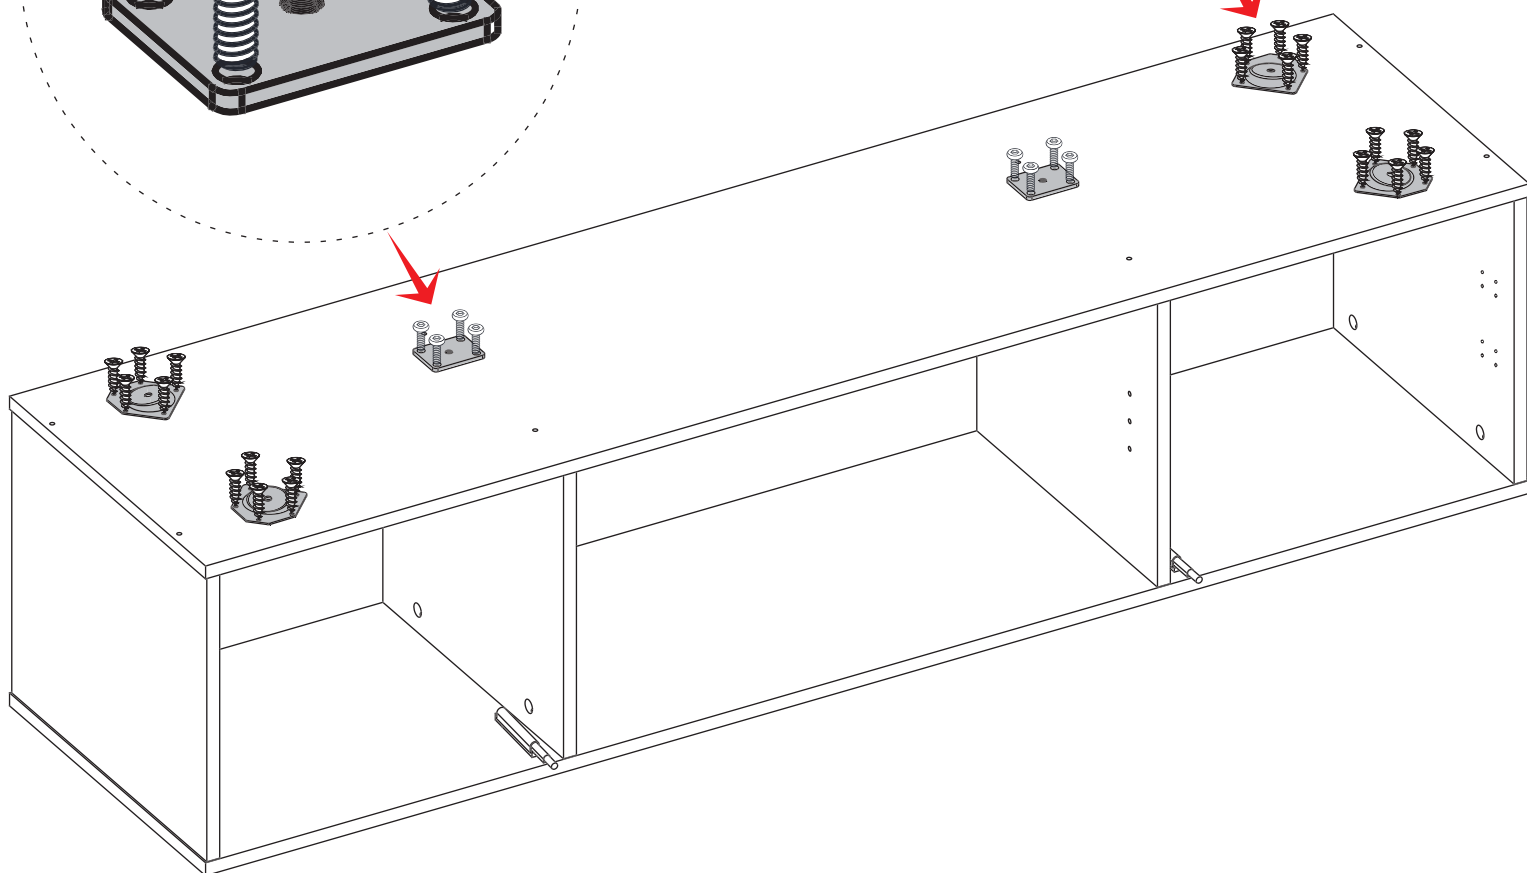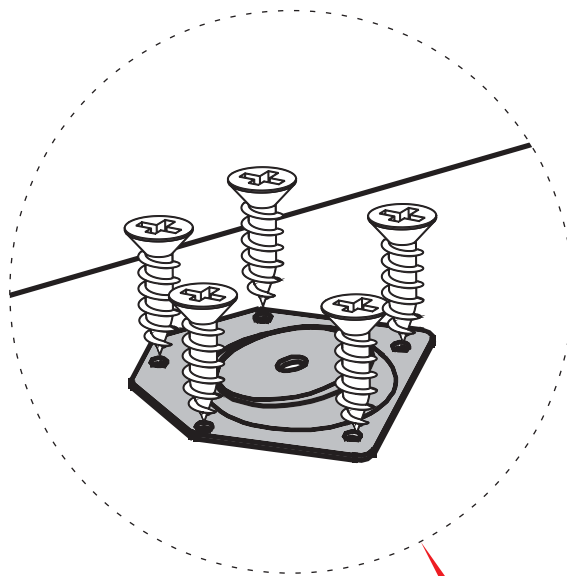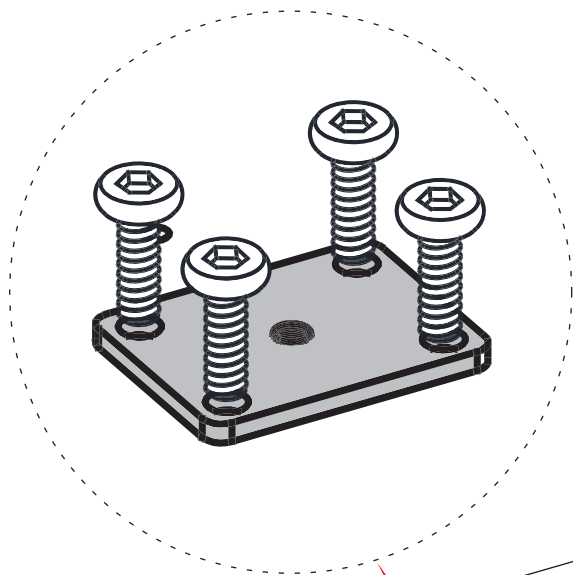


Installation procedure

STEP 7




K X6

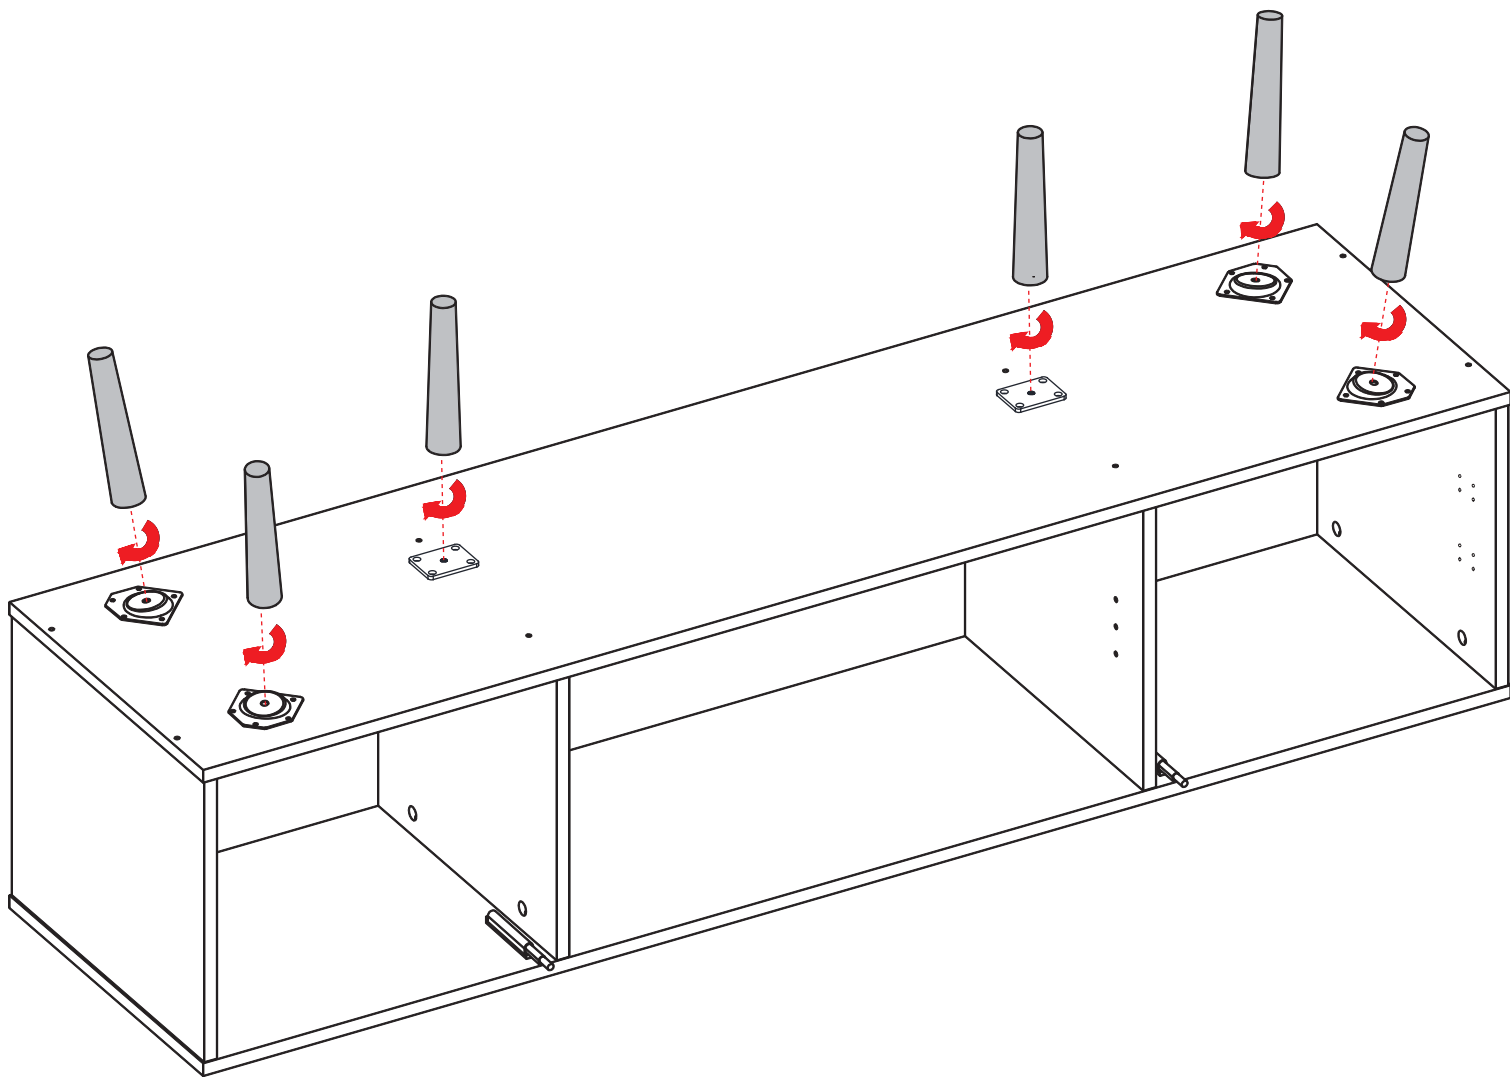


Installation procedure


STEP 8




E X4




F X4



N X4




O X1

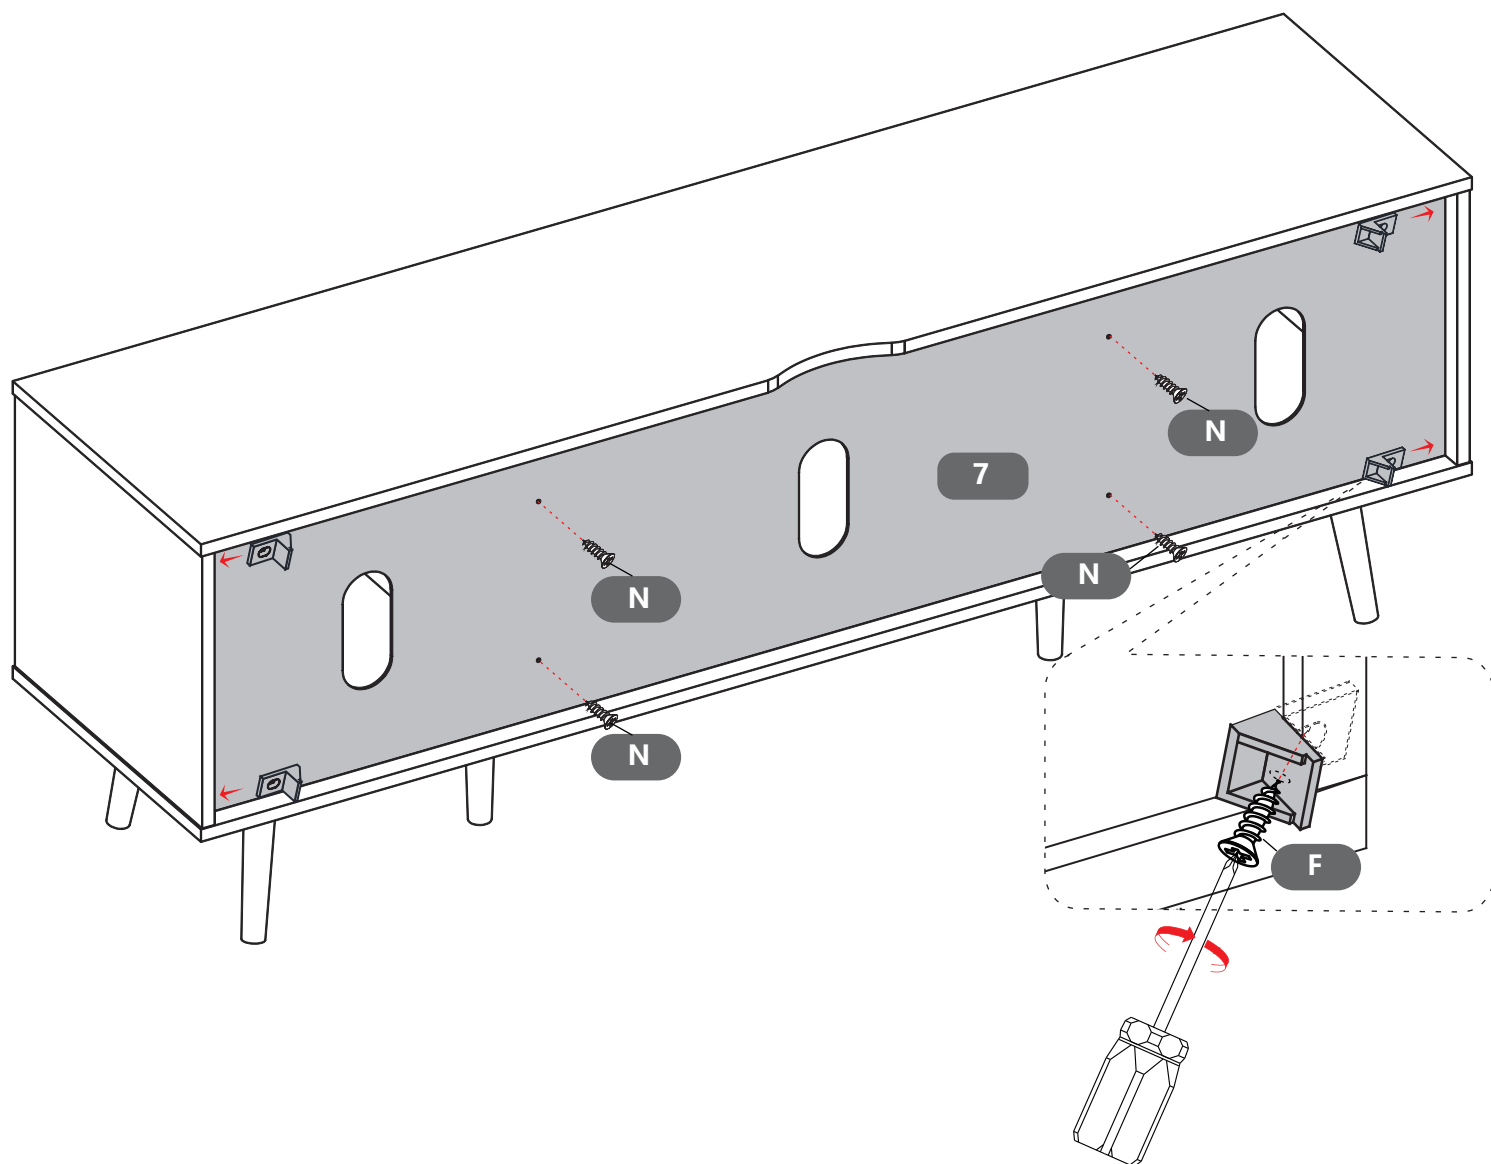


Installation procedure

STEP 9




I X4

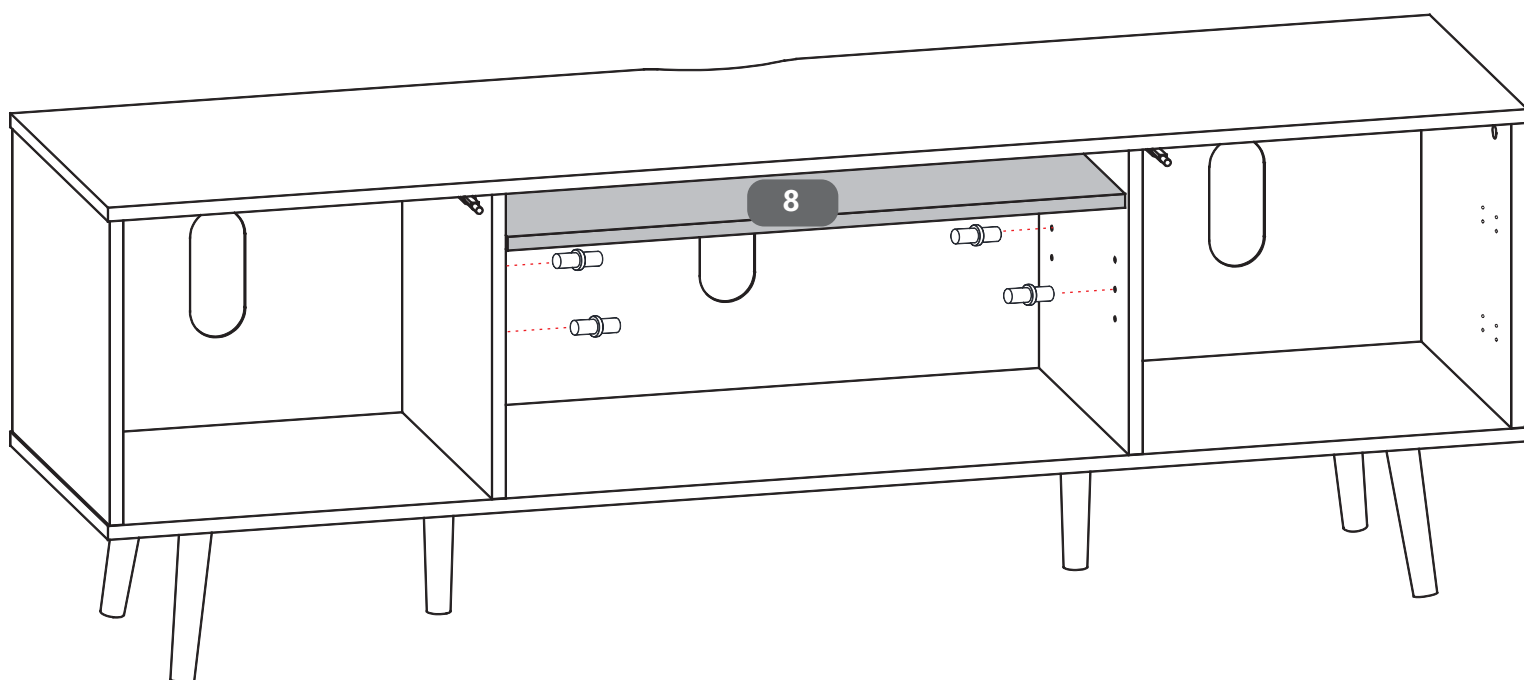

Installation procedure


STEP 10




H X4





F X8



G X2



O X1

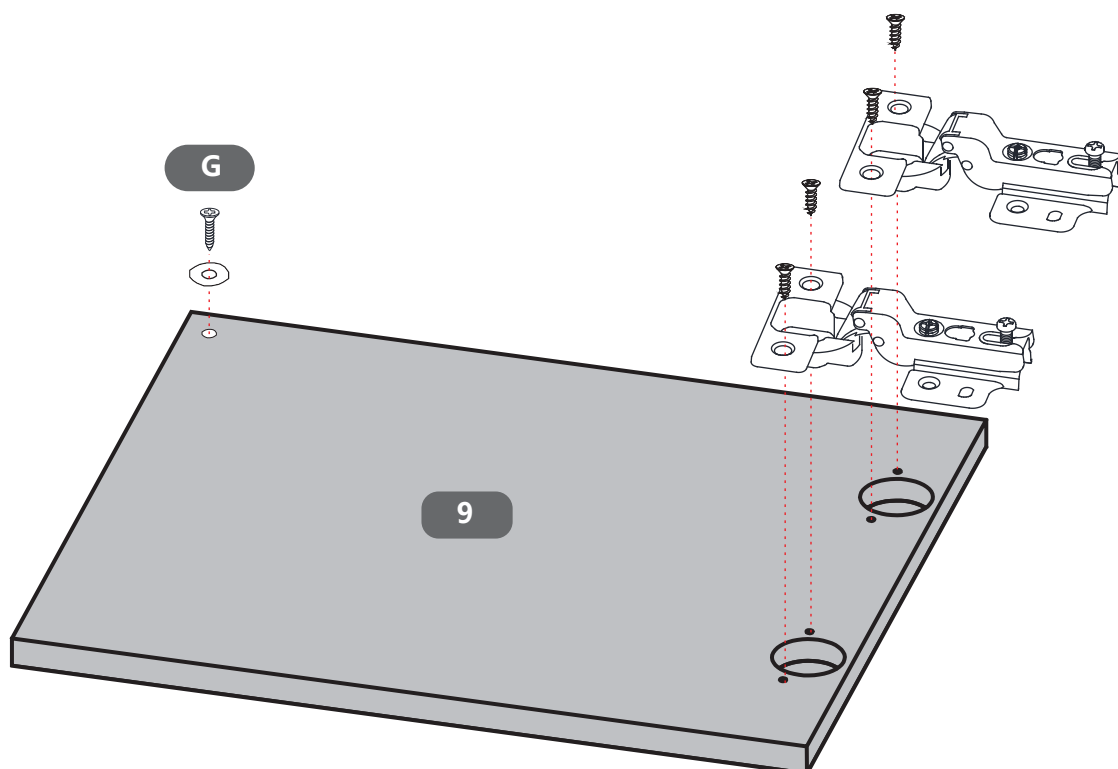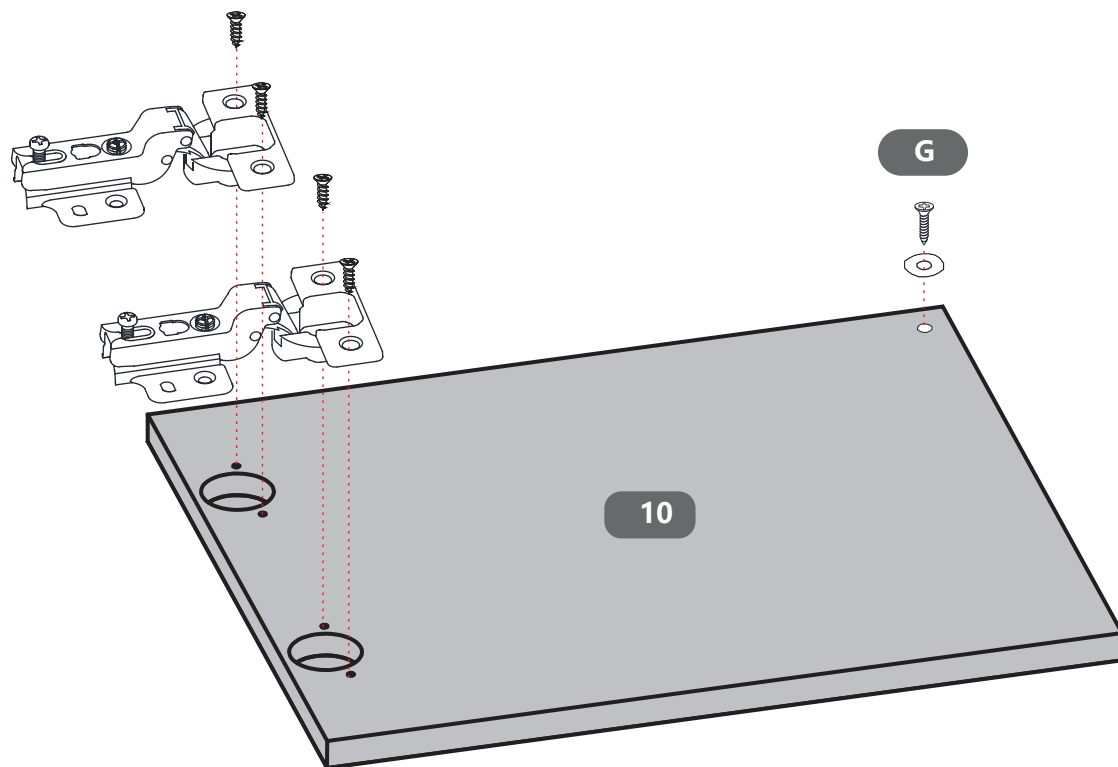


Installation procedure


STEP 11



F X8




O X1

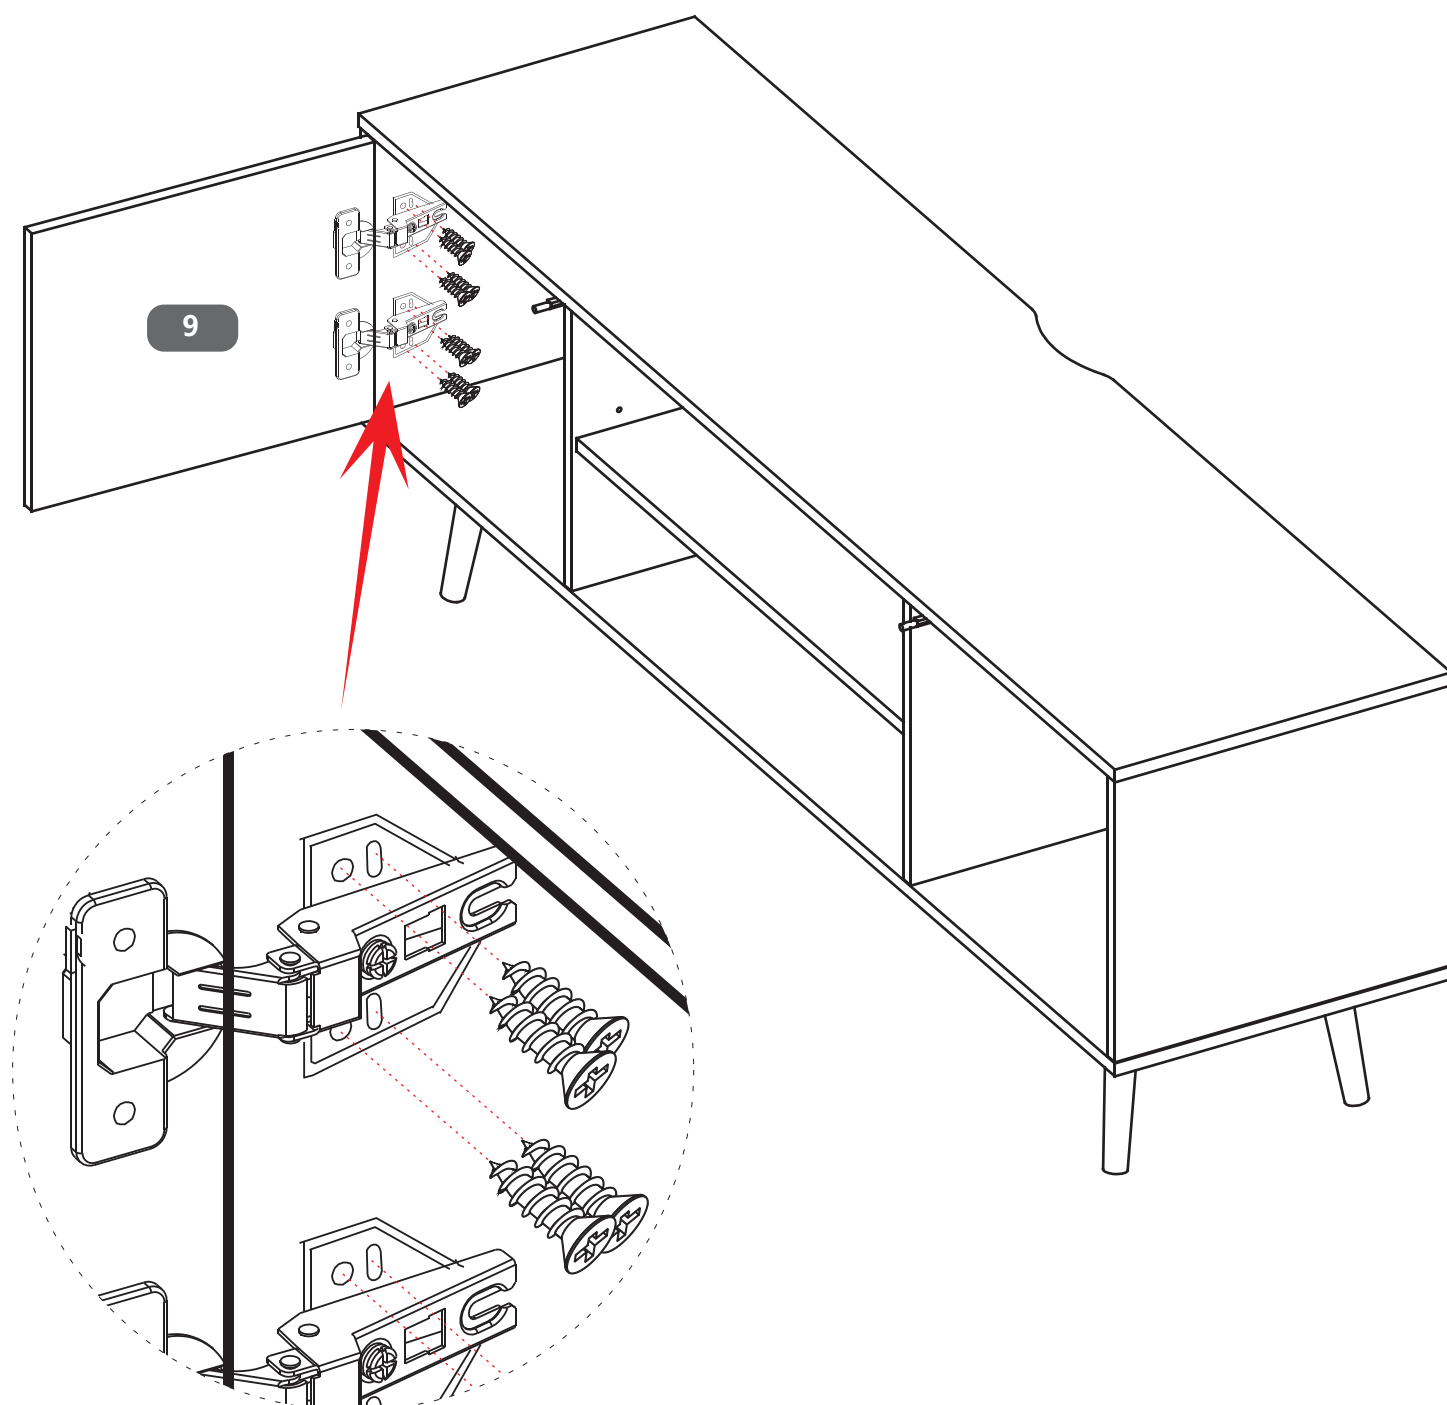


Installation procedure

STEP 12



F X8



O X1

