
MANUAL INSTRUCTION

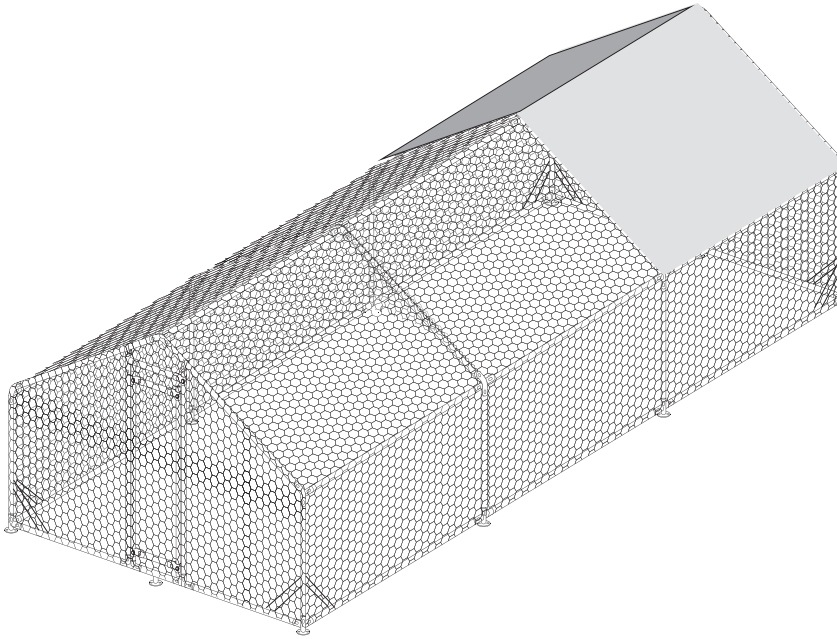

We offer a diverse range of products
to meet the needs of customers.

Reach us at
service@kmcgloble-us.com
(only us) +1 213-816-4788



① x 4
1420



② x11
1925



②A x 4
1925



③ x 4
970



③A x 4
970



④ x 8
1540



⑤ x 1
1687



⑤A x 1
1687



⑥ x 1
605



⑦ x 1
1850



Φ16 395mm

⑩ x 8
395



A x 1
1580



1A x 1
1580



C x 2
564

D x 5



E1 x 2



E2 x 2



F x 5



G x 1



H x 6



V x 1




I x 8



J x 2



J1 x 2




K x30
M6
+1(spare)



L x 2
M8
+1(spare)



M x 1




O x 1




P x 1



Q x 1



R x12



S x 1



T x 2




W x10





ATTENTION: E1 & E2 shall be placed in strict order, otherwise they cannot be installed

DIFFERENT HOLES SITUATIONS IN E1&E2

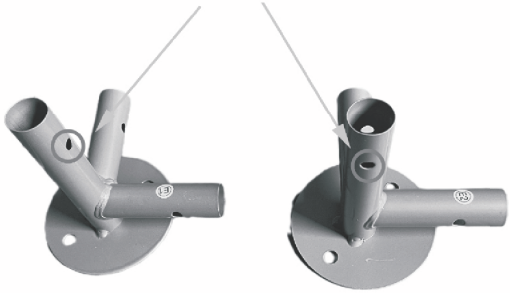


E1 E2

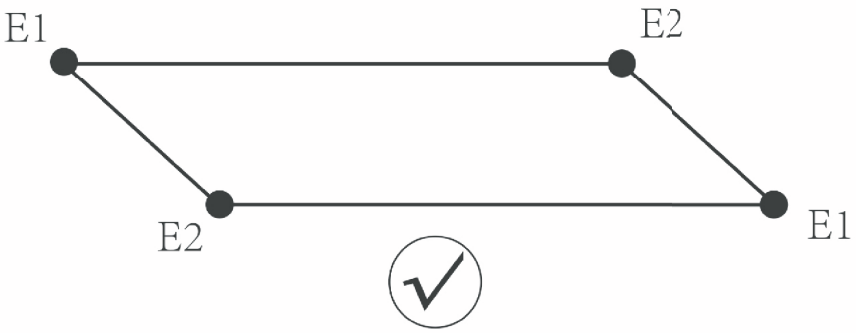

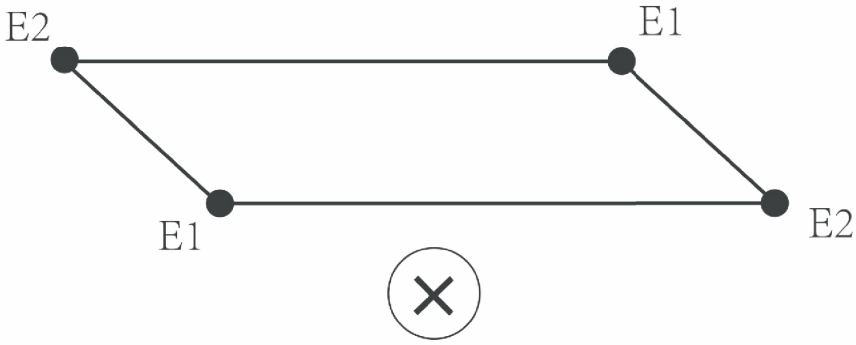


STEP1

Required Tools	①*4PCS	②*2PCS	②A*4PCS
E1*2PCS	E2*2PCS	G*1PCS	F*5PCS

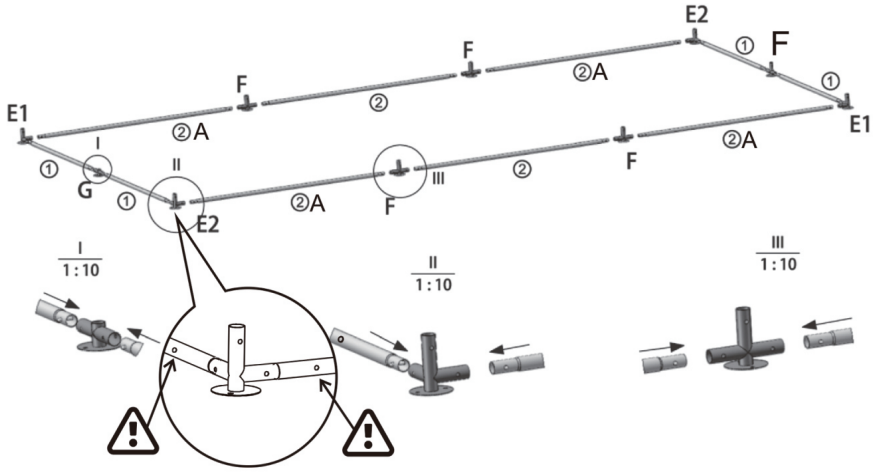


STEP2

Required Tools	③A*4PCS	③*4PCS

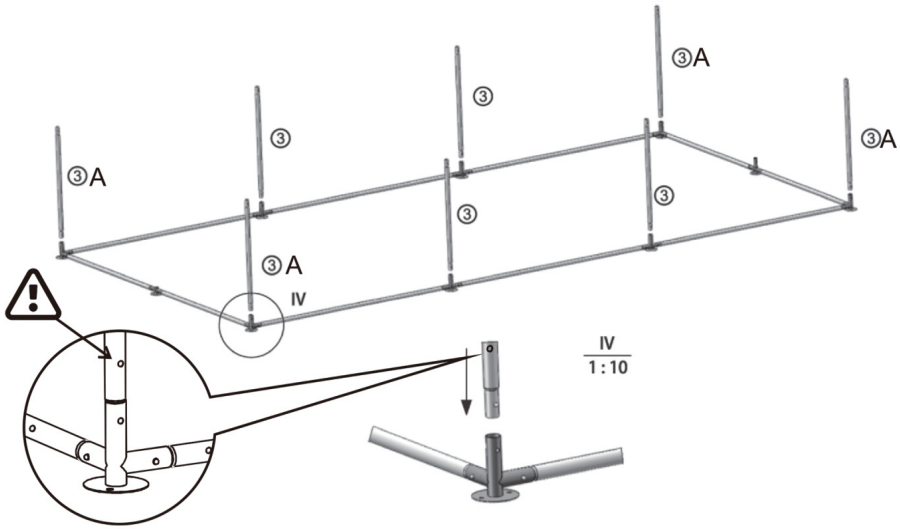


STEP3


Required Tools	④*8PCS	D*5PCS	H*6PCS	V*1PCS

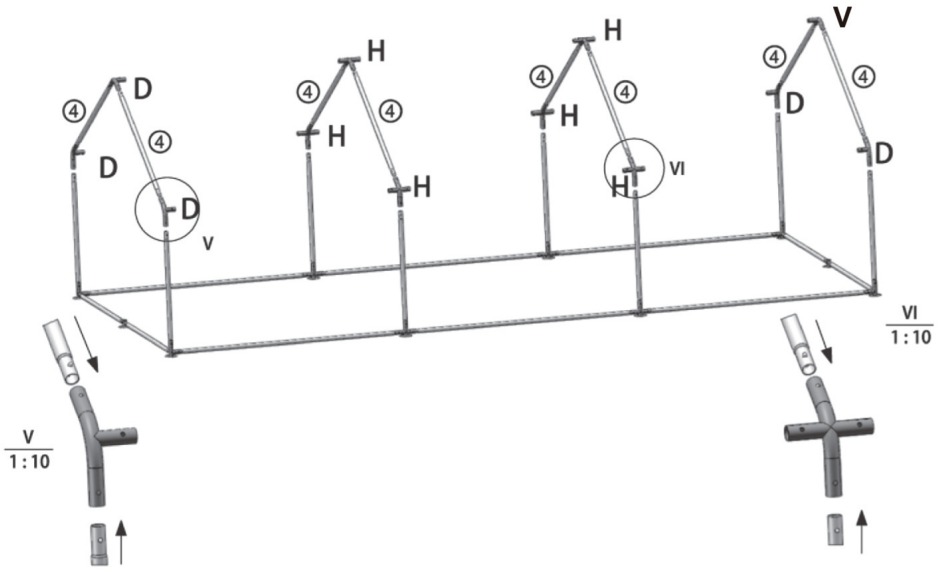


STEP4

Required Tools	②*9PCS	⑦*1PCS	⑩*8PCS	K*16PCS
				

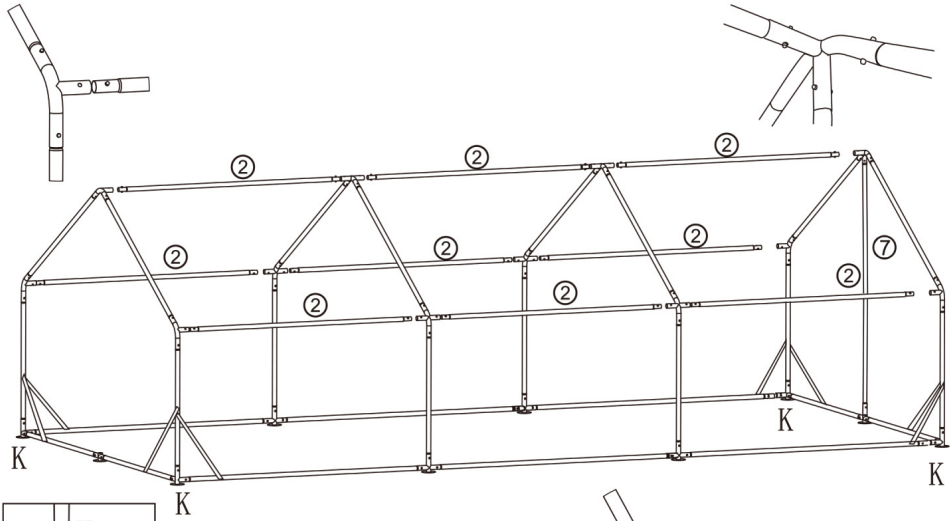


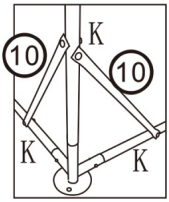

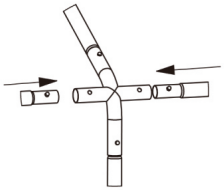


STEP5

Required Tools	⑤*1PCS	⑤A*1PCS	⑥*1PCS	T*2PCS
J*2PCS	I*8PCS	L*2PCS	K*6PCS	

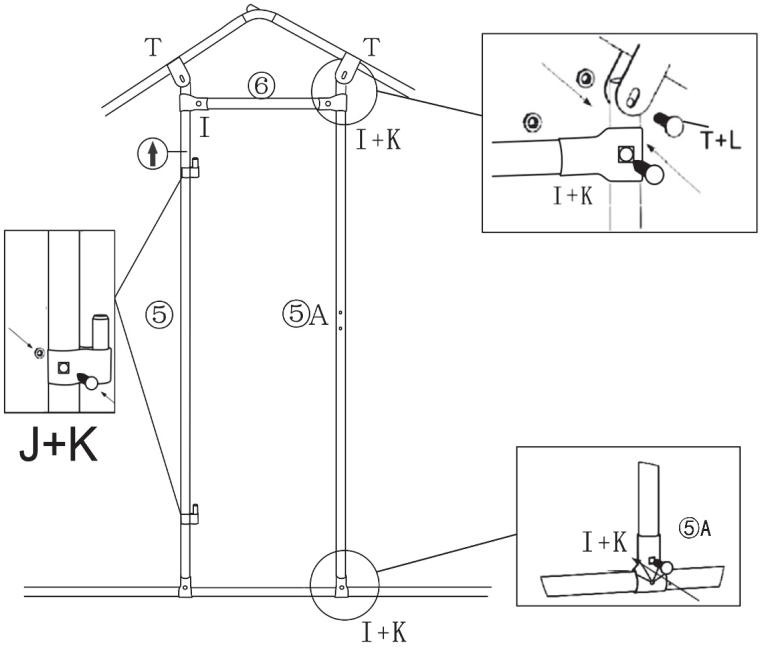


STEP6

Required Tools	1A*1PCS	A*1PCS	C*2PCS	J1*2PCS	K*6PCS

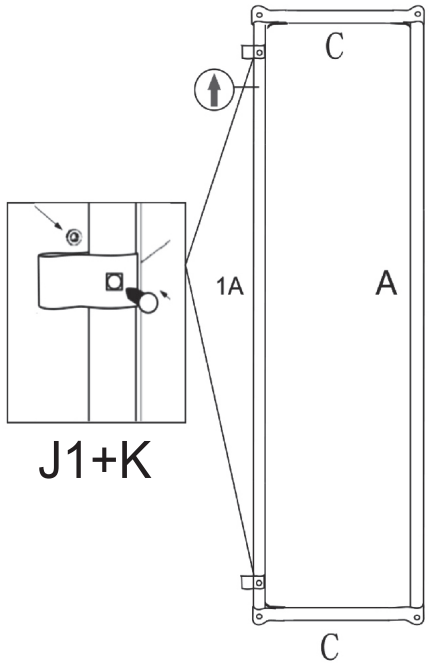


J1+K

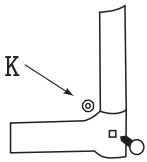


STEP7


Required Tools	 M*1PCS	 K*2PCS

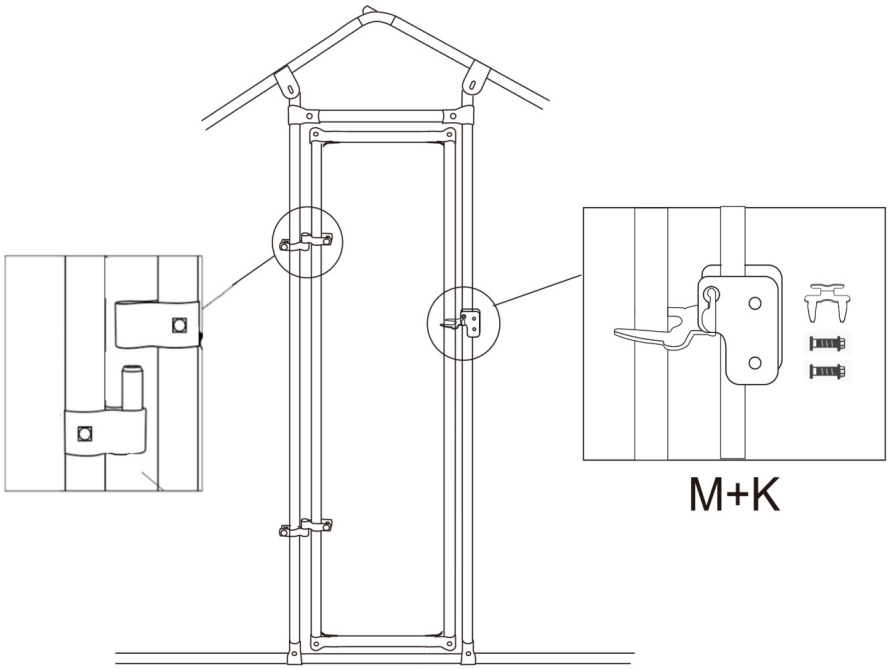


STEP8


Required Tools	 Q*1PCS	 O*1SET

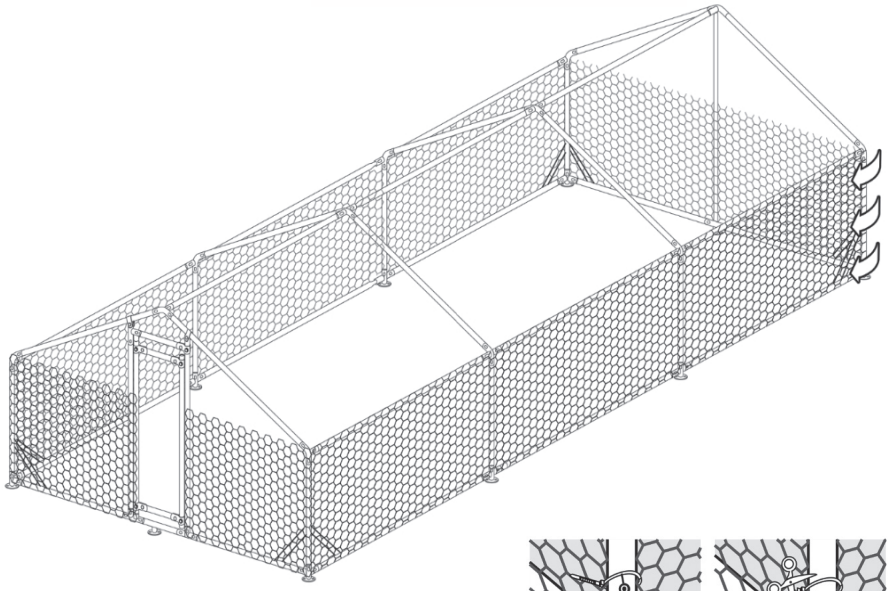


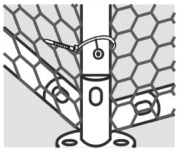


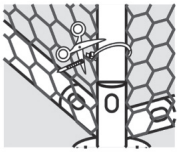



STEP9


Required Tools	 0*1PCS	 0*1SET

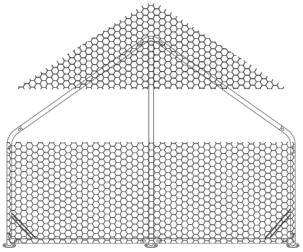

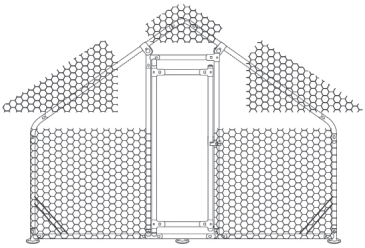

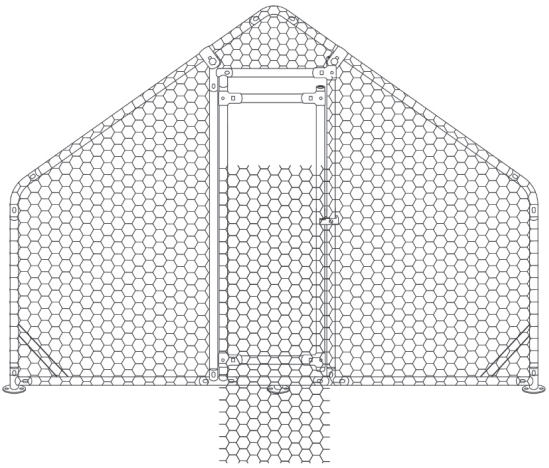

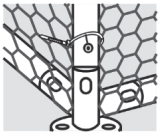

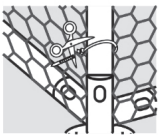



Done


STEP10

Required Tools	P*1PCS	R*12PCS	W*10PCS

P

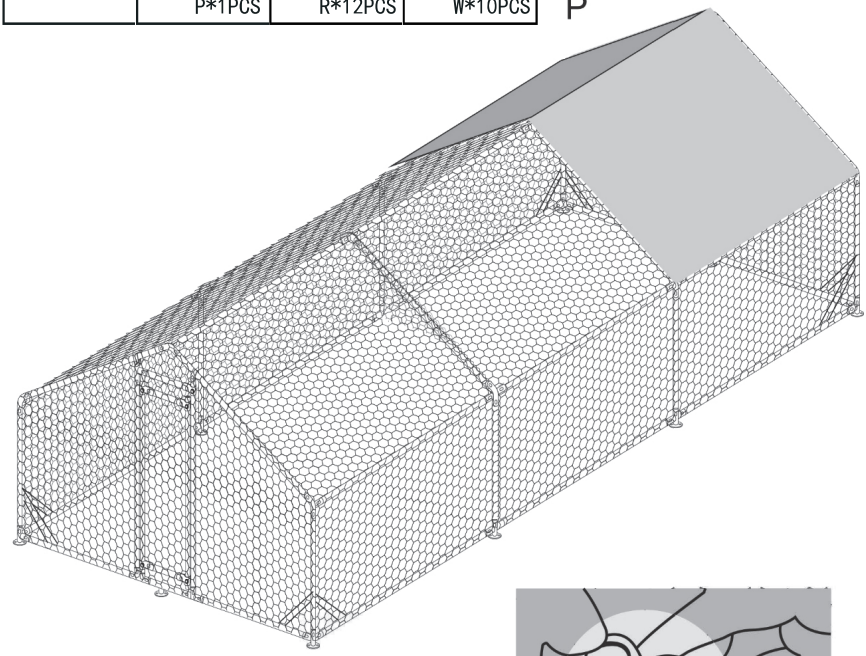

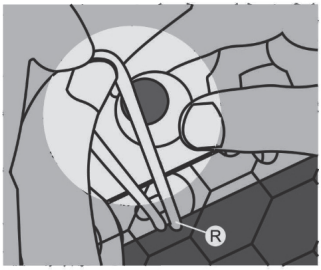

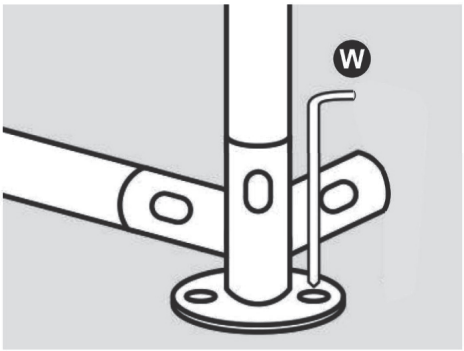

WARNING:

REMOVE THE COVER DURING HEAVY SNOW OR RAINSTORMS TO PREVENT THE CHICKEN COOP FROM COLLAPSING UNDER PRESSURE.